

How to set up the Blackbox

1) **Acquire 4GB or greater MicroSD card. More information on this above.**
2) **Download MicroSDCard Formatter (https://www.sdcard.org/downloads/formatter/)**
3) **Format the card with a quick format**
4) **Place it into the MicroSD cards slot on your flight controller5.**
5) **Attach your flight controller to your PC**
6) **Run INAV Configurator**
7) **Click on the Configuration Tab**
8) **Go to the Other Features sections and enable Blackbox Flight Data Recorder**
9) **Save and Reboot**
10) **Click on the Blackbox tab**

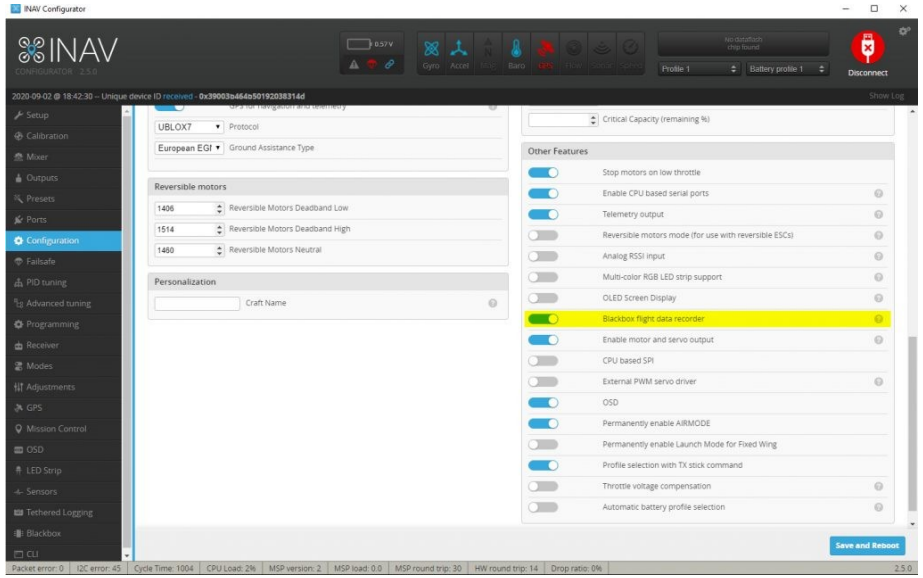

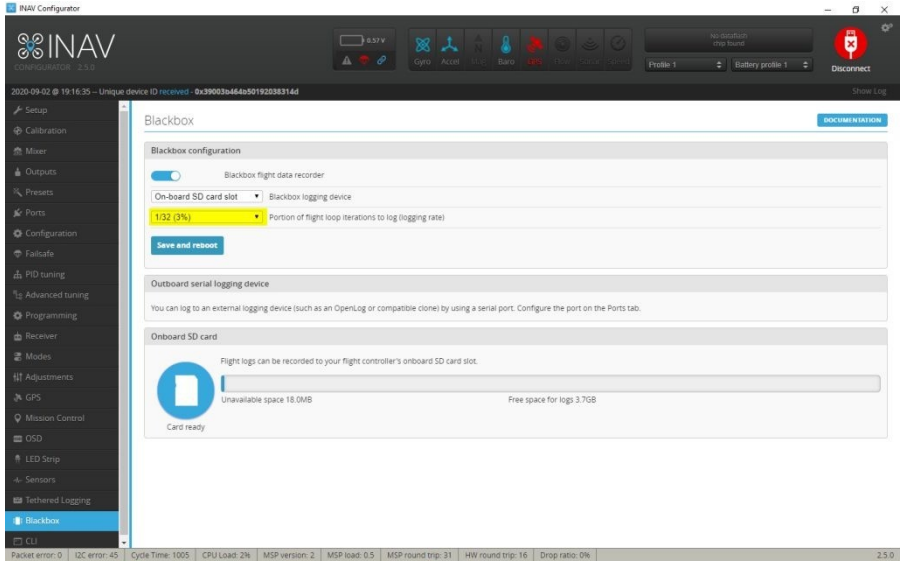

- **INAV is now set to work with a Blackbox, but we need to change a setting to get it working more efficiently. Change Portion of flight loop iterations to log (logging rate) to 1/32 3%. Look at the image, make sure the onboard MicroSD card (bottom of screen) is blue.**

  This means the card is inserted properly and working with INAV.


- **Save and reboot.**

From : inavfixedwinggroup.com+1

You will not need to do anything else. When the card fills up it will overwrite the oldest files.

Extract logs from the flight controller

And check please that it the same as the screenshot

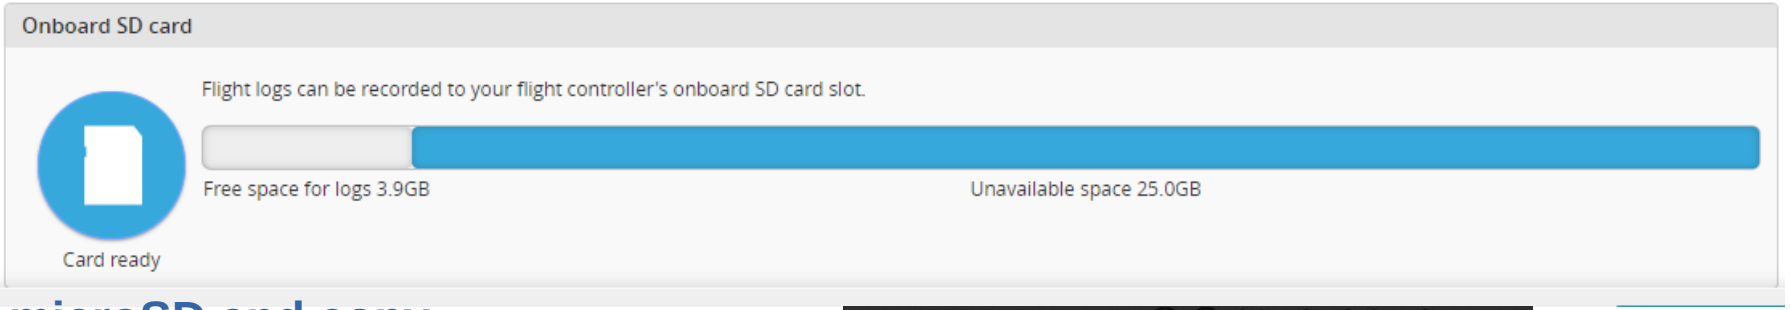


Option 1 : Remove the microSD and copy

1) **Power the aircraft off, remove the microSD.**
2) **On your computer, open the card's /LOGS/ folder and copy the files (e.g. LOG00001.TXT) to a working directory.**


speedybee.zendesk.com

Option 2 — USB Mass-Storage (no card removal)

3) **Plug the FC to the PC via USB and open INAV Configurator → CLI.**
4) **Type: msc and press Enter. The FC reboots and mounts as a USB drive.**

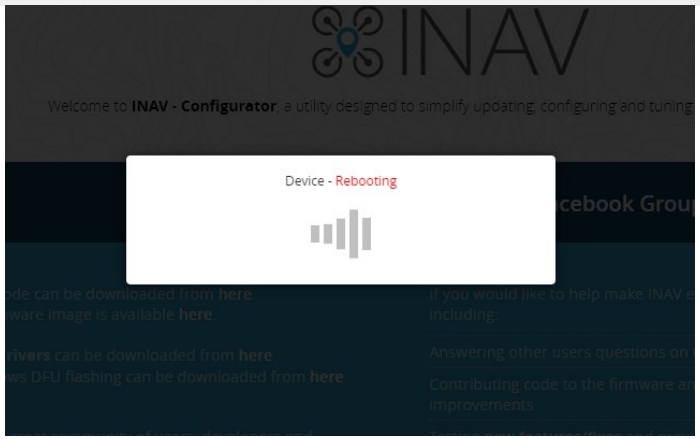

5) **Open the newly mounted drive → /LOGS/ and copy the log files to your PC.**
6) **When done, power-cycle the FC (or unplug/replug) to exit MSC mode**
7) **If MSC behaves oddly or corrupts, re-format the card (only a ~4 GB volume has proven robust on some setups) and retest.**

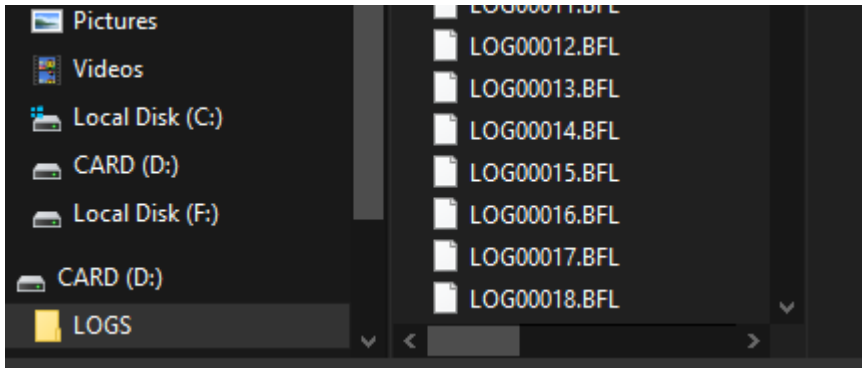

From : **speedybee.zendesk.com**