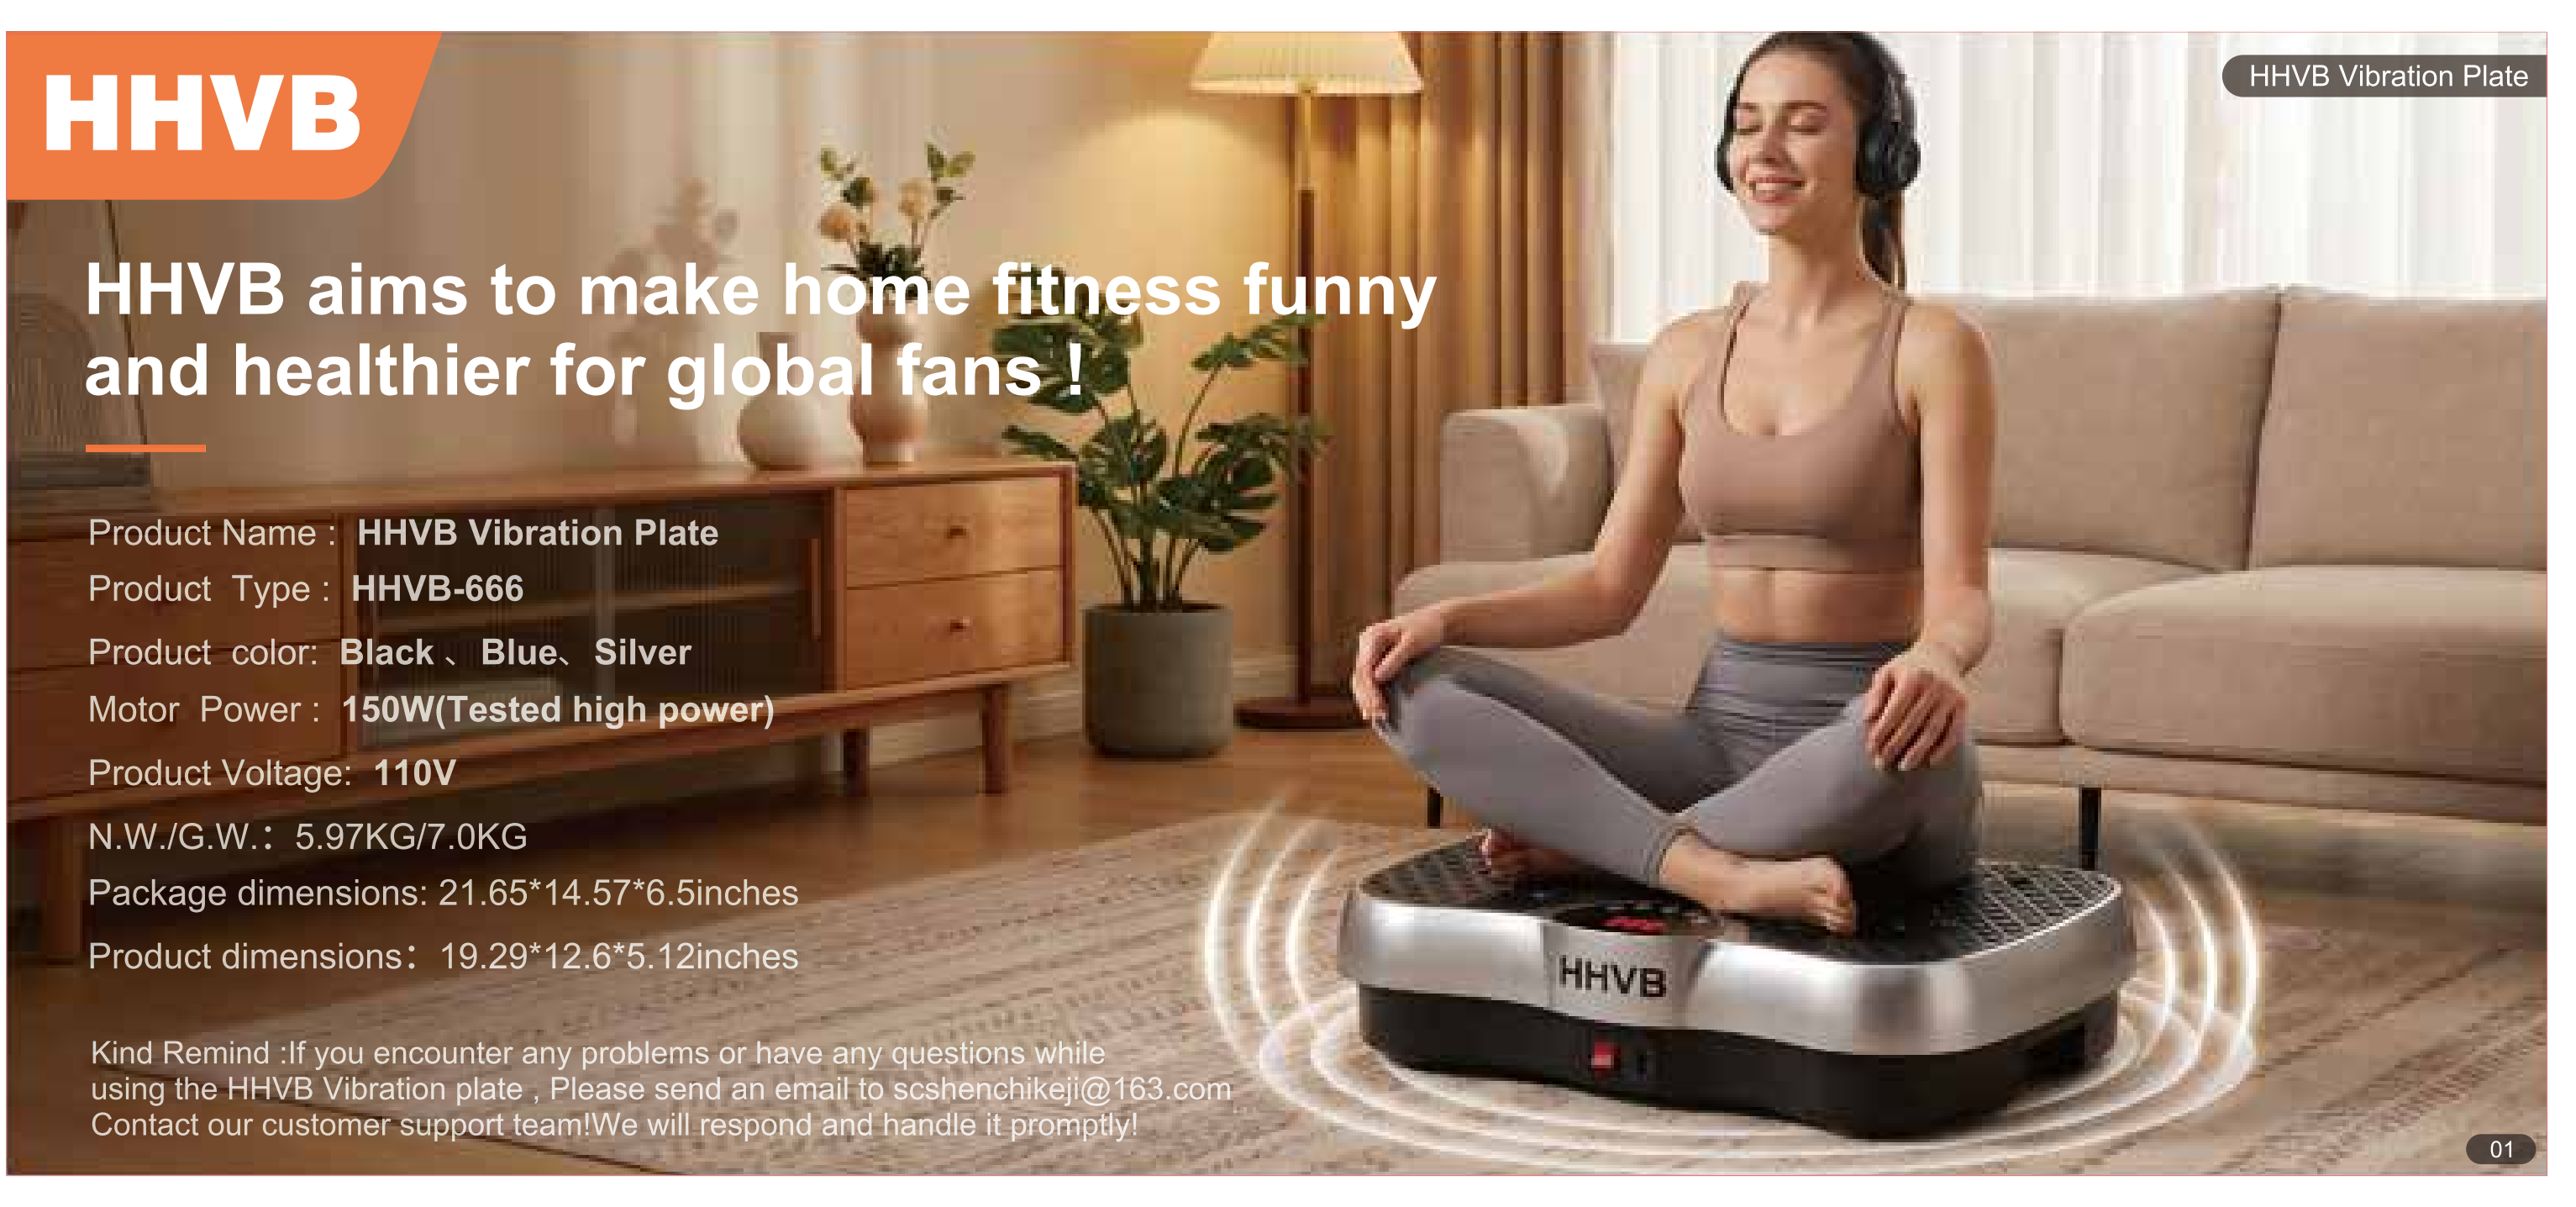

HHVB aims to make home fitness funny and healthier for global fans !

Product Name :	**HHVB Vibration Plate**
Product Type :	**HHVB-666**
Product color:	**Black、Blue、Silver**
Motor Power :	**150W(Tested high power)**
Product Voltage:	**110V**
N.W./G.W.:	5.97KG/7.0KG
Package dimensions:	21.65*14.57*6.5inches
Product dimensions:	19.29*12.6*5.12inches

Kind Remind :If you encounter any problems or have any questions while using the HHVB Vibration plate , Please send an email to scshenchikeji@163.com Contact our customer support team!We will respond and handle it promptly!

WHY CHOOSE HHVB?

Transform Your Home Into A Personal Fitness Studio

HHVB VIBRATION PLATE
10 MINUTES A DAY
BETTER BODY SHAPE

PERSONAL TRAINER EXPERIENCE
No expensive coaching fees
Enjoy professional fitness guidance at home

BOOST METABOLISM
Promote circulation / Support lymphatic drainage
Help the body burn calories more efficiently

STRONGER MUSCLES
10 minutes daily vibration training
Supports muscle activation / Improves workout efficiency

JOINT & BACK SUPPORT
Suitable for rehabilitation training
Improve stability and core strength / Help reduce physical stress

STRESS RELIEF
Increase serotonin / Reduce cortisol
Enjoy a more relaxing workout experience

✓ Improve Circulation ✓ Promote Metabolism ✓ Relax Muscles ✓ Support Recovery

---

Weight Capacity :330 LBS

150W High-Power Silent Motor

Stable low-noise operation, powerful vibration output.

Thickened Iron Frame + Salt Spray Anti-Rust

More sturdy and durable, rust-proof treatment.

ABS Plastic Shell

Corrosion resistant, long-term no deformation, high hardness.

QUIET MOTOR TECHNOLOGY

High-performance silent motor minimizes operational noise. Exercise without disturbing your family.

RUBBER SUCTION CUPS

Anti-slip, high friction. Reduces noise, prevents floor scratches, and keeps the machine stable.

4-POINT BUFFER CONSTRUCTION

Buffering protection at all four support points. Absorbs vibration, reduces noise, provides a more comfortable exercise experience.

What's in the package?



HOW TO INSTALL BATTERIES



1. **OPEN COVER** Slide back cover of the remote (from < open.
2. **INSERT BATTERIES** (AAA x2, Pay attention to Polarity)
3. **CLOSE COVER** Slide the cover back until it clicks.

SPECIFIC OPERATIONAL STEPS >>>>

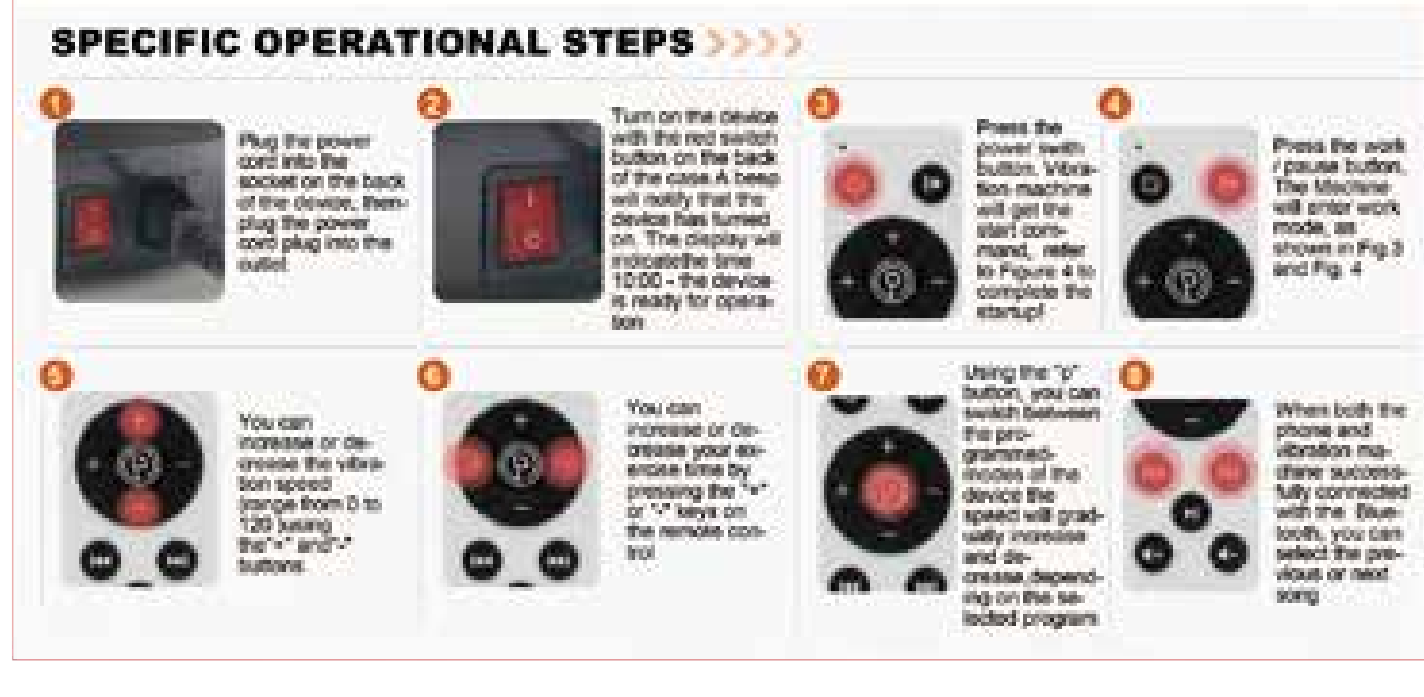

1. Plug the power cord into the socket on the back of the device, then plug the power cord plug into the outlet.
2. Turn on the device with the red switch button on the back of the case. A beep will notify that the device has turned on. The display will indicatethe time 10:00 - the device is ready for operation
3. Press the power switch button. Vibration machine will get the start command, refer to Figure 4 to complete the startup!
4. Press the work / pause button. The Machine will enter work mode, as shown in Fig 3 and Fig. 4
5. You can increase or decrease the vibration speed (range from 0 to 120)using the"+" and"-" buttons.
6. You can increase or decrease your exercise time by pressing the "+" or "-" keys on the remote control
7. Using the "p" button, you can switch between the programmed modes of the device the speed will gradually increase and decrease,depending on the selected program
8. When both the phone and vibration machine successfully connected with the Bluetooth, you can select the previous or next song

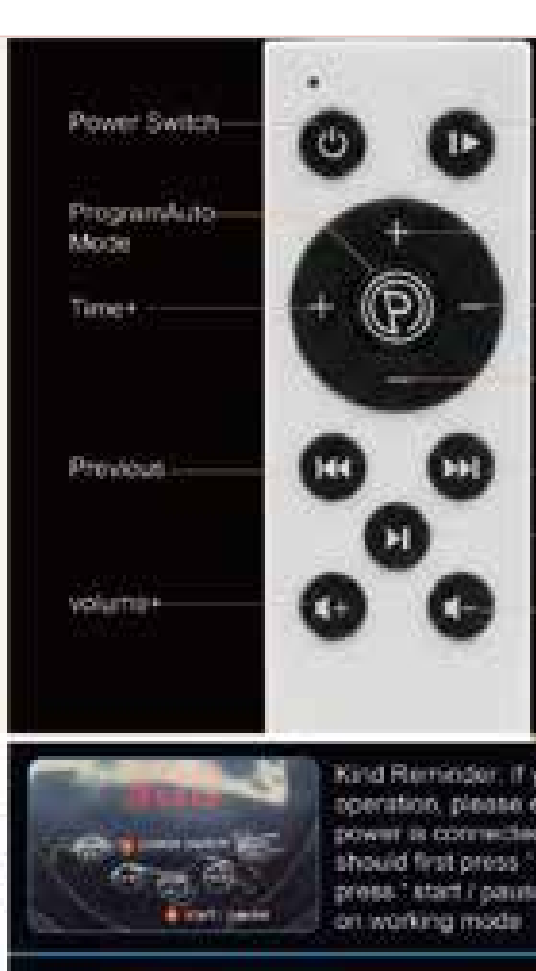

Kind Reminder: If you wanna manual operation, please ensure that the power is connected properly. You should first press ' power switch ' ,Then press ' start / pause ' . The machine will on working mode

BLUETOOTH

The device is equipped with built-in speakers anda bluetooth module. The bluetooth module is activated automaticallywhen the device is turned on, as indicated by a voice message. Toconnect your phone to the device, pair the devices using the bluetooth menu on your phone. Once paired, the device will connect to your phoneautomatically when tured on.

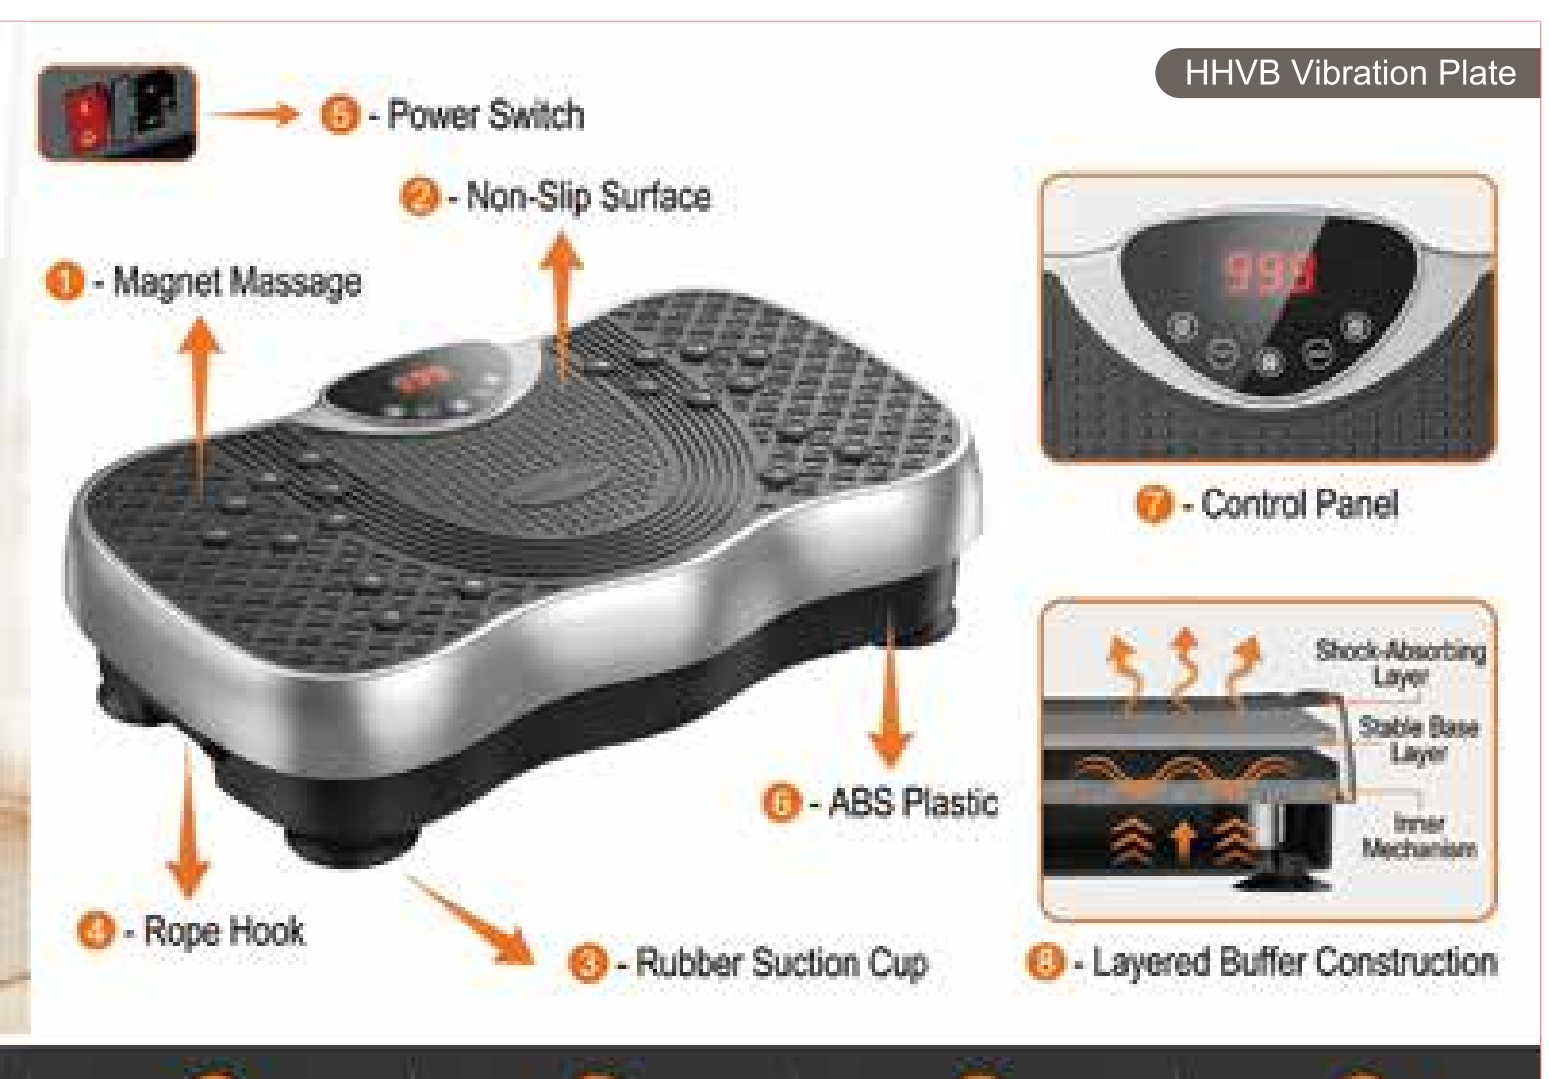

1. **Magnet Massage** Combining the massage function of foot acupoints, effectively relieving foot pain, relaxing muscles, and promoting Xu Ye's circulation! Enhance vibration transmission effect, relieve fatigue, improve leg and sole line reduction and relaxation effect!
2. **Non-Slip Surface** Users have more fitness options, they can go barefoot or wear shoes and socks, and long-term use will not prick their feet,Better user experience!
3. **Rubber Suction Cup** Help users in the process anti-slip fixation, shock absorption and noise reduction, while protecting the ground and coverings, the fitness venue selection will be greater!!
4. **Rope Hook** Convenient for users to install resistance ropes before exercise, better balance during exercise, and better coordination of the body!
5. **Power Switch** Our product has a voltage of 110V and is suitable for use in the United States, Canada, and Mexico!
6. **ABS Plastic** Better wear resistance and corrosion resistance, less prone to brittle cracking, suitable for storage in more environments!
7. **Control Panel** Easy to operate, displays time, speed, distance. Simple interface for all users
8. **Layered Buffer Construction** excellent shock absorbing and safety,Users can enjoy a quieter space during exercise!

TOUCH SCREEN CONTROL MODES & FUNCTIONS

Program Modes | Manual Mode | Custom Workout

A. 5 AUTO EXERCISE MODES

Simply one press to preferred mode. Each program runs 10 minutes, has 15 cycles with 4 different speeds per cycle. Speed changes every 10 seconds. Time and speed cannot be changed in preset auto mode.

B. MANUAL MODE (Custom Workout)

1. Press Power button.
2. Use Time +/- to set duration.
3. Press Start.
4. Use Speed +/- to adjust vibration speed (range 0-120).

C. BEST RESULTS BETWEEN PROGRAMS

We tend to adapt, so we want to continue eliciting change in our bodies. Each level has its own set of benefits. We recommend you start at the low level and work your way up.

SPEED LEVELS PER PROGRAM

PROGRAM LEVEL	SPEED RANGE
Program Level 1:	speeds 20-40
Program Level 2:	40-60
Program Level 3:	60-80
Program Level 4:	80-100
Program Level 5:	100-120

HHVB Vibration Machine Efficient For Body Workout

HHVB Helps Relief Full Body Relaxation

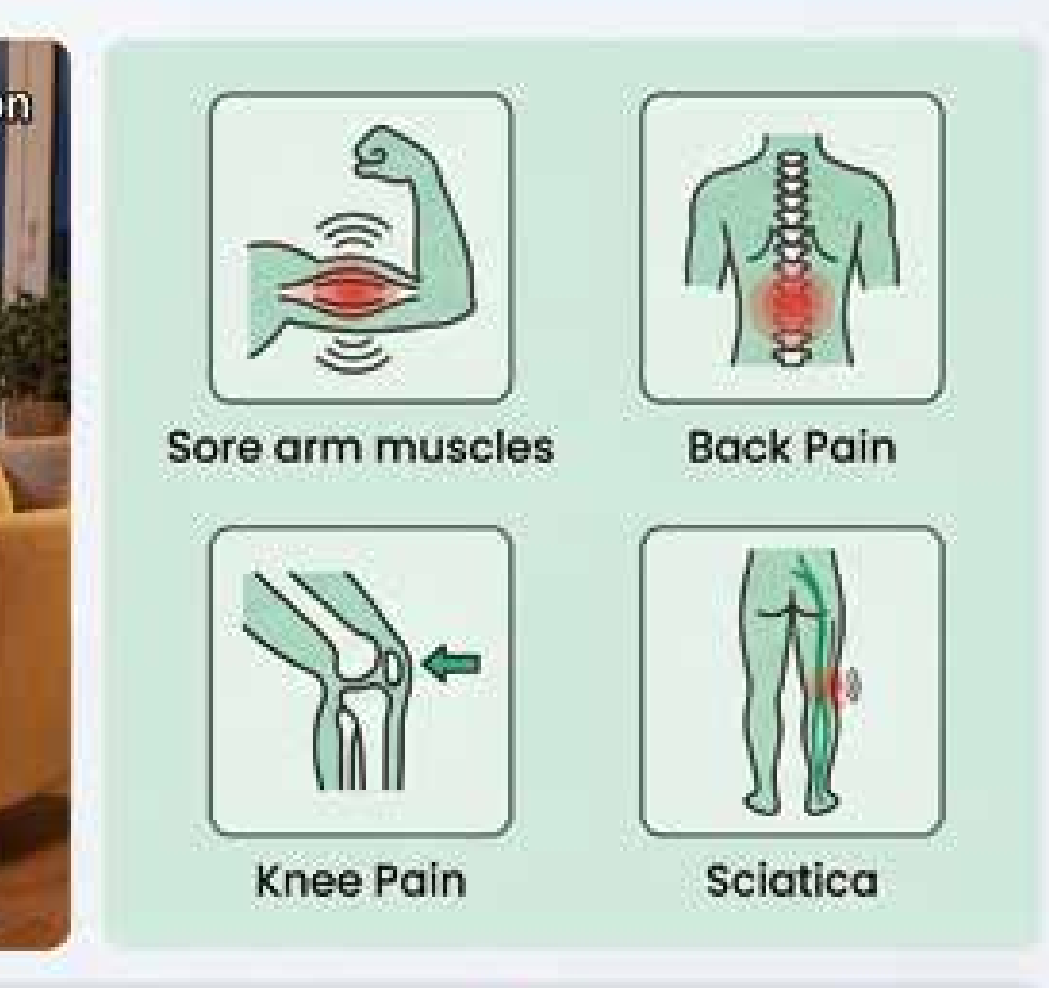

Aids in recovery · Relieves physical stress · Accelerated rejuvenation · Stimulates circulation

---

Exercise & Physical Therapy

10 MINUTES ON HHVB =

30 min Yoga	100+ Sit-ups	100+ Push-ups
1 hour Cycling	1 hour Jogging	30 min Swimming

USE ANYWHERE, ANYTIME

Home	Office	Gym	Family
Relax & Music	Break & Stretch	Workout	Time

Stay active, enjoy life and healthier!

MAINTENANCE AND STORAGE

Before cleaning or maintaining the unit, make sure the power is turned off and the power cord is unplugged.

CLEANING

Clean the device only with a damp cloth and mild detergent, immediately after use. You can use a mild solution of dishwashing liquid in warm water and a microfiber cloth. Remember to wring out the cloth so that it is only slightly damp.

STORAGE

If the device will not be used for a long time, it is recommended to coil the power cord and store the device in an area free of dust and moisture. Keep the device away from sources of fire and high temperature. Do not expose the device to direct sunlight for long periods of time.

ENVIRONMENTAL PROTECTION

Do not dispose of the device in the municipal waste container. The used device must not be disposed of with household waste. Return the used device to a suitable disposal facility, as the hazardous components in the device may pose a threat to the environment. Please donate cardboard packaging to waste paper. Put polyethylene (PE) bags in the plastic container.

TRANSPORTATION

The fitness vibration machine can be transported using general transportation tools. Severe vibration, shock, or rain must be avoided during transportation.

FAQ AND SOLUTION / TROUBLESHOOTING

Common issues and how to fix them

	SYMPTOM	POSSIBLE CAUSE	SOLUTION
1	Lights are off	Is power supply ok? / Power switch off / Transient current too strong, blown fuse	Plug in again / Turn off to on / Change a new fuse
2	Noise	Is the foot screws level with the floor?	Adjust foot screw
3	Remote control does not work	No battery / Too far from machine / Remote not aimed at receiver	Replace battery / Valid range is 2.5 m / Receiver is in center of display
4	Machine stops while in using	Machine is overheated	Start again after 10 minutes
5	Does not work as intended	Received too many commands	Turn off power and restart

If the problem has not been solved after following the above methods, please contact us and our engineers will help you deal with it. Do not disassemble and maintain the device by yourself, it is dangerous! Thank you!

✉ SERVICE MAILBOX: scshenchikeji@163.com
Can solve any of your problems! Thanks for your trust and support sincerely!