


Firmware Flashing Guide

Flashing Firmware to an nRF Board Using nRF Programmer (GUI)


This guide explains how to load and flash a firmware file to PCB using Nordic's official graphical tool.

1. Install the Required Software

1. Download and install [nRF Connect for Desktop](#) from Nordic Semiconductor.

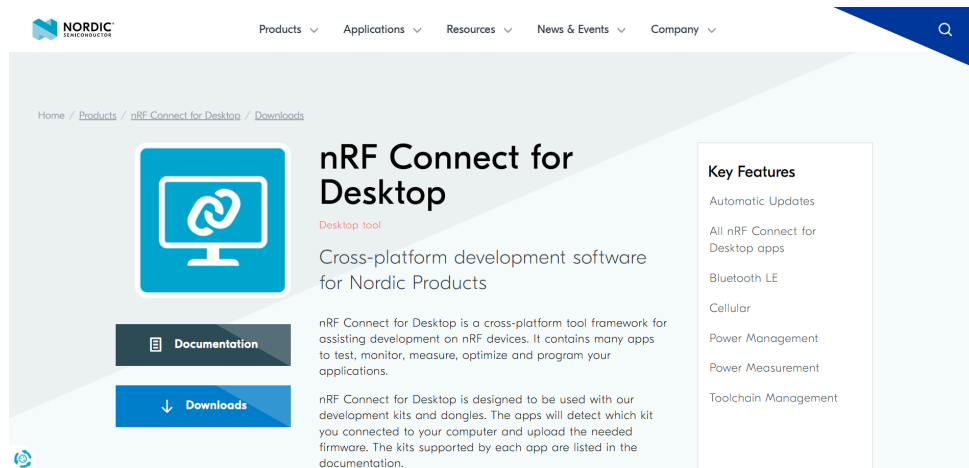


2. Open nRF Connect for Desktop and install the **Programmer** application.

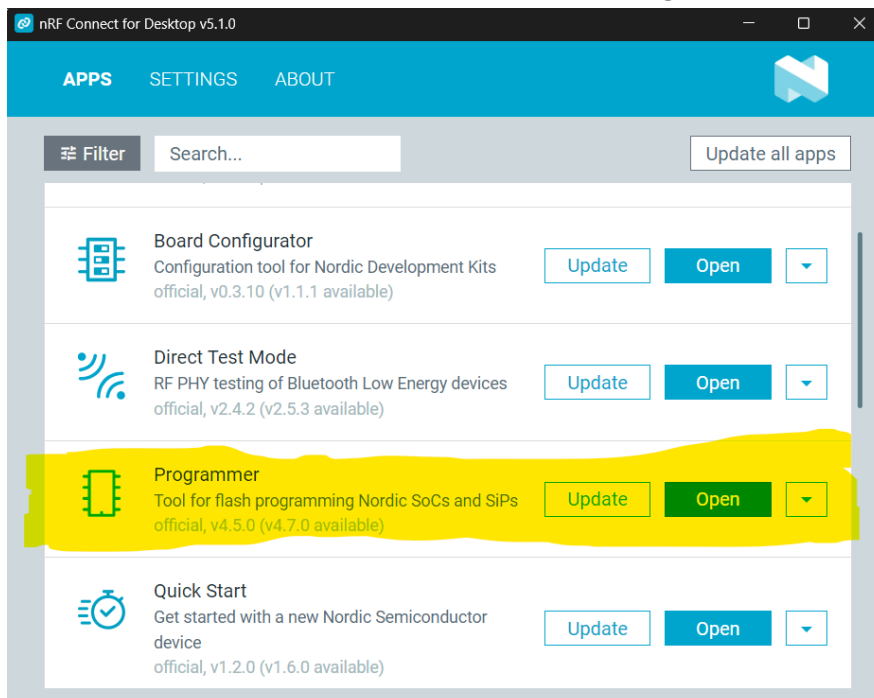


2. Connect the nRF Board

1. Connect the JackJack board to Jlink using the wiring diagram below.

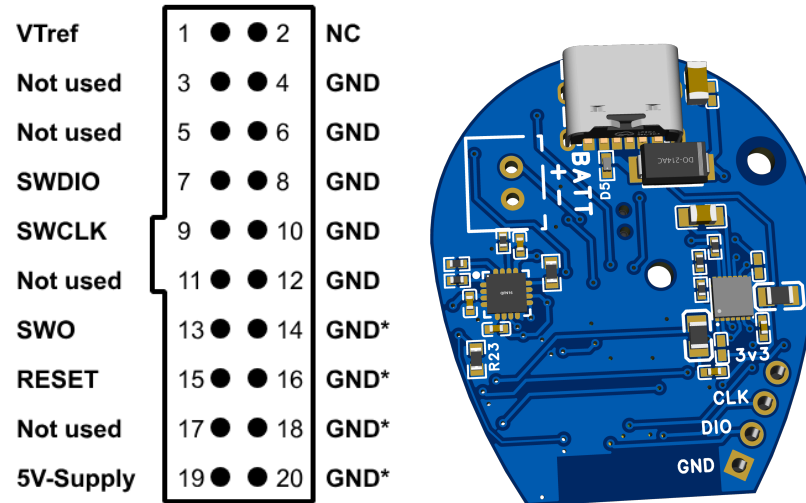


J-Link V9 to PCB Connection Diagram

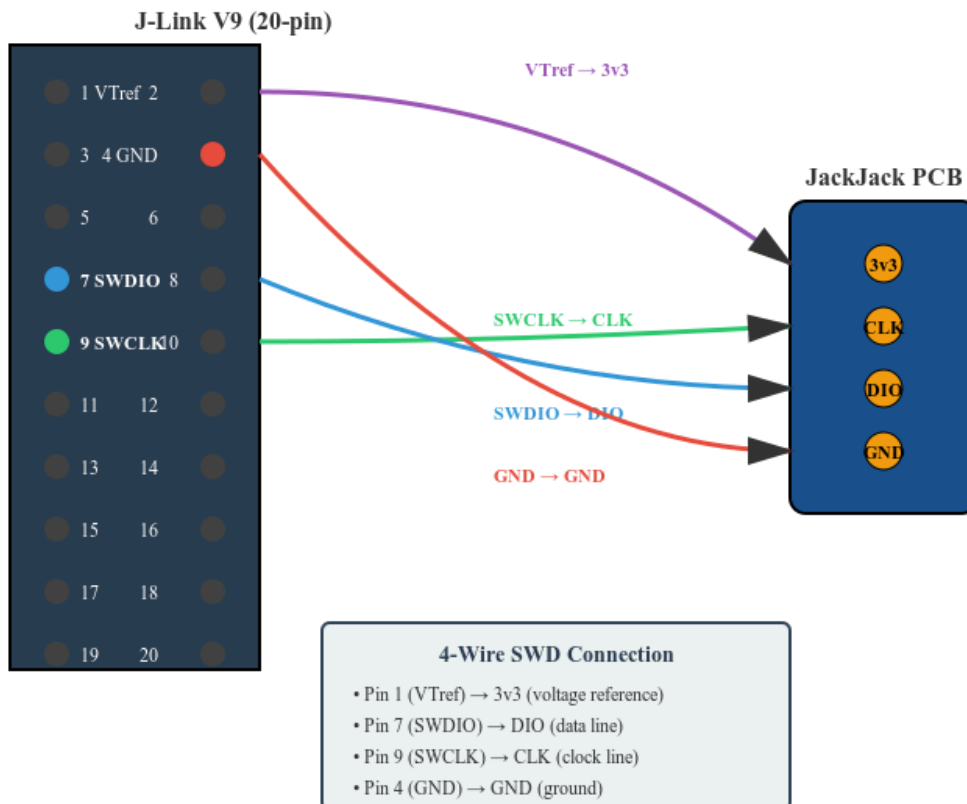

After this done;

2. Connect Jlink to the Laptop
3. Open the Programmer application. *[Mentioned in previous image]*
4. Click **Select device** and choose the detected J-Link device corresponding to your board.

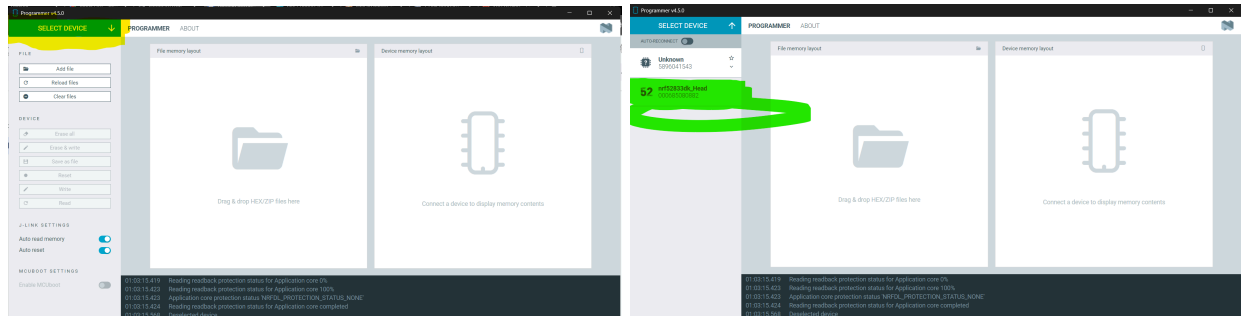

3. Load the Firmware File

1. Build the firmware using your development environment.

Locate the generated file found in:

`firmware/zephyr.hex`

4. Flash the Firmware

Click **Erase & Write** to begin programming.

This performs a full chip erase, writes the firmware, and verifies the operation.

5. Run the Application

Once flashing completes, you can wait for a few seconds and then unplug the JLink and plug back in.

You'll see the Mic-Sense in your App. Make sure your BLE and Location services are on and also your app has all the permissions.