Zaber Stage Guide

7/30/2026_ZZ_FK

Information

Find all information here:

Software - Zaber

X-Series General Guide

- X-Series-Device-Getting-Started-Guide.pdf
  - ASCII Protocol Manual
  - Zaber Motion Library
  - Zaber Launcher Tutorials - Zaber Software Portal

X-RSW-E

- X-RSW-E Series User's Manual

Warnings

- **Turn on the power switch after connect all the lines and verify that they are all correct in the beginning!!!**

- **Turn off the power before remove any lines in the end!!!**

- **Stage's service may become very hot; avoid contact to prevent injury.**



The blue light will be on if the power switch is on

Power & USB





All 3 prong plugs should be plugged into this mains power strip



All USB plugs should be plugged here

Power bank






180.0W




310.0W


Be sure to check the maximum of power bank


Zaber X-RSW60A(rotation stage)

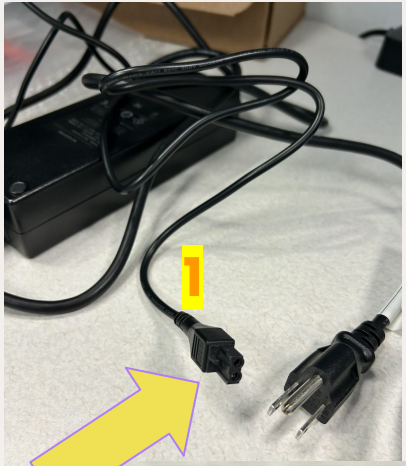


1: 3 prong plug side connect to the main power (see slide 4)
2: USB side connect to computer(see slide 4)
3:the plug is for connect to the next stage(if needed)
Make sure each hole is align it when inserting

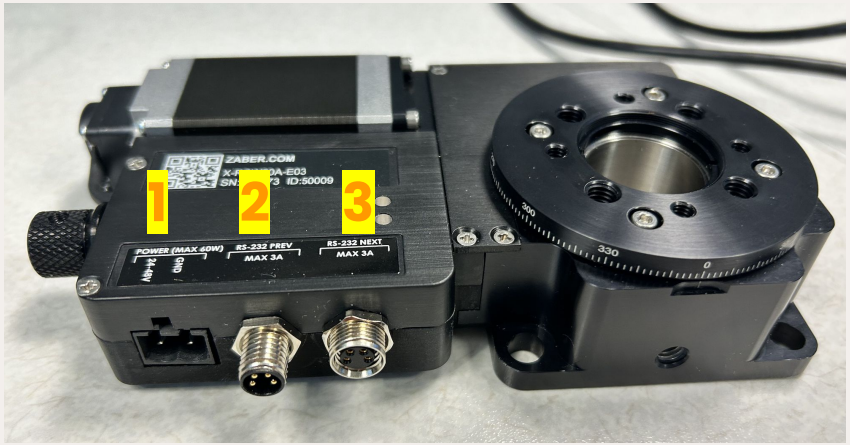

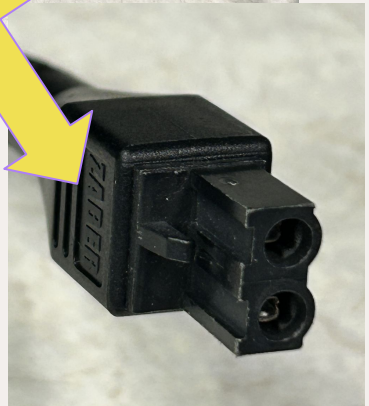

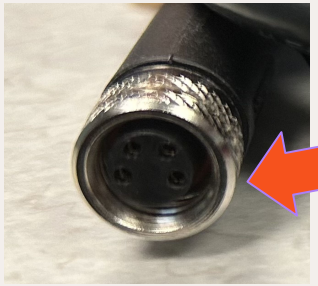



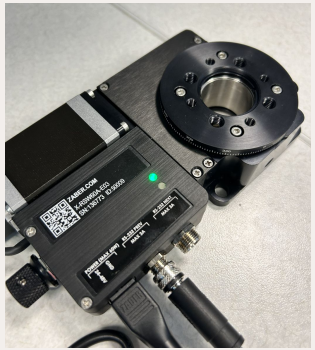


After open the main power switch, green light should always remain.


Zaber X-MCC4(Multi-axis controller)



1: USB side connect to the computer(see slide 4)
2: another side connect to stage(see next slide/slide 9)
3: 3 prong plug side connect to the main power (see next slide/slide 4)
Make sure each hole is align it when inserting

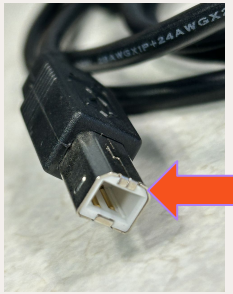



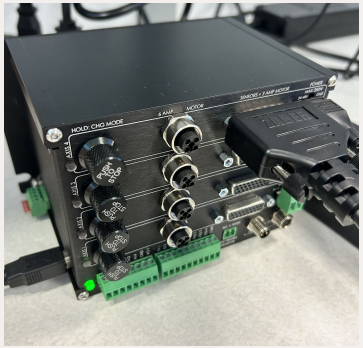




After open the main power switch, green light should always remain.


Zaber X-MCC4(Multi-axis controller)



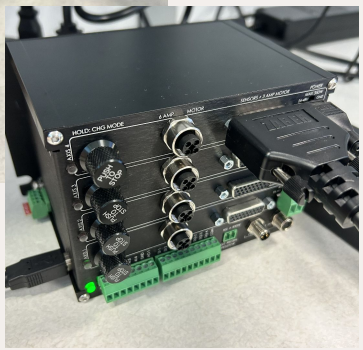


When open the main power switch, should see all white lights, then green light. When that axis is running, should see yellow light flashing.




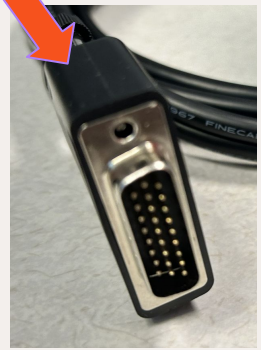

Be sure to tighten the screw



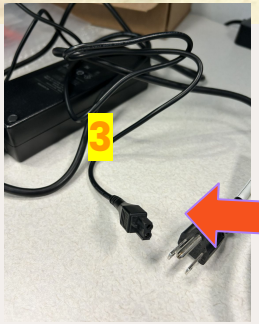

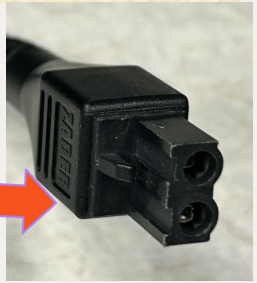



Zaber LSA25A-T4A(Linear stage)

1: another side connect to the controller(see slide 9) and Tighten the screw


Make sure each hole is align it when inserting



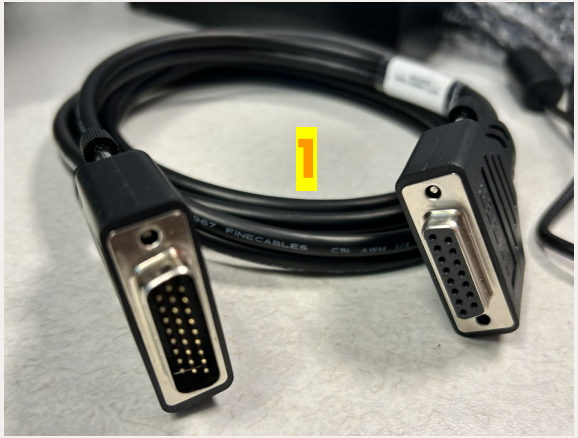

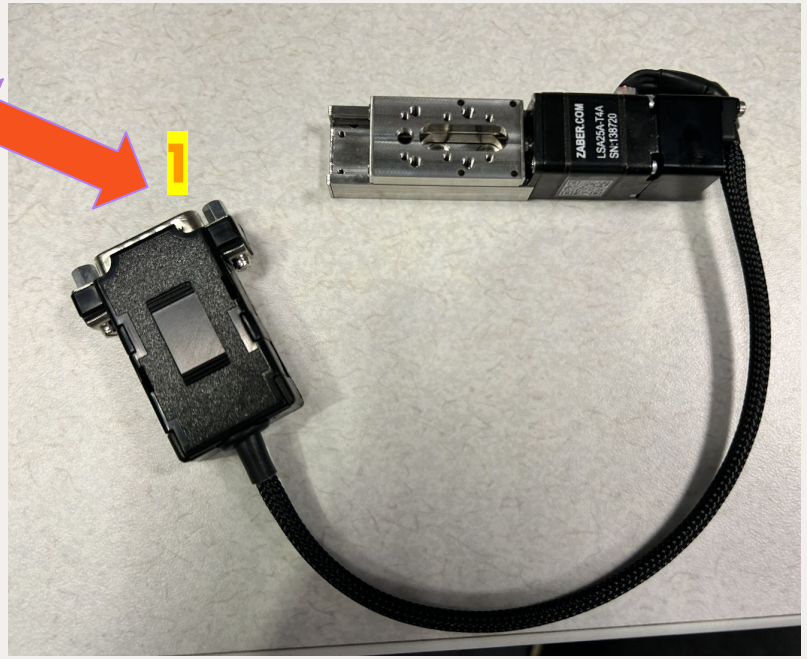

Additional Pictures

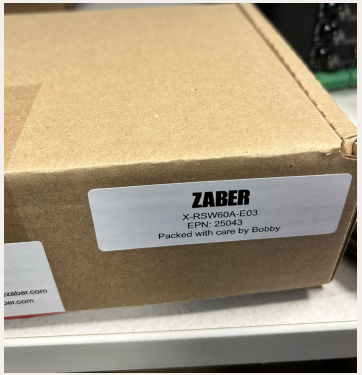

*Boxes for rotation stage(1) and linear stage(2)

(1)



(2)



Example video

