

16. ZIG ZAG SEWING

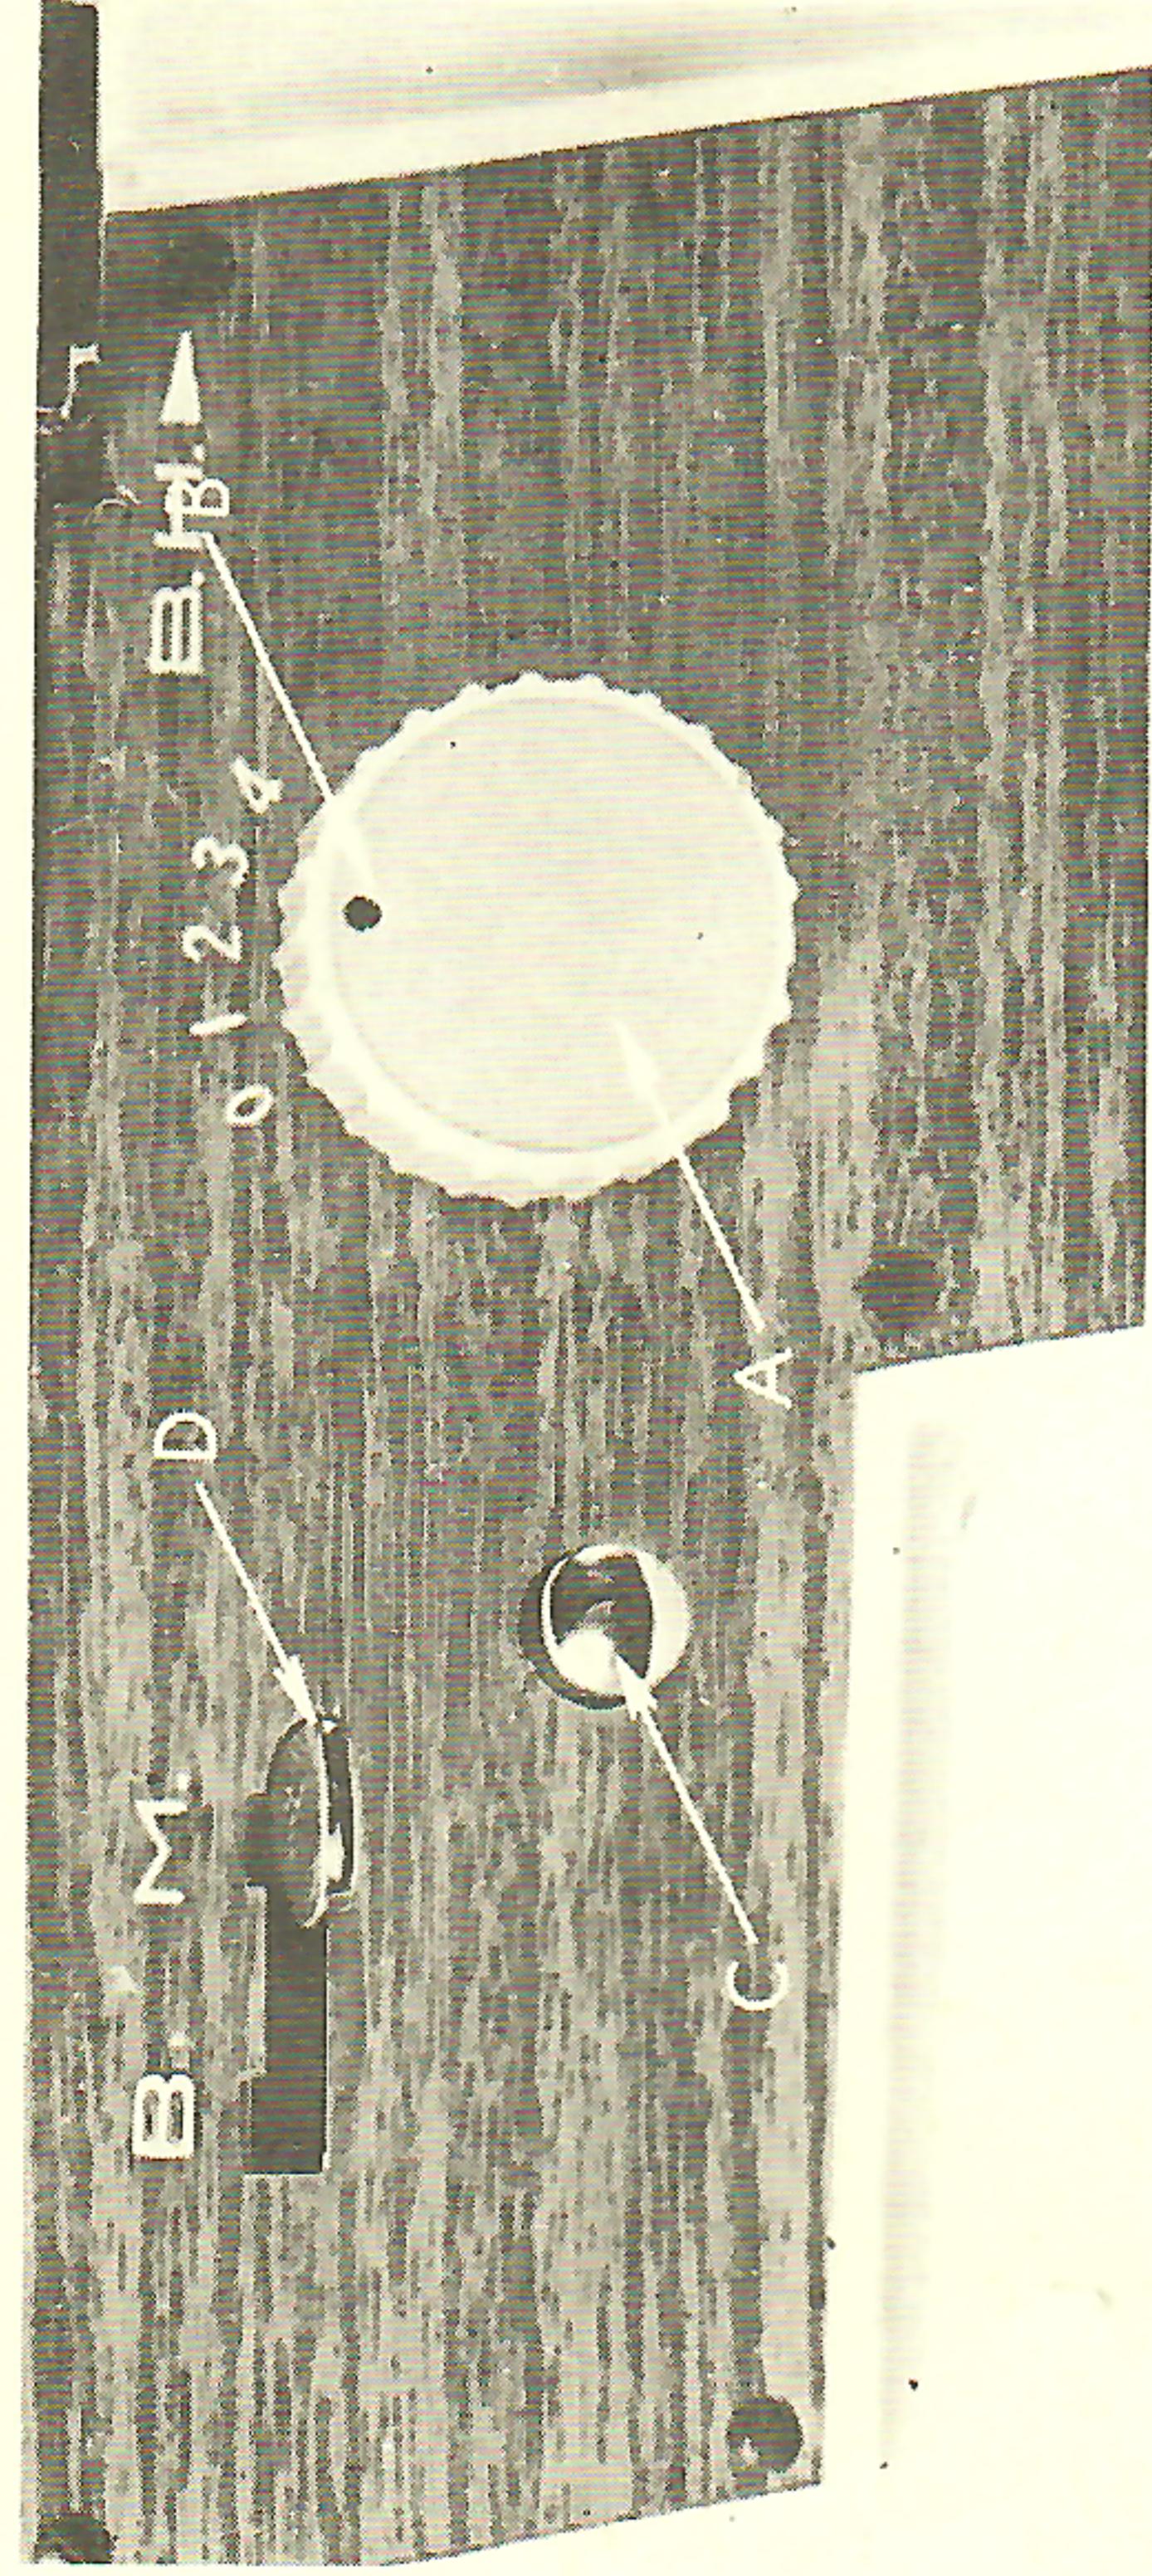


Fig. 29

REGULATING WIDTH OF STITCH

Move the blind stitch lever (D) to "M" when you sew the zig zag stitch. Move the "B. H." dial at "0".

The zig zag regulating dial (A) controls the width of stitch. Turning the zig zag regulating dial clockwise, you will notice for it to turn from "0" to the numbers 1, 2, 3, 4.

When the zig zag regulating dial is turned from "0" toward the numbers 1, 2, 3, 4, the width of the stitch will become progressively wider. The larger the number the wider the stitch.

NOTE: The zig zag regulating dial returns to the straight stitch position when released.

CAUTION: It is not necessary to turn to on the zig zag lock and release screw (C) when operating the zig zag regulating dial.

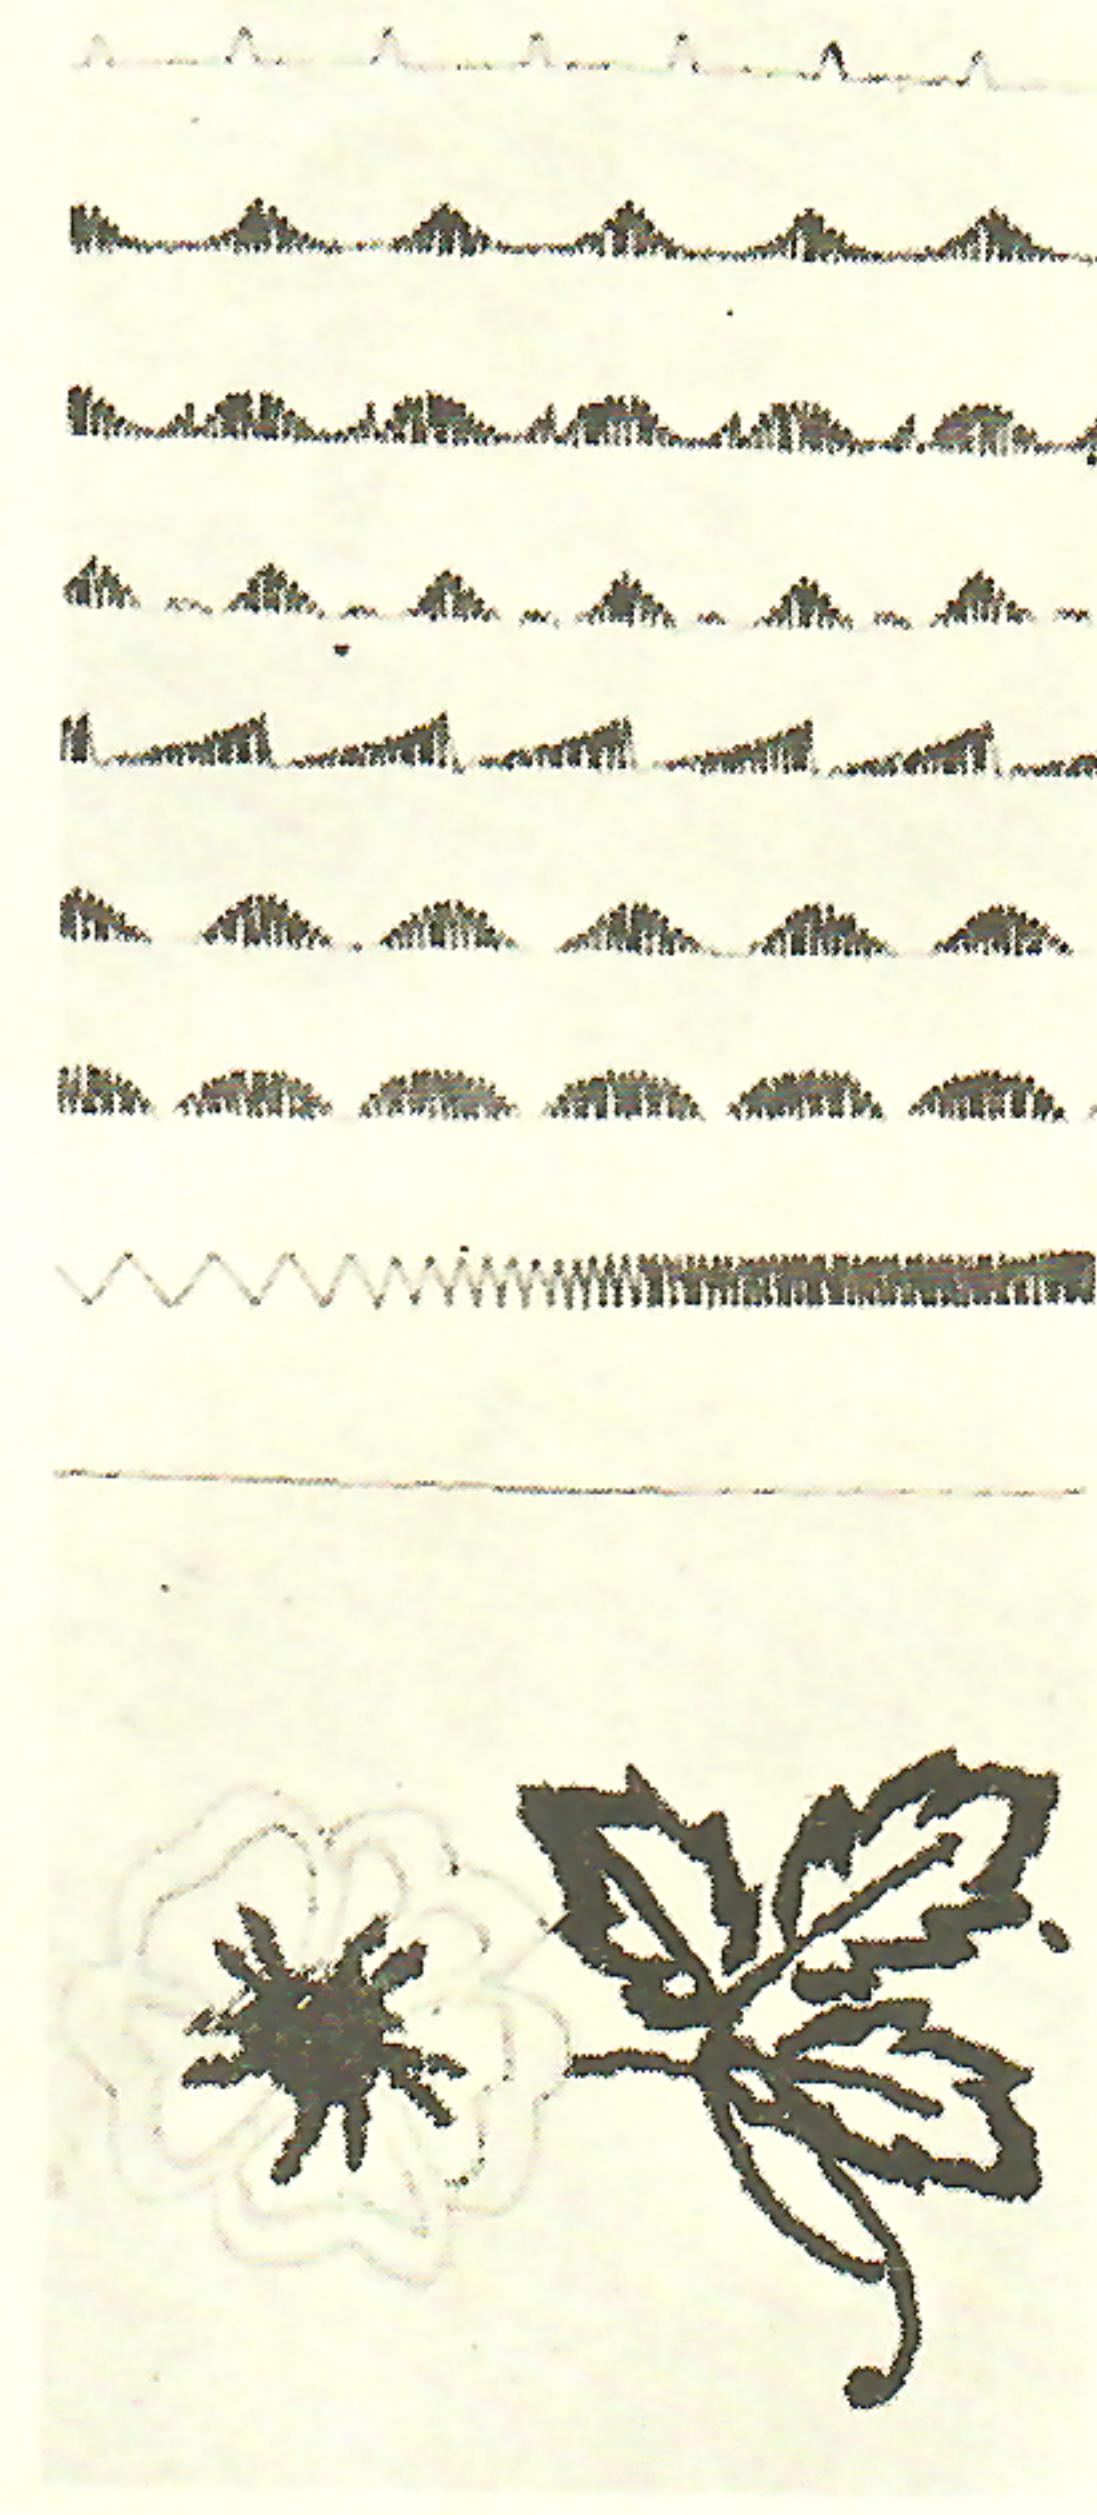


Fig. 30

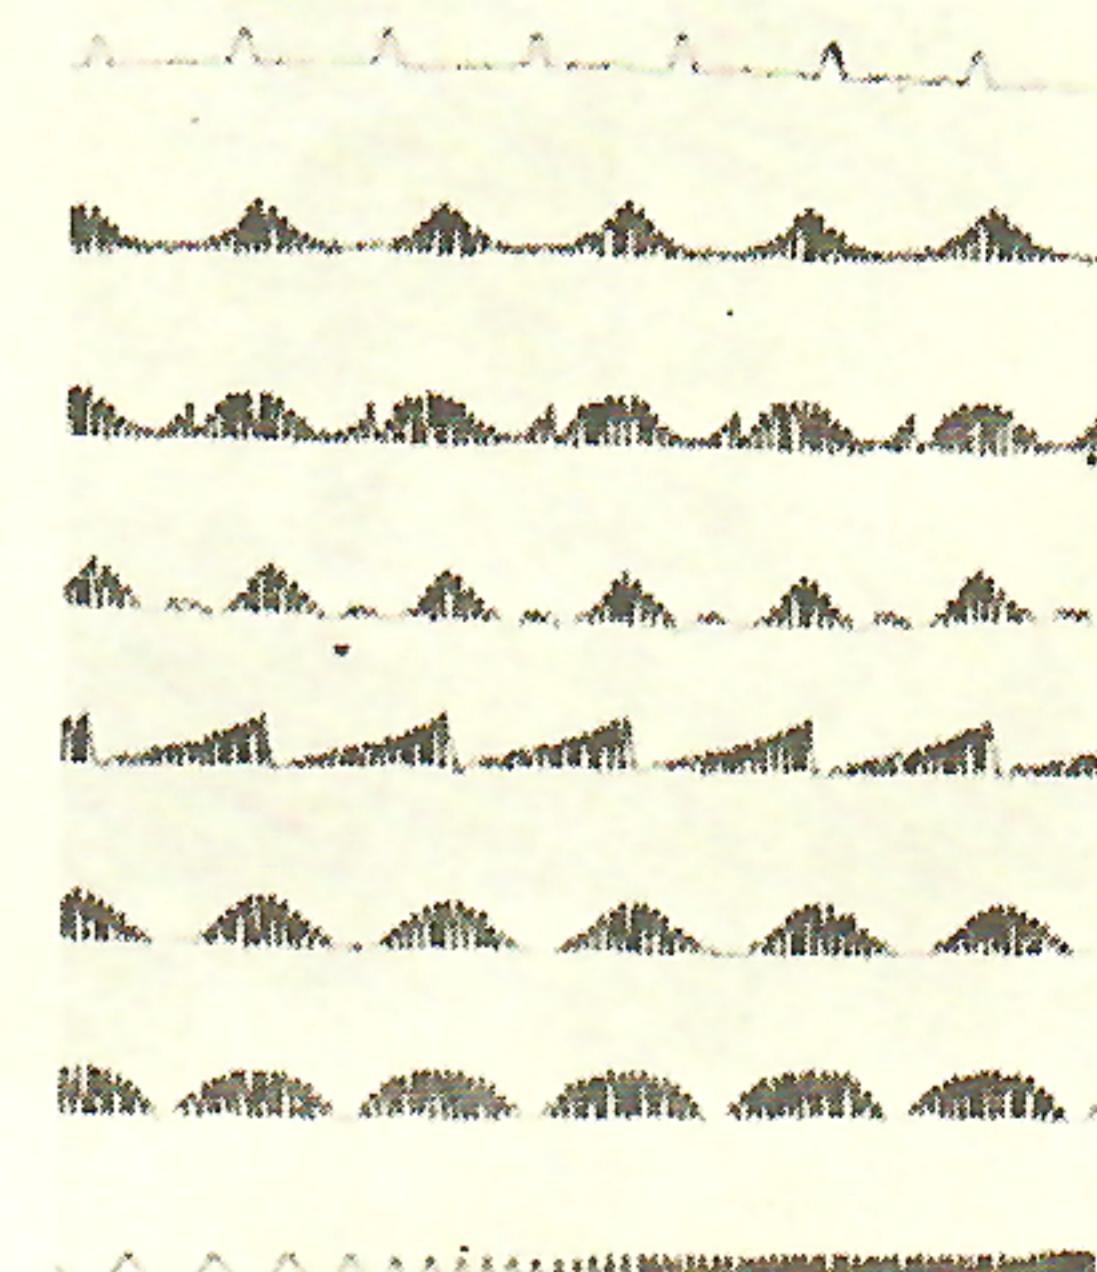


Fig. 31

LOCKING ZIG ZAG REGULATING DIAL

To lock the zig zag regulating dial so that the machine sews a uniform stitch width, first turn the zig zag regulating dial until the mark of it is under the number that you desire.

Turn to the zig zag lock and release screw all clockwise. (Fig. 32)

CAUTION: Do not try to release the zig regulating dial until after you have released the zig zag lock and release screw.

If the mark of stitch is locked under any number larger than "0" up to "3 1/2", you will notice that when the zig zag regulating dial is turned from side to side the zig zag dial will turn from that number to # 4. When the zig zag regulating dial is released, the mark of dial will return to the number under which it is locked. To release the zig zag regulating dial, turn to the zig zag lock and release screw counter-clockwise. (Fig. 33)

CAUTION: When you lock the zig zag lock and release screw do not hold the zig zag regulating dial.

Fig. 32

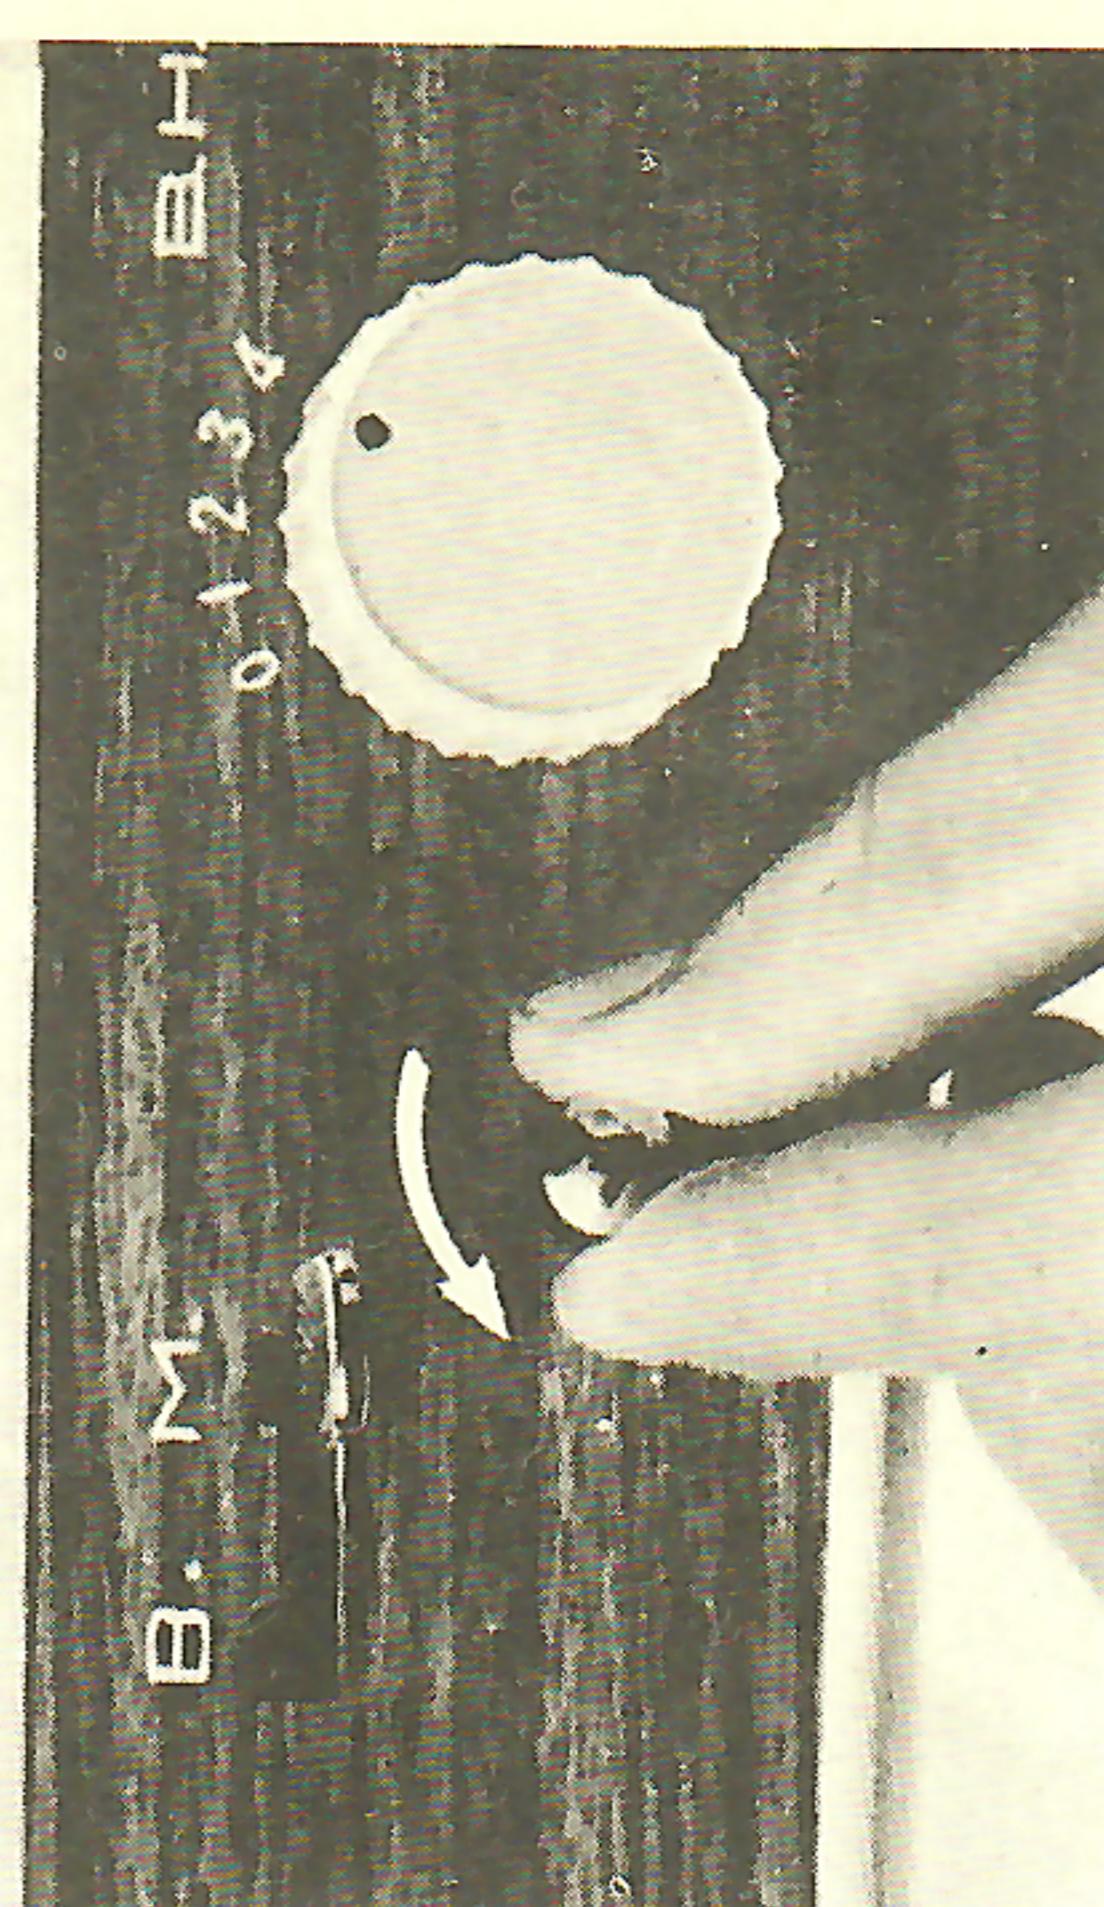
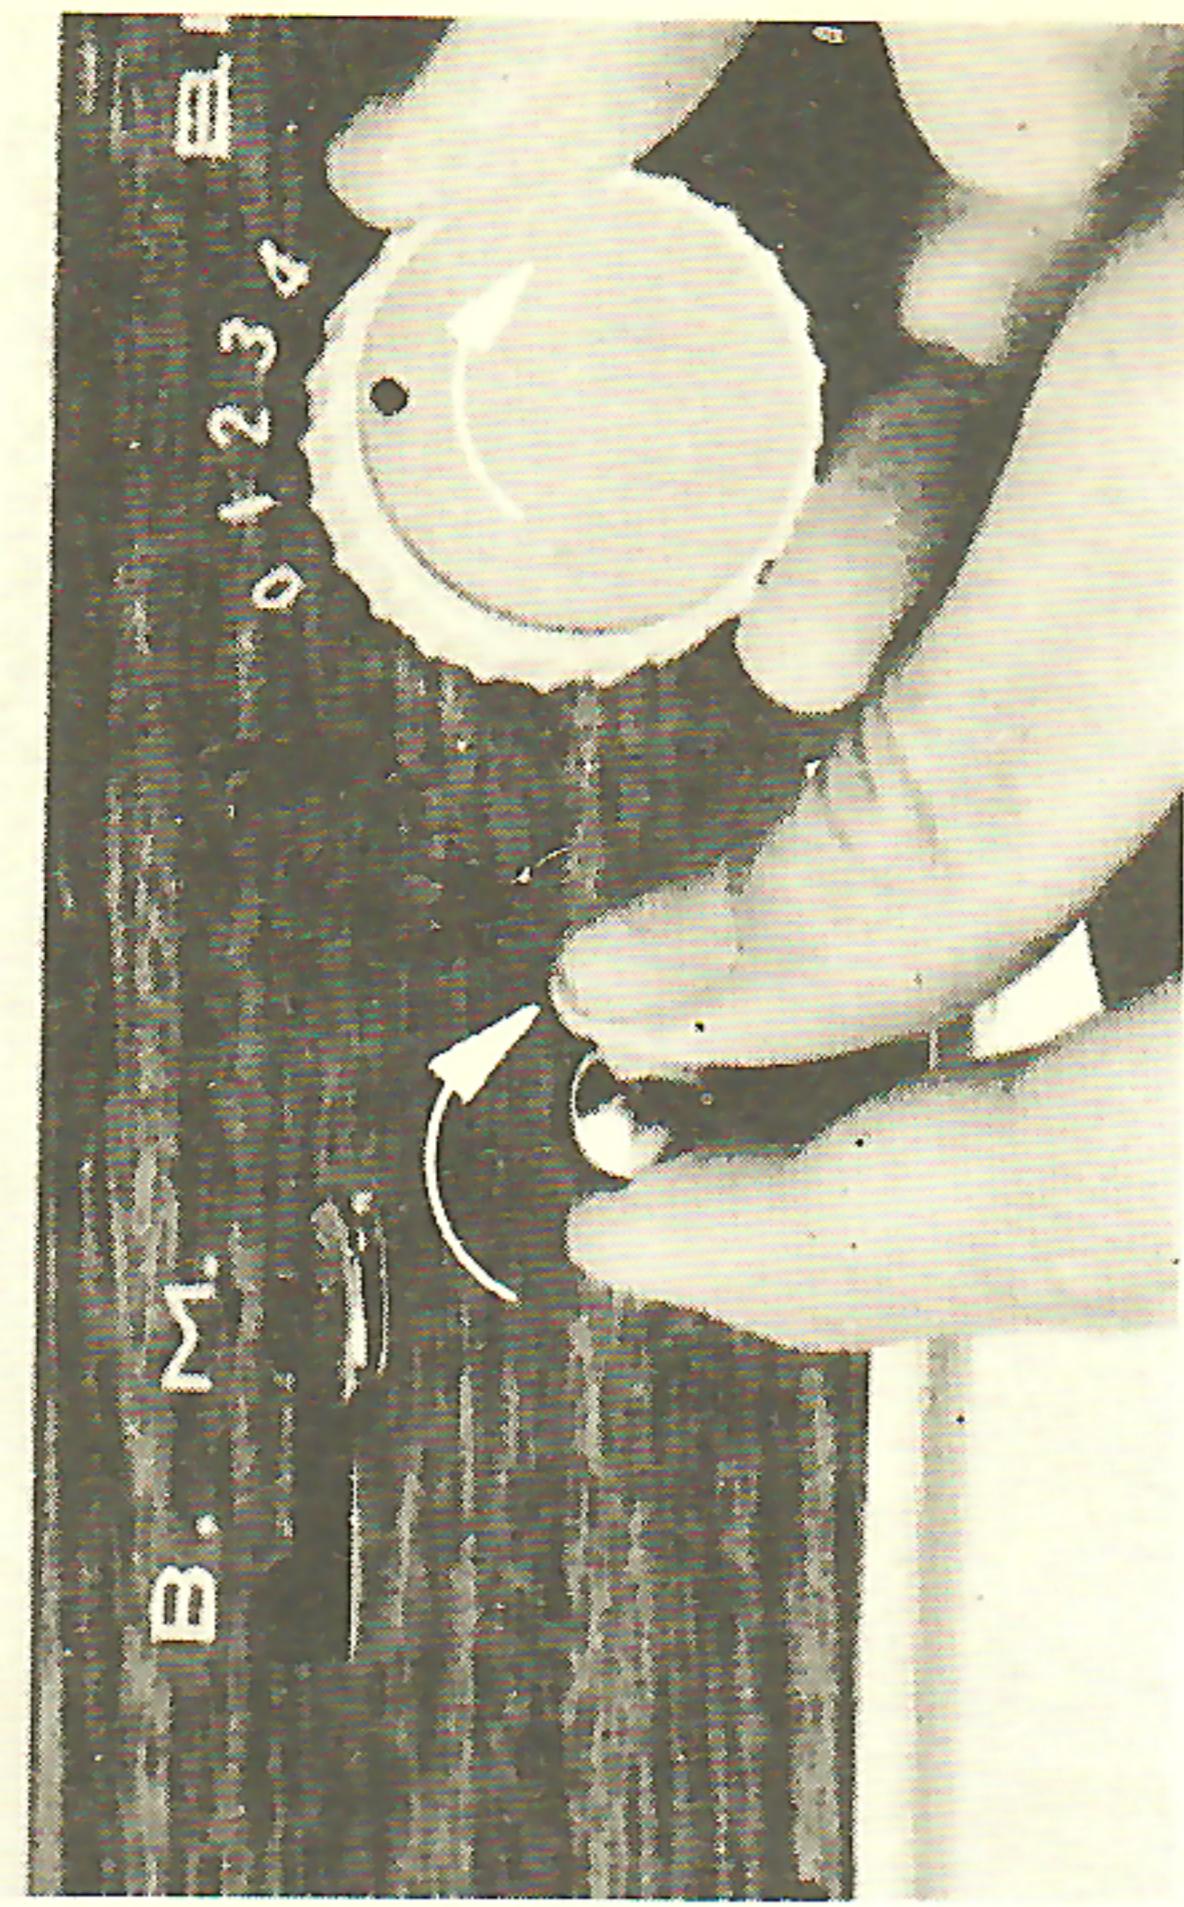


Fig. 33