CAME

OPERATOR
FOR GARAGE DOORS

FA00047-EN



Official Partner
EXPO
MILANO 2015
FEEDING THE PLANET
ENERGY FOR LIFE

INSTALLATION AND OPERATION

V6000

EN English

WARNING!
important safety instructions for people:
READ CAREFULLY!

Premise

• This product should only be used for the purpose for which it was explicitly designed. Any other use is dangerous. CAME S.p.A. is not liable for any damage caused by improper, wrongful and unreasonable use • Keep these warnings together with the installation and operation manuals that come with the operator.

Before installing

(Check what's there: if something is missing, do not continue until you have complied with all safety provisions)
• Check that the automated parts are in proper mechanical order, that the operator is level and aligned, and that it opens and closes properly. Make sure you have suitable mechanical stops • If the operator is to be installed at a height of less than 2.5 m from the ground or other access level, make sure you have any necessary protections and/or warnings in place • Before beginning any operation it is mandatory to carefully read all instructions; improper installation may result in serious harm to people and things. • If any pedestrian openings are fitted into the operator, there must also be a a system to block their opening while they are moving • Make sure that the opening automated door or gate cannot entrap people against the fixed parts of the operator • Do not fit upside down or onto elements that could bend. If necessary, add suitable reinforcements to the anchoring points • Do not install door or gate leaves on tilted surfaces • Make sure any sprinkler systems cannot wet the operator from the ground up. • Make sure the temperature range shown on the product literature is suitable for the climate where it will be installed.

Installing


• Suitably section off and demarcate the entire installation site to prevent unauthorized persons from entering the area, especially minors and children • Be careful when handling operators that weigh over 20 kg. If need be, use proper safety hoisting equipment • All opening commands (that is, buttons, key switches, magnetic readers, and so on) must be installed at least 1.85 m from the perimeter of the gate's working area, or where they cannot be reached from outside the gate. Also, any direct commands (whether buttons, touch panels, and so on) must be installed at least 1.5 m from the ground and must not be reachable by unauthorized persons • All maintained action commands, must be fitted in places from which the moving gate leaves and transit and driving areas are visible • Apply, if missing, a permanent sign showing the position of the release device • Before delivering to the users, make sure the system is EN 12453 standard compliant (regarding impact forces), and also make sure the system has been properly adjusted and that any safety, protection and manual release devices are working properly • Apply Warning Signs where necessary and in a visible place, such as the gate's plate

Special user-instructions and recommendations

• Keep garage-door operation areas clean and free of any obstructions. Make sure that the photocells are free of any overgrown vegetation and that the operator's area of operation is free of any obstructions • Do not allow children to play with fixed controls, or to loiter in the gate's maneuvering area. Keep any remote control transmitters or any other command device away from children, to prevent the operator from being accidentally activated. • This apparatus is not for people (including children) with physical, mental and sensory issues, or even ones without any experience, unless this happens under close supervision or once they have been properly instructed to use the apparatus safely and to the potential hazards involved. • Frequently check the system for any malfunctions or signs of wear and tear or damage to the moving structures, to the component parts, all anchoring points, including cables and any accessible connections. Keep any hinges, moving joints and slide rails properly lubricated • Perform functional checks on the photocells and sensitive safety edges, every six months. To check whether the photocells are working, wave an object in front of them while the gate is closing; if the operator inverts its direction of travel or suddenly stops, the photocells are working properly. This is the only maintenance operation to do with the power on. Constantly clean the photocells' glass covers using a slightly water-moistened cloth; do not use solvents or other chemical products that may ruin the devices • If repairs or modifications are required to the system, release the operator and do not use it until safety conditions have been restored • Cut off the power supply before releasing the operator for manual openings and before any other operation, to prevent potentially hazardous situations. Read the instructions. If the power supply cable is damaged, it must be replaced by the manufacturer or authorized technical assistance service, or in any case, by similarly qualified persons, to prevent any risk • It is FORBIDDEN for users to perform any OPERATIONS THAT ARE NOT EXPRESSLY REQUIRED OF THEM AND WHICH ARE NOT LISTED in the manuals. For any repairs, modifications and adjustments and for extra-ordinary maintenance, CALL TECHNICAL ASSISTANCE • Log the job and checks into the periodic maintenance log.

Special instructions and recommendations for everyone

• Keep clear of hinges and mechanical moving parts • Do not enter the operator's area of operation when it is moving • Do not counter the operator's movement as this could result in dangerous situations • Always pay special attention to any dangerous points, which have to be labeled with specific pictograms and/or black and yellow stripes • While using a selector switch or a command in maintained actions, keep checking that there are no persons within the operating range of any moving parts, until the command is released • The operator may move the door at any time and without warning • Always cut off the power supply before performing any maintenance or cleaning

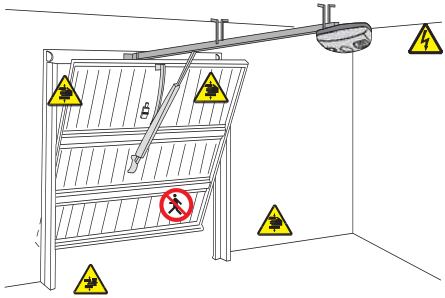

Danger of hand crushing

Danger of foot crushing

Danger! High voltage.

No transiting while the barrier is moving

LEGEND

📖 This symbol shows which parts to read carefully.
⚠ This symbol shows which parts describe safety issues
☞ This symbol shows which parts to tell users about.

REFERENCE REGULATIONS

Came S.p.A. is certified for the ISO 9001 quality and ISO 14001 environmental management systems.
This product complies with the current regulations mentioned in the declaration of conformity.

DESCRIPTION

This product complies with current safety standards.
The operator is made up of a gearmotor, a control board with transformer, a slide guide with either a belt or chain transmission system, a transmission arm and an ABS casing with display for keypad programming and a LED courtesy light.

Intended use

The V6000 operator is designed to power overhead and sectional garage doors used in homes and apartment buildings.
📖 Any installation and/or use other than that specified in this manual is forbidden.

Limits to use


Type	V6000
Door surface area (m^2)	9
Maximum height of counterbalanced overhead doors (m)	2.4
Maximum height of spring-balanced overhead doors (m)	3.25
Maximum height of sectional doors (m)	3.20

Technical data

Type	V6000
Protection rating (IP)	40
Power supply (V - 50/60 Hz)	230 AC
Power supply motor (V)	24 DC
Stand-by absorption (W)	7
Maximum power of the accessories (W)	35
Nominal power (W)	100
Opening speed (m/min)	6
Traction force (N)	600
Operating temperature (°C)	-20 ÷ +55
Insulation class	⧈
Weight (kg)	4.9

Packing list

1. One operator
2. One installation manual
3. Two anchoring perforated-plates
4. One curved lever
5. Two support braces
6. Three U-shaped braces
7. One guide - fitting brace
8. One door - fitting brace
9. Eight self-drilling hexagonal head M6x15 screws
10. One hexagonal M6x80 nut and bolt
11. One (Ø8x25) drive-shaft adapter
12. One 3x20 linchpin
13. One pin
14. Four M8X20 hexagonal screws with washers and nuts
15. One slide guide

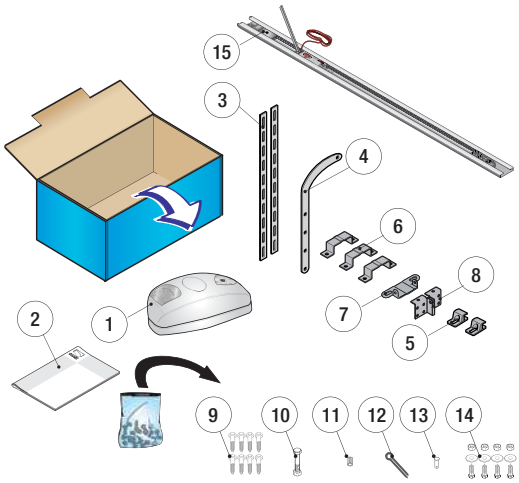


Description of parts

Operator

1. Cover
2. Gearmotor
3. Transformer
4. Control board
5. Power supply cable

Pre-assembled guide package

6. Guide
7. Chain or belt
8. Skid
9. Straight transmission-arm
10. Release cord

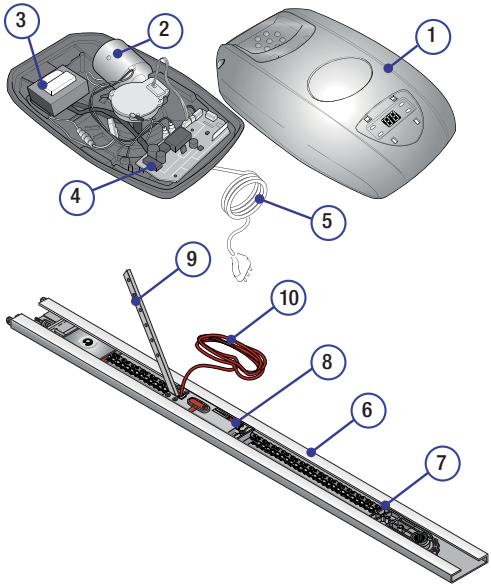

Slide guides

001**V06001**	Chain guide T = 3.02 m. Counter-balanced overhead doors up to 2.4 m in height - Counter-balanced overhead doors up to 2.25 m in height - Sectional* doors up to 2.20 m in height.
001**V06002**	Chain guide T = 3.52 m. - Counter-balanced overhead doors up to 2.75 m in height. - Sectional* doors up to 2.70 m in height.


001**V06003**	Chain guide T = 4.02 m. - Spring-balanced overhead doors up to 3.25 m in height. - Sectional* doors up to 3.20 m in height.
001**V06005**	Belt guide T = 3.02 m. Counter-balanced overhead doors up to 2.4 m in height - Counter-balanced overhead doors up to 2.25 m in height - Sectional* doors up to 2.20 m in height.
001**V06006**	Belt guide T = 3.52 m. - Counter-balanced overhead doors up to 2.75 m in height - Sectional* doors up to 2.70 m in height.
001**V06007**	Belt guide T = 4.02 m. - Spring-balanced overhead doors up to 3.25 m in height - Sectional* doors up to 3.20 m in height.

Optional accessories

001**V201**	Transmission arm for counter-balanced overhead doors.
001**V121**	Pull-cord release device to apply onto handle.

☞ For sectional doors, see the APPLICATION EXAMPLES paragraph.

Dimensions (mm)

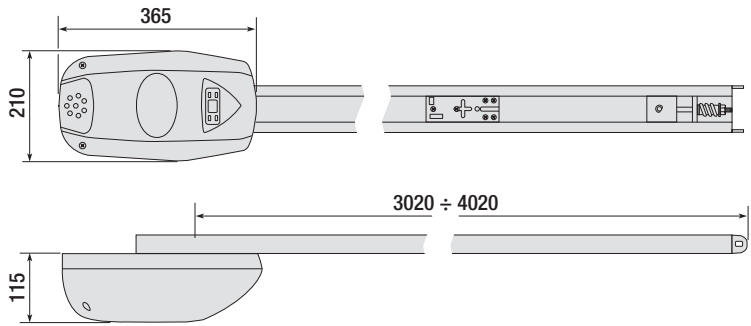

GENERAL INSTRUCTIONS FOR INSTALLING

⚠ Only skilled, qualified staff must install this product.

Preliminary checks


⚠ Before beginning, do the following:

- Have in place a suitable dual pole cut-off switch with minimum contact openings of 3 mm, and section the power supply;
- Set up suitable tubes and conduits for the electric cables to pass through, making sure they are protected from any mechanical damage;
- ⏚ Make sure that any connections inside the container (ones that ensure continuity to the protection circuit) are fitted with additional insulation with respect to those of other electrical parts inside;

- Check that the door is properly balanced; when stopped at any interim point, it should maintain its balance and position;
- If the door is fitted with a pedestrian door, it is obligatory to add a safety switch, connected to the STOP INPUT, to prevent the operator from moving when the pedestrian door is open.

Tools and materials

Make sure you have all the tools and materials you will need for installing in total safety and in compliance with applicable regulations. The figure shows some of the equipment installers will need.

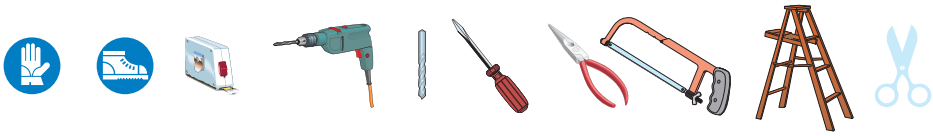

Cable types and minimum thicknesses


Connection	Cable type	Cable length 1 < 10 m	Cable length 10 < 20 m	Cable length 20 < 30 m
Power supply	FROR CEI 20-22 CEI EN 50267-2-1	3G x 1.5 mm^2	3G x 2.5 mm^2	3G x 4 mm^2
Photocell transmitters		2 x 0.5 mm^2	2 x 0.5 mm^2	2 x 0.5 mm^2
Photocell receivers		4 x 0.5 mm^2	4 x 0.5 mm^2	4 x 0.5 mm^2
Command and control devices		2 x 0.5 mm^2	2 x 0.5 mm^2	2 x 0.5 mm^2
Antenna connection	RG58	max. 10 m		

☞ If cable lengths differ from those specified in the table, establish the cable sections depending on the actual power draw of the connected devices and according to the provisions of regulation CEI EN 60204-1.

For multiple, sequential loads along the same line, the dimensions on the table need to be recalculated according to the actual power draw and distances. For connecting products that are not contemplated in this manual, see the literature accompanying said products


Standard installation

1. Operator with receiver
2. Slide guide
3. Release device
4. Transmission arm
5. Key-switch selector
6. Photocells
7. Keypad
8. Sensitive safety-edge

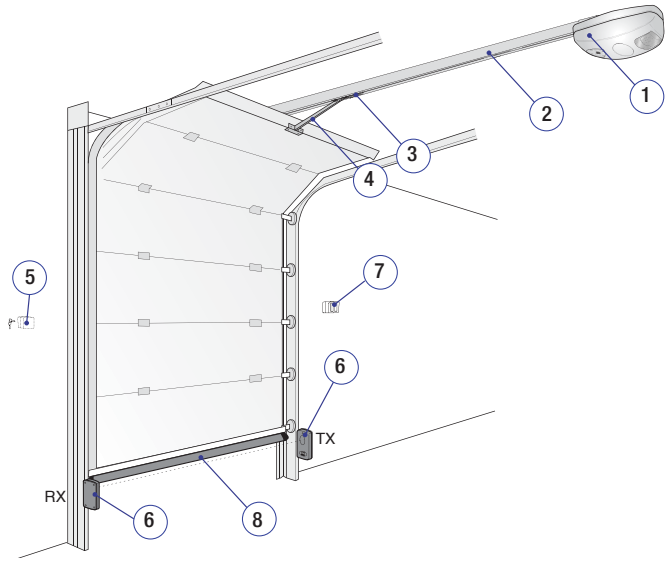

Applicative examples


SECTIONAL DOOR

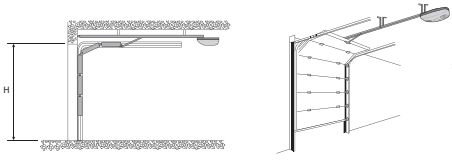


*** double-guide sectional door**

*** single-guide sectional door**

COUNTERBALANCED OVERHEAD DOOR, partially retracting and protruding

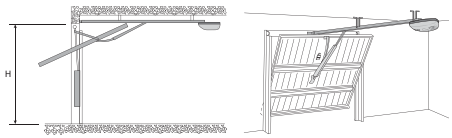

SPRING-BALANCED OVERHEAD DOOR, fully retracting and protruding

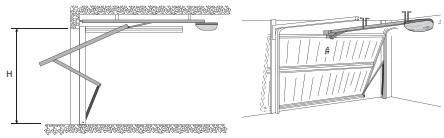



INSTALLATION

⚠ The following illustrations are just examples, in that the space available for fitting the operator and accessories varies depending on the overall dimensions. It is up to the installer to find the most suitable solution.


Assembling the transmission guide


Fitting the brace to the transmission guide ⓐ use the supplied nut and bolt ⓑ.

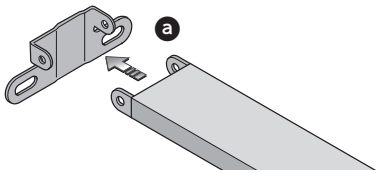


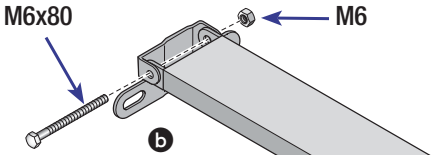

Position the slide guide in the following way:
A for sectional doors exceeding the overall dimensions of the spring-pole brace.
B for overhead doors between 10 and 20 mm from the apex point of the leaf's slide arc.
C for partially retracting protruding counter-balanced overhead doors, use the V201 arm (see attached technical documentation).

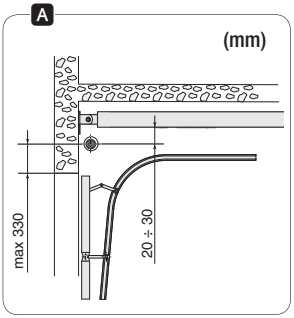


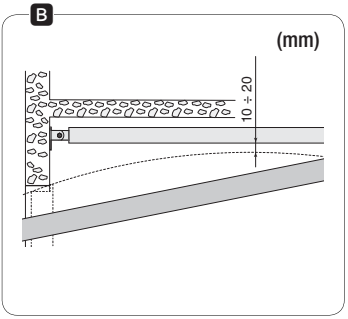


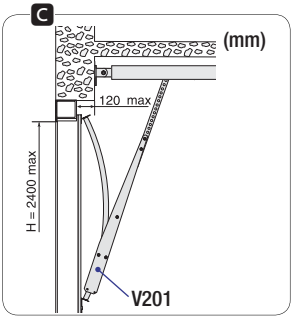


Fitting the slide guide

D Fit the slide guide to the center of the door opening, using suitable screws.
E Lift the guide and place it horizontally to measure the distance from the ceiling and then choose the type of fastening to use.

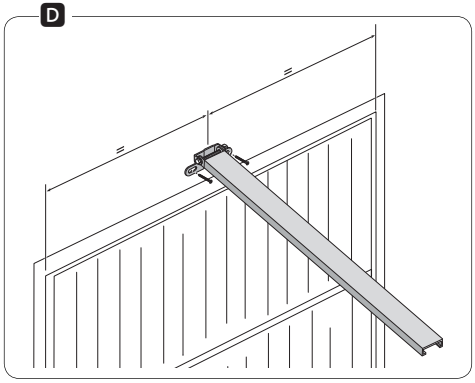

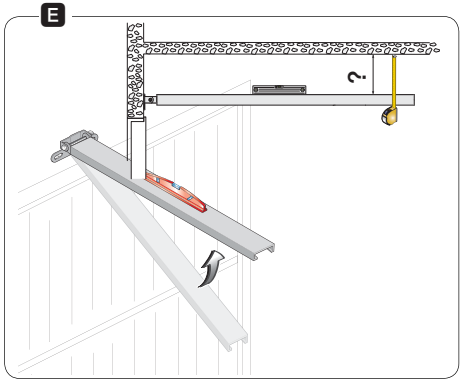



F Install the support braces a and the U-shaped brace b onto the guide.
Bend the perforated flat tabs so they fit snugly and so as to compensate for the distance between the guide and ceiling.
Fasten the flat tabs to the support braces and to the U-shaped brace using the supplied screws and washers.
Drill the ceiling so the holes match those on the flat tabs.
Fasten the flat tabs to the ceiling using suitable dowels and screws.

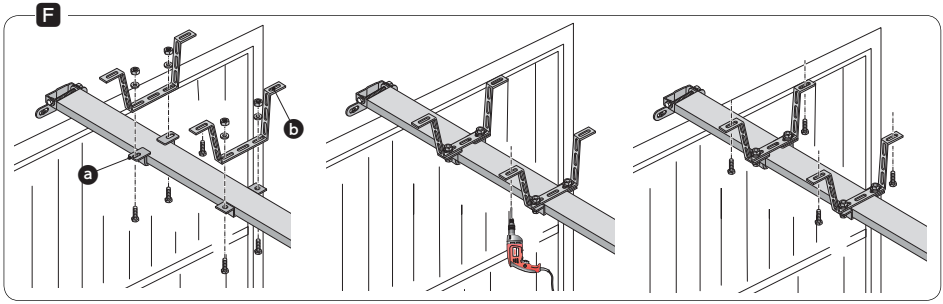

Fitting the transmission arm to the door

Fasten the door anchoring brace to the upper transom so that it is perpendicular to the guide. Either use the supplied screws or other suitable ones.
G Fasten the transmission arm a to the door anchoring brace using supplied linchpin.
H If mounting the curved lever b fit it to the transmission arm by using the supplied nuts and bolts

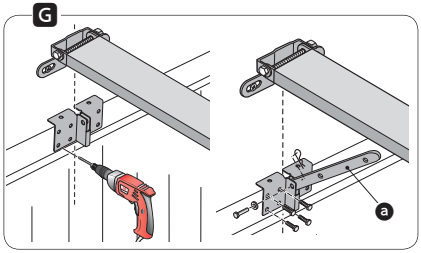

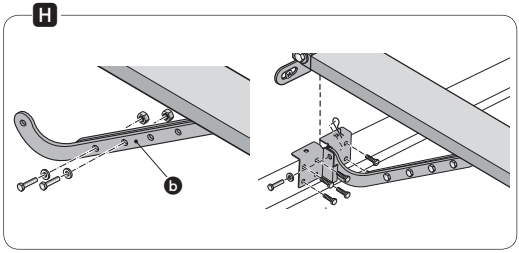


Fitting the operator to the guide


Fit the adapter to the drive shaft.

The operator can be fitted onto the guide: either in standard position **I** or at a right angle **L**.

I

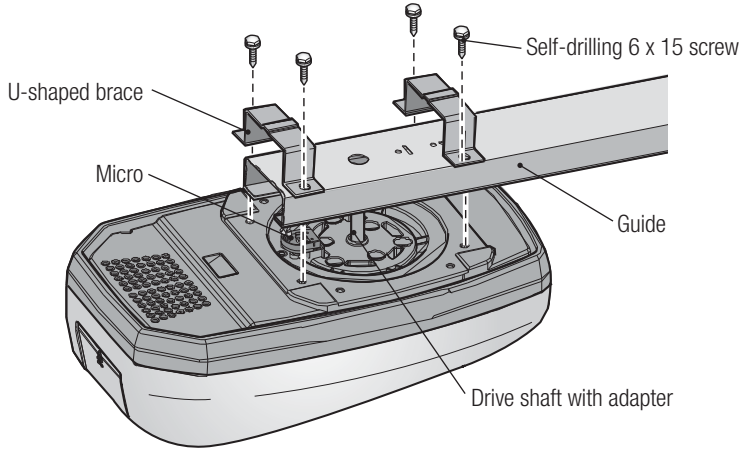

L

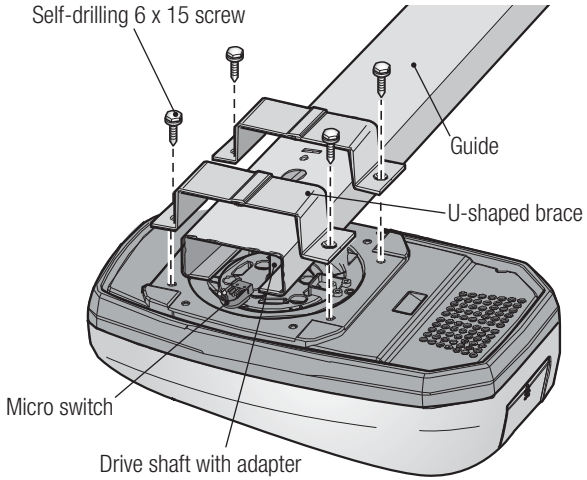


⚠ If fitting it at a right angle, before installing it, you will have to move the micro switch (see paragraph on Moving the micro switch).

Moving the micro switch


Disconnect the cables of the micro switch and remove the latter.

M

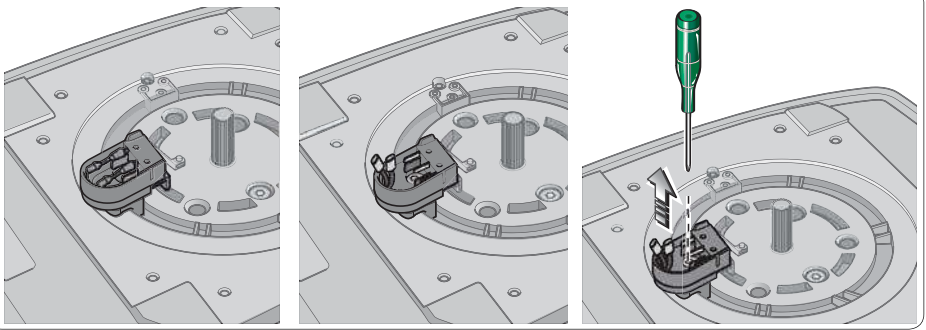


N Remove the operator's cover and the cable brace. Pull out the electrical cable and fit it through the hole.
Refit the cable brace so as to block the hole.
Use a screwdriver to open up the predrilled hole for the electrical cables of the micro switch and for the cables to the micro switch. Fit the micro switch to the operator.
Connect the connectors to the corresponding positions on the micro switch.
⚠ Reconnect the cables as originally connected (NO - C).
Fit the cover back onto the operator.

N

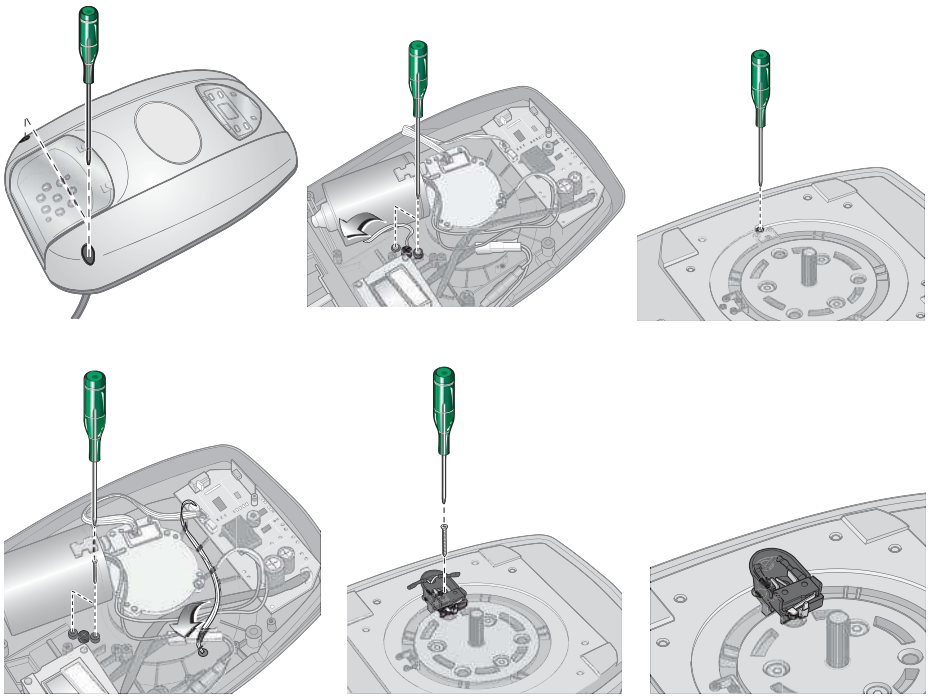

Release the operator

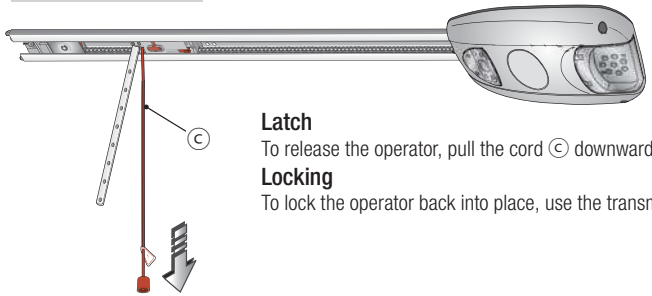

Latch
To release the operator, pull the cord Ⓒ downwards.

Locking
To lock the operator back into place, use the transmitter or a command button.

ELECTRICAL CONNECTIONS

⚠ **Before powering up the board, cut off the mains power supply.**


Power supply (V - 50/60 Hz): 230 AC

Board functions:
- Movement control and obstacle detection
- Reopening during closing
- Adjustable automatic reclosing time
- Open-stop-close-stop from transmitter and/or from button
- Courtesy light (at each opening command, the courtesy light stays on for three minutes)

FUSE TABLE	
Line fuses (A)	5
LIGHTS	
LED courtesy (W)	≤ 1


Description of parts

1. Line fuse
2. Gearmotor
3. Transformer
4. Cables input
5. AF card connector
6. Antenna cable
7. Photocell connection terminal board
8. STOP button connection terminal board
9. Limit switch connection terminal board
10. Encoder connection terminal board
11. Display connection terminal board
12. Motor connections
13. Transformer connections
14. Courtesy light connection terminal board
15. Antenna connection terminals
16. Flashing light connection terminal boards

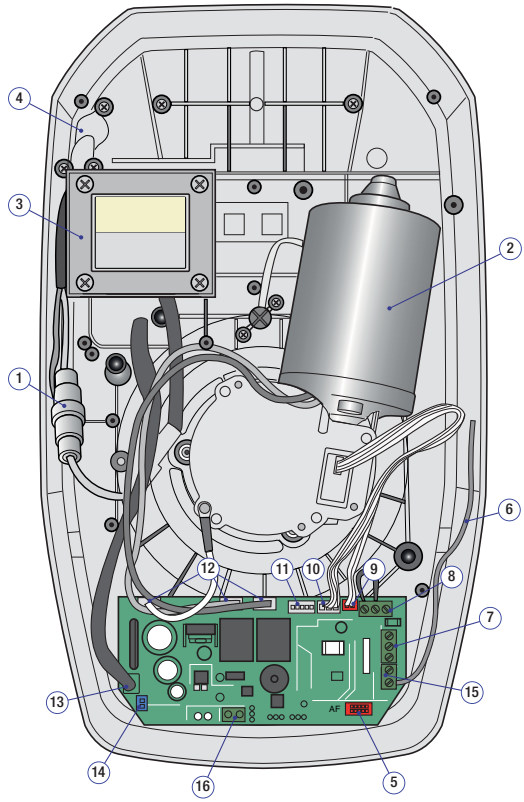


Movement control and obstacle detection

When OPENING: the door stops. To resume movement, either press a button or use the transmitter.

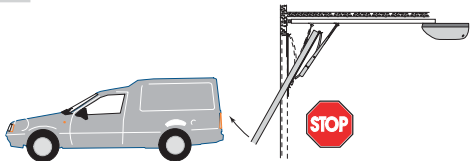

When CLOSING: inverts the direction of travel until opening is complete.


After three consecutive inversions, the door stays open and excludes the automatic closing: to close, either use the transmitter or button.

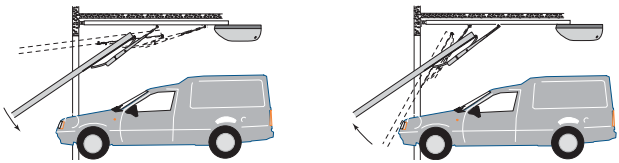


Power supply

⚠ The operator is supplied with an electrical cable (L = 1.2 m) with an already connected Shuko plug.


Warning devices

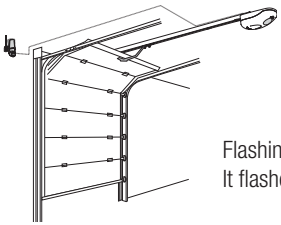


Flashing light (contact rated for: 24 V - 25 W max).
It flashes during opening and closing.

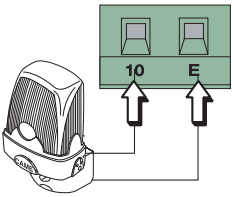


Command and control devices

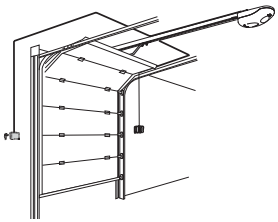


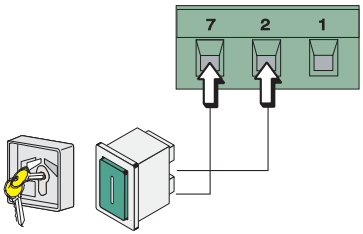

OPEN-STOP-CLOSE-STOP function from control device (NO contact).

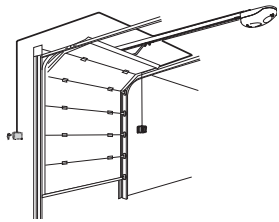



If a device is connected, remove the bridge

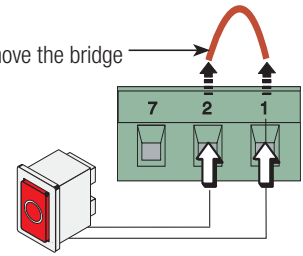

Stop button (NC contact). Enables the door to stop and excludes the automatic closing. To resume movement either press the control button or any other control device.


Safety devices

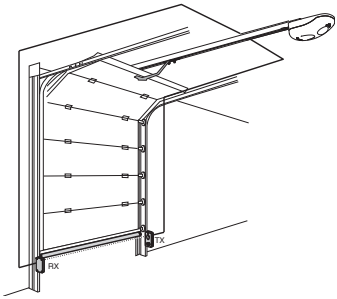

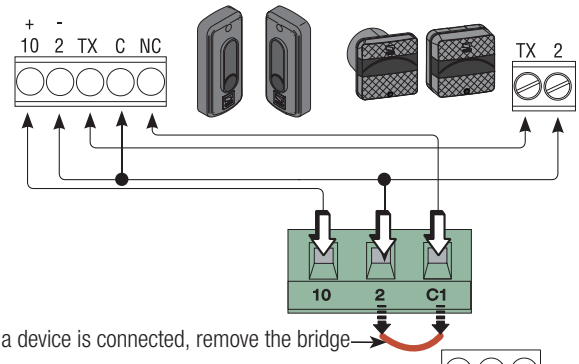

If a device is connected, remove the bridge

Contact (NC) for reopening during closing.
Input for safety devices such as photocells, sensitive safety-edges and other devices that are compliant with EN 12978 standards.
During closing, opening this contact triggers an inversion of movement until the door is completely open.

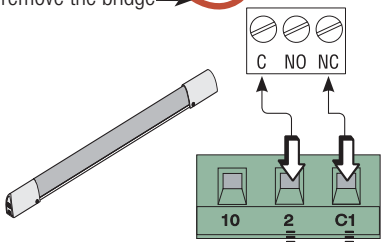

If a device is connected, remove the bridge

PROGRAMMING


Preparing for programming

Manually hook up the door to the skid.
Power up the operator. After emitting a sound signal, the control board is ready for programming.
Remove the transparent panel to access the programming keys.



⚠ Memorizing (function 5) must always be the last phase of programming, otherwise the settings will not be saved.
In the case of errors, cut off and the power up again the mains power and reprogram.

Description of keys

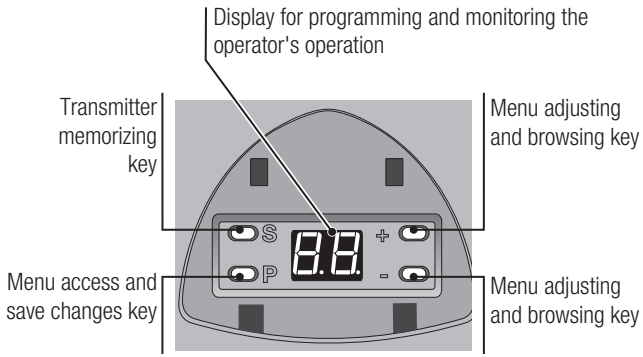

Legend of symbols


L = normal operation


F = obstacle detection


H = Encoder error


A = Active photocell







⚠ Some functions must be set so that the operator can work, others, on the other hand, are optional

Obligatory functions





Establishing the opening limit-switch points

⚠ Respect the order of settings of the limit switches shown in this manual.






With the operator idle

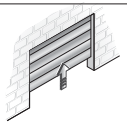1		Press P for about five seconds.	4		Press +.
2		The operator emits a sound signal and 1 appears.	5		Let the door reach the position you want.
3		Press P again, 1 flashes	6		Press P to save the procedure.

Establishing the closing limit-switch points

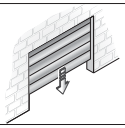
1		Press +, 2 appears.	4		Let the door reach the closing position you want.
2		Press P, 2 flashes.	5		Press P for saving the procedure.
3		Press -.			

Checking the travel self-learning

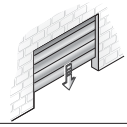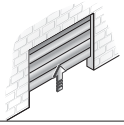
1		Press +, 3 appears.	4		Press P.
2		Press P, 3 flashes.	5		The door reaches the closing limit switch.
3		The door reaches the opening limit switch.			

Memorizing the programming

⚠ **It is OBLIGATORY to conclude the programming procedures with this function so as not to lose any saved settings!**

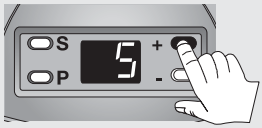

Press + to select 5.




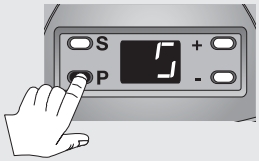


Press P. The display segments rotate clockwise.
The programming is now memorized.

Adjusting the sensitivity

⚠ The door must be properly balanced. If the sensitivity is too low it could cause the door to malfunction.

By default, the sensitivity is set to a medium level. To increase or reduce sensitivity:






1		Press P for about five seconds, 1 appears.
2		Press + and select 4.
3		Press P, appears 7.
4		Press + o - to set the suitable sensitivity level.
5	 Minimum level of Maximum sensitivity	
6		Press P to save the procedure.

📖 The last phase of programming must always be memorized (function 5).
Once memorization is complete, perform two opening and closing cycles to confirm that the settings have been saved.

Optional functions

Setting the alarm





By default, this function is deactivated; by activating the alarm function, the operator emits a long sound signal if the door stays open for more than 10 minutes. To activate it:

1		Press P for about five seconds, 1 appears.	4		Press + and select 1. The alarm is now activated.
2		Press + and select 6	5		Press P to save the procedure.
3		Press P, 0 appears			


📖 Memorizing (function 5) must always be the last phase of programming, otherwise the settings will not be saved.

Adjusting the waiting time before automatic the closing

By default, this function is deactivated. To activate it:

1		Press P for about five seconds, 1 appears.
2		Press + and select 7.
3		Press P, 0 appears.
4		Press + and select 1. The automatic closing is active and the waiting time is 30 seconds.

To change the duration of the waiting time before the automatic closing, either press + or -.

5	 60 seconds	 90 seconds	 120 seconds	 150 seconds
	 180 seconds	 210 seconds	 240 seconds	
6		Press P to save the procedure		


📖 Memorizing (function 5) must always be the last phase of programming, otherwise the settings will not be saved.

⚠The operator emits a sound signal for 20 seconds before the door starts to automatically close. Simultaneously, the courtesy light flashes. When the door starts closing, the operator emits a sound signal and the courtesy light comes on. When the door is closed, the operator does not emit any sound signal and the courtesy light stays on for three minutes.

Activating the radio control


Additional external antenna

Disconnect the internal antenna and connect the external one to the corresponding terminals on the control board.

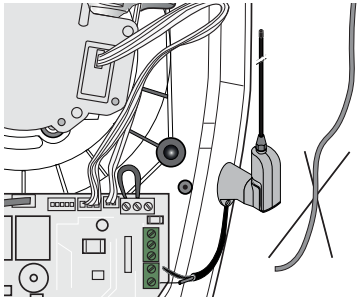



Radio frequency card

⚠ For proper functioning, before fitting any AF snap-in card, you MUST CUT OFF THE MAINS POWER SUPPLY.



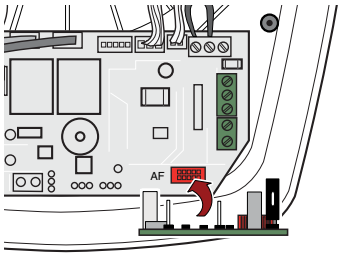


Memorizing the transmitters

You can memorize up to 16* different codes/users. When the operator is idle:


1		Press and keep pressed S until
2		0 appears on the left side of the display. The segments of the 0 on the left side of the display rotate clockwise.
3		Press the key that you want to memorize twice consecutively.
⚠* When you try to memorize the 17th code (or transmitter) the courtesy light flashes slowly five times to signal that the memory is full.		

Deleting transmitters

1		Press and keep pressed S until
2		0 appears on the left side of the display. The segments of the 0 on the right side of the display rotate clockwise.
3		When the 0 on the left disappears, release the S key: the transmitters have been deleted.

MAINTENANCE

☞ Before any maintenance jobs, cut off the mains power, to prevent possible hazards from unwanted movements by the operator.
Lubricate the rotation points using grease whenever squeaks or vibrations appear.

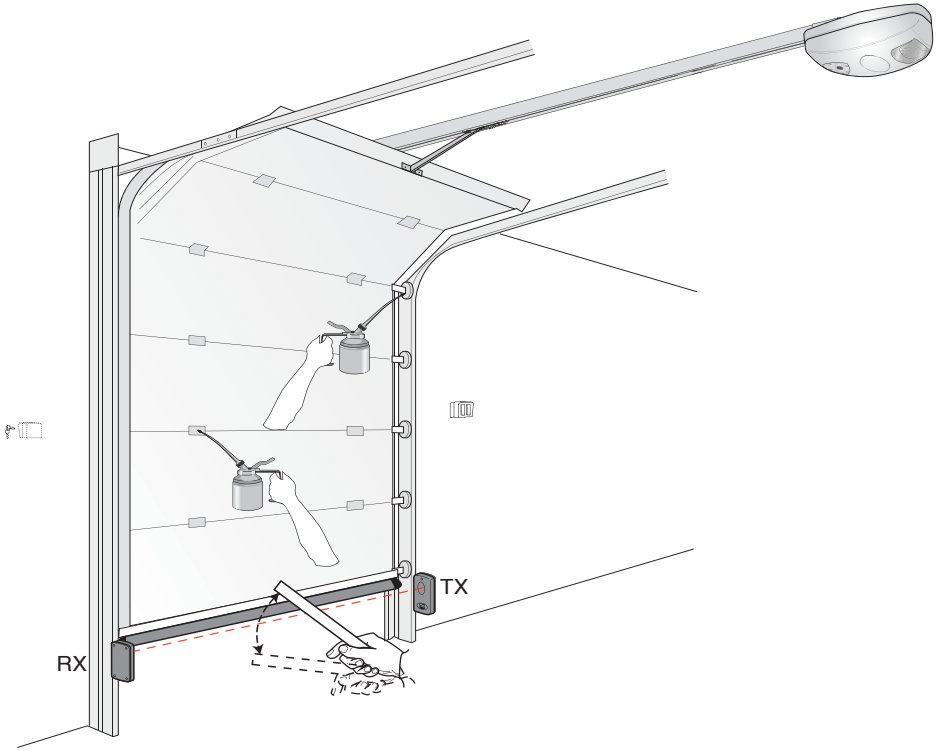

Periodic maintenance

Periodic maintenance log to be filled in by users every six months.

Date	Notes	Signature

Extraordinary maintenance

⚠ The following table is for logging any extraordinary maintenance jobs, repairs and improvements performed by specialized contractors.

⚠ Any extraordinary maintenance jobs must be done only by specialized technicians.

Extraordinary maintenance log

Fitter's stamp	**Name of operator**
	Job performed on (date)
	Technician's signature
	Requester's signature
Job performed _____	
_____	
_____	

Fitter's stamp	**Name of operator**
	Job performed on (date)
	Technician's signature
	Requester's signature
Job performed _____	
_____	
_____	

TROUBLESHOOTING

Malfunctions	What to do
The operator neither opens nor closes	1-2-4-14
The operator opens but does not close	3-6-12
The operator closes but does not open	12
The operator does not perform the automatic closing	5-6
The transmitter does not work	7
The operator is too powerful	8
The operator is too weak	8-9-12-13
The operator inverts the travel direction	8-9-12-13
Only one transmitter works	10
The photocells do not work	3-11
The POWER on signal LED is off	1-2
The operator inverts the travel direction at the limit switch	6-9-12
The operator starts too slowly	9-12-13

1 Check the power supply and line fuses
2 The N.O. control contact (2-7) is open
3 The N.C. safety contact (2-C1) is open
4 The N.C. safety contacts are open
5 Check in menu 7 that a time is set
6 Check the proper direction of the door travel
7 Memorize the radio code again
8 Adjust the sensitivity in menu 4
9 Eliminate all mechanical friction
10 Enter (or duplicate) the same code in all the transmitters
11 Check operation of the photocells
12 Check door balancing
13 Check the belt/chain tautness
14 Encoder malfunction: cut off and power up again the control board

DISMANTLING AND DISPOSAL

☞ CAME S.p.A. applies a certified Environmental Management System at its premises, which is compliant with the UNI EN ISO 14001 standard to ensure the environment is safeguarded. Please continue safeguarding the environment. At CAME we consider it one of the fundamentals of our operating and market strategies. Simply follow these brief disposal guidelines:

⚽ DISPOSING OF THE PACKAGING

The packaging materials (cardboard, plastic, and so on) should be disposed of as solid urban waste, and simply separated from other waste for recycling. Always make sure you comply with local laws before dismantling and disposing of the product.

DISPOSE OF PROPERLY

⚽ DISMANTLING AND DISPOSAL

Our products are made of various materials. Most of these (aluminum, plastic, iron, electrical cables) is classified as solid household waste. They can be recycled by separating them before dumping at authorized city plants. Whereas other components (control boards, batteries, transmitters, and so on) may contain hazardous pollutants. These must therefore be disposed of by authorized, certified professional services. Before disposing, it is always advisable to check with the specific laws that apply in your area.

DISPOSE OF PROPERLY

DECLARATION OF CONFORMITY

CE **Declaration -** Came S.p.A. declares that this product conforms to the essential, pertinent requirements provided by directives 2006/42/EC and 2006/95/EC. An original copy is available on request.

English *- Manual* ***FA00047-EN*** *v.* ***1*** *- 05/2015 -* *© Came S.p.A. The contents of this manual may be changed at any time without prior notice.*

CAME
safety&comfort

CAME bpt URBACO
parkare

Came S.p.A.

Via Martiri Della Libertà, 15
31030 **Dosson di Casier**
Treviso - Italy
(+39) 0422 4940
(+39) 0422 4941

Via Cornia, 1/b - 1/c
33079 **Sesto al Reghena**
Pordenone - Italy
(+39) 0434 698111
(+39) 0434 698434

www. came.com