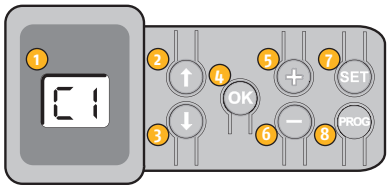
Dexxo Pro

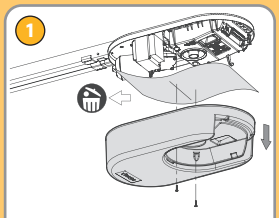
Commissioning Instructions

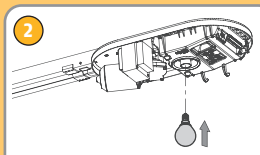
Control panel overview

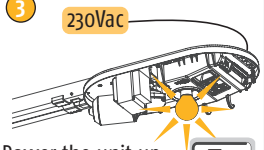


1. C1 – LCD display - provides visual feedback on all programming and operating
2. Button to move up through the parameter values
3. Button to move down through the parameter values
4. OK – Button use to start the self-learn phase and to confirm parameter selection and value
5. \+ – Button use to modify a parameter value and operate the rail drive during set-up
6. – – Button use to modify a parameter value and operate the rail drive during set-up
7. SET – Button used for various programming functions and to reset the system
8. PROG – Button used when programming controls and to delete all controls stored in the memory

Connecting power to the Dexxo Pro for the first time

1. 
Unscrew the main cover and remove the protective sheet.

2. 
Fit the screw-in light bulb.

3. 

Power the unit up. The light will flash 3 times and the LCD screen will display S1.

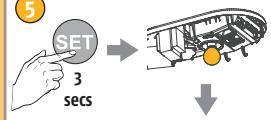
4. 

S1 = Up & Over or Sectional door

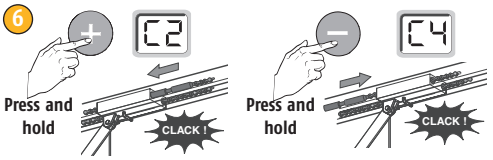
S0 = Swing door

By default, the unit is set for Up & Over or Sectional doors. Press the + or – buttons to adjust the setting for Swing doors, otherwise continue to step 5.

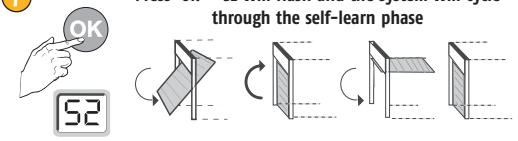
Preparing and setting the self-learn phase

5. 

Press the 'SET' button 3 secs. The light will come on and the LCD screen will display S2.

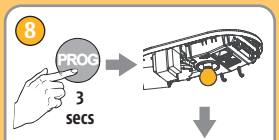
6. 

To engage the carriage, operate the drive until the chain/belt runner links with the carriage. Press and hold the '+' button to move in the close direction and '–' in the open direction.

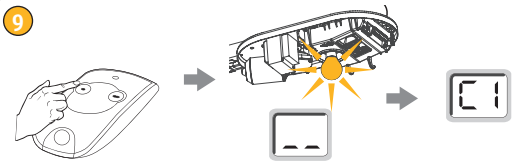
7. 

Once the carriage has been engaged, press the 'OK' button to initiate the self-learn phase. Once the self-learn process is completed, C1 will be displayed on the LCD screen.

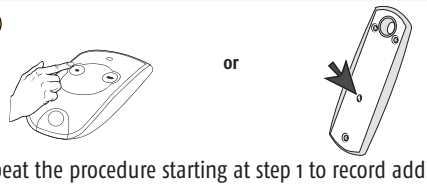
Programming the remote controls

8. 

Press the 'PROG' button 3 secs. The light will come on and the LCD screen will display Fo.

9. 

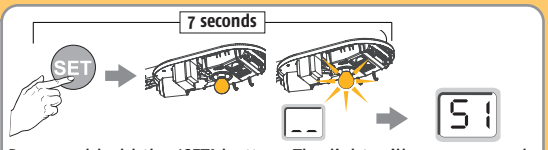
Press the desired control button on the remote control. The LCD screen will display '--' and the light will flash for 5 seconds. LCD screen = C1 - The control is now recorded.

10. 

Repeat the procedure starting at step 1 to record additional controls. The radio wall switch and digipad are recorded in the same way. For Telis type controls, press the program button instead of the control button.

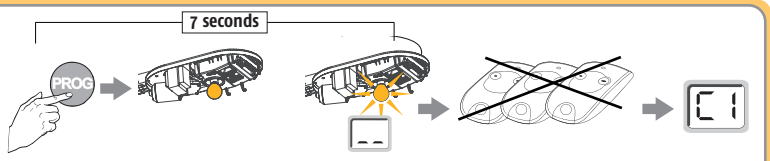
Memory deletion

Self-learn setting



Press and hold the 'SET' button. The light will come on and then begin to flash after approximately 7 seconds (the light will flash for 7 seconds) and the LCD screen will display '--'. The self-learn memory has been deleted.

Controls



Press and hold the 'PROG' button. The light will come on and then begin to flash after approximately 7 seconds (the light will flash for 5 seconds) and the LCD screen will display '--'. All controls have been deleted from the memory.


Obstacle detection

Opening cycle



If an obstacle is detected during the open cycle, the door will stop

Closing cycle



If an obstacle is detected during the close cycle, the door will stop and return



DexxoPro

Commissioning procedure

Control programming

Parameter setting

somfy

HOME MOTION BY somfy

Parameter	Description	Value	Comments
P0	Operating mode	00: Sequential 01: Automatic closure	Photocells must be installed if the automatic closure mode is selected (P2 is set to 1 or 2). When the automatic closure mode is selected, the door will close after the preset time delay defined by 'To'.
P1	Warning light	00: No advanced warning 01: 2sec. advance warning	A warning light is recommended if the garage door opens onto an area with public access - set P1 to 1 (2 seconds advance warning).
P2	Safety device input	00: No safety device 01: Safety device with self test 02: Safety device without self test	If a safety device is connected (photocell): Select value 1 if the safety device has a self test function. Select value 2 if the safety device does not have a self test function.
P3	Obstacle detection sensitivity	00: Low sensitivity 01: Low sensitivity with sensor bar 02: Standard sensitivity 03: High sensitivity	If the value of this parameter is changed to decrease the sensitivity (value 0 or 1), a force measurement test must be performed to ensure compliance.
P4	Intermediate position (IP) (validate IP option)	00: IP not valid 01: IP valid	If an intermediate position is commissioned: A short press on the control button will open the door to the IP position. A long press on the control button will open the door.
P5	Closing speed	00: Fast 01: Standard 02: Slow	If the value of this parameter is changed from the standard speed, a force measurement test must be performed to ensure compliance.
P6	Intermediate position (programming the position)	See program procedure below	A short press (<1s) on the control button will operate the door to the IP, a long press (>1s) will open and close the door.
P7	Soft stop closure distance	00: Standard 01: Short soft stop 02: Long soft stop	Standard setting (P7=0) will result in no soft stop. Short setting (P7=1) will result in a soft stop 20cm before closure. Long setting (P7=2) will result in a soft stop 50cm before closure.
A0	Safety device command during the open cycle	0: No effect 1: Movement rejected	If value 1 is selected, the door will not open if the safety device senses an obstacle when the control is operated.
A1	Safety device command during the close cycle	01: Stop 02: Partially open 03: Fully open	Applicable when the safety device (photocell) senses an obstacle during the close cycle. Value 1 must not be selected if the door is fitted with a safety edge.
A2	Obstacle detection command during the close cycle	02: Stop and reverse 03: Stop and fully open	The door will either stop and reverse or fully open when an obstacle is detected during the close cycle.
to	Automatic closure time delay (when P0=1)	0 to 12 (each unit is 10 secs.) e.g. set 6 for 60 seconds.	Photobeam safety cells are recommended if the automatic function is activated.
t1	Lighting time delay	0 to 60 (each unit is 10 secs.) e.g. set 6 for 60 seconds.	The thermal cut-out protection system may engage if the time delay for the lighting system is set too high.

Parameter programming
Changing P7 value from 01 to 02

The following example illustrates the stages involved in changing a value within a parameter setting:



1. The LCD displays 'C1'
2. Press the 'SET' button - P0 is displayed.
3. Press the '↑' button until P7 is displayed.
4. Press 'OK' - the current value is displayed.
5. Press '+' until the desired value is displayed.
6. Confirm the new value by pressing 'OK'.
7. Press the 'SET' button to return to C1.

Intermediate position
Setting an intermediate position

The following example illustrates the stages involved when setting an intermediate position:



1. The LCD displays 'C1'
2. Press the 'SET' button - P0 is displayed.
3. Press the '↑' button until P6 is displayed.
4. Press 'OK' - P6 will flash - proceed with the IP setup.
5. Use the '+' and '-' buttons to adjust the garage door to the desired IP position.
6. Confirm the IP position by pressing 'OK'.
7. Press the 'SET' button to return to C1.

Somfy Ltd - Moorfield Road - Yeadon - Leeds - West Yorkshire - LS19 7BN
Tel. 0113 391 3030 - Fax. 0113 391 3010 - www.somfy.co.uk