





## Sure(heck

**Rig tension** 

yachts rig works best when the mast is set up correctly and the shrouds precisely tensioned to support it. A poorly-sup-ported mast can dramatically affect the vachts performance

- Sails cannot deliver optimum power
- Wrongly-tensioned rigging may cause premature wire failure

  3 Mast may collapse


SureCheck is an essential part of any sailors kit, a meter which allows accurate calibration of your rig tension. Once you have the correct settings, check them regularly (especially after heavy weathe sailing) and adjust when

Easy to use Attach to each stay in turn. Note readings on the scale (0-10). Adjust all stay to corresponding SureCheck figure. Look up wire tension (%) in the diagram. Calculate the tension (Kg/lb) by affix the %-reading to the break-down tension.

Break down force	kg (100%) lb	1 200				2.000 4.400	2.800 6.200	3.500 7.700	`	5.900 13.000	7.100 15.650	7
Break	Wire Ø	2 5 mm	2,7 mm 6	5	4 mm	5 mm	e mm	7 mm	8 mm	9 mm	8 10 12 14 16 18 20 22 24 26 28 30 32 34 36 38 40 % 10 mm	
-	+				-			-		+	40 %	
-	┞	-		_	H			$\dashv$		+	88	-
-	╀	_			L			4		+	36	
ging	4				L			4		4	34	
	$\parallel$				L			4		4	32	
	$\mathbb{H}$	_			L			4		$\dashv$	30	
Masthead; Std settings - Racing Fractional: Std settings - Racing	N	_		_	H			-		+	28	
- sb	Н	$\setminus$		_	L			_		4	26	
ettin	Ľ	H	$\overline{}$	Ψ	L			_		4	24	
std s	X	1		_	K	_				4	22	
<u>-8</u> -	L	7	-	_	-	7	_	_		4	20	
ţi.	L	_	Ĺ	<u>\</u>	Ļ					4	18	
Frac		4	1		L	/	L			4	16	
ng.		4	١	-	F	-	Ė	_		4	4	
Zaci	$\geq$	9		1	L			4		4	12	
<u>s</u> -	L	4	`	_	K		L	4	_	4	10	
ting			4		ľ	$\overline{}$		4		4	ω	
d se			:		Ŀ	_	7			╛	ω.	
š	L	3	1		Ŀ		L`	7	_		_	
ad:		-	1		ŀ					٦	7	
sthe		7	1		İ					1	7	
Σ,	50	0	0 1	- (	01	ç,	۲ ر ا	20	1	7	0	

SureCheck scale figure

meter

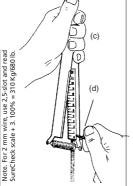

#### To check the tension

- ① Turn the grooved knob (a) unti the correct wire diameter appers in the win dow (b).
- ② Place the grooved knob against the wires right-hand surface and pin (c) against the wires left-hand surface.
- ③ Pull on ring (e) until pin (d) can be hooked over the wire.
- © Squeeze the two arms gently together and release; then read the scale against the last red dot exposed by the LH arm. Tensile readings will vary depending on age and make of wire. Allow a tolerance of +110%

Allow a tolerance of ±10% Rigging wire should not be tensioned to more than 20% of wires breaking strength when at rest or 25% when the yacht is heeled at 30°

### Recommended

Check your rig tension at least three times during the season, especially after sailing in heavy weather. Always lock rigging screws after adjustment. Split pins should be replaced regularly (or use SureClips)



# Sure(heck



### Drahtseil Spannung Messer Vajerspänningsmätare

## Um die Spannung zu prüfen

- Drehen Sie den ge-furchten Knopf (a), bis der korrekte Drahtseildurchmesser erscheint
- Legen Sie den gefurchten Knopf (a) nun gegen die von Ihnen aus rech-te Drahtseilseite und den Anschlagstift (c) gegen die von Ihnen aus linke Seite des Drahtseiles.
- Ziehen Sie den Ring (e) soweit, bis der untere Stift (d) über das Drahtseil gehakt werden
- kann. Drücken Sie jetzt die beiden Arme leicht zusammen und lassen Sie dann wieder los; nun le-sen Sie den Wert auf der Skala, der neben den letzten sichtbaren roten Punkt steht.

#### Vorgeschlagene Einstellwerte

(SureCheck Skala Topp-Rigg 5,5 - 8 7/8-Rigg 6,5 - 8,5

Die Werte können aufgrund der Drahtseilkonstruktion und des Alters variieren. Kalkulieren Sie eine Relativ Toleranz von +/- 2% ein und Umbedingt +/- 10%.

Das im Rigg verwendete Drahtseil sollte auf keinen Fall auf über 20% der Drahtseilbruchlast gespannt werden, wenn das Boot nicht eingesetzt wird und nicht über 25%, wenn das Boot mit 30%iger Krängung gefahren

## Empfehlungen

Prüfen Sie Wantenspannung minde stens 3x pro Saison, insbesondere nach Fahrten in schwerem Wetter. Vergessen Sie nicht, die Wantenspanner nach dem Ein-stellen wieder zu sichern! Splinte sollten regelmäßig ausgetauscht werden, oder verwenden Sie einfach

SureClip Wanten-spanner-

## Att mäta spänningen i riggvajer

- Ställ indet vita hjulet till vajergrovlek (a), och lägg mätaren efter den
- röda markeringen. Montera mätaren på vajern genom att hålla om mätare ooch vajer (c) och samtidigt dra i nyckelringen (d) så att mätaren hakas på.
- Innan avläsning, kläm ihop skänklarna med lätt hand en aning mitt för skalan (förbättrar noggrannheten avläsningen ).
- Nu kan mätaren avläsas vid justering med vantskruvar etc. Notera inställt värde (för användning nästa år). Använd båda händerna vid avtagning mätaren.

## Förslag på inställnings-värden

(SureCheck skalutslag) Masthead-rigg 5,5 - 8

Vajermätaren är kalibrerad för 19-trådig riggvajer. Vid relativ mätning är noggrannheten (samma instruments repetition) +/-2% och översatt till absoluta tal i kg +/- 10%.

Riggvajern bör inte vara annggyagini but inte vara ari-satt mer än till ca 20% då båten inte används, ca 25% vid segling med en krängning av ca 30° Vajerbelastning kan erhållas ur diagrammet på omstående sida i procent av brottgräns för resp.

#### Rekommendation

Kentrollera hur riggen är an-satt minst tre gånger per säsong, och speciellt efter segling i hårt väder. Lås alltid vantskruven för

att förhindra att dessa gängar upp sig. **SureClip** vantskruvslås kan användas med fördel i stället för saxpinnar.

Mitron Marinteknik