



MINIMUM EQUIPMENT LIST & MINIMUM EQUIPMENT LIST PROCEDURES (MELP)

DHC-8-402 (Q400) DOC SJ/MEL/02

ISSUE III, Rev - 06
May - 2024



Based on DHC Q400 MMEL PSM1-84-16A (DOT) Rev - 09 Dated: 01-06-2019 And,
DHC MELP PSM1-84-16 (DOT) Rev - 08 Dated 22-03-2017

SpiceJet Ltd., 319, Udyog Vihar, Phase IV, Gurugram,
Haryana, India – 122016

This Document is produced under the authority of PHCA

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49



DHC-8-402

MINIMUM EQUIPMENT LIST

**INTENTIONALLY
LEFT
BLANK**

APPROVED BY DAVID SIGNATURE VALID –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49



DHC-8-402

MINIMUM EQUIPMENT LIST

LIST OF COPY HOLDERS

LIST OF COPYHOLDERS

CONTROL COPY #

1
2
3-XXX

REGISTERED HOLDER

SpiceJet PHCA – Master Copy
DDG (NR) Office, New Delhi
A current copy (#3 followed by A/C Reg. Marking)
issued by Technical Library will be kept on board
for all aircraft.

Note: Approved copy will be placed in Network
Tech Library for all concerned

ISS III R00

APPROVED BY DAW Signature valid –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LOC 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LIST OF COPY HOLDERS

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DA ~~Signature valid~~ –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LOC 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIST OF EFFECTIVE PAGES**

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
LOC	LOC	LOC 1 – LOC 2	ISS III REV 00			21-30-3. 4	ISS III REV 00
					21-30-4	21-30-4. 1	ISS III REV 00
L.E.P.	LEP	LEP 01 - LEP 10	ISS III REV 06			21-30-4. 2	ISS III REV 00
					21-30-5	21-30-5. 1	ISS III REV 00
INDEX	INDEX	IND 01 - IND 10	ISS III REV 06			21-30-5. 2	ISS III REV 00
						21-30-5. 3	ISS III REV 00
REV. HIGH.	RVH	RVH 01 - RVH 02	ISS III REV 06			21-30-5. 4	ISS III REV 00
						21-30-5. 5	ISS III REV 00
R.O.R.	ROR	ROR 01 - ROR 02	ISS III REV 06			21-30-5. 6	ISS III REV 00
					21-30-6	21-30-6. 1	ISS III REV 00
T.O.C.	TOC	TOC 01 - TOC 02	ISS III REV 00			21-30-6. 2	ISS III REV 00
						21-30-6. 3	ISS III REV 00
Defn. & Ab	DA	DA 01- DA 04	ISS III REV 05			21-30-6. 4	ISS III REV 00
					21-50-1	21-50-1. 1	ISS III REV 00
PREAMBLE	PR	PR 01 - PR 04	ISS III REV 00			21-50-1. 2	ISS III REV 00
					21-50-2	21-50-2. 1	ISS III REV 00
ATA 21	21-20-1	21-20-1. 1	ISS III REV 00			21-50-2. 2	ISS III REV 00
		21-20-1. 2	ISS III REV 00		21-50-3	21-50-3. 1	ISS III REV 00
	21-20-2	21-20-2. 1	ISS III REV 00			21-50-3. 2	ISS III REV 00
		21-20-2. 2	ISS III REV 00		21-60-1	21-60-1. 1	ISS III REV 00
	21-20-3	21-20-3. 1	ISS III REV 00			21-60-1. 2	ISS III REV 00
		21-20-3. 2	ISS III REV 00			21-60-1. 3	ISS III REV 00
		21-20-3. 3	ISS III REV 00			21-60-1. 4	ISS III REV 00
		21-20-3. 4	ISS III REV 00			21-60-1. 5	ISS III REV 00
	21-20-4	21-20-4. 1	ISS III REV 00			21-60-1. 6	ISS III REV 00
		21-20-4. 2	ISS III REV 00		21-60-2	21-60-2. 1	ISS III REV 00
	21-20-5	21-20-5. 1	ISS III REV 00			21-60-2. 2	ISS III REV 00
		21-20-5. 2	ISS III REV 00			21-60-2. 3	ISS III REV 00
	21-20-6	21-20-6. 1	ISS III REV 00			21-60-2. 4	ISS III REV 00
		21-20-6. 2	ISS III REV 00		21-60-3	21-60-3. 1	ISS III REV 00
	21-20-7	21-20-7. 1	ISS III REV 00			21-60-3. 2	ISS III REV 00
		21-20-7. 2	ISS III REV 00			21-60-3. 3	ISS III REV 00
	21-20-8	21-20-8. 1	ISS III REV 00			21-60-3. 4	ISS III REV 00
		21-20-8. 2	ISS III REV 00			21-60-3. 5	ISS III REV 00
		21-20-8. 3	ISS III REV 00			21-60-3. 6	ISS III REV 00
		21-20-8. 4	ISS III REV 00			21-60-3. 7	ISS III REV 00
	21-30-1	21-30-1. 1	ISS III REV 00			21-60-3. 8	ISS III REV 00
		21-30-1. 2	ISS III REV 00		21-60-4	21-60-4. 1	ISS III REV 00
	21-30-2	21-30-2. 1	ISS III REV 00		21-60-4	21-60-4. 2	ISS III REV 00
		21-30-2. 2	ISS III REV 00				
		21-30-2. 3	ISS III REV 00	ATA 22	22-10-1	22-10-1. 1	ISS III REV 05
		21-30-2. 4	ISS III REV 00			22-10-1. 2	ISS III REV 05
	21-30-3	21-30-3. 1	ISS III REV 00		22-10-2	22-10-2. 1	ISS III REV 05
		21-30-3. 2	ISS III REV 00			22-10-2. 2	ISS III REV 00
		21-30-3. 3	ISS III REV 00		22-10-3	22-10-3. 1	ISS III REV 00

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :
	Signature valid

ISS III R06

APPROVED BY DAWA KUNAL BAJPAI –
Director
(Airworthiness)Date: 07-Jun-
2024 13:52:49

LEP 1

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIST OF EFFECTIVE PAGES**

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
		22-10-3. 2	ISS III REV 00			23-50-1. 3	ISS III REV 00
	22-10-4	22-10-4. 1	ISS III REV 00			23-50-1. 4	ISS III REV 00
		22-10-4. 2	ISS III REV 00		23-50-2	23-50-2. 1	ISS III REV 00
	22-10-5	22-10-5. 1	ISS III REV 00			23-50-2. 2	ISS III REV 00
		22-10-5. 2	ISS III REV 00		23-50-3	23-50-3. 1	ISS III REV 00
	22-10-6	22-10-6. 1	ISS III REV 00			23-50-3. 2	ISS III REV 00
		22-10-6. 2	ISS III REV 00		23-50-4	23-50-4. 1	ISS III REV 00
	22-10-7	22-10-7. 1	ISS III REV 00			23-50-4. 2	ISS III REV 00
		22-10-7. 2	ISS III REV 00		23-50-5	23-50-5. 1	ISS III REV 00
						23-50-5. 2	ISS III REV 00
ATA 23	23-10-1	23-10-1. 1	ISS III REV 00		23-50-6	23-50-6. 1	ISS III REV 00
		23-10-1. 2	ISS III REV 00			23-50-6. 2	ISS III REV 00
	23-10-2	23-10-2. 1	ISS III REV 00		23-50-7	23-50-7. 1	ISS III REV 00
		23-10-2. 2	ISS III REV 00			23-50-7. 2	ISS III REV 00
	23-20-1	23-20-1. 1	ISS III REV 00		23-60-1	23-60-1. 1	ISS III REV 00
		23-20-1. 2	ISS III REV 00			23-60-1. 2	ISS III REV 00
	23-20-2	23-20-2. 1	ISS III REV 00		23-70-1	23-70-1. 1	ISS III REV 00
		23-20-2. 2	ISS III REV 00			23-70-1. 2	ISS III REV 00
	23-30-1	23-30-1. 1	ISS III REV 00		23-80-1	23-80-1. 1	ISS III REV 00
		23-30-1. 2	ISS III REV 00			23-80-1. 2	ISS III REV 00
		23-30-1. 3	ISS III REV 00				
		23-30-1. 4	ISS III REV 00	ATA 24	24-20-1	24-20-1.1	ISS III REV 00
		23-30-1. 5	ISS III REV 00			24-20-1.2	ISS III REV 00
		23-30-1. 6	ISS III REV 00		24-20-2	24-20-2.1	ISS III REV 00
		23-30-1. 7	ISS III REV 00			24-20-2.2	ISS III REV 00
		23-30-1. 8	ISS III REV 00		24-20-3	24-20-3.1	ISS III REV 00
		23-30-1. 9	ISS III REV 00			24-20-3.2	ISS III REV 00
		23-30-1. 10	ISS III REV 00		24-30-1	24-30-1.1	ISS III REV 00
	23-30-2	23-30-2. 1	ISS III REV 00			24-30-1.2	ISS III REV 00
		23-30-2. 2	ISS III REV 00		24-30-2	24-30-2.1	ISS III REV 00
	23-30-3	23-30-3. 1	ISS III REV 00			24-30-2.2	ISS III REV 00
		23-30-3. 2	ISS III REV 00		24-30-3	24-30-3.1	ISS III REV 00
		23-30-3. 3	ISS III REV 00			24-30-3.2	ISS III REV 00
		23-30-3. 4	ISS III REV 00		24-30-4	24-30-4.1	ISS III REV 00
		23-30-3. 5	ISS III REV 00			24-30-4.2	ISS III REV 00
		23-30-3. 6	ISS III REV 00		24-30-5	24-30-5.1	ISS III REV 00
		23-30-3. 7	ISS III REV 00			24-30-5.2	ISS III REV 00
		23-30-3. 8	ISS III REV 00		24-30-6	24-30-6.1	ISS III REV 00
	23-30-4	23-30-4. 1	ISS III REV 00			24-30-6.2	ISS III REV 00
		23-30-4. 2	ISS III REV 00		24-40-1	24-40-1.1	ISS III REV 00
	23-40-1	23-40-1. 1	ISS III REV 00			24-40-1.2	ISS III REV 00
		23-40-1. 2	ISS III REV 00		24-40-2	24-40-2.1	ISS III REV 00
	23-50-1	23-50-1. 1	ISS III REV 00			24-40-2.2	ISS III REV 00
		23-50-1. 2	ISS III REV 00				

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :
	Signature valid

ISS III R06

APPROVED BY DAW Kunal Bajaj -

Signed by: Manoj
Kunal Bajaj
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LEP 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIST OF EFFECTIVE PAGES**

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
ATA 25	25-10-1	25-10-1.1	ISS III REV 00		25-20-10	25-20-10.1	ISS III REV 00
		25-10-1.2	ISS III REV 00			25-20-10.2	ISS III REV 00
	25-10-2	25-10-2.1	ISS III REV 00			25-20-10.3	ISS III REV 00
		25-10-2.2	ISS III REV 00			25-20-10.4	ISS III REV 00
		25-10-2.3	ISS III REV 00		25-30-1	25-30-1.1	ISS III REV 00
		25-10-2.4	ISS III REV 00			25-30-1.2	ISS III REV 00
		25-10-2.5	ISS III REV 00		25-40-1	25-40-1.1	ISS III REV 00
		25-10-2.6	ISS III REV 00			25-40-1.2	ISS III REV 00
	25-10-3	25-10-3.1	ISS III REV 00		25-50-1	25-50-1.1	ISS III REV 00
		25-10-3.2	ISS III REV 00			25-50-1.2	ISS III REV 00
	25-20-1	25-20-1.1	ISS III REV 00		25-50-2	25-50-2.1	ISS III REV 00
		25-20-1.2	ISS III REV 00			25-50-2.2	ISS III REV 00
		25-20-1.3	ISS III REV 00			25-50-2.3	ISS III REV 00
		25-20-1.4	ISS III REV 00			25-50-2.4	ISS III REV 00
	25-20-2	25-20-2.1	ISS III REV 00		25-50-3	25-50-3.1	ISS III REV 00
		25-20-2.2	ISS III REV 00			25-50-3.2	ISS III REV 00
		25-20-2.3	ISS III REV 00		25-50-4	25-50-4.1	ISS III REV 00
		25-20-2.4	ISS III REV 00			25-50-4.2	ISS III REV 00
		25-20-2.5	ISS III REV 00		25-60-1	25-60-1.1	ISS III REV 00
		25-20-2.6	ISS III REV 00			25-60-1.2	ISS III REV 00
		25-20-2.7	ISS III REV 00		25-60-2	25-60-2.1	ISS III REV 00
		25-20-2.8	ISS III REV 00			25-60-2.2	ISS III REV 00
	25-20-3	25-20-3.1	ISS III REV 00		25-60-3	25-60-3.1	ISS III REV 00
		25-20-3.2	ISS III REV 00			25-60-3.2	ISS III REV 00
	25-20-4	25-20-4.1	ISS III REV 00		25-60-4	25-60-4.1	ISS III REV 00
		25-20-4.2	ISS III REV 00			25-60-4.2	ISS III REV 00
		25-20-4.3	ISS III REV 00		25-60-6	25-60-6.1	ISS III REV 00
		25-20-4.4	ISS III REV 00			25-60-6.2	ISS III REV 00
	25-20-5	25-20-5.1	ISS III REV 00		25-60-7	25-60-7.1	ISS III REV 00
		25-20-5.2	ISS III REV 00			25-60-7.2	ISS III REV 00
		25-20-5.3	ISS III REV 00		25-60-8	25-60-8.1	ISS III REV 00
		25-20-5.4	ISS III REV 00			25-60-8.2	ISS III REV 00
		25-20-5.5	ISS III REV 00		25-60-9	25-60-9.1	ISS III REV 00
		25-20-5.6	ISS III REV 00			25-60-9.2	ISS III REV 00
		25-20-5.7	ISS III REV 00		25-60-10	25-60-10.1	ISS III REV 00
		25-20-5.8	ISS III REV 00			25-60-10.2	ISS III REV 00
	25-20-6	25-20-6.1	ISS III REV 00		25-62-1	25-62-1.1	ISS III REV 00
		25-20-6.2	ISS III REV 00			25-62-1.2	ISS III REV 00
	25-20-7	25-20-7.1	ISS III REV 00			25-62-1.3	ISS III REV 00
		25-20-7.2	ISS III REV 00			25-62-1.4	ISS III REV 00
	25-20-8	25-20-8.1	ISS III REV 00				
		25-20-8.2	ISS III REV 00	ATA 26	26-10-1	26-10-1.1	ISS III REV 00
	25-20-9	25-20-9.1	ISS III REV 00			26-10-1.2	ISS III REV 00
		25-20-9.2	ISS III REV 00			26-10-1.3	ISS III REV 00

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :
	Signature valid

ISS III R06

APPROVED BY DAW KUNAL BAPAT –

Signed by: Manoj
Kunal Bapat
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LEP 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIST OF EFFECTIVE PAGES***

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
		26-10-1.4	ISS III REV 00			27-30-3.3	ISS III REV 00
		26-10-1.5	ISS III REV 00			27-30-3.4	ISS III REV 00
		26-10-1.6	ISS III REV 00			27-30-3.5	ISS III REV 00
		26-10-1.7	ISS III REV 00			27-30-3.6	ISS III REV 00
		26-10-1.8	ISS III REV 00			27-30-3.7	ISS III REV 00
	26-10-2	26-10-2.1	ISS III REV 00			27-30-3.8	ISS III REV 00
		26-10-2.2	ISS III REV 00			27-30-3.9	ISS III REV 00
		26-10-2.3	ISS III REV 00			27-30-3.10	ISS III REV 00
		26-10-2.4	ISS III REV 00		27-30-4	27-30-4.1	ISS III REV 00
	26-10-3	26-10-3.1	ISS III REV 00			27-30-4.2	ISS III REV 00
		26-10-3.2	ISS III REV 00		27-30-5	27-30-5.1	ISS III REV 00
	26-10-4	26-10-4.1	ISS III REV 00			27-30-5.2	ISS III REV 00
		26-10-4.2	ISS III REV 00		27-60-1	27-60-1.1	ISS III REV 00
	26-20-1	26-20-1.1	ISS III REV 00			27-60-1.2	ISS III REV 00
		26-20-1.2	ISS III REV 00			27-60-1.3	ISS III REV 00
	26-20-2	26-20-2.1	ISS III REV 00			27-60-1.4	ISS III REV 00
		26-20-2.2	ISS III REV 00		27-60-2	27-60-2.1	ISS III REV 00
		26-20-2.3	ISS III REV 00			27-60-2.2	ISS III REV 00
		26-20-2.4	ISS III REV 00		27-60-3	27-60-3.1	ISS III REV 00
		26-20-2.5	ISS III REV 00			27-60-3.2	ISS III REV 00
		26-20-2.6	ISS III REV 00		27-60-4	27-60-4.1	ISS III REV 00
	26-20-3	26-20-3.1	ISS III REV 00			27-60-4.2	ISS III REV 00
		26-20-3.2	ISS III REV 00				
	26-20-4	26-20-4.1	ISS III REV 00	ATA 28	28-20-1	28-20-1.1	ISS III REV 00
		26-20-4.2	ISS III REV 00			28-20-1.2	ISS III REV 00
		26-20-4.3	ISS III REV 00			28-20-1.3	ISS III REV 00
		26-20-4.4	ISS III REV 00			28-20-1.4	ISS III REV 00
						28-20-1.5	ISS III REV 00
ATA 27	27-10-1	27-10-1.1	ISS III REV 00			28-20-1.6	ISS III REV 00
		27-10-1.2	ISS III REV 00		28-20-2	28-20-2.1	ISS III REV 00
	27-20-1	27-20-1.1	ISS III REV 00			28-20-2.2	ISS III REV 00
		27-20-1.2	ISS III REV 00		28-40-1	28-40-1.1	ISS III REV 00
	27-20-2	27-20-2.1	ISS III REV 00			28-40-1.2	ISS III REV 00
		27-20-2.2	ISS III REV 00		28-40-2	28-40-2.1	ISS III REV 00
	27-20-3	27-20-3.1	ISS III REV 00			28-40-2.2	ISS III REV 00
		27-20-3.2	ISS III REV 00		28-40-3	28-40-3.1	ISS III REV 00
		27-20-3.3	ISS III REV 00			28-40-3.2	ISS III REV 00
		27-20-3.4	ISS III REV 00		28-40-4	28-40-4.1	ISS III REV 00
	27-30-1	27-30-1.1	ISS III REV 00			28-40-4.2	ISS III REV 00
		27-30-1.2	ISS III REV 00		28-40-5	28-40-5.1	ISS III REV 00
	27-30-2	27-30-2.1	ISS III REV 00			28-40-5.2	ISS III REV 00
		27-30-2.2	ISS III REV 00		28-40-6	28-40-6.1	ISS III REV 00
	27-30-3	27-30-3.1	ISS III REV 00			28-40-6.2	ISS III REV 00
		27-30-3.2	ISS III REV 00		28-40-7	28-40-7.1	ISS III REV 00

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :
	Signature valid

ISS III R06**APPROVED BY DAW KUNAL BAPATA –**

Signed by: Manoj
Kunal Bapata
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LEP 4

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIST OF EFFECTIVE PAGES**

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
		28-40-7.2	ISS III REV 00		29-30-12	29-30-12.1	ISS III REV 00
	28-40-8	28-40-8.1	ISS III REV 00			29-30-12.2	ISS III REV 00
		28-40-8.2	ISS III REV 00		29-30-13	29-30-13.1	ISS III REV 00
	28-40-9	28-40-9.1	ISS III REV 00			29-30-13.2	ISS III REV 00
		28-40-9.2	ISS III REV 00				
		28-40-9.3	ISS III REV 00	ATA 30	30-10-1	30-10-1.1	ISS III REV 00
		28-40-9.4	ISS III REV 00			30-10-1.2	ISS III REV 00
	28-40-10	28-40-10.1	ISS III REV 00		30-10-2	30-10-2.1	ISS III REV 00
		28-40-10.2	ISS III REV 00			30-10-2.2	ISS III REV 00
		28-40-10.3	ISS III REV 00			30-10-2.3	ISS III REV 00
		28-40-10.4	ISS III REV 00			30-10-2.4	ISS III REV 00
	28-40-11	28-40-11.1	ISS III REV 00		30-10-3	30-10-3.1	ISS III REV 00
		28-40-11.2	ISS III REV 00			30-10-3.2	ISS III REV 00
						30-10-3.3	ISS III REV 00
ATA 29	29-10-1	29-10-1.1	ISS III REV 00			30-10-3.4	ISS III REV 00
		29-10-1.2	ISS III REV 00		30-10-4	30-10-4.1	ISS III REV 00
	29-10-2	29-10-2.1	ISS III REV 00			30-10-4.2	ISS III REV 00
		29-10-2.2	ISS III REV 00			30-10-4.3	ISS III REV 00
	29-30-1	29-10-1.1	ISS III REV 00			30-10-4.4	ISS III REV 00
		29-10-1.2	ISS III REV 00		30-10-5	30-10-5.1	ISS III REV 00
	29-30-2	29-30-2.1	ISS III REV 00			30-10-5.2	ISS III REV 00
		29-30-2.2	ISS III REV 00		30-10-6	30-10-6.1	ISS III REV 00
	29-30-3	29-30-3.1	ISS III REV 00			30-10-6.2	ISS III REV 00
		29-30-3.2	ISS III REV 00		30-10-7	30-10-7.1	ISS III REV 00
	29-30-4	29-30-4.1	ISS III REV 00			30-10-7.2	ISS III REV 00
		29-30-4.2	ISS III REV 00		30-20-1	30-20-1.1	ISS III REV 00
	29-30-5	29-30-5.1	ISS III REV 00			30-20-1.2	ISS III REV 00
		29-30-5.2	ISS III REV 00		30-20-2	30-20-2.1	ISS III REV 00
	29-30-6	29-30-6.1	ISS III REV 00			30-20-2.2	ISS III REV 00
		29-30-6.2	ISS III REV 00			30-20-2.3	ISS III REV 00
	29-30-7	29-30-7.1	ISS III REV 00			30-20-2.4	ISS III REV 00
		29-30-7.2	ISS III REV 00		30-20-3	30-20-3.1	ISS III REV 00
	29-30-8	29-30-8.1	ISS III REV 00			30-20-3.2	ISS III REV 00
		29-30-8.2	ISS III REV 00		30-20-4	30-20-4.1	ISS III REV 00
		29-30-8.3	ISS III REV 00			30-20-4.2	ISS III REV 00
		29-30-8.4	ISS III REV 00		30-30-1	30-30-1.1	ISS III REV 00
		29-30-8.5	ISS III REV 00			30-30-1.2	ISS III REV 00
		29-30-8.6	ISS III REV 00		30-30-2	30-30-2.1	ISS III REV 00
	29-30-9	29-30-9.1	ISS III REV 00			30-30-2.2	ISS III REV 00
		29-30-9.2	ISS III REV 00		30-40-1	30-40-1.1	ISS III REV 00
	29-30-10	29-30-10.1	ISS III REV 00			30-40-1.2	ISS III REV 00
		29-30-10.2	ISS III REV 00		30-40-2	30-40-2.1	ISS III REV 00
	29-30-11	29-30-11.1	ISS III REV 00			30-40-2.2	ISS III REV 00
		29-30-11.2	ISS III REV 00			30-40-2.3	ISS III REV 00

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :
Signature valid	

ISS III R06**APPROVED BY DAW Kunal Bajaj**

Signed by: Manoj
Kunal Bajaj
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LEP 5

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIST OF EFFECTIVE PAGES**

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
		30-40-2.4	ISS III REV 00		31-60-5	31-60-5.1	ISS III REV 05
	30-60-1	30-60-1.1	ISS III REV 00			31-60-5.2	ISS III REV 00
		30-60-1.2	ISS III REV 00				
	30-60-2	30-60-2.1	ISS III REV 00	ATA 32	32-20-1	32-20-1.1	ISS III REV 00
		30-60-2.2	ISS III REV 00			32-20-1.2	ISS III REV 00
	30-80-1	30-80-1.1	ISS III REV 00		32-30-1	32-30-1.1	ISS III REV 02
		30-80-1.2	ISS III REV 00			32-30-1.2	ISS III REV 02
		30-80-1.3	ISS III REV 00		32-40-1	32-40-1.1	ISS III REV 00
		30-80-1.4	ISS III REV 00			32-40-1.2	ISS III REV 00
		30-80-1.5	ISS III REV 00		32-40-2	32-40-2.1	ISS III REV 00
		30-80-1.6	ISS III REV 00			32-40-2.2	ISS III REV 00
	30-80-2	30-80-2.1	ISS III REV 00		32-40-3	32-40-3.1	ISS III REV 00
		30-80-2.2	ISS III REV 00			32-40-3.2	ISS III REV 00
		30-40-2.4	ISS III REV 00		32-50-1	32-50-1.1	ISS III REV 00
	30-60-1	30-60-1.1	ISS III REV 00			32-50-1.2	ISS III REV 00
		30-60-1.2	ISS III REV 00		32-60-1	32-60-1.1	ISS III REV 00
	30-60-2	30-60-2.1	ISS III REV 00			32-60-1.2	ISS III REV 00
		30-60-2.2	ISS III REV 00		32-20-1	32-20-1.1	ISS III REV 00
	30-80-1	30-80-1.1	ISS III REV 00			32-20-1.2	ISS III REV 00
		30-80-1.2	ISS III REV 00	ATA 33	33-10-1	33-10-1.1	ISS III REV 00
		30-80-1.3	ISS III REV 00			33-10-1.2	ISS III REV 00
		30-80-1.4	ISS III REV 00		33-10-2	33-10-2.1	ISS III REV 00
		30-80-1.5	ISS III REV 00			33-10-2.2	ISS III REV 00
		30-80-1.6	ISS III REV 00		33-10-3	33-10-3.1	ISS III REV 00
	30-80-2	30-80-2.1	ISS III REV 00			33-10-3.2	ISS III REV 00
		30-80-2.2	ISS III REV 00		33-20-1	33-20-1.1	ISS III REV 00
	31-20-1	31-20-1.1	ISS III REV 00			33-20-1.2	ISS III REV 00
		31-20-1.2	ISS III REV 00			33-20-1.3	ISS III REV 00
	31-30-1	31-30-1.1	ISS III REV 00			33-20-1.4	ISS III REV 00
		31-30-1.2	ISS III REV 00			33-20-1.5	ISS III REV 00
	31-30-2	31-30-2.1	ISS III REV 00			33-20-1.6	ISS III REV 00
		31-30-2.2	ISS III REV 00			33-20-1.7	ISS III REV 00
	31-51-1	31-51-1.1	ISS III REV 00			33-20-1.8	ISS III REV 00
		31-51-1.2	ISS III REV 00		33-20-2	33-20-2.1	ISS III REV 00
	31-60-1	31-60-1.1	ISS III REV 00			33-20-2.2	ISS III REV 00
		31-60-1.2	ISS III REV 00			33-20-2.3	ISS III REV 00
		31-60-1.3	ISS III REV 00			33-20-2.4	ISS III REV 00
		31-60-1.4	ISS III REV 00			33-20-2.5	ISS III REV 00
	31-60-2	31-60-2.1	ISS III REV 00			33-20-2.6	ISS III REV 00
		31-60-2.2	ISS III REV 00		33-20-3	33-20-3.1	ISS III REV 00
	31-60-3	31-60-3.1	ISS III REV 00			33-20-3.2	ISS III REV 00
		31-60-3.2	ISS III REV 00			33-20-3.3	ISS III REV 00
	31-60-4	31-60-4.1	ISS III REV 00			33-20-3.4	ISS III REV 00
		31-60-4.2	ISS III REV 00		33-20-4	30-20-4.1	ISS III REV 00

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :
	Signature valid

ISS III R06**APPROVED BY DAW Kunal Bhatnagar –**

Signed by: Manoj
Kumar Bhatnagar
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIST OF EFFECTIVE PAGES***

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
		30-20-4.2	ISS III REV 00			33-50-4.4	ISS III REV 00
	33-25-1	33-25-1.1	ISS III REV 00				
		33-25-1.2	ISS III REV 00	ATA 34	34-10-1	34-10-1.1	ISS III REV 00
	33-30-1	33-30-1.1	ISS III REV 00			34-10-1.2	ISS III REV 00
		33-30-1.2	ISS III REV 00		34-20-1	34-20-1.1	ISS III REV 00
	33-30-2	33-30-2.1	ISS III REV 00			34-20-1.2	ISS III REV 00
		33-30-2.2	ISS III REV 00			34-20-1.3	ISS III REV 00
	33-30-3	33-30-3.1	ISS III REV 00			34-20-1.4	ISS III REV 00
		33-30-3.2	ISS III REV 00		34-20-2	34-20-2.1	ISS III REV 00
	33-40-1	33-40-1.1	ISS III REV 00			34-20-2.2	ISS III REV 00
		33-40-1.2	ISS III REV 00		34-20-3	34-20-3.1	ISS III REV 00
	33-40-2	33-40-2.1	ISS III REV 00			34-20-3.2	ISS III REV 00
		33-40-2.2	ISS III REV 00		34-20-4	34-20-4.1	ISS III REV 00
	33-40-3	33-40-3.1	ISS III REV 00			34-20-4.2	ISS III REV 00
		33-40-3.2	ISS III REV 00			34-20-4.3	ISS III REV 00
	33-40-4	33-40-4.1	ISS III REV 00			34-20-4.4	ISS III REV 00
		33-40-4.2	ISS III REV 00		34-20-5	34-20-5.1	ISS III REV 00
	33-40-5	33-40-5.1	ISS III REV 00			34-20-5.2	ISS III REV 00
		33-40-5.2	ISS III REV 00		34-20-6	34-20-6.1	ISS III REV 00
	33-40-6	33-40-6.1	ISS III REV 00			34-20-6.2	ISS III REV 00
		33-40-6.2	ISS III REV 00		34-20-7	34-20-7.1	ISS III REV 00
		33-40-6.3	ISS III REV 00			34-20-7.2	ISS III REV 00
		33-40-6.4	ISS III REV 00		34-30-1	34-30-1.1	ISS III REV 00
	33-40-7	33-40-7.1	ISS III REV 00			34-30-1.2	ISS III REV 00
		33-40-7.2	ISS III REV 00		34-40-1	34-40-1.1	ISS III REV 00
	33-40-8	33-40-8.1	ISS III REV 00			34-40-1.2	ISS III REV 00
		33-40-8.2	ISS III REV 00		34-40-2	34-40-2.1	ISS III REV 00
	33-40-9	33-40-9.1	ISS III REV 00			34-40-2.2	ISS III REV 00
		33-40-9.2	ISS III REV 00			34-40-2.3	ISS III REV 00
		33-40-9.3	ISS III REV 01			34-40-2.4	ISS III REV 00
		33-40-9.4	ISS III REV 00			34-40-2.5	ISS III REV 00
	33-50-1	33-50-1.1	ISS III REV 00			34-40-2.6	ISS III REV 00
		33-50-1.2	ISS III REV 00		34-40-3	34-40-3.1	ISS III REV 05
	33-50-2	33-50-2.1	ISS III REV 00			34-40-3.2	ISS III REV 05
		33-50-2.2	ISS III REV 00		34-40-4	34-40-4.1	ISS III REV 05
		33-50-2.3	ISS III REV 00			34-40-4.2	ISS III REV 00
		33-50-2.4	ISS III REV 00			34-40-4.3	ISS III REV 00
		33-50-2.5	ISS III REV 00			34-40-4.4	ISS III REV 00
		33-50-2.6	ISS III REV 00			34-40-4.5	ISS III REV 00
	33-50-3	33-50-3.1	ISS III REV 00			34-40-4.6	ISS III REV 00
		33-50-3.2	ISS III REV 00			34-40-4.7	ISS III REV 00
	33-50-4	33-50-4.1	ISS III REV 00			34-40-4.8	ISS III REV 00
		33-50-4.2	ISS III REV 00			34-40-4.9	ISS III REV 00
		33-50-4.3	ISS III REV 00			34-40-4.10	ISS III REV 00

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :

Signature valid

ISS III R06**APPROVED BY DAW KUNAL KUMAR**

Signed by: Manoj
Kumar Baidya
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LEP 7

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIST OF EFFECTIVE PAGES**

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
		34-40-4.11	ISS III REV 00			34-60-2.9	ISS III REV 05
		34-40-4.12	ISS III REV 00			34-60-2.10	ISS III REV 05
		34-40-4.13	ISS III REV 00				
		34-40-4.14	ISS III REV 01	ATA 35	35-10-1	35-10-1.1	ISS III REV 00
		34-40-4.15	ISS III REV 00			35-10-1.2	ISS III REV 00
		34-40-4.16	ISS III REV 00			35-10-1.3	ISS III REV 00
		34-40-4.17	ISS III REV 00			35-10-1.4	ISS III REV 00
		34-40-4.18	ISS III REV 00			35-10-1.5	ISS III REV 00
	34-40-5	34-40-5.1	ISS III REV 00			35-10-1.6	ISS III REV 00
		34-40-5.2	ISS III REV 00			35-10-1.7	ISS III REV 00
	34-40-6	34-40-6.1	ISS III REV 05			35-10-1.8	ISS III REV 00
		34-40-6.2	ISS III REV 00			35-10-1.9	ISS III REV 00
		34-40-6.3	ISS III REV 05			35-10-1.10	ISS III REV 00
		34-40-6.4	ISS III REV 00		35-10-2	35-10-2.1	ISS III REV 00
	34-50-1	34-50-1.1	ISS III REV 00			35-10-2.2	ISS III REV 00
		34-50-1.2	ISS III REV 00		35-20-1	35-20-1.1	ISS III REV 00
		34-50-1.3	ISS III REV 00			35-20-1.2	ISS III REV 00
		34-50-1.4	ISS III REV 00		35-30-1	35-30-1.1	ISS III REV 00
		34-50-1.5	ISS III REV 00			35-30-1.2	ISS III REV 00
		34-50-1.6	ISS III REV 00		35-30-2	35-30-2.1	ISS III REV 01
		34-50-1.7	ISS III REV 00			35-30-2.2	ISS III REV 00
		34-50-1.8	ISS III REV 00		35-30-3	35-30-3.1	ISS III REV 01
	34-50-2	34-50-2.1	ISS III REV 00			35-30-3.2	ISS III REV 01
		34-50-2.2	ISS III REV 00			35-30-3.3	ISS III REV 01
	34-50-3	34-50-3.1	ISS III REV 00			35-30-3.4	ISS III REV 00
		34-50-3.2	ISS III REV 00		35-30-4	35-30-4.1	ISS III REV 00
		34-50-3.3	ISS III REV 00			35-30-4.2	ISS III REV 00
		34-50-3.4	ISS III REV 00				
	34-50-4	34-50-4.1	ISS III REV 00	ATA 36	36-10-1	36-10-1.1	ISS III REV 00
		34-50-4.2	ISS III REV 00			36-10-1.2	ISS III REV 00
	34-50-5	34-50-5.1	ISS III REV 00			36-10-1.3	ISS III REV 00
		34-50-5.2	ISS III REV 00			36-10-1.4	ISS III REV 00
	34-50-6	34-50-6.1	ISS III REV 05			36-10-1.5	ISS III REV 00
		34-50-6.2	ISS III REV 05			36-10-1.6	ISS III REV 00
		34-50-6.3	ISS III REV 01			36-10-1.7	ISS III REV 00
		34-50-6.4	ISS III REV 00			36-10-1.8	ISS III REV 00
	34-60-1	34-60-1.1	ISS III REV 05				
		34-60-1.2	ISS III REV 00	ATA 38	38-10-1	38-10-1.1	ISS III REV 00
	34-60-2	34-60-2.1	ISS III REV 05			38-10-1.2	ISS III REV 00
		34-60-2.2	ISS III REV 00		38-10-2	38-10-2.1	ISS III REV 00
		34-60-2.3	ISS III REV 00			38-10-2.2	ISS III REV 00
		34-60-2.4	ISS III REV 05		38-10-3	38-10-3.1	ISS III REV 00
		34-60-2.5	ISS III REV 05			38-10-3.2	ISS III REV 00
		34-60-2.6	ISS III REV 05			38-10-3.3	ISS III REV 00
		34-60-2.7	ISS III REV 05			38-10-3.4	ISS III REV 00
		34-60-2.8	ISS III REV 05			38-10-3.5	ISS III REV 00

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :
	Signature valid

ISS III R06**APPROVED BY DAW Kunal Bajaj**

Signed by: Manoj
Kumar Bajaj
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LEP 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIST OF EFFECTIVE PAGES***

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
		38-10-3.6	ISS III REV 00			52-30-2.3	ISS III REV 00
	38-30-1	38-30-1.1	ISS III REV 00			52-30-2.4	ISS III REV 00
		38-30-1.2	ISS III REV 00		52-50-1	52-50-1.1	ISS III REV 00
						52-50-1.2	ISS III REV 00
ATA 45	45-45-1	45-45-1.1	ISS III REV 00			52-50-1.3	ISS III REV 04
		45-45-1.2	ISS III REV 00			52-50-1.4	ISS III REV 04
						52-50-1.5	ISS III REV 00
ATA 46	46-20-1	46-20-1.1	ISS III REV 00			52-50-1.6	ISS III REV 00
		46-20-1.2	ISS III REV 00			52-50-1.7	ISS III REV 04
						52-50-1.8	ISS III REV 04
ATA 49	49-00-1	49-00-1.1	ISS III REV 00			52-50-1.9	ISS III REV 00
		49-00-1.2	ISS III REV 00			52-50-1.10	ISS III REV 00
	49-50-1	49-50-1.1	ISS III REV 00			52-50-1.11	ISS III REV 04
		49-50-1.2	ISS III REV 00			52-50-1.12	ISS III REV 04
						52-50-1.13	ISS III REV 00
ATA 52	52-10-1	52-10-1.1	ISS III REV 00			52-50-1.14	ISS III REV 00
		52-10-1.2	ISS III REV 00			52-50-1.15	ISS III REV 00
	52-10-2	52-10-2.1	ISS III REV 00			52-50-1.16	ISS III REV 00
		52-10-2.2	ISS III REV 00			52-50-1.17	ISS III REV 00
		52-10-2.3	ISS III REV 00			52-50-1.18	ISS III REV 04
		52-10-2.4	ISS III REV 00			52-50-1.19	ISS III REV 04
	52-10-3	52-10-3.1	ISS III REV 00			52-50-1.20	ISS III REV 00
		52-10-3.2	ISS III REV 00			52-50-1.21	ISS III REV 00
		52-10-3.3	ISS III REV 00			52-50-1.22	ISS III REV 04
		52-10-3.4	ISS III REV 00			52-50-1.23	ISS III REV 04
		52-10-3.5	ISS III REV 00			52-50-1.24	ISS III REV 00
		52-10-3.6	ISS III REV 00			52-50-1.25	ISS III REV 00
		52-10-3.7	ISS III REV 00			52-50-1.26	ISS III REV 04
		52-10-3.8	ISS III REV 00			52-50-1.27	ISS III REV 04
	52-10-4	52-10-4.1	ISS III REV 00			52-50-1.28	ISS III REV 00
		52-10-4.2	ISS III REV 00			52-50-1.29	ISS III REV 00
	52-10-5	52-10-5.1	ISS III REV 00			52-50-1.30	ISS III REV 00
		52-10-5.2	ISS III REV 00			52-50-1.31	ISS III REV 00
		52-10-5.3	ISS III REV 00			52-50-1.32	ISS III REV 00
		52-10-5.4	ISS III REV 00			52-50-1.33	ISS III REV 04
		52-10-5.5	ISS III REV 00			52-50-1.34	ISS III REV 04
		52-10-5.6	ISS III REV 00		52-50-2	52-50-2.1	ISS III REV 00
		52-10-5.7	ISS III REV 00			52-50-2.2	ISS III REV 00
		52-10-5.8	ISS III REV 00		52-50-3	52-50-3.1	ISS III REV 00
	52-10-6	52-10-6.1	ISS III REV 00			52-50-3.2	ISS III REV 00
		52-10-6.2	ISS III REV 00				
	52-30-1	52-30-1.1	ISS III REV 00	ATA 61	61-20-1	61-20-1.1	ISS III REV 00
		52-30-1.2	ISS III REV 00			61-20-1.2	ISS III REV 00
	52-30-2	52-30-2.1	ISS III REV 00		61-20-2	61-20-2.1	ISS III REV 00
		52-30-2.2	ISS III REV 00			61-20-2.2	ISS III REV 00

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :

Signature valid

ISS III R06**APPROVED BY DAW KUNAL BAPATA –**Signed by: Manoj
Kunal Bapata
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

LEP 9

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIST OF EFFECTIVE PAGES**

CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS	CONTENTS	ITEM NO.	PAGE NO.	REVISION STATUS
ATA 71	71-60-1	71-60-1.1	ISS III REV 00				
		71-60-1.2	ISS III REV 00				
		71-60-1.3	ISS III REV 00				
		71-60-1.4	ISS III REV 00				
ATA 73	73-20-1	73-20-1.1	ISS III REV 00				
		73-20-1.2	ISS III REV 00				
	73-20-2	73-20-2.1	ISS III REV 00				
		73-20-2.2	ISS III REV 00				
	73-20-3	73-20-3.1	ISS III REV 00				
		73-20-3.2	ISS III REV 00				
	73-20-4	73-20-4.1	ISS III REV 00				
		73-20-4.2	ISS III REV 00				
	73-30-1	73-30-1.1	ISS III REV 00				
		73-30-1.2	ISS III REV 00				
ATA 76	76-10-1	76-10-1.1	ISS III REV 00				
		76-10-1.2	ISS III REV 00				
		76-10-1.3	ISS III REV 00				
		76-10-1.4	ISS III REV 00				
		76-10-1.5	ISS III REV 00				
		76-10-1.6	ISS III REV 00				
		76-10-1.7	ISS III REV 00				
		76-10-1.8	ISS III REV 00				
ATA 77	77-30-1	77-30-2.1	ISS III REV 00				
		77-30-2.2	ISS III REV 00				
ATA 79	79-30-1	79-30-1.1	ISS III REV 00				
		79-30-1.2	ISS III REV 00				
ANNEXURE A	ANN A	ANN A 1	ISS III REV 00				
		ANN A 2	ISS III REV 00				
ANNEXURE B	ANN B	ANN B 1	ISS III REV 00				
		ANN B 2	ISS III REV 00				
		ANN B 3	ISS III REV 00				
		ANN B 4	ISS III REV 00				
ANNEXURE C	ANN C	ANN C 1	ISS III REV 06				
		ANN C 2	ISS III REV 06				

Submitted By	Approved by DGCA
Name :	Signature :
Signature :	Date :

Signature valid

ISS III R06**APPROVED BY DAW**

Signed by: Manoj Kumar Bajaj
Director
(Airworthiness)
Date: 07-Jun-2024 13:52:49

LEP 10



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

ATA 21	AIR CONDITIONING
21-20-1	Distribution Damper
21-20-2	Recirculation Fan
21-20-3	Flow (Pack) Control and Shutoff Valve
21-20-4	Display Cooling Fans
21-20-5	SIDE WINDOW DEMIST Vent Controls
21-20-6	Low Level Vent Controls
21-20-7	FLT COMPT GASPERS (Small and Large)
21-20-8	Aft Baggage Compartment Vent Valves
21-30-1	CABIN PRESS Warning Light
21-30-2	Cabin ALT Indicator
21-30-3	Cabin DIFF Pressure
21-30-4	Cabin RATE Indicator
21-30-5	Cabin Pressure Control
21-30-6	Aft Valves
21-50-1	Air Cycle Machines (ACM)
21-50-2	Turbine Shut-Off Valves
21-50-3	Pack Bypass Valves
21-60-1	CABIN TEMP CONTROL
21-60-2	DUCT TEMP GAUGE
21-60-3	FLT COMP TEMP
21-60-4	Flight Attendant Control Panel - Cabin Temperature Control and CABIN TEMP indication
ATA 22	AUTOMATIC FLIGHT CONTROL
22-10-1	AIRPLANE DISENG Annunciators (Glareshield)
22-10-2	Autopilot
22-10-3	Tactile Control Steering (TCS) Switches
22-10-4	Flight Guidance Control Panel (FGCP)
22-10-5	Yaw Damper System
22-10-6	A/P DIS Switches
22-10-7	Go-Around (GA) Switches
ATA 23	COMMUNICATIONS
23-10-1	Communication Systems Transmitters and Receivers

ISS III R06

APPROVED BY DAW DELHI, DA -

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

INDEX 1



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

23-10-2	"Flitefone (or equivalent)" System
23-20-1	SELCAL System
23-20-2	Aircraft Communications Addressing and Reporting System (ACARS)
23-30-1	Alerting System (CHIME OR LIGHT)
23-30-2	Pre-Recorded Announcement (Passenger Briefing) System
23-30-3	Passenger Address and Cabin Interphone System (PACIS)
23-30-4	Active Noise and Vibration Suppression System
23-50-1	Boom Microphone Push-To-Talk (PTT) Switches
23-50-2	Headsets
23-50-3	Flight Compartment Speakers
23-50-4	Boom Microphones (incl. Headset mics)
23-50-5	Cockpit Handheld
23-50-6	Cabin Handsets
23-50-7	Observer's Audio Control Panel
23-60-1	Static Dischargers
23-70-1	Cockpit Voice Recorder
23-80-1	ARCDU Radio Tuning Function (Aircraft with at least one FMS installed)
ATA 24 ELECTRICAL POWER	
24-20-1	AC GEN 1 and AC GEN 2 VOLT Indications (on ESID)
24-20-2	AC GEN 1 and AC GEN 2 LOAD Indications (on ESID)
24-20-3	#1 AC GEN and #2 AC GEN Caution Lights
24-30-1	Transformer Rectifier Units (TRUs)
24-30-2	DC Generator Control Unit - Start (or) Termination Function
24-30-3	BATT °C Temperature Indications
24-30-4	APU Generation System
24-30-5	DC GEN LOAD Indications
24-30-6	DC Starter (or) Generation Systems
24-40-1	AC External Power System
24-40-2	DC External Power System
ATA 25 EQUIPMENT & FURNISHINGS	
25-10-1	Forward Observer Seat (including associated equipment)
25-10-2	Pilot's Seat Adjustments
25-10-3	Pilot's Seat Heaters

Signature valid

ISS III R06

APPROVED BY DAW DELHI, DA -
Signed by: Manoj

Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

INDEX 2



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

25-20-1	Passenger Convenience Items and NEF
25-20-2	Overhead, Cabin and Galley Storage Bins (or) Compartments (or) Closets
25-20-3	Megaphones
25-20-4	Flight Attendant Seat
25-20-5	Passenger Seats
25-20-6	“Fasten Seat Belt While Seated” and “No Smoking” Signs or Placards
25-20-7	Lavatory “NO SMOKING” Placard
25-20-8	Flight Attendant’s Seat Heaters
25-20-9	Flight Attendant Reading Light
25-20-10	Passenger Service Unit (PSU)
25-30-1	Galley Waste Compartment
25-40-1	Exterior Lavatory Door Ashtrays
25-50-1	Aft Baggage Divider Nets
25-50-2	Aft Baggage Door Threshold Net
25-50-3	Cargo Compartment Liners and Floor Panels (Applicable to Forward and/or Aft Baggage Compartments)
25-50-4	Aft Baggage Spider Nets (Cargo (or) combi config)
25-60-1	Emergency Locator Transmitter (ELT)
25-60-2	First Aid Kit
25-60-3	Emergency Medical Kit
25-60-4	Flight Attendant Flashlights
25-60-6	Airstair Door Ditching Dam
25-60-7	Flight Deck Sun Visors
25-60-8	Flight Deck Flashlights (or) Flashlight Holders
25-60-9	Life Vests
25-60-10	Automated External Defibrillator (AED) and/or Associated Equipment
25-62-1	Cabin Video Monitoring and Surveillance System
ATA 26 FIRE PROTECTION	
26-10-1	Lavatory Smoke Detection System
26-10-2	Aft Baggage Compartment Smoke Detectors
26-10-3	Forward Baggage Compartment Smoke Detector
26-10-4	APU Fire Detection System
26-20-1	APU Fire Extinguishing
26-20-2	Lavatory Fire Extinguishing System

Signature valid

ISS III R06

APPROVED BY DAW DELHI, DA

Signed by: Munej

Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

INDEX 3



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

26-20-3	Portable Fire Extinguishers
26-20-4	Baggage Compartment Fire Extinguishers
ATA 27	FLIGHT CONTROLS
27-10-1	AIL TRIM Indicator
27-20-1	RUDDER TRIM Indicator
27-20-2	Rudder Pedal Adjustment
27-20-3	Rudder Trim
27-30-1	Flap Auto Pitch Trim (AUTO TRIM FAIL)
27-30-2	Stick Shaker
27-30-3	#1 & #2 STALL SYSTEM FAIL Caution Light(s)
27-30-4	Stall Warning System
27-30-5	Stick Pusher System
27-60-1	Roll Spoiler Caution Lights
27-60-2	FLIGHT or TAXI Switch - TAXI Position Latch
27-60-3	Spoiler Advisory Lights
27-60-4	Roll Spoilers (Ground Mode System)
ATA 28	FUEL
28-20-1	Pressure Refueling System
28-20-2	MASTER VALVE CLOSED Light (Refuel or Defuel Panel)
28-40-1	Height Measuring Unit (Magnetic Dipsticks)
28-40-2	Fuel TANK °C Temperature Indication (on ESID)
28-40-3	FUELING ON Caution Light
28-40-4	TANK 1 AUX PUMP and TANK 2 AUX PUMP Advisory Lights
28-40-5	#1 TANK FUEL LOW and #2 TANK FUEL LOW Caution Lights
28-40-6	Refuel or Defuel or Transfer VALVE (OPEN or CLOSED) Advisory Lights
28-40-7	External Refuel or Defuel Panel FUEL QTY Indicators
28-40-8	REFUEL SHUTOFF TANK 1 and REFUEL SHUTOFF TANK 2 Advisory Lights
28-40-9	APU FUEL VALVE Advisory Light
28-40-10	Flight Compartment Fuel QTY Indications (on ESID)
28-40-11	Fuel Inlet Temperature Indications (on Engine Display)
ATA 29	HYDRAULIC POWER
29-10-1	Parking Emergency Brake Accumulator Hand Pump

ISS III R06

APPROVED BY DAW DELHI, DA -

Signed by: Manoj

Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

INDEX 4



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

29-10-2	HYD FSOV OPEN Indication Light
29-30-1	HYD PRESS 1 and HYD PRESS 2 Indications
29-30-2	HYD PRESS STBY Indication
29-30-3	System #1 and #2 Nacelle Reservoir Quantity Indicators
29-30-4	#1 STBY HYD PUMP HOT Caution Light
29-30-5	HYD QTY 3 Indication
29-30-6	System #3 Aft Fuselage Hydraulic Quantity Indicator
29-30-7	HYD PRESS 3 Indication
29-30-8	PTU CNTRL ON Advisory Light
29-30-9	#1 ENG HYD PUMP and #2 ENG HYD PUMP Caution Lights
29-30-10	HYD QTY 1 and HYD QTY 2 Indications
29-30-11	STBY HYD PRESS ON Advisory Light
29-30-12	#1 HYD FLUID HOT and #2 HYD FLUID HOT Caution Lights
29-30-13	HYD #3 ISOL VLV OPEN Advisory Light
ATA 30	ICE AND RAIN PROTECTION
30-10-1	TAIL De-Ice Boots Advisory Lights
30-10-2	DEICE PRESS Caution Light
30-10-3	DEICE PRESS Indicators
30-10-4	Low Pressure Warning Switches (LPWS)
30-10-5	WING De-Ice Boots Advisory Lights
30-10-6	Timer Monitor Unit (TMU, Timer Function)
30-10-7	Airframe De-Icing System
30-20-1	Engine Intake Bypass Door OPN and CLOSED Advisory Lights
30-20-2	ENGINE INTAKE HTR Advisory Lights
30-20-3	ENG ADPT HEAT 1 and ENG ADPT HEAT 2 Caution Lights
30-20-4	Engine Intake Adapter Heater Assemblies
30-30-1	Pitot/Static Heaters
30-30-2	PITOT HEAT 1, PITOT HEAT 2 and PITOT HEAT STBY Caution Lights
30-40-1	Windshield Wipers
30-40-2	Windshield Heaters
30-60-1	Propeller De-icing System
30-60-2	PROPS Heat Advisory Lights
30-80-1	Ice Detector Spigot Illumination Lights
30-80-2	Ice Detector Probes (Electronic)

Signature valid

ISS III R06

APPROVED BY DAW DELHI, DA

Signed by: Manoj

Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

INDEX 5



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

ATA 31		INDICATING AND RECORDING SYSTEMS
31-20-1	Clocks	
31-30-1	Flight Data Recorder	
31-30-2	Extended Quick Access Recorder	
31-51-1	Caution and Warning Lights System	
31-60-1	ESID Control Panel	
31-60-2	MFD and PFD Engine Display Messages	
31-60-3	Electronic Flight Instrument System Control Panels	
31-60-4	FADEC 1/DU or FADEC 2/DU Engine Display Message	
31-60-5	EFIS/ESID Display Units	
ATA 32		LANDING GEAR
32-20-1	NOSE GEAR LOCK	
32-30-1	Landing Gear Retraction System	
32-40-1	Parking Brake Pressure Indications	
32-40-2	Anti-Skid System	
32-40-3	Fill Valve Gauge (CR411000-001)	
32-50-1	Nosewheel Steering	
32-60-1	Touched Runway Indication System	
ATA 33		LIGHTS
33-10-1	Cockpit and Instrument Panel Lighting System	
33-10-2	Caution/Warning/Advisory Lights System DIM/BRT Function	
33-10-3	Caution/Warning/Advisory Lights System	
33-20-1	No Smoking / Fasten Seat Belt Lights	
33-20-2	Cabin Lighting System	
33-20-3	Lavatory Compartment (RETURN TO SEAT and LAVATORY OCCUPIED Lights/Sign)	
33-20-4	Accent Lights (Spotlights) NextGen Interior	
33-25-1	Lavatory Light	
33-30-1	Aft Baggage Compartment Ceiling Lights	
33-30-2	Forward Baggage Compartment Light	
33-30-3	Aft Service Light	
33-40-1	Position Lights	
33-40-2	A/COL WHITE Lights	
33-40-3	Logo Lights	

Signature valid

ISS III R06

APPROVED BY DAW DELHI, DA -

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

INDEX 6



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

33-40-4	A/COL RED Light (Red Recognition Light)
33-40-5	Boarding Lights
33-40-6	Passenger Airstair Door Lights
33-40-7	Landing Lights
33-40-8	Taxi Light
33-40-9	WING INSP Lights
33-50-1	Exterior Emergency Lighting System
33-50-2	Interior Electrical Emergency Lighting System
33-50-3	Photoluminescent Floor Proximity Emergency Escape Path Lighting
33-50-4	Interior/Exterior EMERGENCY LIGHTING Switch (Passenger Compartment)
ATA 34	NAVIGATION
34-10-1	Altitude Alerting System
34-20-1	Standby Magnetic Compass
34-20-2	Standby Attitude Indicator
34-20-3	IVSI Indications (on PFDs)
34-20-4	AHRS Control Panel Indications
34-20-5	Flux Valves
34-20-6	Integrated Standby Instrument (CR839CH00013)
34-20-7	Inertial Reference System (IRS)
34-30-1	Microwave Landing System (MLS)
34-40-1	Weather Radar System
34-40-2	Traffic Alert and Collision Avoidance System (TCAS)
34-40-3	RA Height Indications (on PFDs)
34-40-4	Ground Proximity Warning System (GPWS) / Enhanced Ground Proximity Warning System (EGPWS)
34-40-5	GPWS I/F FAIL Engine Display Message
34-40-6	Radio Altimeters
34-50-1	ATC Transponder / Altitude Reporting System
34-50-2	VHF Navigation Systems
34-50-3	Distance Measuring Equipment (DME) System
34-50-4	Automatic Direction Finding (ADF) Systems
34-50-5	Marker Beacon
34-50-6	Global Positioning System (GPS)
34-60-1	Flight Directors

Signature valid

ISS III R06

APPROVED BY DAW DELHI, DA -
Signed by: Manoj

Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

INDEX 7



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

34-60-2	Flight Management System (FMS)
ATA 35	OXYGEN
35-10-1	Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges
35-10-2	Flight Deck Fixed Oxygen System Overboard Discharge Indicator
35-20-1	Passenger Drop Down Oxygen System
35-30-1	Protective Breathing Equipment (PBE)
35-30-2	First Aid Oxygen System
35-30-3	Passenger Portable Oxygen Dispensing Units
35-30-4	Dual-Purpose Oxygen System Units
ATA 36	PNEUMATICS
36-10-1	BLEED SYSTEMS
ATA 38	WATER & WASTE SYSTEM
38-10-1	Potable Water Systems
38-10-2	Warm Water Wash System
38-10-3	Drain Mast Heaters
38-30-1	Lavatory Waste System
ATA 45	CENTRAL MAINTENANCE SYSTEM
45-45-1	Centralized Diagnostic System (CDS)
ATA 46	INFORMATION SYSTEMS
46-20-1	Electronic Flight Bag Systems (EFBS)
ATA 47	INERT GAS SYSTEMS
47-11-01	Nitrogen Generation System (NGS)
ATA 49	AUXILIARY POWER UNIT
49-00-1	Auxiliary Power Unit (APU)
49-50-1	APU Bleed Air System

Signature valid

ISS III R06

APPROVED BY DAW DELHI, DA -

Signed by: Manoj

Kumar Bajpai

Director

(Airworthiness)

Date: 07-Jun-

2024 13:52:49

INDEX 8



DHC-8-402

MINIMUM EQUIPMENT LIST

INDEX

ATA 52	DOORS
52-10-1	Door Seal System Charging Valve
52-10-2	Door Seal Drain Valve
52-10-3	Internal Baggage Door
52-10-4	Aft Entry Stair System
52-10-5	FUSELAGE DOORS Warning System
52-10-6	Electro Pneumatic Shut-Off Valve (EPSOV)
52-30-1	Aft Baggage Door Counter Balance System
52-30-2	Aft Baggage Door Telescopic Strut
52-50-1	Fortified Flight Deck Door (With Remote Access System)
52-50-2	Fortified Flight Deck Door (Without Remote Access System): Deadbolt Lock
52-50-3	Lavatory Door
ATA 61	ENGINE FUEL & CONTROL
61-20-1	Propeller Maintenance Unfeather Function
61-20-2	PEC System: PEC faults Modsum 4-113558
ATA 71	POWER PLANT
71-60-1	Engine Intake Bypass Doors
ATA 73	ENGINE FUEL AND CONTROL
73-20-1	Engine FADEC System - FADEC faults
73-20-2	MTOP Switch
73-20-3	Power Rating Switches
73-20-4	Reduce Power Switches
73-30-1	FF (Fuel Flow) Indications
ATA 76	ENGINE CONTROL
76-10-1	Engine Control Panel Switches
ATA 77	ENGINE INDICATING
77-30-1	Engine Monitoring Unit (EMU)

Signature valid

ISS III R06

APPROVED BY DAW DELHI, DA -
Signed by: Manoj

Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

INDEX 9

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDEX***

ATA 79	ENGINE OIL
79-30-1	OIL LEVEL Indication in Cockpit
	ANNEXURE A
ANN A	Acceptable Material For Ballast
	ANNEXURE B
ANN B	Time Limited Dispatch
	ANNEXURE C
ANN C	Aircraft Details

Signature valid

ISS III R06**APPROVED BY DAW DELHI, DA -**
Signed by: MunojKumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**INDEX 10**

DHC-8-402

MINIMUM EQUIPMENT LIST

REVISION HIGHLIGHTS

[illegible]

~~Confidential~~

APPROVED BY DAW/ LHI, DATED -

Signed by: Manoj

~~Kumar Bajpai~~

Director

~~(Airworthiness)~~

Date: 07-Jun-2024 10:50:40

RVH 1



DHC-8-402

MINIMUM EQUIPMENT LIST

REVISION HIGHLIGHTS

INTENTIONALLY
LEFT
BLANK

ISS III R06

~~Signature valid~~

APPROVED BY DAW / LHI, DATED -

Signed by: Manoj

Kumar Bajpai

Director

(Airworthiness)

Date: 07-Jun-

2024 13:52:49

RVH 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****RECORD OF REVISIONS***

ISSUE	REVISION	REVISION DATE
ISSUE I	ORIGINAL	JULY 2011
	REVISION 1	JANUARY 2012
	REVISION 2	OCTOBER 2012
	REVISION 3	AUGUST 2014
ISSUE II	REVISION 0	JULY 2015
	REVISION 1	DECEMBER 2016
ISSUE III	REVISION 0	SEPTEMBER 2018
	REVISION 1	DECEMBER 2018
	REVISION 2	JANUARY 2019
	REVISION 3	JULY 2019
	REVISION 4	AUGUST 2020
	REVISION 5	MARCH 2022
	REVISION 6	MAY 2024

ISS III R06**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**ROR 1**



DHC-8-402

MINIMUM EQUIPMENT LIST

RECORD OF REVISIONS

**INTENTIONALLY
LEFT
BLANK**

ISS III R06

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

ROR 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****TABLE OF CONTENTS**

ATA	DESCRIPTION	ITEM NUMBERS	PAGE NUMBERS
21	AIR CONDITIONING	21-20-1 ~ 21-60-4	21-20-1. 1 ~ 21-60-1. 2
22	AUTOMATIC FLIGHT CONTROL	22-10-1 ~ 22-10-7	22-10-1. 1 ~ 22-10-7. 2
23	COMMUNICATIONS	23-10-1 ~ 23-80-1	23-10-1. 1 ~ 23-80-1. 2
24	ELECTRICAL POWER	24-20-1 ~ 24-40-2	24-20-1. 1 ~ 24-40-2. 2
25	EQUIPMENT AND FURNISHINGS	25-10-1 ~ 25-62-1	25-10-1. 1 ~ 25-62-1. 4
26	FIRE PROTECTION	26-10-1 ~ 26-20-4	26-10-1. 1 ~ 26-20-4. 4
27	FLIGHT CONTROLS	27-10-1 ~ 27-60-4	27-10-1. 1 ~ 27-60-4. 2
28	FUEL	28-20-1 ~ 28-40-11	28-20-1. 1 ~ 28-40-11. 2
29	HYDRAULIC POWER	29-10-1 ~ 29-30-13	29-20-1. 1 ~ 29-30-13. 2
30	ICE & RAIN PROTECTION	30-10-1 ~ 30-80-2	30-10-1. 1 ~ 30-80-2. 2
31	INDICATING / RECORDING SYSTEMS	31-20-1 ~ 31-60-5	31-20-1. 1 ~ 31-60-5. 2
32	LANDING GEAR	32-20-1 ~ 32-60-1	32-20-1. 1 ~ 32-60-1. 2
33	LIGHTS	33-10-1 ~ 33-50-4	33-10-1. 1 ~ 33-50-4. 4
34	NAVIGATION	34-10-1 ~ 34-60-2	34-10-1. 1 ~ 34-60-2. 6
35	OXYGEN	35-10-1 ~ 35-30-4	35-10-1. 1 ~ 35-30-4. 2
36	PNEUMATICS	36-10-1	36-10-1. 1 ~ 36-10-1. 8
38	WATER / WASTE	38-10-1 ~ 38-30-1	38-10-1. 1 ~ 38-30-1. 2
45	CENTRAL MAINTENANCE SYSTEM	45-45-1	45-45-1. 1 ~ 45-45-1. 2
46	INFORMATION SYSTEMS	46-20-1	46-20-1. 1 ~ 46-20-1. 2
49	AUXILARY POWER UNIT	49-00-1 ~ 49-50-1	49-00-1. 1 ~ 49-50-1. 2
52	DOORS	52-10-1 ~ 52-50-3	52-10-1. 1 ~ 52-50-3. 2
61	PROPELLERS	61-20-1 ~ 61-20-2	61-20-1. 1 ~ 61-20-2. 2
71	POWER PLANT	71-60-1	71-60-1. 1 ~ 71-60-1. 2
73	ENGINE FUEL AND CONTROL	73-20-1 ~ 73-30-1	73-20-1. 1 ~ 73-30-1. 2
74	ENGINE IGNITION	74-00-01	74-00-01. 1 ~ 74-00-01. 4
76	ENGINE CONTROL	76-10-1	76-10-1. 1 ~ 76-10-1. 8
77	ENGINE INDICATING	77-30-1	77-30-1. 1 ~ 77-30-1. 2
79	ENGINE OIL	79-30-1	79-30-1. 1 ~ 79-30-1. 2

ISS III R00

APPROVED BY DAW DELHI, DATE -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

TOC 1



DHC-8-402

MINIMUM EQUIPMENT LIST

TABLE OF CONTENTS

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

TOC 2

**DHC-8-402****MINIMUM EQUIPMENT LIST**
DEFINITIONS AND ABBREVIATIONS

1. System numbers are based on the **Air Transport Association (ATA)** Specification Number 100 and items are numbered sequentially.
 - a. **"Item"** (Column 1) means the equipment, system, component, or function listed in the "Item" Column.
 - b. **"Repair Interval"** (Column 2) – Please see Point No 16
 - c. **"Number Installed"** (Column 3) is the number (quantity) of items normally installed in the aircraft. This number represents the aircraft configuration considered in developing this MEL. Should the number be a variable (e.g., passenger cabin items) a number is not required.
 - d. **"Number Required for Dispatch"** (Column 4) is the minimum number (quantity) of items required for operation provided the conditions specified in Column 4 are met. Should the number be a variable (e.g., passenger cabin items) a number is not required.
 - e. **"Remarks or Exceptions"** (Column 5) in this column includes a statement either prohibiting or permitting operation with a specific number of items inoperative, provisos (conditions and limitations) for such operation, and appropriate notes.
 - f. **"Var"** in column 3 and / or column 4 indicates a variable number (quantity) of the item installed or required for dispatch. Mention of specific number is not required.
 - g. A vertical bar (change bar) in the margin indicates a change, addition or deletion in the adjacent text for the current revision of that page only. The change bar is dropped at the next revision of that page.
2. **"Airplane Flight Manual" (AFM)** is the document required for type certification and approved by the responsible FAA Aircraft Certification Office. The FAA approved AFM for the specific aircraft is listed on the applicable Type.
3. Each inoperative item must be placarded to inform and remind the crewmembers and maintenance personnel of the equipment condition.

NOTE: To the extent practical, placards should be located adjacent to the control or indicator for the item affected; however, unless otherwise specified, placard wording and location will be determined by the operator.
4. **"Deleted"** in the remarks column after a sequence item indicates that the item was previously listed but is now required to be operative if installed in the aircraft.
5. **"Not Applicable"** in the item column after a sequence item indicates that the item not applicable for SpiceJet fleet.
6. **"Flight Day"** means a 24 hour period (from midnight to midnight IST), during which at least one flight is initiated for the affected aircraft.
7. **"Icing Conditions"** means an atmospheric environment that may cause ice to form on the aircraft or in the engine(s).

*(...Continued)***ISS III R05****APPROVED BY DA Signature valid –**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

DA 1



DHC-8-402

MINIMUM EQUIPMENT LIST
DEFINITIONS AND ABBREVIATIONS

8. Alphabetical symbol in Column 4 indicates a proviso (condition or limitation) that must be complied with for operation with the listed item inoperative.
9. does not accomplish its intended purpose and/or is not consistently functioning normally within its approved operating limit(s) or tolerance(s).
10. **"Notes:"** in Column 4 provides additional information for crewmember or maintenance consideration. Notes are used to identify applicable material which is intended to assist with compliance, but do not relieve the operator of the responsibility for compliance with all applicable requirements. Notes are not a part of the provisos.
11. Inoperative components of an inoperative system: Inoperative items which are components of a system which is inoperative are usually considered components directly associated with and having no other function than to support that system. (Warning/Caution systems associated with the inoperative system must be operative unless relief is specifically authorized per the MEL).
12. **"Deactivated"** and **"Secured"** means that the specified component must be put into an acceptable condition for safe flight. An acceptable method of securing or deactivating will be established by the operator.
13. **"Visual Meteorological Conditions" (VMC)** means the atmospheric environment is such that would allow a flight to proceed under the visual flight rules applicable to the flight. This does not preclude operating under Instrument Flight Rules.
14. **"Visible Moisture"** means an atmospheric environment containing water in any form that can be seen in natural or artificial light; for example, clouds, fog, rain, sleet, hail, or snow.
15. **"Passenger Convenience Items"** means those items related to passenger convenience, comfort or entertainment such as, but not limited to, galley equipment, movie equipment, ash trays, stereo equipment, overhead reading lamps, etc.
16. **Repair Intervals:** Repair of inoperative systems or components, deferred in accordance with the MEL, must be done at or prior to the repair times established by the following letter designators:

Category A: Items in this category shall be repaired within the time interval specified in the remarks column of the operator's approved MEL.

Category B: Items in this category shall be repaired within **Three (3)** consecutive calendar days excluding the day the malfunction was recorded in the Aircraft Technical Log. For example, If it were recorded at 10 a.m. on January 26th, the three day interval would begin at midnight the 26th January and end at midnight the 29th January.

(...Continued)

ISS III R05

APPROVED BY DA  -

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

DA 2



DHC-8-402

MINIMUM EQUIPMENT LIST
DEFINITIONS AND ABBREVIATIONS

Category C: Items in this category shall be repaired within **Ten (10)** consecutive calendar days excluding the day the malfunction was recorded in the Aircraft Technical Log. For example, if it were recorded at 10 a.m. on January 26th, the 10 day interval would begin at midnight the 26th January and end at midnight February 5th.

Category D: Items in this category shall be repaired within **One hundred twenty (120)** Consecutive calendar days excluding the day the malfunction was recorded in the Aircraft Technical Log. The letter designators are inserted in Column 2.

17. **"Day of Discovery"** is the calendar day an equipment/instrument malfunction was recorded in the Aircraft Technical Log. This day is excluded from the calendar days or flight days specified in the MEL for the repair of an inoperative item of equipment. This provision is applicable to all MEL items, i.e., Categories "A, B, C and D."
18. **RNP:** Required Navigation Performance.
19. **RVSM:** Reduced Vertical Separation Minimum.
20. **RNAV:** Area Navigation
21. **LPV:** Localizer Performance with Vertical Guidance

ISS III R05

APPROVED BY DA  –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

DA 3



DHC-8-402

MINIMUM EQUIPMENT LIST
DEFINITIONS AND ABBREVIATIONS

**INTENTIONALLY
LEFT
BLANK**

ISS III R05

APPROVED BY DA  –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

DA 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PREAMBLE*****01. INTRODUCTION**

The Minimum Equipment List (**MEL**) is a list containing items of equipment, which may remain inoperative in service for a very limited period without adversely affecting the safety and airworthiness of the aircraft.

The **MEL** is complied by **Technical Services Department** in consultation with **Operation Department** as per the requirements of **Civil Aviation Requirements (CAR) Section 2, Series B, Part I**. The **MEL** is based on the **MMEL** duly approved by the **Department of Transportation (DOT) of Canada** and **MELP** document prepared by **Bombardier** for **DOT DHC-8-402 MMEL**.

A Master Minimum Equipment List (MMEL) is developed by the DOT-Canada, with participation by the Aviation Industry, to improve aircraft utilization and thereby provide more convenient and economic air transportation. The DOT-Canada approved MMEL includes those items of equipment related to airworthiness and operating regulations and other items of equipment which the administrator finds may be inoperative and yet maintain an acceptable level of safety by appropriate conditions and limitations, it does not contain obviously required items such as wings, flaps and rudders.

The philosophy in developing an MEL is to authorize continuation of flight with inoperative equipment only when the inoperative equipment does not render the aircraft unairworthy for the particular flight. Limitations, procedures and substitutions may be used to provide conditions under which the inoperative equipment will not make the operation unsafe or the aircraft unairworthy. This is not a philosophy which permits reduced safety in order to fly to a base where repairs can be made, but rather a philosophy which permits safe operations for a take-off from a maintenance base or en-route stop.

MEL is prepared based on the MMEL issued by DOT-Canada and MELP document prepared by Bombardier for DOT DHC-8-402 MMEL, for the use and guidance of flight and ground operations personnel. It takes into consideration the SpiceJet's particular aircraft equipment configuration and operational conditions and is tailored to the SpiceJet routes and procedures within the constraints imposed by the MMEL. It is developed as per current MMEL and amendments as they occur and also the requirements of DGCA (INDIA) for approval by DGCA. It is always ensured that SpiceJet MEL is not less restrictive than the MMEL.

Equipment not required by the operation being conducted and equipment in excess of the requirements are included in the MEL with appropriate conditions and limitations. The MEL is intended to permit operation with inoperative items of equipment for a period of time until repairs can be accomplished. It is important that repairs be accomplished at the first available opportunity where facilities exist. SpiceJet has established a controlled and sound repair program including the parts, personnel, facilities, procedures, and schedules to ensure timely repair. A copy of the approved MEL shall be carried on board the aircraft. The MEL must not deviate from the Aircraft Flight Manual Limitations, Emergency Procedures or with Airworthiness Directives. It is important to remember that all equipment related to the

(...Continued)

ISS III R03**APPROVED BY DA****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

PR 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PREAMBLE***

airworthiness and the operating regulations of the aircraft not listed on the MMEL must be operative.

Rectification of inoperative systems, items of equipment or defective components shall preferably be carried out at the first station where time and spares permit. However in any case rectification must be done at or prior to the repair times established in the MEL. The MEL is applicable to all transit, terminal and main stations. For the purpose of this MEL the main maintenance base for SpiceJet DHC-8-402 (Q400) fleet is Delhi.

For dispatch with secondary airframe or engine parts missing, refer to the **CONFIGURATION DEVIATION LIST (CDL), which is a part of AFM (Supplement No - 41) and AOM Vol - 2, Chapter-8).**

02. CONTENTS OF MEL

The MEL contains only those items of airworthiness significance which may be inoperative prior to dispatch, provided, limitations and appropriate procedures are observed. Equipments obviously basic to airplane airworthiness such as wings, rudders, flaps, engine, landing gear, etc., are not listed and must be operative for all flights. It is important to note that: **ALL ITEMS WHICH ARE RELATED TO THE AIRWORTHINESS OF THE AIRPLANE AND NOT INCLUDED IN THE LIST ARE AUTOMATICALLY REQUIRED TO BE OPERATIVE.**

Equipment obviously not required for safe operation of the airplane such as galley equipment, passenger convenience items, etc., are not listed.

Items specifically required for special operations like CAT II or Performance Based navigation (PBN) are clearly marked in the dispatch conditions, as applicable; e.g., refer Item 22-10-1 & 22-10-2 on Page 22-1.

In order to maintain the required level of safety and reliability the MEL establishes limitations on the duration of and conditions for operation with inoperative equipment. The (M) procedures identified in the MMEL are required to be performed once prior to dispatching with MEL relief. If there is a requirement to perform the procedures more frequently, for example, prior to each flight, then this is clearly stated in the provisos. The same principle applies to the (O) procedures, although in some cases it is required that certain equipment be confirmed operative and this equipment is checked regularly in accordance with the normal Flight Manual procedures.

03. CRITERIA FOR DISPATCH

The decision of the Captain of the flight to have inoperative items corrected prior to flight will take precedence over the provisions contained in the MEL. The captain may request requirements above the minimum listed, whenever in his judgment, such added equipment

(...Continued)

ISS III R03**APPROVED BY DA  Signature valid -**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

PR 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PREAMBLE***

is essential to the safety of a particular flight under the special conditions prevailing at the time.

Close operational control by Quality Manager shall be exercised to ensure that the aircraft are not dispatched with multiple MEL items inoperative, without first determining that any interface or interrelationship between the inoperative systems or components will not result in a degradation in the level of safety or an undue increase in crew workload. In such cases crew should be consulted. It is particularly in this area of multiple discrepancies, and especially discrepancies in related systems, that good judgment, based on the circumstances of the case, including climatic and enroute conditions, must be used.

MEL can be invoked by appropriately Licenced AME/ person specifically approved/ approved Basic Licence holder/ approved pilot. However, approved pilot shall invoke MEL in respect of those items only, which do not require maintenance actions/ procedures.

The AME responsible for releasing the aircraft will inform the Flight Dispatch / Flight Crew (Pilot in Command) whenever any MEL item is invoked which involves Operational Restriction / Limitations that require additional action by flight crew with respect to operation of the aircraft for the intended flight. The above information will be communicated by Telephone/ Walkie-Talkie to the Duty Officer/ Operations Controller at the Flight Dispatch or Flight Crew. All such releases will be recorded in the Aircraft Technical Log, in the appropriate pages.

Wherever the Pilot in Command and/or the Maintenance Personnel have any doubt concerning the application of the MEL, the Operations Manager / Quality Manager, must be contacted, who shall take all relevant factors into account and provide necessary advice or clarification.

Suitable conditions and limitations in the form of Placards, Maintenance Procedures, Crew Operating Procedures and other restrictions as necessary are specified in the MEL to ensure that an acceptable level of safety is maintained.

Operational concurrence is to be ascertained, prior to invoking any MEL items which restrict either CAT II operations capability and other special operations. Both Engineering and Flight crew personnel shall read the MEL/MELP till the end of MEL/MELP item denoted by " ■ ■ ■ ■ ". Whenever "REFER NOTE" follows an MEL item, it is meant for easy interpretation and understanding of MEL item. Both Maintenance and operation personal must refer these notes.

Notwithstanding the MEL, an AME need not certify the aircraft for flight or a Pilot need not accept the aircraft for flight, if it is considered that it is unsafe to do so.

Subsequent to the release of flight and commencement of flight leg the operating crew may proceed or return after ascertaining that appropriate limitations for the inoperative

(...Continued)

ISS III R03**APPROVED BY DA****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

PR 3



DHC-8-402

MINIMUM EQUIPMENT LIST

PREAMBLE

unit/system are understood. If a defect is detected by the cockpit crew after commencement of flight leg, they will first carry out the QRH actions required, check the MEL for the fault and if the same does not require maintenance action as per MEL, the PIC may proceed to the destination and report the defect. Continuation of flight will be as per the guidance of associated "O" procedure and it will be at the discretion of PIC for safe conduct of flight. The commencement of flight leg will be interpreted as "when the aircraft push back commences from a push back bay or the aircraft moves under its own power from a non push back bay.

04. RECTIFICATION INTERVALS

Repair of inoperative systems or components, deferred in accordance with the MEL, must be done at or prior to the repair times established by the following letter designators:

Category A: Items in this category shall be repaired within the time interval specified in the remarks column of the operator's approved MEL.

Category B: Items in this category shall be repaired within **Three (3)** consecutive calendar days excluding the day the malfunction was recorded in the Aircraft Technical Log. For example, If it were recorded at 10:00 Hrs UTC on January 26th, the three day interval would begin at midnight the 26th January and end at midnight the 29th January.

Category C: Items in this category shall be repaired within **Ten (10)** consecutive calendar days excluding the day the malfunction was recorded in the Aircraft Technical Log. For example, if it were recorded at 10 Hrs UTC on January 26th, the 10 day interval would begin at midnight the 26th January and end at midnight February 5th.

Category D: Items in this category shall be repaired within **One hundred twenty (120)** Consecutive calendar days excluding the day the malfunction was recorded in the Aircraft Technical Log. The letter designators are inserted in Column 2.

05. MAINTENANCE ACTION

All inoperative units must be placarded and appropriate Maintenance Actions as per Minimum Equipment List Procedures (MELP), if applicable, must be taken by Maintenance Personnel; the defect properly entered in the Aircraft Technical Log and Flight Crew suitably briefed who will take appropriate Operations Actions as per MELP, wherever applicable. As far as possible Placards shall be located adjacent to the control or indicator for the item affected.

All deferred defects should be recorded in the Aircraft Technical Log with all relevant details and any specific instructions to Flight Crew or Base Station, if required.

"M" Symbol in column 4 of the MEL indicates a requirement for a specific Maintenance Procedure which must be accomplished prior to operation with the listed item inoperative. All maintenance actions shall be strictly followed and duly entered in the Acceptable Deferred Log sheet in the Aircraft Technical Log.

(...Continued)

ISS III R03

APPROVED BY DA  **Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

PR 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PREAMBLE***

While invoking the MEL the following certification by the certifying personnel is required:-

On the Aircraft Technical Log Sector Record sheet

“Defect carried forward in accordance with the MEL reference _____, ADD No _____ Raised”.

On the Acceptable Deferred Log sheet

The ADD record pages must be suitably annotated with the details of the defect and the time limit must be specified (Date & Time or remaining Flight Hours/ Cycles).

Flight Crew may use the Acceptable Carried Forward (ACF) Procedure, in case of diversion to a station unsupported by SpiceJet Authorized Certifying Engineer. In this case “Action Taken” column in the Aircraft Technical Log Sector Record sheet is annotated ACF and signed by the Captain. The defect is then reentered as a defect in the next Aircraft Technical Log Sector Record sheet. This action is repeated until the defect is rectified by the Authorized Certifying Engineer.

For those items wherein in the remarks exceptions column the maintenance action(s) is / are required to be performed before each flight it will be the responsibility of the departure AME invoking the MEL to make necessary entries in the Acceptable Deferred Log sheet and Aircraft Technical Log Sector Record sheet of the Aircraft Technical Log. This will enable the departure AME of the subsequent flight to comply with requirements mentioned in the remarks/ exceptions column and make necessary entries in the action taken column of the Aircraft Technical Log Sector Record sheet. The AME revoking the MEL will be required to make entries in both Aircraft Technical Log Sector Record sheet and Acceptable Deferred Log sheet.

06. OPERATIONS ACTION

“O” Symbol in column 4 of the MEL indicates a requirement for a specific operations procedure which must be accomplished in planning for and/or operating with the listed item inoperative.

The Operating Crew shall make an entry before accepting the aircraft “**MELP Ops Procedures Noted**”.

07. Acceptable Ballast materials have been provided in Annexure A of this MEL. Time Limited Dispatch criteria are provided in Annexure B of this MEL.

ISS III R03**APPROVED BY DA****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

PR 5



DHC-8-402

MINIMUM EQUIPMENT LIST

PREAMBLE

**INTENTIONALLY
LEFT
BLANK**

ISS III R03

APPROVED BY DA

Signature valid –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

PR 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-1****Distribution Champer**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Distribution Damper must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the AIR CONDITIONING panel in the flight compartment with "Distribution Damper INOP".
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

21-20-2

Recirculation Fan

21-20-2-1

Pre-Mod 4-126236 and (Pre-Mod 4-126211 or Pre-Mod 4-126212)

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-2****Recirculation Fan****21-20-2-2****Pre-Mod 4-126236 and (Mod 4-126211 or
Mod 4-126212)**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided Fan is switched OFF.

Minimum Equipment List Procedures (MELP)**Placard**

The inoperative "RECIRC" switch on the AIR CONDITIONING panel must be placarded in the "OFF" position.

Operating Procedures

None required

Maintenance Procedures

1. Placard the AIR CONDITIONING panel with "RECIRC FAN TO REMAIN OFF".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-3 Flow (Pack) Control and Shutoff Valve**

Interval	Installed	Required	Procedure
C	1	0	(M#)

May be inoperative provided:

- The Valve is secured in the open position,
- The Nacelle Shutoff Valves are verified operative, and
- Both digital (AUTO) channels of the ECU are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flow (Pack) Control and Shutoff Valve must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

- Gain access to the Aft Equipment Bay via access panel 311AB.
- Locate the Flow Control and Shutoff Valve, directly overhead, left of center.
- Remove the locking pin from its normally installed position on the valve, held by a retaining cable. (This allows the valve servo air to bleed to ambient.)
- Use a wrench to turn the crank on the flow control and shutoff valve to the open position.
- Install the locking pin to prevent the crank from moving closed.
- Close access panel 311AB.
- Observing all related precautions, start and run engines 1 and 2 and allow engines to stabilize at FLT IDLE.
- On the L. DC circuit breaker panel, pull breaker ECS/BA L AUTO and ECS/BA R MAN and on the R. DC circuit breaker ECS/BA L MAN.
- At the AIR CONDITIONING panel, on the overhead console, select the:
 - CABIN OFF/MAN/AUTO/PACKS switch to AUTO
 - FLT COMP OFF/MAN/AUTO/PACKS switch to OFF

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-3****Flow (Pack) Control and Shutoff Valve**

- No. 1 BLEED switch to OFF
 - No. 2 BLEED switch to OFF
 - RECIRC FAN switch to OFF
 - CABIN and FLT COMP temperature control knobs to mid-range
10. If APU is operating, ensure APU BLEED is switched OFF.
11. Confirm that no airflow is evident from the cockpit and cabin vents.
12. At the AIR CONDITIONING panel, on the overhead console, select the:
- CABIN OFF/MAN/AUTO/PACKS switch to OFF
 - FLT COMP OFF/MAN/AUTO/PACKS switch to OFF
 - No. 1 BLEED switch to OFF
 - No. 2 BLEED switch to ON
13. Confirm that no airflow is evident from the cockpit and cabin vents.
14. Select CABIN COMP OFF/MAN/AUTO/PACKS switch to AUTO and observe that some level of airflow is initiated.
15. Note the present temperature on the CABIN and FC DUCT TEMP GAUGE.
16. Rotate the CABIN and FLT COMP temperature control knobs to full COOL.
17. After waiting approximately 60 - 90 seconds, confirm that the observed temperature trend is decreasing from ambient. (Note that the rate at which the trend changes will be dependent upon the differential of the ambient temperature compared to the maximum cold air temperature of 3 degrees C. Similarly, the maximum high temperature is 71 degrees C).
18. Rotate the CABIN and FLT COMP temperature control knobs to full WARM and confirm that after waiting approximately 60 - 90 seconds, the observed temperature trend increases.
19. Return temperature control knobs to mid-range.
20. On the L. DC circuit breaker panel, close breaker ECS/BA L AUTO, and on the R. DC circuit breaker pull ECS/BA R AUTO.
21. At the AIR CONDITIONING panel, on the overhead console, select the:
- CABIN OFF/MAN/AUTO/PACKS switch to OFF
 - FLT COMP OFF/MAN/AUTO/PACKS switch to AUTO
 - No. 1 BLEED switch to OFF
 - No. 2 BLEED switch to ON
 - RECIRC FAN switch to OFF
 - CABIN and FLT COMP temperature control knobs to mid-range
22. Confirm that no airflow is evident from the cockpit and cabin vents.
23. At the AIR CONDITIONING panel, on the overhead console, select the:
- CABIN OFF/MAN/AUTO/PACKS switch to OFF

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-3****Flow (Pack) Control and Shutoff Valve**

- FLT COMP OFF/MAN/AUTO/PACKS switch to OFF
 - No. 1 BLEED switch to ON
 - No. 2 BLEED switch to OFF
24. Confirm that no airflow is evident from the cockpit and cabin vents.
25. Select FLT OFF/MAN/AUTO/PACKS switch to AUTO and observe that some level of airflow is initiated.
26. Note the present temperature on the CABIN and FC DUCT TEMP GAUGE.
27. Rotate the CABIN and FLT COMP temperature control knobs to full COOL.
28. After waiting approximately 60 - 90 seconds, confirm that the observed temperature trend is decreasing from ambient. (Note that the rate at which the trend changes will be dependent upon the differential of the ambient temperature compared to the maximum cold air temperature of 3 degrees C. Similarly, the maximum high temperature is 71 degrees C).
29. Rotate the CABIN and FLT COMP temperature control knobs to full WARM and confirm that after waiting approximately 60 - 90 seconds, the observed temperature trend increases.
30. Return temperature control knobs to mid-range.
31. On the L. DC circuit breaker panel, close breaker ECS/BA R MAN, and on the R. DC circuit breaker close ECS/BA R AUTO and ECS/BA L MAN.
32. Shut down engines.
33. Placard the inoperative Flow (Pack) Control and Shutoff Valve in the flight compartment.
34. Make appropriate entry in the aircraft journey log.
- ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-4****Display Cooling Fans**

Interval	Installed	Required	Procedure
C	3	2	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Display Cooling Fan must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard inoperative Display Cooling Fan in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-5 SIDE WINDOW DEMIST Vent Controls****21-20-5-1**

Interval	Installed	Required	Procedure
A	2	1	NIL

One may be inoperative provided:

- Airflow from the side window vent on the inoperative side is confirmed by the pilot, and
- Repairs are made within one flight day.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Side Window Demist must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard Inoperative Side Window Demist on the AIR CONDITIONING panel.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-5. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-5 SIDE WINDOW DEMIST Vent Controls****21-20-5-2**

Interval	Installed	Required	Procedure
C	2	0	(M#)

May be inoperative provided the affected side(s) is failed in the open position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Side Window Demist must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. To gain access to the Side Window Outlet Flow Control Valve, do the following steps:
 - a) In the cockpit sidewall trim panels, remove the screws which attach the lower sidewall panel to the aircraft structure.
 - b) Carefully pull the lower sidewall panel to disengage the tape fastener at the bottom from the aircraft structure.
 - c) Remove the lower sidewall panel and put it on a clean dry surface.
 - d) Gain access to the Side Window Demist Outlet Flow Control Valve and move the lever to the fully open position.
 - e) Put the lower sidewall panel in position to the aircraft structure. Align the screw holes in the lower sidewall panel to the screw holes in the aircraft structure. Engage the tape fastener at the bottom of the lower sidewall panel to the aircraft structure.
 - f) Install the screws.
2. Placard Inoperative Side Window Demist on the AIR CONDITIONING panel.
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-6****Low Level Vent Controls****21-20-6A**

Interval	Installed	Required	Procedure
A	2	1	NIL

One may be inoperative provided:

- Airflow from the side window vent on the inoperative side is confirmed by the pilot, and
- Repairs are made within one flight day.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Low Level Vent must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

- Placard inoperative Low Level Vent on AIR CONDITIONING Panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-6****Low Level Vent Controls****21-20-6B**

Interval	Installed	Required	Procedure
C	2	0	(M)

May be inoperative provided the Low Level Vent position is confirmed and lever moved to closed position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Low Level Vent must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. To gain access to the Low Level Vent Flow Control Valve, do the following steps:
 - a) On the Nose Fuselage remove the screws which attach the access panel to the nose fuselage.
 - b) Remove the panel in order to gain access to the Low Level Vent Flow Control Valve.
 - c) Move the lever to the fully closed position.
 - d) Install the panel back to its position.
2. Placard inoperative Low Level Vent on AIR CONDITIONING PANEL.
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-7 FLT COMPT GASPERS (Small and Large)**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative provided comfort level is acceptable to the pilot.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative FLT COMPT GASPERS must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard Inoperative FLT COMPT GASPERS on AIR CONDITIONING PANEL.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-7. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-7. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-8 Aft Baggage Compartment Vent Valves****21-20-8-1 Inlet and Outlet Vent Valves****21-20-8-1A**

Interval	Installed	Required	Procedure
C	2	0	(M)

May be inoperative in the closed position provided:

- Inlet and outlet vent valves (shut-off valves) are deactivated,
- VENT VALVE INLT and VENT VALVE OUTLT CLOSED advisory lights are verified illuminated prior to each flight, and
- Live animals are not carried.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative AFT BAGGAGE VENT Valves must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

- Pull and clip the appropriate circuit breakers on the R Main Circuit Breaker panel for the following configurations:
 - With "2" Vents installed: CGO VENT VLS.
 - With "4" Vents installed: CGO VENT VALVES 1 and CGO VENT VALVES 2.
- On the Fire Protection Panel, verify the following "CLOSED" advisory lights are illuminated for the following configuration:
 - With "2" Vents installed:
 - AFT BAGGAGE - VENT VALVE INLT, and
 - AFT BAGGAGE - VENT VALVE OUTLT.
 - With "4" Vents installed:
 - CARGO - VENT VALVE INLT 1 and 2, and

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-8. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

21-20-8 Aft Baggage Compartment Vent Valves

21-20-8-1 Inlet and Outlet Vent Valves

21-20-8-1A

- ii) CARGO - VENT VALVE OTLT 1 and 2.
- 3. Placard Fire Protection Panel with "INLET and OUTLT VENT VALVES CLOSED".
- 4. Make an appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-8. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-8 Aft Baggage Compartment Vent Valves****21-20-8-1 Inlet and Outlet Vent Valves****21-20-8-1B**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative in open position provided the baggage compartment is empty, or for ballast purpose, use of bags (made of glass fiber or Kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable.

NOTE: Annexure A defines which materials can be used as Ballast.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative AFT BAGGAGE VENT Valves must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard Fire Protection Panel with "INLET and OUTLET VENT VALVES INOP".
2. Make an appropriate entry in the aircraft journey log.

— — — —

ISS III R03**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-8. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-20-8 Aft Baggage Compartment Vent Valves****21-20-8-2 VENT VALVE INLT and VENT VALVE OTLT CLOSED advisory lights**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided the baggage compartment is empty, or for ballast purpose, use of bags (made of glass fiber or Kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable.

NOTE: Annexure A defines which materials can be used as Ballast.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative VENT VALVE INLT and VENT VALVE OTLT CLOSED advisory lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Fire Protection Panel with "INLET and OUTLET VENT VALVES INOP".
2. Make an appropriate entry in the aircraft journey log.

■■■■

ISS III R03**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-20-8. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-1 CABIN PRESS Warning Light**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided flight is conducted at or below 10,000 feet MSL, per AFM Supplement 113, UNPRESSURIZED FLIGHT - BLEED ON.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative CABIN PRESS warning light must be placarded in the flight compartment.

Operating Procedures

Operations to be conducted in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT - BLEED ON.

Maintenance Procedures

1. Placard the CABIN PRESS warning light on WARNING CAUTION panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-2 Cabin ALT Indicator****21-30-2A**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- The Cabin DIFF Pressure Indicator is verified operative, and
- A chart is provided to convert cabin differential pressure to cabin altitude.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin ALT indicator must be placarded in the flight compartment.

Operating Procedures

Verify that the DIFF pressure indicator operates normally using Method B on ground or Method A in flight.

Method A (in flight prior to landing)

- Monitor DIFF pressure indicator on CABIN indication panel during the flight.
- Use chart provided by CPCS placard on the overhead panel in the Flight Compartment for converting differential pressure and aircraft altitude to cabin altitude.

Method B (on ground)

- Select the following on the CABIN PRESSURE CONTROL PANEL:
 - AUTO/MAN/DUMP switch - AUTO.
 - FWD OUTFLOW knob - CLSD.
- Ensure all doors are closed, start No. 1 engine and select power lever to FLT IDLE.

OR

Start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-2 Cabin ALT Indicator****21-30-2A**

3. Ensure that Cabin DIFF Pressure Indicator on Cabin Indication Panel is at zero psi.
Record DIFF reading.
4. If running engine make the following selections on AIR CONDITIONING panel:
 - a) BLEED 1 switch - BLEED
 - b) BLEED flow control selector - MAX

OR

If running APU, select BL AIR OPEN on APU Control Panel.

5. Advance PLA #2 to the take-off rating detent, greater than 60 degrees.

WARNING: ENSURE THAT CABIN DIFFERENTIAL PRESSURE DOES NOT EXCEED 1.0 PSI.

6. Check the following indication on CABIN INDICATION MODULE: DIFF (PSI) - equal to 0.2 ± 0.1 psi
7. Depressurize the aircraft.

Maintenance Procedures

1. Placard the Cabin ALT Indicator in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-2 Cabin ALT Indicator****21-30-2B**

Interval	Installed	Required	Procedure
D	1	0	(O)

May be inoperative provided flight is conducted in an unpressurized configuration, at or below 10,000 feet MSL, in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin ALT indicator must be placarded in the flight compartment.

Operating Procedures

Carry out unpressurized flight in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT - BLEED ON.

Maintenance Procedures

1. Placard the Cabin ALT Indicator in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-2. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-3 Cabin DIFF Pressure Indicator****21-30-3A**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- The Cabin ALT Indicator is verified operative, and
- A chart is provided to convert cabin altitude to cabin differential pressure.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DIFF Pressure Indicator must be placarded in the flight compartment.

Operating Procedures

Verify operation of Cabin ALT Indicator using Method B on the ground or Method A (in flight prior to landing).

Method A (In flight prior to landing)

- Monitor the cabin altitude during the flight.
- Use chart provided by CPCS placard on the overhead panel in the flight compartment for converting cabin altitude and aircraft altitude to differential pressure.

Method B (On ground)

- Select the following on the CABIN PRESSURE CONTROL PANEL:
 - AUTO/MAN/DUMP switch – AUTO.
 - FWD OUTFLOW knob – CLSD.
- Ensure all doors are closed, start No. 1 engine and select power lever to FLT IDLE.

OR

Start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-3 Cabin DIFF Pressure Indicator****21-30-3A**

3. Ensure that CAB ALT on CABIN indication panel is at field altitude (± 100 ft). Record ALT reading.
4. If running engine make the following selections on AIR CONDITIONING panel:
 - a) BLEED 1 switch - BLEED
 - b) BLEED flow control selector - MAX

OR

If running APU, select BL AIR OPEN on APU Control Panel.

5. Advance PLA #2 to the take-off rating detent, greater than 60 degrees.

WARNING: ENSURE THAT CABIN DIFFERENTIAL PRESSURE DOES NOT EXCEED 1.0 PSI.

6. Check the following indication on CABIN indication panel:
CABIN ALT - descent towards 400 (± 150 ft) less than value taken in step (3) when stabilized, record CAB. ALT reading.
7. Depressurize the aircraft.

Maintenance Procedures

1. Placard the DIFF Cabin Pressure Indicator on CABIN indication panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-3 Cabin DIFF Pressure Indicator****21-30-3B**

Interval	Installed	Required	Procedure
D	1	0	(O)

May be inoperative provided flight is conducted in an unpressurized configuration, at or below 10,000 feet MSL, in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT - BLEED ON.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DIFF Pressure Indicator must be placarded in the flight compartment.

Maintenance Procedures

1. Placard the DIFF Cabin Pressure Indicator on CABIN indication panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

Operating Procedures

In case of automatic control failure, carry out unpressurized flight in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT - BLEED ON.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-4 Cabin RATE Indicator****21-30-4A**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided all other instruments and functions of the Pressurization System are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Rate of Climb Indicator must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Inoperative FLT COMPT GASPERS on AIR CONDITIONING PANEL.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-4 Cabin RATE Indicator****21-30-4B**

Interval	Installed	Required	Procedure
D	1	0	(O)

May be inoperative provided flight is conducted in an unpressurized configuration, at or below 10,000 feet MSL, in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Rate of Climb Indicator must be placarded in the flight compartment.

Operating Procedures

Conduct the flight in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON.

Maintenance Procedures

1. Placard inoperative the Cabin Rate Indicator in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-5 Cabin Pressure Control System****21-30-5-1 AUTO and MAN Modes**

Interval	Installed	Required	Procedure
A	2	0	(M)(O)

May be inoperative provided:

- The FWD OUTFLOW valve and DUMP functions are verified operative,
- The AFT OUTFLOW valve is verified open,
- The flight is conducted in an unpressurized configuration, at or below 10,000 feet MSL, in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the pressurization system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the alternate cabin pressure control system and the outflow valve dump function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative Cabin Pressure Control system must be placarded in the flight compartment.

Operating Procedures

Flights must be conducted in an unpressurized configuration, at or below 10,000 feet MSL in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON.

Maintenance Procedures

NOTE: This function will require engine starting and running of engine #1 OR APU and an assistant outside the aircraft.

WARNING: INSTALL LANDING GEAR GROUND LOCK PINS TO THE MAIN LANDING GEAR. ENGAGE THE NOSE LANDING GEAR GROUND LOCK.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-5. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-5 Cabin Pressure Control System****21-30-5-1 AUTO and MAN Modes**

1. Apply DC electrical power adequate to support the Main Busses.
2. Ensure all doors are closed.
3. Start No. 1 engine and stabilize at FLT IDLE, OR start APU (Ensure there is air in the Reservoir Tank to inflate the door seals).
4. Select the following on the Cabin Pressure (CABIN ALTITUDE) Control Panel (CPCP):
 - a) AUTO/MAN/DUMP switch – MAN.
 - b) FWD OUTFLOW knob – CLSD position.
5. At the co-pilot's side console, select the FWD SAFETY (OUTFLOW) VALVE selector to NORMAL.
6. If running engine, select the following on the AIR CONDITIONING panel:
 - a) BLEED #1 switch – BLEED 1
 - b) CABIN PACK switch – AUTO
 - c) BLEED MIN/NORM/MAX flow control knob – MAX

OR

If running APU:

- a) Select on the APU Control Panel: BL Air switch – open
 - b) Select on the AIR CONDITIONING panel: CABIN PACK switch – AUTO
7. Advance PLA #2 to the take-off rating detent, greater than 60 degrees.
8. At the CPCP, select and hold the MAN DIFF switch to the INCR position.
9. Check that the cabin begins to pressurize, as indicated on the DIFF indicator gauge on the Cabin Indication Module.
10. Hold the MAN DIFF switch until the DIFF indication gauge on the Cabin Indication Module reads 2 ± 0.2 psi, then, release the MAN DIFF switch.
11. At the CPCP, slowly turn the FW OUTFLOW knob to OPN, and check that the cabin begins to depressurize as indicated on the Cabin Indication Module.
12. Slowly turn the FWD OUTFLOW knob to the CLSD position and check that the cabin starts to pressurize as indicated on the Cabin Indication Module.
13. At the co-pilot's side console, move the FWD SAFETY (OUTFLOW) VALVE SELECTOR to the NORMAL position and check that the cabin remains pressurized.
14. At the CPCP, set the AUTO/MAN/DUMP switch to DUMP and check that the cabin begins to depressurize as indicated on the Cabin Indication Module. This indicates that the aft outflow valve has opened properly.
15. Placard the Cabin Pressure Control System (CPCS) on the CPCP with "CPCS (AUTO/MANUAL) INOP".
16. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATE: 07-Jun-2024**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-5 Cabin Pressure Control System****21-30-5-2 AUTO Mode**

Interval	Installed	Required	Procedure
A	1	0	(M)

May be inoperative provided:

- MAN control is verified operative,
- The FWD OUTFLOW control and the DUMP function are verified operative,
- Cabin RATE Indicator, Cabin ALT Indicator, and Cabin DIFF Pressure Indicator are verified operative, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the pressurization system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the alternate cabin pressure control system and the outflow valve dump function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative Cabin Pressure Control system must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

Verification of Manual (MAN) control, DUMP function and FWD SAFETY (OUTFLOW) Valve control on ground.

1. Apply DC electrical power adequate to support the Main Busses.
2. Ensure all doors are closed.
3. Start No. 1 engine and stabilize at FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-5. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-5 Cabin Pressure Control System****21-30-5-2 AUTO Mode**

4. Select the following on the Cabin Pressure (CABIN ALTITUDE) Control panel (CPCP):
 - a) AUTO/MAN/DUMP switch – MAN.
 - b) FWD OUTFLOW knob – CLSD position.
5. If running engine, select the following on the AIR CONDITIONING panel:
 - a) BLEED #1 switch – BLEED
 - b) BLEED MIN/NORM/MAX flow control knob – MAX

OR

If running APU, select BL AIR OPEN on APU Control Panel.

6. Advance PLA #2 to the take-off rating detent, greater than 60 degrees.
7. Control the cabin pressure rate through MAN DIFF toggle switch on the (CPCP). Select INCR to a value of minus (down) 300 ft/min as observed on the RATE indication on the Cabin Indication Module.
8. Observe normal operation of DIFF indication increasing and make note of the ALT level (downward) on the Cabin Indication Module.
9. Without changing the rate of pressurization, select FWD Safety (OUTFLOW) VALVE selector on co-pilot's side console panel to OPEN and check that ALT begins to increase on the Cabin Indication Module.
10. Return FWD SAFETY (OUTFLOW) VALVE selector on co-pilot's side console panel to NORMAL and check that ALT starts to decrease on the Cabin Indication Module.
11. On the CPCP, select the FWD OUTFLOW knob to INCR and observe that ALT increases on the Cabin Indication Module.
12. Return the knob to the CLSD position and confirm the CAB ALT decreases on the Cabin Indication Module.
13. On the CPCP, set AUTO/MAN/DUMP switch to DUMP position and check that ALT increases on the Cabin Indication Module.
14. On the CPCP, set AUTO/MAN/DUMP switch to MAN position.
15. Depressurize aircraft – MAN DIFF toggle switch selected to DECR.
16. Shut down engine OR APU.
17. Placard the Cabin Pressure Control System (CPCS) on the CPCP with "AUTO MODE INOP".
18. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATE: 07-Jun-2024**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-5. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-5 Cabin Pressure Control System****21-30-5-3 MAN Mode**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- AUTO control is verified operative,
- The FWD OUTFLOW control and the DUMP function are verified operative,
- Cabin RATE Indicator, Cabin ALT Indicator, and Cabin DIFF Pressure Indicator are verified operative.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the pressurization system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the alternate cabin pressure control system and the outflow valve dump function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative Cabin Pressure Control system must be placarded in the flight compartment.

Operating Procedures

None required

MAINTENANCE (M) PROCEDURES

Verification of Automatic (AUTO) control and AFT OUTFLOW valve DUMP function and FWD SAFETY (OUTFLOW) valve DUMP function.

- Apply DC electrical power adequate to support the Main Busses.
- Ensure all doors are closed.
- Start No. 1 engine and stabilize at FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
- Select the following on the Cabin Pressure (CABIN ALTITUDE) Control Panel:
 - AUTO/MAN/DUMP switch – AUTO.
 - FWD OUTFLOW knob – CLSD.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-5. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-5 Cabin Pressure Control System****21-30-5-3 MAN Mode**

- c) LDG ALT – field altitude minus 600 ft.
5. Ensure that ALT on Cabin Indication Module is at field altitude of ± 100 ft and record ALT reading.
6. If running engine, select the following on the AIR CONDITIONING (AC) panel:
- a) BLEED #1 switch – BLEED
 - b) BLEED MIN/NORM/MAX flow control knob – MIN

OR

If running APU, select BL AIR OPEN on APU Control Panel.

7. Check that ALT on the Cabin Indication Module reads 30 ft (± 20 ft) less than reading taken in step (5).
8. On the AC panel, select BLEED flow control knob to MAX and check that ALT indicator on the Cabin Indication Module reads 150 ft (± 75 ft) less than the reading taken in step (5) and record reading.
9. Advance PLA #2 to the take-off rating detent, greater than 60 degrees.
10. Check the following indications on the Cabin Indication Module:
- a) RATE (FPM) – up to 300 ft/min DOWN, then steady.
 - b) ALT – descent towards 400 ft (± 150 ft) less than value taken in step (5) then steady.
 - c) Record ALT reading.
 - d) DIFF (PSI) – equal to 0.2 psi (0.1 psi)
11. At the CPCP, select the AUTO/MAN/DUMP switch to DUMP and observe on the Cabin Indication Module that the DIFF drops to zero and the ALT rises to field elevation.
12. At the CPCP, select the AUTO/MAN/DUMP switch to AUTO and observe DIFF increases on the Cabin Indication Module.
13. Select FWD SAFETY (OUTFLOW) VALVE selector on the co-pilot's side console panel to OPEN and check that DIFF decreases on the Cabin Indication Module.
14. Select FWD SAFETY (OUTFLOW) VALVE selector on the co-pilot's side console panel to NORMAL and check that DIFF increases on the Cabin Indication Module.
15. Select power levers to FLT IDLE and depressurize aircraft.
16. Shut down engine OR APU.
17. Placard the Cabin Pressure Control System (CPCS) on the CPCP with "MAN MODE INOP".
18. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATE: 07-Jun-2024**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-5. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-6 Aft Valves****21-30-6-1 Aft Outflow Valve**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- The AFT OUTFLOW valve is verified open, and
- Flight is conducted in an unpressurized configuration, at or below 10,000 feet MSL, in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON.

Minimum Equipment List Procedures (MELP)**Placard**

AUTO and MAN pressurization must be placarded inoperative in the flight compartment.

Operating Procedures

Carry out unpressurized flight in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON.

Maintenance Procedures

1. Apply DC electrical power adequate to support the Main Busses.
2. Ensure all doors are closed.
3. Start No. 1 engine and stabilize at FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
4. Select the following on the CABIN ALTITUDE panel:
 - a) AUTO/MAN/DUMP switch – MAN
 - b) FWD OUTFLOW knob – CLSD position.
5. If running engine, select the following on the AIR CONDITIONING panel:
 - a) BLEED 1 switch – BLEED
 - b) BLEED flow control selector – MAX.OR
If running APU, select BL AIR OPEN on APU Control Panel.
6. Advance PLA #2 to the take-off detent, greater than 60 degrees.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-6. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

21-30-6 Aft Valves

21-30-6-1 Aft Outflow Valve

7. Attempt to control the cabin pressure rate through MAN/DIFF toggle switch on the CABIN ALTITUDE panel, selecting to INCR, and observing the CAB RATE and CAB DIFF indications on the CABIN INDICATION MODULE.
8. Observe that the aircraft does not allow pressurization and that the CAB ALT level does not change.
9. On the CABIN ALTITUDE panel, set AUTO/MAN/DUMP switch to DUMP position.
10. Shut down engine or APU.
11. Placard the CABIN ALTITUDE panel with AUTO/MAN MODES INOP – SWITCH MUST REMAIN IN DUMP.
12. Make appropriate entry in the aircraft journey log with reference to the inoperative outflow/safety valve.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-30-6 Cabin Pressure Control System****21-30-6-2 Aft Safety Valve**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- The AFT OUTFLOW valve is verified open, and
- Flight is conducted in an unpressurized configuration, at or below 10,000 feet MSL, in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON.

Minimum Equipment List Procedures (MELP)**Placard**

AUTO and MAN pressurization must be placarded inoperative in the flight compartment.

Operating Procedures

Carry out unpressurized flight in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT – BLEED ON.

Maintenance Procedures

1. Apply DC electrical power adequate to support the Main Busses.
2. Ensure all doors are closed.
3. Start No. 1 engine and stabilize at FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
4. Select the following on the CABIN ALTITUDE panel:
 - a) AUTO/MAN/DUMP switch – MAN
 - b) FWD OUTFLOW knob – CLSD position.
5. If running engine, select the following on the AIR CONDITIONING panel:
 - a) BLEED 1 switch – BLEED
 - b) BLEED flow control selector – MAX.OR
If running APU, select BL AIR OPEN on APU Control Panel.
6. Advance PLA #2 to the take-off detent, greater than 60 degrees.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-6. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

21-30-6 Aft Valves

21-30-6-2 Aft Safety Valve

7. Attempt to control the cabin pressure rate through MAN/DIFF toggle switch on the CABIN ALTITUDE panel, selecting to INCR, and observing the CAB RATE and CAB DIFF indications on the CABIN INDICATION MODULE.
8. Observe that the aircraft does not allow pressurization and that the CAB ALT level does not change.
9. On the CABIN ALTITUDE panel, set AUTO/MAN/DUMP switch to DUMP position.
10. Shut down engine or APU.
11. Placard the CABIN ALTITUDE panel with AUTO/MAN MODES INOP – SWITCH MUST REMAIN IN DUMP.
12. Make appropriate entry in the aircraft journey log with reference to the inoperative outflow/safety valve.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-30-6. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-50-1 Air Cycle Machines (ACM)**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative provided the associated PACKS switch is selected and remains OFF.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Air Cycle Machine must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the associated "PACK" on the AIR CONDITIONING panel in the flight compartment "INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-50-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-50-2 Turbine Shut-Off Valves**

Interval	Installed	Required	Procedure
C	2	1	(M#)

May be inoperative provided:

- Turbine Shut-Off Valve is secured in the closed position, and
- Associated PACKS switch is selected and remains OFF.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Air Cycle Machine - related to the failed Turbine Shut-Off Valve (TSOV) - must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Manually operate and lock the associated Turbine Shut-Off Valve in the closed position by first removing the locking pin on the Turbine Shut-Off Valve from its normally installed position on the valve.
2. Use a wrench to turn the crank on the valve to the closed position.
3. Install the locking pin to maintain the valve in the locked position.
4. Placard "PACK" switch associated with the inoperative TSOV, on the AIR CONDITIONING panel in the flight compartment as "INOP".
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-50-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-50-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-50-3 Pack Bypass Valves**

Interval	Installed	Required	Procedure
C	2	1	(M#)

May be inoperative provided:

- Pack Bypass Valve is locked in the closed position, and
- Associated PACKS switch is selected and remains OFF.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Air Cycle Machine (Related to the failed Pack Bypass Valve (PBV)) must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

Manually operate and lock the associated Pack Bypass Valve in the closed position with the locking screw as follows:

- Remove the locking screw from the actuator housing. It has a retaining cable.
- Turn the valve to the closed position. The linkage crank has a hex head so you can put a wrench on it to turn the valve.
- Install the locking screw in the hole in the actuator housing that is nearest to the linkage crank. This will lock the valve in the closed position.
- Placard "PACKS" switch associated with the inoperative Pack Bypass Valve, on the AIR CONDITIONING panel in the flight compartment as "INOP".
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-50-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-50-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-1 CABIN TEMP CONTROL****21-60-1-1 AUTO and MAN Modes**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The associated CABIN PACK is considered inoperative and is selected and remains OFF, and
- FLT COMP TEMP CONTROL is verified operative.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the AUTO Temperature Control system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the MAN Temperature Control system and the Temperature Gauge function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative CABIN TEMP CONTROL Mode(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Start either No. 1 or No. 2 engine and select POWER lever to FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
- If running engine select AIR CONDITIONING controls as follows:
 - Applicable BLEED 1 or 2 switch – BLEED 1 or 2.
 - OFF–MAN–AUTO PACKS switches to MAN.
 - TEMP CONTROL selectors to mid positions.
 - BLEED flow selector to – MAX.
 - RECIRC fan – RECIRC.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-1 CABIN TEMP CONTROL****21-60-1-1 AUTO and MAN Modes**

OR

If running APU, select BL AIR OPEN on APU Control Panel and select AIR CONDITIONING controls as follows:

- a) OFF-MAN-AUTO PACKS switches to MAN.
 - b) TEMP CONTROL selectors to mid positions.
 - c) RECIRC fan – RECIRC.
3. Allow the air conditioning system to stabilize. (Note CABIN DUCT, FC DUCT and CABIN temperatures on TEMPERATURE GAUGE using the GAUGE SWITCH).

Verify Flight Compartment Temp Control Operates Normally

1. AUTO Mode Inoperative – Verify Manual Flight Comp Temp Control Operates Normally
 - a) Select FLT COMP PACK switch to MAN position.
 - b) Rotate the FLT COMP CONTROL rotary knob to full WARM position.
 - c) After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is increasing, using the Temperature Gauge.
 - d) Rotate the FLT COMP CONTROL rotary knob to full COOL position.
 - e) After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is decreasing, using the Temperature Gauge.
 - f) Return the temperature control knobs to mid-range position.
2. MAN Mode Inoperative – Verify Auto Flight Comp Temp Control Operates Normally
 - a) Select FLT COMP PACK switch to AUTO position.
 - b) Rotate the FLT COMP CONTROL rotary knob to full WARM position.
 - c) After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is increasing, using the Temperature Gauge.
 - d) Rotate the FLT COMP CONTROL rotary knob to full COOL position.
 - e) After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is decreasing, using the Temperature Gauge.
 - f) Return the temperature control knobs to mid-range position.
3. Select appropriate engine or APU BLEED switch to OFF and OFF/MAN/AUTO PACKS switches of OFF.
4. Placard Cabin Temperature Control on AIR CONDITIONING panel in the flight compartment.
5. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-1 CABIN TEMP CONTROL****21-60-1-2 AUTO Mode**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- MAN control is verified operative, and
- DUCT TEMP indicator is verified operative.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the AUTO Temperature Control system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the MAN Temperature Control system and the Temperature Gauge function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative CABIN TEMP CONTROL Mode(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Start either No. 1 or No. 2 engine and select POWER lever to FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
- If running engine select AIR CONDITIONING controls as follows:
 - Applicable BLEED 1 or 2 switch – BLEED 1 or 2.
 - OFF-MAN-AUTO PACKS switches to MAN.
 - TEMP CONTROL selectors to mid positions.
 - BLEED flow selector to – MAX.
 - RECIRC fan – RECIRC.

OR

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-1 CABIN TEMP CONTROL****21-60-1-2 AUTO Mode**

If running APU, select BL AIR OPEN on APU Control Panel and select AIR CONDITIONING controls as follows:

- a) OFF-MAN-AUTO PACKS switches to MAN.
 - b) TEMP CONTROL selectors to mid positions.
 - c) RECIRC fan – RECIRC.
3. Allow the air conditioning system to stabilize. (Note CABIN DUCT, FC DUCT and CABIN temperatures on TEMPERATURE GAUGE using the GAUGE SWITCH).

Verify Manual Control Operates Normally

1. Select CABIN PACK switch to MAN position.
2. Rotate the CABIN TEMP CONTROL rotary knob to full WARM position.
3. After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is increasing, using the Temperature Gauge.
4. Rotate the CABIN TEMP CONTROL rotary knob to full COOL position.
5. After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is decreasing, using the Temperature Gauge.
6. Return the temperature control knobs to mid-range position.
7. Select appropriate engine or APU BLEED switch to OFF and OFF/MAN/AUTO PACKS switches to OFF.
8. Placard Cabin Temperature Control on AIR CONDITIONING panel in the flight compartment.
9. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-1 CABIN TEMP CONTROL****21-60-1-3 MAN Mode**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided AUTO control is verified operative.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the AUTO Temperature Control system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the MAN Temperature Control system and the Temperature Gauge function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative CABIN TEMP CONTROL Mode(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Start either No. 1 or No. 2 engine and select POWER lever to FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
2. If running engine select AIR CONDITIONING controls as follows:
 - a) Applicable BLEED 1 or 2 switch – BLEED 1 or 2.
 - b) OFF–MAN–AUTO PACKS switches to MAN.
 - c) TEMP CONTROL selectors to mid positions.
 - d) BLEED flow selector to – MAX.
 - e) RECIRC fan – RECIRC.

OR

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-1 CABIN TEMP CONTROL****21-60-1-3 MAN Mode**

If running APU, select BL AIR OPEN on APU Control Panel and select AIR CONDITIONING controls as follows:

- a) OFF-MAN-AUTO PACKS switches to MAN.
 - b) TEMP CONTROL selectors to mid positions.
 - c) RECIRC fan – RECIRC.
3. Allow the air conditioning system to stabilize. (Note CABIN DUCT, FC DUCT and CABIN temperatures on TEMPERATURE GAUGE using the GAUGE SWITCH).

Verify Automatic Control Operates Normally

1. Select CABIN PACK switch to AUTO position.
2. Rotate the CABIN TEMP CONTROL rotary knob to full WARM position.
3. After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is increasing, using the Temperature Gauge.
4. Rotate the CABIN TEMP CONTROL rotary knob to full COOL position.
5. After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is decreasing, using the Temperature Gauge.
6. Return the temperature control knobs to mid-range position.
7. Select appropriate engine or APU BLEED switch to OFF and OFF/MAN/AUTO PACKS switches to OFF.
8. Placard Cabin Temperature Control on AIR CONDITIONING panel in the flight compartment.
9. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-1. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-2 DUCT TEMP GAUGE**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided Flight Attendant Temperature Control is operative and flights are conducted in accordance with AFM supplement 85, Operation with inoperative CAB DUCT/CABIN/FC Duct Gauge.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DUCT TEMP Indicator or individual function must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard inoperative DUCT TEMP Indicator and/or function on AIR CONDITIONING panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-2 DUCT TEMP GAUGE****21-60-2-1 CABIN Temperature**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided Flight Attendant Temperature Control is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DUCT TEMP Indicator or individual function must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard inoperative DUCT TEMP Indicator and/or function on AIR CONDITIONING panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-2 DUCT TEMP GAUGE****21-60-2-2 CAB DUCT Temperature**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided flights are conducted in accordance with AFM supplement 85, Operation with Inoperative CAB DUCT/CABIN/FC Duct Gauge.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DUCT TEMP Indicator or individual function must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard inoperative DUCT TEMP Indicator and/or function on AIR CONDITIONING panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-2 DUCT TEMP GAUGE****21-60-2-3 FC DUCT Temperature**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided flights are conducted in accordance with AFM supplement 85, Operation with Inoperative CAB DUCT/CABIN/FC Duct Gauge.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DUCT TEMP Indicator or individual function must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard inoperative DUCT TEMP Indicator and/or function on AIR CONDITIONING panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-3 FLT COMP TEMP****21-60-3-1 AUTO and MAN Modes**

Interval	Installed	Required	Procedure
C	2	0	(M)

Both may be inoperative provided:

- The associated FLT COMP PACK is considered inoperative and is selected and remains OFF, and
- CABIN TEMP CONTROL (AUTO & MANUAL) is verified operative.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the AUTO Temperature Control system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the MAN Temperature Control system and the Temperature Gauge function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative FLT COMP TEMP CONTROL Mode(s) must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

- Start either No. 1 or No. 2 engine and select POWER lever to FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
- If running engine select the following on the AIR CONDITIONING panel:
 - Applicable BLEED #1 or #2 switch – BLEED 1 or BLEED 2.
 - OFF–MAN–AUTO PACKS switches to (CABIN and FLT COMP) – MAN.
 - TEMP CONTROL (CABIN and FLT COMP) selectors to midrange position.
 - BLEED flow selector – MAX.
 - RECIRC switch – RECIRC.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-3 FLT COMP TEMP****21-60-3-1 AUTO and MAN Modes**

OR

If running APU, select BL AIR OPEN on the APU Control Panel and select the following on the AIR CONDITIONING panel:

- a) OFF/MAN/AUTO PACKS switches (CABIN and FLT COMP) – MAN.
 - b) TEMP CONTROL (CABIN and FLT COMP) selectors to midrange position.
 - c) RECIRC switch – RECIRC.
3. Allow the air conditioning system to stabilize. (Note the CABIN DUCT and FC DUCT temperatures on Temperature Gauge by utilizing the CABIN GAUGE knob/switch on the AIR CONDITIONING panel).
4. Verify Manual (MAN) CABIN TEMP CONTROL operates normally
- a) Select CABIN PACK (Located on the left side, on the Air Conditioning Panel) to MAN position.
 - b) Rotate the CABIN TEMP CONTROL rotary knob to full WARM (clockwise) position.
 - c) After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is increasing, on the temperature gauge (CABIN DUCT selected on the CABIN GAUGE knob/switch).
 - d) Rotate the CABIN TEMP CONTROL rotary knob to full COOL (counter clockwise) position.
 - e) After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is decreasing, on the temperature gauge.
 - f) Return the CABIN TEMP CONTROL rotary knob to midrange position.
5. Verify Automatic (AUTO) CABIN TEMP CONTROL operates normally.
- a) Select CABIN PACK (Located on the left side, on the Air Conditioning Panel) to AUTO position.
 - b) Rotate the CABIN TEMP CONTROL rotary knob to full WARM (clockwise) position.
 - c) After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is increasing, on the temperature gauge (CABIN DUCT selected on the CABIN GAUGE knob/switch).
 - d) Rotate the CABIN TEMP CONTROL rotary knob to full COOL (counter clockwise) position.
 - e) After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is decreasing on the temperature gauge.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-3. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

21-60-3

FLT COMP TEMP

21-60-3-1

AUTO and MAN Modes

- f) Return the CABIN TEMP CONTROL rotary knob to midrange position.
- 6. Select appropriate engine, or APU BLEED switch to OFF, and OFF/MAN/AUTO PACKS switches to OFF.
- 7. Placard Flight Compartment Temperature Control on AIR CONDITIONING panel in the flight compartment.
- 8. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-3. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-3 FLT COMP TEMP****21-60-3-2 AUTO Mode**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- MAN control is verified operative, and
- DUCT TEMP indicator is verified operative.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the AUTO Temperature Control system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the MAN Temperature Control system and the Temperature Gauge function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative FLT COMP TEMP CONTROL Mode(s) must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

- Start either No. 1 or No. 2 engine and select POWER lever to FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
- If running engine select the following on the AIR CONDITIONING panel:
 - Applicable BLEED #1 or #2 switch – BLEED 1 or BLEED 2.
 - OFF–MAN–AUTO PACKS switches to (CABIN and FLT COMP) – MAN.
 - TEMP CONTROL (CABIN and FLT COMP) selectors to midrange position.
 - BLEED flow selector – MAX.
 - RECIRC switch – RECIRC.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-3 FLT COMP TEMP****21-60-3-2 AUTO Mode**

OR

If running APU, select BL AIR OPEN on the APU Control Panel and select the following on the AIR CONDITIONING panel:

- d) OFF/MAN/AUTO PACKS switches (CABIN and FLT COMP) – MAN.
 - e) TEMP CONTROL (CABIN and FLT COMP) selectors to midrange position.
 - f) RECIRC switch – RECIRC.
3. Allow the air conditioning system to stabilize. (Note the CABIN DUCT and FC DUCT temperatures on Temperature Gauge by utilizing the CABIN GAUGE knob/switch on the AIR CONDITIONING panel).

Verify Manual (MAN) FLT COMP TEMP CONTROL operates normally.

- 4. Select FLT COMP PACK switch to MAN position (Located on the right side, on the Air Conditioning Panel).
- 5. Rotate the FLT COMP TEMP CONTROL rotary knob to full WARM (clockwise) position
- 6. After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is increasing, on the temperature gauge (FC DUCT selected on the CABIN GAUGE knob/switch).
- 7. Rotate the FLT COMP TEMP CONTROL rotary knob to full COOL (counter clockwise) position.
- 8. After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is decreasing, on the temperature gauge.
- 9. Return the FLT COMP TEMP CONTROL rotary knob to midrange position.
- 10. Select appropriate engine, or APU BLEED switch to OFF, and OFF/MAN/AUTO PACKS switches to OFF.
- 11. Placard Flight Compartment Temperature Control on AIR CONDITIONING panel in the flight compartment.
- 12. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-3. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-3 FLT COMP TEMP****21-60-3-3 MAN Mode**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided AUTO control is operative.

Minimum Equipment List Procedures (MELP)

NOTE: Failure of the AUTO Temperature Control system is typically evident in flight. To avoid a ground delay, it is advantageous to verify operation of the MAN Temperature Control system and the Temperature Gauge function prior to landing. An appropriate entry must be made in the aircraft journey log.

Placard

Inoperative FLT COMP TEMP CONTROL Mode(s) must be placarded in the flight compartment.

Operating Procedures

None required

Maintenance Procedures

1. Start either No. 1 or No. 2 engine and select POWER lever to FLT IDLE, OR start APU (ensuring there is air in the Reservoir Tank to inflate the door seals).
2. If running engine select the following on the AIR CONDITIONING panel:
 - a) Applicable BLEED #1 or #2 switch – BLEED 1 or BLEED 2.
 - b) OFF-MAN-AUTO PACKS switches to (CABIN and FLT COMP) – MAN.
 - c) TEMP CONTROL (CABIN and FLT COMP) selectors to midrange position.
 - d) BLEED flow selector – MAX.
 - e) RECIRC switch – RECIRC.

OR

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE: 07-Jun-2024**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-3. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-3 FLT COMP TEMP****21-60-3-2 AUTO Mode**

If running APU, select BL AIR OPEN on the APU Control Panel and select the following on the AIR CONDITIONING panel:

13. OFF/MAN/AUTO PACKS switches (CABIN and FLT COMP) – MAN.
14. TEMP CONTROL (CABIN and FLT COMP) selectors to midrange position.
15. RECIRC switch – RECIRC.
3. Allow the air conditioning system to stabilize. (Note the CABIN DUCT and FC DUCT temperatures on Temperature Gauge by utilizing the CABIN GAUGE knob/switch on the AIR CONDITIONING panel).

Verify Automatic (AUTO) FLT COMP TEMP CONTROL operates normally.

4. Select FLT COMP PACK switch to AUTO position (Located on the right side, on the Air Conditioning Panel).
5. Rotate the FLT COMP TEMP CONTROL rotary knob to full WARM (clockwise) position
6. After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is increasing, on the temperature gauge (FC DUCT selected on the CABIN GAUGE knob/switch).
7. Rotate the FLT COMP TEMP CONTROL rotary knob to full COOL (counter clockwise) position.
8. After waiting approximately 60 to 90 seconds, confirm that the observed temperature trend is decreasing, on the temperature gauge.
9. Return the FLT COMP TEMP CONTROL rotary knob to midrange position.
10. Select appropriate engine, or APU BLEED switch to OFF, and OFF/MAN/AUTO PACKS switches to OFF.
11. Placard Flight Compartment Temperature Control on AIR CONDITIONING panel in the flight compartment.
12. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-3. 7



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-3. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AIR CONDITIONING******ATA 21*****21-60-4 Flight Attendant Control Panel – Cabin Temperature Control and CABIN TEMP indication**

Interval	Installed	Required	Procedure
C	-	0	NIL

One or all functions/indications may be inoperative provided cabin temperature control is available from the flight deck.

NOTE: Flight Attendant control of cabin temperature is not available if MANUAL cabin temperature control is selected in the cockpit.

Minimum Equipment List Procedures (MELP)**Placard**

Placard the Flight Attendant Control Panel to indicate the Cabin Temperature Control and CABIN TEMP indication is inoperative.

Operating Procedures

None required

Maintenance Procedures

1. Place a placard on the Flight Attendant Control Panel in the cabin to indicate the Cabin Temperature Control and CABIN TEMP indication is inoperative.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AIR CONDITIONING

ATA 21

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

21-60-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-1 A/P DISENG Annunciators (Glareshield)****22-10-1-1**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative.

NOTE:

1. RNP APCH (LNAV or LNAV/VNAV or LPV) operations permitted.
2. LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Autopilot Disengage Annunciators in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Flight Guidance Control Panel on the glareshield.
2. Make appropriate entry in the aircraft journey log.

— — — —**ISS III R05****APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-1 A/P DISENG Annunciators (Glareshield)****22-10-1-2**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided autopilot is not used.

NOTE:

1. One must be operative for RNP APCH (LNAV or LNAV/VNAV or LPV) operations.
2. LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Autopilot Disengage Annunciators in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Flight Guidance Control Panel on the glareshield.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R05**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-2 Autopilot****22-10-2-1 Autopilot**

Interval	Installed	Required	Procedure
B	1	0	NIL

Any mode functioning normally may be used.

NOTE:

- Must be operative for RNP APCH (LNAV or LNAV/VNAV or LPV) and CAT II operation.
- LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Autopilot in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative Autopilot in the flight compartment.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R05**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-2 Autopilot****22-10-2-2 Autopilot Pitch Trim System (AP PITCH TRIM FAIL)**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be inoperative provided:

- a) Manual pitch trim is operative,
- b) Autopilot is considered inoperative and not used, and
- c) Flap Auto Pitch Trim (AUTO TRIM FAIL) is considered inoperative and not used.

NOTE: Must be operative for CAT II operation.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Autopilot in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- 1. Placard inoperative Autopilot in the flight compartment.
- 2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-3 Tactile Control Steering (TCS) Switches****22-10-3-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative TCS switch(es) must be placarded on the control column handwheel(s).

Operating Procedures

None required.

Maintenance Procedures

1. Label relevant TCS switch(es) as "INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-3 Tactile Control Steering (TCS) Switches****22-10-3-2**

Interval	Installed	Required	Procedure
D	2	1	NIL

May be inoperative on the pilot not flying side.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative TCS switch(es) must be placarded on the control column handwheel(s).

Operating Procedures

None required.

Maintenance Procedures

1. Label relevant TCS switch(es) as "INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-4 Flight Guidance Control Panel (FGCP)****22-10-4-1**

Interval	Installed	Required	Procedure
C	1	1	NIL

Individual modes of operation may be inoperative provided that heading bugs, nav source selectors and course selection functions are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative flight guidance control panel indicators must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Label relevant inoperative switches/controls/indicators on flight guidance control panel as "INOP".
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-4 Flight Guidance Control Panel (FGCP)****22-10-4-2 Flight Guidance Control Panel Indicators (AP, HIS SEL only)**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative flight guidance control panel indicators must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Label relevant inoperative switches/controls/indicators on flight guidance control panel as "INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-5 Yaw Damper System**

Interval	Installed	Required	Procedure
B	1	0	(M)

May be inoperative.

NOTE:

1. Autopilot will not be available.
2. Cat II operation not permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Yaw Damper/Actuator must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Pull and clip circuit breakers: YD AU (E3); APAU ROLL (E2); APAU PITCH (E1); on the avionics circuit breaker panel.
2. Placard "AP/YD INOP" on flight guidance control panel.
3. If the Y/D actuator has failed, a rudder travel check should be made to confirm full rudder movement using the PFCS Indicator on the MFD. If the Y/D actuator has failed in a position other than the center position (ie. Failed in an extended or retracted position), the Y/D actuator must be replaced prior to dispatch.
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AUTOMATIC FLIGHT CONTROL

ATA 22

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-6 A/P DIS Switches****22-10-6-1**

Interval	Installed	Required	Procedure
B	2	0	(M)

May be inoperative provided the Autopilot is considered inoperative and not used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Control Wheel Disengage Switch/Switches must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Control wheel Switch on control wheel/wheels. Placard Flight Guidance Controller (Autopilot Switch) on glareshield panel if both switches are inoperative.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-6 A/P DIS Switches****22-10-6-2**

Interval	Installed	Required	Procedure
C	2	1	NIL

One may be inoperative provided:

- The Autopilot is not used below 1,000 ft. AGL,
- Approach minimums do not require the use of the autopilot, and
- The pilot flying has the operative disconnect.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Control Wheel Disengage Switch/Switches must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard Control wheel Switch on control wheel/wheels. Placard Flight Guidance Controller (Autopilot Switch) on glareshield panel if both switches are inoperative.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-7 Go-Around (GA) Switches****22-10-7-1**

Interval	Installed	Required	Procedure
C	2	1	(O)

One may be inoperative.

Minimum Equipment List Procedures (MELP)

Note: If one or both switches are failed in the “Failed Closed” (Continuously Signalling Go-Around) position, MEL relief is not applicable.

Placard

Inoperative “Go-Around (GA)” Switch/Switches must be placarded in the flight compartment.

Operating Procedures

Prior to first dispatch, before pressing the Go-Around (GA) switches, verify that “GO AROUND” mode is NOT annunciated in the Flight Mode Annunciator (FMA) section of the No. 1 and No 2. Primary Flight Displays (PFD). Neither “Wing LVL” nor “GA” should be annunciated.

1. If “GO AROUND” annunciation exists, one or both “GA” switches may be failed in the closed position.
2. If no “GO-AROUND” annunciation exists, press and release the operating “GA” switch and check that the “GO-AROUND” mode is annunciated in the FMA of the PFD 1 and/or 2, and that the pitch command and lateral command are set to the appropriate pitch and “WING LVL” respectively.

Maintenance Procedures

1. Placard the inoperative Go-Around switches in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 0 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-7. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUTOMATIC FLIGHT CONTROL******ATA 22*****22-10-7 Go-Around (GA) Switches****22-10-7-2**

Interval	Installed	Required	Procedure
A	2	0	(O)

May be inoperative for one flight day.

Minimum Equipment List Procedures (MELP)

Note: If one or both switches are failed in the “Failed Closed” (Continuously Signalling Go-Around) position, MEL relief is not applicable.

Placard

Inoperative “Go-Around (GA)” Switch/Switches must be placarded in the flight compartment.

Operating Procedures

Prior to first dispatch, before pressing the Go-Around (GA) switches, verify that “GO AROUND” mode is NOT annunciated in the Flight Mode Annunciator (FMA) section of the No. 1 and No 2. Primary Flight Displays (PFD). Neither “Wing LVL” nor “GA” should be annunciated.

1. If “GO AROUND” annunciation exists, one or both “GA” switches may be failed in the closed position.
2. If no “GO AROUND” annunciation exists, Disengage the Autopilot using A/P pushbutton and revert to wing level (Basic mode). Manually maintain pitch at 10 deg.

Maintenance Procedures

1. Placard the inoperative Go-Around switches in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

22-10-7. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-10-1 Communication Systems Transmitters and Receivers****23-10-1-1 VHF Communication System**

Interval	Installed	Required	Procedure
	2	2	NIL

Both VHF Communication Systems must be operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative VHF/HF Communications Systems must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Audio Remote Control Display Unit or other radio control with applicable "COMM INOP".
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-10-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-10-1 Communication Systems Transmitters and Receivers

23-10-1-2 HF Communication System

NOT APPLICABLE

— — — —

23-10-1 Communication Systems Transmitters and Receivers

23-10-1-3 HF Antenna coupler (KHF 1050HF System)

NOT APPLICABLE

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-10-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-10-2

“Flitefone (or equivalent)” System

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-10-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INETENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-10-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-20-1

SELCAL System

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-20-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-20-2

Aircraft Communications Addressing and Reporting System (ACARS)

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-1 Flight Deck Call Light**

Interval	Installed	Required	Procedure
B	2	0	NIL

May be inoperative provided the flight deck chime is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-2 Flight Deck EMER Light**

Interval	Installed	Required	Procedure
B	2	0	NIL

May be inoperative provided the flight deck chime is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-3 Flight Deck PA Light**

Interval	Installed	Required	Procedure
B	2	0	NIL

May be inoperative provided the flight deck chime is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-4 Flight Attendant Call Light (At handset)**

Interval	Installed	Required	Procedure
B	2	0	NIL

May be inoperative provided the PA System is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-5 Flight Attendant EMER Light (At handset)**

Interval	Installed	Required	Procedure
B	2	0	NIL

May be inoperative provided the PA System is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-6 Flight Attendant PA Light (At handset)**

Interval	Installed	Required	Procedure
B	2	0	NIL

May be inoperative provided the PA System is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-7 Flight Attendant ATT Light (At handset)**

Interval	Installed	Required	Procedure
B	2	0	NIL

May be inoperative provided the PA System is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

1. Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-8 Flight Attendant Advisory Lights Panels (ALPs)
Lights/Indicators**

Interval	Installed	Required	Procedure
B	-	0	NIL

May be inoperative provided:

- The PA System is operative, and
- Affected alert is not used for lavatory smoke detector alerting.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

- Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-1 Alerting System (CHIME/LIGHT)****23-30-1-9 Flight Attendant Chime**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be inoperative provided:

- The PA system is operative, and
- Affected alert is not used for lavatory smoke detector alerting.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Chimes and/or Call, PA, EMER Light function must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

None required

Maintenance Procedures

- Placard the ARCDUs and/or Flight Attendant's Handsets with "CHIMES INOP" and/or "CALL LIGHT INOP", "EMER LIGHT INOP", "PA LIGHT INOP" in the flight compartment and/or the passenger compartment.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DAT 0 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 9



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-1. 10

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-2 Pre-Recorded Announcement (Passenger Briefing) System****23-30-2-1**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Briefing/Entertainment System must be placarded in the passenger compartment.

Operating Procedures

Flight Attendant will make appropriate announcement in standard language.

Maintenance Procedures

1. Placard the PES (PASS ENT SYS) with "INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-30-2 Pre-Recorded Announcement (Passenger Briefing) System

23-30-2-2 All Cargo Operations

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-3 Passenger Address and Cabin Interphone System (PACIS)****23-30-3-1 Passenger Address System****23-30-3-1A Passenger Configuration**

Interval	Installed	Required	Procedure
B	1	0	(O)

May be inoperative provided:

- Alternate, normal and emergency procedures and/or operating restrictions are established and used,
- Flight deck to cabin (two way) interphone (including chime alerting system) is verified operative prior to each flight,
- Megaphone(s) is/are readily available and operative, and
- Operations are conducted with at least one flight attendant for 40 passengers or less, or two flight attendants for more than 40 passengers.

NOTE: Any station functions that operate normally may be used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Address System (PAS) must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

1. Communication from flight deck crew to cabin crew.

Emergency signal for SCC from flight deck - emergency exit lights flash on & off
Alternate brace and evacuate signals - More than 4 times flashing of seat belt sign.
Food trays should be always stowed and seat upright.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-3 Passenger Address and Cabin Interphone System (PACIS)****23-30-3-1 Passenger Address System****23-30-3-1A Passenger Configuration****2. Communication from cabin crew to passengers**

For passenger safety briefing and demonstration: SCC and L2 will stand on the first row. The SCC will use megaphone to make announcement and L2 will demonstrate. For safety related announcement, megaphone will be used. In emergency situations, shouted commands will be used i.e. brace commands, evacuation commands etc Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.8.2 Sub Point - 2.

NOTE: Megaphone to be replaced at base depending on strength of battery.

3. Verify that two-way communication between the flight compartment and passenger compartment using the cabin interphone system is operative prior to each flight.**Maintenance Procedures**

1. Placard all Flight Attendant PA switchlights and both pilot's ARCDUs with "PA INOP" in the passenger and flight compartment respectively.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****COMMUNICATIONS****ATA 23****23-30-3 Passenger Address and Cabin Interphone System (PACIS)****23-30-3-1 Passenger Address System****23-30-3-1B Non-Passenger Configuration**

Interval	Installed	Required	Procedure
A	1	0	(O)

May be inoperative for non-passenger carrying operations for one flight day provided:

- Crew members are the only occupants of the aircraft, and
- Alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Address System (PAS) must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

Communication from flight deck crew to cabin crew. Emergency signal from SCC from flight deck – emergency exit light flash on & off. Alternative brace and evacuate signals – More than 4 times flashing of seat belt sign. Food trays should be always stowed and seat upright.

Maintenance Procedures

- Placard all Flight Attendant PA switchlights and both pilot's ARCDUs with "PA INOP" in the passenger and flight compartment respectively.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-30-3 Passenger Address and Cabin Interphone System (PACIS)

23-30-3-1 Passenger Address System

23-30-3-1C Cargo Configuration

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST****COMMUNICATIONS****ATA 23****23-30-3 Passenger Address and Cabin Interphone System (PACIS)****23-30-3-2 Cabin Interphone System (Flight Deck to Cabin, and Cabin to Cabin)****23-30-3-2A Passenger Configuration**

Interval	Installed	Required	Procedure
B	-	1	(O)

May be inoperative provided:

- An operative flight deck to cabin (two way) interphone is at an operative flight attendant seat,
- The Passenger Address System is verified operative prior to each flight, and
- Alternate communications procedures are established and used.

NOTE: Any station functions that operate normally may be used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Interphone System (CIS) must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

- All announcements to be made by the crew at the operative station.
- Cabin and Galley Secure Check to be passed to the PIC from the crew at the operative station. [Appropriate hand signals (a thumbs up sign) to be used to pass the Cabin and Galley Secure Check from the crew at inoperative station to the crew at operative station. The crew at the operative station must acknowledge and reciprocate to the check by the said hand signals (a thumbs up sign)]
- In case of an emergency, the one who encounters the emergency first will call for back-up. It will be the responsibility of the back-up crew to inform the PIC.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-3. 5



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-30-3 Passenger Address and Cabin Interphone System (PACIS)

23-30-3-2 Cabin Interphone System (Flight Deck to Cabin, and Cabin to Cabin)

23-30-3-2A Passenger Configuration

NOTE: Maintain a continuous communication with the PIC.

4. Verify that the passenger Address System is operative prior to each flight.

Maintenance Procedures

1. Placard the Audio Remote Control Display Units indicating which function of the Cabin Interphone System is inoperative.
2. Placard inoperative Flight Attendant's Interphone select button with "INPH. INOP".
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-3. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST****COMMUNICATIONS****ATA 23****23-30-3 Passenger Address and Cabin Interphone System (PACIS)****23-30-3-2 Cabin Interphone System (Flight Deck to Cabin, and Cabin to Cabin)****23-30-3-2B Non-Passenger Configuration**

Interval	Installed	Required	Procedure
A	1	0	(O)

May be inoperative for non- passenger carrying operations for one flight day provided:

- Crew members are the only occupants of the aircraft, and
- Alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Interphone System (CIS) must be placarded in the flight compartment and the passenger compartment.

Operating Procedures

Following communication procedures are to be used:

- All announcements to be made by the crew at the operative station.
- Cabin and Galley Secure Check to be passed to the PIC from the crew at the operative stations. [Appropriate hand signals (a thumbs up sign,) to be used to pass the Cabin and Galley Secure Check from the crew at inoperative station to the crew at operative station. The crew at the operative station must acknowledge and reciprocate to the check by the said hand signals (a thumbs up sign)]
- In case of an emergency, the one who encounters the emergency first will call for back-up. It will be the responsibility of the back-up crew to inform the PIC.

NOTE: Maintain a continuous communication with the PIC.

Maintenance Procedures

- Placard the Audio Remote Control Display Units indicating which function of the Cabin Interphone System is inoperative.
- Placard inoperative Flight Attendant's Interphone select button with "INPH. INOP".
- Make appropriate entry in the aircraft journey log.

ISS III R00

APPROVED BY DAW DELHI, DATE -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-3. 7



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

- | | |
|-------------------|---|
| 23-30-3 | <u>Passenger Address and Cabin Interphone System (PACIS)</u> |
| 23-30-3-2 | Cabin Interphone System (Flight Deck to Cabin, and Cabin to Cabin) |
| 23-30-3-2C | Cargo Configuration |

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DAT 00 -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-3. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-30-4 Active Noise and Vibration Suppression System**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative.

NOTE: Aircraft may be dispatched with system operative in the DEGRADED mode with ANVS SYS DEGRADED lamp illuminated on the Maintenance Panel.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Active Noise and Vibration Suppression (ANVS) System must be placarded on the Flight Attendant Control Panel.

Operating Procedures

None required

Maintenance Procedures

NOTE: It is recommended the controller remain installed/powered until a replacement is available

1. PAUSE button pressed rather than turning the system OFF.

NOTE: If symptoms of hammering noise from ATVAs (Active Tuned Vibration Attenuators) become noticeable, perform Step 2, otherwise go to Step 3.

2. Select ANVS OFF at the control panel or open and clip the associated ANVS circuit breakers on the right DC circuit breaker panel.

NOTE:

1. PBMS (Propeller Balancing Monitoring System) will not be available, if installed.
2. Prolonged periods with ANVS OFF or open ANVS circuit breakers may cause damage to the ATVAs.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-30-4 Active Noise and Vibration Suppression System

3. Placard Forward Flight Attendant's Panel with "ANVS INOP".
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-30-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-40-1 Service Interphone System (Flight
Compartment to Ground Crew)****23-40-1-1**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Service Interphone System must be placarded in the flight compartment.

Operating Procedures

- 1) Verify to ground crew personnel before main cabin door is closed that Nose-Wheel Steering is selected off. (If pushback required)
- 2) Use standard hand signals as required.

Maintenance Procedures

1. Placard the Audio and Radio Control Display Unit (ARCDU) with "GND INTERPHONE INOP".
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-40-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-40-1 Service Interphone System (Flight
Compartment to Ground Crew)****23-40-1-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided procedures are not dependent on its use.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Service Interphone System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Audio and Radio Control Display Unit (ARCDU) with "GND INTERPHONE INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-1 Boom Microphone Push-To-Talk (PTT)
Switches**

Interval	Installed	Required	Procedure
C	4	2	(M)

May be inoperative provided one switch at each pilot's position is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Boom Microphone Push-To-Talk switches must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures**FOR FAILURE CONDITIONS OF THE PTT SWITCH(ES) FAILING TO TRANSMIT:**

1. No maintenance check is required.
2. Placard the respective PTT switch as INOP.
3. Make appropriate entry in the aircraft journey log.

FOR FAILURE CONDITIONS OF THE PTT SWITCH(ES) CAUSING CONTINUOUS TRANSMIT: Pilot and Co-pilot Control Column PTT Switch

1. Open the following circuit breakers:
 - a) PILOT (PLT) AUDIO - Left DC C/B Panel - 28V ESSENTIAL Bus
 - b) PILOT (PLT) AUDIO - Avionics C/B Panel - Right MAIN DC Bus
 - c) CO-PILOT (COPLT) AUDIO - Avionics C/B Panel - Right ESSENTIAL DC Bus
 - d) CO-PILOT (COPLT) AUDIO - Avionics C/B Panel - Left MAIN DC Bus
2. Ensure personnel and equipment are clear of aircraft elevator surfaces.
3. Pull back appropriate control column to access forward face of column.
4. Remove the appropriate retainer plate from forward face.
5. Disconnect the wires to the PTT switch at the appropriate terminal junction:

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-1 Boom Microphone Push-To-Talk (PTT) Switches**

- a) Pilot's switch at terminal junction 9811-TB"A" pin B1 (Wire 2350-0668C-24-4).
- b) Co-pilot's switch at terminal junction 9811-TB"H" pin C1 (Wire 2350-0677A-24-4).
6. Tape and stow the disconnected wires.
7. Close the circuit breakers opened in step (1) above.
8. At the ARCDU respective of the PTT switch, move the MIC select knob to "INT" position. At the opposite ARCDU, select "SERV/INT VOL" and speaker "SPKR VOL" to on, adjusting both to about mid-listening level. Using the affected PTT switch and respective BOOM MIC, confirm that no voice communication is possible over opposite cockpit speaker.
9. Install retainer plate.
10. Placard the control column with "PTT INOP".
11. Make appropriate entry in the aircraft journey log.

PTT Switch on Nose Wheel Steering Tiller

1. Open the following circuit breakers:
 - a) "PLT AUDIO" - on L ESSENTIAL dc bus
 - b) "NLG STEER CONT 1" - L Main.
 - c) "NLG STEER CONT 2" - R Main.
2. Remove side panel from pilot's side console to gain access to 3251-P3.
3. Disconnect 3251-P3 and remove wire 2350-2514A-22N-4 from pin 5.
4. Tape and stow wire and reconnect 3251-P3.
5. Close the circuit breakers.
6. At the Pilot's audio control panel respective of the PTT switch, move the MIC select knob to "INT" position. At the Co-pilot's audio control panel, select "SERV/INT VOL" and speaker "SPKR VOL" to on, adjusting both to about mid-listening level. Using the nose wheel steering tiller PTT switch and respective BOOM MIC, confirm that no voice communication is possible over opposite cockpit speaker.

CAUTION: Ensure gear ground locks are engaged and control surfaces clear of personnel.

7. Pressurize HYD SYS #2.
8. Switch on nose wheel steering using "STEERING" switch on pilot's side console.
9. Cycle steering tiller full travel in both direction and physically confirm nosewheel travel.
10. Confirm "NOSE STEERING" Caution Light is out.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-1 Boom Microphone Push-To-Talk (PTT)
Switches**

11. Depressurize #2 HYD system.
12. Install retainer plate.
13. Placard the pilot's side of console with "PTT INOP".
14. Make appropriate entry in the journey log.

XMIT Switch on the Co-pilot Side Console

1. Open the following circuit breakers:
 - a) "CO-PILOT AUDIO" - on R ESSENTIAL dc bus.
 - b) "CO PLT CB PANEL LTS" - on R ESSENTIAL dc bus
 - c) "PANEL LTS CO PLT FLT" - on R MAIN dc bus.
2. Remove Co-pilot side console side panel to gain access to connector 9811-P168.
3. Disconnect 9811-P168. Remove XMIT switch wire at connector pin b.
4. Tape and stow disconnect wire.
5. Reconnect 9811-P168 and reinstall side panel.
6. Close the circuit breakers.
7. At the Co-pilot's audio control panel respective of the PTT switch, move the MIC select knob to "INT" position. At the Pilot audio control panel, select "SERV/INT VOL" and speaker "SPKR VOL" to on, adjusting both to about mid-listening level. Using the affected XMIT switch and Co-pilot's BOOM MIC, confirm that no voice communication is possible over opposite cockpit speaker.
8. Install the side panel.
9. Placard the switch with "XMIT INOP".
10. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-2 Headsets**

Interval	Installed	Required	Procedure
D	3	2	NIL

One required at each pilot's station.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-3 Flight Compartment Speakers**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative provided:

- Procedures are not dependent on their use,
- Headsets are installed and used by each person on flight deck duty,
- All aural alerts, messages and other communication which are normally routed through the flight deck speakers must be audible through headsets, and
- A spare headset must be readily available for crew use.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Flight Compartment Speakers in the flight compartment.

Operating Procedures

Confirm aural warnings are present in the headset respective to each of the failed speakers by selecting the ADC TEST 1/2 switch on the pilot's side console and listening for the Overspeed Warning.

Maintenance Procedures

- Placard pilot and/or co-pilot flight compartment speakers on the speaker covers.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-4 Boom Microphones (incl. Headset mics)**

Interval	Installed	Required	Procedure
A	2	0	NIL

May be inoperative provided:

- The Flight Data Recorder (FDR) operates normally, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Boom Microphone(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard the defective microphone "Boom Mic INOP".
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-5 Cockpit Handheld Microphones**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided associated boom microphones are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cockpit Handheld Microphones must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Cockpit Handheld Microphones in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-6 Cabin Handsets**

Interval	Installed	Required	Procedure
B	-	1	(O)

May be inoperative provided:

- One cabin handset operates normally,
- Operative handset is located at an operative flight attendant seat, and
- Alternate communication procedures between the affected flight attendant station(s) are established and used.

NOTE: Any station that operates normally may be used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Handsets must be placarded in the flight compartment.

Operating Procedures

Alternative communication procedures for all necessary internal communications are established and used.

Maintenance Procedures

- Placard the inoperative Cabin Handset "HANDSET INOP".
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-6. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-7 Observer's Audio Control Panel****23-50-7-1**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be inoperative except when required by a person in an official capacity.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Audio Control Panel must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative ACP.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-7. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-50-7 Observer's Audio Control Panel****23-50-7-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided the seat is not required to be available in an official capacity for extended periods of time.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Audio Control Panel must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative ACP.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-50-7. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-60-1 Static Dischargers**

Interval	Installed	Required	Procedure
D	25	19	NIL

May be missing provided no more than one is missing from each control surface cluster.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Static Dischargers must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Static Dischargers on the glareshield.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-60-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-70-1****Cockpit Voice Recorder**

Interval	Installed	Required	Procedure
A	1	0	NIL

May be inoperative provided:

- The Flight Data Recorder is operative, and
- Aircraft may continue the flight or series of flights but does not depart from a station where rectification or replacement can be made.

NOTE: In case of Aircraft does not operate to a station where rectification or replacement can be made, it should be replaced within 24 hours elapsed time.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Cockpit Voice Recorder in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard the CVR Control Panel in flight compartment.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-70-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-70-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****COMMUNICATIONS******ATA 23*****23-80-1 ARCDU Radio Tuning Function (Aircraft with at least one FMS installed)**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative provided:

- FMS Radio Tuning Function of the inoperative ARCDU in “FMS” mode is verified operative.
- The operative ARCDU Radio Tuning Function is verified operative in “BOTH” or “FMS” mode.

NOTE: CAT II and RNAV 5 operations not permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative ARCDU1 or ARCDU2 tuning function must be placarded in the flight compartment.

Operating Procedures

The Tune Page, on the FMS display, is used to tune the aircraft radios, select and store preselected frequencies for each radio, and view the selected frequencies (active and preset) for each radio. The Tune Page is accessed from any mode by pressing the TUNE key on the FMS front panel.

If previous flight has confirmed the tuning function of the operative ARCDU in “BOTH” mode the following procedure is not required.

- Set operative ARCDU MODE selector to “BOTH” or “FMS” mode.
- Confirm tuning of pilot and co-pilot communication and navigation frequencies.
- Establish audio communication with tower.

FMS Radio Tuning Function of the failed ARCDU in “FMS” mode is verified operative as follows:

- Set the failed ARCDU in “FMS” mode.
- Use the FMS Control Display Unit –TUNE key for tuning the pilot and co-pilot communication and navigation frequencies.
- Repeat item 2 for all applicable radio units.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-80-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

COMMUNICATIONS

ATA 23

23-80-1 ARCDU Radio Tuning Function (Aircraft with at least one FMS installed)

Maintenance Procedures

1. Placard inoperative ARCDU in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

23-80-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-20-1 AC GEN 1 and AC GEN 2 VOLT Indications
(on ESID)**

Interval	Installed	Required	Procedure
C	6	0	NIL

May be inoperative provided:

- Associated electrical cautions are operative,
- Associated AC GEN LOAD Indication(s) are operative, and
- Both DC Generators are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative AC VOLT indication on ESID Electrical Page must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative AC VOLT indication INOP on ESID Control Panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ELECTRICAL POWER

ATA 24

**INETENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-20-2 AC GEN 1 and AC GEN 2 LOAD Indications
(on ESID)**

Interval	Installed	Required	Procedure
C	6	0	NIL

May be inoperative provided:

- Associated electrical cautions and/or warnings are operative,
- Associated AC GEN VOLT Indications are operative, and
- Both DC Generators are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative AC VOLT indication on ESID Electrical Page must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative AC LOAD INOP on ESID Control Panel.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ELECTRICAL POWER

ATA 24

**INETENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-20-3 #1 AC GEN and #2 AC GEN Caution Lights**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative provided:

- Associated AC GEN VOLT and AC GEN LOAD Indications are operative and are periodically monitored during flight, and
- Both AC Generators are verified operative prior to each flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative "AC GEN" Fail Caution Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard "AC GEN" Fail Caution Light on CAUTION LIGHT panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-20-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ELECTRICAL POWER

ATA 24

**INETENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-1****Transformer Rectifier Units (TRUs)**

Interval	Installed	Required	Procedure
B	2	1	(M)

May be inoperative provided:

- Both DC Starter/Generators are operative, and
- The inoperative TRU is deactivated.

NOTE: The TRU is also considered inoperative if the TRU cooling fan is degraded, malfunctioning or inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Transformer Rectifier Unit (TRU) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

NOTE: If Step 3, in regards to disconnecting the TRU Fan is to be carried out, Approved Maintenance Personnel as defined by (M#) is required. Step 3 is a conditional statement and such does not modify the rest of the maintenance procedures to explicitly require maintenance personnel.

- Placard inoperative Transformer Rectifier Unit on the CAUTION LIGHT panel.
- Open and clip failed L or R TRU circuit breaker on the 115 VAC circuit breaker panel.
- If the TRU cooling fan is the root cause of the TRU being considered inoperative, or needs to be deactivated with the TRU, it must be disconnected from the DC Secondary Bus using the following steps:
 - Disconnect the impacted TRU from the DC Contactor Box at the terminal on the DC Contactor Box
 - Terminal 3 (T3) for left TRU connection to DC Contactor Box, or
 - Terminal 4 (T4) for right TRU connection to DC Contactor Box.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-1 Transformer Rectifier Units (TRUs)**

- b) Apply a non-conductive covering on both the disconnected electrical connections (Terminal on DC Contactor Box and disconnected wire from Terminal).
- c) Stow loose wire in a manner such that it cannot inadvertently be knocked loose and make contact with any other connections within its vicinity.
4. Start Engines 1 and 2 and select CONDITION LEVERS above START/FX.
5. At DC CONTROL panel select the following to OFF POSITION:
 - a) GEN 1
 - b) GEN 2
 - c) EXTERNAL POWER
6. Ensure that battery switches are selected to BATTERY MASTER, MAIN BATT, AUX BATT, STBY BATT.
7. At AC CONTROL panel select GEN 1 and GEN 2 to OFF.
8. Check the following caution lights are on:
 - a) # 1 DC GEN
 - b) # 2 DC GEN
 - c) # 1 AC GEN
 - d) # 2 AC GEN
 - e) L TRU
 - f) R TRU
9. Ensure MAIN BATTERY, AUX BATTERY, STBY BATTERY caution lights are off.
10. At DC CONTROL panel select GEN 2 switch to GEN 2. Check that # 2 DC GEN caution light goes off.
11. At ESID Electrical page check that L and R MAIN and L and R ESS bus voltage reads 28.0 ± 2 Volts, and L SEC and R SEC bus voltage reads zero and the MAIN BATT, AUX BATT, STBY BATT LOAD indicates a charging current.
12. At ESID Electrical page, ESID LOAD indicator for DC GEN 2 displays load demand.
13. At DC CONTROL panel select GEN 1 switch to GEN 1. Check the # 1 DC GEN caution light goes off.
14. At ESID DC Electrical page check that all bus voltages read 28.0 ± 2 Volts.
15. At ESID Electrical page, LOAD indicator for DC GEN 1 displays load demand.
16. At AC CONTROL panel select GEN 1 or GEN 2 on.
17. Check appropriate L or R TRU caution light for operative TRU goes off.
18. At ESID Electrical monitor page, check that L SEC and R SEC bus reads 28 ± 2 Volts.
19. At ESID Electrical page, check LOAD indicator displays load demand of operative L TRU or R TRU.
20. Shutdown the engines.
21. Select BATTERY MASTER, MAIN BATT, AUX BATT and STBY BATT switches OFF.
22. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-2 DC Generator Control Unit - Start / Termination Function**

Interval	Installed	Required	Procedure
B	2	0	(O)

May be inoperative provided the start is manually terminated at 50% NH.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DC Generator control Unit must be placarded in the flight compartment.

Operating Procedures

1. Carry out associated engine(s) start in sequence in accordance with AFM Section 4 – NORMAL AND ABNORMAL PROCEDURES, item 4.1.5 – ENGINE START PROCEDURE.
2. Closely monitor associated NH indicator during starting and terminate start function by deselecting ENGINE START SELECT switch to center SELECT position (off) when NH indication shows positive acceleration beyond 50%.

Maintenance Procedures

1. Placard Engine Start SELECT switch on Engine Start panel on overhead console.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ELECTRICAL POWER

ATA 24

**INETENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-3 BATT °C Temperature Indications**

Interval	Installed	Required	Procedure
C	3	0	(O)

May be inoperative provided:

- The associated BAT HOT Warning Light(s) are verified operative, and
- The associated DC BATT LOAD Indication(s) are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Battery Temperature Indicator(s) must be placarded in the flight compartment.

Operating Procedures

- Perform test of Caution and Warning Panel to check that BAT HOT warning light illuminates.
- Respective battery load indications are monitored for any trend increasing charging current (+).
- If a battery overheat condition occurs, land immediately at the nearest suitable airport.

Maintenance Procedures

- Placard ESID Systems Display with "INOP" in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ELECTRICAL POWER

ATA 24

**INETENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-4 APU Generation System****24-30-4-1**

Interval	Installed	Required	Procedure
D	1	0	(M#)

May be inoperative provided:

- The cause of the malfunction is determined, and
- Appropriate action is taken to ensure that no hazard exists.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative APU Generation System must be placarded on the APU Control Panel near the GEN button.

Operating Procedures

None required.

Maintenance Procedures

- At the tailcone, open the APU compartment access doors and visually confirm integrity of electrical, fuel, pneumatic connections, and fire detection loop.
- Close APU access door.
- Perform fire detection test of APU loop.
- Start and run APU, confirm the "APU fault light" is not illuminated.
- At the APU Control Panel, when the PWR "RUN" light is illuminated, select the "BLEED" switch to on and confirm airflow from vents.
- Deselect "BLEED" and shut down APU.
- Placard the APU GEN button on the APU Control Panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-4 APU Generation System****24-30-4-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided the APU is considered inoperative and is not used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative APU Generation System must be placarded on the APU Control Panel near the GEN button.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the APU GEN button on the APU Control Panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-5 DC GEN LOAD Indications****24-30-5-1**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative provided both DC Generators are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DC GEN Load indicator must be placarded in the flight compartment.

Operating Procedures

Ensure all DC generators and TRUs operate normally using the following steps:

1. Check the load indications for the remaining channels.
2. Observe correct annunciation of caution lights, ie. All DC GEN and TRU caution lights out.

Maintenance Procedures

1. Placard DC GEN LOAD Indication on the ESID.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-5. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-5 DC GEN LOAD Indications****24-30-5-2**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative provided the inoperative Indication is associated with a failed DC Generator.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DC GEN Load indicator must be placarded in the flight compartment.

Operating Procedures

Ensure all DC generators and TRUs operate normally using the following steps:

1. Check the load indications for the remaining channels.
2. Observe correct annunciation of caution lights, i.e., All DC GEN and TRU caution lights out.

Maintenance Procedures

1. Placard DC GEN LOAD Indication on the ESID.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-6 DC Starter/Generation Systems**

Interval	Installed	Required	Procedure
B	2	1	(M#)(O)

One GCU and/or Generator may be inoperative in the generation mode only (i.e. DC GEN caution light illuminated) provided:

- The cause of the malfunctions is determined and appropriate action is taken to ensure that no hazard exists,
- The failed DC Generator is switched OFF, and
- Both Transformer Rectifier Units (TRUs) are verified operative, and
- Operations are conducted in compliance with AFM Supplement 92, OPERATION WITH ONE DC GENERATOR INOPERATIVE.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DC Starter/Generator (generation mode inoperative) must be placarded at the DC CONTROL panel in the flight compartment.

Operating Procedures

- Verify both transformer rectifier units (TRUs) are operating normally. Ensure L TRU and R TRU caution lights are out.
- Ensure Battery Master, Main Battery, Auxiliary Battery and Standby Battery switches are selected to BATTERY MASTER, MAIN BATT, AUX BATT and STBY BATT positions respectively on the DC CONTROL panel.
- Operations are to be conducted in compliance with AFM Supplement 92, OPERATION WITH ONE DC GENERATOR INOPERATIVE.

Maintenance Procedures

- Perform a visual inspection of inoperative starter/generator and surround for signs of overheat, leakage, wire damage and general conditions.
- Start engine on affected side (i.e. side with DC Generator inoperative) to verify the start function operates normally and select power lever to FLT IDLE. Ensure all AC and DC electrical system circuit breakers are closed.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-30-6****DC Starter/Generation Systems**

3. Ensure Battery Master, Main Battery, Auxiliary Battery and Standby Battery switches are selected to BATTERY MASTER, MAIN BATT, AUX BATT and STBY BATT positions respectively and select EXTERNAL POWER to OFF, on the DC CONTROL panel.
4. Select the DC GEN switch, failed generator, to OFF position on the DC CONTROL Panel.
5. At AC CONTROL panel select associated generator switch to GEN 1 or GEN 2 position.
6. Check that the respective AC GEN caution light goes out.
7. Select Electrical page on ESID. Check for 115 VOLTS indication on all phases.
8. Ensure TRU caution lights are out.
9. At ESID Electrical page, check that DC LOAD meter indicates a load when L TRU and R TRU are selected respectively and the L SEC and R SEC buses indicate 28 ± 3 volts on the DC BUS VOLTS indicator when selected to associated DC bus.
10. Shut down engine.
11. Placard inoperative DC Starter/Generator (generation mode inoperative) at the DC CONTROL panel in the flight compartment.
12. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-30-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-40-1 AC External Power System**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative AC External Power System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard EXT POWER switch on AC CONTROL panel on overhead console.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-40-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ELECTRICAL POWER

ATA 24

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ELECTRICAL POWER******ATA 24*****24-40-2 DC External Power System**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DC External Power System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard EXT POWER switch on DC CONTROL panel on overhead console.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-40-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ELECTRICAL POWER

ATA 24

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

24-40-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-1 Forward Observer Seat (including associated equipment)****25-10-1-1**

Interval	Installed	Required	Procedure
B	1	0	(M)

May be inoperative provided the seat is removed, stowed, or secured in the retracted position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Forward Observer Seat must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Forward Observer Seat.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-1 Forward Observer Seat (including associated equipment)****25-10-1-2**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative provided:

- The seat is not required to be occupied in an official capacity for extended periods of time, and
- The seat is removed, stowed, or secured in the retracted position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Forward Observer Seat must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative Forward Observer Seat.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-1 Vertical Mode Adjustment**

Interval	Installed	Required	Procedure
C	2	0	(M#)

Vertical adjustment may be inoperative provided the seat is secured in a position, which meets individual pilot requirements.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Vertical Mode must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Vertical adjustment metering pins are spring loaded to engage and lock in metering holes in vertical seat tubes. To adjust seat, manually unseat metering pins and position seat to desired height. Vertical adjustment metering pins will engage in vertical seat tubes and lock.
2. Have crew member sit in seat and adjust vertical position to desired height.
3. Repeat steps (1) and (2) as required to achieve desired seat adjustment.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-2 Fore/Aft Mode**

Interval	Installed	Required	Procedure
B	2	0	(M#)

Fore/aft adjustment may be inoperative provided the seat is secured in a position, which meets individual pilot requirements.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Fore/aft Mode must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Fore/aft adjustment metering pins are spring loaded to engage and lock in metering holes in the seat rails. To adjust, manually unseat pins and position seat to desired location. Fore/aft metering pins will lock in place.
2. Have crew member sit in seat and adjust fore/aft position to desired location.
3. Repeat steps (1) and (2) as required to achieve desired seat adjustment.
4. Placard inoperative seat in flight compartment.
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-3 Crew Armrests**

Interval	Installed	Required	Procedure
C	4	0	(M#)

May be inoperative provided the armrest(s) is (are) removed from the seat.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Crew Armrest(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Remove inoperative crew armrest from the seat.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-10-2 Pilot's Seat Adjustments****25-10-2-4 Lumber Support**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative in the lowest position provided the seat is acceptable to the affected crew member.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Lumber Support must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative or damaged lumber support in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-5 Lumbar Support Padding**

Interval	Installed	Required	Procedure
D	2	0	NIL

May be worn or damaged if acceptable to the affected crew member.

Minimum Equipment List Procedures (MELP)**Placard**

Damaged Lumbar Support padding must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative or damaged lumbar support in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-6 Recline Mechanism**

Interval	Installed	Required	Procedure
B	2	0	(M#)

May be inoperative provided backrest is secured in a position acceptable to the affected crew member.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative recline mechanism must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Recline adjustment metering pins are spring loaded to engage and lock in metering holes. To adjust back rest of seat manually unseat pins and adjust to desired angle of recline. Recline adjustment metering pins will lock in place.
2. Have crew member sit in seat and adjust desired angle of recline.
3. Repeat steps (1) and (2) as required to achieve desired seat adjustment.
4. Placard inoperative seat in flight compartment.
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-3 Pilot's Seat Heaters****25-10-3-1**

Interval	Installed	Required	Procedure
D	2	1	(M#)

May be inoperative provided the affected Heater is deactivated.

NOTE: Applicable only for VT-SUQ.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Seat Heater(s) must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Open and clip the Right Secondary Bus circuit breaker "FLT CREW SEAT HTRS" on the Right DC Circuit Breaker Panel.
2. Disconnect, cap and stow appropriate connector (2511-P1 for the pilot's seat and 2511-P2 for the co-pilot's seat).
3. Reset circuit breaker.
4. Placard the affected seat "SEAT HEATER INOP" in the Flight Compartment.
5. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-3 Pilot's Seat Heaters****25-10-3-2**

Interval	Installed	Required	Procedure
D	2	0	(M)

May be inoperative provided the affected Heater is deactivated.

NOTE: Applicable only for VT-SUQ.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Seat Heater(s) must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Open and clip the Right Secondary Bus circuit breaker "FLT CREW SEAT HTRS" on the Right DC Circuit Breaker Panel.
2. Placard the affected seat "SEAT HEATER INOP" in the flight compartment.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-1 Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF)****25-20-1-1 Passenger Convenience Items**

Interval	Installed	Required	Procedure
	-	0	NIL

May be inoperative, damaged or missing provided that the item(s) is (are) deferred in accordance with the SpiceJet's Cabin Deferred Defect Policy.

NOTE:

1. Exterior lavatory door ash tray is not considered a convenience item.
2. Galley equipment restraining devices such as latches, etc. must be serviceable or the compartment must not be used for storage and placarded "INOPERATIVE - DO NOT USE".
3. Movie equipment individual screens, if applicable, must be capable of being stowed.
4. Audio or audio-visual entertainment equipment which is used as the sole means of providing safety briefings and demonstrations is not considered a passenger convenience item.
5. Items considered to be PCI are: PAX window blinds, Galley/Wardrobe Inserts, PSU Reading Lights/Louvre, Food Tray, Magazine Pocket, and Armrest Cover.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF) must be placarded.

Operating Procedures

None required.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

**25-20-1 Passenger Convenience Items / Non-Essential
Equipment and Furnishings (NEF)**

25-20-1-1 Passenger Convenience Items

Maintenance Procedures

1. Placard appropriate inoperative Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF).
2. To be developed by operator, as necessary, such that relevant safety standards are maintained.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-1 Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF)****25-20-1-2 Non-Essential Equipment and Furnishings (NEF)**

Interval	Installed	Required	Procedure
	-	0	NIL

May be inoperative, damaged or missing provided that the item(s) is (are) deferred in accordance with the SpiceJet's Cabin Deferred Defect Policy.

NOTE:

1. Exterior lavatory door ash trays are not considered NEF items.
2. Items considered to be NEF are: LAV Soap Dispenser/Paper Holder, Cabin Trim Panels and Passenger to Attendant Call System.
3. Items addressed elsewhere in the MEL document cannot be considered for NEF relief.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF) must be placarded.

Operating Procedures

To be developed by operator, as necessary, such that relevant safety standards are maintained.

*(...Continued)***25-20-1 Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF)**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-1-2

Non-Essential Equipment and Furnishings (NEF)

Maintenance Procedures

1. Placard appropriate inoperative Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF).
2. To be developed by operator, as necessary, such that relevant safety standards are maintained.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2A**

Interval	Installed	Required	Procedure
C	38/40	-	(M)

May be inoperative provided:

- Procedures are established to secure bins/compartments/closets CLOSED,
- Associated bin/compartment/closet is prominently placarded "INOPERATIVE – DO NOT USE",
- Any emergency equipment located in affected bin/compartment/closet is considered inoperative, and
- Affected bin/compartment/closet is not used for storage of any item(s) except for those permanently affixed.

NOTE:

- If no partitions are installed, the entire overhead storage compartment is considered to be one bin or compartment.
- An inoperative door/lid latch renders the door/lid inoperative.
- Required quantity of emergency equipment must be observed.
- Qty 40 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative overhead, cabin and galley storage bins/compartments and closets must be placarded. If items affixed on doors are moved, placard the old location and new location indicating moved equipment.

Operating Procedures

None required.

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

(...Continued)

25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets

25-20-2A

Maintenance Procedures

1. Placard inoperative overhead storage bins, cabin or galley storage compartment/closets "INOPERATIVE – DO NOT USE".
2. Ensure storage bin/compartment/closet is empty other than those items permanently affixed and secure bin/compartment/closet door/lid in closed position.
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2B**

Interval	Installed	Required	Procedure
C	38/40	-	(M)(O)

May be inoperative provided:

- Affected bin/compartments/closet door(s) is (are) removed,
- Associated bin/compartments/closet is not used for storage of any item(s), except for those permanently affixed,
- Items located on removed doors/lids are relocated to the nearest feasible location and their original and new location are placarded.
- Associated bin/compartments/closet is prominently placarded "INOPERATIVE – DO NOT USE",
- Procedures are established and used to alert crew members and passengers of inoperative bins/compartments/closets, and
- Passengers are briefed that associated bin/compartments/closet is not used.

NOTE:

- If no partitions are installed, the entire overhead storage compartment is considered to be one bin or compartment.
- Any emergency equipment located in the associated compartment (permanently affixed) is available for use.
- An inoperative door/lid latch renders the door/lid inoperative.
- Qty 40 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative overhead, cabin and galley storage bins/compartments and closets must be placarded. If items affixed on doors are moved, placard the old location and new location indicating moved equipment.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2B****Operating Procedures**

Procedures are established and used to alert crew members and passengers of inoperative bins, compartments or closets, relocated equipment, and passengers are briefed that affected bins, compartments or closets are not to be used.

Maintenance Procedures

1. Remove overhead storage bin, cabin or galley storage compartment/closet door/lid.
2. Ensure storage bin/compartment/closet is empty other than those items permanently affixed.
3. If there is any equipment (Emergency or otherwise) that is affixed on the door / lid that is being removed:
 - a) Relocate the equipment to the nearest feasible location for which that emergency equipment was meant for,
 - b) Make sure equipment is secured in a manner as to allow easy removal and access.
 - c) Placard the original location area where the equipment has been relocated to,
 - d) Placard the new location indicating the availability of the relocated equipment.
4. Placard inoperative overhead storage bins, cabin or galley storage compartments/closets "INOPERATIVE – DO NOT USE".
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-1 Quarter Turn Latches/Fasteners****25-20-2-1A**

Interval	Installed	Required	Procedure
C	-	-	(O)

Bin/compartments/closet with multiple latches/fasteners may have one inoperative provided:

- The remaining latch(es) on affected bin/compartments/closet operates normally, and
- Inoperative latch/fastener is placarded "INOPERATIVE".

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative latch/fastener.

Operating Procedures

Procedures are established and used to alert crew member of an inoperative latch and to inform them to exercise extra care in latching / unlatching compartments with mobile / loose galley equipment / trolleys. Inoperative latch should be / remain in unlatched position if utilizing the associated bin / latch / closet.

Maintenance Procedures

- Placard inoperative latch / fastener, "INOPERATIVE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-1 Quarter Turn Latches/Fasteners****25-20-2-1B**

Interval	Installed	Required	Procedure
C	-	-	(O)

More than one latch, or all latches on a bin/compartments/closet may be inoperative provided:

- Affected bin/compartments/closet is not used for storage of any items except for those permanently affixed,
- Affected bin/compartments/closet is permanently placarded "INOPERATIVE – DO NOT USE", and
- Procedures are established and used to alert crew members and passengers of inoperative bins/compartments/closets.

Minimum Equipment List Procedures (MELP)**Placard**

Bin/compartments/closet with more than one of its latch(es) inoperative must be placarded.

Operating Procedures

Procedures are established and used to alert crew members of inoperative bins, compartments or closets, and are briefed that affected bins, compartments or closets are not to be used, including storage of trolley / galley carts.

Maintenance Procedures

- Placard inoperative bin / compartment / closet, "INOPERATIVE – DO NOT USE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-2 Storage Compartment Key Locks**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative in the unlocked position provided doors can be secured by other means.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

1. Procedures are established and used to secure bin, compartment or closet with an inoperative key lock by other means.
2. Verify that security of storage compartment is not degraded considerably when utilizing alternate means. Otherwise, any equipment required to be behind lock and key must be either relocated or another secure location or removed.
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 7



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2A**

Interval	Installed	Required	Procedure
C	38/40	-	(M)

May be inoperative provided:

- Procedures are established to secure bins/compartments/closets CLOSED,
- Associated bin/compartment/closet is prominently placarded "INOPERATIVE – DO NOT USE",
- Any emergency equipment located in affected bin/compartment/closet is considered inoperative, and
- Affected bin/compartment/closet is not used for storage of any item(s) except for those permanently affixed.

NOTE:

- If no partitions are installed, the entire overhead storage compartment is considered to be one bin or compartment.
- An inoperative door/lid latch renders the door/lid inoperative.
- Required quantity of emergency equipment must be observed.
- Qty 40 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative overhead, cabin and galley storage bins/compartments and closets must be placarded. If items affixed on doors are moved, placarded the old location and new location indicating moved equipment.

Operating Procedures

None required.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

**25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets**

25-20-2A

Maintenance Procedures

1. Placard inoperative overhead storage bins, cabin or galley storage compartment/closets "INOPERATIVE – DO NOT USE".
2. Ensure storage bin/compartment/closet is empty other than those items permanently affixed and secure bin/compartment/closet door/lid in closed position.
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2B**

Interval	Installed	Required	Procedure
C	38/40	-	(M)(O)

May be inoperative provided:

- Affected bin/compartment/closet door(s) is (are) removed,
- Associated bin/compartment/closet is not used for storage of any item(s), except for those permanently affixed,
- Items located on removed doors/lids are relocated to the nearest feasible location and their original and new location are placarded.
- Associated bin/compartment/closet is prominently placarded "INOPERATIVE – DO NOT USE",
- Procedures are established and used to alert crew members and passengers of inoperative bins/compartments/closets, and
- Passengers are briefed that associated bin/compartment/closet is not used.

NOTE:

- If no partitions are installed, the entire overhead storage compartment is considered to be one bin or compartment.
- Any emergency equipment located in the associated compartment (permanently affixed) is available for use.
- An inoperative door/lid latch renders the door/lid inoperative.
- Qty 40 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative overhead, cabin and galley storage bins/compartments and closets must be placarded. If items affixed on doors are moved, placard the old location and new location indicating moved equipment.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2B****Operating Procedures**

Procedures are established and used to alert crew members and passengers of inoperative bins, compartments or closets, relocated equipment, and passengers are briefed that affected bins, compartments or closets are not to be used.

Maintenance Procedures

1. Remove overhead storage bin, cabin or galley storage compartment/closet door/lid.
2. Ensure storage bin/compartment/closet is empty other than those items permanently affixed.
3. If there is any equipment (Emergency or otherwise) that is affixed on the door / lid that is being removed:
 - a) Relocate the equipment to the nearest feasible location for which that emergency equipment was meant for,
 - b) Make sure equipment is secured in a manner as to allow easy removal and access.
 - c) Placard the original location area where the equipment has been relocated to,
 - d) Placard the new location indicating the availability of the relocated equipment.
4. Placard inoperative overhead storage bins, cabin or galley storage compartments/closets "INOPERATIVE – DO NOT USE".
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-1 Quarter Turn Latches/Fasteners****25-20-2-1A**

Interval	Installed	Required	Procedure
C	-	-	(O)

Bin/compartments/closet with multiple latches/fasteners may have one inoperative provided:

- The remaining latch(es) on affected bin/compartments/closet operates normally, and
- Inoperative latch/fastener is placarded "INOPERATIVE".

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative latch/fastener.

Operating Procedures

Procedures are established and used to alert crew member of an inoperative latch and to inform them to exercise extra care in latching / unlatching compartments with mobile / loose galley equipment / trolleys. Inoperative latch should be / remain in unlatched position if utilizing the associated bin / latch / closet.

Maintenance Procedures

- Placard inoperative latch / fastener, "INOPERATIVE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-1 Quarter Turn Latches/Fasteners****25-20-2-1B**

Interval	Installed	Required	Procedure
C	-	-	(O)

More than one latch, or all latches on a bin/compartments/closet may be inoperative provided:

- Affected bin/compartments/closet is not used for storage of any items except for those permanently affixed,
- Affected bin/compartments/closet is permanently placarded "INOPERATIVE – DO NOT USE", and
- Procedures are established and used to alert crew members and passengers of inoperative bins/compartments/closets.

Minimum Equipment List Procedures (MELP)**Placard**

Bin/compartments/closet with more than one of its latch(es) inoperative must be placarded.

Operating Procedures

Procedures are established and used to alert crew members of inoperative bins, compartments or closets, and are briefed that affected bins, compartments or closets are not to be used, including storage of trolley / galley carts.

Maintenance Procedures

- Placard inoperative bin / compartment / closet, "INOPERATIVE – DO NOT USE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-2 Storage Compartment Key Locks**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative in the unlocked position provided doors can be secured by other means.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

1. Procedures are established and used to secure bin, compartment or closet with an inoperative key lock by other means.
2. Verify that security of storage compartment is not degraded considerably when utilizing alternate means. Otherwise, any equipment required to be behind lock and key must be either relocated or another secure location or removed.
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 7



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-3 Megaphones****25-20-3-1**

Interval	Installed	Required	Procedure
	1	1	NIL

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**25-20-3. 1**



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-3

Megaphones

25-20-3-2

All Cargo Operations

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-4 Flight Attendant Seat****25-20-4-1 Required Flight Attendant Seats**

Interval	Installed	Required	Procedure
B	2	1	(M)(O)

One seat may be inoperative provided:

- Affected seat is not occupied,
- Affected flight attendant displaced by inoperative seat occupies the passenger seat which is most accessible to the inoperative seat, so as to most effectively perform assigned duties,
- Alternate procedures are established and used as published in the crew member manuals,
- Folding type seat stows automatically or is removed, stowed, or secured in the retracted position, and
- Passenger seat assigned to the flight attendant is placarded "FOR FLIGHT ATTENDANT USE ONLY".

NOTE:

- If automatic stow feature of a folding seat is inoperative, the seat is considered inoperative and must be secured in the stowed position.
- A seat position with a missing or inoperative required component, such as safety belt (including shoulder harness) or headrest, renders the seat inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Attendant Seat and Passenger Seat assigned to flight attendant must be placarded.

Operating Procedures

If the Jump Seat is INOP Inflight- the crew is supposed mark it INOP, using the shoulder harness; inform the PIC and take his advise with reference to the alternate seat to be occupied (it has to be the nearest possible seat to the assigned exit, as per Rule 38B); mention the

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-4 Flight Attendant Seat****25-20-4-1 Required Flight Attendant Seats**

defect in CDLB; get it signed by PIC and inform the engg. on arrival On Ground- the defect to be notified to PIC/ AME immediately and follow PIC instructions. Interphone/PA Unserviceable. Reference is drawn to SEP Manual Ch 6B

Maintenance Procedures

1. Placard Flight Attendant Seat "INOPERATIVE".
2. Folding Flight Attendant's Seat must be secured in the retracted (up) position.

NOTE: If the seat pan cannot be secured in the retracted position, it must be removed (refer to Chapter 25, Section 22 of the Aircraft Maintenance Manual PSM 1-84-2).

3. Placard Passenger Seat assigned to flight attendant "FOR FLIGHT ATTENDANT USE ONLY".
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-4 Flight Attendant Seat****25-20-4-2 Excess Equipment**

Interval	Installed	Required	Procedure
D	-	-	(M)

(M) Seats in excess of requirements and not assigned to a flight attendant may be inoperative provided they are placarded, not occupied, and are:

- Properly stowed, or
- Secured in the retracted position, or
- Removed.

NOTE:

- If automatic stow feature of a folding seat is inoperative, the seat is considered inoperative and must be secured in the stowed position.
- A seat position with a missing or inoperative required component, such as safety belt (including shoulder harness) or headrest, renders the seat inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Attendant Seat and Passenger Seat assigned to flight attendant must be placarded.

Operating Procedures

None required.

Maintenance Procedures

- Placard Flight Attendant Seat "INOPERATIVE".
- Folding Flight Attendant's Seat must be secured in the retracted (up) position.

NOTE: If the seat pan cannot be secured in the retracted position, it must be removed (refer to Chapter 25, Section 22 of the Aircraft Maintenance Manual PSM 1-84-2).

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-4. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-4 Flight Attendant Seat

25-20-4-2 Excess Equipment

3. Placard Passenger Seat assigned to flight attendant “FOR FLIGHT ATTENDANT USE ONLY”.
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-4. 4



**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-20-5 Passenger Seats****25-20-5-1 Recline Mechanism**

Interval	Installed	Required	Procedure
D	78/90	-	(M)

May be inoperative and the affected seat occupied provided the seat is secured in the full upright position.

NOTE: Qty 90 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures**1. Securing Seat Model 925 / 935 Seat Backs**

Tools Required: Snap Ring Pliers

- Remove and retain bottom cushion to access seat recline mechanism.
- Rotate clear, plastic barrel to adjust mechanism. As barrel is rotated, brass tab inside barrel will move up or depending upon direction of rotation.
- To secure back in fully upright position, rotate barrel until brass tab is at the top of the recline lock mechanism.
- Reinstall retained snap ring in slot of mechanism (between spring and barrel).
- Reinstall retained bottom cushion.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-5 Passenger Seats****25-20-5-1 Recline Mechanism****2. Securing Slimplus Model Seat Backs**

Equipment Required: Slimplus Recline Spacers (X4) or similar part

- a) Remove and retain bottom cushion to access seat recline mechanism.
- b) Pull locking pin located under fore of seat bottom. Pin is visible through the viewing hole located forward– center of the seat bottom.
- c) Lift seat bottom until it is vertical and against seat back. Recline mechanism should now be accessible.
- d) Operative seat with recline mechanism will have 2 Spacers already installed to control recline mechanism angle.
- e) Install 4 more Spacers flush with the already installed 2 Spacers. The 6 Spacers should now be flush from the canister down to the locking bolt's thread.
- f) Return seat bottom to horizontal position taking care to guide seat bottom rails through the guides located on the seat's front bar.
- g) Reinstall locking pin and verify seat bottom is secured.
- h) Reinstall retained bottom cushion.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-5 Passenger Seats****25-20-5-2 Armrest with Recline Mechanism**

Interval	Installed	Required	Procedure
D	78/90	-	(M)

May be inoperative, damaged, or missing, and seat occupied provided:

- The affected armrest does not block an emergency exit,
- The affected armrest does not restrict any passenger from access to the main aircraft aisle, and
- If armrest is missing, seat back is secured in the full upright position

NOTE: Qty 90 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- If armrest is missing, seat back is secured in the full upright position.
- If armrest restricts access to aircraft aisle, seat must be placarded "DO NOT OCCUPY" and blocked to prohibit use. May be necessary to block off aft row if inoperative seat restricts passenger access to main aisle.
- If armrest restricts access through the aircraft aisle or is not in a horizontal position, armrest must be removed and seat back secured in full upright position.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-5 Passenger Seats****25-20-5-3 Armrest without Recline Mechanism**

Interval	Installed	Required	Procedure
D	39/45	-	(M)

May be inoperative, damaged, or missing, and seat occupied provided:

- The affected armrest does not block an emergency exit, and
- The affected armrest does not restrict any passenger from access to the main aircraft aisle.

NOTE: Qty 45 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- If armrest restricts access to aircraft aisle, seat must be placarded "DO NOT OCCUPY" and blocked to prohibit use. May be necessary to block off aft row or aft inboard seat if inoperative seat restricts passenger access to main aisle.
- If armrest restricts access through the aircraft aisle or is not in a horizontal position, armrest must be removed.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-5 Passenger Seats****25-20-5-4 Tray table in the unstowed position**

Interval	Installed	Required	Procedure
D	78/90	-	(M)

May be inoperative provided:

- The affected tray table does not block an emergency exit,
- The affected tray table does not restrict any passenger from access to the main aircraft aisle, and
- The affected seats are blocked and placarded "DO NOT OCCUPY".

NOTE:

- A missing, or inoperative tray table in the stowed position is a Passenger Convenience/Non-Essential Equipment and Furnishings item.
- Affected seats may include those aft of the unstowed tray table if they restrict access to the aircraft aisle.
- Qty 90 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- For Seat Back Tray Tables:
 - The seat aft of a seat with an inoperative unstowed tray table must be blocked and placarded "DO NOT OCCUPY".

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-5 Passenger Seats

25-20-5-4 Tray table in the unstowed position

- b) If tray table is inoperative in unstowed position, and is located such that it blocks access to the main aircraft aisle, (i.e. located on the inboard seat), both affected aft seats must be blocked and placarded "DO NOT OCCUPY".
- 2. For In-Arm Tray Tables:
 - a) A seat with an inoperative unstowed tray table must be blocked and placarded "DO NOT OCCUPY".
 - b) If tray table is inoperative in unstowed position, and is located such that it blocks access to the main aircraft aisle, (i.e. located on the inboard seat), both affected seats must be blocked and placarded "DO NOT OCCUPY".
- 3. Make appropriate entry in the aircraft journey log.

NOTE: An inoperative tray table in the stowed position is a Passenger Convenience/Non-Essential Equipment and Furnishings item.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 7



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-6****“Fasten Seat Belt While Seated” and “No Smoking” Signs or Placards**

Interval	Installed	Required	Procedure
C	76/88	-	NIL

One or more signs or placards may be illegible or missing provided a legible sign or placard is readable from each occupied passenger seat.

NOTE: Qty 88 is applicable for VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-6. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-7 Lavatory “NO SMOKING” Placard**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be missing provided the lavatory smoke detection system is operative.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-7. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-7. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-8

Flight Attendant's Seat Heaters

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-8. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-8. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-9****Flight Attendant Reading Light**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative provided a suitable alternate light source is available.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Attendant Reading Light must be placarded.

Operating Procedures

Alternative procedures for using existing cabin lighting or handheld flashlight as light source for flight attendant duties that requires reading on flight attendant station should be developed and used.

Maintenance Procedures

1. Placard Flight Attendant Reading Light switch with "LIGHT INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-9. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-9. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-10 Passenger Service Unit (PSU)****25-20-10A**

Interval	Installed	Required	Procedure
C	41 / 47	-	(M)

Passenger seats from which “No Smoking/Fasten Seat Belt” light is not readily legible shall not be occupied and must be blocked and placarded “DO NOT OCCUPY”.

NOTE : Qty 47 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Service Unit must be placarded in the flight and passenger compartments.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the affected PSU on the PSU panel and Flight Attendant’s LIGHTING panel.
2. Placard appropriate inoperative passenger convenience / NEF items.
3. Block each seat in the passenger compartment from which an operative “No Smoking/Fasten Seat Belt” sign is not readily legible and placard the affected seat(s) “DO NO OCCUPY”.
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-10. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-10 Passenger Service Unit (PSU)****25-20-10B**

Interval	Installed	Required	Procedure
C	41/47	-	(O)

The affected seat(s) may be occupied provided:

- The Crew Cabin Interphone System, Cabin Chime System and Passenger Address System are operative, and
- Procedures are established and used to alert flight attendants and to notify affected passengers smoking is prohibited, and when seat belts should be fastened.

NOTE : Qty 47 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Service Unit must be placarded in the flight and passenger compartments.

Operating Procedures

- Verify that the Passenger Address System operates normally as follows:
 - Ensure aircraft DC bus system is powered.
 - Ensure PA AMP Circuit Breaker on the left Essential DC circuit breaker panel is closed.
 - Push release lever and remove the attendant handset from the cradle assembly. Select PA system switchlight at the Attendant Control Unit (ACU), press the PUSH-TO-TALK switch on the handset and make announcements over the passenger address (PA) system.
 - Deselect or terminate PA mode by pressing the PA switch at the control unit, and replace the handset to cradle assembly.
 - From the cockpit, initiate an attendant call and verify cabin chime sound and normal voice communication is present.
- Establish procedures whereby notification to passengers to fasten seat belts and/or not to smoke is given via the PA system.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-10. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-10 Passenger Service Unit (PSU)

25-20-10B

3. Establish alternate procedures for calling the attention of the flight attendant to the passengers.

Maintenance Procedures

1. Placard the affected PSU on the PSU panel and on the Flight Attendant's LIGHTING panel.
2. Placard the appropriate inoperative passenger convenience items.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DA750 –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-10. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-10 Passenger Service Unit (PSU)****25-20-10-1 Flight Attendant Panel PSU TEST Switch**

Interval	Installed	Required	Procedure
D	1	0	(O)

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Attendant Panel PSU TEST switch must be placarded on the Flight Attendant Panel.

Operating Procedures

Alternate procedures should be established and used for verification of PSUs' operability in lieu of inoperative PSU TEST switch.

Maintenance Procedures

1. Placard the inoperative PSU TEST switch on the Flight Attendant's Lighting panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-10. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-30-1 Galley Waste Compartment****25-30-1-1 DOOR**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- The container is empty and the access is secured to prevent waste introduction into the compartment, and
- Procedures are established to ensure that sufficient waste containers are available to accommodate all waste that may be generated on a flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Galley Waste Compartment Door must be placarded in the flight compartment.

Operating Procedures

Procedures are established such that sufficient galley waste compartments are available to accommodate all waste that may be generated in flight.

Maintenance Procedures

- Tape the surrounding areas of the waste Compartment Flap and Door to secure it closed.
- Placard inoperative Galley Waste Compartment Flap or Door.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-30-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-30-1 Galley Waste Compartment****25-30-1-2 Flap**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- The container is empty and the access is secured to prevent waste introduction into the receptacle, and
- Procedures are established to ensure that sufficient waste containers are available to accommodate all waste that may be generated on a flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Galley Waste Compartment Flap must be placarded in the flight compartment.

Operating Procedures

Procedures are established such that sufficient galley waste compartments are available to accommodate all waste that may be generated in flight.

Maintenance Procedures

- Tape the surrounding areas of the waste Compartment Flap and Door to secure it closed.
- Placard inoperative Galley Waste Compartment Flap or Door.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-30-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-40-1

Exterior Lavatory Door Ashtrays

25-40-1-1

Aircraft with more than one exterior lavatory door or entry area ashtray installed

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-40-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-40-1 Exterior Lavatory Door Ashtrays**

25-40-1-2 Aircraft with only one exterior lavatory door or entry area ashtray installed

Interval	Installed	Required	Procedure
B	1	0	NIL

May be missing.

NOTE:

1. Repair interval extensions are not permitted.
2. Interior lavatory ashtrays are considered under passenger convenience items/NEF and are not required by regulations.

Minimum Equipment List Procedures (MELP)**Placard**

Placard appropriate side of lavatory door indicating missing ashtray.

Operating Procedures

None required.

Maintenance Procedures

1. Placard appropriate side of lavatory door indicating missing ashtray.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-50-1 Aft Baggage Divider Nets**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative or missing provided:

- Inoperative aft baggage divider net installation is completely removed including associated mounting hardware.
- Ground crew is notified of missing aft baggage divider nets.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

Remove inoperative installation and secure aft baggage compartment. Make certain that no loose items remain in compartment to interfere with baggage loading or door closure.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-50-2 Aft Baggage Door Threshold Net****25-50-2-1**

Interval	Installed	Required	Procedure
D	1	1	(M)

May be damaged provided:

- The number of detached stitching locations does not exceed six,
- The number of detached stitching locations per nylon strap (horizontal or vertical) does not exceed two,
- Detached stitching locations are separated by a minimum of two horizontal or vertical nylon strap intersection locations,
- No more than 25% of a nylon strap width is found to be defective,
- No more than one detached stitching location exists on main horizontal securing straps,
- There is no detached stitching on the two outermost vertical straps,
- Of the four installed, no more than one attachment clip is missing/inoperative, and
- Net is inspected weekly to ensure no further damage exists.

Minimum Equipment List Procedures (MELP)**Placard**

“Warning damaged or missing aft baggage door threshold net” must be placarded outside the aft baggage compartment door to notify ground crew of a missing net.

Operating Procedures

None required.

Maintenance Procedures

- Refer to Figure 25-1 and 25-2 for damage limitation details.
- Make certain that no loose items remain in the compartment to interfere with baggage loading or door closure.
- In the event of an unattached clip, secure the loose strap end with a tie wrap to the undamaged vertical or horizontal strap to prevent the strap from catching during loading or unloading of the compartment.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-2. 1



DHC-8-402


MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

25-50-2 Aft Baggage Door Threshold Net

25-50-2-1

4. Placard damaged aft baggage door threshold net on exterior of aft baggage compartment door.
5. Make appropriate entry in the aircraft journey log.

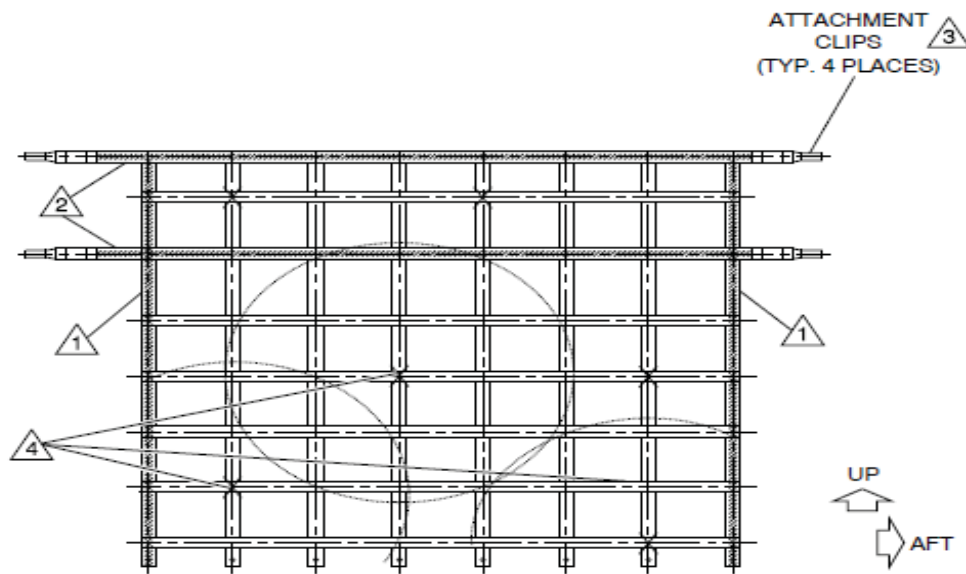

VIEW LOOKING INBOARD AT AFT BAGGAGE THRESHOLD NET SHOWING DAMAGE LIMITATIONS

- 1 No detached stitching permitted on these two vertical straps (shaded).
- 2 At most one detached stitching location permitted on these two horizontal straps (shaded).
- 3 Only one of these clips may be missing/inoperative.
- 4 Typical detached stitching locations (separated by a minimum of two horizontal or two vertical strap intersection locations).

AFT BAGGAGE DOOR THRESHOLD NET DAMAGE LIMITATIONS

Figure 25-1

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49


25-50-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

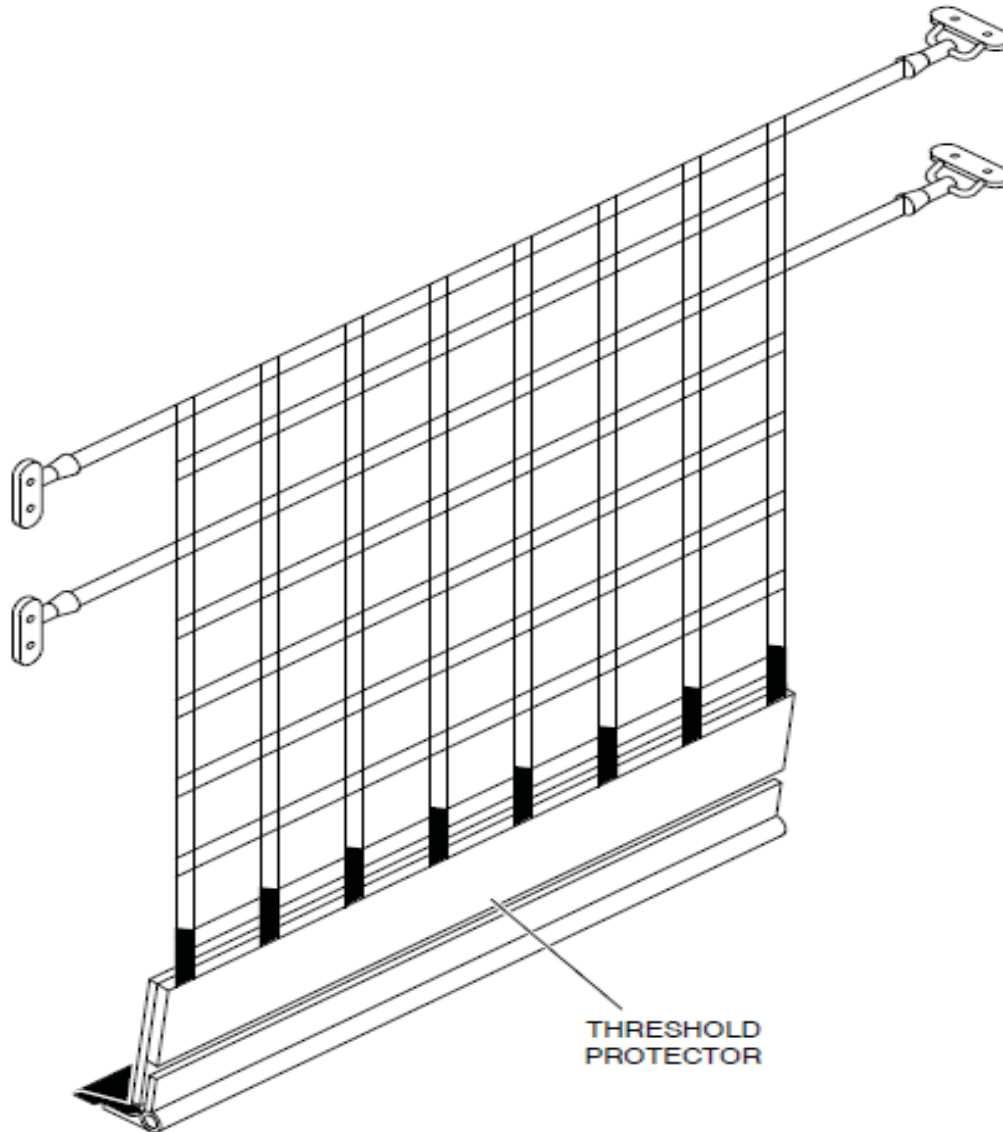

AFT BAGGAGE DOOR THRESHOLD NET AND PROTECTOR

Figure 25-2

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-50-2 Aft Baggage Door Threshold Net****25-50-2-2**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be missing provided:

- Inoperative aft baggage door threshold net assembly is completely removed,
- Baggage threshold protector remains installed, and
- Ground crew is notified of missing aft baggage door threshold net prior to unloading aircraft.

Minimum Equipment List Procedures (MELP)**Placard**

“Warning damaged or missing aft baggage door threshold net” must be placarded outside the aft baggage compartment door to notify ground crew of a missing net.

Operating Procedures

None required.

Maintenance Procedures

- Remove inoperative net assembly from the threshold protector.
- Make certain that no loose items remain in the compartment to interfere with baggage loading or door closure.
- Placard missing aft baggage door threshold net on exterior of aft baggage compartment door.
- Make appropriate entry in the aircraft journey log.

— — — —**ISS III R00****APPROVED BY DAW DELHI, DATED —**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-50-3 Cargo Compartment Liners and Floor Panels
(Applicable to Forward and/or Aft Baggage
Compartments)**

Interval	Installed	Required	Procedure
C	-	-	(O)

Liner panels may be damaged or missing provided cargo is not carried in the associated compartment.

NOTE: Unit Load Devices (ULDs) may be carried in the associated compartment provided no cargo is carried on or in these devices. For ballast purposes, use of bags (made of glass fibre or Kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable.

Minimum Equipment List Procedures (MELP)**Placard**

1. Damaged/missing Fwd and/or aft cargo/baggage compartment liners are placarded in the flight compartment.
2. Placard outboard of the external baggage doors, and inboard of the internal door (if applicable), of inoperative Cargo/Baggage Compartment.

Operating Procedures

1. Cargo carried in the affected cargo compartment must be emptied out.
2. If ballasts are required, proper installation must be carried out by proper installation procedures.
3. Loading/unloading equipment must be affixed properly, otherwise it must be removed from the affected cargo compartment.

Maintenance Procedures

1. Placard inoperative cargo/baggage compartment in the flight compartment.
2. Placard outboard of external baggage door, and inboard of internal door (if applicable), "Cargo/Baggage Compartment is inoperative."
3. Make appropriate entry in aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-3. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-50-4

**Aft Baggage Spider Nets (Cargo/combi
Configuration) Station X=646**

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-1 Emergency Locator Transmitter (ELT)****25-60-1-1 Fixed ELT**

Interval	Installed	Required	Procedure
	1	1	NIL

NOTE: Required as per CAR Section 8, Series O.**Minimum Equipment List Procedures (MELP)****Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-1 Emergency Locator Transmitter (ELT)****25-60-1-2 Survival Type ELTs**

Interval	Installed	Required	Procedure
	1	1	NIL

NOTE: Required as per CAR Section 8, Series O.**Minimum Equipment List Procedures (MELP)****Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-2 First Aid Kit****25-60-2-1 FAK**

Interval	Installed	Required	Procedure
A	1/2	0	NIL

If the seal is broken during Bomb threat inspection or due security reasons or uses of the kit and cannot be recertified due non availability of qualified Doctor, first Aid Kit may be carried on board in unsealed condition provided it is recertified/replaced at first available opportunity or arrival at base, whichever is earlier.

NOTE:

1. This item is as stipulated by CAR series 'X' Part III.
2. Quantity 2 FAK is installed for aircraft VT-SQA, VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

NOTE: Cockpit Crew shall ask the SCC to make a cabin log entry indicating the purpose of breaking the seal and to request replacement at first available opportunity.

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-2 First Aid Kit****25-60-2-2 Universal Precaution Kit**

Interval	Installed	Required	Procedure
A	1	0	NIL

If the seal is broken during Bomb threat inspection or due security reasons or uses of the kit and cannot be recertified due non availability of qualified Doctor, UPK may be carried on board in unsealed condition provided it is recertified/replaced at first available opportunity or arrival at base, whichever is earlier.

NOTE: This item is as stipulated by CAR series 'X' Part III.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

NOTE: Cockpit Crew shall ask the SCC to make a cabin log entry indicating the purpose of breaking the seal and to request replacement at first available opportunity.

None required.

Maintenance Procedures

None required.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-60-3

Emergency Medical Kit

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-4 Flight Attendant Flashlights****25-60-4-1 Flashlights**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative or missing provided the flight attendant assigned to the associated seat has a flashlight of equivalent characteristics readily available.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative flashlight/flashlight holder.

Operating Procedures

The flight attendant assigned to the associated seat has a flashlight of equivalent characteristics readily available.

Maintenance Procedures

NIL

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-4 Flight Attendant Flashlights****25-60-4-2 Flashlight Holders**

Interval	Installed	Required	Procedure
C	2	0	(M)(O)

May be inoperative or missing provided alternate stowage provisions are provided.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative flashlight holder.

Operating Procedures

Cabin Crew to ensure flashlight is secured via masking tape in its original location.

Maintenance Procedures

1. Secure the Flash Light near inoperative flash light holder by using masking tape to ensure no movement of flashlight during acceleration.
2. Ensure at no time flashlight is removed from its original compartment during invoking of MEL.
3. Placard normal stowage location with direction to alternate stowage location.
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-6****Airstair Door Ditching Dam**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The ditching dam is secured in the stowed position,
- Extended overwater operations are prohibited, and
- Take-offs and landings are not conducted on runways that may lead to imminent ditching.

NOTE: "Extended Overwater Operations means operation over the water at a horizontal distance of more than 50 nautical miles from the nearest shore.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Airstair Door Ditching Dam and flight compartment must be placarded.

Operating Procedures

None required.

Maintenance Procedures

- Verify that Ditching Dam is in stowed position.
- Using appropriate tape, tape the following sides of ditching dam to the surrounding interior:
 - The full length of upper edge.
 - One half of left and right edge.
- Tape over Ditching Dam Handle.
- Ensure "DITCHING DAM INOPERATIVE" placards are posted in the following areas:
 - Pilot glare shield panel.
 - Ditching Dam.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-6. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-60-7 Flight Deck Sun Visors****25-60-7-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided affected sun visor does not obstruct either pilot's field of view for take-off and landing.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Deck Sun Visor must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Sun Visor.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-7. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-7 Flight Deck Sun Visors****25-60-7-2**

Interval	Installed	Required	Procedure
C	2	0	(M#)

May be inoperative provided affected Sun Visor is removed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Deck Sun Visor must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Remove inoperative sun visor assembly as follows:

NOTE: The removal of the LH and the RH sun visor assembly is almost the same. The procedure given is for the LH sun visor assembly only.

- a) Give support to the sun visor assembly.
 - b) Remove the screws, washers and the LH sun visor assembly.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-7. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-8 Flight Deck Flashlights/Flashlight Holders****25-60-8-1 Flashlights**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative or missing provided that a flashlight of equivalent characteristics is readily available.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flashlight Holder should be placarded.

Operating Procedures

Engineering has to inform the PIC of the alternate location of flashlights.

Maintenance Procedures

1. Placard normal stowage location with direction to alternate stowage location.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-8. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-8 Flight Deck Flashlights/Flashlight Holders****25-60-8-2 Flashlight Holders**

Interval	Installed	Required	Procedure
C	2	0	(M)(O)

May be inoperative or missing provided alternate stowage provisions are provided.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flashlight Holder should be placarded.

Operating Procedures

Engineering has to inform the PIC of the alternate location of flashlights.

Maintenance Procedures

1. Determine alternate location in flight compartment for flashlight stowage where its movement will be constrained during accelerations and be accessible to crew member.
2. Placard normal stowage location with direction to alternate stowage location.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-8. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-60-9 Life Vests****25-60-9-1 Flight Crew and Flight Attendant Life Vests**

Interval	Installed	Required	Procedure
C	5	4	NIL

Any in excess of those required for intended flight may be inoperative or missing.

NOTE 1: Provisions must be made for SNY Crew.

NOTE 2: Required distribution must be maintained.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Life Vests and/or its installed locations are placarded inoperative.

Operating Procedures

SNY can use the additional spare passenger Life jackets carried on board in case of an emergency.

Maintenance Procedures

1. Placard inoperative life vest(s) and its installed location(s).
2. Make appropriate entry in aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-9. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-60-9 Life Vests****25-60-9-2 Passenger Life Vests**

Interval	Installed	Required	Procedure
C	90/102	-	NIL

Any in excess of those required for intended flight may be inoperative or missing.

NOTE:

1. Installed Quantity includes 7 infant life vest, of which Quantity 5 is required for dispatch.
2. Quantity 102 life vest is installed on aircraft VT-SQA, VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Life Vests and/or its installed locations are placarded inoperative. Passenger seats with inoperative life vests and floatation cushions are placarded, "DO NOT OCCUPY".

Operating Procedures

1. Inoperative life vests are placarded inoperative, and inoperative seats (where applicable), are placarded, "DO NOT OCCUPY".
2. Procedures are established and used to alert crew members about missing or inoperative life vest(s) and their location(s).

Maintenance Procedures

1. Placard inoperative life vest(s) and its installed location(s).
2. Make appropriate entry in aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-9. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-60-10

**Automated External Defibrillator (AED) and/or
Associated Equipment**

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-10. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-10. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-62-1 Cabin Video Monitoring and Surveillance System****25-62-1-1****25-62-1-1A**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Alternate procedures are established and used for monitoring the area outside the flight crew compartment,
- Communication between the flight crew and flight attendant is available via intercom, and
- Spy hole view on the cockpit door is available.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Video Monitoring and Surveillance System must be placarded in the flight compartment.

Operating Procedures

Fasten seat belt sign is used to communicate from the cockpit to CCIC on the service interphone. Captain must brief the CCIC about this procedure prior to start during the pre-flight the cabin. The crew must recycle the seat belt sign once to get the briefing.

Maintenance Procedures

- Placard the inoperative Cabin Video Monitoring and Surveillance System in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-62-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-62-1 Cabin Video Monitoring and Surveillance System****25-62-1-1****25-62-1-1B**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided procedures do not require its use.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Video Monitoring and Surveillance System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative Cabin Video Monitoring and Surveillance System in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-62-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-62-1 Cabin Video Monitoring and Surveillance System****25-62-1-2 Video Converter**

Interval	Installed	Required	Procedure
D	2	1	NIL

One may be inoperative provided operative video converter is connected to an operative FMS.

Minimum Equipment List Procedures (MELP)**Placard**

Associated display must be placarded, "Inoperative Cabin Video Monitoring and Surveillance Display" in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative Cabin Video Monitoring and Surveillance System in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-62-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-62-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-10-1 Lavatory Smoke Detection System****26-10-1A**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

For each lavatory, where the Smoke Detector fails to test, the lavatory smoke detection system may be inoperative provided:

- Lavatory is not used by passengers for any purpose,
- Lavatory waste receptacle is empty,
- Lavatory door is locked closed and placarded INOPERATIVE - DO NOT ENTER,
- Lavatory is used only by crew members, and
- In-flight service waste bags are not stored in the lavatory.

NOTE: The above mentioned provisos are not intended to preclude crew member lavatory inspections which must be detailed in the (O) procedures.

Minimum Equipment List Procedures (MELP)**Placard**

- Inoperative Lavatory Smoke Detection System must be placarded in the flight compartment.
- Placard lavatory door "INOPERATIVE - DO NOT ENTER".

Operating Procedures

- Ensure all crew members have been briefed that the lavatory Smoke Detector is inoperative.
- Crew member to periodically inspect lavatory.

Maintenance Procedures

- Placard Lavatory Smoke Detection System in flight compartment.
- Ensure lavatory waste receptacle is empty.
- Lock lavatory door by inserting a pen or similar object in the hole located on the door slide latch and sliding it to the locked position.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-10-1 Lavatory Smoke Detection System

26-10-1A

4. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
5. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-10-1 Lavatory Smoke Detection System****26-10-1B**

Interval	Installed	Required	Procedure
C	1	0	(M#)(O)

For each lavatory, where the Smoke Detector indicates a failed condition intermittently or continuously, the lavatory smoke detection system may be inoperative provided:

- Smoke detector is deactivated,
- Lavatory is not used by passengers for any purpose,
- Lavatory waste receptacle is empty,
- Lavatory door is locked closed and placarded INOPERATIVE - DO NOT ENTER,
- Lavatory is used only by crew members. And
- In-flight service waste bags are not stored in the lavatory.

NOTE: The above mentioned provisos are not intended to preclude crew member lavatory inspections which must be detailed in the (O) procedures.

Minimum Equipment List Procedures (MELP)**Placard**

- Inoperative Lavatory Smoke Detection System must be placarded in the flight compartment.
- Placard lavatory door "INOPERATIVE - DO NOT ENTER".

Operating Procedures

- Ensure all crew members have been briefed that the lavatory Smoke Detector is inoperative.
- Crew member to periodically inspect lavatory.

Maintenance Procedures

- Pull circuit breaker SMK DET LAV/CG01 on the Right Essential Bus.
- Gain access to the Lavatory Smoke Detector.
- Disconnect tape and stow Smoke Detector electrical connector.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-10-1 Lavatory Smoke Detection System

26-10-1B

4. Reset breaker SMK DET LAV/CG01 on the Right Essential Bus.
5. Placard Lavatory Smoke Detection System in flight compartment.
6. Ensure lavatory waste receptacle is empty.
7. Lock lavatory door by inserting a pen or similar object in the hole located on the door slide latch and sliding it to the locked position.
8. Placard lavatory door "INOPERATIVE - DO NOT ENTER"
9. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-10-1 Lavatory Smoke Detection System****26-10-1-1 Non-passenger Carrying Operations****26-10-1-1A**

Interval	Installed	Required	Procedure
B	1	0	(O)

For each lavatory, where the Smoke Detector fails to test, the Lavatory Smoke Detection System may be inoperative for non-passenger carrying operations provided:

- Crew members are the only occupants of the aircraft,
- Occupants are briefed as to which smoke detection system(s) is/are inoperative, and
- In-flight service waste bags are not stored in the lavatory.

NOTE: The above mentioned provisos are not intended to preclude crew member lavatory inspections which must be detailed in the (O) procedures.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Lavatory Smoke Detection System must be placarded in the flight compartment.

Operating Procedures

- Ensure all crew members have been briefed that the lavatory Smoke Detector is inoperative.
- Crew member to periodically inspect lavatory.

Maintenance Procedures

- Placard Lavatory Smoke Detection System in flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-10-1 Lavatory Smoke Detection System****26-10-1-1 Non-passenger Carrying Operations****26-10-1-1B**

Interval	Installed	Required	Procedure
B	1	0	(M#)(O)

For each lavatory, where the Smoke Detector indicates a failed condition intermittently or continuously, the Lavatory Smoke Detection System may be inoperative for non-passenger carrying operations provided:

- Smoke Detector is deactivated,
- Crew members are the only occupants of the aircraft,
- Occupants are briefed as to which smoke detection system(s) is/are inoperative, and
- In-flight service waste bags are not stored in the lavatory.

NOTE: The above mentioned provisos are not intended to preclude crew member lavatory inspections which must be detailed in the (O) procedures.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Lavatory Smoke Detection System must be placarded in the flight compartment.

Operating Procedures

- Ensure all crew members have been briefed that the lavatory Smoke Detector is inoperative.
- Crew member to periodically inspect lavatory.

Maintenance Procedures

- Pull circuit breaker SMK DET LAV/CG01 on the Right Essential Bus.
- Gain access to the lavatory Smoke Detector.
- Disconnect tape and stow Smoke Detector electrical connector.
- Reset breaker SMK DET LAV/CG01 on the Right Essential Bus.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-1. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-10-1 Lavatory Smoke Detection System

26-10-1-1 Non-passenger Carrying Operations

26-10-1-1B

- 5. Placard Lavatory Smoke Detection System in flight compartment.
- 6. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-1. 7



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-10-1 Lavatory Smoke Detection System

26-10-1-2 All Cargo Operations

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-1. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-10-2 Aft Baggage Compartment Smoke Detectors****26-10-2-1**

Interval	Installed	Required	Procedure
C	2	1	(M#)

One may be inoperative provided:

- Affected smoke detector is deactivated,
- All inlet and outlet valves are considered inoperative and deactivated in closed position,
- VENT VALVE INLT and VENT VALVE OTLT CLOSED advisory lights are verified illuminated prior to each flight, and
- Live animals are not carried.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Compartment Smoke Detector and deactivated Aft Baggage Compartment Vent Valves must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Pull appropriate circuit breaker on the R ESS Bus for the inoperative smoke detector as follows:
 - SMK DET LAV/CGO1 or
 - SMK DET BAG/CGO2.
- Disconnect tape and stow electrical connector from affected smoke detector on unit.
- Reset pulled circuit breaker on the R ESS Bus:
 - SMK DET LAV/CGO1 or
 - SMK DET BAG/CGO2.
- Pull and clip the appropriate circuit breakers on the R Main Circuit Breaker panel for the following configurations:
 - With "2" Vents installed CGO VENT VLS.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-10-2 Aft Baggage Compartment Smoke Detectors

26-10-2-1

- b) With “4” Vents installed CGO VENT VALVES 1 and CGO VENT VALVES 2.
- 5. On the Fire Protection Panel verify the following “CLOSED” advisory lights are illuminated for the following configurations:
 - a) With “2” Vents installed:
 - i. AFT BAGGAGE – VENT VALVE INLT, and
 - ii. AFT BAGGAGE – VENT VALVE OTLT.
 - b) With “4” Vents installed:
 - i. CARGO – VENT VALVE INLT 1 and 2, and
 - ii. CARGO – VENT VALVE OTLT 1 and 2.
- 6. Placard Fire Protection Panel with:
 - a) “AFT BAGGAGE SMOKE DETECTOR INOP”, and
 - b) “INLET and OUTLET VENT VALVES CLOSED”.
- 7. Make appropriate entry in journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-10-2 Aft Baggage Compartment Smoke Detectors****26-10-2-2**

Interval	Installed	Required	Procedure
C	2	0	(M#)

One or more may be inoperative provided:

- Baggage compartment is empty, or for ballast purpose, use of bags (made of glass fiber or Kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable, and
- Affected smoke detectors are deactivated.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Aft Baggage Compartment Smoke Detectors must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Pull the appropriate circuit breakers on the R ESS Bus for inoperative smoke detector as follows:
 - SMK DET LAV/CGO1 and/or
 - SMK DET BAG/CGO2.
- Disconnect tape and stow each smoke detector electrical connector at inoperative units.
- Reset pulled circuit breakers LAV/CGO1 on the R ESS Bus:
 - SMK DET LAV/CGO1 and/or
 - SMK DET BAG/CGO2.
- Placard Fire Protection Panel with "AFT BAGGAGE SMOKE DETECTORS INOP".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATE -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-2. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-10-3 Forward Baggage Compartment Smoke Detector**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided the baggage compartment is empty, or for ballast purpose, use of bags (made of glassfiber or kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable.

NOTE: Only applicable if Forward Baggage Compartment is installed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Compartment Smoke Detectors must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Pull breaker for BAG/CGO2 (R ESSENTIAL Bus).
2. Disconnect tape and stow connector at unit.
3. Reset breaker.
4. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-10-4 APU Fire Detection System**

Interval	Installed	Required	Procedure
D	1	0	(M#)

May be inoperative provided:

- The APU fuel shut-off valve is verified closed, and
- The APU is considered inoperative and is not used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative APU Fire Detection System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Turn all aircraft electrical power off.
- Gain access to the APU Compartment Advance Pneumatic Detector (APD) through the APU access door 312AL.
- Disconnect the electrical connector (2600-P26) from the APD.
- Using a jumper pin assembly, jumper pins C & D of 2600-P26 (Part Number MS3456KS14S-5S).
- Tape and stow electrical connector 2600-P26 (Part Number MS3456KS14S-5S).
- Cap connector 2600-J26 on the APD.
- Apply DC power to aircraft buses.
- Ensure the "CHECK FIRE DET" warning light has been extinguished in the cockpit.
- Ensure APU POWER switchlight is selected off at overhead APU Control Panel.
- Verify that APU Fuel Shut-Off Valve is closed as indicated by the white advisory light "APU FUEL VALVE CLOSED" on the fire protection panel and that the green advisory "APU FUEL VALVE OPEN" light is extinguished.
- If the "APU FUEL VALVE OPEN" light is on or if the "APU FUEL VALVE CLOSED" light is extinguished, verify that APU Fuel Shut-Off Valve is closed as follows:
 - Method A:

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-10-4 APU Fire Detection System

1. Pull and Collar L ESS BUS circuit breaker APU Fuel SOV/IND.
2. Attempt to start APU. If APU fails to start, then APU FUEL VALVE is closed.

NOTE: The APU may spin up momentarily, until residual fuel in the manifold is consumed. Also the APU FADEC may log a fault for the uncommanded shutdown/unsuccessful start.

b) Method B:

1. Open center wing dry bay access panel 521BT.
2. Verify that the position indicator arm of the APU fuel shut-off valve is in the CLOSED position.
3. Reinstall access panel 521BT.

NOTE: For instructions on removal and installation of access panel, refer to Maintenance Manual PSM 1-84-2, Chapter 57.

c) Method C:

1. Feed a borescope through the aft dry bay drain port in the LH armpit to access the dry bay area.
2. Locate the APU fuel Feed Shut-off Valve is in Closed position.
3. Verify that the INDICATOR ARM on the APU Fuel Feed Shut-off Valve is in Closed position.

12. Remove DC power from aircraft buses.

13. Placard APU Control and APU Fire Protection Panels in the flight compartment.

14. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-10-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-1 APU Fire Extinguishing System**

Interval	Installed	Required	Procedure
D	1	0	(M#)

May be inoperative provided the APU is considered inoperative and is not used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative APU Fire Extinguishing System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Turn all aircraft electrical power off.
2. Gain access to the APU fire-extinguishing bottle through access door 311 AB.
3. Disconnect the electrical connector (2600-P12) from the pressure switch-gauge.
4. Using a jumper pin assembly, jumper pins A & B of 2600-P12 (Part Number MS3476L8-33SW).
5. Tape and stow connector 2600-P12 (Part Number MS3476L8-33SW).
6. Cap connector 2600-J12 on fire bottle.
7. Apply power to aircraft DC electrical bus system.
8. Ensure the 'CHECK FIRE DET' warning light has been extinguished in the cockpit.
9. Ensure APU POWER switchlight is selected off at overhead APU Control Panel.
10. Verify that APU FUEL VALVE annunciator light indicates CLOSED (white) on the APU Fire Protection Panel.
11. If APU FUEL VALVE annunciator light indicates OPEN (green) or both OPEN (green) and CLOSED (white) annunciators are extinguished, use the following procedure to confirm that the valve has closed:
 - a) Apply DC power to aircraft buses.
 - b) Pull and collar circuit breaker "APU FUEL SOV/IND" on Left Essential 28 VDC Circuit Breaker Panel.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-20-1

APU Fire Extinguishing System

- c) Attempt to start APU. If APU fails to start, then the APU fuel shutoff valve is closed.

NOTE: The APU may spin up momentarily, until residual fuel in the manifold is consumed. Also, the APU FADEC may log a fault for the uncommanded shutdown/unsuccessful start.

12. Placard APU Control and APU Fire Protection Panels in the flight compartment.

13. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-2 Lavatory Fire Extinguishing System****26-20-2A**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

For each lavatory the lavatory fire extinguishing system may be inoperative provided the lavatory smoke detection system is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Lavatory Fire Extinguisher (s) must be placarded in the lavatory and in the flight compartment.

Operating Procedures

Crew member to periodically inspect the lavatory.

Maintenance Procedures

1. Placard Lavatory Fire Extinguisher System and Lavatory Waste Receptacle.
2. Place placard in flight compartment indicating that the lavatory fire extinguishing system is inoperative.
3. Apply power to DC ESSENTIAL buses.
4. Ensure LAV/CGO1 circuit breaker on R ESSENTIAL bus is closed. Check that the green indicator light on the lavatory smoke detector illuminates.
5. Push and hold the Lavatory Smoke Detector Self Test Switch and observe the following:
 - a) Audible warning sounds from smoke detector.
 - b) A single chime on the PA system.
 - c) Red alarm indicator light on the smoke detector illuminates and the cabin red repeater lights on the exit signs illuminate.
6. Push and release the interrupt switch on the detector and observe the following:
 - a) Audible warning from the detector stops.
 - b) Cabin red repeater lights on the exit signs extinguish.
 - c) Red alarm indicator light on the smoke detector remains illuminated.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-20-2 Lavatory Fire Extinguishing System

26-20-2A

7. Release the self-test switch and ensure the red warning lamp extinguishes.
8. Remove the DC power from the essential buses.
9. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-2 Lavatory Fire Extinguishing System****26-20-2B**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

For each lavatory the lavatory fire extinguishing system may be inoperative provided:

- Lavatory is not used by passengers for any purpose,
- Lavatory waste receptacle is empty,
- Lavatory door is locked closed and placarded "INOPERATIVE - DO NOT ENTER", and
- Lavatory is used only by crew members.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Lavatory Fire Extinguisher (s) must be placarded in the lavatory and in the flight compartment.

Operating Procedures

Crew member to periodically inspect the lavatory.

Maintenance Procedures

- Placard Lavatory Fire Extinguisher in flight compartment.
- Ensure lavatory waste receptacle is empty.
- Lock lavatory door by inserting a pen or similar object in the hole located on the door slide latch and sliding it to the locked position.
- Placard lavatory door "INOPERATIVE - DO NOT ENTER".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-2 Lavatory Fire Extinguishing System****26-20-2-1 Non-passenger Carrying Operations**

Interval	Installed	Required	Procedure
B	-	0	NIL

For each lavatory the lavatory fire extinguishing system may be inoperative for non-passenger carrying operations provided:

- Crew members are the only occupants of the aircraft, and
- Occupants have been briefed as to which lavatory fire extinguishing system(s) is/are inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

- Inoperative Lavatory Fire Extinguisher(s) must be placarded in the flight compartment.
- Placard lavatory door "INOPERATIVE - DO NOT ENTER".

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-2. 4



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

26-20-2 Lavatory Fire Extinguishing System

26-20-2-2 All Cargo Operations

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-2. 5



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-3 Portable Fire Extinguishers**

Interval	Installed	Required	Procedure
D	4	4	(M)(O)

Any in excess of those required by regulations may be inoperative or missing provided:

- The inoperative fire extinguisher(s) is/are removed from the passenger cabin, flight deck, and its location is placarded "INOPERATIVE", or it is removed from the installed location, secured out of sight and the fire extinguisher and its installed location are placarded "INOPERATIVE".
- Required distribution is maintained in the passenger compartment and flight deck, and
- Procedures are established to alert crew of missing portable fire extinguishers.

NOTE: Required distribution is one in flight compartment and three in passenger cabin.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Portable Fire Extinguisher.

Operating Procedures

Inform all crew members of any missing Portable Fire Extinguishers.

Maintenance Procedures

- Remove and placard inoperative Portable Fire Extinguishers from flight compartment and passenger cabin or remove from aircraft and placard its installed location as "INOPERATIVE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FIRE PROTECTION

ATA 26

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-4 Baggage Compartment Fire Extinguishers****26-20-4-1 Low Rate Discharge Bottle (LRD)**

Interval	Installed	Required	Procedure
C	1	0	(M#)

May be inoperative provided the forward baggage compartment (if installed) and aft baggage compartment are empty, or for ballast purpose, use of bags (made of glass fibre or Kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable.

Minimum Equipment List Procedures (MELP)**Placard**

Placard Fire Protection Panel in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures**One LRD Bottle installed on aircraft (Type Spec and 86 Passenger Configurations)**

1. Turn all aircraft electrical power off.
2. Gain access to the LRD fire-extinguishing bottle through access door 311 AB.
3. Disconnect the electrical connector (2600-P14) from the pressure switch.
4. Using a jumper pin assembly, jumper pins A & B of 2600-P14 (Part Number MS27467T9B98S).
5. Tape and stow connector 2600-P14 (Part Number MS27467T9B98S).
6. Cap connector 2600-J14 on fire bottle.
7. Ensure the "CHECK FIRE DET" warning light has been extinguished in the flight compartment.
8. Visually confirm that the forward baggage compartment (if installed) and aft baggage compartment are empty and placarded "INOPERATIVE – DO NOT USE".
9. Placard the Fire Protection Panel in flight compartment.
10. Make appropriate entry in the aircraft journey log.

(Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-4 Baggage Compartment Fire Extinguishers****26-20-4-1 Low Rate Discharge Bottle (LRD)****Two LRD Bottles installed on aircraft (Cargo-Combi Configuration)**

1. Turn all aircraft electrical power off.
2. Gain access to the LRD fire-extinguishing bottles 1 and/or 2 through access door 311 AB.
3. Disconnect the electrical connector (2600-P31 and/or 2600-P14) from the pressure switch.
4. Using a jumper pin assembly, jumper pins A & B of 2600-P31 and/or 2600-P14 (mating connector part number 340AS001B92N and 340FS001B92N respectively).
5. Tape and stow connectors
6. Cap connector 2600-P31 and/or 2600-J14 on fire bottle.
7. Ensure the "CHECK FIRE DET" warning light has been extinguished in the flight compartment.
8. Visually confirm that the baggage compartment is empty and placarded "INOPERATIVE – DO NOT USE".
9. Placard the Fire Protection Panel in flight compartment.
10. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-4 Baggage Compartment Fire Extinguishers****26-20-4-2 High Rate Discharge Bottle (HRD)**

Interval	Installed	Required	Procedure
C	2	0	(M#)

May be inoperative provided the associated baggage compartment is empty, or for ballast purpose, use of bags (made of glass fibre or Kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable.

Minimum Equipment List Procedures (MELP)**Placard**

Placard Fire Protection Panel in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures**Aft HRD Bottle**

1. Turn all aircraft electrical power off.
2. Gain access to the HRD fire-extinguishing bottle through access door 311 AB.
3. Disconnect the electrical connector (2600-P13) from the pressure switch.
4. Using a jumper pin assembly, jumper pins A & B of 2600-P13 (Part Number MS27467T9B98S).
5. Tape and stow connector 2600-P13 (Part Number MS27467T9B98S).
6. Cap connector 2600-J13 on fire bottle.
7. Ensure the "CHECK FIRE DET" warning light has been extinguished in the flight compartment.
8. Visually confirm that the aft baggage compartment is empty and placarded "INOPERATIVE – DO NOT USE".
9. Placard the Fire Protection Panel in flight compartment.
10. Make appropriate entry in the aircraft journey log.

(Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-4. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FIRE PROTECTION******ATA 26*****26-20-4 Baggage Compartment Fire Extinguishers****26-20-4-2 High Rate Discharge Bottle (HRD)****Forward HRD Bottle (if forward baggage compartment is installed)**

1. Turn all aircraft electrical power off.
2. Gain access to the forward HRD fire-extinguishing bottle by removing the halon box base panel located in the forward baggage compartment.
 - a) Remove the fillet seal from all the joints and angles of the base panel.
 - b) Remove all the screws and washers that attach the base panel.
 - c) Remove the base panel from the halon box.
3. Disconnect the electrical connector (2600-P31) from the pressure switch.
4. Using a jumper pin assembly, jumper pins A & B of 2600-P31 (Part Number MS3476L8-33SW).
5. Tape and stow connector 2600-P31 (Part Number MS3476L8-33SW).
6. Cap connector 2600-J31 on fire bottle.
7. Ensure the "CHECK FIRE DET" warning light has been extinguished in the flight compartment.
8. Visually confirm that the aft baggage compartment is empty and placarded "INOPERATIVE - DO NOT USE".
9. Placard the Fire Protection Panel in flight compartment.
10. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

26-20-4. 4



Interval	Installed	Required	Procedure
C	1	0	(M)

- Visually checked for full, free and correct movement, and
- Confirmed neutral.

1. Ensure areas in vicinity of ailerons are clear of obstacles and engines are not running.
2. Apply electrical power to essential DC bus system.
3. Ensure gust lock is not engaged.
4. Position an observer at left aileron and ensure left aileron has full and free movement as follows:
 - a) At flight instrument center console aileron trim panel, press and hold aileron trim switch in LWD position and ensure left aileron is deflected up as noted by the observer.
 - b) Press and hold trim switch in RWD position and ensure left aileron is deflected down as noted by the observer.
 - c) Press and hold trim switch in LWD position until the left aileron is returned to neutral position as noted by the observer and the control wheels are in the laterally neutral position which indicates centered lateral trim.
5. Remove electrical power from DC essential buses.
6. Placard inoperative aileron trim indicator in the flight compartment.
7. Make appropriate entry in the aircraft journey log.



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-20-1 RUDDER TRIM Indicator**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided, prior to each take-off, the rudder trim is:

- Visually checked for full, free and correct movement as indicated on the PFCS indicator, and
- Selected to neutral.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Rudder Trim Indicator in the flight compartment.

Operating Procedures

1. Apply DC power to the aircraft.
2. Pressurize #1 and #2 hydraulic systems.
3. Ensure that the Rudder Trim switch is in the neutral (center) position and verify rudder neutral position on the PFCS.
4. Confirm that when the rudder pedals are centered, the PFCS rudder indication also indicates centered.
5. Select Rudder Trim switch to full left and right and check for free and correct movement as indicated on the PFCS.

Maintenance Procedures

1. Placard rudder trim indicator on TRIM panel in the flight compartment.
2. Make appropriate entry in aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-20-2 Rudder Pedal Adjustment**

Interval	Installed	Required	Procedure
C	2	0	(M#)(O)

May be inoperative provided:

- The rudder pedal adjustment mechanism is not free to move, and
- The mechanism has failed such that the rudder pedals are in a position which meets individual pilot requirements.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative rudder pedal adjustment must be placarded in the flight compartment.

Operating Procedures

Operate both rudder pedals to ensure that the adjustment mechanism is not free to move and that the rudder pedals are in a position which meets pilot requirements.

Maintenance Procedures

1. Turn the rudder adjustment handle, ensure the pedal adjustment shaft does not move forward or back.
2. Push and pull pedal, make sure the pedal does not move forward or back.
3. Open Access Panel 122AR or 121AL (as appropriate).
4. Visually inspect the rudder pedal adjustment lever and rudder input mechanism for condition and security.
5. Close the access panel.
6. Step on the rudder pedal; visually confirm that the rudder moves according to pedal's movement and no forth and back movement of the adjustment mechanism.
7. Adjust an appropriate position through pilot seat adjustment.
8. Placard inoperative rudder pedal adjustment in the flight compartment.
9. Make appropriate entry in aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-20-3 Rudder Trim****27-20-3-1 Slow Trim Function**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Slow Trim Function must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Slow Trim Function on centre console.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-20-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-20-3 Rudder Trim****27-20-3-2 Rudder Trim Switch - Return to Center Spring**

Interval	Installed	Required	Procedure
B	1	0	(O)

May be inoperative provided:

- RUDDER TRIM indicator operates normally, and
- Rudder TRIM switch is manually returned to center detent position following each selection of rudder trim.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Rudder Trim Switch must be placarded in the flight compartment.

Operating Procedures

- Ensure area in vicinity of rudder and flaps is clear of obstacles.
- Apply electrical power to the left essential DC bus system.
- Ensure RUDDER TRIM indicator needle is not pointing off scale.
- Ensure rudder trim has full and free movement as follows:
 - At the flight instrument center console, select RUDDER trim switch to "R" detent position until rudder trim is fully deflected right "R" as indicated on the RUDDER TRIM indicator.
 - Manually return switch to the center detent (off) position.
 - Select RUDDER trim switch to "L" detent position until rudder trim is fully deflected left "L" as indicated on RUDDER TRIM indicator.
 - Manually return switch to the center detent (off) position.
 - Select RUDDER trim switch to "R" detent position until rudder trim is centered on RUDDER TRIM indicator
 - Return RUDDER trim switch to the center position.
- Remove electrical power from DC essential bus.

NOTE: Before selecting the RUDDER trim switch in flight, the autopilot must be disengaged.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-20-3 Rudder Trim****27-20-3-2 Rudder Trim Switch - Return to Center Spring**

6. During flight, ensure the RUDDER trimswitch is manually returned to center detent position following each rudder trim selection.

Maintenance Procedures

1. Placard Rudder Trim Switch at center console in the flight compartment stating that the Rudder Trim Switch must be manually centered.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-20-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-20-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-1 Flap Auto Pitch Trim (AUTO TRIM FAIL)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Flap angles are limited to 15 degrees or less, and
- Manual pitch trim is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Auto Pitch Trim must be placarded in the flight compartment.

Operating Procedures

Ensure landing distances are factored for maximum flaps 15 degrees as per AFM, Section 5, PERFORMANCE, Subsection 5.11, LANDING FIELD LENGTHS.

Maintenance Procedures

- Placard Auto Pitch Trim "INOP" on the glareshield.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-2 Stick Shaker**

Interval	Installed	Required	Procedure
A	2	1	(M)

May be inoperative provided:

- The affected stick shaker is deactivated,
- The unaffected stick shaker is tested before each flight,
- Flight is not conducted into known or forecast icing conditions, and
- Repairs are made within two flight days.

Minimum Equipment List Procedures (MELP)**Placard**

The inoperative stick shaker must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Tape and stow electrical connector of affected stick shaker.
2. Perform stall warning test of unaffected side as per AFM 4.1.10.5 prior to every flight.
3. Placard the glareshield with "L or R STICK SHAKER INOP".
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)****27-30-3-1 "FLAP DISCREPANCY" failure annunciation through Centralized Diagnostic system interrogation**

Interval	Installed	Required	Procedure
A	2	0	(M)(O)

One or both caution lights may be illuminated for two flight days provided:

- It is confirmed that the illumination of the # STALL SYST FAIL and accompanying PUSHER SYST FAIL caution lights occur only on ground,
- Prior to each flight the reason for illumination is confirmed to be a result of the listed eligible failures,
- The Centralized Diagnostic System must be interrogated for the affected SPM to ensure that the PROPELLER DE-ICE failure is not indicated, and
- Use of flaps limited to maximum 15° or less, and
- Aircraft is not dispatched into known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative system leading to illumination of the # STALL SYST FAIL caution light, must be placarded in the flight compartment.

Operating Procedures

Flap use restricted to 15° or less.

Maintenance Procedures

- While the # STALL SYST FAIL caution light is illuminated, pull breakers WOW2 + CONT (E6) and (F6) at the L DC circuit breaker console, and confirm that the caution light(s) and the PUSHER SYST FAIL caution light extinguish.
- Reset circuit breakers and observe that the caution lights return.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)****27-30-3-1 “FLAP DISCREPANCY” failure annunciation through Centralized Diagnostic system interrogation**

3. Prior to each dispatch, access the Centralized Diagnostic system. At the Central Maintenance Panel, above the wardrobe shelf, select the CDS GND MAINT switch to the CDS position and confirm that the adjacent amber LED illuminates.
4. In the cockpit, at one of the ARCDUs, select the MAINT push-button and observe that the CDS MAIN MENU page is displayed.
5. Select the AVIONICS menu icon, then SYST REPORT TEST icon, then corresponding IFC, then locate the SPM.
6. Confirm reason(s) for SPM annunciating the respective STALL # SYST FAIL caution light and ensure that any failure shown are listed above as eligible. Ensure that PROPELLER DE-ICE is not listed as a failure in the CDS.
7. De-select CDS switch on Central Maintenance Panel.
8. Placard the glareshield with appropriate failed function, stating “XXX INOP”.
9. Make appropriate entry in aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)****27-30-3-2 “ADU 1 or ADU 2” failure annunciation through Centralized Diagnostic system interrogation**

Interval	Installed	Required	Procedure
A	2	0	(M)

One or both caution lights may be illuminated for two flight days provided:

- It is confirmed that the illumination of the # STALL SYST FAIL and accompanying PUSHER SYST FAIL caution lights occur only on ground,
- Prior to each flight the reason for illumination is confirmed to be a result of the listed eligible failures,
- The Centralized Diagnostic System must be interrogated for the affected SPM to ensure that the PROPELLER DE-ICE failure is not indicated, and
- “ADU 1 or ADU 2” failure annunciation through Centralized Diagnostic system interrogation is observed.

NOTE: Dual ADU failure will cause immediate illumination of the PUSHER SYST FAIL caution light in air or ground modes - refer to Item 27-30-5.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative system leading to illumination of the # STALL SYST FAIL caution light, must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- While the # STALL SYST FAIL caution light is illuminated, pull breakers WOW2 + CONT (E6) and (F6) at the L DC circuit breaker console, and confirm that the caution light(s) and the PUSHER SYST FAIL caution light extinguish.
- Reset circuit breakers and observe that the caution lights return.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)****27-30-3-2 “ADU 1 or ADU 2” failure annunciation through Centralized Diagnostic system interrogation**

3. Prior to each dispatch, access the Centralized Diagnostic system. At the Central Maintenance Panel, above the wardrobe shelf, select the CDS GND MAINT switch to the CDS position and confirm that the adjacent amber LED illuminates.
4. In the cockpit, at one of the ARCDUs, select the MAINT push-button and observe that the CDS MAIN MENU page is displayed.
5. Select the AVIONICS menu icon, then SYST REPORT TEST icon, then corresponding IFC, then locate the SPM.
6. Confirm reason(s) for SPM annunciating the respective STALL # SYST FAIL caution light and ensure that any failure shown are listed above as eligible. Ensure that PROPELLER DE-ICE is not listed as a failure in the CDS.
7. De-select CDS switch on Central Maintenance Panel.
8. Placard the glareshield with appropriate failed function, stating “XXX INOP”.
9. Make appropriate entry in aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)****27-30-3-3 "AHRS 1 or AHRS 2" failure annunciation through Centralized Diagnostic system interrogation**

Interval	Installed	Required	Procedure
A	2	0	(M)

One or both caution lights may be illuminated for two flight days provided:

- It is confirmed that the illumination of the # STALL SYST FAIL and accompanying PUSHER SYST FAIL caution lights occur only on ground,
- Prior to each flight the reason for illumination is confirmed to be a result of the listed eligible failures,
- The Centralized Diagnostic System must be interrogated for the affected SPM to ensure that the PROPELLER DE-ICE failure is not indicated, and
- "AHRS 1 or AHRS 2" failure annunciation through Centralized Diagnostic system interrogation is observed.

NOTE: Dual AHRS failure will cause immediate illumination of the PUSHER SYST FAIL caution light in air or ground modes - refer to Item 27-30-5.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative system leading to illumination of the # STALL SYST FAIL caution light, must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- While the # STALL SYST FAIL caution light is illuminated, pull breakers WOW2 + CONT (E6) and (F6) at the L DC circuit breaker console, and confirm that the caution light(s) and the PUSHER SYST FAIL caution light extinguish.
- Reset circuit breakers and observe that the caution lights return.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)****27-30-3-3 “AHRS 1 or AHRS 2” failure annunciation through Centralized Diagnostic system interrogation**

3. Prior to each dispatch, access the Centralized Diagnostic system. At the Central Maintenance Panel, above the wardrobe shelf, select the CDS GND MAINT switch to the CDS position and confirm that the adjacent amber LED illuminates.
4. In the cockpit, at one of the ARCDUs, select the MAINT push-button and observe that the CDS MAIN MENU page is displayed.
5. Select the AVIONICS menu icon, then SYST REPORT TEST icon, then corresponding IFC, then locate the SPM.
6. Confirm reason(s) for SPM annunciating the respective STALL # SYST FAIL caution light and ensure that any failure shown are listed above as eligible. Ensure that PROPELLER DE-ICE is not listed as a failure in the CDS.
7. De-select CDS switch on Central Maintenance Panel.
8. Placard the glareshield with appropriate failed function, stating “XXX INOP”.
9. Make appropriate entry in aircraft journey log.

**ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)**

27-30-3-4 "NO DATA FROM FADEC 1" or "NO DATA FROM FADEC 2" failure annunciation through Centralized Diagnostic system interrogation

Interval	Installed	Required	Procedure
A	2	0	(M)

One or both caution lights may be illuminated for two flight days provided:

- It is confirmed that the illumination of the # STALL SYST FAIL and accompanying PUSHER SYST FAIL caution lights occur only on ground,
- Prior to each flight the reason for illumination is confirmed to be a result of the listed eligible failures,
- The Centralized Diagnostic System must be interrogated for the affected SPM to ensure that the PROPELLER DE-ICE failure is not indicated, and
- "NO DATA FROM FADEC 1" or "NO DATA FROM FADEC 2" failure annunciation through Centralized Diagnostic system interrogation is observed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative system leading to illumination of the # STALL SYST FAIL caution light, must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- While the # STALL SYST FAIL caution light is illuminated, pull breakers WOW2 + CONT (E6) and (F6) at the L DC circuit breaker console, and confirm that the caution light(s) and the PUSHER SYST FAIL caution light extinguish.
- Reset circuit breakers and observe that the caution lights return.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)**

27-30-3-4 "NO DATA FROM FADEC 1" or "NO DATA FROM FADEC 2" failure annunciation through Centralized Diagnostic system interrogation

3. Prior to each dispatch, access the Centralized Diagnostic system. At the Central Maintenance Panel, above the wardrobe shelf, select the CDS GND MAINT switch to the CDS position and confirm that the adjacent amber LED illuminates.
4. In the cockpit, at one of the ARCDUs, select the MAINT push-button and observe that the CDS MAIN MENU page is displayed.
5. Select the AVIONICS menu icon, then SYST REPORT TEST icon, then corresponding IFC, then locate the SPM.
6. Confirm reason(s) for SPM annunciating the respective STALL # SYST FAIL caution light and ensure that any failure shown are listed above as eligible. Ensure that PROPELLER DE-ICE is not listed as a failure in the CDS.
7. De-select CDS switch on Central Maintenance Panel.
8. Placard the glareshield with appropriate failed function, stating "XXX INOP".
9. Make appropriate entry in aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)****27-30-3-5 "STICK SHAKER" failure annunciation through Centralized Diagnostic system interrogation**

Interval	Installed	Required	Procedure
A	2	0	(M)

One or both caution lights may be illuminated for two flight days provided:

- It is confirmed that the illumination of the # STALL SYST FAIL and accompanying PUSHER SYST FAIL caution lights occur only on ground,
- Prior to each flight the reason for illumination is confirmed to be a result of the listed eligible failures,
- The Centralized Diagnostic System must be interrogated for the affected SPM to ensure that the PROPELLER DE-ICE failure is not indicated, and
- Dispatch is also to consider provisos of MMEL Item 27-30-2.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative system leading to illumination of the # STALL SYST FAIL caution light, must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- While the # STALL SYST FAIL caution light is illuminated, pull breakers WOW2 + CONT (E6) and (F6) at the L DC circuit breaker console, and confirm that the caution light(s) and the PUSHER SYST FAIL caution light extinguish.
- Reset circuit breakers and observe that the caution lights return.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 9

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-3 #1 STALL SYSTEM FAIL, #2 STALL SYSTEM FAIL, Caution Light(s)**

27-30-3-5 "NO DATA FROM FADEC 1" or "NO DATA FROM FADEC 2" failure annunciation through Centralized Diagnostic system interrogation

3. Prior to each dispatch, access the Centralized Diagnostic system. At the Central Maintenance Panel, above the wardrobe shelf, select the CDS GND MAINT switch to the CDS position and confirm that the adjacent amber LED illuminates.
4. In the cockpit, at one of the ARCDUs, select the MAINT push-button and observe that the CDS MAIN MENU page is displayed.
5. Select the AVIONICS menu icon, then SYST REPORT TEST icon, then corresponding IFC, then locate the SPM.
6. Confirm reason(s) for SPM annunciating the respective STALL # SYST FAIL caution light and ensure that any failure shown are listed above as eligible. Ensure that PROPELLER DE-ICE is not listed as a failure in the CDS.
7. De-select CDS switch on Central Maintenance Panel.
8. Placard the glareshield with appropriate failed function, stating "XXX INOP".
9. Make appropriate entry in aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-3. 10

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-4 Stall Warning System**

Interval	Installed	Required	Procedure
A	2	1	(M)(O)

May be inoperative for two days provided:

- Affected system and stick pusher are deactivated,
- The unaffected system is tested before each departure,
- CG restrictions are observed,
- Flight is not conducted into known or forecast icing conditions, and
- Flights are conducted in accordance with the AFM Supplement 11 OPERATION WITH ONE INOPERATIVE STALL WARNING AND/OR STICK PUSHER SYSTEM.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Stall Warning and Stick Pusher Systems must be placarded in the flight compartment.

Operating Procedures

Operations must be conducted in accordance with the AFM Supplement 11 OPERATION WITH ONE INOPERATIVE STALL WARNING AND/OR STICK PUSHER SYSTEM.

Maintenance Procedures

- Pull and clip the STICK PUSHER circuit breakers on the avionics circuit breaker panel.
- When #2 system is affected, pull and clip the circuit breaker for SPM 2 on the avionics circuit breaker panel.
- When #1 system is affected, pulling the circuit breaker for SPM 1 on the avionics circuit breaker panel, will also cause the GPWS to be inoperative, and should be avoided if possible. (It is permissible to swap SPMs to ensure SPM 1 remains operational).
- Apply aircraft electrical power adequate to support both MAIN busses.
- Confirm via ESID Electrical Page indication that both DC Main busses are powered.
- Ensure the aircraft is in weight-on-wheels mode.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

27-30-4 Stall Warning System

7. At the pilot's side console, select the STALL WARN switch to TEST and then confirm unaffected stick shaker operates and the respective caution light does not illuminate following release of the test switch.
8. Switch off supplied DC power.
9. Placard the glareshield with "# STALL SYST / PUSHER INOP" (and "GPWS INOP" if applicable).
10. Make appropriate entry in aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-30-5 Stick Pusher System**

Interval	Installed	Required	Procedure
A	1	0	(M)(O)

May be inoperative for two days provided:

- Stick pusher is deactivated,
- CG restrictions are observed,
- Flight is not conducted into known or forecasted icing conditions, and
- Flights are conducted in accordance with the AFM Supplement 11 OPERATION WITH ONE INOPERATIVE STALL WARNING AND/OR STICK PUSHER SYSTEM.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Stick Pusher System must be placarded in the flight compartment.

Operating Procedures

Operations are conducted in accordance with AFM Supplement 11 OPERATION WITH ONE INOPERATIVE STALL WARNING AND/OR STICK PUSHER SYSTEM.

Maintenance Procedures

- Pull and clip the STICK PUSHER circuit breakers on the avionics circuit breaker panel.
- Apply electrical power adequate to support the MAIN busses and confirm via ESID Electrical Page indication that both DC Main busses are powered.
- Ensure the aircraft is in weight-on-wheels mode.
- At the pilot's side console, select the STALL WARN switch to TEST 1 and then confirm pilot's stick shaker operates and the #1 STALL SYST FAIL Caution light is not illuminated following the test.
- Select the STALL WARN switch to TEST 2 and then confirm co-pilot's stick shaker operates and the #2 STALL SYST FAIL Caution light is not illuminated following the test. Release the test switch.
- Switch off supplied DC power.
- Placard the glareshield with "# STALL SYST / PUSHER INOP".
- Make appropriate entry in aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-30-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-60-1 Roll Spoiler Caution Lights****27-60-1-1 ROLL SPLR INBD GND**

Interval	Installed	Required	Procedure
C	1	0	(M#)(O)

May be inoperative provided:

- Associated Roll Spoiler (ground mode) is deactivated, and
- Appropriate AFM performance decrements are applied per Supplement 17
OPERATION WITH INOPERATIVE FLIGHT SPOILERS IN GROUND MODE.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative ROLL SPLR INBD/OUTBD GND caution light must be placarded at the Caution/Warning Panel in the flight compartment.

Operating Procedures

Appropriate performance decrements are applied in accordance with AFM Supplement 17
OPERATION WITH INOPERATIVE FLIGHT SPOILERS IN GROUND MODE.

Maintenance Procedures

- Deactivate roll spoiler ground mode system by disconnecting, capping, and securing the electrical connector to one or both lift dump valves associated with the applicable spoiler pair.
- Apply electrical power to the aircraft DC bus system.
- Ensure that the control selections are as follows:
 - No. 1 and No. 2 POWER levers are selected to FLT IDLE position.
 - Gust lock lever is engaged.
 - ROLL DISC handle is in (engaged).
 - Pilot's control wheels are in neutral position.
 - FLIGHT/TAXI switch on left glareshield panel is selected and held in TAXI position.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-60-1 Roll Spoiler Caution Lights****27-60-1-1 ROLL SPLR INBD GND**

WARNING: ALL PERSONS AND EQUIPMENT MUST BE CLEAR OF FLIGHT CONTROLS AND HYDRAULIC COMPONENTS WHEN YOU PRESSURIZE THE HYDRAULIC SYSTEMS. IF YOU DO NOT DO THIS, YOU CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO THE EQUIPMENT.

4. Pressurize No. 1 and No. 2 aircraft hydraulic systems.
5. Visually confirm that all spoilers are in the down position (ie. flush with wing surface) and PFCS indicator indicates SPOILERS down.
6. Select FLIGHT/TAXI switch to FLIGHT position, and visually check that the associated roll spoilers remain in the down position and the PFCS indicator indicates SPOILERS in down position.
7. Ensure No. 1 and No. 2 POWER levers are at FLT IDLE position and operate flight spoilers and visually confirm full and free movement of inboard and outboard spoiler panels as indicated on PFCS indicator.
8. On co-pilot's glareshield, select ANTI-SKID switch to TEST position. Check that INBD and OUTBD ANTISKID caution lights illuminate for approximately 6 seconds and then extinguish.
9. Remove aircraft hydraulic and electrical power.
10. Placard inoperative roll spoiler ground mode system in the flight compartment.
11. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-60-1 Roll Spoiler Caution Lights****27-60-1-2 ROLL SPLR OUTBD GND**

Interval	Installed	Required	Procedure
C	1	0	(M#)(O)

May be inoperative provided:

- Associated Roll Spoiler (ground mode) is deactivated, and
- Appropriate AFM performance decrements are applied per Supplement 17
OPERATION WITH INOPERATIVE FLIGHT SPOILERS IN GROUND MODE.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative ROLL SPLR INBD/OUTBD GND caution light must be placarded at the Caution/Warning Panel in the flight compartment.

Operating Procedures

Appropriate performance decrements are applied in accordance with AFM Supplement 17
OPERATION WITH INOPERATIVE FLIGHT SPOILERS IN GROUND MODE.

Maintenance Procedures

- Deactivate roll spoiler ground mode system by disconnecting, capping, and securing the electrical connector to one or both lift dump valves associated with the applicable spoiler pair.
- Apply electrical power to the aircraft DC bus system.
- Ensure that the control selections are as follows:
 - No. 1 and No. 2 POWER levers are selected to FLT IDLE position.
 - Gust lock lever is engaged.
 - ROLL DISC handle is in (engaged).
 - Pilot's control wheels are in neutral position.
 - FLIGHT/TAXI switch on left glareshield panel is selected and held in TAXI position.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-60-1 Roll Spoiler Caution Lights****27-60-1-2 ROLL SPLR OUTBD GND**

WARNING: ALL PERSONS AND EQUIPMENT MUST BE CLEAR OF FLIGHT CONTROLS AND HYDRAULIC COMPONENTS WHEN YOU PRESSURIZE THE HYDRAULIC SYSTEMS. IF YOU DO NOT DO THIS, YOU CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO THE EQUIPMENT.

4. Pressurize No. 1 and No. 2 aircraft hydraulic systems.
5. Visually confirm that all spoilers are in the down position (ie. flush with wing surface) and PFCS indicator indicates SPOILERS down.
6. Select FLIGHT/TAXI switch to FLIGHT position, and visually check that the associated roll spoilers remain in the down position and the PFCS indicator indicates SPOILERS in down position.
7. Ensure No. 1 and No. 2 POWER levers are at FLT IDLE position and operate flight spoilers and visually confirm full and free movement of inboard and outboard spoiler panels as indicated on PFCS indicator.
8. On co-pilot's glareshield, select ANTI-SKID switch to TEST position. Check that INBD and OUTBD ANTISKID caution lights illuminate for approximately 6 seconds and then extinguish.
9. Remove aircraft hydraulic and electrical power.
10. Placard inoperative roll spoiler ground mode system in the flight compartment.
11. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-60-2 FLIGHT/TAXI Switch - TAXI Position Latch**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- The FLIGHT/TAXI Switch operates in both the FLIGHT and TAXI positions,
- The ROLL INBD and ROLL OUTBD Spoiler Advisory Lights are verified operative, and
- Retraction of the spoilers is verified when the Switch is held in the TAXI position prior to each flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative FLIGHT/TAXI switch must be placarded in the flight compartment.

Operating Procedures

- Ensure that control selections are as follows:
 - No. 1 and No. 2 POWER levers are selected to the FLT IDLE position.
 - Gust lock lever is disengaged.
 - ROLL DISC handle is in.
 - Pilot's control wheels are in neutral position.
 - FLIGHT/TAXI switch is selected and held in TAXI position.
- Apply AC and DC electrical power to aircraft buses.
- Pressurize No. 1 and No. 2 hydraulic systems.
- Confirm that all spoilers are retracted in down position and PFCS indicator indicates SPOILERS down. Confirm that SPOILERS advisory lights are all out.

NOTE: Spoilers panels are in retracted "down" position when the spoiler panel is flush with the wing surface.

- Select FLIGHT/TAXI switch to FLIGHT position. Check that all spoilers are extended, PFCS indicator indicates SPOILERS in UP position and SPOILERS advisory lights are illuminated.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

27-60-2

FLIGHT/TAXI Switch - TAXI Position Latch

6. Advance POWER levers until spoilers retract which shows on PFCS indicator and SPOILERS advisory lights go out. If the spoilers are extended, the advisory lights remain illuminated and the take-off warning horn sounds.
7. Remove hydraulic pressure applied in step (3).
8. Remove electrical power applied in step (2).

Maintenance Procedures

1. Placard FLIGHT/TAXI switch on left glareshield panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-60-3 Spoiler Advisory Lights****27-60-3-1 ROLL INBD**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided all PFCS SPOILER indications on the MFD are operative and are periodically monitored.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative spoiler advisory light(s) must be placarded in the flight compartment.

Operating Procedures

1. Apply AC and DC electrical power to aircraft busses.
2. Pressurize #1 and #2 hydraulic systems.
3. Operate the flight spoilers and visually confirm full and free movement of inboard and outboard spoiler panels as indicated on the PFCS indicator.
4. Remove electrical power and hydraulic pressure.

Maintenance Procedures

1. Inoperative spoiler advisory light(s) must be placarded in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-60-3 Spoiler Advisory Lights****27-60-3-2 ROLL OUTBD**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided all PFCS SPOILER indications on the MFD are operative and are periodically monitored.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative spoiler advisory light(s) must be placarded in the flight compartment.

Operating Procedures

1. Apply AC and DC electrical power to aircraft busses.
2. Pressurize #1 and #2 hydraulic systems.
3. Operate the flight spoilers and visually confirm full and free movement of inboard and outboard spoiler panels as indicated on the PFCS indicator.
4. Remove electrical power and hydraulic pressure.

Maintenance Procedures

1. Inoperative spoiler advisory light(s) must be placarded in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FLIGHT CONTROLS******ATA 27*****27-60-4 Roll Spoilers (Ground Mode System)**

Interval	Installed	Required	Procedure
C	2	0	(M#)(O)

May be inoperative provided:

- Associated Roll Spoiler (ground mode) is deactivated, and
- Appropriate AFM performance decrements are applied per supplement 17 OPERATION WITH INOPERATIVE FLIGHT SPOILERS IN GROUND MODE.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Roll Spoiler Ground Mode System(s) must be placarded in the flight compartment.

Operating Procedures

Appropriate performance decrements are applied as per AFM Supplement 17 OPERATION WITH INOPERATIVE FLIGHT SPOILERS IN GROUND MODE.

Maintenance Procedures

- Deactivate roll spoiler ground mode system by disconnecting, capping, and securing the electrical connector to one or both lift dump valves associated with the applicable spoiler pair.
- Apply electrical power to the aircraft DC bus system.
- Ensure that the control selections are as follows:
 - No. 1 and No. 2 POWER levers are selected to FLT IDLE position,
 - Gust lock lever is engaged,
 - ROLL DISC handle is in (engaged),
 - Pilots' control wheels are in neutral position,
 - FLIGHT/TAXI switch on left glareshield panel is selected and held in TAXI position.

WARNING: ALL PERSONS AND EQUIPMENT MUST BE CLEAR OF FLIGHT CONTROLS AND HYDRAULIC COMPONENTS WHEN YOU PRESSURIZE THE HYDRAULIC SYSTEMS. IF YOU DO NOT DO THIS, YOU CAN CAUSE INJURIES TO PERSONS AND DAMAGE TO THE EQUIPMENT.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FLIGHT CONTROLS

ATA 27

27-60-4

Roll Spoilers (Ground Mode System)

4. Pressurize No. 1 and No. 2 aircraft hydraulic systems.
5. Visually confirm that all spoilers are in the down position (ie. flush with wing surface) and PFCS indicator indicates SPOILERS down.
6. Placard inoperative roll spoiler ground mode system(s) in the flight compartment.
7. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

27-60-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-20-1 Pressure Refueling System****28-20-1-1 REFUEL**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided the fuel transfer system is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative REFUEL (manual pressure refueling system) is placarded in the flight compartment and on the External Refuel/ Defuel Panel.

Operating Procedures

None required.

Maintenance Procedures

1. Ensure sufficient fuel in tanks for fuel transfer.
2. Apply AC and DC power to aircraft electrical busses.
3. Ensure that the appropriate fuel system circuit breakers FUEL HLCU & REFUEL DEFUEL on L ESSENTIAL BUS, BATT REFUEL & REFUEL DEFUEL on R ESSENTIAL bus and FUEL AUX PUMP 1 & 2 on 115V AC Frequency Panel (three phase) are closed.

NOTE: During fuel transfer, the donor TANK FUEL LOW caution light may come on momentarily due to collector bay fuel level falling faster than main tank level.

4. Select the FUEL page on the MFD.
5. At the FUEL CONTROL TRANSFER panel, transfer from Tank 1 to Tank 2:
 - a) Fuel TRANSFER switch – TO TANK 2.
 - b) Check both VALVE OPEN, TO TANK 2 TRANSFER SW arrow and TANK 1 AUX PUMP indication appears on the FUEL page of the MFD, and TANK 1 AUX PUMP ON advisory light illuminates.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-20-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-20-1 Pressure Refueling System****28-20-1-1 REFUEL**

6. At completion of transfer:
 - a) Fuel TRANSFER switch – Off.
 - b) Check both VALVE CLOSED indicators appear, TO TANK 2 TRANSFER SW arrow and TANK 1 AUX PUMP indication OFF on the FUEL page of the MFD, and TANK 1 AUX PUMP ON advisory light out.
7. Transfer from Tank 2 to Tank 1:
 - a) Fuel TRANSFER switch – TO TANK 1.
 - b) Check both VALVE OPEN, TO TANK 1 TRANSFER SW arrow and TANK 2 AUX PUMP indication appears on the FUEL page of the MFD, and TANK 2 AUX PUMP ON advisory light illuminates.
8. At completion of transfer:
 - a) Fuel TRANSFER switch – Off.
 - b) Check both VALVE CLOSED indicators appear, TO TANK 1 TRANSFER SW arrow and TANK 2 AUX PUMP indication OFF on the FUEL page of the MFD, and TANK 2 AUX PUMP ON advisory light out.

NOTE:

1. Maximum fuel imbalance is indicated by the FUEL quantity readout on ED and fuel gauge pointers on FUEL page of the MFD changing from white to amber and [BALANCE] indication appears, flashing on ED.
 2. If TANK 1 QTY or TANK 2 QTY is inoperative, the [BALANCE] indication is also inoperative.
9. Remove AC and DC electrical power from aircraft.
 10. Placard Pressure Refueling System on External Refuel/Defuel Panel in rear underside of No. 2 Nacelle, also on LEFT and/or RIGHT DC CIRCUIT BREAKER panel.
 11. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-20-1 Pressure Refueling System****28-20-1-2 PRESELECT REFUEL**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided the fuel transfer system is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative PRESELECT (automatic pressure refueling system) is placarded in the flight compartment and on the External Refuel/Defuel Panel.

Operating Procedures

None required.

Maintenance Procedures

1. Ensure sufficient fuel in tanks for fuel transfer.
2. Apply AC and DC power to aircraft electrical busses.
3. Ensure that the appropriate fuel system circuit breakers FUEL HLCU & REFUEL DEFUEL on L ESSENTIAL BUS, BATT REFUEL & REFUEL DEFUEL on R ESSENTIAL bus and FUEL AUX PUMP 1 & 2 on 115V AC Frequency Panel (three phase) are closed.

NOTE: During fuel transfer, the donor TANK FUEL LOW caution light may come on momentarily due to collector bay fuel level falling faster than main tank level.

4. Select the FUEL page on the MFD.
5. At the FUEL CONTROL TRANSFER panel, transfer from Tank 1 to Tank 2:
 - a) Fuel TRANSFER switch – TO TANK 2.
 - b) Check both VALVE OPEN, TO TANK 2 TRANSFER SW arrow and TANK 1 AUX PUMP indication appears on the FUEL page of the MFD, and TANK 1 AUX PUMP ON advisory light illuminates.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-20-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-20-1 Pressure Refueling System****28-20-1-2 PRESELECT REFUEL**

6. At completion of transfer:
 - a) Fuel TRANSFER switch – Off.
 - b) Check both VALVE CLOSED indicators appear, TO TANK 2 TRANSFER SW arrow and TANK 1 AUX PUMP indication OFF on the FUEL page of the MFD, and TANK 1 AUX PUMP ON advisory light out.
7. Transfer from Tank 2 to Tank 1:
 - a) Fuel TRANSFER switch – TO TANK 1.
 - b) Check both VALVE OPEN, TO TANK 1 TRANSFER SW arrow and TANK 2 AUX PUMP indication appears on the FUEL page of the MFD, and TANK 2 AUX PUMP ON advisory light illuminates.
8. At completion of transfer:
 - a) Fuel TRANSFER switch – Off.
 - b) Check both VALVE CLOSED indicators appear, TO TANK 1 TRANSFER SW arrow and TANK 2 AUX PUMP indication OFF on the FUEL page of the MFD, and TANK 2 AUX PUMP ON advisory light out.

NOTE:

3. Maximum fuel imbalance is indicated by the FUEL quantity readout on ED and fuel gauge pointers on FUEL page of the MFD changing from white to amber and [BALANCE] indication appears, flashing on ED.
 4. If TANK 1 QTY or TANK 2 QTY is inoperative, the [BALANCE] indication is also inoperative.
9. Remove AC and DC electrical power from aircraft.
 10. Placard Pressure Refueling System on External Refuel/Defuel Panel in rear underside of No. 2 Nacelle, also on LEFT and/or RIGHT DC CIRCUIT BREAKER panel.
 11. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-20-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-20-1 Pressure Refueling System****28-20-1-3 REFUEL AND PRESELECT REFUEL**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- Fuel transfer system is verified operative, and
- Procedures are established and used for gravity refueling.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Pressure Refueling System is placarded in the flight compartment and on the External Refuel/Defuel Panel.

Operating Procedures

None required.

Maintenance Procedures

- Alternative fueling procedures are established for gravity refueling and used.
- Ensure sufficient fuel in tanks for fuel transfer.
- Apply AC and DC power to aircraft electrical busses.
- Ensure that the appropriate fuel system circuit breakers FUEL HLCU & REFUEL DEFUEL on L ESSENTIAL BUS, BATT REFUEL & REFUEL DEFUEL on R ESSENTIAL bus and FUEL AUX PUMP 1 & 2 on 115V AC Frequency Panel (three phase) are closed.

NOTE: During fuel transfer, the donor TANK FUEL LOW caution light may come on momentarily due to collector bay fuel level falling faster than main tank level.

- Select the FUEL page on the MFD.
- Transfer from Tank 1 to Tank 2:
 - Fuel TRANSFER switch – TO TANK 2.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-20-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-20-1 Pressure Refueling System****28-20-1-3 REFUEL AND PRESELECT REFUEL**

- b) Check both VALVE OPEN, TO TANK 2 TRANSFER SW arrow and TANK 1 AUX PUMP indication appears on the FUEL page of the MFD, and TANK 1 AUX PUMP ON advisory light illuminates.
- 7. At completion of transfer:
 - a) Fuel TRANSFER switch – Off.
 - b) Check both VALVE CLOSED indicators appear, TO TANK 2 TRANSFER SW arrow and TANK 1 AUX PUMP indication OFF on the FUEL page of the MFD, and TANK 1 AUX PUMP ON advisory light out.
- 8. Transfer from Tank 2 to Tank 1:
 - a) Fuel TRANSFER switch – TO TANK 1.
 - b) Check both VALVE OPEN, TO TANK 1 TRANSFER SW arrow and TANK 2 AUX PUMP indication appears on the FUEL page of the MFD, and TANK 2 AUX PUMP ON advisory light illuminates.
- 9. At completion of transfer:
 - a) Fuel TRANSFER switch Off.
 - b) Check both VALVE CLOSED indicators appear, TO TANK 1 TRANSFER SW arrow and TANK 2 AUX PUMP indication OFF on the FUEL page of the MFD, and TANK 2 AUX PUMP ON advisory light out.

NOTE:

- 1. Maximum fuel imbalance is indicated by the FUEL quantity readout on ED and fuel gauge pointers on FUEL page of the MFD changing from white to amber and the [BALANCE] indication appears, flashing on ED.
 - 2. If TANK 1 QTY or TANK 2 QTY is inoperative, the [BALANCE] indication is also inoperative.
10. Remove AC and DC electrical power from aircraft.
11. Placard Pressure Refueling System on External Refuel/Defuel Panel in rear underside of No. 2 Nacelle, also on LEFT and/or RIGHT DC CIRCUIT BREAKER panel.
12. Make appropriate entry in the aircraft journey log.
- ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-20-1. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-20-2 MASTER VALVE CLOSED Light (Refuel/Defuel Panel)**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided the REFUEL/DEFUEL SHUT-OFF VALVE is verified closed following refueling.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative MASTER VALVE CLOSED indicator light is placarded in the flight compartment and on the Refuel/Defuel Panel.

Operating Procedures

None required.

Maintenance Procedures

1. Remove the right hand nacelle access panel 423AT.
2. Visually verify the REFUEL/DEFUEL SHUT-OFF VALVE is in the closed position by the physical indication lever on the REFUEL/DEFUEL SHUT-OFF VALVE Actuator.
3. Verify no fuel leak from refuel/defuel adapter.
4. Reinstall access panel 423AT.
5. Placard on the rear underside of No. 2 Nacelle (inside External Refuel/Defuel panel) and in the flight compartment.
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-1 Height Measuring Unit (Magnetic Dipsticks)**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided the fuel quantity is determined by other approved means.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Height Measuring Unit (HMU) in the flight compartment and on External Refuel/Defuel Panel.

Operating Procedures

None required.

Maintenance Procedures

1. Placard on the rear underside of No. 2 Nacelle (inside External Refuel/Defuel panel) and in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-2 Fuel TANK °C Temperature Indication (on ESID)**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Fuel Tank Temperature Indication in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Fuel Tank Temperature Indication on the ESID in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-3 FUELING ON Caution Light**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided prior to each flight:

- The REFUEL/OFF/DEFUEL switch is confirmed OFF, and
- The Refuel/Defuel access panel is verified closed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative FUELING ON caution light must be placarded in the flight compartment.

Operating Procedures

Following each refueling, ensure that the REFUEL/OFF/DEFUEL switch on the external refuel panel is selected OFF and panel is confirmed closed.

Maintenance Procedures

- Placard FUELING ON caution light on the Caution and Warning Panel in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-4 TANK 1 AUX PUMP and TANK 2 AUX PUMP
Advisory Lights**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative provided:

- The associated ENG FUEL PRESS caution light and Aux Fuel Pump are verified operative, and
- Both flight compartment FUEL QTY Indications are verified operative, and
- Operations are conducted in compliance with AFM Supplement 95, OPERATION WITH AN INOPERATIVE AUX PUMP ADVISORY LIGHT.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative AUX PUMP advisory light must be placarded in the flight compartment.

Operating Procedures

Operations are conducted in compliance with AFM Supplement 95 OPERATION WITH AN INOPERATIVE TANK AUX PUMP ADVISORY LIGHT.

Maintenance Procedures

- Placard AUX PUMP advisory light on fuel control panel in the flight compartment.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-5 #1 TANK FUEL LOW and #2 TANK FUEL LOW Caution Lights**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative provided:

- The associated flight compartment FUEL QTY Indication is verified operative and is periodically monitored during flight, and
- The associated engine FF (Fuel Flow) Indication is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative TANK FUEL LOW caution light must be placarded in the flight compartment.

Operating Procedures

1. Apply DC electrical power to the aircraft buses.
2. Ensure that fuel quantity is displayed on both master FUEL QTY indicators on the Engine Display and the Multi-Function Display (ESID) in the Flight Compartment.
3. Check that the FF indications on the Engine Display in the flight compartment indicate 0 pph.
4. Start both engines and run at ground idle. Check that the Fuel Flow Indicators on the Engine Display in the flight compartment indicate positive flow.
5. Shut down both engines.
6. Remove electrical power from the aircraft buses.

Maintenance Procedures

1. Placard TANK FUEL LOW caution light on Caution and Warning Panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-6 Refuel/Defuel/Transfer VALVE (OPEN/
CLOSED) Advisory Lights**

Interval	Installed	Required	Procedure
C	2	1	(M)

May be inoperative provided the fuel transfer system and flight compartment FUEL QTY Indications are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative VALVE OPEN/CLOSED advisory light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Apply DC and AC electrical power to the aircraft buses.
2. Ensure that fuel quantity is displayed on both master FUEL QTY indicators on the ESID Fuel Page and the Engine Display in the flight compartment.
3. At the FUEL CONTROL panel, select TRANSFER switch to TANK 1 position and observe that the TANK 2 AUX PUMP advisory light is illuminated and that fuel begins to transfer from tank 2 to tank 1 as indicated on the ESID fuel quantity indicators on the Engine Display in the flight compartment.
4. Select TRANSFER switch to TANK 2 position and observe that the TANK 1 AUX PUMP advisory light is illuminated and that fuel begins to transfer from tank 1 to tank 2 as indicated on the ESID fuel quantity indicators on the Engine Display in the flight compartment.
5. Return the TRANSFER switch to the center position.
6. Remove electrical power from the aircraft buses.
7. Placard inoperative VALVE OPEN/CLOSED advisory light on the FUEL CONTROL panel in the flight compartment.
8. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-6. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-7 External Refuel/Defuel Panel FUEL QTY Indicators**

Interval	Installed	Required	Procedure
C	2	0	(M)

May be inoperative provided the fuel quantity is determined by other approved means prior to each flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative external refuel/defuel panel fuel quantity indicator(s) must be placarded in the flight compartment and on the right nacelle.

Operating Procedures

None required.

Maintenance Procedures

1. Apply DC electrical power to the aircraft buses.
2. Level the aircraft prior to refueling by:
 - a) Following an approved leveling procedure, or
 - b) Placing the aircraft on a reasonably flat/level area on the ramp.

NOTE: The aircraft is considered level when the turn and slip indicator (inclinometer) is in the center location on the pilot and co-pilot's PFDs

3. Following each refueling, determine the fuel quantity using Flight Compartment Indicators or the magnetic dipsticks (refer to Ramp Servicing Manual).
4. Placard the inoperative fuel tank quantity indicator(s) at the external refuel/defuel panel on rear underside of right nacelle.
5. Remove electrical power from the aircraft buses.
6. Placard the inoperative fuel tank quantity indicator(s) at the Engine Display and ESID in the flight compartment.
7. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-7. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-7. 2



Interval	Installed	Required	Procedure
C	2	0	(M)

Minimum Equipment List Procedures (MELP)

Inoperative REFUEL SHUTOFF advisory light must be placarded on the external refuel/defuel panel.

None required.

1. Apply DC electrical power to the aircraft buses.
2. Ensure that fuel quantity is displayed on both master FUEL QTY indicators on the Engine Display and the Multi-Function Display in the flight compartment.
3. Ensure that the fuel quantity is also displayed on both external Refuel/Defuel Panel FUEL QTY indicators.

4. Confirm that the quantities displayed on the FUEL QTY indicators on the Multi-Function Display in the flight compartment have also stopped increasing.
5. The refuel hose may now be disconnected from the refuel adapter.
6. Remove electrical power from the aircraft buses.
7. Placard REFUEL SHUTOFF advisory light on the external refuel/defuel panel.
8. Make appropriate entry in the aircraft journey log.



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-8. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-9 APU FUEL VALVE Advisory Light****28-40-9-1 OPEN**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The OPEN light is extinguished, and
- The CLOSED light is illuminated when the APU is selected OFF.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative APU FUEL OPEN advisory light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Apply DC electrical power to the aircraft buses.
2. Ensure that the OPEN light on the overhead Fire Control Panel is extinguished.
3. Ensure that the CLOSED light on the overhead Fire Control Panel is illuminated when the APU is selected OFF.
4. Inoperative APU FUEL OPEN advisory light must be placarded in the flight compartment.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■**ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-9. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-9 APU FUEL VALVE Advisory Light****28-40-9-2 CLOSED**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative provided:

- APU is not operated, and
- The APU fuel shut off valve is verified closed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative APU FUEL CLOSED advisory light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures**Method A****NOTE:** If access to the center wing dry bay is not practical, the APU fuel shutoff valve may be verified closed by the following procedure:

- Apply DC power to aircraft buses.
- Pull and collar circuit breaker "APU FUEL VALVE" on Left Essential 28VDC Circuit Breaker Panel.
- Attempt to start APU. If APU fails to start, then the APU fuel shutoff valve is verified closed.

NOTE: The APU may spin up momentarily until residual fuel in the manifold is consumed, then shut down. Also, the APU FADEC may log a fault for the uncommanded shutdown/unsuccessful start.

- Placard APU FUEL CLOSED advisory light on the Fire Control Panel in the flight compartment.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-9. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

28-40-9 APU FUEL VALVE Advisory Light

28-40-9-2 CLOSED

5. Make appropriate entry in the aircraft journey log.

Method B:

1. Open center wing dry bay access panel 521BT and verify that the position indicator arm of the APU fuel shutoff valve is in the CLOSED position.

NOTE: For removal of the access panel, please refer to Maintenance Manual PSM 1-84-2, Chapter 57.

2. Placard APU FUEL CLOSED advisory light on the Fire Control Panel in the flight compartment.
3. Make appropriate entry in the aircraft journey log.

Method C:

1. Feed a borescope/flexiscope through the wing dry bay drain port in the LH armpit to access the dry bay area.
2. Locate the APU Fuel Feed Shut-off valve.
3. Verify that INDICATOR ARM on the APU Fuel Feed Shut-off Valve is in CLOSED position.
4. Placard APU FUEL CLOSED advisory light on the Fire Control Panel in the flight compartment.
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-9. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-9. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-10 Flight Compartment Fuel QTY Indications (on ESID)**

Interval	Installed	Required	Procedure
C	2	1	(M)

May be inoperative provided:

- The fuel quantity is determined by other approved means prior to each flight,
- The Fuel Flow Indications are operative, are monitored during flight, and fuel consumption is recorded,
- TANK FUEL LOW caution light is operative, and
- Aircraft is dispatched with wing tanks balanced

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative FUEL QTY indicator in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

Following each refueling:

- Level the aircraft by:
 - Following an approved leveling procedure, or
 - Placing the aircraft on a reasonably flat/level area on the ramp.

NOTE: The aircraft is considered level when the turn and slip indicator (inclinometer) is in the center location on the pilot and co-pilot's PFDs or by viewing the Flight Management System data page to ensure the pitch is between -3 to plus 3 degrees and the roll is less than 3 degrees.

- With the aircraft level, following each refueling, verify fuel quantity using HMU dipsticks or Refuel/Defuel Panel FUEL QTY Indicators.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-10. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-10 Flight Compartment Fuel QTY Indications (on ESID)****NOTE:**

1. The HMU dipstick reading should be taken at least 5 minutes after refueling is completed.
2. The HMU dipstick readable range is between 850 to 5000lb (385 to 2270kg) per tank/wing or 15% to 85% of total usable fuel quantity of 5862 lb per tank/wing.

Verification of Low Level Sensor to be performed once

1. Level the aircraft by:
 - a) Following an approved levelling procedure, or
 - b) Placing the aircraft on a reasonably flat/level area on the ramp.

NOTE: The aircraft is considered level when the turn and slip indicator (inclinometer) is in the center location on the pilot and co-pilot's PFDs or by viewing the Flight Management System data page to ensure the pitch is between -3 to plus 3 degrees and roll is less than 3 degrees.

2. Install wheel chokes on all three gears.
3. Set EMERG BRAKE lever to the PARK position.
4. Run engine at IDLE on the side where fuel quantity is functional.
5. Ensure engine on side where fuel quantity indication is inoperative is off.
6. Record current fuel quantity on side with operative fuel quantity indicator.
7. Apply brakes with brake pedals and ensure aircraft does not move.
8. Set EMERG BRAKE lever to the OFF position.
9. Ensure PARKING BRAKE caution light goes out.
10. Transfer fuel from the fuel tank with the inoperative fuel quantity indication to the opposite fuel tank (which has an operational fuel quantity indicator), until you see the TANK FUEL LOW caution light illuminates for the tank with the inoperative fuel quantity gauge.

NOTE: Make sure you do not exceed the maximum fuel capacity of the wing tank when transferring fuel.

NOTE: TANK FUEL LOW caution light should illuminate at approx. 355 ±45 lbs (160±20 kg) of fuel in the tank.

11. Record the new fuel quantity on side with operative fuel quantity indicator. The amount of fuel that was transferred to the tank with the operation fuel quantity indicator, should than be transferred back to the fuel tank with the inoperative fuel quantity indicator.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-10. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

28-40-10 Flight Compartment Fuel QTY Indications (on ESID)

12. Once transfer is complete, move TRANSFER switch to the OFF position.
13. Set EMER BRAKE lever to the PARK position.
14. Shut engine down.
15. Remove wheel chokes.
16. Placard inoperative FUEL QTY Indicator on the Fuel Control Panel in the flight compartment.
17. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-10. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-10. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****FUEL******ATA 28*****28-40-11 Fuel Inlet Temperature Indications (on Engine Display)**

Interval	Installed	Required	Procedure
A	2	1	(O)

May be inoperative for one flight provided the TANK AUX PUMP Advisory Lights are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Fuel Inlet Temperature Indication on the Engine Display must be placarded in the flight compartment.

Operating Procedures

1. For the side with the inoperative Fuel Inlet Temperature Indication ensure that the appropriate TANK 1 AUX PUMP or TANK 2 AUX PUMP switch is selected.
2. Check appropriate TANK AUX PUMP ON advisory light illuminates.

Maintenance Procedures

1. Placard the fuel inlet Temperature Indication in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-11. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

FUEL

ATA 28

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

28-40-11. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-10-1 Parking/Emergency Brake Accumulator Hand Pump**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided accumulator pressure is verified prior to engine start.

Minimum Equipment List Procedures (MELP)**Placard**

Placard the inoperative parking/emergency brake accumulator hand pump in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative parking/emergency brake accumulator hand pump in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-10-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-10-2 HYD FSOV OPEN Indication Light**

Interval	Installed	Required	Procedure
C	2	1	(M)

One may be inoperative provided:

- The associated HYD FSOV is verified open, and
- The associated HYD FSOV CLOSED indication light is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative HYD FSOV OPEN Indicator Light for associated system on fire control panel in flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Place ground lock pins into main landing gear and engage nose wheel ground locking mechanism.
- Test the associated Hydraulic Firewall Shutoff Valve (HYD FSOV) and the HYD VALVES CLOSED indicator light, to confirm they are operative:
 - Connect and energize DC or AC power.
 - Open and tag circuit breakers for, BATTERY PWR- FIRE EXT/CONT AMP - 1&2 ENG and, BATTERY PWR- FIRE EXT/CONT AMP - CARGO, on the right essential bus.
 - Check that BATTERY PWR-HYD SOV - ENG 1 and BATTERY PWR-HYD SOV - ENG 2 circuit breakers on the right essential bus are closed.
 - Do an operational test of the associated hydraulic firewall shut-off valve as follows:
 - In the nacelle, visually check the shut-off valve position indicator. Make sure that the indicator arm shows the OPEN position.

NOTE: Access the shut-off valve through the main landing gear door.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-10-2****HYD FSOV OPEN Indication Light**

- ii. On the flight compartment fire protection panel, pull the associated “PULL FUEL/HYD OFF” fire handle.
 - iii. In the associated nacelle, make sure that the shut-off valve indicator arm shows the CLOSED position.
 - iv. In the flight compartment, make sure that the white HYD VALVES CLOSED indicator light illuminates.
 - v. On the flight compartment fire protection panel, push the associated “PULL FUEL/HYD OFF” fire handle in.
 - vi. In the nacelle, make sure that the shut-off valve indicator arm shows the OPEN position.
 - vii. In the flight compartment, make sure that the white HYD VALVES CLOSED indicator light extinguishes.
 - e. Remove the external power.
 - f. Remove the tags and close circuit breakers for, BATTERY PWR- FIRE EXT/CONT AMP - 1&2 ENG and, BATTERY PWR- FIRE EXT/CONT AMP - CARGO, on the right essential bus.
3. Placard INOPERATIVE HYD FSOV OPEN Indicator Light for associated system on fire control panel in flight compartment.
 4. Make appropriate entry in journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-1 HYD PRESS 1 and HYD PRESS 2 Indications**

Interval	Installed	Required	Procedure
C	2	1	(M)

May be inoperative provided:

- The associated ENG HYD PUMP Caution Light is verified operative, and
- The associated HYD QTY Indication is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative HYD PRESS 1 or 2 gauge in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Apply DC electrical power to the aircraft buses.
2. Check hydraulic fluid quantity at HYD QTY gauge on MFD and compare with fluid quantity at associated remote hydraulic quantity indicator located in the respective engine nacelle, below hydraulic system reservoir. Ensure that hydraulic fluid level is adequate.
3. Start the engine associated with the inoperative indicator and run to Ground Idle. Check that ENG HYD PUMP caution light goes out.
4. Shut down associated engine.
5. Remove electrical power from the aircraft buses.
6. Placard inoperative HYD PRESS 1 or 2 gauge on the MFD in the flight compartment.
7. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-2 HYD PRESS STBY Indication**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Normal operation of the Standby Hydraulic Pump is verified before each flight, and
- HYD PRESS 1 and HYD PRESS 2 Indications are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative HYD PRESS STBY gauge in the flight compartment.

Operating Procedures

1. Apply AC and DC power to aircraft electrical buses.

NOTE: If buses are to be powered from an engine, only start engine 2.

2. Select the STBY HYD PRESS switch.
3. Check that the HYD PRESS 1 gauge on the MFD reads approximately 2800 to 3100 psi.
4. Remove power from AC and DC buses.

Maintenance Procedures

1. Placard inoperative HYD PRESS STBY gauge on the MFD in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-2. 2

DHC-8-402

HYDRAULIC POWER

ATA 29

29-30-3 System #1 and #2 Nacelle Reservoir Quantity Indicators

Interval	Installed	Required	Procedure
C	2	0	(M)(O)

May be inoperative provided:

- a) HYD QTY 1 and HYD QTY 2 Indications are verified operative, and
- b) ENG HYD PUMP Caution Lights are verified operative.

Minimum Equipment List Procedures (MELP)

Placard

Placard inoperative Nacelle Hydraulic Quantity Indicator(s) in the flight compartment.

Operating Procedures

1. Apply DC electrical power to the aircraft buses.
2. With associated Engine shut down, move associated condition lever to START & FEATHER.
3. Ensure associated ENG HYD PUMP caution light remains illuminated.
4. Check associated HYD QTY indicator for proper fluid level.
5. Remove electrical power from the aircraft buses.

Maintenance Procedures

1. Placard inoperative Nacelle Hydraulic Quantity Indicator(s) in the flight compartment and on the indicator(s) in the associated main landing gear wheel well.
2. Make appropriate entry in the aircraft journey log.

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid
DELHI, DATE -

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-4 #1 STBY HYD PUMP HOT Caution Light**

Interval	Installed	Required	Procedure
A	1	0	NIL

May be inoperative provided:

- STBY HYD PRESS Indication is operative, and
- Repairs are made within one flight day.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative #1 STBY HYD PUMP HOT caution light in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative #1 STBY HYD PUMP HOT caution light on the caution and warning panel in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-5 HYD QTY 3 Indication**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The System #3 Aft Fuselage Hydraulic Quantity Indicator is verified operative, and
- Adequate fluid quantity is verified before each flight.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative HYD QTY 3 indicator in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative HYD QTY 3 indicator on the MFD in the flight compartment.
- Check hydraulic fluid quantity at associated remote hydraulic quantity indicator located in aft fuselage equipment bay below hydraulic system 3 reservoir. Ensure that hydraulic fluid level is adequate. Correct hydraulic fluid quantity level is identified by QUANTITY vs. FLUID TEMP graph located adjacent to remote quantity indicator.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-6 System #3 Aft Fuselage Hydraulic Quantity Indicator**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided HYD QTY 3 Indication is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative aft fuselage hydraulic quantity indicator in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative aft fuselage hydraulic quantity indicator in the flight compartment and on the indicator in the aft fuselage equipment bay.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-6. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-7 HYD PRESS 3 Indication**

Interval	Installed	Required	Procedure
C	1	0	(M#)

May be inoperative provided:

- The #3 HYD PUMP Caution Light is verified operative, and
- The HYD QTY 3 Indication is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative HYD PRESS 3 indication in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Apply AC and DC power to aircraft electrical buses.
2. Check hydraulic fluid quantity at HYD QTY 3 gauge on MFD and compare with fluid quantity at associated remote hydraulic quantity indicator located in the aft fuselage equipment bay, below hydraulic system reservoir. Ensure that hydraulic fluid level is adequate. Correct hydraulic fluid quantity level is identified by QUANTITY vs. FLUID TEMP graph located adjacent to remote quantity indicator.
3. With neither engine running, access the aft fuselage equipment bay through access panel 311AB, and depress the manual relief button on the system 3 isolation valve to depressurize the system 3 accumulator.
4. Ensure that the #3 HYD PUMP caution light is illuminated.
5. Press the HYD #3 ISOL VLV button to open the system 3 isolation valve.
6. Ensure that the #3 HYD PUMP caution light is extinguished (the DC motor pump will start when the valve is selected open).
7. Select the Standby Hydraulic Pump (SPU) and PTU to ON.
8. Ensure that the ELEVATOR PRESS caution light is illuminated.
9. Select the Standby Hydraulic Pump (SPU) and PTU to NORM.
10. Ensure that the ELEVATOR PRESS caution light is extinguished.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-7. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

29-30-7

HYD PRESS 3 Indication

11. Press the HYD #3 ISOL VLV button to close the system 3 isolation valve.
12. Placard inoperative HYD PRESS 3 indicator on the MFD in the flight compartment.
13. Make appropriate entry in the aircraft journey log.



ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-7. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

29-30-8

PTU CNTRL ON Advisory Light

29-30-8-1

Pre Modsum 4-126354 or 4-126425

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-8. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-8 PTU CNTRL ON Advisory Light****29-30-8-2 Post Modsum 4-126354 or 4-126425****29-30-8-2A PTU CNTRL ON Advisory Light (White)**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided Pressure Green Cross Hatch Advisory Light is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative PTU CNTRL ON advisory light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard PTU CNTRL advisory light at PTU CNTRL switch on HYDRAULIC CONTROL panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-8. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-8 PTU CNTRL ON Advisory Light****29-30-8-2 Post Modsum 4-126354 or 4-126425****29-30-8-2B PTU CNTRL FAIL Advisory Light (Amber)**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided Pressure Green Cross Hatch Advisory Light is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative PTU CNTRL FAIL advisory light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard PTU CNTRL advisory light at PTU CNTRL switch on HYDRAULIC CONTROL panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-8. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-8 PTU CNTRL ON Advisory Light****29-30-8-2 Post Modsum 4-126354 or 4-126425****29-30-8-2C PTU CNTRL pressure Green Cross Hatch Advisory Light (Green)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- The HYD PRESS 2 indication is verified operative,
- The #2 ENG HYD PUMP caution light is verified operative, and
- The hydraulic Power Transfer Unit is verified operative prior to each flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative PTU CNTRL Pressure green cross hatch advisory light must be placarded in the flight compartment.

Operating Procedures

ONLY PTU WILL BE VERIFIED OPERATIVE THROUGH STEPS 5 TO 10 PRIOR TO EACH FLIGHT. STEPS 1-4 WILL BE PERFORMED ONLY ONCE FOR TEN-DAY (C) RELIEF.

1. Apply DC power to aircraft electrical buses.
2. Ensure that HYD PRESS 2 indicator indicates 0 psi and the #2 ENG HYD PUMP caution light is illuminated.
3. Start engine #2 and run at Idle. Check that HYD PRESS 2 indicator indicates 2900 to 3100 psi and the #2 ENG HYD PUMP caution light goes out.
4. Shut down engine #2.
5. Start engine #1 and run to idle,

OR

Apply 400 Hz 115V AC electrical power to aircraft using a ground power unit. Set the STBY HYD PRESS push button switch to ON, which is located on the HYDRAULIC CONTROL Panel and observe that switch-light illuminates green.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-8. 4



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

29-30-8 PTU CNTRL ON Advisory Light

29-30-8-2 Post Modsum 4-126354 or 4-126425

29-30-8-2C PTU CNTRL pressure Green Cross Hatch Advisory Light (Green)

CAUTION: MONITOR #1 STBY HYD PUMP HOT CAUTION LIGHT. IF IT ILLUMINATES, TURN THE SPU OFF.

6. Ensure that HYD PRESS 2 indicator indicates 0 psi.
7. Select the PTU CNTRL switch to ON.
8. Check that HYD PRESS 2 indicator indicates 2800 to 3000 psi.
9. Select the PTU CNTRL switch to NORM.
10. Shut down engine #1 or disconnect the ground power unit.

Maintenance Procedures

1. Placard PTU CNTRL advisory light at PTU CNTRL switch on HYDRAULIC CONTROL panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-8. 5



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-8. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-9 #1 ENG HYD PUMP and #2 ENG HYD PUMP**
Caution Lights

Interval	Installed	Required	Procedure
C	2	1	(M)

May be inoperative provided:

- The associated flight compartment HYD PRESS Indication is verified operative,
- The associated ISOLATION VALVE is verified operative, and
- The associated hydraulic pressure is periodically monitored.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative ENG HYD PUMP caution light in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Apply DC electrical power to aircraft electrical buses.
2. Prior to starting engines, check that the associated HYD PRESS 1 or 2 gauge on the MFD reads 0 psi.
3. Check that associated "HYD ISO VLV" caution light is illuminated.
4. Start the associated engine.
5. Check that associated SPU/PTU switch is selected OFF.
6. Check that the associated HYD PRESS 1 or 2 gauge on the MFD reads 2900 to 3100 psi.
7. Check that associated "HYD ISO VLV" caution light is extinguished.
8. Shut down engine(s).
9. Remove electrical power from aircraft electrical buses.
10. Placard inoperative ENG HYD PUMP caution light on the Caution and Warning Panel in the flight compartment.
11. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-9. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-9. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-10 HYD QTY 1 and HYD QTY 2 Indications**

Interval	Installed	Required	Procedure
C	2	1	(M)

May be inoperative provided:

- The quantity is verified adequate prior to each flight,
- The associated ENG HYD PUMP Caution Light and HYD PRESS Indication are verified operative,
- The associated HYD ISO VLV Caution Light is verified operative, and
- The associated Nacelle Hydraulic Quantity Indicator is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative hydraulic quantity indicator in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Access the associated main landing gear wheel well by fully opening the LANDING GEAR ALTERNATE RELEASE door and pulling fully the MAIN L/G RELEASE handle in the flight compartment.
- Ensure the area near the wheel well doors is clear, and install the main landing gear ground locking pin in the stabilizer brace and the main landing gear wheel well door ground locking pin in the aft door mechanism.
- Apply DC power to aircraft electrical buses.
- Ensure that the associated HYD ISO VLV caution light is illuminated.
- Ensure that hydraulic power is not applied, and pull and collar the LDG GEAR WOW2 & CONT circuit breakers on the Left Main 28 VDC bus and the Left Essential 28 VDC bus.
- Ensure that hydraulic fluid level is adequate at the associated remote hydraulic quantity indicator, located in the respective engine nacelle below the hydraulic system reservoir. (Correct hydraulic fluid quantity level is identified by QUANTITY vs. FLUID TEMP graph located adjacent to the remote quantity indicator).

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-10. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

29-30-10 HYD QTY 1 and HYD QTY 2 Indications

7. Start engine associated with inoperative indicator and run to ground idle. Check for the following:
 - a) Associated HYD ISO VLV caution light goes out.
 - b) Associated ENG HYD PUMP caution light goes out at 2400 psi.
 - c) Associated HYD PRESS gauge on MFD reads approximately 3000 psi.
8. Shut down associated engine.
9. Remove the DC power.
10. Remove collars and reset LDG GEAR WOW2 & CONT circuit breakers on the left Main 28 VDC bus and the Left Essential 28 VDC bus.
11. Ensure the area near the wheel well doors is clear, and remove the main landing gear ground locking pin in the stabilizer brace and the main landing gear wheel well door ground locking pin in the aft door mechanism.
12. Placard inoperative hydraulic quantity indicator on the MFD in the flight compartment.
13. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-10. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-11 STBY HYD PRESS ON Advisory Light**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided the HYD PRESS STBY indication is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative STBY HYD PRESS ON advisory light must be placarded in the flight compartment.

Operating Procedures

1. Apply AC power to aircraft buses.
2. Ensure that the HYD PRESS STBY indicator indicates 0 psi.
3. Select the STBY HYD PRESS switch on.
4. Ensure that the HYD PRESS STBY indicator indicates 2800 – 3000 psi.
5. Select the STBY HYD PRESS switch to NORM.

Maintenance Procedures

1. Placard STBY HYD PRESS advisory light at STBY HYD PRESS switch on HYDRAULIC CONTROL panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-11. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-11. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-12 #1 HYD FLUID HOT and #2 HYD FLUID HOT**
Caution Lights

Interval	Installed	Required	Procedure
B	2	1	(M#)(O)

May be inoperative provided:

- The associated HYD PRESS Indication is verified operative and is periodically monitored during flight,
- Adequate steps are taken each flight day to ensure that an overheat condition has not occurred, and
- The associated HYD QTY Indication is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative HYD FLUID HOT caution light in the flight compartment.

Operating Procedures

- Confirm that prior to starting engines, the associated HYD PRESS 1 or 2 gauge on the ESID reads 0 psi, and after starting, the associated HYD PRESS reads 2900 to 3100 psi.
- Confirm that the Associated HYD QTY Indication (% x 100) is operative on a MFD.
- During flight, periodically monitor the affected HYD PRESS gauge to ensure pressure indication does not exceed 3100 psi.

Maintenance Procedures

- Access the associated main landing gear wheel well by fully opening the LANDING GEAR ALTERNATE RELEASE door and pulling fully the MAIN L/G RELEASE handle in the flight compartment.
- Ensure the area near the wheel well doors is clear, and install the main landing gear ground locking pin in the stabilizer brace and the main landing gear wheel well door ground locking pin in the aft door mechanism.
- Ensure that hydraulic power is not applied, and pull and collar the LDG GEAR WOW2 & CONT circuit breakers on the Left Main 28 VDC bus and the Left Essential 28 VDC bus.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-12. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

29-30-12

**#1 HYD FLUID HOT and #2 HYD FLUID HOT
Caution Lights**

4. 15 minutes following engine shutdown, wipe clean the hydraulic tubes connections for the components listed below, in the associated main landing gear wheel well:
 - a) Pressure relief valve and return manifold.
 - b) Case drain tube and return manifold.
5. Wait a further 20 minutes and inspect the same hydraulics connections for signs of leaks.
6. Inspect the hydraulic reservoir overflow ecology bottle in the associated main landing gear wheel well for a significant increase in the amount of fluid from the previous day.
7. Take a small sample of fluid from the reservoir and check the appearance of the fluid for evidence of overheating. (Refer to Dash 8 Series 400 Aircraft Maintenance Manual, Chapter 29.)
8. With no evidence of fluid overheat (leakage, discoloration, ecology bottle contents, etc.), make appropriate entry in the aircraft journey log.
9. With fluid leakage or discoloration present, change hydraulic fluid and carry out HYDRAULIC POWER-- INSPECTION/TEST including corrective action, in accordance with AMM, Chapter 29.
10. Remove collars and reset LDG GEAR WOW2 & CONT circuit breakers on the Left Main 28 VDC bus and the Left Essential 28 VDC bus.
11. Ensure the area near the wheel well doors is clear, and remove the main landing gear ground locking pin in the stabilizer brace and the main landing gear wheel well door ground locking pin in the aft door mechanism.
12. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-12. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****HYDRAULIC POWER******ATA 29*****29-30-13 HYD #3 ISOL VLV OPEN Advisory Light**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- The HYD PRESS 3 indication is operative, and
- The ELEVATOR PRESS caution light is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative HYD #3 ISOL VLV OPEN advisory light must be placarded in the flight compartment.

Operating Procedures

- Start engines 1 and 2, or engine 1 and PTU, or engine 2 and SPU.
- Ensure that the HYD PRESS 1 and 2 indicators indicate 2900 to 3100 psi.
- Select the HYD #3 ISOL VLV switch to OPEN.
- Ensure that the HYD PRESS 3 indicator indicates 2400 to 3100 psi and that the ELEVATOR PRESS caution light is illuminated.
- Select the HYD #3 ISOL VLV switch to NORM.
- Shut down hydraulics and engine(s).

Maintenance Procedures

- Placard HYD #3 ISOL VLV OPEN advisory light at HYD #3 ISOL VLV switch on HYDRAULIC CONTROL panel in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-13. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

HYDRAULIC POWER

ATA 29

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

29-30-13. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-1 TAIL De-Ice Boots Advisory Lights**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative provided the flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Tail Deicer Boots Advisory Lights on the ICE PROTECTION Panel in the flight compartment

Operating Procedures

None required.

Maintenance Procedures

1. Place a placard on the ICE PROTECTION Panel near the faulty advisory lights.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-2 DEICE PRESS Caution Light****30-10-2-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided the flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)

NOTE: If "DEICE PRESSURE" Caution Light illuminates in flight, rotate the BOOT AIR switch to ISO position as per AFM. Check for pressure in No. 1 and No. 2 system via DEICE PRESS dual indicators, and check deice boot advisory lights on the Ice Protection Panel. An appropriate entry should be made in the aircraft journey log regarding verification of the Deice Boot Advisory Lights and the DEICE PRESS indicators operative.

Placard

Place a placard on the Caution Panel near the DE-ICE PRESS caution light.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the DE-ICE PRESS caution light on Caution Warning Panel.
2. Make appropriate entry in the aircraft journey log, "DEICE PRESS Caution Light Inoperative".

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-2 DEICE PRESS Caution Light****30-10-2-2**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- All De-Ice Boot Advisory Lights are verified operative, and
- The DEICE PRESS Indicators are verified operative.

Minimum Equipment List Procedures (MELP)

NOTE: If “DEICE PRESSURE” Caution Light illuminates in flight, rotate the BOOT AIR switch to ISO position as per AFM. Check for pressure in No. 1 and No. 2 system via DEICE PRESS dual indicators, and check deice boot advisory lights on the Ice Protection Panel. An appropriate entry should be made in the aircraft journey log regarding verification of the Deice Boot Advisory Lights and the DEICE PRESS indicators operative.

Placard

Place a placard on the Caution Panel near the DE-ICE PRESS caution light.

Operating Procedures

None required.

Maintenance Procedures

1. Ensure all aircraft electrical buses are powered.
2. Start #1 engine and run at ground idle.
3. On the ICE PROTECTION panel, set AIRFRAME MODE SELECT rotary switch to FAST position and verify that the De-Icer boot advisory lights operate normally at the appropriate boot inflation/deflation sequence: Wing advisory lights illuminate and go out sequentially in pairs, commencing with outboard pair and ending with inboard pair, followed by inboard TAIL then outboard TAIL.

NOTE: The sequence of the WING 3rd and 4th advisory lights on the left side is reversed.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

30-10-2 DEICE PRESS Caution Light

30-10-2-1

4. Select the BOOT AIR switch to ISO and observe that the DEICE PRESS Indicator reads 15–18 psi on the active side and zero on the other side.
5. Select the BOOT AIR switch to NORM and observe whether the DEICE PRESS Indicator gauge reads 15–18 psi on both sides.
6. Shut down #1 engine.
7. Placard the DE–ICE PRESS caution light on Caution Warning Panel.



ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-2. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-3 DEICE PRESS Indicators****30-10-3-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided the flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Place a "Pressure Indicator Inoperative" placard near the faulty de-ice pressure indicator.

Operating Procedures

None required.

Maintenance Procedures

1. Placard De-Ice Pressure Indicator on the co-pilot's side console panel.
2. Make appropriate entry in the aircraft journey log, "Dual Pressure Indicator Inoperative".

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-3 DEICE PRESS Indicators****30-10-3-2**

Interval	Installed	Required	Procedure
C	2	0	(M)

May be inoperative provided:

- All De-Ice Boot Advisory Lights are verified operative, and
- The DEICE PRESS Caution Light is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Place a "Pressure Indicator Inoperative" placard near the faulty de-ice pressure indicator.

Operating Procedures

None required.

Maintenance Procedures

1. Ensure all aircraft electrical buses are powered.
2. Start #1 engine and run at ground idle.
3. On the ICE PROTECTION panel, set AIRFRAME MODE SELECT rotary switch to FAST position and verify that the De-Icer boot advisory lights operate normally at the appropriate boot inflation/deflation sequence: Wing advisory lights illuminate and go out sequentially in pairs, commencing with outboard pair and ending with inboard pair, followed by inboard TAIL then outboard TAIL.

NOTE: The sequence of the WING 3rd and 4th advisory lights on the left side is reversed.

4. Select the BOOT AIR switch to ISO and observe that the DEICE PRESS caution light illuminates.
5. Select the BOOT AIR switch to NORM and observe whether the DEICE PRESS caution light extinguishes.
6. Shut down #1 engine.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-3. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

30-10-3

DEICE PRESS Indicators

30-10-3-2

7. Placard De-Ice Pressure Indicator on the co-pilot's side console panel.
8. Make appropriate entry in the aircraft journey log, "Dual Pressure Indicator Inoperative".

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-4 Low Pressure Warning Switches (LPWS)****30-10-4-1**

Interval	Installed	Required	Procedure
C	2	1	(M#)

May be inoperative provided:

- DEICE PRESS Caution Light is verified operative,
- DEICE PRESS Indicator is verified operative,
- All De-ice Advisory Lights are verified operative, and
- Faulty LPWS is disconnected.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Low Pressure Warning Switch(es) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Access the Centralized Diagnostic System (if operational) for the IRPS and confirm/rectify any listed PRESENT FAULTS.
- Start #2 engine and run at ground idle.
- Confirm #2 de-ice system pressure indication on the dual DE-ICE pressure gauge is 18 +1.5/-1 psi.
- On the ICE PROTECTION panel, set AIRFRAME MODE SELECT rotary switch to FAST position and verify that the De-Icer boot advisory lights operate normally at the appropriate boot inflation/deflation sequence: Wing advisory lights illuminate and go out sequentially in pairs, commencing with outboard pair and ending with inboard pair, followed by inboard TAIL then outboard TAIL.

NOTE: The sequence of the WING 3rd and 4th advisory lights on the left side is reversed.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-4 Low Pressure Warning Switches (LPWS)****30-10-4-1**

5. Set the AIRFRAME AUTO selector to OFF position.
6. Shut down engine.
7. Gain access to left Low Pressure Warning Switch, via panel 261CT, on top of the fuselage, immediately adjacent the left inboard leading edge boot.
8. Locate electrical plug 3000-P22 and disconnect from pressure switch.
9. Re-start engine #2 and run at ground idle.
10. Select the BOOTAIR switch to ISO and confirm single side pressure indication for the system on the dual DE- ICE pressure gauge is normal (18 +1.5/-1 psi) and observe whether the DEICE PRESS caution light extinguishes.
11. If Caution light extinguishes, tape and stow 3000-P22 at left Low Pressure Warning Switch, then repeat steps
 - a) (9) and (10). If Caution light does not extinguish, proceed to next step.
12. Shutdown #2 engine and re-connect 3000-P22. Close access panel.
13. Gain access to right Low Pressure Warning Switch, via panel 261LT, on top of the fuselage, immediately adjacent the right inboard leading edge boot.
14. Locate electrical plug 3000-P23 and disconnect from pressure switch.
15. Start engine #1 and run at ground idle.
16. Repeat step (10).
17. If Caution light extinguishes, tape and stow 3000-P23 at right Low Pressure Warning Switch.
18. Select the BOOTAIR switch to NORM.
19. Shutdown #1 engine and close access panel.
20. Placard glareshield with "#DEICE PRESS SWITCH INOP".
21. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-4 Low Pressure Warning Switches (LPWS)****30-10-4-2**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Low Pressure Warning Switch(es) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard glareshield with "#DEICE PRESS SWITCH INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-4. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-4. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-5****WING De-Ice Boots Advisory Lights**

Interval	Installed	Required	Procedure
C	8	2	(O)

May be inoperative provided:

- The left wing root de-icer boot advisory light and right wing root de-icer boot advisory light are verified operative,
- The associated boot operation is visually monitored when in use, and
- The appropriate wing inspection light(s) operate normally for night operation.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Wing De-Ice Boots Advisory Lights on the ICE PROTECTION control panel in the flight compartment.

Operating Procedures

- Select the AIRFRAME MODE SELECT switch to "FAST".
- Visually confirm the two wing root de-icer boot advisory lights are illuminated in 60 sec.
- Select the AIRFRAME MODE SELECT switch to "OFF".

Maintenance Procedures

- Placard on the ICE PROTECTION control panel in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-6 Timer Monitor Unit (TMU, Timer Function)**

Interval	Installed	Required	Procedure
C	1	0	(M#)

May be inoperative provided:

- Flight is not conducted in known or forecast icing conditions,
- PITOT HEAT 1, PITOT HEAT 2 and PITOT HEAT STBY are verified operative,
- L AOA VANE HEAT and R AOA VANE HEAT are verified operative, and
- ENGINE INTAKE HEATER 1 and 2 are verified operative.

NOTE: AUTO mode of De-icer boots cycle will be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative airframe de-ice Timer Monitor Unit Timing Function must be placarded in the flight compartment.

Operating Procedures

Should inadvertent icing be encountered, airframe boots will require manual cycling.

Maintenance Procedures

- Start and run both engines at idle.
- Ensure that both AC Generators are selected on.
- At the ICE PROTECTION panel, select both ENGINE INTAKE bypass door switches and observe that the switch-lights' advisory light indications change from CLOSED to OPN and HTR.

NOTE: The engine intake adaptor heaters and resultant HTR indications are switched by the thermostat on the skin panel, beneath the cockpit floor. If outside air temperatures are above a nominal 15 degrees C (59 degrees F), as indicated on the Engine Display SAT indication, spray the skin at the location of the thermostat using Freeze Mist or use other means to lower the temperature and observe the HTR advisory lights illumination.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-6. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

30-10-6

Timer Monitor Unit (TMU, Timer Function)

4. De-select the ENGINE INTAKE bypass door switches and observe the switch-light advisory lights return to the CLOSED indications.
5. Shut down engines.
6. 6. Placard the ICE PROTECTION panel AIRFRAME MODE SELECT switch with "SLOW/FAST INOP".
7. 7. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-10-7 Airframe De-Icing System**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided the flight is not conducted in known or forecast icing conditions.

NOTE: Must be operative for Monsoon operations.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Airframe De-Icing System on the ICE PROTECTION control panel.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the ICE PROTECTION control panel with "AIRFRAME DEICE INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-7. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-10-7. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-20-1 Engine Intake Bypass Door OPN and CLOSED Advisory Lights****30-20-1-1**

Interval	Installed	Required	Procedure
C	2	0	(M)

May be inoperative provided:

- Bypass Door operation is verified prior to each flight, and
- The related engine intake heater indicator is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Intake Bypass Door indicator(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Apply DC electrical power to the aircraft busses.
2. Visually check that associated Engine Intake Bypass Door(s) is closed.
3. Press associated ENGINE INTAKE OPN HTR/CLOSED switchlight on the Ice and Rain Protection Panel and visually check that the associated Engine Intake Bypass Door(s) is open. (HTR light illuminates verification only required once prior to first dispatch).
4. Press associated ENGINE INTAKE OPN HTR/CLOSED switchlight on the Ice and Rain Protection Panel and visually check that the effected Engine Intake Bypass Door(s) is closed and associated HTR light goes out.
5. Remove DC electrical power for the aircraft busses.
6. Placard the Engine Intake Bypass Door Advisory Light(s) on ICE PROTECTION panel.
7. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-20-1 Engine Intake Bypass Door OPN and CLOSED Advisory Lights****30-20-1-2**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided:

- Associated bypass door(s) remains closed, and
- Flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Intake Bypass Door indicator(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard the Engine Intake Bypass Door switchlight(s) on ICE PROTECTION panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-20-2 ENGINE INTAKE HTR Advisory Lights****30-20-2-1**

Interval	Installed	Required	Procedure
C	2	0	(M)(O)

May be inoperative provided:

- The associated Heater(s) is verified operative prior to dispatch, and
- Associated ENG ADPT HEAT Caution Light(s) is verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Intake Heater Advisory Light must be placarded on the ICE PROTECTION Control Panel.

Operating Procedures**In Flight Prior to Landing: To Verify Operative the Associated Heater(s)**

- Check that the affected Engine Intake Heater(s) is/are operative:
 - Check that SAT (Static Air Temperature) is below a nominal 15°C (59°F).
 - Ensure all aircraft buses are powered.
 - On the-Electrical Page of the MFD, monitor the electrical load of the B phase of the associated AC generator.

NOTE: If the outside air temperature is above a nominal 15°C (59°F), as indicated on the Engine Display SAT indication, Method A must be used.

- Press the affected ENGINE INTAKE OPN HTR/CLOSED switchlight and observe:
 - The associated OPN light illuminates and CLOSED light is out.
 - The LOAD reading of the B phase of the associated AC generator increases on the Electrical Page of the MFD.
- Press the affected ENGINE INTAKE OPN HTR/CLOSED switchlight and observe:
 - The affected CLOSED switchlight illuminates and OPN light is out.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-20-2 ENGINE INTAKE HTR Advisory Lights****30-20-2-1**

- (ii) The LOAD reading of the B phase of the associated AC generator decreases.
- f) Repeat steps (c) through (e) if required for opposite engine intake HTR advisory light.

Maintenance Procedures**To Verify Operative the Associated Heater(s)**

1. Check that the associated heater(s) is/are operative:
 - a) Visually check that associated engine intake bypass door is closed on the affected engine(s).
 - b) Start associated engine(s) and run to Ground Idle.
 - c) Ensure all aircraft buses are powered.
 - d) Monitor the associated AC generator LOAD on ESID-Electrical Page.
 - e) Check that SAT (Static Air Temperature) is below a nominal 15°C (59°F).

NOTE: If outside air temperatures are above a nominal 15°C (59°F), as indicated on the engine Display SAT indication, spray the aircraft skin at the location of the thermostat using Freeze Mist or use other means to lower the temperature.

- f) Press associated ENGINE INTAKE OPN HTR/CLOSED switchlight and check that:
 - (i) The associated OPN light illuminates and CLOSED light is off.
 - (ii) The LOAD reading of the associated AC generator increases.
 - g) Press associated ENGINE INTAKE OPN HTR/CLOSED switchlight and check that:
 - (i) The associated CLOSED light illuminates and OPN light is off.
 - (ii) The LOAD reading of the associated AC generator decreases.
 - h) Repeat steps (e) through (g) if required for opposite engine intake HTR advisory light.
 - i) Shut down engine(s).
2. Check that the associated ENG ADPT HEAT 1 and/or ENG ADPT HEAT 2 caution light(s) operate normally.
 3. Placard ENGINE INTAKE HTR Lights on the Ice Protection Control Panel at pilot's overhead panel.
 4. Make appropriate entry in the aircraft journey log.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

30-20-2

ENGINE INTAKE HTR Advisory Lights

30-20-2-1

To Verify Operative the Associated Caution Lights

1. Check that both ENG ADPT HEAT 1 and ENG ADPT HEAT 2 caution lights operate normally.
2. Placard ENGINE INTAKE HTR advisory lights on the Ice Protection Control Panel at pilot's overhead panel.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-20-2 ENGINE INTAKE HTR Advisory Lights****30-20-2-2**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative provided the flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Intake Heater Advisory Light must be placarded on the ICE PROTECTION Control Panel.

Operating Procedures

None required.

Maintenance Procedures

1. Placard ENGINE INTAKE HTR Lights on the Ice Protection Control Panel at pilot's overhead panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-20-3****ENG ADPT HEAT 1 and ENG ADPT HEAT 2
Caution Lights**

Interval	Installed	Required	Procedure
C	2	1	(M)(O)

May be inoperative provided:

- The associated heater is verified operative prior to dispatch, and
- The associated ENGINE INTAKE HTR advisory light is verified operative and is periodically monitored.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative ENGINE ADPT HEAT 1 or ENGINE ADPT HEAT 2 Caution Lights must be placarded on the Caution and Warning Panel.

Operating Procedures**In flight prior to landing:**

- Check that the associated heater is operational:
 - Check that SAT (Static Air Temperature) is below a nominal 15°C (59°F).
 - Ensure all aircraft busses are powered.
 - On the–Electrical Page of the MFD, monitor the electrical load of the B phase of the associated AC generator.

NOTE: If the outside air temperature is above a nominal 15°C (59°F), as indicated on the Engine Display SAT indication, Method A must be used.

- Press the affected ENGINE INTAKE OPN HTR/CLOSED switchlight and observe:
 - The associated HTR light illuminates.
 - The LOAD reading of the B phase of the associated AC generator increases on the Electrical Page of the MFD.
- Press the affected ENGINE INTAKE OPN HTR/CLOSED switchlight and observe:
 - The associated HTR light goes out.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-20-3****ENG ADPT HEAT 1 and ENG ADPT HEAT 2
Caution Lights**

- (ii) The LOAD reading of the B phase of the associated AC generator decreases.

On ground:

1. Placard ENGINE ADPT HEAT 1 or ENGINE ADPT HEAT 2 Caution Light on the caution and Warning Panel.
2. Make appropriate entry in the aircraft journey log.

Maintenance Procedures

1. Check that the associated heater is operational:
 - a) Visually check that associated engine intake bypass door is closed on the affected engine.
 - b) Start associated engine and run to Ground Idle.
 - c) Ensure all aircraft busses are powered.
 - d) Monitor the associated AC generator LOAD on ESID Electrical Page.
 - e) Check the SAT (Static Aircraft Temperature) is below a nominal 15°C (59 °F).

NOTE: If outside air temperatures are above a nominal 15°C (59°F), as indicated on the Engine Display SAT indication, spray the aircraft skin at the location of the thermostat using Freeze Mist or other means to lower the temperature.

- f) Press the affected ENGINE INTAKE OPN HTR/CLOSED switchlight and observe:
 - (i) The associated HTR light illuminates.
 - (ii) The LOAD reading of the associated AC generator increases.
 - g) Press associated ENGINE INTAKE OPN HTR/CLOSED switchlight and check that:
 - (i) The associated HTR light goes out.
 - (ii) The LOAD reading of the associated AC generator decreases.
 - h) Shut down engine(s).
2. Placard ENGINE ADPT HEAT 1 or ENGINE ADPT HEAT 2 Caution Light on the Caution and Warning Panel.
 3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-20-4 Engine Intake Adapter Heater Assemblies**

Interval	Installed	Required	Procedure
C	2	1	(M)

One may be inoperative provided the flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Intake Adapter Heater is placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Pull circuit breaker INTK LIP HTR ENG 1 or INTK LIP HTR ENG 2 associated with the inoperative Engine Intake Adapter Heater.
2. Inoperative Engine Intake Adapter Heater is placarded in the flight compartment.
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-30-1 Pitot/Static Heaters**

Interval	Installed	Required	Procedure
B	3	2	NIL

May be inoperative for DAY VMC provided:

- There is no visible moisture, and
- The flight is not conducted into known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative PITOT/STATIC PORTS switch on the ICE PROTECTION panel.

Operating Procedures

None required.

Maintenance Procedures

- Placard the overhead ICE PROTECTION panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-30-2****PITOT HEAT 1, PITOT HEAT 2 and PITOT
HEAT STBY Caution Lights**

Interval	Installed	Required	Procedure
B	3	0	(M)

May be inoperative provided:

- The flight is not conducted into known or forecast icing conditions, and
- All other elements of the pitot heat systems are verified operative prior to each flight.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative PITOT HEAT Caution Light(s) in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures**System 1 and 2 Pitot Probes**

- Ensure AC External Power is supplied to the aircraft and all AC and DC buses are powered.
- Select PITOT/STATIC PORTS #1 and #2 heat on the ICE PROTECTION panel for a period of five to seven seconds, then switch off.

WARNING: SURFACE MAY BE HOT TO TOUCH.

- Physically confirm that both probes have warmed to temperatures above ambient.
- Placard the caution panel in the Flight Compartment.
- Make appropriate entry in the aircraft journey log.

Standby Pitot Probe

- Select BATTERY MASTER to on, or ensure AC or DC External Power is supplied to the aircraft.
- Select STBY PITOT/STATIC PORTS heat on the ICE PROTECTION panel for a period of five to seven seconds, then switch off.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-30-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

30-30-2

**PITOT HEAT 1, PITOT HEAT 2 and PITOT
HEAT STBY Caution Lights**

WARNING: SURFACE MAY BE HOT TO TOUCH.

3. Physically confirm that probe has warmed to temperature above ambient.
4. Placard the caution panel in the flight compartment.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-40-1 Windshield Wipers**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided the flight is not conducted in precipitation within five nautical miles of the airport of take-off or intended landing.

NOTE: Both Windshield Wipers should be operative for Low Visibility Operation (LVO) and CAT II operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative windshield wiper(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative windshield wiper(s) switch(es) on the ICE PROTECTION panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-40-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-40-2 Windshield Heaters****30-40-2-1**

Interval	Installed	Required	Procedure
A	3	1	NIL

May be inoperative provided:

- The flight is not conducted in known or forecast icing conditions, and
- Repairs are made within three flight days.

NOTE: All three Windshield Heaters must be operative for Low Visibility Takeoff operation.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative WINDSHIELD/Heaters must be placarded on the ICE PROTECTION Panel.
Illuminated WSHLD CTRL Caution Light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard appropriate WINDSHIELD/Heater Switch(es) on the ICE PROTECTION Panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-40-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-40-2 Windshield Heaters****30-40-2-2 Co-Pilot Heated Windshield (Right Hand Windshield)**

Interval	Installed	Required	Procedure
A	1	0	(M#)(O)

May be inoperative for one day provided:

- The Pilot's Side Window heating is operative,
- The Pilot Windshield (Left Hand Windshield) heating is verified operative prior to dispatch, and
- The flight is conducted in accordance with AFM Supplement 114, "OPERATION WITH ONE WINDSHIELD HEATING SYSTEM INOPERATIVE".

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative WINDSHIELD/Heaters must be placarded on the ICE PROTECTION Panel. Illuminated WSHLD CTRL Caution Light must be placarded in the flight compartment.

Operating Procedures

The flight is conducted in accordance with AFM supplement 114, "OPERATION WITH ONE WINDSHIELD HEATING SYSTEM INOPERATIVE".

NOTE: "Warm up mode may not be available".

Maintenance Procedures

- Prior to dispatch, interrogate the CDS. If the message displayed on the maintenance screen is "RIGHT WSHLD CTRL FAIL", Step 2 is not required, otherwise do all steps. Aircraft dispatch is possible only if Pilot Side Window Anti-Icing System" is verified operative (pending outside temperature) by either:
 - "Operational Test of the Copilot Windshield and Pilot Side Window Anti-icing System", AMM TASK 30-41-00-710-802.

or

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-40-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

30-40-2 Windshield Heaters

30-40-2-2 Co-Pilot Heated Windshield (Right Hand Windshield)

- b) "Electrical Resistance Check of the Pilot Side Window", AMM TASK 30-41-00-760-802.
- 2. Verify "Left Windshield Anti-Icing System" is operative (pending outside temperature) by either:
 - a) "Operational Test of the Pilot Windshield Anti-icing System", AMM TASK 30-41-00-710-801.
- Or
- b) "Electrical Resistance Check of the Windshield", AMM TASK 30-41-00-760-801.
- 3. If required, pull and collar appropriate circuit breaker for the inoperative heater.
- 4. Placard appropriate Windshield on the ICE PROTECTION Panel.
- 5. Placard the illuminated WSHLD CTRL Caution Light on the Caution Warning Panel.
- 6. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-40-2. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-40-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-60-1 Propeller De-icing System**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative propeller de-icing system must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative propeller de-icing system on the ICE PROTECTION panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-60-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-60-2 PROPS Heat Advisory Lights****30-60-2-1**

Interval	Installed	Required	Procedure
B	2	0	(O)

May be inoperative provided:

- AC LOAD indication is operating and periodically monitored, and
- The PROP DEICE caution light is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Propeller Heat Advisory light(s) must be placarded in the flight compartment.

Operating Procedures

AC load indication is periodically monitored.

Maintenance Procedures

- Placard inoperative Propeller Head Advisory light(s) on the ICE PROTECTION panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-60-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-60-2 PROPS Heat Advisory Lights****30-60-2-2**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative provided flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Propeller Heat Advisory light(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Propeller Head Advisory light(s) on the ICE PROTECTION panel.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-60-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-80-1 Ice Detector Spigot Illumination Lights****30-80-1-1**

Interval	Installed	Required	Procedure
C	2	1	NIL

One may be inoperative at either the pilot's or co-pilot's position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Ice Detector Light(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative W/S WIPER ICE DETECT switches on pilot and co-pilot's side console panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-80-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-80-1 Ice Detector Spigot Illumination Lights****30-80-1-2**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Ice Detector Light(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative W/S WIPER ICE DETECT switches on pilot and co-pilot's side console panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-80-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-80-1 Ice Detector Spigot Illumination Lights****30-80-1-3**

Interval	Installed	Required	Procedure
A	2	0	(M)

May be inoperative for night operations for one flight day provided:

- Both Ice Detector Probes are operative,
- The flight is not conducted in known or forecast icing conditions, and
- A flashlight of adequate capacity is available and confirmed operable prior to each flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Ice Detector Light(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

Interrogate CDS through ARCDU using the following procedure as follows to verify no ICE DETECTOR FAIL message displayed.

- Energize electrical system.
- Put the aircraft in weight on wheels condition.
- Open the access door for the maintenance panel.
- On the maintenance panel, set the CDS GND MAINT switch to the CDS GND MAINT position and make sure the CDS GND MAINT light comes on.
- On the maintenance panel, set the rotary switch to the OFF position. On the ARCDU, set the OFF/ON/BOTH/FMS switch to the ON position.

NOTE: Only one ARCDU can be used for the CDS at a time.

- On the ARCDU, push the MAINT switch.

NOTE: The ARCDU display shows the CDS main menu as follows:

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-80-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-80-1 Ice Detector Spigot Illumination Lights****30-80-1-3**

AVIONICS

OTHER SYSTEMS

AVIONIC DATA

7. On the ARCDU, push the key adjacent to the OTHER SYSTEMS legend.

NOTE: The ARCDU display show the OTHER SYSTEMS page 1/2 as follows:

EMU

ANTI SKID

FCS

ICE PROTECTION

ECS

APU

TMCU 1

TMCU 2

8. On the ARCDU, push the key adjacent to the ICE PROTECTION legend to show the IRPS–MAINTENANCE page.

NOTE:

1. The IRPS–MAINTENANCE page can show a maximum of 10 faults at one time. There are 30 possible faults. Refer to Figure 30–80–1–1 below.
2. The faults are prioritized to make sure the most important fault is shown first.
3. If no faults are reported, the IRPS–MAINTENANCE page will show a NO FAULT REPORTED message.
4. The CYCLES COUNTER at the bottom of the ARCDU display shows the number of times the airframe deice system has gone through the deice sequence. This number cannot be reset. After the highest number (99999) is reached the number goes to 00000.
9. To understand the fault messages, use Table 1: IRPS–MAINTENANCE message table.
10. On the ARCDU, push the DIM/RTN key again and again until the ARCDU display shows the first main menu.
11. On the ARCDU, set the OFF/ON/BOTH/FMS switch to the OFF position.
12. On the maintenance panel, set the CDS GND MAINT switch to the down position and make sure the CDS GND MAINT light goes off.
13. Close access door for maintenance panel.
14. De–energize electrical system.
15. Make appropriate entry in the aircraft journey log.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-80-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-80-1 Ice Detector Spigot Illumination Lights****30-80-1-3**

FAULT MESSAGE	PRIORITY
LEFT AOA FAIL	1
RIGHT AOA FAIL	2
PILOT 1 FAIL	3
PILOT 2 FAIL	4
PILOT STBY FAIL	5
LEFT WSHLD CTRL FAIL	6
RIGHT WSHLD CTRL FAIL	7
ARINC INPUT FAIL	8
TIMER INPUT FAIL	9
ENG ADAPT SWITCHING	10
MONITOR 1 FAIL	11
MONITOR 2 FAIL	12
TIMER MONITOR 3 FAIL	13
L ENG ADAPTER HEATER 1 FAIL	14
R ENG ADAPTER HEATER 1 FAIL	15
L ICE DETECTOR FAIL	16
R ICE DETECTOR FAIL	17
HEATER DRIVER FAIL	18
LOW PRESSURE 4A FAIL	19
LOW PRESSURE 3A FAIL	20
LOW PRESSURE 1A FAIL	21
LOW PRESSURE 2A FAIL	22
LOW PRESSURE 5B FAIL	23
LOW PRESSURE 6A FAIL	24
LOW PRESSURE 5A FAIL	25
LOW PRESSURE 6B FAIL	26
LOW PRESSURE 3B FAIL	27
LOW PRESSURE 1B FAIL	28
LOW PRESSURE 2B FAIL	29
LOW PRESSURE 4B FAIL	30

Figure 30-80-1-1 CDS IRPS Fault Priority List**■ ■ ■ ■****ISS III R00****APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**30-80-1. 5**



DHC-8-402

MINIMUM EQUIPMENT LIST

ICE AND RAIN PROTECTION

ATA 30

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-80-1. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-80-2 Ice Detector Probes (Electronic)****30-80-2-1**

Interval	Installed	Required	Procedure
A	2	1	(M)(O)

May be inoperative for thirty days.

Minimum Equipment List Procedures (MELP)**Placard**

Placard any unserviceable ICE DETECTOR PROBE(S) in the flight compartment.

Operating Procedures

Windshield wiper ice detection spigots must be used for ice detection.

Maintenance Procedures

1. As required, open and collar the failed IDP circuit breaker, L ICE DET or R ICE DET, on 115V AC VARIABLE FREQUENCY CB panel.
2. Placard the respective ICE DETECTOR PROBE "INOP" in the flight compartment.
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-80-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ICE AND RAIN PROTECTION******ATA 30*****30-80-2 Ice Detector Probes (Electronic)****30-80-2-2**

Interval	Installed	Required	Procedure
B	2	0	(M)(O)

Both may be inoperative provided:

- Windshield wipers are stored in the normal horizontal position,
- Both Ice Detector Spigot illumination lights are confirmed operative prior to night operations,
- Flight will be conducted in accordance with AFM Supplement Number 98, Operation with Both Ice Detector Probes (Electronic) Inoperative (ICE DETECT FAIL Caution Light Illuminated), and
- The flight is not conducted at night into known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Placard any unserviceable ICE DETECTOR PROBE(S) in the flight compartment.

Operating Procedures

- Windshield wipers to be stored in normal horizontal position.
- Both Ice Detector Spigot illumination lights are confirmed operative prior to night operations.
- Flight will be conducted in accordance with AFM Supplement Number 98, Operation With Both Ice Detector Probes (Electronic) Inoperative (Ice Detect Fail Caution Light Illuminated).

Maintenance Procedures

- As required, open and collar the failed IDP circuit breaker, L ICE DET or R ICE DET, on 115V AC VARIABLE FREQUENCY CB panel.
 - Placard the respective ICE DETECTOR PROBE "INOP" in the flight compartment.
 - Make appropriate entry in the aircraft journey log.
- ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

30-80-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-20-1 Clocks****31-20-1-1 Pilot Clock**

Interval	Installed	Required	Procedure
A	1	0	NIL

May be inoperative provided:

- Reliable and functioning timepiece is readily available to all Flight Compartment crew members, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Clock on the glareshield.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative Clock on the glareshield.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-20-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-20-1 Clocks****31-20-1-2 Co-pilot Clock**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Clock on the glareshield.

Operating Procedures

None required.

Maintenance Procedures

3. Placard inoperative Clock on the glareshield.
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-30-1 Flight Data Recorder**

Interval	Installed	Required	Procedure
A	1	0	(M)

May be inoperative provided:

- The Cockpit Voice Recorder is operative, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Flight Data Recorder in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Pull and clip the FDR circuit breaker, located on the avionics circuit breaker panel.
- Placard the Flight Data Recorder on the FLIGHT DATA RCDR/ELT Panel on the Overhead Console.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

INDICATING AND RECORDING SYSTEMS

ATA 31

31-30-1 Flight Data Recorder

31-30-1-1 DFDR Recording Parameters required by Regulation

NOT APPLICABLE

— — — —

31-30-1 Flight Data Recorder

31-30-1-2 DFDR Recording Parameters not required by Regulation

NOT APPLICABLE

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-30-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

INDICATING AND RECORDING SYSTEMS

ATA 31

31-30-2

Extended/Micro Quick Access Recorder

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-30-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

INDICATING AND RECORDING SYSTEMS

ATA 31

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-51-1 Caution and Warning Lights System****31-51-1-1 Dual Master Caution switchlight (Glareshield, light function only) (CR833CH00034)**

Interval	Installed	Required	Procedure
C	2	1	NIL

One may be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Master Caution/Warning switchlight in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Master Caution switchlight on the glare shield panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-51-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-51-1 Caution and Warning Lights System****31-51-1-2 Dual Master Warning Switchlight (Glareshield, light function only) (CR833CH00034)**

Interval	Installed	Required	Procedure
C	2	1	NIL

One may be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Master Caution/Warning switchlight in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Master Warning switchlight on the glare shield panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-51-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-1 ESID Control Panel****31-60-1-1 System Page Push Button Switches**

Interval	Installed	Required	Procedure
C	4	0	(O)

The ELEC SYS, ENG SYS, FUEL SYS, and DOORS SYS Switches may be inoperative provided the ALL Switch is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Electronic Systems Integrated Display (ESID) Control Panel must be placarded in the flight compartment.

Operating Procedures

Sequence through all ESID Systems Synoptic pages as required by proviso and confirm relevant page is available.

Maintenance Procedures

1. Placard the ESID Control Panel with appropriate functions "XXX INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-1 ESID Control Panel****31-60-1-2 ALL Switch**

Interval	Installed	Required	Procedure
C	1	0	(O)

The ALL Switch may be inoperative provided the ELEC SYS, FUEL SYS, ENG SYS and DOORS SYS Switches are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Electronic Systems Integrated Display (ESID) Control Panel must be placarded in the flight compartment.

Operating Procedures

Sequence through all ESID Systems Synoptic pages as required by proviso and confirm relevant page is available.

Maintenance Procedures

1. Placard the ESID Control Panel with appropriate functions "XXX INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-1 ESID Control Panel****31-60-1-3 Engine Display Dimming Function**

Interval	Installed	Required	Procedure
C	1	0	NIL

Dimming may be inoperative provided the display intensity is adequate.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Electronic Systems Integrated Display (ESID) Control Panel must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the ESID Control Panel with appropriate functions "XXX INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

INDICATING AND RECORDING SYSTEMS

ATA 31

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-2 MFD and PFD Engine Display Messages****31-60-2-1 PFD 1 / 2 LINK FAIL Engine Display message**

Interval	Installed	Required	Procedure
C	2	1	NIL

Message may be displayed.

Minimum Equipment List Procedures (MELP)**Placard**

MFD and PFD Engine Display Messages must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-2 MFD and PFD Engine Display Messages****31-60-2-2 MFD 1 / 2 LINK FAIL Engine Display message**

Interval	Installed	Required	Procedure
C	2	1	NIL

Message may be displayed.

Minimum Equipment List Procedures (MELP)**Placard**

MFD and PFD Engine Display Messages must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-3 Electronic Flight Instrument System Control Panels****31-60-3-1**

Interval	Installed	Required	Procedure
C	2	1	NIL

One panel may be inoperative provided:

- The pilot flying panel is fully operative, and
- Affected side must meet navigational requirements for route being flown.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Electronic Flight Instrument Systems (EFIS) Control Panel must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard the EFIS Control Panel with appropriate functions "XXX INOP".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-3 Electronic Flight Instrument System Control Panels****31-60-3-2 Bright/Dim Controls**

Interval	Installed	Required	Procedure
C	6	0	NIL

Dimming may be inoperative provided the display intensity is adequate.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Electronic Flight Instrument Systems (EFIS) Control Panel must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

3. Placard the EFIS Control Panel with appropriate functions "XXX INOP".
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-4 FADEC 1 / DU or FADEC 2 / DU Engine
Display Message**

Interval	Installed	Required	Procedure
A	2	1	NIL

Message may be annunciated for three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

FADEC DU Engine Display Message must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

(Due to possibility of this low level message being overwritten by a higher priority message, the FADEC X / DU message should be placarded below the Engine Display).

1. Placard below the Engine Display with "FADEC X / DU message illuminated".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

INDICATING AND RECORDING SYSTEMS

ATA 31

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-5****EFIS/ESID Display Units**

Interval	Installed	Required	Procedure
A	5	4	(M)(O)

RH MFD (MFD2) may be inoperative provided:

- RNP AR approach is not being conducted,
- The left hand Electronic Flight Instrument System Control panel (EFCP) and the Engine and System Integrated Display Control Panel (ESCP) are fully functional,
- The MFD1 rotary selector and ELEC SYS, ENG SYS, FUEL SYS, DOOR SYS and ALL push button switches are operative, and
- Repairs are made within one flight day.

NOTE:

- The pilot occupying the left seat must conduct all departures and arrivals in Instrument Meteorological Conditions.
- RNAV1, RNAV2, RNAV5, RNP1, RNP APCH (LNAV or LNAV/VNAV or LPV) and CAT II operations not allowed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Display Unit (MFD2) must be placarded in the flight compartment

Operating Procedures

- Select MFD1 rotary selector from SYS to NAV prior to takeoff.
- If necessary to view aircraft system page information during flight, select the MFD1 rotary selector to SYS or press the ESID ALL button.

Maintenance Procedures

- Pull circuit breakers of affected Display Units, as required (MFD1 AVIONICS LEFT ESS CB Panel; PFD1 – AVIONICS LEFT MAIN CB Panel; PFD2 – AVIONICS RIGHT MAIN CB Panel; ED – AVIONICS RIGHT MAIN and RIGHT ESS CB Panel) to re-arrange displays to provide operating Primary Flight Displays (PFD1 and PFD2), Engine Display and operating Multifunctional Display on pilot side (MFD1).

(...Continued)

ISS III R05**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-5. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****INDICATING AND RECORDING SYSTEMS******ATA 31*****31-60-5****EFIS/ESID Display Units**

2. Remove the avionics air cooling hoses and disconnect the connectors from affected display(s) and swap position of inoperative display, as required. (Refer to Aircraft Maintenance Manual PSM 1-84-2 Task 31-61-01-000-801 for more detailed information regarding Removal of the Display Units and Task 31-61-01-400-801 for Installation of the Display Unit).
3. Engage circuit breakers to operating Display Unit(s) and pull and clip MFD2 circuit breaker (AVIONICS RIGHT MAIN CB Panel).
4. Select the MFD1 rotary selector to PFD. Confirm MFD1 enters PFD display format and white "AVAIL" message is posted on PFD1 display unit.
5. Select the MFD1 rotary selector to NAV. Confirm MFD1 enters navigation display format.
6. Press the ALL button on the ESID panel to sequence through all system pages and confirm the relevant page is displayed on the ED.
7. Select the MFD1 rotary selector to SYS. Confirm MFD1 enters composite page display format as indicated by the presence of condensed FLAP, PFCS and digital hydraulic indications at the bottom of the display. Sequence through all systems pages using the ELEC SYS, ENG SYS, FUEL SYS, and DOOR SYS push buttons and confirm the relevant page is displayed on MFD1.
8. Select MFD1 rotary selector to ENG. Confirm MFD1 enters engine display mode and white "AVAIL" message is posted on the ED.
9. Placard Display Unit (MFD2) on copilot's side.
10. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

31-60-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LANDING GEAR******ATA 32*****32-20-1 NOSE GEAR LOCK Advisory Light**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided Nose Gear Lock is verified disengaged prior to each departure.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Nose Gear Lock Advisory Light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Nose Gear Lock Advisory Light on the pilot's side panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LANDING GEAR

ATA 32

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LANDING GEAR******ATA 32*****32-30-1 Landing Gear Retraction System**

Interval	Installed	Required	Procedure
A	1	0	(O)

Landing gear retraction system may be inoperative for one flight provided operations are conducted in compliance with AFM Supplement 94, OPERATION WITH LANDING GEAR EXTENDED.

Minimum Equipment List Procedures (MELP)**Placard**

Placard the gear retraction system inoperative at the Landing Gear Control Panel.

Operating Procedures

Operations are conducted in accordance with AFM Supplement 94, OPERATION WITH LANDING GEAR EXTENDED.

Maintenance Procedures

None required.

■ ■ ■ ■

ISS III R02

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LANDING GEAR

ATA 32

**INTENTIONALLY
LEFT
BLANK**

ISS III R02

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LANDING GEAR******ATA 32*****32-40-1 Parking Brake Pressure Indications****32-40-1-1 HYD PRESS PK BRK Indication**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The Aft Wing Root Fairing Indicator is verified operative, and
- Brake pressure is confirmed adequate prior to engine start.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative HYD PRESS PK BRK in the flight compartment or ACCUMULATOR GAS CHARGE gauge in the right aft wing root fairing must be placarded.

Operating Procedures

None required.

Maintenance Procedures

- Cycle the Park Brake Lever 8 to 10 times to deplete pressure.
- Ensure that the ACCUMULATOR GAS CHARGE gauge located in the right wing root fairing indicates at least 500 psi.
- Placard inoperative HYD PRESS PK BRK Indicator in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-40-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LANDING GEAR******ATA 32*****32-40-1 Parking Brake Pressure Indications****32-40-1-2 Aft Wing Root Fairing Indicator**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The HYD PRESS PK BRAKE Indication is verified operative, and
- Brake pressure is confirmed adequate prior to engine start.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative HYD PRESS PK BRK in the flight compartment or ACCUMULATOR GAS CHARGE gauge in the right aft wing root fairing must be placarded.

Operating Procedures

None required.

Maintenance Procedures

- Ensure that the HYD PRESS PK BRK indicator on the MRD in the flight compartment indicates at least 1500 psi.

NOTE: If aircraft has been sitting for quite some time, the pressure may be depleted. In this case, use the hand pump in right wheel well and pump up the system.

- Placard inoperative ACCUMULATOR GAS CHARGE gauge in the flight compartment and on the gauge in the right aft wing root fairing.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LANDING GEAR******ATA 32*****32-40-2 Anti-Skid System**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided operations are conducted in compliance with AFM Supplement 7 OPERATION WITH INOPERATIVE ANTI-SKID BRAKE CONTROL SYSTEM.

NOTE: Anti-skid system must be operative for Monsoon and Low Visibility Take-off operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Anti-Skid System must be placarded in the flight compartment.

Operating Procedures

1. Operations are conducted in accordance with AFM Supplement 7 OPERATION WITH INOPERATIVE ANTI-SKID BRAKE CONTROL SYSTEM.
2. Select ANTI SKID switch to OFF at co-pilot's glareshield panel.

Maintenance Procedures

1. Placard Anti-Skid System at ANTI SKID TEST switch on glareshield panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-40-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LANDING GEAR

ATA 32

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-40-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

LANDING GEAR

ATA 32

32-40-3

Fill Valve Gauge (CR411000-001)

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-40-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LANDING GEAR

ATA 32

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-40-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LANDING GEAR******ATA 32*****32-50-1 Nosewheel Steering**

Interval	Installed	Required	Procedure
A	1	0	(M)(O)

May be inoperative for one flight day provided:

- NOSE STEERING caution light is extinguished when the nosewheel STEERING switch is in the OFF position,
- Nosewheel STEERING switch is selected and remains OFF,
- Nosewheel steering system is deactivated, and
- Operations are conducted in compliance with AFM Supplement 8 OPERATION WITH INOPERATIVE NOSEWHEEL STEERING SYSTEM.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Nosewheel Steering system must be placarded in the flight compartment.

Operating Procedures

- Ensure nosewheel STEERING switch is selected OFF and the NOSE STEERING caution light is extinguished.
- Operations are conducted in accordance with AFM Supplement 8 OPERATION WITH INOPERATIVE NOSEWHEEL STEERING SYSTEM.

NOTE: Nosewheel will caster. Take-off or landing in crosswinds exceeding 25 knots is not permitted.

Maintenance Procedures

- Pull and clip circuit breakers NLG STEER CONT on the L MAIN and the R MAIN circuit breaker panels.
- Placard nosewheel steering switch on pilot's left side console in the flight compartment and placard the NOSE STEERING caution light.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-50-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LANDING GEAR

ATA 32

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LANDING GEAR******ATA 32*****32-60-1 Touched Runway Indication System**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided prior to each flight, it is confirmed that the frangible switch has not been contacted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Touched Runway Indication System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Prior to flight, inspect the underside of rear fuselage in the vicinity of frangible switch and ensure that:
 - a) there is no evidence that the frangible switch shroud (and switch) has been scraped or broken, and
 - b) there is no visible sign of scrape damage to fuselage.
2. If visual inspection of underside of rear fuselage reveals signs of damage, perform FRANGIBLE SWITCH LIGHT "ON" Inspection as per Dash 8 Series 400 Aircraft Maintenance Manual, Chapter 5, for signs of structural damage. If there is no evidence of structural damage, scraped fuselage/paint abrasion may be temporarily repaired with 3M No. Y434 or equivalent Metal Speed Tape. This taped surface must be thereafter inspected prior to each flight as per Operating Procedures above.
3. If the TOUCHED RUNWAY Warning light has failed in the illuminated condition, at the Caution and Warning Panel, remove the front lens module containing the TOUCHED RUNWAY Warning legend, then remove the respective 4 LEDs. Re-install the lens module.
4. Placard TOUCHED RUNWAY warning light at the Caution and Warning Panel in the flight compartment.
5. Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-60-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LANDING GEAR

ATA 32

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

32-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-1 Cockpit and Instrument Panel Lighting System****33-10-1-1**

Interval	Installed	Required	Procedure
C	1	1	NIL

Individual lights may be inoperative for night flight provided the remaining lights are:

- Sufficient to clearly illuminate all instruments, controls, and other devices for which it is provided,
- Positioned so that direct rays are shielded from flight crew member's eyes, and
- Lighting configuration and intensity is acceptable to the flight crew.

NOTE:

- Individual button/switch lights and/or annunciations/indications are excluded from this relief.
- Unaided operation (without NGVs) may be permitted with inoperative NGV supplemental light; cracked or missing filters.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Cockpit and Instrument Panel Lighting System in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard Cockpit and Instrument Panel Lighting System on Panel Lighting control panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-1 Cockpit and Instrument Panel Lighting System****33-10-1-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative for daylight operations.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Cockpit and Instrument Panel Lighting System in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Cockpit and Instrument Panel Lighting System on Panel Lighting control panel.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-2 Caution/Warning/Advisory Lights System**
DIM/BRT Function**33-10-2-1 Dimming Function**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Caution/Warning/Advisory Lights DIM function must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Perform caution/warning and advisory lights test using "TEST CAUT/ADVISORY" switch on the overhead console.
2. Confirm illumination of all caution warning and advisory lights, including flashing master caution and warning indicators.
3. Placard the glareshield with "Caution/Warning Lights/Advisory Lights Dim Mode INOP".
4. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIGHTS****ATA 33****33-10-2 Caution/Warning/Advisory Lights System**
DIM/BRT Function**33-10-2-2 Brighten Function**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative for day operations provided:

- Dimming function is considered inoperative,
- DIM/BRT switch is not operated, and
- DIM/BRT switch is placarded, "INOPERATIVE - DO NOT USE"

NOTE: Operation of the DIM/BRT switch to Dimming mode during dispatch will exclude the ability to Brighten the lights again until the aircraft is power cycled during ground operations.

Minimum Equipment List Procedures (MELP)**Placard**

- Inoperative Caution/Warning/Advisory Lights BRT function must be placarded in the flight compartment.
- Placarded the DIM/BRT switch on the passenger warning panel.

Operating Procedures

For the Caution/Warning/Advisory Lights system, flight crew are to be made aware that DIM function should not be operated during dispatch with the BRT function inoperative.

Maintenance Procedures

- Perform caution/warning and advisory lights test using "TEST CAUT/ADVISORY" switch on the overhead console.
- Confirm illumination of all caution warning and advisory lights, including flashing master caution and warning indicators.
- Placard the glareshield with "Caution/Warning Lights/Advisory Lights BRT Mode INOP".
- Placard the DIM/BRT switch with "INOPERATIVE - DO NOT USE".
- Make appropriate entry in the aircraft journey log.

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-3 Caution/Warning/Advisory Lights System****33-10-3-1 Caution/Warning Panel LEDs**

Interval	Installed	Required	Procedure
C	98	-	NIL

May be inoperative provided one half of each light is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Caution/Warning/Advisory Light bulb(s)/LED(s) in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Caution/Warning/Advisory Light bulb(s)/LED(s) in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-3 Caution/Warning/Advisory Lights System****33-10-3-2 Advisory Lights**

Interval	Installed	Required	Procedure
C	102	-	(O)

Individual bulb(s) /LED(s) may be inoperative for advisory lights with multiple light elements provided:

- Advisory lights are tested before each flight, and
- Luminescence and legibility of affected advisory light(s) is acceptable to the flight crew.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Caution/Warning/Advisory Light bulb(s)/LED(s) in the flight compartment.

Operating Procedures

- Perform advisory lights test at the bright (BRT) and dim (DIM) settings using “TEST CAUT/ADVSY” switch on the overhead console.
- Confirm illumination of all advisory lights.
- Verify that the luminescence and legibility of affected advisory light(s) is acceptable with remaining bulb(s) / LED(s).

Maintenance Procedures

- Placard inoperative Caution/Warning/Advisory Light bulb(s)/LED(s) in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1A**

Interval	Installed	Required	Procedure
C	44/50	-	(M)(O)

Passenger Seats, Flight Attendant Seats, or Lavatory from which a light is not readily legible shall not be occupied and must be blocked and placarded "DO NOT OCCUPY".

NOTE: Qty 50 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

Procedures are to be established and used to inform passengers when a lavatory is unavailable for use.

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

1. Block each seat in the passenger compartment from which an operative "No Smoking/Fasten Seat Belt" sign is not readily legible and placard affected seat(s) "DO NOT OCCUPY".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1B**

Interval	Installed	Required	Procedure
C	44/50	-	(O)

The affected Seats or Lavatory may be occupied provided:

- The crew Cabin Interphone System, Cabin Chime System, and Passenger Address System are operative, and
- Procedures are established and used to alert flight attendants and notify passengers when seat belts should be fastened and smoking prohibited.

NOTE: Qty 50 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

- Verify that the passenger address system operates normally as follows:
 - Ensure aircraft DC bus system is powered.
 - Ensure PA AMP Circuit Breaker (B8) on L ESSENTIAL Bus is closed.
 - PUSH release lever and remove attendant handset from cradle assembly. Select PA system switchlight at attendant control unit (ACU), press PUSH-TO-TALK switch on the handset and make announcement over the Passenger Address (PA) system.
 - Deselect or terminate PA mode by pressing the PA switch at the control unit and replace handset to cradle assembly.
 - From the cockpit, initiate an attendant call and verify cabin chime sound and normal voice communication is present.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1B**

2. Captain will inform the Flight Attendant while switching on/off Fasten Seat Belt/No Smoking lights and Flight Attendant has to make an announcement. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.8.2 Sub Point - 2

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1C**

Interval	Installed	Required	Procedure
A	44/50	-	(O)

May be inoperative for one flight day for non-passenger carrying operations provided:

- a) Crew members are the only occupants of the aircraft, and
- b) Alternate procedures are established and used.

NOTE: Qty 50 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

Alternate procedures are established and used in accordance with CAR regulations.

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1-1 Aural Tone Function**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

Captain will inform the Flight Attendant while switching on/off Fasten Seat Belt/No Smoking lights and Flight Attendant has to make an announcement. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.8.2 Sub Point – 2.

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1-2 Automatic Function**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

1. Select the NO SMOKING / FASTEN BELTS switch on the cockpit overhead console and observe that the passenger "No Smoking / Fasten Seat Belt" signs illuminate.
2. Use Manual control of No Smoking/ Fasten Seat Belt lights with Landing Gear Down.

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-20-1 No Smoking / Fasten Seat Belt Lights

33-20-1-3 All Cargo Operations

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 7



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 8



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-20-2 Cabin Lighting System

33-20-2-1 Sidewall Lighting

33-20-2-1-1 Classic Interior

NOT APPLICABLE

■ ■ ■ ■

33-20-2 Cabin Lighting System

33-20-2-1 Sidewall Lighting

33-20-2-1-2 Dual Class Classic Interior (3-Abreast)

NOT APPLICABLE

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-2 Cabin Lighting System****33-20-2-1 Sidewall Lighting****33-20-2-1-3 NextGen Interior (Includes single class, increased capacity, and cargo/combi configuration)**

Interval	Installed	Required	Procedure
C	27	-	(M)

Up to 25% of total length of sidewall downwash lights may be inoperative provided:

- No two adjacent or opposite LED strips are inoperative, and
- Cabin lighting is sufficient for flight attendants to perform required duties.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- 25% of the lighting for the length of the cabin may be inoperative.
- Any number of LEDs on a strip that are inoperative renders the strip to be inoperative. In the case of LED lighting, a "Strip" is considered to be the length of the overhead bin under which the lighting is installed.
- Where LED strips are inoperative, interchange or replacement with serviceable strips may be required.
- Inoperative Cabin Lights must be placarded at the flight attendant's LIGHTING panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-20-2	<u>Cabin Lighting System</u>
33-20-2-1	Sidewall Lighting
33-20-2-1-4	Dual Class NextGen Interior (3 Abreast)

NOT APPLICABLE

— — — —

33-20-2	<u>Cabin Lighting System</u>
33-20-2-2	Ceiling Lighting
33-20-2-2-1	Classic Interior

NOT APPLICABLE

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 3



DHC-8-402	MINIMUM EQUIPMENT LIST
<i>LIGHTS</i>	
<i>ATA 33</i>	

33-20-2	<u>Cabin Lighting System</u>
33-20-2-2	Ceiling Lighting
33-20-2-2-2	Dual Class Classic Interior (3-Abreast)

NOT APPLICABLE

— — — —

ISS III R00	APPROVED BY DAW DELHI, DATED –
-------------	--------------------------------

Signature valid
Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-2 Cabin Lighting System****33-20-2-2 Ceiling Lighting****33-20-2-2-3 NextGen Interior (Includes single class, increased capacity, and cargo/combi configurations)**

Interval	Installed	Required	Procedure
C	27	-	(M)

Up to 25% of total length of Ceiling upwash lights may be inoperative provided:

- No two adjacent or opposite LED strips are inoperative, and
- Cabin lighting is sufficient for flight attendants to perform required duties.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- 25% of the lighting for the length of the cabin may be inoperative.
- Any number of LEDs on a strip that are inoperative renders the strip to be inoperative. In the case of LED lighting, a "Strip" is considered to be the length of the overhead bin under which the lighting is installed.
- Where LED strips are inoperative, interchange or replacement with serviceable strips may be required.
- Inoperative Cabin Lights must be placarded at the flight attendant's LIGHTING panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 5



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-20-2	<u>Cabin Lighting System</u>
33-20-2-2	Ceiling Lighting
33-20-2-2-4	Dual Class NextGen Interior (3–Abreast)

NOT APPLICABLE

— — — —

33-20-2	<u>Cabin Lighting System</u>
33-20-2-3	All Cargo Operations

NOT APPLICABLE

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-3 Lavatory Compartment (RETURN TO SEAT and LAVATORY OCCUPIED Lights/Sign)****33-20-3-1 RETURN TO SEAT Lights/Signs****33-20-3-1-1**

Interval	Installed	Required	Procedure
C	1	0	(O)

The lavatory may be occupied provided:

- Passenger Address System is operating normally and can be clearly heard in the lavatory compartment during flight, and
- Alternate procedures are established and used to notify passengers when return to seat is required.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative RETURN TO SEAT light must be placarded.

Operating Procedures

Verify that passenger address system operates normally as follows:

- Ensure aircraft DC bus system is powered.
- Ensure PA AMP Circuit Breaker (B8) on L ESSENTIAL Bus is closed.
- PUSH release lever and remove attendant handset from cradle assembly. Select PA system switch light at attendant control unit (ACU), press PUSH-TO-TALK switch on the handset and make announcement over the Passenger Address (PA) system.
- Verify announcement can be clearly heard in the affected lavatory.
- Deselect or terminate PA mode by pressing the PA switch at the control unit, and replace handset to cradle assembly.

(OR)

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**33-20-3 Lavatory Compartment (RETURN TO SEAT
and LAVATORY OCCUPIED Lights/Sign)**

33-20-3-1 RETURN TO SEAT Lights/Signs

33-20-3-1-1

Normal and emergency means of communication between forward cabin crew i.e. CCIC/L1 and passenger in lavatory is by the forward crew knocking on the door of the lavatory. CCIC will be briefed about the lavatory speaker inoperative by PIC. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.11.6.

Maintenance Procedures

1. Placard appropriate inoperative lights.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-3 Lavatory Compartment (RETURN TO SEAT
and LAVATORY OCCUPIED Lights/Sign)****33-20-3-1 RETURN TO SEAT Lights/Signs****33-20-3-1-2**

Interval	Installed	Required	Procedure
C	1	0	(M)

Lavatory compartment shall not be occupied and must be blocked and placarded - "DO NOT OCCUPY"

Minimum Equipment List Procedures (MELP)**Placard**

1. Inoperative RETURN TO SEAT light must be placarded.
2. Placard the appropriate lavatory door, "DO NOT OCCUPY".
3. Placard the flight compartment that affected lavatory with inoperative RTS light is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative RETURN TO SEAT light.
2. Placard lavatory door "DO NOT OCCUPY".
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-3. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-3 Lavatory Compartment (RETURN TO SEAT
and LAVATORY OCCUPIED Lights/Sign)****33-20-3-2 LAVATORY OCCUPIED Lights/Signs**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative LAVATORY OCCUPIED lights must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Placard appropriate inoperative lights.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-4 Accent Lights (Spotlights) NextGen Interior**

Interval	Installed	Required	Procedure
D	30	0	NIL

May be inoperative.

NOTE: This relief is not intended for Emergency Flood Lights within the Accent Light Assemblies.

Minimum Equipment List Procedures (MELP)**Placard**

Refer to Figure 33-1
None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-4. 1



DHC-8-402


MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-20-4

Accent Lights (Spotlights) NextGen Interior

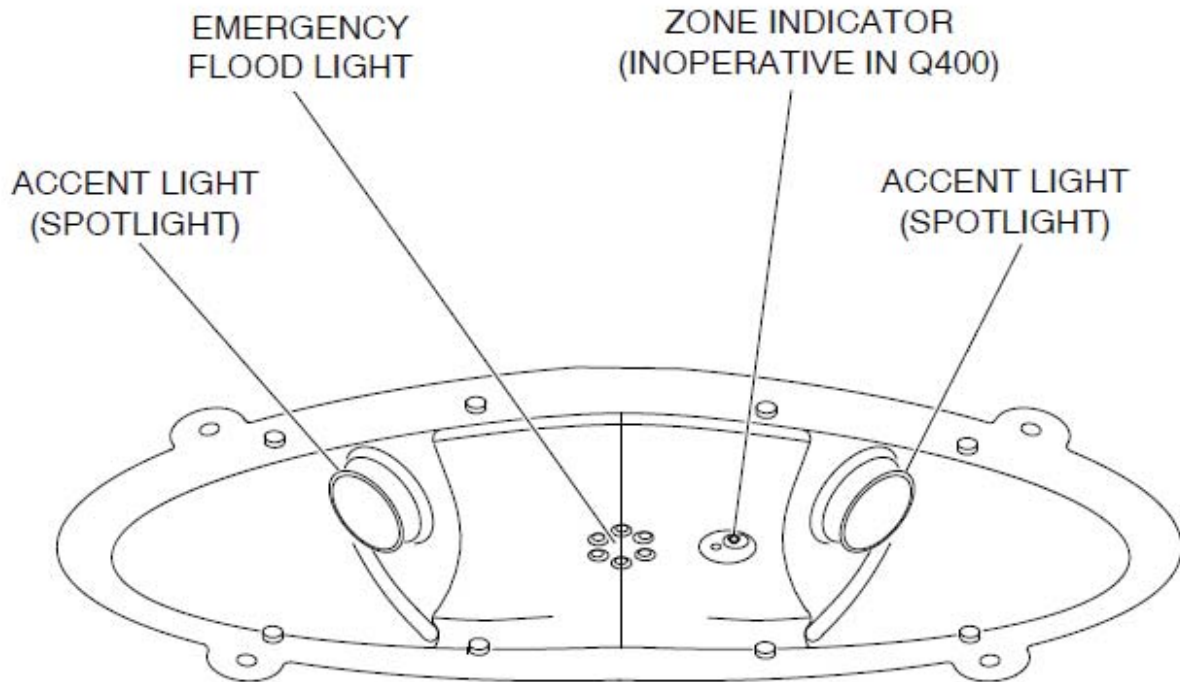

**NEXT GEN ACCENT LIGHTING AND
EMERGENCY FLOODLIGHT HOUSING ASSEMBLY**

Figure 33-1



ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-25-1 Lavatory Light****33-25-1-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

Full illumination mode may be inoperative provided the dimmed mode is functional at all times.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-25-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-25-1 Lavatory Light****33-25-1-2**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided lavatory door is locked closed and placarded, "INOPERATIVE - DO NOT ENTER".

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
2. Placard the flight compartment indicating lavatory is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the flight compartment indicating lavatory is inoperative.
2. Lock the lavatory door by placing a pen or other similar object in the hole in the latch and sliding it to the locked position.
3. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-25-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-1 Aft Baggage Compartment Ceiling Lights****33-30-1-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided alternate lighting is available.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Compartment Lights must be placarded in the flight compartment and aft baggage compartment door.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative BAGGAGE COMPT lighting in the flight compartment and the aft baggage compartment door.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-1 Aft Baggage Compartment Ceiling Lights****33-30-1-2**

Interval	Installed	Required	Procedure
D	2	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Compartment Lights must be placarded in the flight compartment and aft baggage compartment door.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative BAGGAGE COMPT lighting in the flight compartment and the aft baggage compartment door.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-2 Forward Baggage Compartment Light****33-30-2-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided alternate lighting is available.

NOTE: Only applicable if Forward Baggage Compartment is installed.

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard on the inboard side of the Internal Baggage Door, "Forward Baggage Compartment Light inoperative".
2. Placard on the outboard side of the Forward Baggage Door, "Forward Baggage Compartment Light inoperative".

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Forward Baggage Compartment Light on the internal/external doors of the forward baggage compartment, and in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-2 Forward Baggage Compartment Light****33-30-2-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative for day operations.

NOTE: Only applicable if Forward Baggage Compartment is installed.

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard on the inboard side of the Internal Baggage Door, "Forward Baggage Compartment Light inoperative".
2. Placard on the outboard side of the Forward Baggage Door, "Forward Baggage Compartment Light inoperative".

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Forward Baggage Compartment Light on the internal/external doors of the forward baggage compartment, and in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-3 Aft Service Light**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative provided the light is deactivated.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

1. Open and clip the Right Essential Bus circuit breaker "GND SERVICE LIGHT" on the Right DC Circuit Breaker Panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-1 Position Lights****33-40-1-1**

Interval	Installed	Required	Procedure
C	6	3	NIL

One bulb at each position (wing tip and aft) may be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Position Lights in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Position Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/B "POSITION LIGHTS" on RIGHT ESS 28VDC BUS located on Right C/B Panel for daylight operations.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-1 Position Lights****33-40-1-2**

Interval	Installed	Required	Procedure
C	6	0	NIL

May be inoperative for daylight operations.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Position Lights in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Position Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/B "POSITION LIGHTS" on RIGHT ESS 28VDC BUS located on Right C/B Panel for daylight operations.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIGHTS****ATA 33****33-40-2 A/COL WHITE Lights****33-40-2-1**

Interval	Installed	Required	Procedure
C	4	2	(M)

At most one bulb at each position (above bullet fairing and underside center fuselage) may be inoperative provided operative bulbs are selected for operation.

NOTE: The A/COL switch must be operated as if the lights were operating normally.

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard inoperative A/COL WHITE Lights bulbs/lamps near the toggle switch in the aft fuselage equipment bay.
2. Placard inoperative A/COL WHITE lights bulbs/lamps in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. To switch from inoperative bulb/lamp to operative bulb/lamp, operation of selector switches mounted on the Anti-Collision Light Selector Panel located in the aft fuselage equipment bay is required. The switches are located on the Right side, forward of the access door, within the aft fuselage equipment bay.
2. Toggle switch to operative bulb/lamp (PRI/SEC) for the applicable housing assemblies (UPPER/LOWER).
3. Placard near the A/COL toggle switch located in the aft fuselage equipment bay which light bulbs/lamps are inoperative.
4. Placard inoperative A/COL WHITE Lights bulbs/lamp in the flight compartment.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-2 A/COL WHITE Lights****33-40-2-2**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative for daylight operations.

NOTE: The A/COL switch must be operated as if the lights were operating normally.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative A/COL WHITE Lights on EXTERIOR LIGHTS control panel in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard A/COL WHITE Lights on EXTERIOR LIGHTS control panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-3 Logo Lights**

Interval	Installed	Required	Procedure
D	2	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Logo Lights in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Logo Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-4 A/COL RED Light (Red Recognition Light)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided adequate precautions are taken to clear the area prior to engine start and while engines are running.

NOTE: The A/COL Light switch must be operated as if the light was operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative A/COL RED Light (Red Recognition Light) must be placarded in the flight compartment.

Operating Procedures

1. Ensure the area around the aircraft is clear of personnel prior to engine start and during ground engine running.
2. Operate the Anti-Collision Lights switch as if the light was operating normally.

Maintenance Procedures

1. Placard A/COL RED Light (red) Switch on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-5 Boarding Lights****33-40-5-1 Passenger Configuration****33-40-5-1-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided Cabin Overhead Lighting or alternate means is used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Boarding Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard BOARDING LIGHT switch in the passenger compartment at the flight attendant's PA panel located adjacent to the airstair door.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-40-5 Boarding Lights

33-40-5-1 Passenger Configuration

33-40-5-1-2

NOT APPLICABLE

— — — —

33-40-5 Boarding Lights

33-40-5-1 Passenger Configuration

33-40-5-1-3

NOT APPLICABLE

— — — —

33-40-5 Boarding Lights

33-40-5-2 All Cargo Operations

NOT APPLICABLE

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-6 Passenger Airstair Door Lights****33-40-6-1 Passenger Configuration****33-40-6-1-1**

Interval	Installed	Required	Procedure
C	4	2	NIL

May be inoperative provided they are not adjacent.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Airstair Door Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative AIRSTAIR DOOR lighting switch on the flight attendant's LIGHTING panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-6 Passenger Airstair Door Lights****33-40-6-1 Passenger Configuration****33-40-6-1-2**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative provided acceptable alternate lighting is used to board and deplane passengers.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Airstair Door Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative AIRSTAIR DOOR lighting switch on the flight attendant's LIGHTING panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-6. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-40-6 Passenger Airstair Door Lights

33-40-6-1 Passenger Configuration

33-40-6-1-2

NOT APPLICABLE

■ ■ ■ ■

33-40-6 Passenger Airstair Door Lights

33-40-6-1 Passenger Configuration

33-40-6-1-3

NOT APPLICABLE

■ ■ ■ ■

33-40-6 Passenger Airstair Door Lights

33-40-6-2 All Cargo Operations

NOT APPLICABLE

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-6. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-6. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-7 Landing Lights****33-40-7-1**

Interval	Installed	Required	Procedure
C	4	2	NIL

One inboard and/or one outboard light may be inoperative for night operations provided steep approach landings are not conducted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Landing Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Landing Lights in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-7. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-7 Landing Lights****33-40-7-2**

Interval	Installed	Required	Procedure
D	4	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Landing Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Landing Lights in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-7. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-8 Taxi Light****33-40-8-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided Landing Lights are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Taxi Light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Taxi Light in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/B “EXT LIGHTS – TAXI PWR” on MAIN 28VDC Bus located on Left DC Circuit Breaker panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-8. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-8 Taxi Light****33-40-8-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Taxi Light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Taxi Light in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/B “EXT LIGHTS - TAXI PWR” on MAIN 28VDC Bus located on Left DC Circuit Breaker panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-8. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-9 WING INSP Lights****33-40-9-1**

Interval	Installed	Required	Procedure
A	4	2	NIL

One or more may be inoperative for three flight days provided:

- At least one wing inspection light is operative per side, and
- A portable lamp/light of adequate capacity for wing inspection is available for night operations in icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative WING INSP Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard WING INSP Lights on EXTERIOR LIGHTS control panel.
- Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/Bs "L WING INSP LTS" and/or "R WING INSP LTS" on SEC 28VDC Bus located on Left and Right DC Circuit Breaker panels respectively. Only applicable for daylight operations or flights not conducted in known or forecast icing conditions.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-9. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-9 WING INSP Lights****33-40-9-2**

Interval	Installed	Required	Procedure
C	4	0	NIL

One or more may be inoperative provided the flight is not conducted in known or forecasted icing conditions at night.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative WING INSP Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard WING INSP Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/Bs "L WING INSP LTS" and/or "R WING INSP LTS" on SEC 28VDC Bus located on Left and Right DC Circuit Breaker panels respectively. Only applicable for daylight operations or flights not conducted in known or forecast icing conditions.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-9. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-9 WING INSP Lights****33-40-9-3**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative WING INSP Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard WING INSP Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/Bs "L WING INSP LTS" and/or "R WING INSP LTS" on SEC 28VDC Bus located on Left and Right DC Circuit Breaker panels respectively. Only applicable for daylight operations or flights not conducted in known or forecast icing conditions.

— — — —

ISS III R01**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-9. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-9. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-1 Exterior Emergency Lighting System****33-50-1-1**

Interval	Installed	Required	Procedure
A	1	0	(O)

May be inoperative for one flight day provided:

- Aircraft crew are the only occupants of the aircraft, and
- Alternate procedures are established and used.

NOTE: The operator's MEL must state the maximum number of aircraft crew permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Exterior Emergency Lighting System must be placarded in the flight compartment.

Operating Procedures

The PIC to confirm from the SCC /Engineering that the Flashlights used for night evacuation are functional. (Ref SEP Manual, Ch5, para 5.26).

Maintenance Procedures

- Placard Exterior Emergency Lighting System EMER LIGHTS switch on Advisory light panel.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-1 Exterior Emergency Lighting System****33-50-1-2**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative for daylight operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Exterior Emergency Lighting System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Exterior Emergency Lighting System EMER LIGHTS switch on Advisory light panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-1. 2



DHC-8-402	MINIMUM EQUIPMENT LIST
------------------	-------------------------------

LIGHTS

ATA 33

33-50-2	<u>Interior Electrical Emergency Lighting System (Relief limited to installations defined by Bombardier AEROC 84.6.E.1)</u>
33-50-2-1	Single and Dual Class Classic Interiors

NOT APPLICABLE

ISS III R00	APPROVED BY DAW DELHI, DATED -
--------------------	---------------------------------------

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIGHTS****ATA 33****33-50-2 Interior Electrical Emergency Lighting System
(Relief limited to installations defined by
Bombardier AEROC 84.6.E.1)****33-50-2-2 Single Class, Increased Capacity and Cargo/Combi
NextGen Interiors****33-50-2-2A Ceiling Emergency Flood Lights**

Interval	Installed	Required	Procedure
C	7	-	NIL

Individual light units may be inoperative provided:

- No two adjacent ceiling emergency flood lights are inoperative, and
- Floodlight at aircraft fuselage station X=335.31(At Seat Row No. 10) is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Refer to Figure 33-2

Inoperative Interior Electrical Emergency Lighting System must be placarded in the flight compartment and on the forward flight attendant's panel.

Operating Procedures

None required.

Maintenance Procedures

- Inoperative interior Electrical Emergency Lighting System must to be placarded in the flight compartment and on the forward flight attendant's panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-2 Interior Electrical Emergency Lighting System
(Relief limited to installations defined by
Bombardier AEROC 84.6.E.1)****33-50-2-2 Single Class, Increased Capacity and Cargo/Combi
NextGen Interiors****33-50-2-2B Exit Identifiers**

Interval	Installed	Required	Procedure
C	4	4	NIL

Each exit identifier may have 40% of its internal lights inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Refer to Figure 33-2

Inoperative Interior Electrical Emergency Lighting System must be placarded in the flight compartment and on the forward flight attendant's panel.

Operating Procedures

None required.

Maintenance Procedures

3. Inoperative interior Electrical Emergency Lighting System must to be placarded in the flight compartment and on the forward flight attendant's panel.
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 3



DHC-8-402		MINIMUM EQUIPMENT LIST
		<i>LIGHTS</i>
		<i>ATA 33</i>
33-50-2	<u>Interior Electrical Emergency Lighting System (Relief limited to installations defined by Bombardier AEROC 84.6.E.1)</u>	
33-50-2-3	Dual Class NextGen Interior	

NOT APPLICABLE

(...Continued)

ISS III R00	APPROVED BY DAW DELHI, DATED -
-------------	--------------------------------

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 4




DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**33-50-2 Interior Electrical Emergency Lighting System
(Relief limited to installations defined by
Bombardier AEROC 84.6.E.1)**

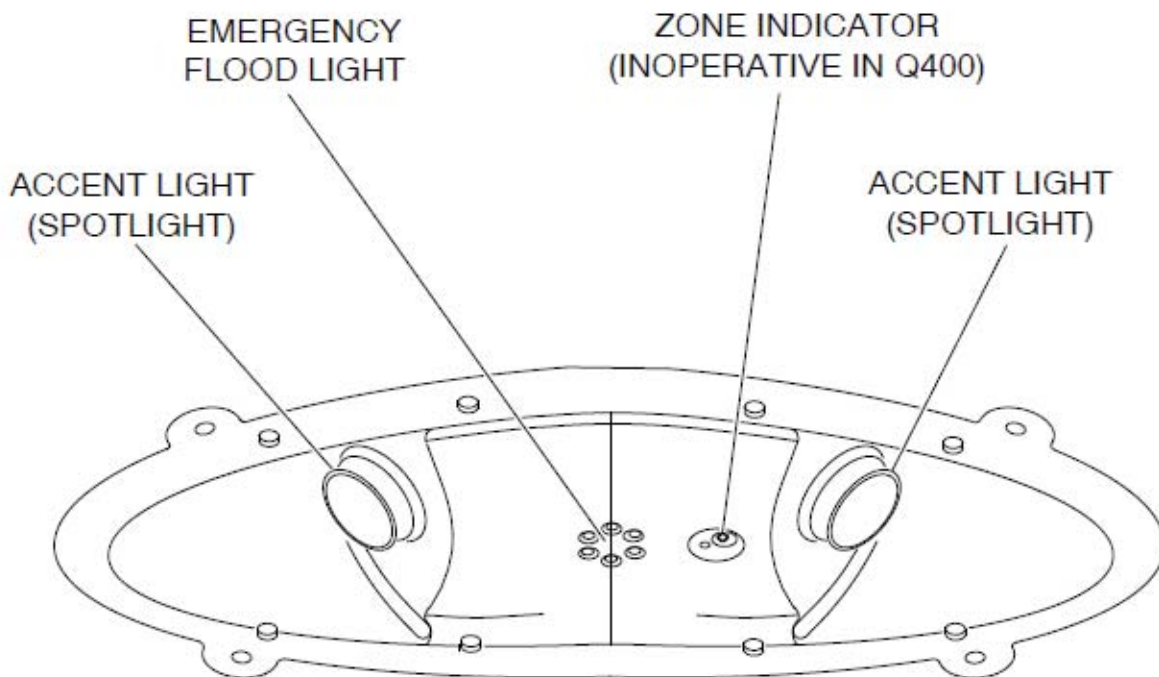

**NEXT GEN ACCENT LIGHTING AND
EMERGENCY FLOODLIGHT HOUSING ASSEMBLY**

Figure 33-2

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 5



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIGHTS****ATA 33****33-50-3 Photoluminescent Floor Proximity Emergency
Escape Path Lighting (Relief limited to
installations defined by Bombardier AEROC
84.8.AC.10)****33-50-3-1**

Interval	Installed	Required	Procedure
C	1	1	NIL

Four meters of lighting strip may be unserviceable provided:

- Any unserviceable section does not exceed 0.2 meters (8 in.) of continuous length, and
- The distance between two adjacent unserviceable sections must be not less than 1.5 meters (60 in.) on the same strip.

NOTE: As defined by Bombardier design AEROC 84.8.AC.10, Section 11.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the Photoluminescent Floor Proximity Emergency Escape Path Lighting strip is unserviceable.

Operating Procedures

None required.

Maintenance Procedures

- Placard in the flight compartment specific Photoluminescent Floor Proximity Emergency Escape Path Lighting strips that are unserviceable.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**33-50-3 Photoluminescent Floor Proximity Emergency
Escape Path Lighting (Relief limited to
installations defined by Bombardier AEROC
84.8.AC.10)**

33-50-3-2 All Cargo Operations

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-4 Interior/Exterior EMERGENCY LIGHTING
Switch (Passenger Compartment)****33-50-4-1 Switch Cover/Guard**

Interval	Installed	Required	Procedure
C	1	0	(O)

Switch cover/guard may be inoperative or missing provided the Emergency Lighting System is monitored for inadvertent switch operation.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative EMERGENCY LIGHTING switch cover guard and/or NORMAL/ON indication lights located over the flight attendant's handset in the passenger cabin.

Operating Procedures

Inform SCC during the preflight briefing of the missing guard and advise her to stay cautious of inadvertent selection of Emergency Lights.

Maintenance Procedures

1. Inoperative EMERGENCY LIGHTING switch cover/guard and/or NORMAL/ON indication lights must be placarded on the forward flight attendant's panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-4 Interior/Exterior EMERGENCY LIGHTING
Switch (Passenger Compartment)****33-50-4-2 NORMAL/ON Indication Lights**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative provided the EMERGENCY LIGHTING Switch is verified operative prior to first flight each day.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative EMERGENCY LIGHTING switch cover guard and/or NORMAL/ON indication lights located over the flight attendant's handset in the passenger cabin.

Operating Procedures

1. Prior to first flight each day, verify the EMERGENCY LIGHTING switch located over the flight attendant's handset in the passenger cabin is operational.
2. To verify the operation of the Emergency Lighting switch in the passenger cabin, carry out the following steps:
 - a) Set the Emergency Lighting knob in the flight compartment to the "ARMED" position.
 - b) Alternate the pressing of the Emergency Lighting switch in the passenger cabin between NORMAL and ON. The Emergency Lighting should alternate between OFF and ON respectively.
 - c) Depress the Emergency Light switch one more time if necessary, to turn OFF the Emergency Lights to complete the verification.

NOTE:

1. This operational check is to verify the switch in the passenger cabin is still operational for whose indication lights may be inoperative. This procedure is not for the EMERGENCY switch in the flight deck which must be fully operational.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-4 Interior/Exterior EMERGENCY LIGHTING
Switch (Passenger Compartment)****33-50-4-2 NORMAL/ON Indication Lights**

2. Both the ON or NORMAL indication lights each have two light emitting elements within the switch. The MMEL associated with this system treats degradation (1 of 2 elements inoperative) as failure of the associated indication.
3. Keeping the Emergency Lighting System active (ON) for a prolonged period will drain the Emergency Lighting System Battery Packs regardless of availability of 28 VDC Power on the Left Essential Bus.

Maintenance Procedures

1. Inoperative EMERGENCY LIGHTING switch cover/guard and/or NORMAL/ON indication lights must be placarded on the forward flight attendant's panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-4. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-4. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-10-1 Altitude Alerting System**

Interval	Installed	Required	Procedure
A	1	0	(O)

May be inoperative provided:

- Autopilot with ALT hold is verified operative, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Altitude Alerting System must be placarded in the flight compartment.

Operating Procedures

With electrical power applied, adequate to support both MAIN busses, at the flight guidance controller, select ALT mode and observe that "ALT" is displayed in the FMA area of both PFDs. Increased awareness of aircraft altitude must be exercised.

Maintenance Procedures

- Placard the Flight Guidance Control Panel with "Altitude Pre-select INOP".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-10-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-1 Standby Magnetic Compass****34-20-1-1**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be inoperative provided any combination of three gyro (or INS (IRU)) stabilized compass systems are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Standby Magnetic Compass in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Standby Compass located below the Caution Lights panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-1 Standby Magnetic Compass****34-20-1-2**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be inoperative provided:

- a) Any combination of two gyro (or INS (IRU)) stabilized compass systems are operative, and
- b) Aircraft is operated:
 - i) With dual independent navigation capability, and
 - ii) Under positive radar control by ATC during the enroute flight phase, or one of the navigation systems is a TSO'd GPS which provides track information.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Standby Magnetic Compass in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the Standby Compass located below the Caution Lights panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-1 Standby Magnetic Compass****34-20-1-3**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative for flights that are entirely within areas of magnetic unreliability provided at least two stabilized directional gyro systems are installed, are operative, and if necessary, used in conjunction with approved free gyro navigation techniques.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Standby Magnetic Compass in the flight compartment.

Operating Procedures

Operations in areas of magnetic unreliability require that at least two stabilized directional gyro systems operate normally and, if necessary, used in accordance with approved free-gyro navigation techniques.

Maintenance Procedures

1. Placard the Standby Compass located below the Caution Lights panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-2 Standby Attitude Indicator**

Interval	Installed	Required	Procedure
B	1	0	(O)

May be inoperative for day VMC provided:

- The instrument face is covered, and
- Operation is not conducted into known or forecast VFR OTT (Over the Top) conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Standby Attitude Indicator in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard the Standby Attitude Indicator on the Engine Panel.
- Use appropriate means to cover a face of instrument.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-3 IVSI Indications (on PFDs)**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative for day VMC.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Vertical Speed Indication (VSI) in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the relevant glareshield.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-4 AHRS Control Panel Indicators****34-20-4-1 DG Indicators**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative provided switching function is operative for DG Indicator.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Attitude Heading Reference System Control Panel (AHRSCP) indicators must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the AHRS Control Panel with "XXX Indicator INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-4 AHRS Control Panel Indicators****34-20-4-2 ALIGN Indicators**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative provided switching function is operative for ALIGN Indicator.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Attitude Heading Reference System Control Panel (AHRSCP) indicators must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the AHRS Control Panel with "XXX Indicator INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-4 AHRS Control Panel Indicators****34-20-4-3 SLAVE Indicators**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative provided switching function is operative for SLAVE Indicator.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Attitude Heading Reference System Control Panel (AHRSCP) indicators must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the AHRS Control Panel with "XXX Indicator INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-4. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-4 AHRS Control Panel Indicators****34-20-4-4 BASIC Indicators**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative provided switching function is operative for BASIC Indicator.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Attitude Heading Reference System Control Panel (AHRSCP) indicators must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the AHRS Control Panel with "XXX Indicator INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-4. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-5 Flux Valves**

Interval	Installed	Required	Procedure
B	2	1	NIL

May be inoperative provided:

- The opposite Attitude Heading Reference Unit is operative,
- The Standby Magnetic Compass is operative,
- The AHRS on the affected side is operated in DG mode,
- Flight is restricted to DAY VMC, and
- DG Slew Mode is confirmed operative.

NOTE: CAT II Operation not permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flux Valve must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard the glareshield with "AHRS 1/2 DG MODE ONLY".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-6 Integrated Standby Instrument
(CR839CH00013)****34-20-6-1 Attitude / Slip Skid Function**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be inoperative for day VMC.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Integrated Standby Instrument attitude function and/or inoperative Integrated Standby Instrument STD Button must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard space adjacent to the Integrated Standby Instrument with "ATT Function INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-20-6 Integrated Standby Instrument
(CR839CH00013)****34-20-6-2 STD (Standard) Button**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Integrated Standby Instrument attitude function and/or inoperative Integrated Standby Instrument STD Button must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard space adjacent to the Integrated Standby Instrument with "STD Button INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-6. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-20-7

Inertial Reference System (IRS)

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-7. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-20-7. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-30-1

Microwave Landing Systems (MLS)

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-1 Weather Radar System**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided flights are not conducted in known or forecast bad weather conditions. Weather at origin, enroute, destination and alternate airport are reported clear.

NOTE: Monsoon Operations not permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Weather Radar System (WX RDR) in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the EFIS Control Panels in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-2 Traffic Alert and Collision Avoidance System (TCAS)****34-40-2-1 Traffic Alert and Collision Avoidance System (TCAS)**

Interval	Installed	Required	Procedure
A	1	0	(M)

May be inoperative for 36 hours or first visit to the base station whichever is earlier provided system is deactivated and secured.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Traffic Collision Avoidance System in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Pull and clip the TCAS circuit breaker on Avionics Panel.
2. Placard the relevant Glareshield.
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-2 Traffic Alert and Collision Avoidance System (TCAS)****34-40-2-2 Combined Traffic Alert (TA) and Resolution Advisory (RA) Dual Displays**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative on the non-flying pilot side provided TA and RA elements and audio functions are operative on flying pilot side.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Traffic Collision Avoidance System in the flight compartment.

Operating Procedures

1. Verify that Traffic Alerts (TA) and Resolution Advisories (RA) on flying pilot's side operate normally.
2. Verify that TA and RA indications are visible to the non-flying pilot.
3. Verify that audio functions operate normally.

Maintenance Procedures

1. Placard inoperative TA and RA Dual Displays.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-2 Traffic Alert and Collision Avoidance System (TCAS)****34-40-2-3 RA Display System(s)****34-40-2-3A**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative on the non-flying pilot side.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Traffic Collision Avoidance System in the flight compartment.

Operating Procedures

Verify that Traffic Alert (TA) and remaining operable Resolution Advisory (RA) on flying pilot's side operate normally.

Maintenance Procedures

1. Placard inoperative RA Display System(s).
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-2 Traffic Alert and Collision Avoidance System (TCAS)****34-40-2-3 RA Display System(s)****34-40-2-3B**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative provided:

- All Traffic Alert (TA) display elements and voice command audio functions are operative, and
- TA ONLY mode is selected by the crew.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Traffic Collision Avoidance System in the flight compartment.

Operating Procedures

Use TCAS Mode Selection on the ARCDU to select TA only operation. Verify "TA ONLY" is annunciated on MFDs.

Maintenance Procedures

- Placard inoperative RA Display System(s).
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■**ISS III R00****APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**34-40-2. 4**

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-2 Traffic Alert and Collision Avoidance System (TCAS)****34-40-2-4 TA Display System(s)**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided all installed RA display and audio functions are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Traffic Collision Avoidance System in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative TA Display System(s).
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-2. 5



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-3 RA Height Indications (on PFDs)****34-40-3-1**

Interval	Installed	Required	Procedure
B	2	0	(O)

May be inoperative provided:

- A minimum of one RAD ALT is operative, and
- Approach minimums and operating procedures are not dependent on their use.

NOTE: RNP APCH (LNAV or LNAV/VNAV or LPV) operations not permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Radio Altitude Height Indication(s) must be placarded in the flight compartment.

Operating Procedures

RNP APCH (LNAV or LNAV/VNAV or LPV) procedures which require the use of RA height indication on the PFD are not authorized.

Maintenance Procedures

- Placard the affected PFD(s) with "RAD ALT DISPLAY INOP".
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R05**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-3 RA Height Indications (on PFDs)****34-40-3-2**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative provided approach minimums and operating procedures are not dependent on its use.

NOTE: RNP APCH (LNAV or LNAV/VNAV or LPV) operations not permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Radio Altitude Height Indication(s) must be placarded in the flight compartment.

Operating Procedures

RNP APCH (LNAV or LNAV/VNAV or LPV) procedures which require the use of RA height indication on the PFD are not authorized.

Maintenance Procedures

1. Placard the affected PFD(s) with "RAD ALT DISPLAY INOP".
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R05**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)**

Interval	Installed	Required	Procedure
A	1	0	(O)

May be inoperative provided:

- Alternate procedures are established and used, and
- Repairs are made within three flight days.

NOTE:

- CAT II, RNP APCH (LNAV or LNAV/VNAV or LPV), and Monsoon operations not permitted.
- LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Ground Proximity Warning System (GPWS) or Enhanced Ground Proximity Warning System (EGPWS), as applicable in the flight compartment.

Operating Procedures

- Ensure other aircraft equipment like VOR, DME and Altimeters fully serviceable and no other instrument failure occurs associated with it.
- Determine and raise Minimum Operating Altitude (MOA) for departure and destination aerodromes and route MORA for different segments of the route and be aware which segment of route contributes to highest MORA.
- Brief First Officer in detail about the procedures to be followed during takeoff cruise and descend approach.
- The flight should be flown by the commander even if cleared to assist First Officer for takeoff and landing.

TAKEOFF: Do not takeoff in wind shear or marginal weather conditions where you will not have terrain in sight. Climb above MSA within 25NM or stated distance from the facility for MSA. If GPWS warning triggers, correlate it with terrain, altitude, ROC and aircraft configuration. Take appropriate action if required.

*(...Continued)***ISS III R05****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 1

34-40-4 Ground Proximity Warning System (GPWS) / Enhanced Ground Proximity Warning System (EGPWS)

DURING CRUISE: If a descent has to be carried out due to loss of engine power or emergency descent requirements, do not descend below MORA.

DESCENT AND APPROACH:

- a) Apart from a thorough briefing the following guidelines should be kept in mind for a safe approach.
- b) Do not descend below MSA if more than the stated distance from the determining facility.
- c) Hold O/H the facility if weather is marginal or wind shear is reported. Proceed and land at alternate if weather continues to be bad.
- d) If any doubt about any condition on approach initiate go around. Review go around action during approach briefing.
- e) Do not descend below MSA till on instrument approach procedure and established on required radials, or unless terrain is visual below 1500 AGL to cater to “terrain” warning.
- f) Meticulously fly correct ILS profile or, if a VOR, DME approach, DME altitude profile.
- g) Ensure gear locked down and landing configuration. Flaps extension by FAF to cater to spurious “too low gear / flaps” warning.
- h) Cross check all three altimeters for altitude and RA.
- i) Recheck at 500 feet correct landing configuration, landing check list, landing lights and landing clearance.

Maintenance Procedures

1. Placard the pilot's / co-pilot's glareshield as applicable.
2. Make appropriate entry in the aircraft journey log.

NOTE: TAWS Enhanced Mode may be inoperative due to an inoperative Global Positioning System (GPS) resulted from FMS1 and FMS2 (if installed) failures. In this case, inoperative GPS procedures on item 34-50-6 must also be applied.

☐ ☐ ☐ ☐

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-1 Modes 1 to 4**

Interval	Installed	Required	Procedure
A	1	0	(O)

May be inoperative provided:

- Alternate procedures are established and used, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Ground Proximity Warning System (GPWS) or Enhanced Ground Proximity Warning System (EGPWS), as applicable in the flight compartment.

Operating Procedures

If Modes 1 thru 4 are inoperative:

- Two VHF Navigation Systems must operate normally.
- Perform following for corresponding Mode failure.

MODE 1: Excessive Rate of Descent.

The Pilot Monitoring (PM) will monitor the height indicated on the Radio Altimeter (RADALT) and Rate of Descent (ROD) indicated on the Vertical Speed Indicator (VSI) and:

Call "SINK RATE" when the ROD increases to equal the height on the RADALT. For example, ROD increasing to 1500 feet per minute (fpm) ROD passing 1500 feet RADALT. Call "PULL UP" when the ROD increases to double the height on the RADALT. For example, ROD increasing to 3000 fpm ROD passing 1500 feet RADALT.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 3



34-40-4-1 Modes 1 to 4

NOTE: TAWS Enhanced Mode may be inoperative due to an inoperative Global Positioning System (GPS) resulted from FMS1 and FMS2 (if installed) failures. In this case, inoperative GPS procedures on item 34-50-6 must also be applied.

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-2 Test Mode**

Interval	Installed	Required	Procedure
A	1	0	NIL

May be inoperative provided:

- The GPWS/EGPWS is considered inoperative, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Ground Proximity Warning System (GPWS) or Enhanced Ground Proximity Warning System (EGPWS), as applicable in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard the pilot's / co-pilot's glareshield as applicable.
- Make appropriate entry in the aircraft journey log.

NOTE: TAWS Enhanced Mode may be inoperative due to an inoperative Global Positioning System (GPS) resulted from FMS1 and FMS2 (if installed) failures. In this case, inoperative GPS procedures on item 34-50-6 must also be applied.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-3 Flap Override Function**

Interval	Installed	Required	Procedure
A	1	0	NIL

May be inoperative provided:

- The GPWS/EGPWS flap aural warning is operative, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on or near the inoperative Flap Override Switch in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Inoperative Flap Override Switch, switch lights and/or switch cover must be placarded near the FLAP OVERRIDE switch in the flight compartment.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-3 Flap Override Function****34-40-4-3A GPWS FLAP OVERRIDE Switch Lights****34-40-4-3A-1**

Interval	Installed	Required	Procedure
A	1	0	NIL

“Cross-hatch” indication may be inoperative provided:

- Switch cover is closed,
- Flap Override function is considered inoperative, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on or near the inoperative Flap Override Switch in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Inoperative Flap Override Switch, switch lights and/or switch cover must be placarded near the FLAP OVERRIDE switch in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-3 Flap Override Function****34-40-4-3A GPWS FLAP OVERRIDE Switch Lights****34-40-4-3A-2**

Interval	Installed	Required	Procedure
C	1	0	NIL

“GPWS FLAP OVERRIDE” portion of the indication may be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on or near the inoperative Flap Override Switch in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Inoperative Flap Override Switch, switch lights and/or switch cover must be placarded near the FLAP OVERRIDE switch in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-3 Flap Override Function****34-40-4-3B GPWS FLAP OVERRIDE Switch Cover****34-40-4-3B-1**

Interval	Installed	Required	Procedure
A	1	0	NIL

Switch cover may be inoperative in the closed position provided:

- Flap Override function is considered inoperative, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on or near the inoperative Flap Override Switch in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Inoperative Flap Override Switch, switch lights and/or switch cover must be placarded near the FLAP OVERRIDE switch in the flight compartment.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 9

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-3 Flap Override Function****34-40-4-3B GPWS FLAP OVERRIDE Switch Cover****34-40-4-3B-2**

Interval	Installed	Required	Procedure
C	1	0	(O)

Switch cover may be missing or inoperative in the open (Non-return) position provided the GPWS FLAP OVERRIDE switch is monitored for inadvertent switch operation.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on or near the inoperative Flap Override Switch in the flight compartment.

Operating Procedures

Procedures have to be established and used for pilot to monitor prior to approach or takeoff that the Flap Override Switch has not inadvertently been operated into a configuration that contradicts intended flight configuration.

Maintenance Procedures

1. Inoperative Flap Override Switch, switch lights and/or switch cover must be placarded near the FLAP OVERRIDE switch in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 10

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-4 Glidescope Deviation (Mode 5)**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Ground Proximity Warning System (GPWS) or Enhanced Ground Proximity Warning System (EGPWS), as applicable in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the pilot's / co-pilot's glareshield as applicable.
2. Make appropriate entry in the aircraft journey log.

NOTE: TAWS Enhanced Mode may be inoperative due to an inoperative Global Positioning System (GPS) resulted from FMS1 and FMS2 (if installed) failures. In this case, inoperative GPS procedures on item 34-50-6 must also be applied.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 11



34-40-4-5 Minimums Alert (Mode 6)

May be inoperative provided alternate procedures are established and used.

Placard

Operating Procedures

Call "MINIMUMS, MINIMUMS" when passing through "DH" setting.

Maintenance Procedures

- NOTE:** TAWS Enhanced Mode may be inoperative due to an inoperative Global Positioning System (GPS) resulted from FMS1 and FMS2 (if installed) failures. In this case, inoperative GPS procedures on item 34-50-6 must also be applied.

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-6 TAWS Enhanced Mode****34-40-4-6A**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Ground Proximity Warning System (GPWS) or Enhanced Ground Proximity Warning System (EGPWS), as applicable in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the pilot's / co-pilot's glareshield as applicable.
2. Make appropriate entry in the aircraft journey log.

NOTE: TAWS Enhanced Mode may be inoperative due to an inoperative Global Positioning System (GPS) resulted from FMS1 and FMS2 (if installed) failures. In this case, inoperative GPS procedures on item 34-50-6 must also be applied.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 13



DHC-8-402	MINIMUM EQUIPMENT LIST	
	<i>NAVIGATION</i>	<i>ATA 34</i>

34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)

34-40-4-6 TAWS Enhanced Mode

34-40-4-6B

NOT APPLICABLE

ISS III R01	APPROVED BY DAW DELHI, DATED -
-------------	--------------------------------

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 14

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-7 Ground Proximity Warning System (GPWS) Landing Flap
Selection Switch (LFSS) Indication Lights**

Interval	Installed	Required	Procedure
C	3	-	(O)

May be inoperative provided alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative GPWS Landing Flap Selection Switch indication light in the flight compartment.

Operating Procedures

Placarding will be done by engineering adjacent to the inoperative lights with Flaps 10, 15, 35 markings.

Pilots to confirm the GPWS Landing Flaps selection switch position with reference to the placard. Confirm the GPWS Landing Flaps switch position with cockpit Lights "ON" in case of night operations.

Maintenance Procedures

1. Placard the inoperative GPWS Landing Flap Selection Switch indication light in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 15

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-40-4 Ground Proximity Warning System (GPWS) /
Enhanced Ground Proximity Warning System
(EGPWS)****34-40-4-8 Steep Approach Mode (803SO90034)****34-40-4-8A**

Interval	Installed	Required	Procedure
D	1	0	(O)

May be inoperative provided:

- "STD" portion of the "STD/STEEP" FLAP 35 APPROACH switch indication lights on the hydraulic/flap override control panel is illuminated,
- Operating procedures are not dependent on its use,
- "STD/STEEP" FLAP 35 APPROACH switch on the hydraulic/flap override control panel is placarded, "INOPERATIVE", and
- Steep Approaches are not to be conducted.

Minimum Equipment List Procedures (MELP)**Placard**

Placard the "STD/STEEP" FLAP 35 APPROACH switch on the hydraulic/flap override control panel "INOPERATIVE" for inoperative Steep Approach Mode.

Operating Procedures

Verify the "STD" indication on the "STD/STEEP" FLAP 35 APPROACH switch illuminates when selected.

Maintenance Procedures

- Placard the "STD/STEEP" FLAP 35 APPROACH switch on the hydraulic/flap override control panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 16

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34**

- 34-40-4 Ground Proximity Warning System (GPWS) / Enhanced Ground Proximity Warning System (EGPWS)**
- 34-40-4-8 Steep Approach Mode (803SO90034)**
- 34-40-4-8B “STD/STEEP” FLAP 35 APPROACH switch indication lights (On Hydraulic/flap Override Control Panel)**

Interval	Installed	Required	Procedure
C	1	0	(O)

One indication (STD or STEEP) may be inoperative and Steep Approach may be conducted provided:

- Prior to first flight each day, Standard and Steep Approach Mode selection is verified operative, and
- Placard the appropriate inoperative indication below the “STD/STEEP” FLAP 35 APPROACH switch.

Minimum Equipment List Procedures (MELP)**Placard**

Placard the “STD/STEEP” FLAP 35 APPROACH switch on the hydraulic/flap override control panel for the appropriate inoperative “STD/STEEP” indication lights.

Operating Procedures

Prior to first flight of the day, verify Standard / Steep Approach Mode is operative:

- Set flaps selector handle to 35 degrees.
- Press “STD/STEEP” FLAP 35 APPROACH switch on the hydraulic / flap override control panel. Check whether Case a) or b) is applicable.
 - If aural annunciation is NOT heard, Steep Approach function is considered inoperative.
 - If aural annunciation heard, continue to step 3.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 17

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34***

- | | |
|-------------------|---|
| 34-40-4 | Ground Proximity Warning System (GPWS) / Enhanced Ground Proximity Warning System (EGPWS) |
| 34-40-4-8 | Steep Approach Mode (803SO90034) |
| 34-40-4-8B | “STD/STEEP” FLAP 35 APPROACH switch indication lights (On Hydraulic/flap Override Control Panel) |

3. Press “STD/STEEP” FLAP 35 APPROACH switch on the hydraulic/flap override control panel. If aural annunciation of “STEEP APPROACH NOT SELECTED” is NOT heard, “GPWS/EGPWS” is considered inoperative.

Maintenance Procedures

1. Placard the “STD/STEEP” FLAP 35 APPROACH switch on the hydraulic/flap override control panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-4. 18

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-5 GPWS I/F FAIL Engine Display Message**

Interval	Installed	Required	Procedure
B	1	0	(M)

Message may be displayed provided GPWS is considered inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative GPWS must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. At the Avionics circuit breaker panel, pull and clip breaker GPWS (A1).
2. Placard the pilot's/co-pilot's Glareshield with "GPWS INOP".
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-6 Radio Altimeters****34-40-6-1**

Interval	Installed	Required	Procedure
A	2	0	(M)(O)

May be inoperative for two flight days provided:

- GPWS/EGPWS is considered inoperative,
- TCAS is considered inoperative,
- Weather minimums or operating procedures are not dependent on use of both,
- Operations are conducted in compliance with AFM SUPPLEMENT 11, OPERATION WITH ONE INOPERATIVE STALL WARNING AND/OR STICK PUSHER SYSTEM,
- Operations are conducted in compliance with AFM SUPPLEMENT 37, SUPPLEMENTARY PERFORMANCE INFORMATION FOR OPERATION ON CONTAMINATED RUNWAYS, and
- Operations are conducted in compliance with AFM SUPPLEMENT 39, NOISE ABATEMENT PROCEDURES AND PERFORMANCE (LANDING WITH 850 PROPELLER RPM), if applicable.

NOTE:

- In the absence of both Radio Altimeters, use the Barometric Altimeters for all height indications.
- With RAD ALT #1 disabled, landing gears not down and locked, PLA 1 and PLA 2 below Flight Idle + 12° and CAS below 156 Knots, Landing Gear Warning Horn will enable.
- RNP APCH (LNAV or LNAV/VNAV or LPV) and CAT II operations not permitted.
- LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative radio altimeter(s) must be placarded in the flight compartment.

Operating Procedures

NOTE: For operations where Radio Altimeter #1 is disabled as per the MMEL, the Landing Gear Warning Tone/Horn will sound when the aircraft drops below 156 Knots and either PLA 1 or PLA 2 is less than Flight Idle + 12° with landing gears not down and locked.

(...Continued)

ISS III R05**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-6 Radio Altimeters****34-40-6-1**

Operation is conducted in accordance with AFM Supplement 11 for Stick Pusher Inoperative, AFM Supplement 37 for Contaminated Runway, and AFM Supplement 39 for Landing with 850 RPM for noise abatement.

NOTE: GPWS/EGPWS and TCAS will be inoperative.

Maintenance Procedures

1. Pull and collar-clip the respective RAD ALT 1 and RAD ALT 2 circuit breaker(s), located on the Avionics Circuit Breaker Panel.
2. Pull and collar-clip the STICK PUSHER circuit breakers, located on the Avionics Circuit Breaker Panel.
3. Placard the glareshield with "RAD ALT #1 and RAD ALT #2 INOP" and "STICK PUSHER INOP".
4. Where applicable, pull and collar-clip the circuit breakers for GPWS/EGPWS, located on the Avionics Circuit Breaker Panel and placard the glareshield with "GPWS INOP".
5. Where applicable, pull and collar-clip the circuit breakers for TCAS located on the Avionics Circuit Breaker Panel and placard the glareshield with "TCAS INOP".
6. Make the appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-40-6 Radio Altimeters****34-40-6-2**

Interval	Installed	Required	Procedure
C	2	1	(M)(O)

One may be inoperative.

NOTE:

1. If RAD ALT #1 is disabled, landing gears not down and locked, PLA 1 and PLA 2 below Flight Idle + 12° and CAS below 156 Knots, Landing Gear Warning Horn will enable.
2. RNP APCH (LNAV or LNAV/VNAV or LPV) and CAT II operations not permitted.
3. LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative radio altimeter(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the glareshield with "RAD ALT #1 INOP" for inoperative No. 1 Radio Altimeter or "RAD ALT #2 INOP" for inoperative No 2 Radio Altimeter.
2. Pull and collar/clip the appropriate circuit breaker RAD ALT 1 or RAD ALT 2 located on the Avionics circuit breaker panel.
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R05**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-6. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-40-6. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-1 ATC Transponder / Altitude Reporting System****34-50-1-1 ATC Transponders****34-50-1-1A**

Interval	Installed	Required	Procedure
C	2	1	(O)

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative ATC Transponder/Altitude Reporting System in the flight compartment.

Operating Procedures

NOTE: Same side FMS" is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

If one ATC is operative, at the ARCDU, switch to the operating transponder and ensure TCAS remains operative. If ADS-B Out function is installed and required, ensure function is operative as well.

Maintenance Procedures

1. Placard ATC Transponder/Altitude Reporting system on the glareshield.
2. Make appropriate entries in aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-50-1 ATC Transponder / Altitude Reporting System

34-50-1-1 ATC Transponders

34-50-1-1B

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-1 ATC Transponder / Altitude Reporting System****34-50-1-2 ATC Identifier Switch (on hand-wheels)****34-50-1-2A**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative ATC Identifier Switch (es) on the related Audio and Radio Control Display Unit (ARCDU).

Operating Procedures

NOTE: Same side FMS” is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the relevant ATC Identifier Switch (es) as “INOP” on the related Audio and Radio Control Display Unit (ARCDU).
2. Make appropriate entry in aircraft journey log.

— — — —**ISS III R00****APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-1 ATC Transponder / Altitude Reporting System****34-50-1-2 ATC Identifier Switch (on hand-wheels)****34-50-1-2B**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided one ATC ID button (on ARCDU1 or ARCDU2) is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative ATC Identifier Switch (es) on the related Audio and Radio Control Display Unit (ARCDU).

Operating Procedures

NOTE: Same side FMS” is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the relevant ATC Identifier Switch (es) as “INOP” on the related Audio and Radio Control Display Unit (ARCDU).
2. Make appropriate entry in aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-1 ATC Transponder / Altitude Reporting System****34-50-1-3 ATC ID Button (on ARCDU1 or ARCDU2)****34-50-1-3A**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative ATC ID button (s) on the ARCDU.

Operating Procedures**NOTE:** Same side FMS” is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the relevant ATC ID button (s) as “INOP” on the ARCDU.
2. Make appropriate entry in aircraft journey log.

■ ■ ■ ■**ISS III R00****APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**34-50-1. 5**

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-1 ATC Transponder / Altitude Reporting System****34-50-1-3 ATC ID Button (on ARCDU1 or ARCDU2)****34-50-1-3B**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided one ATC Identifier Switch (on hand-wheels) is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative ATC ID button (s) on the ARCDU.

Operating Procedures

NOTE: Same side FMS” is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the relevant ATC ID button (s) as “INOP” on the ARCDU.
2. Make appropriate entry in aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-1. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-50-1	<u>ATC Transponder / Altitude Reporting System</u>
34-50-1-4	ADS-B Squitter Transmissions

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-1. 7



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-1. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-2 VHF Navigation Systems**

Interval	Installed	Required	Procedure
C	2	1	NIL

One not powered by an essential electrical bus may be inoperative provided VHF NAV is not the sole means of navigation and both ADF system operates normally and weather conditions allow use of ADFs.

NOTE:

1. #1 VHF NAV should be serviceable.
2. CAT II operations not permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative VHF Navigation System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the center glareshield panel with "VHF NAV #X INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-3****Distance Measuring Equipment (DME) System**

Interval	Installed	Required	Procedure
C	2	1	NIL

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Distance Measuring Equipment (DME) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the center glareshield indicating the inoperative DME system.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-3 Distance Measuring Equipment (DME) System****34-50-3-1 DME HOLD Function****34-50-3-2A**

Interval	Installed	Required	Procedure
A	2	0	(O)

May be in operative provide:

- Associated DME is operative,
- Alternate means are established and used to provide position and distance, and
- Repairs are made within three flight days.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DME HOLD key must be placarded.

Operating Procedures

Utilize DME in normal VOR/ILS mode.

Maintenance Procedures

- Placard inoperative DME HOLD key on adjacent affected ARCDU.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-3 Distance Measuring Equipment (DME) System****34-50-3-2 DME HOLD Function****34-50-3-2B**

Interval	Installed	Required	Procedure
C	2	1	NIL

May be inoperative provided the associated DME is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative DME HOLD key must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative DME HOLD key on adjacent affected ARCDU.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-4 Automatic Direction Finding (ADF) Systems**

Interval	Installed	Required	Procedure
C	2	1	NIL

One may be inoperative provided ADF is not the sole means of navigation and both VHF NAV system operates normally.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Automatic Direction Finding (ADF) Systems must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the glareshield with "ADF #X INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-5 Marker Beacon****34-50-5-1 If used routinely**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Marker Beacon System(s) must be placarded in the flight compartment.

Operating Procedures

Provided no instrument approach that requires its use is carried out. For ILS approach (only) DME may be used in lieu of outer marker if authorized.

Maintenance Procedures

1. Placard the glareshield with "Marker 1 / 2 INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-5. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-50-5

Marker Beacon

34-50-5-2

If not used routinely

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-5. 2



34-50-6-1A

Interval	Installed	Required	Procedure
C	2	0	(O)

Except where required by operations, may be inoperative provided alternate procedures are established and used.

NOTE:

- i. TAWS enhanced mode is considered inoperative (if installed), and
- ii. ATC ADS-B function is considered inoperative (if installed).
- iii. One GPS must be operative for RNAV1, RNAV2, RNP1, RNP 2, RNAV5 (if adequate VOR/DME coverage is not available) and RNP APCH (LNAV or LNAV/VNAV or LPV) operations.
- iv. LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)

Placard

Inoperative Global Position System (GPS) must be placarded in the flight compartment.

Operating Procedures

Normal flight can be carried out by utilizing other navigation sensors such as Non-Directional Beacon, DME-DME or VOR-DME.

Maintenance Procedures

1. Placard the FMS CDU with "GPS INOP".
2. Make appropriate entry in the aircraft journey log.

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-50-6 Global Positioning System (GPS)****34-50-6-1 If used routinely****34-50-6-1B**

Interval	Installed	Required	Procedure
C	2	1	NIL

Where required by operations, one GPS must be operative.

NOTE: This relief is applicable for aircraft with:

- TAWS Enhanced Mode installed and required by regulation, and/or
- ATC ADS-B function installed and required by regulation.
- One GPS must be operative for RNAV1, RNAV2, RNP1, RNP 2, RNAV5 (if adequate VOR/DME coverage is not available) and RNP APCH (LNAV or LNAV/VNAV or LPV) operations.
- LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Global Position System (GPS) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard the FMS CDU with "GPS INOP".
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R05**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-6. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-50-6 Global Positioning System (GPS)

34-50-6-2 If not used routinely

NOT APPLICABLE

ISS III R01

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-6. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-50-6. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-60-1 Flight Directors**

Interval	Installed	Required	Procedure
C	2	0	NIL

Except where enroute operations require their use, may be inoperative provided:

- Approach procedures are not dependent on their use, and
- Autopilot is considered inoperative.

NOTE:

- RNAV 1, RNAV 2, RNAV 5, RNP 1, RNP 2, RNP APCH (LNAV or LNAV/VNAV or LPV) and CAT II operations not permitted.
- LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Director(s) must be placarded on the flight guidance control panel.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative Flight Director(s) on the flight guidance control panel.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R05**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-60-2 Flight Management System (FMS)****34-60-2-1 If used routinely****34-60-2-1A**

Interval	Installed	Required	Procedure
C	2	0	(O)

Except where required by operations, may be inoperative provided alternate procedures are established and used.

NOTE:

1. TAWS enhanced mode is considered inoperative (if installed), and
2. ATC ADS-B function is considered inoperative (if installed).
3. RNP2 Enroute (Oceanic) operation not permitted.
4. One must be operative for RNAV 1, RNAV 2, RNAV 5, RNP 1, RNP2 (Enroute Domestic) and RNP APCH#.
5. LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

For RNP APCH (APV / Baro VNAV or LPV) in the event of FMS failure on approach, there must be a conventional missed approach procedure (such as VOR/NDB raw data and/or radar). There must be a conventional approach available at the alternate.

Minimum Equipment List Procedures (MELP)**Placard**

1. Inoperative Flight Management System (FMS) must be placarded on the FMS Control Display Unit in the flight compartment.
2. Out of currency (Outdated) FMS Database must be placarded on the associated FMS Control Display Unit in the flight compartment.
3. Inoperative LOS Annunciator lights must be placarded on the LOS Annunciator in the flight compartment.

Operating Procedures

NOTE: "Same side FMS" is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

For dual FMS failure, PBN Operation is not authorized.

Maintenance Procedures

1. Placard the appropriate inoperative FMS Control Display Unit with "FMS INOP".
2. Make appropriate entry in the aircraft journey log.

ISS III R05

APPROVED BY DAW DELHI, DATE -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-60-2 Flight Management System (FMS)

34-60-2-1 If used routinely

34-60-2-1B

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-60-2 Flight Management System (FMS)

34-60-2-2 If not used routinely

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST****NAVIGATION****ATA 34****34-60-2 Flight Management System (FMS)****34-60-2-3 FMS Database****34-60-2-3A**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be out of currency (outdated) provided:

- Current aeronautical charts are used to verify navigation fixes prior to dispatch,
- Procedures are established and used to verify status and suitability of navigation facilities used to define route of flight,
- Approach navigation radios are manually tuned and identified, and
- Approaches are not conducted using system(s) with out of currency (outdated) database.

NOTE:

- Navigation Database must be current for RNAV1, RNAV 2, RNAV 5, RNP1, RNP2 and RNP APCH (LNAV or LNAV/VNAV or LPV) operations.
- LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

- Inoperative Flight Management System (FMS) must be placarded on the FMS Control Display Unit in the flight compartment.
- Out of currency (Outdated) FMS Database must be placarded on the associated FMS Control Display Unit in the flight compartment.
- Inoperative LOS Annunciator lights must be placarded on the LOS Annunciator in the flight compartment.

Operating Procedures

NOTE: "Same side FMS" is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

PBN operations are not authorised. Jeppessen charts are used to verify if the navigation facilities for the planned route are adequate. Monitor NOTAMS to ensure all navigation aids for the planned routes are serviceable.

Maintenance Procedures

- Placard the appropriate FMS Control Display Unit with "FMS DATABASE OUTDATED".
- Make appropriate entry in the aircraft journey log.

ISS III R05

APPROVED BY DAW DELHI, DAT 0 -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-2. 4



34-60-2-3B

Interval	Installed	Required	Procedure
C	2	1	NIL

En-route/approach navigation is conducted using a current (up to date) FMS database.

1. Navigation Database must be current for RNAV1, RNAV 2, RNAV 5, RNP1, RNP2 and RNP APCH (LNAV or LNAV/VNAV or LPV) operations.
2. LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)

Placard

1. Inoperative Flight Management System (FMS) must be placarded on the FMS Control Display Unit in the flight compartment.
2. Out of currency (Outdated) FMS Database must be placarded on the associated FMS Control Display Unit in the flight compartment.
3. Inoperative LOS Annunciator lights must be placarded on the LOS Annunciator in the flight compartment.

Operating Procedures

NOTE: “Same side FMS” is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the appropriate FMS Control Display Unit with "FMS DATABASE OUTDATED".
2. Make appropriate entry in the aircraft journey log.

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-60-2 Flight Management System (FMS)****34-60-2-4 SBAS (Satellite Based Augmentation System) Level of Service (LOS) Annunciator****34-60-2-4A-i**

Interval	Installed	Required	Procedure
C	-	1	NIL

May be inoperative provided that the LPV approach must be conducted from the side with the functioning LPV Light.

NOTE: LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)**Placard**

1. Inoperative Flight Management System (FMS) must be placarded on the FMS Control Display Unit in the flight compartment.
2. Out of currency (Outdated) FMS Database must be placarded on the associated FMS Control Display Unit in the flight compartment.
3. Inoperative LOS Annunciator lights must be placarded on the LOS Annunciator in the flight compartment.

Operating Procedures

NOTE: "Same side FMS" is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the appropriate inoperative LOS annunciator with "Light name" + "INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R05**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-2. 6

DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

34-60-2 Flight Management System (FMS)

34-60-2-4 SBAS (Satellite Based Augmentation System) Level of Service (LOS) Annunciator

34-60-2-4A LPV LOS Light

34-60-2-4A-ii

Interval	Installed	Required	Procedure
C	-	0	NIL

May be inoperative provided LPV approaches are not conducted.

NOTE: LPV operations are approved only for VT-SQ series tails (MSN starting from 4583).

Minimum Equipment List Procedures (MELP)

Placard

1. Inoperative Flight Management System (FMS) must be placarded on the FMS Control Display Unit in the flight compartment.
2. Out of currency (Outdated) FMS Database must be placarded on the associated FMS Control Display Unit in the flight compartment.
3. Inoperative LOS Annunciator lights must be placarded on the LOS Annunciator in the flight compartment.

Operating Procedures

NOTE: “Same side FMS” is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the appropriate inoperative LOS annunciator with "Light name" + "INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R05

APPROVED BY DAW DELHI, DATED -

Signature valid
DELHI, DATE -

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-2.7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-60-2 Flight Management System (FMS)****34-60-2-4 SBAS (Satellite Based Augmentation System) Level of Service (LOS) Annunciator****34-60-2-4B LNAV LOS Light**

Interval	Installed	Required	Procedure
C	-	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

1. Inoperative Flight Management System (FMS) must be placarded on the FMS Control Display Unit in the flight compartment.
2. Out of currency (Outdated) FMS Database must be placarded on the associated FMS Control Display Unit in the flight compartment.
3. Inoperative LOS Annunciator lights must be placarded on the LOS Annunciator in the flight compartment.

Operating Procedures

NOTE: "Same side FMS" is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the appropriate inoperative LOS annunciator with "Light name" + "INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■**ISS III R05****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**34-60-2. 8**

**DHC-8-402****MINIMUM EQUIPMENT LIST*****NAVIGATION******ATA 34*****34-60-2 Flight Management System (FMS)****34-60-2-4 SBAS (Satellite Based Augmentation System) Level of Service (LOS) Annunciator****34-60-2-4C LAV/VNAV LOS Light**

Interval	Installed	Required	Procedure
C	-	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

1. Inoperative Flight Management System (FMS) must be placarded on the FMS Control Display Unit in the flight compartment.
2. Out of currency (Outdated) FMS Database must be placarded on the associated FMS Control Display Unit in the flight compartment.
3. Inoperative LOS Annunciator lights must be placarded on the LOS Annunciator in the flight compartment.

Operating Procedures

NOTE: "Same side FMS" is required to maintain minor function of the ADS-B Out broadcast as each FMS is only connected to its own side ATC transponder.

None required.

Maintenance Procedures

1. Placard the appropriate inoperative LOS annunciator with "Light name" + "INOP".
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■**ISS III R05****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**34-60-2. 9**



DHC-8-402

MINIMUM EQUIPMENT LIST

NAVIGATION

ATA 34

**INTENTIONALLY
LEFT
BLANK**

ISS III R05

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

34-60-2. 10

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-10-1 Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges**

Interval	Installed	Required	Procedure
C	2	1	(M)

Either the Flight Compartment Gauge or Cylinder Mounted Gauge may be inoperative provided there is another method to confirm that adequate oxygen is available for the intended flight.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Flight Deck Fixed Oxygen System Pressure Gauge in the flight compartment, clearly indicating which pressure gauge is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Place a placard on the co-pilot's side console clearly indicating which pressure gauge is inoperative (bottle gauge or flight deck gauge).
2. If the inoperative gauge is the oxygen bottle gauge, also placard the bottle gauge in the nose compartment as inoperative.
3. Prior to each flight, check the pressure in the Flight Deck Fixed Oxygen System bottle by whichever pressure gauge is operative.
4. The minimum dispatch pressure in the 3 crew member configuration for the 39.8 cu.ft cylinder is 1800 psig at 70 °F (21°C). Refer to Figure 35-1, Figure 35-2 and the following Figure 35-3, Table 1 for pressure variations with change in ambient temperature for 39.8 cu. ft cylinder.
5. The minimum dispatch pressure in the 3 crew member configuration for the 50.0 cu.ft cylinder is 1450 psig at 70 °F (21°C). Refer to Figure 35-4, Figure 35-5 and the following Figure 35-6, Table 2 for pressure variations with change in ambient temperature for the 50.0 cu. ft cylinder.
6. Make appropriate entry in the aircraft journey log.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-1. 1



DHC-8-402


MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

35-10-1

Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges

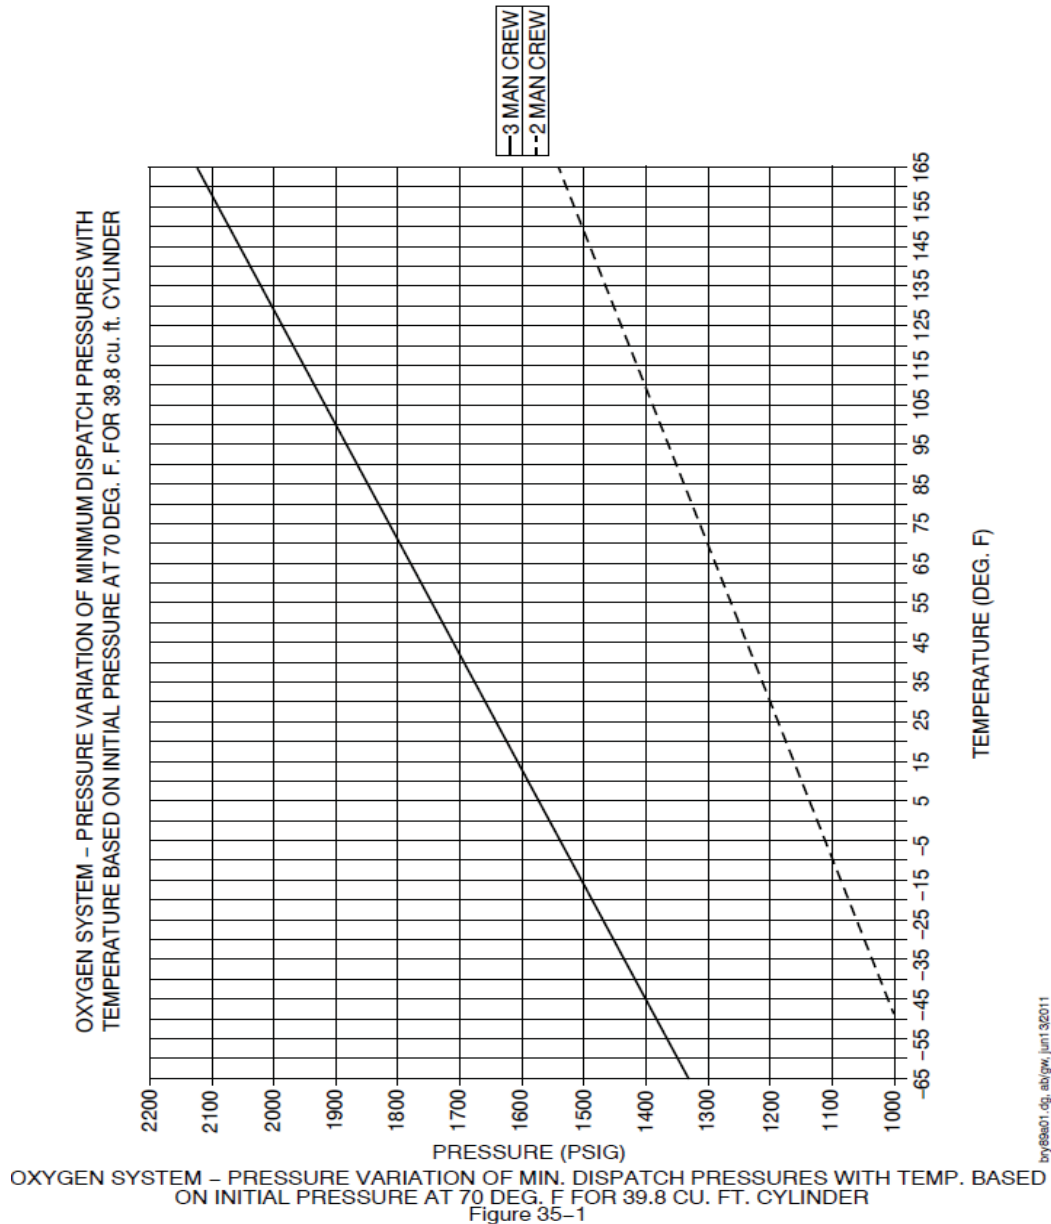

(...Continued)

ISS III R00

APPROVED BY DAW DELHI, DATE -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-1. 2



DHC-8-402


MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

35-10-1

Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges

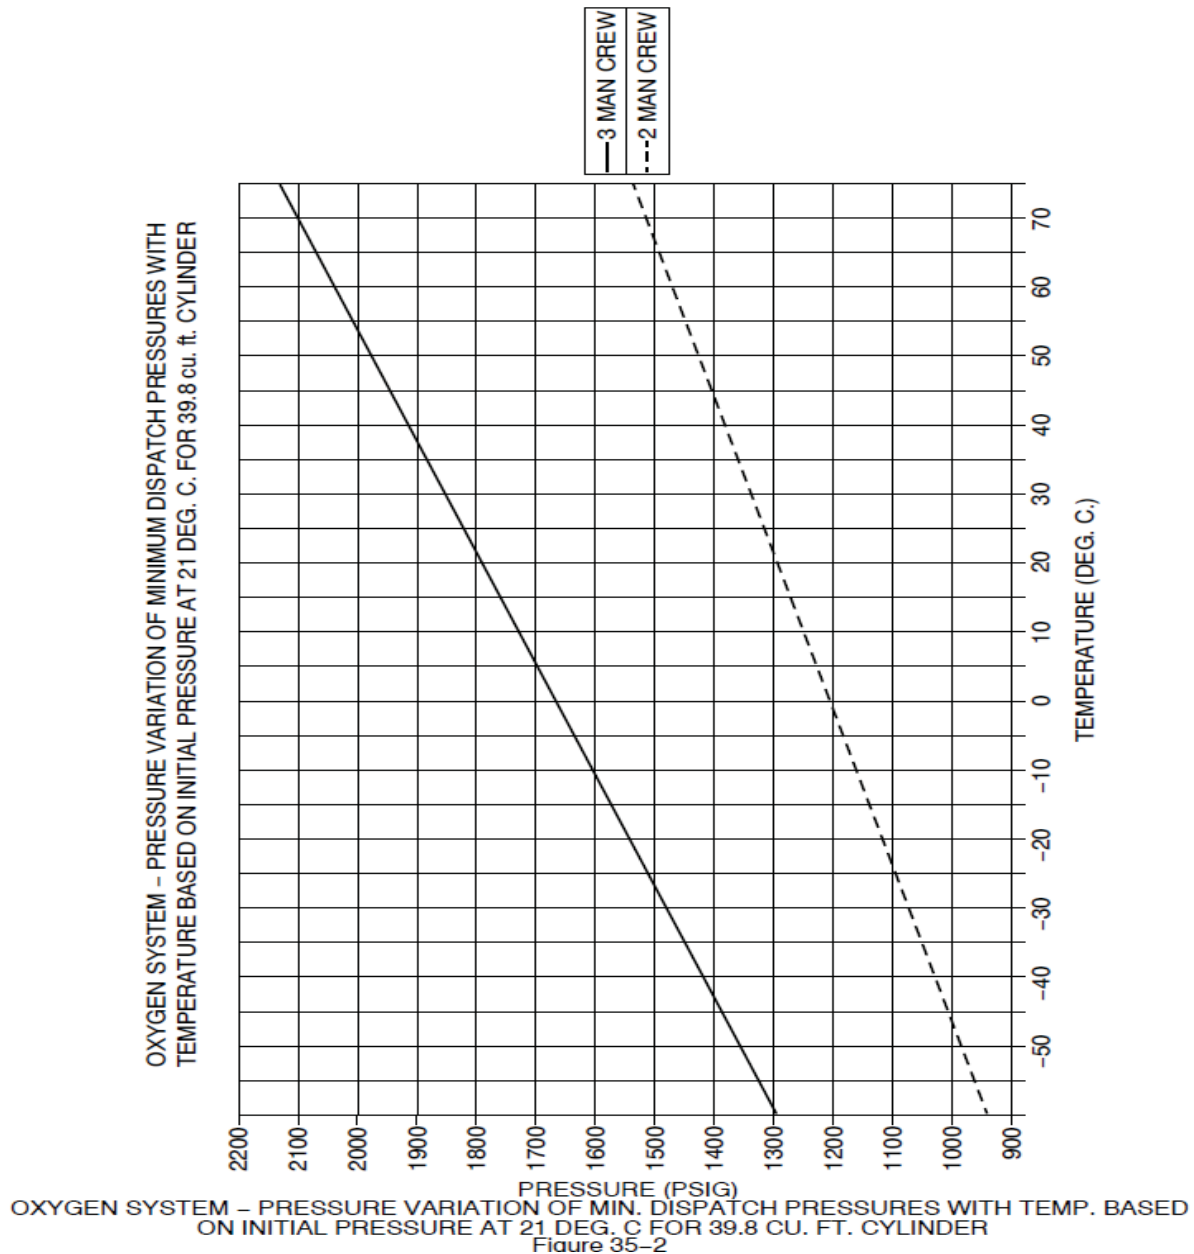

(...Continued)

ISS III R00

APPROVED BY DAW DELHI, DATE -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

35-10-1

Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges

PRESSURE VARIATION OF MINIMUM DISPATCH PRESSURES WITH TEMPERATURE, BASED ON INITIAL TEMPERATURE AT 70 DEG. F (21 DEG. C) FOR 39.8 cu. ft CYLINDER			
CYLINDER TEMPERATURE		MINIMUM DISPATCH PRESSURE – PSIG	
°F	°C	3 CREW	2 CREW
-65	-53.9	1341	969
-60	-51.1	1358	981
-55	-48.3	1375	993
-50	-45.6	1392	1005
-45	-42.8	1409	1018
-40	-40.0	1426	1030
-35	-37.2	1443	1042
-30	-34.4	1460	1055
-25	-31.7	1477	1067
-20	-28.9	1494	1079
-15	-26.1	1511	1091
-10	-23.3	1528	1104
-5	-20.6	1545	1116
0	-17.8	1562	1128
5	-15.0	1579	1140
10	-12.2	1596	1153
15	-9.4	1613	1165
20	-6.7	1630	1177
25	-3.9	1647	1190
30	-1.1	1664	1202
35	1.7	1681	1214
40	4.4	1698	1226
45	7.2	1715	1239
50	10.0	1732	1251
55	12.8	1749	1263
60	15.6	1766	1275
65	18.3	1783	1288
70	21.1	1800	1300
75	23.9	1817	1312
80	26.7	1834	1325
85	29.4	1851	1337
90	32.2	1868	1349

bdr51a01.qg, kmw, aug05/2011

TABLE 1 (SHEET 1 OF 2)

Figure 35-3

(...Continued)

ISS III R00

APPROVED BY DAW DELHI, DATE: 07-JUN-2024

Signature valid

Signed by: Manoj Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-2024 13:52:49

35-10-1. 4



DHC-8-402	MINIMUM EQUIPMENT LIST	
	<i>OXYGEN</i>	<i>ATA 35</i>

35-10-1 Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges

PRESSURE VARIATION OF MINIMUM DISPATCH PRESSURES WITH TEMPERATURE, BASED ON INITIAL TEMPERATURE AT 70 DEG. F (21 DEG. C) FOR 39.8 cu. ft CYLINDER			
CYLINDER TEMPERATURE		MINIMUM DISPATCH PRESSURE – PSIG	
°F	°C	3 CREW	2 CREW
95	35.0	1885	1361
100	37.8	1902	1374
105	40.6	1919	1386
110	43.3	1936	1398
115	46.1	1953	1410
120	48.9	1970	1423
125	51.7	1987	1435
130	54.4	2004	1447
135	57.2	2021	1460
140	60.0	2038	1472
145	62.8	2055	1484
150	65.6	2072	1496
155	68.3	2089	1509
160	71.1	2106	1521
165	73.9	2123	1533

brin51a02.dg.kmw.aug04/2011

TABLE 1 (SHEET 2 OF 2)
Figure 35-3

(...Continued)

Signed by: Manoj
 Kumar Bajpai
 Director
 (Airworthiness)
 Date: 07-Jun-
 2024 13:52:49



DHC-8-402


MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

35-10-1

Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges

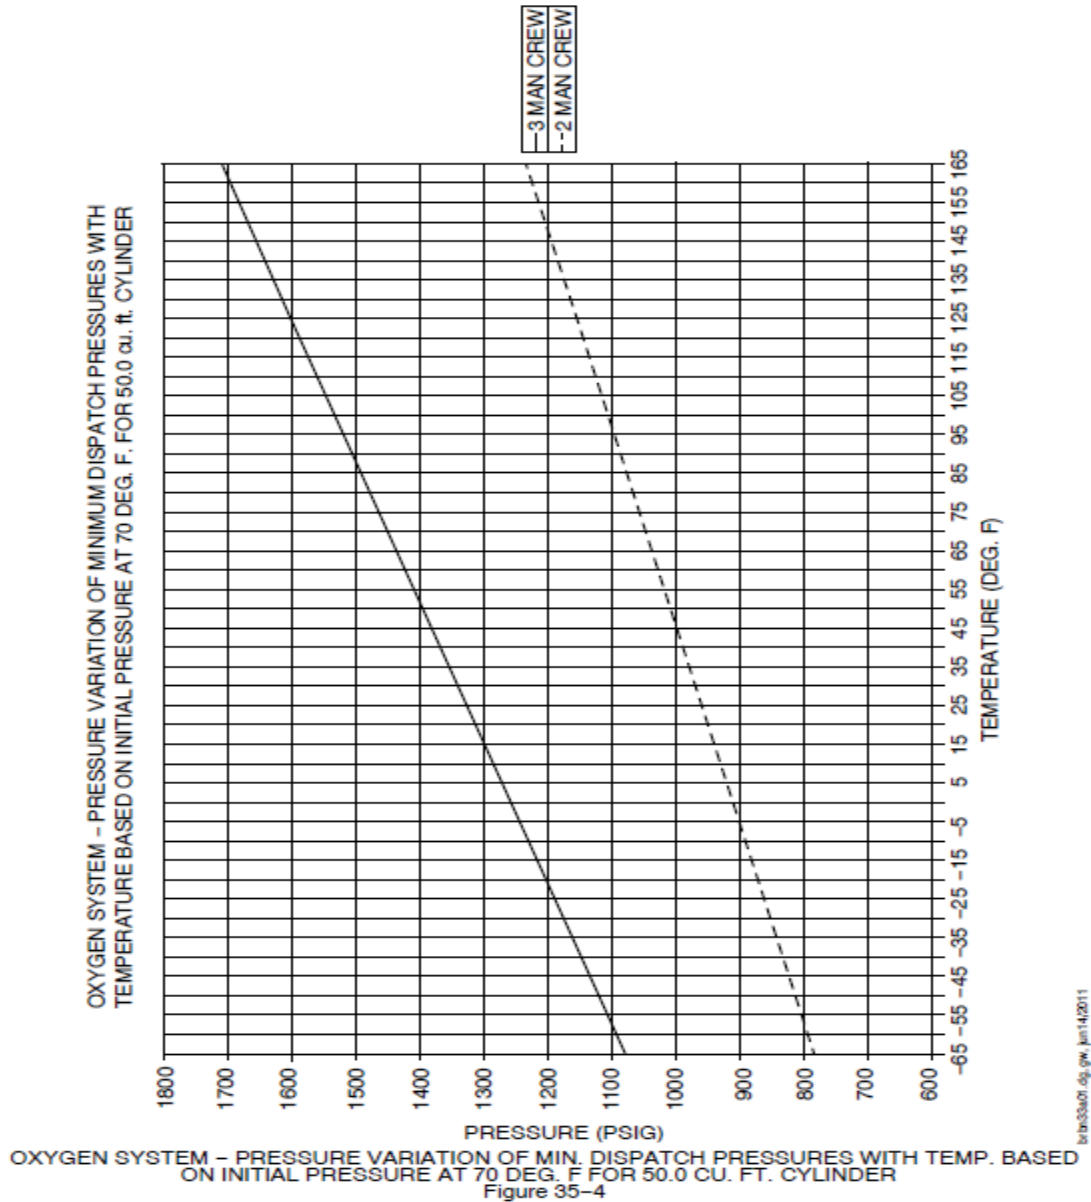



DHC-8-402


MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

35-10-1

Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges

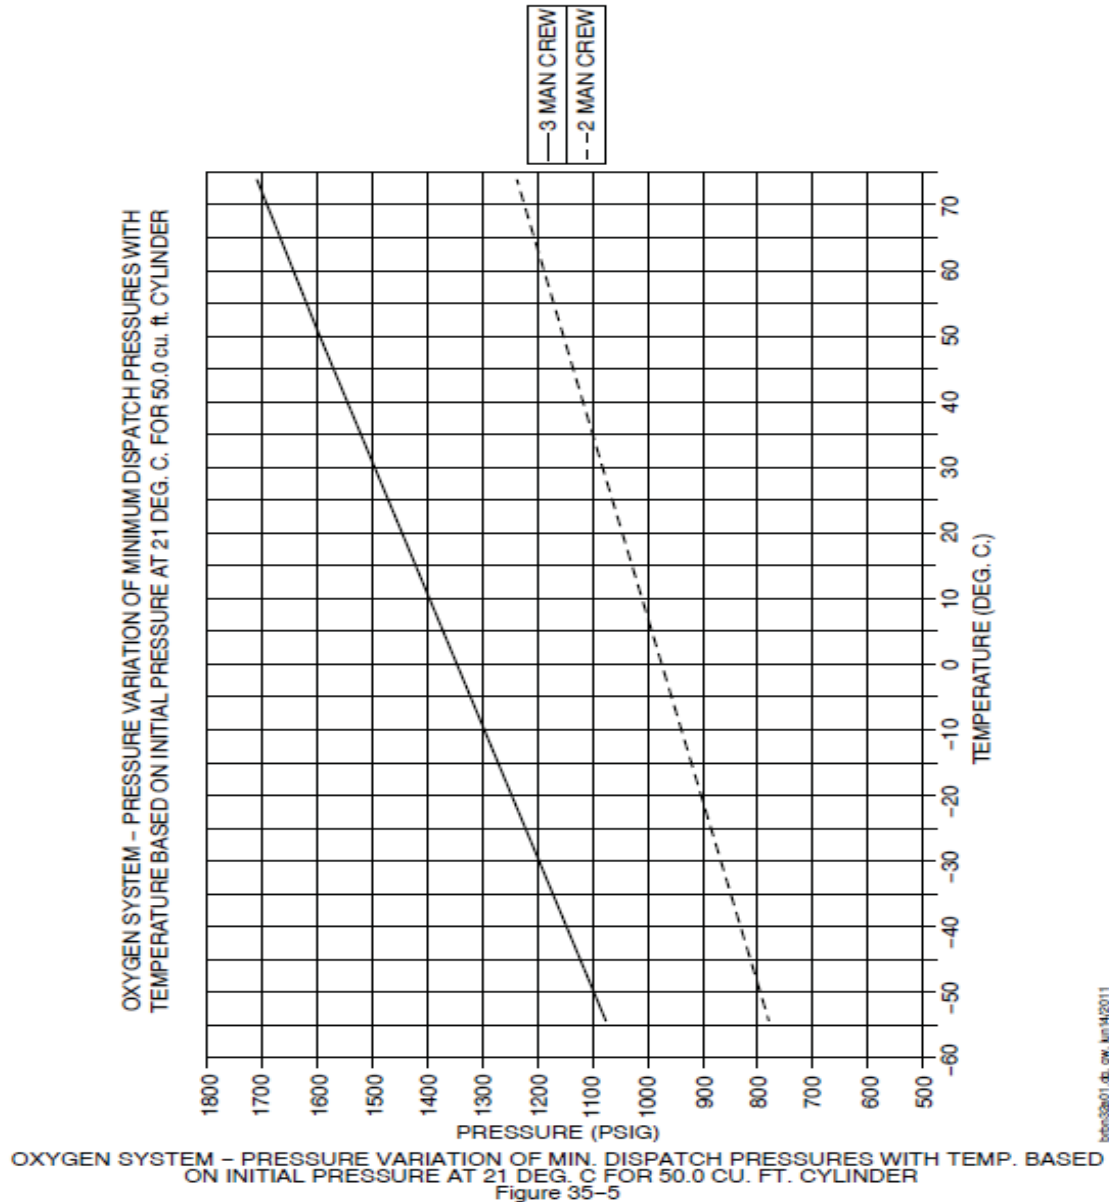

(...Continued)

ISS III R00

APPROVED BY DAW DELHI, DATE -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-1. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-10-1****Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges**

PRESSURE VARIATION OF MINIMUM DISPATCH PRESSURES WITH TEMPERATURE, BASED ON INITIAL TEMPERATURE AT 70 DEG. F (21 DEG. C) FOR 50.0 cu. ft CYLINDER			
CYLINDER TEMPERATURE		MINIMUM DISPATCH PRESSURE – PSIG	
°F	°C	3 CREW	2 CREW
-65	-53.9	1080	782
-60	-51.1	1094	792
-55	-48.3	1108	802
-50	-45.6	1121	812
-45	-42.8	1135	822
-40	-40.0	1149	832
-35	-37.2	1163	842
-30	-34.4	1176	852
-25	-31.7	1190	862
-20	-28.9	1204	872
-15	-26.1	1217	881
-10	-23.3	1231	891
-5	-20.6	1245	901
0	-17.8	1258	911
5	-15.0	1272	921
10	-12.2	1286	931
15	-9.4	1299	941
20	-6.7	1313	951
25	-3.9	1327	961
30	-1.1	1340	971
35	1.7	1354	981
40	4.4	1368	991
45	7.2	1382	1000
50	10.0	1395	1010
55	12.8	1409	1020
60	15.6	1423	1030
65	18.3	1436	1040
70	21.1	1450	1050
75	23.9	1464	1060
80	26.7	1477	1070
85	29.4	1491	1080
90	32.2	1505	1090

121155001.dwg 11mm aug20/2011

TABLE 2 (SHEET 1 OF 2)

Figure 35-6

(...Continued)

ISS III R00

APPROVED BY DAW DELHI, DATE 07-06-2024

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-1. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-10-1 Flight Deck Fixed Oxygen System OXYGEN Pressure Gauges**

PRESSURE VARIATION OF MINIMUM DISPATCH PRESSURES WITH TEMPERATURE, BASED ON INITIAL TEMPERATURE AT 70 DEG. F (21 DEG. C) FOR 50.0 cu. ft CYLINDER			
CYLINDER TEMPERATURE		MINIMUM DISPATCH PRESSURE – PSIG	
°F	°C	3 CREW	2 CREW
95	35.0	1518	1100
100	37.8	1532	1109
105	40.6	1546	1119
110	43.3	1560	1129
115	46.1	1573	1139
120	48.9	1587	1149
125	51.7	1601	1159
130	54.4	1614	1169
135	57.2	1628	1179
140	60.0	1642	1189
145	62.8	1655	1199
150	65.6	1669	1209
155	68.3	1683	1219
160	71.1	1696	1228
165	73.9	1710	1238

brhs50a02 dg.kmw aug04/2011

TABLE 2 (SHEET 2 OF 2)

Figure 35-6

ISS III R00**APPROVED BY DAW DELHI, DATE –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-1. 9



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-1. 10

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-10-2 Flight Deck Fixed Oxygen System Overboard Discharge Indicator**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be missing provided an approved procedure is used to ensure that the oxygen supply is at or above minimum requirements for the flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Deck Fixed Oxygen System Overboard Discharge Indicator must be placarded in the flight compartment.

Operating Procedures

1. Prior to each flight, check the pressure in the Flight Deck Fixed Oxygen System bottle by whichever pressure gauge is operative.
2. Verify pressure in oxygen cylinder meets minimum dispatch pressure. Refer to Figure 35-1 and Figure 35-2 for pressure variations with change in ambient temperature.

Maintenance Procedures

1. Placard Flight Deck Fixed Oxygen System Overboard Discharge Indicator on OXYGEN Pressure indicator, Co-pilot's side console panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-10-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

35-20-1

Passenger Drop Down Oxygen System

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-30-1 Protective Breathing Equipment (PBE)**

Interval	Installed	Required	Procedure
	4	4	NIL

NOTE: Required distribution is Qty 1 in Flight Deck and Qty 3 in Passenger Cabin.**Minimum Equipment List Procedures (MELP)****Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-30-2 First Aid Oxygen System**

Interval	Installed	Required	Procedure
C	2	1	(M)(O)

As per Company Procedure one may be unserviceable or missing provided:

- Required distribution of operative units is maintained throughout the aircraft, and
- Bottles not properly serviced are replaced, serviced, or removed at the next available maintenance facility.

NOTE:

- Required Distribution is Qty 1 in Passenger Cabin either in AFT or FWD Bulkhead.
- Applicable only for portable oxygen bottles with two ports.

Minimum Equipment List Procedures (MELP)**Placard**

Placard Portable First Aid Oxygen System in the passenger compartment.

Operating Procedures

- Required distributions of operative units are maintained throughout the aircraft.
- Cabin crew to conduct the pre-flight check of the equipments and inform the PIC of any defect/loss of pressure in the bottle. The PIC to check the table (Ref page 35-30-3. 3), and ensure that the oxygen quantity is sufficient for the flight. (Ref SEP manual Ch 5, Para 5.1).

Maintenance Procedures

- To be developed by the operator such that relevant safety standards and regulations are met.
- Ensure inoperative bottles are removed from their installed locations and secured out of sight or removed from the aircraft prior to dispatch. Bottles being secured out of sight should be stowed away such that they are out of immediate access to either crew or passengers within the aircraft.
- Placard removed/missing bottles' normal storage location(s), and inoperative first aid oxygen bottles are placarded, if stowed away on the aircraft.
- Make appropriate entry in the aircraft journey log.

ISS III R03

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-30-3 Passenger Portable Oxygen Dispensing Units****35-30-3-1**

Interval	Installed	Required	Procedure
C	3	2	NIL

Number of passengers to be restricted up to 58 (for aircraft with 78 seat configuration) or 60 (for aircraft with 90 seat configuration, also find note 2).

NOTE:

1. Above requirements have been tabulated based on following:

"Minimum qty and distribution required for dispatch will depend on the number of passenger onboard. The three cylinders supply 10% of the passenger and sufficient oxygen for at least 30 minutes at cabin pressure altitudes above 10,000 ft. Each cylinder has three masks attached to it catering for a total of 9 Passengers."

2. In case of aircraft with 90 seat configuration, Flight attendant can use additional flight attendant portable oxygen bottle (of 4.3 cu.ft.).
3. Applicable only for portable oxygen bottles with three ports.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Passenger Portable Oxygen Dispensing Units.

Operating Procedures

1. Required distribution of operative unit is maintained throughout the aircraft.
2. Cabin crew to conduct the pre-flight check of the equipments and inform the PIC of any defect/loss of pressure in the bottle. The PIC to check the table (Ref page 35-30-3. 3), and ensure that the oxygen quantity is sufficient for the flight. (Ref SEP manual Ch 5, Para 5.1).

Maintenance Procedures

1. Check minimum dispatch pressure of remaining Passenger Portable Oxygen Dispensing Units. The following table is included which gives minimum dispatch pressure variation with ambient temperature.
2. Ensure that inoperative bottles are removed from their installed locations and secured out of sight or removed from the aircraft prior to dispatch. Bottles being secured out of sight should be stowed away such that they are out of immediate access to either crew or passengers within the aircraft.
3. Placard removed/missing bottles' normal storage location(s), and inoperative Passenger Portable Oxygen System bottles are placarded, if stowed away on the aircraft.
4. Make appropriate entry in the aircraft journey log.

ISS III R03**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-30-3 Passenger Portable Oxygen Dispensing Units****35-30-3-2**

Interval	Installed	Required	Procedure
C	3	1	NIL

Number of passengers to be restricted up to 28 (for aircraft with 78 seat configuration) or 30 (for aircraft with 90 seat configuration, also find note 2).

NOTE:

- Above requirements have been tabulated based on following:
“Minimum qty and distribution required for dispatch will depend on the number of passenger onboard. The three cylinders supply 10% of the passenger and sufficient oxygen for at least 30 minutes at cabin pressure altitudes above 10,000 ft. Each cylinder has three masks attached to it catering for a total of 9 Passengers.”
- In case of aircraft with 90 seat configuration, Flight attendant can use additional flight attendant portable oxygen bottle (of 4.3 cu.ft.).
- Applicable only for portable oxygen bottles with three ports.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Passenger Portable Oxygen Dispensing Units.

Operating Procedures

- Required distribution of operative unit is maintained throughout the aircraft.
- Cabin crew to conduct the pre-flight check of the equipments and inform the PIC of any defect/loss of pressure in the bottle. The PIC to check the table (Ref page 35-30-3. 3), and ensure that the oxygen quantity is sufficient for the flight. (Ref SEP manual Ch 5, Para 5.1).

Maintenance Procedures

- Check minimum dispatch pressure of remaining Passenger Portable Oxygen Dispensing Units. The following table is included which gives minimum dispatch pressure variation with ambient temperature.
- Ensure that inoperative bottles are removed from their installed locations and secured out of sight or removed from the aircraft prior to dispatch. Bottles being secured out of sight should be stowed away such that they are out of immediate access to either crew or passengers within the aircraft.
- Placard removed/missing bottles' normal storage location(s), and inoperative Passenger Portable Oxygen System bottles are placarded, if stowed away on the aircraft.
- Make appropriate entry in the aircraft journey log.

ISS III R03**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****OXYGEN******ATA 35*****35-30-3****Passenger Portable Oxygen Dispensing Units**

PRESSURE VARIATIONS WITH TEMPERATURE

TEMPERATURE (°F)	MINIMUM DISPATCH PRESSURE (PSIG)	MAXIMUM CHARGE PRESSURE (PSIG)
-65	1189	1375
-60	1204	1393
-55	1219	1410
-50	1234	1428
-45	1250	1445
-40	1265	1463
-35	1280	1481
-30	1295	1498
-25	1311	1516
-20	1326	1533
-15	1341	1551
-10	1356	1569
-5	1372	1586
0	1387	1604
5	1402	1621
10	1417	1639
15	1432	1656
20	1448	1674
25	1463	1692
30	1478	1709
35	1493	1727
40	1509	1744
45	1524	1762

(...Continued)

ISS III R01

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

35-30-3

Passenger Portable Oxygen Dispensing Units

PRESSURE VARIATIONS WITH TEMPERATURE (CONT'D)

TEMP °F	MINIMUM DISPATCH	MAXIMUM CHARGE
50	1539	1780
55	1554	1797
60	1570	1815
65	1585	1832
70	1600	1850
75	1615	1868
80	1630	1885
85	1646	1903
90	1661	1920
95	1676	1938
100	1691	1956
105	1707	1973
110	1722	1991
115	1737	2008
120	1752	2026
125	1768	2044
130	1783	2061
135	1798	2079
140	1813	2096
145	1828	2114
150	1844	2131
155	1859	2149
160	1874	2167
165	1889	2184

ISS III R01

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-3. 4



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

35-30-4

Dual-Purpose Oxygen System Units

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

OXYGEN

ATA 35

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

35-30-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PNEUMATICS******ATA 36*****36-10-1 BLEED SYSTEMS****36-10-1-1**

Interval	Installed	Required	Procedure
B	2	1	(M)(O)

One may be inoperative provided:

- Associated BLEED Switch is selected OFF,
- Flight is not conducted in known or forecast icing condition, and
- Flights are conducted in accordance with AFM supplement 100, Operation with ONE BLEED SYSTEM inoperative.

Minimum Equipment List Procedures (MELP)**NOTE:**

- If the BLEED HOT Caution Light remains ON after the Bleed system is turned off as per the operating procedures, the CDS can be interrogated to determine the cause of the Caution Light remaining ON.
- If the cause of the BLEED HOT Caution Light illumination is the Bleed Over Temperature switch, MMEL relief is not applicable.
- If the cause of the BLEED HOT Caution Light illumination is the Bleed Over Pressure and/or the Duct-Leak Over Temperature switch, MMEL relief may be utilized if the switches are replaced or disconnected, and the BLEED HOT Caution Light is extinguished.
- If the BLEED HOT Caution Light cannot be extinguished, MMEL relief is not applicable and repair is required.

Placard

Inoperative Bleed Air System must be placarded in the flight compartment.

Operating Procedures

- On the AIR CONDITIONING Panel select the inoperative bleed source BLEED Switch to OFF.
- Carry out the flight in accordance with AFM Supplement 100, Operation with Inoperative ONE BLEED SYSTEM.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

36-10-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PNEUMATICS******ATA 36*****36-10-1 BLEED SYSTEMS****36-10-1-1****Maintenance Procedures**

1. If the BLEED HOT Caution Light does not extinguish after applying the operating procedures, Interrogate the CDS to determine the erroneous indication fault sources and carry out the specified steps to resolve the impact to the BLEED HOT C/L erroneous indication:

NOTE: The source of the erroneous BLEED HOT Caution Light may be one or more faults associated with the BLEED system. As such all below switches must be interrogated for in the CDS.

- a) BLD OVR TMP SW (CDS Code 7001) - Bleed Over-Temperature Switch: This switch CANNOT be disconnected, but rather must be repaired/replaced.

Or

L or R BLD TMP (CDS Code 1A01) - Resistance Temperature Device (RTD) Sensor: This sensor CANNOT be disconnected, but rather must be repaired/replaced.

- b) BLD OVR PR SW (CDS Code 7004) - Bleed Over Pressure Switch: This switch can be either disconnected or repaired/replaced.
 - i) Locate access panel 261CT or 261LT on the Left or Right Wing Fairing respectively.
 - ii) Disconnect the electrical connector from the switch, and jumper together pins "B" and "C" of the appropriate aircraft electrical connector.
 - iii) Cap and stow the electrical connector (Refer to Figure 36-1).

NOTE: Refer to AMM 36-11-36-000-801 if more detailed instructions are necessary.

- c) DUCT-LEAK OVR TMP SW (CDS Code 1801) - Nacelle Duct-Leak Over-Temperature Switch (Also known as Wing Bleed Leak Detention Switch): This switch can be either disconnected or repaired/replaced.
- iv) Locate access panel 412DT or 422DT on the Left or Right Nacelle respectively.
- v) Disconnect the electrical connector from the switch, and jumper together pins "B" and "C" of the appropriate aircraft electrical connector.
- vi) Cap and stow the electrical connector (Refer to Figure 36-2).

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

36-10-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

PNEUMATICS

ATA 36

36-10-1 BLEED SYSTEMS

36-10-1-1

NOTE: Refer to AMM 36-11-21-000-801 if more detailed instructions are necessary.

3. Placard the inoperative Bleed Air System in flight compartment.
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

36-10-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PNEUMATICS******ATA 36*****36-10-1 BLEED SYSTEMS****36-10-1-2**

Interval	Installed	Required	Procedure
B	2	1	(M)(O)

One may be inoperative provided:

- Associated BLEED Switch is selected OFF,
- Associated Nacelle Shut-Off Valve (NSOV) operates normally,
- LP/HP Switching through relay logic, and AIRFRAME MODE SELECT de-ice rotary switch operates normally, and
- Flight are conducted in accordance with AFM Supplement 100, Operation with ONE BLEED SYSTEM inoperative.

Minimum Equipment List Procedures (MELP)**NOTE:**

- If the BLEED HOT Caution Light remains ON after the Bleed system is turned off as per the operating procedures, the CDS can be interrogated to determine the cause of the Caution Light remaining ON.
- If the cause of the BLEED HOT Caution Light illumination is the Bleed Over Temperature switch, MMEL relief is not applicable.
- If the cause of the BLEED HOT Caution Light illumination is the Bleed Over Pressure and/or the Duct-Leak Over Temperature switch, MMEL relief may be utilized if the switches are replaced or disconnected, and the BLEED HOT Caution Light is extinguished.
- If the BLEED HOT Caution Light cannot be extinguished, MMEL relief is not applicable and repair is required.

Placard

Inoperative Bleed Air System must be placarded in the flight compartment.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

36-10-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PNEUMATICS******ATA 36*****36-10-1 BLEED SYSTEMS****36-10-1-2****Operating Procedures**

1. On the AIR CONDITIONING Panel select the inoperative bleed source BLEED Switch to OFF.
2. Start and run the associated engine.
3. At the AIR CONDITIONING panel select the RECIRC FAN switch to OFF.
4. Confirm that no airflow is evident from the cockpit and cabin vents
5. Set the associated engine at low power setting.
6. Select both BLEED switches to OFF.
7. On the ICE PROTECTION panel, select the AIRFRAME MODE SELECT selector to SLOW or FAST.
8. Confirm that 18 psi is shown on the DEICE PRESS gauge
9. Select the AIRFRAME MODE SELECT selector to OFF.
10. Confirm that 18 psi is shown on the DEICE PRESS gauge.

Maintenance Procedures

1. If the BLEED HOT Caution Light does not extinguish after applying the operating procedures, Interrogate the CDS to determine the erroneous indication fault sources and carry out the specified steps to resolve the impact to the BLEED HOT C/L erroneous indication:

NOTE: The source of the erroneous BLEED HOT Caution Light may be one or more faults associated with the BLEED system. As such all below switches must be interrogated for in the CDS.

- a) BLD OVR TMP SW (CDS Code 7001) - Bleed Over-Temperature Switch: This switch CANNOT be disconnected, but rather must be repaired/replaced.

Or

L or R BLD TMP (CDS Code 1A01) - Resistance Temperature Device (RTD) Sensor: This sensor CANNOT be disconnected, but rather must be repaired/replaced.

- b) BLD OVR PR SW (CDS Code 7004) - Bleed Over Pressure Switch: This switch can be either disconnected or repaired/replaced.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

36-10-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PNEUMATICS******ATA 36*****36-10-1 BLEED SYSTEMS****36-10-1-2**

- i) Locate access panel 261CT or 261LT on the Left or Right Wing Fairing respectively.
- ii) Disconnect the electrical connector from the switch, and jumper together pins "B" and "C" of the appropriate aircraft electrical connector.
- iii) Cap and stow the electrical connector (Refer to Figure 36-1).

NOTE: Refer to AMM 36-11-36-000-801 if more detailed instructions are necessary.

- c) DUCT-LEAK OVR TMP SW (CDS Code 1801) - Nacelle Duct-Leak Over-Temperature Switch (Also known as Wing Bleed Leak Detention Switch): This switch can be either disconnected or repaired/replaced.
 - i) Locate access panel 412DT or 422DT on the Left or Right Nacelle respectively.
 - ii) Disconnect the electrical connector from the switch, and jumper together pins "B" and "C" of the appropriate aircraft electrical connector.
 - iii) Cap and stow the electrical connector (Refer to Figure 36-2).

NOTE: Refer to AMM 36-11-21-000-801 if more detailed instructions are necessary.

- 2. Placard the inoperative Bleed Air System in flight compartment.
- 3. Make appropriate entry in the aircraft journey log.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

36-10-1. 6

36-10-1 BLEED SYSTEMS

36-10-1-2

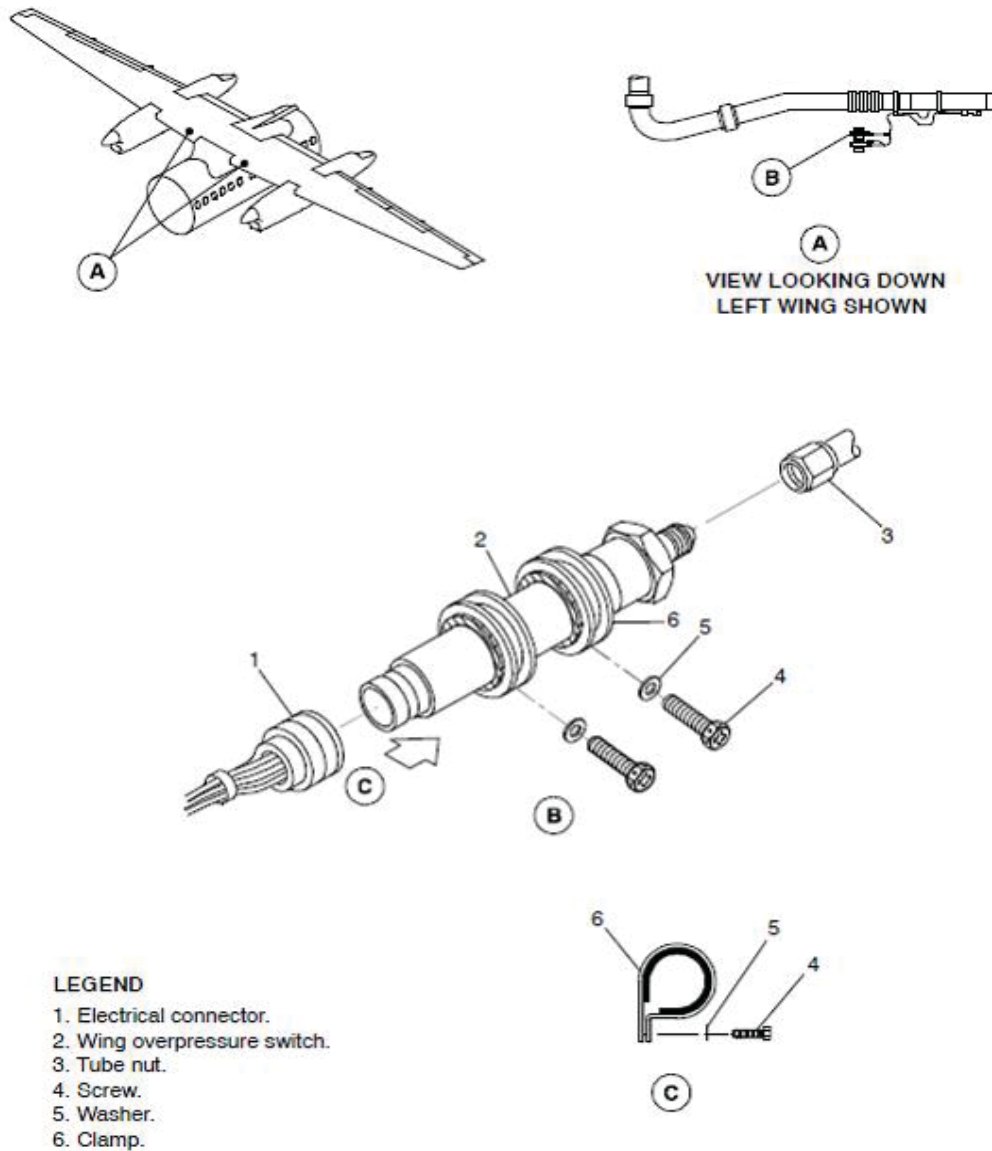


Figure 36-1 Wing Overpressure Switch

(...Continued)



DHC-8-402


MINIMUM EQUIPMENT LIST

PNEUMATICS

ATA 36

36-10-1 BLEED SYSTEMS

36-10-1-2

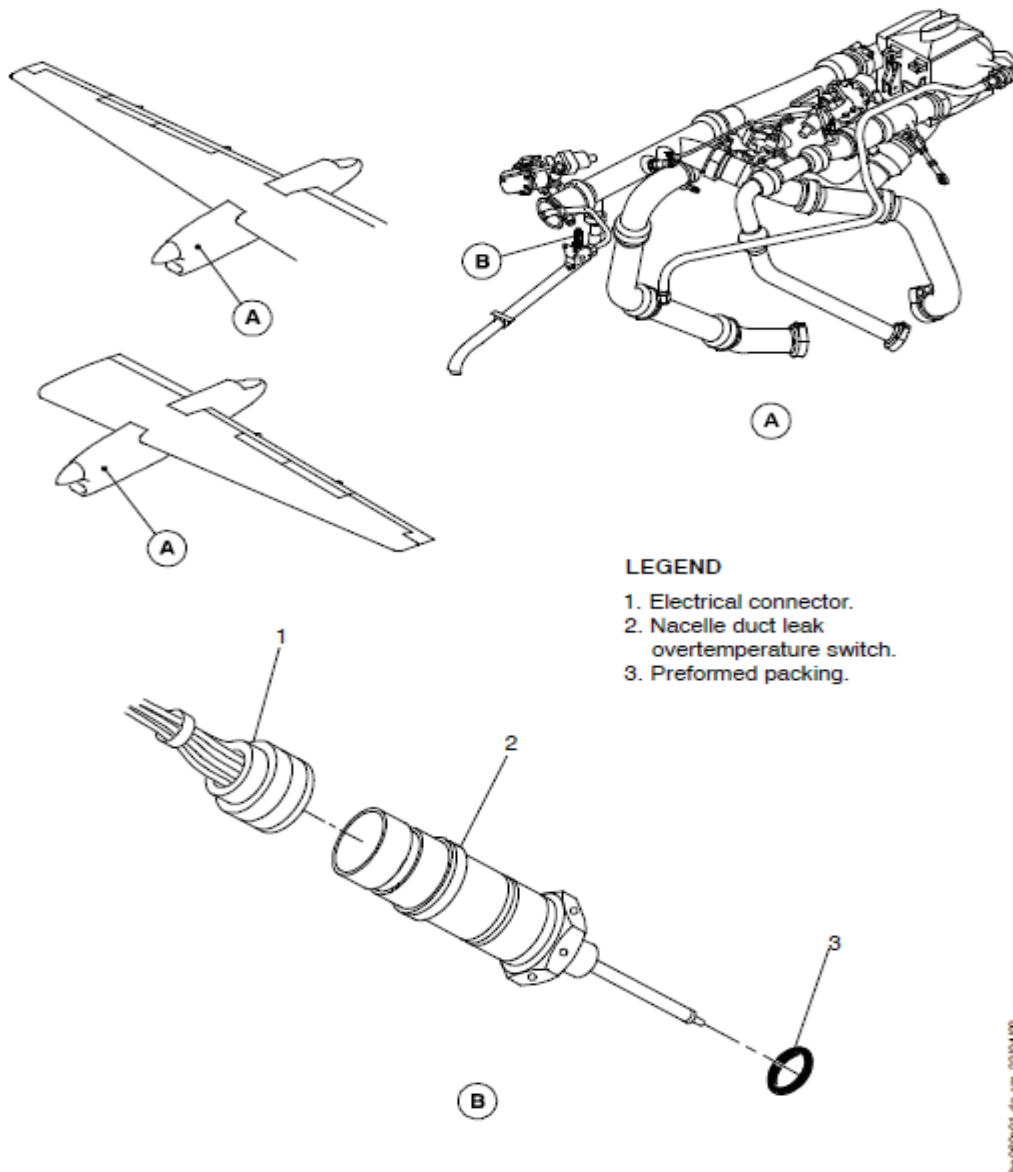

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

36-10-1. 8



DHC-8-402

MINIMUM EQUIPMENT LIST

WATER/WASTE

ATA 38

38-10-1

Potable Water Systems

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

WATER/WASTE

ATA 38

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****WATER/WASTE******ATA 38*****38-10-2 Warm Water Wash System (Not applicable to systems Deactivated as per Bombardier Modsum)****38-10-2-1**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- System is drained and inspected to ensure no leakage, and
- Procedures are established and used to deactivate applicable system components to prevent its use or servicing, and
- System is placarded in the lavatory.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative Warm Water Wash System in the flight compartment.
- Placard the Warm Water Wash System in a clear location visible to lavatory occupants that the sink, and subsequently the warm water wash system are inoperative and not for use.

Operating Procedures

- Alternate means should be established and used for provision of water for crew members.
- Procedures should be established to advise crew of system status during crew changes.
- Aviation Occupational Health Safety (AOH&S) requirements should be addressed.

Maintenance Procedures

- Ensure associated components are deactivated or isolated.
- Ensure associated system components are verified not to have leaks.
- Placard Warm Water Wash System in the lavatory and/or in the flight compartment.
- Make appropriate entry in the aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****WATER/WASTE******ATA 38*****38-10-2 Warm Water Wash System (Not applicable to systems Deactivated as per Bombardier Modsum)****38-10-2-2**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

Individual components may be inoperative provided:

- Associated components are deactivated or isolated, and
- Associated system components are verified not to have leaks.

NOTE: Any portion of the system which operates normally may be used.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative components of the Warm Water Wash System in the flight compartment and/or in the lavatory.

Operating Procedures

- Alternate means should be established and used for provision of water for crew members.
- Procedures should be established to advise crew of system status during crew changes.
- Aviation Occupational Health Safety (AOH&S) requirements should be addressed.

Maintenance Procedures

- Ensure associated components are deactivated or isolated.
- Ensure associated system components are verified not to have leaks.
- Placard Warm Water Wash System in the lavatory and/or in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■**ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****WATER/WASTE******ATA 38*****38-10-3 Drain Mast Heaters (Not applicable to systems deactivated as per Bombardier Modsum)****38-10-3-1 Galley/Lavatory Water Systems Installed****38-10-3-1A**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Flight and overnight storage is not carried out in freezing conditions,
- Procedures are established and used to verify drain mast and external fill ports' temperatures are acceptable prior to refilling or draining, and
- "DRAIN MAST HEATERS INOPERATIVE" is placarded on appropriate ground service doors.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard in the flight compartment drain mast heaters that are inoperative.
- Placard at the appropriate ground service doors that drain mast heaters are inoperative.

Operating Procedures

- Prior to flight verify that flight plan does not encounter weather where extended periods of temperatures at or below freezing will be encountered. (If temperatures for extended periods of flight will be at or below freezing, then this relief cannot be applied).
- During on-ground servicing, inform ground crews to verify that fill ports and drain mast are not frozen prior to refilling/draining the system.

Maintenance Procedures

- Verify that the inoperative drain mast heater does not have a detrimental effect on other systems.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****WATER/WASTE******ATA 38*****38-10-3 Drain Mast Heaters (Not applicable to systems deactivated as per Bombardier Modsum)****38-10-3-1 Galley/Lavatory Water Systems Installed****38-10-3-1A**

- a) If multiple drain mast heaters on aircraft, verify the inoperative drain mast heater does not impact the other drain mast heaters' operation.
- b) If operation of other drain mast heaters is impacted, all impacted drain mast heaters must be considered inoperative.
- c) If required, open and collar drain mast circuit breaker "DRAIN MAST" on 115V AC RIGHT VARIABLE FREQUENCY AC BUS.
2. Placard in the flight compartment drain mast heaters that are inoperative.
3. Placard at the appropriate ground service doors (134BR and/or 142AR) that drain mast heaters are inoperative.
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****WATER/WASTE******ATA 38*****38-10-3 Drain Mast Heaters (Not applicable to systems deactivated as per Bombardier Modsum)****38-10-3-1 Galley/Lavatory Water Systems Installed****38-10-3-1B**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- Water systems are drained and considered inoperative, and
- "DRAIN MAST HEATERS INOPERATIVE" is placarded on appropriate ground service doors.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard in the flight compartment drain mast heaters that are inoperative.
- Placard at the appropriate ground service doors that drain mast heaters are inoperative.

Operating Procedures

None required.

Maintenance Procedures

- Verify that the inoperative drain mast heater does not have a detrimental effect on other systems.
 - If multiple drain mast heaters on aircraft, verify the inoperative drain mast heater does not impact the other drain mast heaters' operation.
 - If operation of other drain mast heaters is impacted, all impacted drain mast heaters must be considered inoperative.
 - If required, open and collar drain mast circuit breaker "DRAIN MAST" on 115V AC RIGHT VARIABLE FREQUENCY AC BUS.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

WATER/WASTE

ATA 38

38-10-3 Drain Mast Heaters (Not applicable to systems deactivated as per Bombardier Modsum)

38-10-3-1 Galley/Lavatory Water Systems Installed

38-10-3-1B

2. For any galley or lavatory with installed water systems associated with an inoperative drain mast heaters, implement either, or both of the following:
 - a) Plug sink drain with an acceptable drain stop to prevent introduction of any form of liquid or waste into the water drainage system.
 - b) i) Within the lavatory, placard the water wash system in a clear location visible to occupants that the sink, and the subsequently the water wash system are inoperative and not for use.
ii) Placard the galley water system in a clear location visible anyone utilizing the galley, that the galley water system is inoperative and not for use.
3. Placard in the flight compartment drain mast heaters that are inoperative.
4. Placard at the appropriate ground service doors (134BR and/or 142AR) that drain mast heaters are inoperative.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****WATER/WASTE******ATA 38*****38-10-3 Drain Mast Heaters (Not applicable to systems deactivated as per Bombardier Modsum)****38-10-3-2 Galley/Lavatory Water Systems Deactivated or Not Installed**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard in the flight compartment drain mast heaters that are inoperative.
2. Placard at the appropriate ground service doors that drain mast heaters are inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Placard in the flight compartment drain mast heaters that are inoperative.
2. Placard at the appropriate ground service doors (134BR and/or 142AR) that drain mast heaters are inoperative.
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-3. 5



DHC-8-402

MINIMUM EQUIPMENT LIST

WATER/WASTE

ATA 38

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-10-3. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****WATER/WASTE******ATA 38*****38-30-1 Lavatory Waste System****38-30-1-1**

Interval	Installed	Required	Procedure
C	1	0	(M)

Individual components may be inoperative provided:

- Associated components are deactivated or isolated, and
- Associated system components are verified not to have leaks.

NOTE: Any portion of system which operates normally may be used.

Minimum Equipment List Procedures (MELP)**Placard**

Placard the flight compartment that specific Lavatory Waste System component(s) are inoperative.

Operating Procedures

None required.

Maintenance Procedures

- Isolate and/or deactivate associated component (s) to inoperative component (s).
- Do a visual check of the lavatory waste system. If necessary, remove the center floor board next to the lavatory and check under lavatory for signs of leakage.
- If signs of leakage is found, drain and isolate and/or deactivate components suspected of leakage.
- Place placard in flight compartment indicating which Lavatory Waste Systems component (s) are inoperative.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

38-30-1. 1



**DHC-8-402****MINIMUM EQUIPMENT LIST*****CENTRAL MAINTENANCE SYSTEM******ATA 45*****45-45-1****Centralized Diagnostic System (CDS) (incl. Maintenance Interlock Switch in Wardrobe)**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Centralized Diagnostic System must be placarded at the wardrobe compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Central Maintenance Panel above the wardrobe shelf with "CDS INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

45-45-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
CENTRAL MAINTENANCE SYSTEM

ATA 45

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

45-45-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

INFORMATION SYSTEM

ATA 46

46-20-1

Electronic Flight Bag Systems (EFBS)

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

46-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

INFORMATION SYSTEM

ATA 46

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

46-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****AUXILIARY POWER UNIT****ATA 49****49-00-1 Auxiliary Power Unit (APU)**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative provided APU Airframe Fuel Shutoff Valve is verified closed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative APU must be placarded on the APU Control Panel near the START switch.

Operating Procedures

None required.

Maintenance Procedures

1. Apply DC power to aircraft buses.
2. Ensure APU PWR switchlight is selected off at overhead APU Control Panel.
3. Verify that the APU Fuel Shut-Off Valve is closed as indicated by the white advisory light "APU FUEL VALVE CLOSED" on the fire protection panel and that the green advisory "APU FUEL VALVE OPEN" light is extinguished.
4. If the "APU FUEL VALVE OPEN" light is on, or if the "APU FUEL VALVE CLOSED" light is extinguished, verify that the APU Fuel Shut-Off Valve is closed as follows:

Method A

- a) Pull and collar L ESS BUS circuit breaker APU FUEL SOV/IND.
- b) Attempt to start APU. If APU fails to start, then APU FUEL VALVE is closed.

NOTE: The APU may spin up momentarily, until residual fuel in the manifold is consumed. Also, the APU FADEC may log a fault for the uncommanded shutdown/unsuccessful start.

Method B

- a) Open center wing dry bay access panel 521BT.
- b) Verify that the position indicator arm on the APU Fuel Shut-Off Valve is in the CLOSED position.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

49-00-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****AUXILIARY POWER UNIT******ATA 49*****49-00-1****Auxiliary Power Unit (APU)**

- c) Reinstall access panel 521BT.

NOTE: For instructions on removal and installation of the access panel, refer to the Aircraft Maintenance Manual, PSM 1-84-2, Chapter 57.

Method C

- a) Feed a borescope through the aft dry bay drain port in the LH armpit to access the dry bay area.
 - b) Locate the APU Fuel Feed Shut-off Valve.
 - c) Verify that the INDICATOR ARM on the APU Fuel Feed Shut-off Valve is in CLOSED position.
5. Pull and collar the circuit breaker “APU FUEL SOV/IND” on the left Essential 28 VDC Circuit Breaker Panel.
 6. Placard the “APU FUEL VALVE CLOSED” and “APU FUEL VALVE OPEN” advisory lights on the Fire Control Panel in the flight compartment.
 7. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

49-00-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****AUXILIARY POWER UNIT****ATA 49****49-50-1 APU Bleed Air System**

Interval	Installed	Required	Procedure
D	1	0	(M#)

May be inoperative provided APU Bleed Valve is verified closed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative APU Bleed Air System must be placarded on the APU Control Panel near the APU BL AIR button in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. At the APU compartment, open the clamshell access doors.
2. On the bottom of the APU bleed valve (RHS on bleed duct), note the position of the valves as indicated by pointer. Confirm the valve is closed.
3. Visually confirm integrity of APU connections.
4. Close the APU access doors.
5. Placard the APU BL AIR button on the APU Control Panel.
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

49-50-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

AUXILIARY POWER UNIT

ATA 49

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

49-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-1 Door Seal System Charging Valve**

Interval	Installed	Required	Procedure
C	1	0	(M#)

May be inoperative provided the valve is secured in the closed position.

Minimum Equipment List Procedures (MELP)**Placard**

Placard the inoperative charging valve in the wardrobe or at the adjacent supporting frame.

Operating Procedures

None required.

Maintenance Procedures

1. For Pre-Mod 4-153583
 - a) Remove the inner liner of the wardrobe.
 - b) Install a steel cap on the inoperative charging valve.
 - c) Install the inner liner.
 - d) Placard the inoperative charging valve in the wardrobe.
 - e) Make appropriate entry in the aircraft journey log.
2. For Post-Mod 4-153583
 - a) Remove floor panel 131CZ.
 - b) Locate the charging valve beneath the floor.
 - c) Install a steel cap on the inoperative charging valve.
 - d) Placard the inoperative charging valve on the adjacent supporting frame.
 - e) Replace the floor panel.
 - f) Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-2 Door Seal Drain Valve****52-10-2-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be failed in the closed position.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the door seal drain valve is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Placard in the flight compartment that the Door Seal Drain Valve is inoperative.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-2 Door Seal Drain Valve****52-10-2-2**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be failed in the open position provided flight is conducted in an unpressurized configuration, at or below 10,000 feet MSL in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT-BLEED ON.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the door seal drain valve is inoperative.

Operating Procedures

Carry out unpressurized flight in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT - BLEED ON.

Maintenance Procedures

1. Placard in the flight compartment that the Door Seal Drain Valve is inoperative.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-2 Door Seal Drain Valve****52-10-2-3**

Interval	Installed	Required	Procedure
C	1	0	(M#)

May be failed in the open position provided Door Seal Pressurization system can be pressurized.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the door seal drain valve is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Gain access to the door seal drain valve and reservoir tank.
2. Remove the drain line connecting the reservoir tank outlet to the drain valve inlet. See FIGURE 52-1.
3. Install suitable aluminum plug and caps (similar specification as AN806-4D or AN929-4W) on the reservoir tank outlet and drain valve inlet. Torque caps to aircraft maintenance manual specifications.
4. Placard in the flight compartment that the door seal drain valve is inoperative.
5. Make appropriate entry on the aircraft journey log.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-2. 3



DHC-8-402


MINIMUM EQUIPMENT LIST

DOORS

ATA 52


52-10-2 Door Seal Drain Valve

52-10-2-3

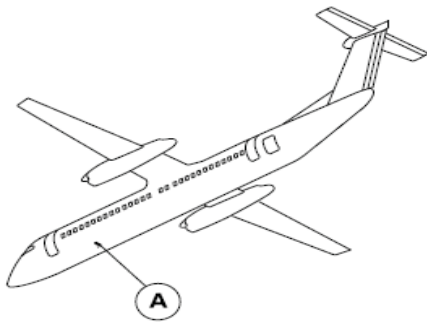

LEGEND

- 1. Reservoir tank.
- 2. Door seal line.
- 3. Drain line.
- 4. Drain valve.

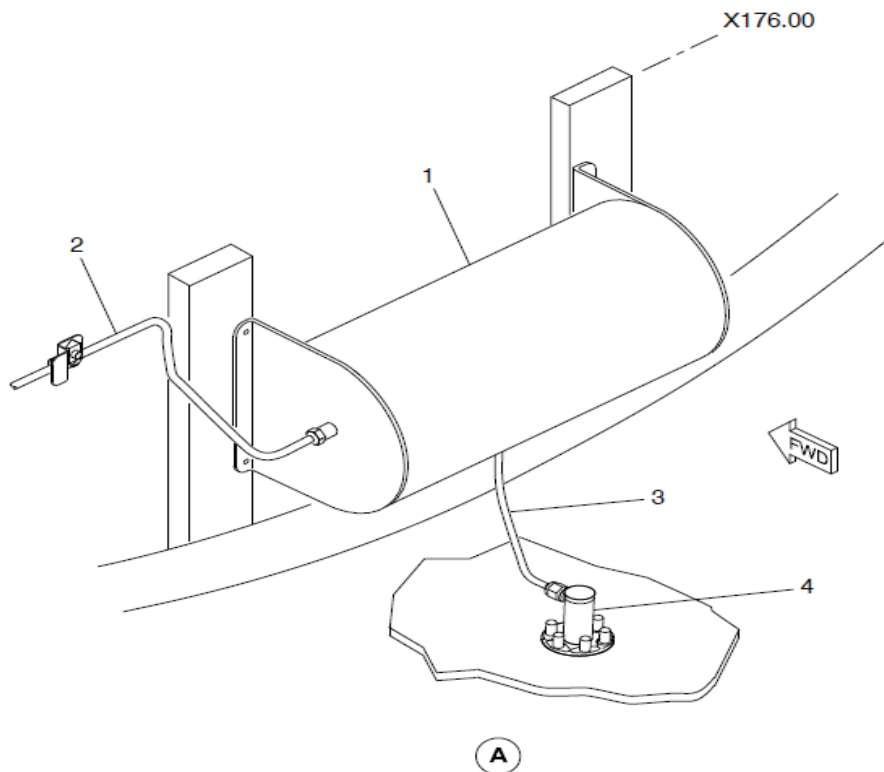

DOOR SEAL DRAIN VALVE

Figure 52-1

brbu74a01.dwg, gv, nov05/2015

ISS III R00

APPROVED BY DAW DELHI, DA700 -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-3 Internal Baggage Door****52-10-3-1 “INTERNAL BAGG DOOR” Caution Light**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- Access to the forward baggage compartment through the internal baggage door is considered inoperative,
- Internal Baggage Door is secured closed by an acceptable means or method, and
- Internal Baggage Door is placarded “INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN”.

NOTE: Only applicable for aircraft without Flight Deck Door Remote Access System installed, and with Forward Baggage Compartment installed.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative “INTERNAL BAGG DOOR” caution light in the flight compartment.
- Placard the Internal Baggage Door on the inboard side, “INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN”.

Operating Procedures

None required.

Maintenance Procedures

NOTE: When carrying out the procedures associated with closing the internal baggage door from within the forward baggage compartment, have procedures in place to prevent closing of the forward baggage compartment door while baggage compartment is occupied.

- Before first dispatch, close and secure the Internal Baggage Door to the Forward Baggage Compartment by an acceptable means or method.
- Enter the Forward Baggage Compartment through the external door and push the internal baggage door firmly and check that it does not open.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-3 Internal Baggage Door

52-10-3-1 “INTERNAL BAGG DOOR” Caution Light

3. Placard the internal baggage door on the inboard side, “INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN”.
4. Placard the glareshield with “INTERNAL BAGG DOOR Caution Light INOP”.
5. If the “INTERNAL BAGG DOOR” caution light has failed in the illuminated condition, at the Caution and Warning Panel, remove the front lens module containing the INTERNAL BAGG DOOR legend, then remove the respective 4 LEDs. Re-install the lens module.
6. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-3 Internal Baggage Door****52-10-3-2 Door Handle****52-10-3-2A**

Interval	Installed	Required	Procedure
C	1	0	(M)

If door cannot be unlatched, may be inoperative provided:

- Access to the forward baggage compartment through the internal baggage door is considered inoperative,
- Internal Baggage Door is secured closed by an acceptable means or method, and
- Internal Baggage Door is placarded "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

NOTE: Only applicable if Forward Baggage Compartment installed.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative "INTERNAL BAGG DOOR" caution light in the flight compartment.
- Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

None required.

Maintenance Procedures

NOTE: When carrying out the procedures associated with closing the internal baggage door from within the forward baggage compartment, have procedures in place to prevent closing of the forward baggage compartment door while baggage compartment is occupied.

- Before first dispatch, enter the forward baggage compartment through the external door. Push the internal baggage door firmly and check that it does not open.
- Placard the inoperative internal door in the flight compartment.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-3 Internal Baggage Door

52-10-3-2 Door Handle

52-10-3-2A

3. Placard the internal door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
4. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-3 Internal Baggage Door****52-10-3-2 Door Handle****52-10-3-2B**

Interval	Installed	Required	Procedure
C	1	0	(M#)

If door cannot be latched, may be inoperative provided:

- Access to the forward baggage compartment through the internal baggage door is considered inoperative,
- Internal Baggage Door is secured closed by an acceptable means or method, and
- Internal Baggage Door is placarded "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

NOTE: Only applicable if Forward Baggage Compartment installed.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative "INTERNAL BAGG DOOR" caution light in the flight compartment.
- Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

None required.

Maintenance Procedures

NOTE: When carrying out the procedures associated with closing the internal baggage door from within the forward baggage compartment, have procedures in place to prevent closing of the forward baggage compartment door while baggage compartment is occupied.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-3 Internal Baggage Door****52-10-3-2 Door Handle****52-10-3-2B****Aircraft Serial Number (ASN) Applicability:**

- (a) ASN prior to 4042 without Modsums 4-900792 or 4-900793 installed, and
(b) Excludes ASN 4001 - 4004, 4007, 4011, 4016 and 4017.

1. Open the latch cover(s) of the inoperative latch(es) on the baggage compartment side of the internal door.
2. If one latch is inoperative, close and latch the internal door from the cabin. If both latches are inoperative, enter the forward baggage compartment through the external door and pull the internal door closed. An assistant may be required to push and hold the internal door from the cabin.
3. From within the baggage compartment, push each exposed latch pin and check that it is securely latched. If a latch pin is not secure, dispatch is not permitted.
4. Close the latch cover(s).
5. Placard the inoperative Internal Baggage Door Latch System in the flight compartment.
6. Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
7. Make appropriate entry in the aircraft journey log.

Aircraft Serial Number (ASN) Applicability:

- (a) ASN 4001 - 4004, 4007, 4011, 4016, 4017,
(b) ASN prior to 4042 with Modsums 4-900792 or 4-900793 installed, and
(c) ASN 4042 and above.

1. Open the bellcrank cover (round panel near the middle) on the baggage compartment side of the internal door.
2. Enter the forward baggage compartment through the external door and pull the internal door closed. An assistant may be required to push and hold the internal door from the cabin.
3. From within the forward baggage compartment, turn the bellcrank or move the pushrods to drive the latch pins. Check that all three pins are securely latched. If a latch pin is not secure, dispatch is not permitted.
4. Close bellcrank cover.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-3 Internal Baggage Door

52-10-3-2 Door Handle

52-10-3-2B

5. Placard the inoperative Internal Baggage Door Latch System in the flight compartment.
6. Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
7. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 7



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 8



DHC-8-402	MINIMUM EQUIPMENT LIST
	<i>DOORS</i>
	<i>ATA 52</i>

52-10-4	<u>Aft Entry Stair System</u>
---------	-------------------------------

NOT APPLICABLE



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-4. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-5 FUSELAGE DOORS Warning System

**52-10-5-1 Airstair Door, Forward Baggage Door, Aft Passenger Door
and Aft Service Door Proximity Sensors**

52-10-5-1A Pre-Mod 4-126420 or 4-126432

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-5 FUSELAGE DOORS Warning System****52-10-5-1 Airstair Door, Forward Baggage Door, Aft Passenger Door and Aft Service Door Proximity Sensors****52-10-5-1B Post-Mod 4-126420 or 4-126432**

Interval	Installed	Required	Procedure
A	8	7	(M)(O)

May be inoperative for one door provided:

- The affected door is physically verified closed and locked prior to each flight,
- The warning light is verified to re-trigger flashing upon subsequent door opening, and
- Repairs are made within one flight day.

NOTE: An inoperative Passenger Airstair door warning system sensor will render AUTO Mode of the Cabin Pressure Control System inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative Door Proximity Sensor in the flight compartment.
- Placard Auto Mode inoperative, if the un-vented door proximity sensor is inoperative.

Operating Procedures

- Physically confirm that the affected door is closed and locked prior to each flight:
 - For Airstair Door, check that the internal handle is fully down or that the external handle is fully up,
 - For Aft Entry Door, Aft Service Door or Forward Baggage Door (if installed), check that the external handles are flush. Push the vent panel inward and check that it does not open.

NOTE: For the Cargo/Combi configuration, the Aft Entry Door and Aft Service Door are disabled and permanently blocked. Instead two (2) type III Emergency Exit Doors, are added at Station X=479.7.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-5 FUSELAGE DOORS Warning System****52-10-5-1 Airstair Door, Forward Baggage Door, Aft Passenger Door and Aft Service Door Proximity Sensors****52-10-5-1B Post-Mod 4-126420 or 4-126432**

2. Prior to engine start on the ground, close all doors and press the Master WARNING switchlight. Check that the FUSELAGE DOORS warning light stops flashing and remains steadily illuminated.
3. On the ESID control panel, set MFD1 or MFD2 to SYS and select the DOORS page. Check that the five (four, if forward baggage door not installed) doors not checked in Step 1 are indicating closed and locked.
4. If the FUSELAGE DOORS warning light still flashes on the ground, repair inoperative door proximity sensor systems.
5. If the FUSELAGE DOORS warning light flashes in flight, flight must be conducted in accordance with the AFM.
6. In the event the inoperative proximity sensor is rendering the AUTO Mode inoperative, Cabin Pressure Control will be performed in MAN Mode, and, AUTO Mode shall not be selected in-flight, as this action will cause rapid loss of cabin pressure.

Maintenance Procedures

1. On the ESID control panel, set MFD1 or MFD2 to SYS and select the DOORS page. Determine which proximity sensor or associated wiring is causing the FUSELAGE DOORS warning.
2. For intermittent indications caused by a faulty proximity sensor, deactivate the sensor by either disconnecting or removing the sensor. Stow the sensor and its wire in a manner that will not impede door operation. Alternatively, the sensor target can be disconnected and removed as opposed to the sensor. removal/disconnection of either sensor or sensor target will result in the sensor being considered inoperative in the failed "Open" position.
3. Verify that the affected door is actually in the closed and locked condition:
 - a) For Airstair Door, check that the internal handle is fully down or that the external handle is fully up,
 - b) For Aft Entry Door, Aft Service Door or Forward Baggage Door (if installed), check that the external handles are flush. Push the vent panel inward and check that it does not open.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-5 FUSELAGE DOORS Warning System

**52-10-5-1 Airstair Door, Forward Baggage Door, Aft Passenger Door
and Aft Service Door Proximity Sensors**

52-10-5-1B Post-Mod 4-126420 or 4-126432

NOTE: For the Cargo/Combi configuration, the Aft Entry Door and Aft Service Door are disabled and permanently blocked. Instead two (2) type III Emergency Exit Doors, are added at Station X=479.7.

4. With FUSELAGE DOORS warning light steadily illuminated (by pushing the Master WARNING switchlight if necessary), unlock or open a door not already unlocked or open, and observe that the FUSELAGE DOORS warning light re-triggers flashing.
5. Placard inoperative door proximity sensor in the flight compartment.
6. Make appropriate entry in the aircraft journey log.



ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST****DOORS****ATA 52****52-10-5 FUSELAGE DOORS Warning System**

52-10-5-2 Airstair Door, Aft Passenger Door and Aft Service Door Proximity Sensors (Forward baggage compartment not installed)

Interval	Installed	Required	Procedure
A	6	5	(M)(O)

May be inoperative for one door provided:

- The affected door is physically verified closed and locked prior to each flight,
- The warning light is verified to re-trigger flashing upon subsequent door opening, and
- Repairs are made within one flight day.

NOTE: An inoperative Passenger Airstair door warning system sensor will render AUTO MODE of the Cabin Pressure Control System inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative Door Proximity Sensor in the flight compartment.
- Placard Auto Mode inoperative, if the un-vented door proximity sensor is inoperative.

Operating Procedures

- Physically confirm that the affected door is closed and locked prior to each flight:
 - For Airstair Door, check that the internal handle is fully down or that the external handle is fully up,
 - For Aft Entry Door, Aft Service Door or Forward Baggage Door (if installed), check that the external handles are flush. Push the vent panel inward and check that it does not open.

NOTE: For the Cargo/Combi configuration, the Aft Entry Door and Aft Service Door are disabled and permanently blocked. Instead two (2) type III Emergency Exit Doors, are added at Station X=479.7.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-5 FUSELAGE DOORS Warning System****52-10-5-2 Airstair Door, Aft Passenger Door and Aft Service Door Proximity Sensors (Forward baggage compartment not installed)**

2. Prior to engine start on the ground, close all doors and press the Master WARNING switchlight. Check that the FUSELAGE DOORS warning light stops flashing and remains steadily illuminated.
3. On the ESID control panel, set MFD1 or MFD2 to SYS and select the DOORS page. Check that the five (four, if forward baggage door not installed) doors not checked in Step 1 are indicating closed and locked.
4. If the FUSELAGE DOORS warning light still flashes on the ground, repair inoperative door proximity sensor systems.
5. If the FUSELAGE DOORS warning light flashes in flight, flight must be conducted in accordance with the AFM.
6. In the event the inoperative proximity sensor is rendering the AUTO Mode inoperative, Cabin Pressure Control will be performed in MAN Mode, and, AUTO Mode shall not be selected in-flight, as this action will cause rapid loss of cabin pressure.

Maintenance Procedures

1. On the ESID control panel, set MFD1 or MFD2 to SYS and select the DOORS page. Determine which proximity sensor or associated wiring is causing the FUSELAGE DOORS warning.
2. For intermittent indications caused by a faulty proximity sensor, deactivate the sensor by either disconnecting or removing the sensor. Stow the sensor and its wire in a manner that will not impede door operation. Alternatively, the sensor target can be disconnected and removed as opposed to the sensor. removal/disconnection of either sensor or sensor target will result in the sensor being considered inoperative in the failed "Open" position.
3. Verify that the affected door is actually in the closed and locked condition:
 - a) For Airstair Door, check that the internal handle is fully down or that the external handle is fully up,
 - b) For Aft Entry Door, Aft Service Door or Forward Baggage Door (if installed), check that the external handles are flush. Push the vent panel inward and check that it does not open.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-5 FUSELAGE DOORS Warning System

52-10-5-2 Airstair Door, Aft Passenger Door and Aft Service Door Proximity Sensors (Forward baggage compartment not installed)

NOTE: For the Cargo/Combi configuration, the Aft Entry Door and Aft Service Door are disabled and permanently blocked. Instead two (2) type III Emergency Exit Doors, are added at Station X=479.7.

4. With FUSELAGE DOORS warning light steadily illuminated (by pushing the Master WARNING switchlight if necessary), unlock or open a door not already unlocked or open, and observe that the FUSELAGE DOORS warning light re-triggers flashing.
5. Placard inoperative door proximity sensor in the flight compartment.
6. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 7



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-5 FUSELAGE DOORS Warning System

52-10-5-3 Airstair Door (Cargo/Combi Configuration)

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-6 Electro Pneumatic Shut-Off Valve (EPSOV)**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The EPSOV is verified open,
- Auto Mode of Cabin Pressure Control System must be operative, and
- The flight is conducted pressurized.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Electro Pneumatic Shut-Off Valve (EPSOV) is placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Pull and clip circuit breaker AIRSTAIR DOOR SOV on the Left Main DC Bus.
- Make sure that the door seal system is pressurized. If necessary:
 - Pressurize the reservoir tank for the door seal system (Refer to AMM TASK 12-10-52-863-801), or
 - Run an engine to supply bleed air to the door seal system.
- Verify correct operation (inflation and deflation) of the forward passenger door seal by conducting Procedure A or Procedure B below:
 - Procedure A (verification through manual operation of the airstair door lever):
 - Close and lock the airstair door to allow the supplied air to inflate the seal.
 - Make sure that the airstair door seal is inflated and stays inflated.

NOTE: The door seal inflation can be verified visually, from inside of the aircraft.

- Unlock the airstair door.
- Make sure that the airstair door seal is deflated fully in 7 seconds or less.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-6****Electro Pneumatic Shut-Off Valve (EPSOV)**

NOTE 1: The door seal deflation can be verified visually, from inside of the aircraft.

NOTE 2: A failed/damaged door seal can cause the cabin not to pressurize.

B. Procedure B (verification through control valve push button):

- a) Remove the interior panel at the door entrance to gain access to seal control valve.
- b) Push and hold the airstair door seal control valve push button, to allow the supplied air to inflate the seal.

NOTE: The airstair door seal control valve is installed in the center fuselage, on the left side of the door entrance.

- c) Make sure that the airstair door seal is inflated and stays inflated.
- d) Release the seal control valve push button.
- e) Make sure that the airstair door seal is deflated fully in 7 seconds or less.

NOTE: A failed/damaged door seal can cause the cabin not to pressurize.

4. If the airstair door seal is not deflated after applying Step 3, remove the Electro Pneumatic Shut-Off Valve as follows:

NOTE: Removal of the EPSOV constitutes the same failure condition as an open EPSOV as the air is discharged directly from the door seal system.

- a) Disconnect and remove the electrical connector.
- b) Loosen the door seal end of line.
- c) Loosen the clamp.
- d) Remove the Electro Pneumatic Shut-Off Valve.
- e) Secure the end of pneumatic line.

5. Inoperative Electro Pneumatic Shut-Off Valve is placarded in the flight compartment.
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-30-1 Aft Baggage Door Counter Balance System**

Interval	Installed	Required	Procedure
C	2	0	(M)

May be inoperative provided:

- Baggage door is verified closed, latched and not used, and
- Baggage door is placarded "BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Door Counter Balance System must be placarded in the flight compartment and at baggage door threshold.

Operating Procedures

None required.

Maintenance Procedures

- Verify the baggage door is closed and locked and ensure the external handle is seated flush with the door. Push the handle in ensuring that the latch is engaged and fully flush, confirming door is locked.
- Placard Exterior of the Baggage Door "BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-30-2 Aft Baggage Door Telescopic Strut****52-30-2A**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- Baggage door is verified closed, locked, and not used, and
- Baggage door is placarded "BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Door Telescopic Strut must be placarded in the flight compartment and at baggage door threshold.

Operating Procedures

None required.

Maintenance Procedures

- Verify the baggage door is closed and locked and ensure the external handle is seated flush with the door.
- Placard Exterior of the Baggage Door "BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-30-2 Aft Baggage Door Telescopic Strut****52-30-2B**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided an alternate approved means to support the baggage door in the open position is established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Door Telescopic Strut must be placarded in the flight compartment and at baggage door threshold.

Operating Procedures

None required.

Maintenance Procedures

1. Operator to develop an approved means to support the baggage door in the open position.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-30-2 Aft Baggage Door Telescopic Strut****52-30-2-1 Lock Release Collar**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided the strut is only used in the non-extended position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Door Telescopic Strut must be placarded in the flight compartment and at baggage door threshold.

Operating Procedures

None required.

Maintenance Procedures

1. Placard telescopic strut, "LOCKING COLLAR INOPERATIVE - DO NOT EXTEND STRUT".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-2. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-1 Automatic Locking System (Primary System)****52-50-1-1A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment,
- Access to the Forward baggage compartment through the Internal baggage door is considered inoperative,
- Internal baggage door to the Forward baggage compartment is secured closed by an acceptable means or method, and
- Internal baggage door is placarded, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

With the Forward baggage compartment installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "INTERNAL DOORS" caution light in the flight compartment.
- Placard Internal baggage door "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-1 Automatic Locking System (Primary System)****52-50-1-1A Forward baggage compartment installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door.

Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Before each dispatch, close and secure the internal baggage door to the Forward Baggage compartment.
6. Placard the glareshield with "INTERNAL DOORS Caution Light INOP".
7. Placard the Internal baggage door, "INTERNAL BAGGAGE DOOR LOCKED – DO NOT OPEN".
8. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-1 Automatic Locking System (Primary System)****52-50-1-1B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door, and
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

With the forward baggage compartment NOT installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "COCKPIT DOOR" caution light in the flight compartment.

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-1 Automatic Locking System (Primary System)****52-50-1-1B Forward baggage compartment not installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door.

Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment NOT installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Placard the glareshield with "COCKPIT DOOR caution light INOP".
6. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R04**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-2 Flight Deck Emergency Access Function****52-50-1-2A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment,
- Access to the Forward baggage compartment through the Internal baggage door is considered inoperative,
- Internal baggage door to the Forward baggage compartment is secured closed by an acceptable means or method, and
- Internal baggage door is placarded, "INTERNAL BAGGAGE DOOR INOPERATIVE – DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

With the Forward baggage compartment installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "INTERNAL DOORS" caution light in the flight compartment.
- Placard Internal baggage door "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-2 Flight Deck Emergency Access Function****52-50-1-2A Forward baggage compartment installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Before each dispatch, close and secure the internal baggage door to the Forward Baggage compartment.
6. Placard the glareshield with "INTERNAL DOORS Caution Light INOP".
7. Placard the Internal baggage door, "INTERNAL BAGGAGE DOOR LOCKED – DO NOT OPEN".
8. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-2 Flight Deck Emergency Access Function****52-50-1-2B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

With the forward baggage compartment NOT installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "COCKPIT DOOR" caution light in the flight compartment.

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-2 Flight Deck Emergency Access Function****52-50-1-2B Forward baggage compartment not installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment NOT installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Placard the glareshield with "COCKPIT DOOR caution light INOP".
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-3 DENY Function****52-50-1-3A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment,
- Access to the Forward baggage compartment through the Internal baggage door is considered inoperative,
- Internal baggage door to the Forward baggage compartment is secured closed by an acceptable means or method, and
- Internal baggage door is placarded, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

With the Forward baggage compartment installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "INTERNAL DOORS" caution light in the flight compartment.
- Placard Internal baggage door "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 9

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-3 DENY Function****52-50-1-3A Forward baggage compartment installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Before each dispatch, close and secure the internal baggage door to the Forward Baggage compartment.
6. Placard the glareshield with "INTERNAL DOORS Caution Light INOP".
7. Placard the Internal baggage door, "INTERNAL BAGGAGE DOOR LOCKED – DO NOT OPEN".
8. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■**ISS III R00****APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 10

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-3 DENY Function****52-50-1-3B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

With the forward baggage compartment NOT installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "COCKPIT DOOR" caution light in the flight compartment.

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 11

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-3 DENY Function****52-50-1-3B Forward baggage compartment not installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment NOT installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Placard the glareshield with "COCKPIT DOOR caution light INOP".
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 12

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-4 UNLK Function**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Automatic locking system is verified operative,
- Emergency access function is verified operative, and
- Alternate procedures are established and used for using the mechanical (Deadbolt) system, and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the automatic UNLK function is inoperative.

Operating Procedures

- On the INTERNAL DOORS pilot control panel, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.
- With the door in auto locked position, push switch / indicator button located in the maintenance panel above the wardrobe and observe the following:
 - Illumination of a white light indication on the FA indicator/switch,
 - Illumination of the "AUTO UNLK" – COCKPIT DOOR advisory light on the pilot control panel,
 - Master Caution tone sounds, Master Caution indicator flashes, and With Forward baggage compartment installed, "INTERNAL DOORS" caution light illuminates,OR
With Forward baggage compartment NOT installed, "COCKPIT DOOR" caution light illuminates,
 - After 40 seconds the cockpit door unlocks, and the amber light indicates on the FA push button switch illuminates.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 13



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-50-1 Fortified Flight Deck Door (With Remote Access System)

52-50-1-4 UNLK Function

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

1. Placard in the flight compartment that the automatic UNLK function is inoperative.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 14

DHC-8-402	MINIMUM EQUIPMENT LIST
<i>DOORS</i>	<i>ATA 52</i>

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-6 “FAIL” - COCKPIT DOOR Advisory Light****52-50-1-6A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Door Unlock and Auto Lock functions are verified operative,
- “COCKPIT DOOR” caution light is verified operative, and
- “CKPT DOOR” and “AUTO UNLK” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “FAIL” - COCKPIT DOOR advisory light is inoperative.

Operating Procedures

- On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.
- On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to UNLK position and verify that the door is unlocked.

Maintenance Procedures

With Forward baggage compartment installed:

- With the door in auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe and observe the following:
 - Illumination of the “AUTO UNLK” - COCKPIT DOOR advisory light on the cockpit panel,

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 16



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-50-1 Fortified Flight Deck Door (With Remote Access System)

52-50-1-6 “FAIL” - COCKPIT DOOR Advisory Light

52-50-1-6A Forward baggage compartment installed

- b) Master Caution tone sounds, Master Caution indicator flashes, “INTERNAL DOORS” caution light illuminates,
 - c) After 40 seconds the cockpit door unlocks, and with the door open observe that “CKPT DOOR” - OPEN advisory light illuminates.
2. Open the Forward baggage door and observe that “BAGG DOOR” - OPEN advisory light illuminates.
 3. Placard the inoperative “FAIL” - COCKPIT DOOR advisory light in the flight compartment.
 4. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 17

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-6 “FAIL” - COCKPIT DOOR Advisory Light****52-50-1-6B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Door Unlock and Auto Lock functions are verified operative,
- “COCKPIT DOOR” caution light is verified operative, and
- “CKPT DOOR” and “AUTO UNLK” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “FAIL” - COCKPIT DOOR advisory light is inoperative.

Operating Procedures

- On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.
- On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to UNLK position and verify that the door is unlocked.

Maintenance Procedures

With Forward baggage compartment NOT installed:

- With the door in auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe and observe the following:
 - Illumination of the “AUTO UNLK” – COCKPIT DOOR advisory light on the cockpit panel,

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 18

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-6 “FAIL” - COCKPIT DOOR Advisory Light****52-50-1-6B Forward baggage compartment not installed**

- b) Master Caution tone sounds, Master Caution indicator flashes, “COCKPIT DOOR” caution light illuminates,
 - c) After 40 seconds the cockpit door unlocks, and with the door open observe that “CKPT DOOR” – OPEN advisory light illuminates.
2. Placard the inoperative “FAIL – ” COCKPIT DOOR advisory light in the flight compartment.
 3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 19

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-7 “CKPT DOOR” - OPEN Advisory Light****52-50-1-7A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic door lock function is verified operative,
- “INTERNAL DOORS” caution light is verified operative in the event door is left open more than three (3) minutes, and
- “BAGG DOOR”, “FAIL”, and “AUTO UNLK” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “CKPT DOOR” - OPEN advisory light is inoperative.

Operating Procedures

On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.

Maintenance Procedures

With Forward baggage compartment installed:

- Open the cockpit door, observe that the “CKPT DOOR” - OPEN advisory light is not illuminated. Keep the door open for at least three (3) minutes and check that the Master Caution tone sounds, Master Caution indicator flashes and the “INTERNAL DOORS” caution light on the Caution and Warning Panel illuminates.
- Open the Forward Baggage door and observe that “BAGG DOOR - ” OPEN Advisory light illuminates.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 20

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-7 “CKPT DOOR” - OPEN Advisory Light****52-50-1-7A Forward baggage compartment installed**

3. With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, observe that the “AUTO UNLK” - COCKPIT DOOR advisory light on the cockpit panel illuminates.
4. With the cockpit door open, push down and rotate the INTERNAL DOORS pilot control panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.
 - a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door) to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, “INTERNAL DOORS” caution light illuminates and the “FAIL” - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the “FAIL” - COCKPIT DOOR advisory light and “INTERNAL DOORS” caution light extinguish.
5. Placard the inoperative “CKPT DOOR” - OPEN advisory light on the INTERNAL DOORS pilot control panel.
6. Make appropriate entry in the aircraft journey log.
 - a) Master Caution tone sounds, Master Caution indicator flashes, “INTERNAL DOORS” caution light illuminates,
 - b) After 40 seconds the cockpit door unlocks, and with the door open observe that “CKPT DOOR” - OPEN advisory light illuminates.
5. Open the Forward baggage door and observe that “BAGG DOOR” - OPEN advisory light illuminates.
6. Placard the inoperative “FAIL” - COCKPIT DOOR advisory light in the flight compartment.
7. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 21

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-7 “CKPT DOOR” - OPEN Advisory Light****52-50-1-7B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- a) Automatic door lock function is verified operative,
- b) “COCKPIT DOORS” caution light is verified operative in the event door is left open more than three (3) minutes, and
- c) “FAIL”, and “AUTO UNLK” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “CKPT DOOR” - OPEN advisory light is inoperative.

Operating Procedures

On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.

Maintenance Procedures

With Forward baggage compartment NOT installed:

1. Open the cockpit door, observe that the “CKPT DOOR” – OPEN advisory light is not illuminated. Keep the door open for at least three (3) minutes and check that the Master Caution tone sounds, Master Caution indicator flashes and the “COCKPIT DOOR” caution light on the Caution and Warning Panel illuminates.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 22

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-7 “CKPT DOOR” - OPEN Advisory Light****52-50-1-7B Forward baggage compartment not installed**

2. With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, observe that the “AUTO UNLK” – COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
3. With the cockpit door open, push down and rotate the INTERNAL DOORS pilot control panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.
 - a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door) to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position.
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, “COCKPIT DOOR” caution light illuminates and the “FAIL” – COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the “FAIL” – COCKPIT DOOR advisory light and “COCKPIT DOOR” caution light extinguish.
4. Placard the inoperative “CKPT DOOR” – OPEN advisory light on the INTERNAL DOORS pilot control panel.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 23

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-8 “AUTO UNLK” - COCKPIT DOOR Advisory Light****52-50-1-8A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Emergency access function is verified operative,
- “INTERNAL DOORS” caution light is verified operative, and
- “BAGG DOOR”, “CKPT DOOR” and “FAIL” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “AUTO UNLK” - CKPT DOOR advisory light is inoperative.

Operating Procedures

With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, and observe the following:

- Illumination of a white light indication on the FA indicator/switch,
- Master caution tone sounds, Master Caution indicator flashes, and With Forward baggage compartment installed, “INTERNAL DOORS” caution light illuminates,

OR

With Forward baggage compartment NOT installed, “COCKPIT DOOR” caution light illuminates,

- After 40 seconds the cockpit door unlocks and the amber light indication on the FA push button switch illuminates.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 24

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-8 “AUTO UNLK” - COCKPIT DOOR Advisory Light****52-50-1-8A Forward baggage compartment installed****Maintenance Procedures**

With Forward baggage compartment installed:

1. Open the Forward baggage door and observe that “BAGG DOOR” – OPEN advisory light illuminates.
2. With the cockpit door in the open position, observe that “CKPT DOOR” – OPEN advisory light illuminates.
3. With the cockpit door open, push down and rotate the INTERNAL DOORS Control Panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.
 - a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door), to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position.
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, “INTERNAL DOORS caution light illuminates and the “FAIL” - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the “FAIL” - COCKPIT DOOR advisory light and “INTERNAL DOORS” caution light extinguish.
4. Placard the inoperative “AUTO UNLK” - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 25

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-8 “AUTO UNLK” - COCKPIT DOOR Advisory Light****52-50-1-8B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Emergency access function is verified operative,
- “COCKPIT DOORS” caution light is verified operative, and
- “CKPT DOOR”, and “FAIL” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “AUTO UNLK” - CKPT DOOR advisory light is inoperative.

Operating Procedures

With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, and observe the following:

- Illumination of a white light indication on the FA indicator/switch,
- Master caution tone sounds, Master Caution indicator flashes, and With Forward baggage compartment installed, “INTERNAL DOORS” caution light illuminates,

OR

With Forward baggage compartment NOT installed, “COCKPIT DOOR” caution light illuminates,

- After 40 seconds the cockpit door unlocks and the amber light indication on the FA push button switch illuminates.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 26

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-8 “AUTO UNLK” - COCKPIT DOOR Advisory Light****52-50-1-8B Forward baggage compartment not installed****Maintenance Procedures**

With Forward baggage compartment NOT installed:

1. With the cockpit door in the open position, observe that “CKPT DOOR” OPEN advisory light illuminates.
2. With the cockpit door open, push down and rotate the INTERNAL DOORS pilot control panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.
 - a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door), to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position.
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, “COCKPIT DOOR” caution light illuminates and the “FAIL” – COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS Control Panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the “FAIL” – COCKPIT DOOR advisory light and “COCKPIT DOOR” caution light extinguish.
3. Placard the inoperative “AUTO UNLK” – COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel.
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R04**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 27

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-9 "BAGG DOOR" - OPEN Advisory Light (Forward Baggage Compartment Installed)**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Forward baggage door lock is operative,
- "INTERNAL DOORS" caution light is verified operative, and
- "CKPT DOOR", "FAIL" and "AUTO UNLK" advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the "BAGG DOOR" - OPEN advisory light is inoperative.

Operating Procedures

Check the forward baggage door lock is working.

Maintenance Procedures

- With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe and observe the following:
 - Illumination of a white light indication on the FA indicator/switch,
 - Master Caution tone sounds, Master Caution indicator flashes, "INTERNAL DOORS" caution light and "AUTO UNLK" - COCKPIT DOOR advisory lights illuminate.
- Open the cockpit door and verify that "CKPT DOOR" - OPEN advisory light illuminates.
- With the cockpit door open, push down and rotate the INTERNAL DOORS pilot control panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 28

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-9 "BAGG DOOR" - OPEN Advisory Light (Forward Baggage Compartment Installed)**

- a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door), to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position.
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, "INTERNAL DOORS" caution light illuminates and the "FAIL" - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the "FAIL" - COCKPIT DOOR advisory light and "INTERNAL DOORS" caution light extinguish.
4. Placard the inoperative "BAGG DOOR" - OPEN advisory light on the INTERNAL DOORS pilot control panel
 5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 29

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-10 Deadbolt (Secondary locking system)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided Automatic locking (Remote Access) system is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the Deadbolt is inoperative.

Operating Procedures

1. On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.
2. On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to UNLK position and verify that the door is unlocked.

Maintenance Procedures

1. Placard in the flight compartment that the Deadbolt is inoperative.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 30

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-11 "INTERNAL DOORS" Caution Light (Forward baggage compartment installed)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system, and for accessing the flight compartment,
- Access to the Forward baggage compartment through the Internal baggage door is considered inoperative,
- Internal baggage door is secured closed by an acceptable means or method, and
- Internal baggage door is placarded, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative "INTERNAL DOORS" caution light in the flight compartment.
- Placard the Internal baggage door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(And)

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 31

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-11 "INTERNAL DOORS" Caution Light (Forward baggage compartment installed)**

Internal Baggage Compartment Door must be closed and verified locked by crew member. Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier – Q400 para 10.3.7.3 Sub Point – 2

Maintenance Procedures

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Before each dispatch, close and secure the Internal baggage door to the Forward baggage compartment.
5. Placard the inoperative "INTERNAL DOORS" caution light on the glareshield.
6. Placard the Internal baggage door, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
7. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 32

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-12 "COCKPIT DOOR" Caution Light (Forward baggage compartment not installed)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- a) Automatic locking (Remote Access) system is deactivated,
- b) Secondary locking system (Deadbolt) is verified operative and used to lock the door, and
- c) Alternate procedures are established and used for using the mechanical (Deadbolt) system, and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative "COCKPIT DOOR" caution light in the flight compartment.

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(And)

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 33

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-12 “COCKPIT DOOR” Caution Light (Forward baggage compartment not installed)**

Internal Baggage Compartment Door must be closed and verified locked by crew member. Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier – Q400 para 10.3.7.3 Sub Point – 2

Maintenance Procedures

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative “COCKPIT DOOR” caution light on the glareshield.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 34



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-50-2

Fortified Flight Deck Door (Without Remote Access System): Deadbolt Lock

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-3 Lavatory Door****52-50-3-1 Door Lock**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Lavatory door latch operates normally, and
- Procedures are established and used to inform occupants of inoperative door lock.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Lavatory Door Lock must be placarded in the flight and passenger compartments.

Operating Procedures

Crew shall brief the passenger of the INOP door locking mechanism and to maintain caution while using lavatory.

Maintenance Procedures

- Placard inoperative Lavatory Door lock in the flight and passenger compartments.
- Make appropriate entry in the aircraft journey log book.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-3 Lavatory Door****52-50-3-2 Door Latch**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided lavatory door is locked closed and placarded, "INOPERATIVE - DO NOT ENTER".

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
2. Placard the flight compartment that lavatory is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Place placard in flight compartment indicating lavatory is inoperative.
2. Lock the lavatory door by placing a pen or other similar object in the hole in the latch and sliding it to the locked position.
3. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
4. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****PROPELLERS******ATA 61*****61-20-1 Propeller Maintenance Unfeather Function**

Interval	Installed	Required	Procedure
D	2	0	(M#)

May be inoperative provided an alternate feather check is performed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Propeller Maintenance Unfeather Function must be placarded on the Central Maintenance Panel in the wardrobe.

Operating Procedures

None required.

Maintenance Procedures

1. With the engine stationary, ensure the propeller is in the unfeather state, using blade bats if necessary.
2. For the associated engine, set the Condition Lever to FUEL OFF and PLA to DISC.
3. On the Propeller Control Panel, select ALT FEATHER for the associated propeller.

NOTE: If at any time during this procedure propeller stops moving when the Aux. Pump is running, a dry motoring cycle must be repeated to replenish the Aux. tank.

4. Visually determine that the propeller blades move to the feather position.
5. On the Central Maintenance Panel, placard the affected MAINTENANCE UNFEATHER switch "INOP".
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

61-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

PROPELLERS

ATA 61

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

61-20-1. 2



Interval	Installed	Required	Procedure
A	2	-	(M)

SN	EMU FAULT CODE	DESCRIPTION
1.	40	FADEC Tx-Wraparound error
2.	132	Beta tracking error
3.	158	Speed tracking error
4.	180	CLA sum out of range
5.	182	CLA Va out of range
6.	184	CLA Vb out of range
7.	186	CLA computed value out of range
8.	220	Last AUPC test failed
9.	336	WoW A invalid
10.	338	WoW B invalid
11.	360	28V PMA fault
12.	470	FADEC Torque invalid
13.	474	Invalid FADEC 28V Available bit

Minimum Equipment List Procedures (MELP)

1. Placard inoperative PEC System in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

61-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

PROPELLERS

ATA 61

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

61-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****POWER PLANT******ATA 71*****71-60-1 Engine Intake Bypass Doors****71-60-1-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative in closed position provided the flight is not conducted in known or forecast icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Intake Bypass Door(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard ENGINE INTAKE bypass door(s) on the ICE PROTECTION panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

71-60-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****POWER PLANT******ATA 71*****71-60-1 Engine Intake Bypass Doors****71-60-1-2**

Interval	Installed	Required	Procedure
C	2	0	(M#)(O)

May be inoperative in the open position provided:

- The OAT along the route flown is less than ISA +25 degrees C.,
- The related engine oil temperature indicator operates normally and is monitored, and
- The associated Engine Intake Adapter Heater is confirmed operative every flight day.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Intake Bypass Door(s) must be placarded in the flight compartment.

Operating Procedures

Flight planning is established and used to ensure OAT enroute does not exceed ISA+25°C and the affected engine oil temperature indication is periodically monitored.

Maintenance Procedures

1. Start and run the associated engine(s) at ground idle.

NOTE: “ENG Adapt Heat (1)” and/or “ENG Adapt Heat (2)” MAY ILLUMINATE ON THE CAUTION AND WARNING PANEL.

2. Ensure that both AC Generators are selected on.

NOTE: ENSURE THAT THE ASSOCIATED “ENG Adapt Heat (1)” and/or “ENG Adapt Heat (2)” ARE EXTINGUISHED.

3. At the ICE PROTECTION panel, select the associated ENGINE INTAKE bypass door switch(es) to OPN/HTR. Observe that the HTR and OPN light(s) illuminate(s).

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

71-60-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

POWER PLANT

ATA 71

71-60-1 Engine Intake Bypass Doors

71-60-1-2

NOTE: The engine intake adaptor heaters and resultant HTR indications are switched by the thermostat on the skin panel beneath the cockpit floor. If outside air temperatures are above a nominal 15°C (59°F), as indicated on the Engine Display SAT indication, spray the skin at the location of the thermostat with Freeze Mist or use other means to lower the temperature and observe the HTR advisory lights illumination.

4. Shut down engine(s).
5. Placard ENGINE INTAKE bypass door(s) on the ICE PROTECTION panel in the flight compartment.
6. Make appropriate entry in the aircraft journey log.



ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

71-60-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

POWER PLANT

ATA 71

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

71-60-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ENGINE FUEL AND CONTROL******ATA 73*****73-20-1****Engine FADEC System: FADEC faults**

Interval	Installed	Required	Procedure
A	68	-	NIL

May be dispatched with FADEC faults provided repairs are made in accordance with times established in the Time Limited Dispatch section of Pratt & Whitney Canada Airworthiness Limitations Manual Part No.3043520.

NOTE:

1. MEL extensions are not permitted.
2. Time Limited Dispatch reporting system is maintained as per Pratt & Whitney Canada Airworthiness Limitations Manual Part No. 3043520.

Time Limited Dispatch (TLD) can be done under two scenarios. These scenarios along with risk factor calculation procedure are defined in Annexure-3.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative engine FADEC System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative engine FADEC System in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINE FUEL AND CONTROL

ATA 73

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-20-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINE FUEL AND CONTROL

ATA 73

73-20-2

MTOP Switch

**Moved to 76-10-01 ENGINE
CONTROL Panel
Switches**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
ENGINE FUEL AND CONTROL

ATA 73

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-20-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINE FUEL AND CONTROL

ATA 73

73-20-3 Power Rating Switches

73-20-3-1 MCR Switch

**Moved to 76-10-1 ENGINE
CONTROL Panel
Switches**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-20-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINE FUEL AND CONTROL

ATA 73

73-20-3 Power Rating Switches

73-20-3-2 MCL Switch

**Moved to 76-10-1 ENGINE
CONTROL Panel
Switches**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-20-3. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINE FUEL AND CONTROL

ATA 73

73-20-4 Reduce Power Switches

73-20-4-1 RDC TOP TRQ DEC Switch

**Moved to 76-10-1 ENGINE
CONTROL Panel
Switches**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-20-4. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINE FUEL AND CONTROL

ATA 73

73-20-4 Reduce Power Switches

73-20-4-2 RDC TOP TRQ RESET Switch

**Moved to 76-10-1 ENGINE
CONTROL Panel
Switches**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ENGINE FUEL AND CONTROL******ATA 73*****73-30-1 FF (Fuel Flow) Indications**

Interval	Installed	Required	Procedure
B	2	1	NIL

May be inoperative provided Fuel QTY indications are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Fuel Flow Indication(s) must be placarded on Engine Display in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Fuel Flow Indication(s) as "INOP" on Engine Display in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
ENGINE FUEL AND CONTROL

ATA 73

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

73-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ENGINE CONTROL******ATA 76*****76-10-1 ENGINE CONTROL Panel Switches****76-10-1-1 RDC Np LDG Switch**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided the RDC Np LDG function is not used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Control switch must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative switch on the Engine Control Panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

76-10-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST****ENGINE CONTROL****ATA 76****76-10-1 ENGINE CONTROL Panel Switches****76-10-1-2 MTOP Switch****76-10-1-2A**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative in the ON (selected) position provided:

- #1 and #2 ENG FADEC caution lights are extinguished,
- MTOP is annunciated on ED when condition levers are at MAX/1020, and
- Flight is conducted in accordance with the AFM Supplement 46, TAKE-OFF WITH MAXIMUM POWER AND UPTRIM DISABLED.

NOTE:

- Do not press (select) MTOP switch during Pre-Take-off Checks.
- Do not press (deselect) MTOP switch during In-flight procedures after Take-off. NTOP will not appear on ED.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Control switch must be placarded in the flight compartment.

Operating Procedures

- Conduct flights in accordance with AFM Supplement 46 "TAKE-OFF WITH MAXIMUM TAKE-OFF POWER AND UPTRIM DISABLED" with the following exceptions:
 - In the Pre-take-off Checks, section 6.46.4.1.1. of the AFM Supplement, do not press (select) MTOP switch in step 1.
 - In the In-Flight Procedures - After-Take-off, section 6.46.4.1.3 of the AFM Supplement, do not press (deselect) MTOP in step 2. NTOP will not appear on ED.

Maintenance Procedures

- Placard inoperative switch on the Engine Control Panel.
- Make appropriate entry in the aircraft journey log.

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

76-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****ENGINE CONTROL****ATA 76****76-10-1 ENGINE CONTROL Panel Switches****76-10-1-2 MTOP Switch****76-10-1-2B**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be failed in the OFF (deselected) position provided:

- a) #1 and #2 ENG FADEC caution lights are extinguished,
- b) NTOP is annunciated on ED when condition levers are at MAX/1020, and
- c) MTOP is not used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Control switch must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative switch on the Engine Control Panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

76-10-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST****ENGINE CONTROL****ATA 76****76-10-1 ENGINE CONTROL Panel Switches****76-10-1-3 MCR Switch**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided condition levers are used to set power rating.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Control switch must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative switch on the Engine Control Panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

76-10-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST****ENGINE CONTROL****ATA 76****76-10-1 ENGINE CONTROL Panel Switches****76-10-1-4 MCL Switch**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided condition levers are used to set power rating.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Control switch must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative switch on the Engine Control Panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

76-10-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST****ENGINE CONTROL****ATA 76****76-10-1 ENGINE CONTROL Panel Switches****76-10-1-5 RDC TOP TRQ DEC Switch**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided RDC TOP TRQ DEC is not used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Control switch must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative switch on the Engine Control Panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

76-10-1. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ENGINE CONTROL******ATA 76*****76-10-1 ENGINE CONTROL Panel Switches****76-10-1-6 RDC TOP TRQ RESET Switch**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided RDC TOP TRQ DEC is not used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Control switch must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative switch on the Engine Control Panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

76-10-1. 7



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINE CONTROL

ATA 76

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

76-10-1. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ENGINES INDICATING******ATA 77*****77-30-1 Engine Monitoring Unit (EMU)**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided alternate procedures are established and used to record engine data.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Engine Monitoring Unit (EMU) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative EMU.
2. Required Engine Parameters for stabilized cruise will be noted from Tech Log Page and sent to monitoring agency for cater for the absence of downloaded data.
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

77-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINES INDICATING

ATA 77

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

77-30-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINES OIL

ATA 79

79-30-1

OIL LEVEL Indication in Cockpit

NOT APPLICABLE

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

79-30-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ENGINES OIL

ATA 79

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

79-30-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ANNEXURE A

Acceptable Ballast Material

As ballast use of bags (made of glass fiber or Kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable.

ISS III R03

APPROVED BY DA **Signature valid** **–**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

ANN A 1



DHC-8-402

MINIMUM EQUIPMENT LIST

ANNEXURE A

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DA

Signature valid –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

ANN A 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ANNEXURE B*****Time Limited Dispatch****Scenario-1 With the Engine Monitoring Unit (EMU) Serviceable**

1 The EMU records the date and time of events so it is possible to know precisely when a particular fault code occurred.

2 Time counting for LTD (Long Term Dispatch) or STD shall be started at the moment the fault code occurred and rectification of the fault code can be scheduled accordingly.

3 Example:**NOTE: AMP mandates check for FADEC Faults at every 50 Hrs**

a A fault code is logged 30 flight hours after the last check for fault codes. Therefore, the fault has been present for 20 hours before being discovered.

b If the fault is STD, then there will be (150-20) 130 hours left to rectify it.

c If the fault is LTD, then there will be (500-20) 480 hours to left rectify it.

Scenario-2 Without the EMU

1 In this scenario, it is not known precisely when a particular fault code occurred.

2 It must be assumed that the fault occurred immediately following the last check for fault codes.

3 Example:**NOTE: AMP mandates check for FADEC Faults at every 50 Hrs**

a A fault code is found. The fault is assumed to have been present for 50 hours before being discovered.

b If the fault is STD, then there will be (150-50) 100 hours left to rectify it.

c If the fault is LTD, then there will be (500-50) 450 hours to rectify it.

Levels of TLD

There are four levels of TLD. These are:

a) Fully operational system:

A system is considered fully operational when no faults are annunciated

b) Long Term Dispatch

The control system is on a long term dispatch if the sum of the TLD risk associated with the annunciated faults is between 10 and 74.9.

c) Short Term Dispatch

The control system is on a short term dispatch, if the sum of the TLD risk associated with the annunciated faults is equal to 75 or more.

ISS III R00**APPROVED BY DA****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

Ann B 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ANNEXURE B*****d) No Dispatch**

FADEC will cause the POWERPLANT caption to come into view on the Engine Display. This message means that no more flights are allowed until at least some of the TLD faults present are corrected.

For multiple messages associated TLD risk factors are to be summed up obtain total risk factor. The TLD risk factors are tabulated below:

Time Limited Dispatch Faults and Risk Factors

Fault Codes	Description	TLD Risk
700	A/D Test Latched Failed (EEC Internal Fault)	32.3
708	EEPROM Read/Write Fault Latch Flag (EEC Internal Fault)	76.0
709	High Level Analog Signals Drift Latched Failed (EEC Internal Fault)	16.7
710	Low Level Analog Signals Latched Failed (EEC Internal Fault)	16.7
711	FADEC Cross-link Latched Failed (EEC Internal Fault)	76.0
716	NH Speed Sensing Intermittent Fault	16.2
717	NL Speed Sensing Intermittent Fault	10.0
718	NP Speed Sensing Intermittent Fault	16.2
719	Torque Sensing Intermittent Fault	16.2
720	Inlet Temp (T1.5) Sensing Intermittent Fault	16.6
723	PAMB Sensor Input Signal Intermittent Fault (EEC Internal Fault)	14.5
724	P3 Sensor Input Signal Intermittent Fault	10.0
725	P2.2 BOV Input Signal Intermittent Fault	22.7
726	PLA Input Signal Intermittent Fault	21.0
727	WF Sensor Input Signal Intermittent Fault	19.2
732	NH Speed Sensing Latched Failed	16.2
733	NL Speed Sensing Latched Failed	10.0
734	NPT Speed Sensing Latched Failed	16.2
735	Torque Shaft Deflection Sensing Latched Failed	16.2
736	Inlet Temp (T1.8) Sensor Input Latched Failed	16.6
739	PAMB Sensor Input Latched Failed (EEC Internal Fault)	14.5
740	P3 Sensor Input Latched Failed	10.0
741	P2.2 HBOV LVDT Input Latched Failed	22.7
742	PLA RVDT Input Latched Failed	21.0
743	FMU Metering Valve LVDT Latched Failed	19.2
759	AC Circuit Drift Correction Latched Failed (EEC Internal Fault)	29.7
760	AC Circuit Gain Correction Latched Failed (EEC Internal Fault)	29.7
776	P2.7 BOV Torque Motor Wraparound Latched Failed (EEC Internal Fault)	10.0
778	P2.2 BOV Crosscheck Latched Failed	29.7
779	P2.2 BOV Torque Motor Wraparound Latched Failed (EEC Internal Fault)	10.0
782	NH Crosscheck Latched Failed	16.2

ISS III R00**APPROVED BY DA****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

Ann B 2



DHC-8-402

MINIMUM EQUIPMENT LIST

ANNEXURE B

783	NL Crosscheck Latched Failed	10.0
784	NPT Crosscheck Annunciation Fail Flag	16.2
785	Overspeed Open Coil/LSS Short Latched Failed: Bit 6 of OPCLSSIND	10.0
786	Overspeed NH Below Idle Detect Latched Failed: Bit 6 of OSBIDIND	10.0
787	Overspeed High-side Overcurrent Latched Failed	10.0
788	P3 Drift Correction Latched Failed	10.0
789	P3 Excitation Circuit W/A Latched Failed	10.0
790	P3 Crosscheck Latched Failed	10.0
791	PAMB Drift Correction Circuit Latched Failed (EEC Internal Fault)	17.1
792	PAMB Crosscheck Annunciation Fail Flag (EEC Internal Fault)	17.1
793	PAMB Excitation Circuit W/A Latched Failed (EEC Internal Fault)	17.1
799	PLA Crosscheck Latched Failed	21.3
803	T1.5 Crosscheck Latched Failed	16.8
806	PAMB Temperature RTD Compensation Circuit Latched Failed (EEC Internal Fault)	17.1
810	WFMV Crosscheck Latched Failed	29.7
811	WF Torque Motor Wraparound Latched Failed (EEC Internal Fault)	10.0
815	Torque Motor Rail Input Latched Failed (EEC Internal Fault)	22.7
825	Torque Motor Command Null Wraparound Fault Indication	22.7
900	Permanent Magnet Alternator Voltage Failure	76.0
908	HP Wraparound Latched Failed (EEC Internal Fault)	10.0
912	P2.2 HBOV Valve Position Track Check Latched Failed	22.7
913	P2.2 HBOV Valve Wraparound Latched Failed	22.7
919	NH Probe Failed Open Circuit	16.2
921	NL Probe Failed Open Circuit	10.0
922	NPT/Q Probe Failed Open Circuit	16.2
923	Overspeed Solenoid Low-side Switch Failure	10.0
924	Overspeed Solenoid Open High-side Switch Failure	10.0
925	Overspeed Solenoid Shorted High-side Failure	10.0
928	P3 Sensor Reasonability Check Failure	10.0
934	Normal Engine Shutdown Failed	Note
935	WF Metering Valve Position Track Check Latched Failed	29.7
936	WF Wraparound Latched Failed	22.8
954	Minimum Pressure Shut-off Valve Seal Leak Maintenance Flag	Note
967	Torque Motor Rail Over current Confirmed Fault	22.7
976	Metering Valve Failed During Shutdown	Note
977	Channel to Channel Switchover Failed (EEC Internal Fault)	76.0
978	Pilot De-power Extended Period Fault (EEC Internal Fault)	22.7

NOTE:

The fault codes 934, 954 and 976 will cause the POWERPLANT caption to come into view on the Engine Display. These faults are related to a non-redundant fuel shut-off function. It is possible that they can prevent you from doing a fast engine shutdown.

ISS III R00

APPROVED BY DA

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

Ann B 3



DHC-8-402

MINIMUM EQUIPMENT LIST

ANNEXURE B

**INTENTIONALLY
LEFT
BLANK**

ISS III R00

APPROVED BY DA

Signature valid –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

Ann B 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****ANNEXURE C*****AIRCRAFT DETAILS**

SN	MODEL	REGISTRATION	MSN
1	DHC-8-402	VT-SUY	4339
2	DHC-8-402	VT-SUV	4340
3	DHC-8-402	VT-SUS	4346
4	DHC-8-402	VT-SUR	4342
5	DHC-8-402	VT-SUQ	4406
6	DHC-8-402	VT-SUP	4412
7	DHC-8-402	VT-SUO	4404
8	DHC-8-402	VT-SUM	4402
9	DHC-8-402	VT-SUL	4400
10	DHC-8-402	VT-SUK	4398
11	DHC-8-402	VT-SUJ	4396
12	DHC-8-402	VT-SUI	4395
13	DHC-8-402	VT-SUH	4389
14	DHC-8-402	VT-SUG	4387
15	DHC-8-402	VT-SUF	4382
16	DHC-8-402	VT-SUE	4379
17	DHC-8-402	VT-SUD	4378
18	DHC-8-402	VT-SUB	4374
19	DHC-8-402	VT-SQE	4591
20	DHC-8-402	VT-SQD	4589
21	DHC-8-402	VT-SQC	4586
22	DHC-8-402	VT-SQB	4584
23	DHC-8-402	VT-SQA	4583
24	DHC-8-402	VT-SJU	4336

ISS III R06**APPROVED BY DAW DELHI, DATED-**

ANN C.01

Signature valid



Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49



DHC-8-402

MINIMUM EQUIPMENT LIST

ANNEXURE C

**INTENTIONALLY
LEFT
BLANK**

ISS III R06

APPROVED BY DA

Signature valid –

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

ANN C.02