

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-1 Cockpit and Instrument Panel Lighting System****33-10-1-1**

Interval	Installed	Required	Procedure
C	1	1	NIL

Individual lights may be inoperative for night flight provided the remaining lights are:

- Sufficient to clearly illuminate all instruments, controls, and other devices for which it is provided,
- Positioned so that direct rays are shielded from flight crew member's eyes, and
- Lighting configuration and intensity is acceptable to the flight crew.

NOTE:

- Individual button/switch lights and/or annunciations/indications are excluded from this relief.
- Unaided operation (without NGVs) may be permitted with inoperative NGV supplemental light; cracked or missing filters.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Cockpit and Instrument Panel Lighting System in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard Cockpit and Instrument Panel Lighting System on Panel Lighting control panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-1 Cockpit and Instrument Panel Lighting System****33-10-1-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative for daylight operations.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Cockpit and Instrument Panel Lighting System in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Cockpit and Instrument Panel Lighting System on Panel Lighting control panel.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-2 Caution/Warning/Advisory Lights System**
DIM/BRT Function**33-10-2-1 Dimming Function**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Caution/Warning/Advisory Lights DIM function must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Perform caution/warning and advisory lights test using "TEST CAUT/ADVISORY" switch on the overhead console.
2. Confirm illumination of all caution warning and advisory lights, including flashing master caution and warning indicators.
3. Placard the glareshield with "Caution/Warning Lights/Advisory Lights Dim Mode INOP".
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIGHTS****ATA 33****33-10-2 Caution/Warning/Advisory Lights System**
DIM/BRT Function**33-10-2-2 Brighten Function**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative for day operations provided:

- Dimming function is considered inoperative,
- DIM/BRT switch is not operated, and
- DIM/BRT switch is placarded, "INOPERATIVE - DO NOT USE"

NOTE: Operation of the DIM/BRT switch to Dimming mode during dispatch will exclude the ability to Brighten the lights again until the aircraft is power cycled during ground operations.

Minimum Equipment List Procedures (MELP)**Placard**

- Inoperative Caution/Warning/Advisory Lights BRT function must be placarded in the flight compartment.
- Placarded the DIM/BRT switch on the passenger warning panel.

Operating Procedures

For the Caution/Warning/Advisory Lights system, flight crew are to be made aware that DIM function should not be operated during dispatch with the BRT function inoperative.

Maintenance Procedures

- Perform caution/warning and advisory lights test using "TEST CAUT/ADVISORY" switch on the overhead console.
- Confirm illumination of all caution warning and advisory lights, including flashing master caution and warning indicators.
- Placard the glareshield with "Caution/Warning Lights/Advisory Lights BRT Mode INOP".
- Placard the DIM/BRT switch with "INOPERATIVE - DO NOT USE".
- Make appropriate entry in the aircraft journey log.

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-3 Caution/Warning/Advisory Lights System****33-10-3-1 Caution/Warning Panel LEDs**

Interval	Installed	Required	Procedure
C	98	-	NIL

May be inoperative provided one half of each light is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Caution/Warning/Advisory Light bulb(s)/LED(s) in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Caution/Warning/Advisory Light bulb(s)/LED(s) in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-10-3 Caution/Warning/Advisory Lights System****33-10-3-2 Advisory Lights**

Interval	Installed	Required	Procedure
C	102	-	(O)

Individual bulb(s) /LED(s) may be inoperative for advisory lights with multiple light elements provided:

- Advisory lights are tested before each flight, and
- Luminescence and legibility of affected advisory light(s) is acceptable to the flight crew.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Caution/Warning/Advisory Light bulb(s)/LED(s) in the flight compartment.

Operating Procedures

- Perform advisory lights test at the bright (BRT) and dim (DIM) settings using “TEST CAUT/ADVSY” switch on the overhead console.
- Confirm illumination of all advisory lights.
- Verify that the luminescence and legibility of affected advisory light(s) is acceptable with remaining bulb(s) / LED(s).

Maintenance Procedures

- Placard inoperative Caution/Warning/Advisory Light bulb(s)/LED(s) in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1A**

Interval	Installed	Required	Procedure
C	44/50	-	(M)(O)

Passenger Seats, Flight Attendant Seats, or Lavatory from which a light is not readily legible shall not be occupied and must be blocked and placarded "DO NOT OCCUPY".

NOTE: Qty 50 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

Procedures are to be established and used to inform passengers when a lavatory is unavailable for use.

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

1. Block each seat in the passenger compartment from which an operative "No Smoking/Fasten Seat Belt" sign is not readily legible and placard affected seat(s) "DO NOT OCCUPY".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1B**

Interval	Installed	Required	Procedure
C	44/50	-	(O)

The affected Seats or Lavatory may be occupied provided:

- The crew Cabin Interphone System, Cabin Chime System, and Passenger Address System are operative, and
- Procedures are established and used to alert flight attendants and notify passengers when seat belts should be fastened and smoking prohibited.

NOTE: Qty 50 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

- Verify that the passenger address system operates normally as follows:
 - Ensure aircraft DC bus system is powered.
 - Ensure PA AMP Circuit Breaker (B8) on L ESSENTIAL Bus is closed.
 - PUSH release lever and remove attendant handset from cradle assembly. Select PA system switchlight at attendant control unit (ACU), press PUSH-TO-TALK switch on the handset and make announcement over the Passenger Address (PA) system.
 - Deselect or terminate PA mode by pressing the PA switch at the control unit and replace handset to cradle assembly.
 - From the cockpit, initiate an attendant call and verify cabin chime sound and normal voice communication is present.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-20-1 No Smoking / Fasten Seat Belt Lights

33-20-1B

2. Captain will inform the Flight Attendant while switching on/off Fasten Seat Belt/No Smoking lights and Flight Attendant has to make an announcement. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.8.2 Sub Point - 2

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

■■■■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1C**

Interval	Installed	Required	Procedure
A	44/50	-	(O)

May be inoperative for one flight day for non-passenger carrying operations provided:

- a) Crew members are the only occupants of the aircraft, and
- b) Alternate procedures are established and used.

NOTE: Qty 50 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

Alternate procedures are established and used in accordance with CAR regulations.

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1-1 Aural Tone Function**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

Captain will inform the Flight Attendant while switching on/off Fasten Seat Belt/No Smoking lights and Flight Attendant has to make an announcement. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.8.2 Sub Point – 2.

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-1 No Smoking / Fasten Seat Belt Lights****33-20-1-2 Automatic Function**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided alternate procedures are established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Information Signs "No Smoking / Fasten Seat Belt" must be placarded in the flight and passenger compartments.

Operating Procedures

1. Select the NO SMOKING / FASTEN BELTS switch on the cockpit overhead console and observe that the passenger "No Smoking / Fasten Seat Belt" signs illuminate.
2. Use Manual control of No Smoking/ Fasten Seat Belt lights with Landing Gear Down.

Maintenance Procedures

Placard Passenger Notice system NO SMOKING / FASTEN BELTS switches on PASSENGER INFORMATION SIGNS, CAUTION / ADVISORY LIGHTS and EMERGENCY LIGHT SWITCHES panel and Flight Attendants LIGHTING panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-1. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-2 Cabin Lighting System****33-20-2-1 Sidewall Lighting****33-20-2-1-3 NextGen Interior (Includes single class, increased capacity, and cargo/combi configuration)**

Interval	Installed	Required	Procedure
C	27	-	(M)

Up to 25% of total length of sidewall downwash lights may be inoperative provided:

- No two adjacent or opposite LED strips are inoperative, and
- Cabin lighting is sufficient for flight attendants to perform required duties.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- 25% of the lighting for the length of the cabin may be inoperative.
- Any number of LEDs on a strip that are inoperative renders the strip to be inoperative. In the case of LED lighting, a "Strip" is considered to be the length of the overhead bin under which the lighting is installed.
- Where LED strips are inoperative, interchange or replacement with serviceable strips may be required.
- Inoperative Cabin Lights must be placarded at the flight attendant's LIGHTING panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-20-2	<u>Cabin Lighting System</u>
33-20-2-1	Sidewall Lighting
33-20-2-1-4	Dual Class NextGen Interior (3 Abreast)

NOT APPLICABLE

— — — —

33-20-2	<u>Cabin Lighting System</u>
33-20-2-2	Ceiling Lighting
33-20-2-2-1	Classic Interior

NOT APPLICABLE

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-2 Cabin Lighting System****33-20-2-2 Ceiling Lighting****33-20-2-2-3 NextGen Interior (Includes single class, increased capacity, and cargo/combi configurations)**

Interval	Installed	Required	Procedure
C	27	-	(M)

Up to 25% of total length of Ceiling upwash lights may be inoperative provided:

- No two adjacent or opposite LED strips are inoperative, and
- Cabin lighting is sufficient for flight attendants to perform required duties.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- 25% of the lighting for the length of the cabin may be inoperative.
- Any number of LEDs on a strip that are inoperative renders the strip to be inoperative. In the case of LED lighting, a "Strip" is considered to be the length of the overhead bin under which the lighting is installed.
- Where LED strips are inoperative, interchange or replacement with serviceable strips may be required.
- Inoperative Cabin Lights must be placarded at the flight attendant's LIGHTING panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-2. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-3 Lavatory Compartment (RETURN TO SEAT
and LAVATORY OCCUPIED Lights/Sign)****33-20-3-1 RETURN TO SEAT Lights/Signs****33-20-3-1-1**

Interval	Installed	Required	Procedure
C	1	0	(O)

The lavatory may be occupied provided:

- Passenger Address System is operating normally and can be clearly heard in the lavatory compartment during flight, and
- Alternate procedures are established and used to notify passengers when return to seat is required.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative RETURN TO SEAT light must be placarded.

Operating Procedures

Verify that passenger address system operates normally as follows:

- Ensure aircraft DC bus system is powered.
- Ensure PA AMP Circuit Breaker (B8) on L ESSENTIAL Bus is closed.
- PUSH release lever and remove attendant handset from cradle assembly. Select PA system switch light at attendant control unit (ACU), press PUSH-TO-TALK switch on the handset and make announcement over the Passenger Address (PA) system.
- Verify announcement can be clearly heard in the affected lavatory.
- Deselect or terminate PA mode by pressing the PA switch at the control unit, and replace handset to cradle assembly.

(OR)

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**33-20-3 Lavatory Compartment (RETURN TO SEAT
and LAVATORY OCCUPIED Lights/Sign)**

33-20-3-1 RETURN TO SEAT Lights/Signs

33-20-3-1-1

Normal and emergency means of communication between forward cabin crew i.e. CCIC/L1 and passenger in lavatory is by the forward crew knocking on the door of the lavatory. CCIC will be briefed about the lavatory speaker inoperative by PIC. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.11.6.

Maintenance Procedures

1. Placard appropriate inoperative lights.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-3 Lavatory Compartment (RETURN TO SEAT
and LAVATORY OCCUPIED Lights/Sign)****33-20-3-1 RETURN TO SEAT Lights/Signs****33-20-3-1-2**

Interval	Installed	Required	Procedure
C	1	0	(M)

Lavatory compartment shall not be occupied and must be blocked and placarded - "DO NOT OCCUPY"

Minimum Equipment List Procedures (MELP)**Placard**

1. Inoperative RETURN TO SEAT light must be placarded.
2. Placard the appropriate lavatory door, "DO NOT OCCUPY".
3. Placard the flight compartment that affected lavatory with inoperative RTS light is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative RETURN TO SEAT light.
2. Placard lavatory door "DO NOT OCCUPY".
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-3. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-3 Lavatory Compartment (RETURN TO SEAT
and LAVATORY OCCUPIED Lights/Sign)****33-20-3-2 LAVATORY OCCUPIED Lights/Signs**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative LAVATORY OCCUPIED lights must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Placard appropriate inoperative lights.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-20-4 Accent Lights (Spotlights) NextGen Interior**

Interval	Installed	Required	Procedure
D	30	0	NIL

May be inoperative.

NOTE: This relief is not intended for Emergency Flood Lights within the Accent Light Assemblies.

Minimum Equipment List Procedures (MELP)**Placard**

Refer to Figure 33-1
None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-4. 1



DHC-8-402


MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

33-20-4

Accent Lights (Spotlights) NextGen Interior

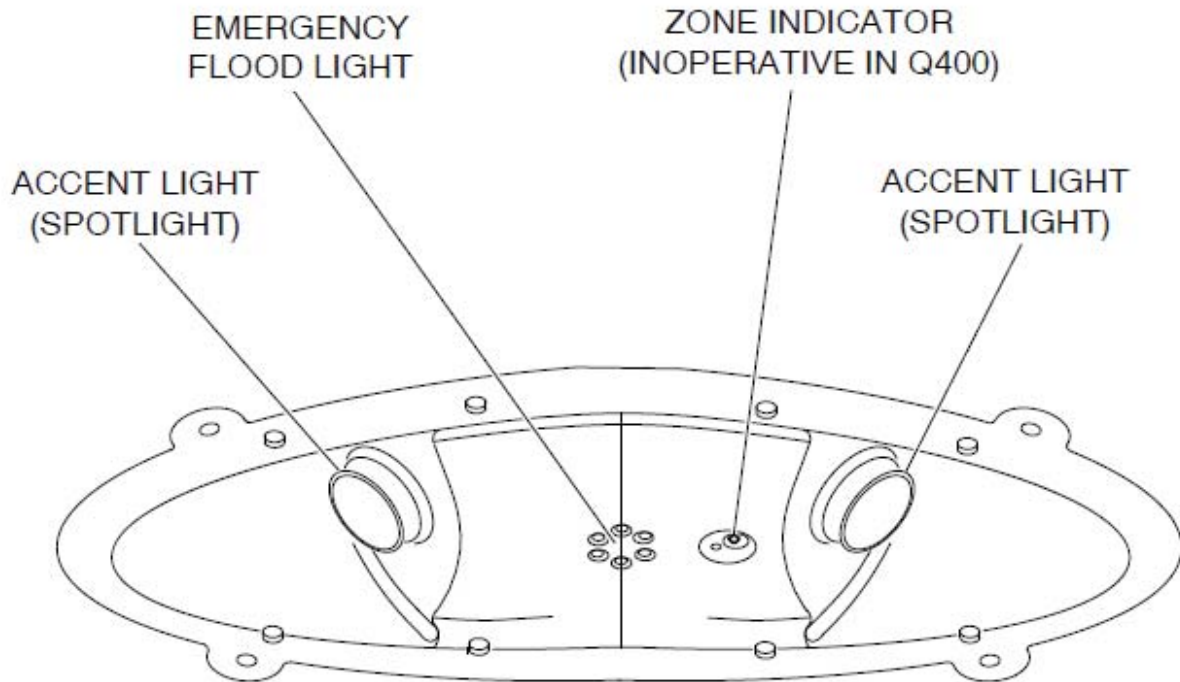

**NEXT GEN ACCENT LIGHTING AND
EMERGENCY FLOODLIGHT HOUSING ASSEMBLY**

Figure 33-1



ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-25-1 Lavatory Light****33-25-1-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

Full illumination mode may be inoperative provided the dimmed mode is functional at all times.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-25-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-25-1 Lavatory Light****33-25-1-2**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided lavatory door is locked closed and placarded, "INOPERATIVE - DO NOT ENTER".

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
2. Placard the flight compartment indicating lavatory is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the flight compartment indicating lavatory is inoperative.
2. Lock the lavatory door by placing a pen or other similar object in the hole in the latch and sliding it to the locked position.
3. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-25-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-1 Aft Baggage Compartment Ceiling Lights****33-30-1-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided alternate lighting is available.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Compartment Lights must be placarded in the flight compartment and aft baggage compartment door.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative BAGGAGE COMPT lighting in the flight compartment and the aft baggage compartment door.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-1 Aft Baggage Compartment Ceiling Lights****33-30-1-2**

Interval	Installed	Required	Procedure
D	2	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Compartment Lights must be placarded in the flight compartment and aft baggage compartment door.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative BAGGAGE COMPT lighting in the flight compartment and the aft baggage compartment door.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-2 Forward Baggage Compartment Light****33-30-2-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided alternate lighting is available.

NOTE: Only applicable if Forward Baggage Compartment is installed.

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard on the inboard side of the Internal Baggage Door, "Forward Baggage Compartment Light inoperative".
2. Placard on the outboard side of the Forward Baggage Door, "Forward Baggage Compartment Light inoperative".

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Forward Baggage Compartment Light on the internal/external doors of the forward baggage compartment, and in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-2 Forward Baggage Compartment Light****33-30-2-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative for day operations.

NOTE: Only applicable if Forward Baggage Compartment is installed.

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard on the inboard side of the Internal Baggage Door, "Forward Baggage Compartment Light inoperative".
2. Placard on the outboard side of the Forward Baggage Door, "Forward Baggage Compartment Light inoperative".

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Forward Baggage Compartment Light on the internal/external doors of the forward baggage compartment, and in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-30-3 Aft Service Light**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative provided the light is deactivated.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

1. Open and clip the Right Essential Bus circuit breaker "GND SERVICE LIGHT" on the Right DC Circuit Breaker Panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-30-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-1 Position Lights****33-40-1-1**

Interval	Installed	Required	Procedure
C	6	3	NIL

One bulb at each position (wing tip and aft) may be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Position Lights in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Position Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/B "POSITION LIGHTS" on RIGHT ESS 28VDC BUS located on Right C/B Panel for daylight operations.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-1 Position Lights****33-40-1-2**

Interval	Installed	Required	Procedure
C	6	0	NIL

May be inoperative for daylight operations.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Position Lights in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Position Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/B "POSITION LIGHTS" on RIGHT ESS 28VDC BUS located on Right C/B Panel for daylight operations.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIGHTS****ATA 33****33-40-2 A/COL WHITE Lights****33-40-2-1**

Interval	Installed	Required	Procedure
C	4	2	(M)

At most one bulb at each position (above bullet fairing and underside center fuselage) may be inoperative provided operative bulbs are selected for operation.

NOTE: The A/COL switch must be operated as if the lights were operating normally.

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard inoperative A/COL WHITE Lights bulbs/lamps near the toggle switch in the aft fuselage equipment bay.
2. Placard inoperative A/COL WHITE lights bulbs/lamps in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. To switch from inoperative bulb/lamp to operative bulb/lamp, operation of selector switches mounted on the Anti-Collision Light Selector Panel located in the aft fuselage equipment bay is required. The switches are located on the Right side, forward of the access door, within the aft fuselage equipment bay.
2. Toggle switch to operative bulb/lamp (PRI/SEC) for the applicable housing assemblies (UPPER/LOWER).
3. Placard near the A/COL toggle switch located in the aft fuselage equipment bay which light bulbs/lamps are inoperative.
4. Placard inoperative A/COL WHITE Lights bulbs/lamp in the flight compartment.
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-2 A/COL WHITE Lights****33-40-2-2**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative for daylight operations.

NOTE: The A/COL switch must be operated as if the lights were operating normally.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative A/COL WHITE Lights on EXTERIOR LIGHTS control panel in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard A/COL WHITE Lights on EXTERIOR LIGHTS control panel in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-3 Logo Lights**

Interval	Installed	Required	Procedure
D	2	0	NIL

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative Logo Lights in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Logo Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-4 A/COL RED Light (Red Recognition Light)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided adequate precautions are taken to clear the area prior to engine start and while engines are running.

NOTE: The A/COL Light switch must be operated as if the light was operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative A/COL RED Light (Red Recognition Light) must be placarded in the flight compartment.

Operating Procedures

1. Ensure the area around the aircraft is clear of personnel prior to engine start and during ground engine running.
2. Operate the Anti-Collision Lights switch as if the light was operating normally.

Maintenance Procedures

1. Placard A/COL RED Light (red) Switch on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-5 Boarding Lights****33-40-5-1 Passenger Configuration****33-40-5-1-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided Cabin Overhead Lighting or alternate means is used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Boarding Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard BOARDING LIGHT switch in the passenger compartment at the flight attendant's PA panel located adjacent to the airstair door.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-5. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-6 Passenger Airstair Door Lights****33-40-6-1 Passenger Configuration****33-40-6-1-1**

Interval	Installed	Required	Procedure
C	4	2	NIL

May be inoperative provided they are not adjacent.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Airstair Door Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative AIRSTAIR DOOR lighting switch on the flight attendant's LIGHTING panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-6 Passenger Airstair Door Lights****33-40-6-1 Passenger Configuration****33-40-6-1-2**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative provided acceptable alternate lighting is used to board and deplane passengers.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Airstair Door Lights must be placarded in the passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative AIRSTAIR DOOR lighting switch on the flight attendant's LIGHTING panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-6. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-7 Landing Lights****33-40-7-1**

Interval	Installed	Required	Procedure
C	4	2	NIL

One inboard and/or one outboard light may be inoperative for night operations provided steep approach landings are not conducted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Landing Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Landing Lights in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-7. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-7 Landing Lights****33-40-7-2**

Interval	Installed	Required	Procedure
D	4	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Landing Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Landing Lights in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-7. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-8 Taxi Light****33-40-8-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided Landing Lights are operative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Taxi Light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Taxi Light in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/B “EXT LIGHTS – TAXI PWR” on MAIN 28VDC Bus located on Left DC Circuit Breaker panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-8. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-8 Taxi Light****33-40-8-2**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Taxi Light must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Taxi Light in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/B “EXT LIGHTS - TAXI PWR” on MAIN 28VDC Bus located on Left DC Circuit Breaker panel.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-8. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-9 WING INSP Lights****33-40-9-1**

Interval	Installed	Required	Procedure
A	4	2	NIL

One or more may be inoperative for three flight days provided:

- At least one wing inspection light is operative per side, and
- A portable lamp/light of adequate capacity for wing inspection is available for night operations in icing conditions.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative WING INSP Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard WING INSP Lights on EXTERIOR LIGHTS control panel.
- Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/Bs "L WING INSP LTS" and/or "R WING INSP LTS" on SEC 28VDC Bus located on Left and Right DC Circuit Breaker panels respectively. Only applicable for daylight operations or flights not conducted in known or forecast icing conditions.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-9. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-9 WING INSP Lights****33-40-9-2**

Interval	Installed	Required	Procedure
C	4	0	NIL

One or more may be inoperative provided the flight is not conducted in known or forecasted icing conditions at night.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative WING INSP Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard WING INSP Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/Bs "L WING INSP LTS" and/or "R WING INSP LTS" on SEC 28VDC Bus located on Left and Right DC Circuit Breaker panels respectively. Only applicable for daylight operations or flights not conducted in known or forecast icing conditions.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-9. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-40-9 WING INSP Lights****33-40-9-3**

Interval	Installed	Required	Procedure
C	4	0	NIL

May be inoperative for day operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative WING INSP Lights must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard WING INSP Lights on EXTERIOR LIGHTS control panel.
2. Make appropriate entry in the aircraft journey log.

NOTE: If necessary, pull and collar C/Bs "L WING INSP LTS" and/or "R WING INSP LTS" on SEC 28VDC Bus located on Left and Right DC Circuit Breaker panels respectively. Only applicable for daylight operations or flights not conducted in known or forecast icing conditions.

— — — —

ISS III R01**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-40-9. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-1 Exterior Emergency Lighting System****33-50-1-1**

Interval	Installed	Required	Procedure
A	1	0	(O)

May be inoperative for one flight day provided:

- Aircraft crew are the only occupants of the aircraft, and
- Alternate procedures are established and used.

NOTE: The operator's MEL must state the maximum number of aircraft crew permitted.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Exterior Emergency Lighting System must be placarded in the flight compartment.

Operating Procedures

The PIC to confirm from the SCC /Engineering that the Flashlights used for night evacuation are functional. (Ref SEP Manual, Ch5, para 5.26).

Maintenance Procedures

- Placard Exterior Emergency Lighting System EMER LIGHTS switch on Advisory light panel.
- Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-1 Exterior Emergency Lighting System****33-50-1-2**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative for daylight operations.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Exterior Emergency Lighting System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard Exterior Emergency Lighting System EMER LIGHTS switch on Advisory light panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-2 Interior Electrical Emergency Lighting System
(Relief limited to installations defined by
Bombardier AEROC 84.6.E.1)****33-50-2-2 Single Class, Increased Capacity and Cargo/Combi
NextGen Interiors****33-50-2-2A Ceiling Emergency Flood Lights**

Interval	Installed	Required	Procedure
C	7	-	NIL

Individual light units may be inoperative provided:

- No two adjacent ceiling emergency flood lights are inoperative, and
- Floodlight at aircraft fuselage station X=335.31(At Seat Row No. 10) is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Refer to Figure 33-2

Inoperative Interior Electrical Emergency Lighting System must be placarded in the flight compartment and on the forward flight attendant's panel.

Operating Procedures

None required.

Maintenance Procedures

- Inoperative interior Electrical Emergency Lighting System must to be placarded in the flight compartment and on the forward flight attendant's panel.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-2 Interior Electrical Emergency Lighting System
(Relief limited to installations defined by
Bombardier AEROC 84.6.E.1)****33-50-2-2 Single Class, Increased Capacity and Cargo/Combi
NextGen Interiors****33-50-2-2B Exit Identifiers**

Interval	Installed	Required	Procedure
C	4	4	NIL

Each exit identifier may have 40% of its internal lights inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Refer to Figure 33-2

Inoperative Interior Electrical Emergency Lighting System must be placarded in the flight compartment and on the forward flight attendant's panel.

Operating Procedures

None required.

Maintenance Procedures

3. Inoperative interior Electrical Emergency Lighting System must to be placarded in the flight compartment and on the forward flight attendant's panel.
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 3




DHC-8-402

MINIMUM EQUIPMENT LIST

LIGHTS

ATA 33

**33-50-2 Interior Electrical Emergency Lighting System
(Relief limited to installations defined by
Bombardier AEROC 84.6.E.1)**

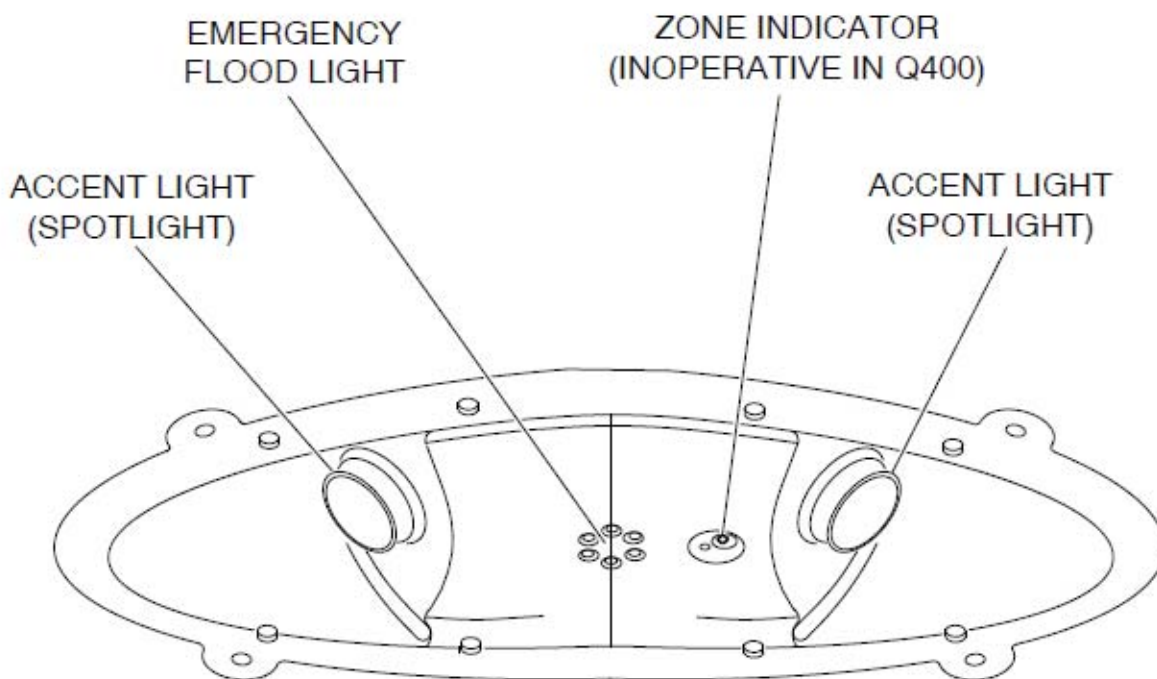

**NEXT GEN ACCENT LIGHTING AND
EMERGENCY FLOODLIGHT HOUSING ASSEMBLY**

Figure 33-2

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-2. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST****LIGHTS****ATA 33****33-50-3 Photoluminescent Floor Proximity Emergency
Escape Path Lighting (Relief limited to
installations defined by Bombardier AEROC
84.8.AC.10)****33-50-3-1**

Interval	Installed	Required	Procedure
C	1	1	NIL

Four meters of lighting strip may be unserviceable provided:

- Any unserviceable section does not exceed 0.2 meters (8 in.) of continuous length, and
- The distance between two adjacent unserviceable sections must be not less than 1.5 meters (60 in.) on the same strip.

NOTE: As defined by Bombardier design AEROC 84.8.AC.10, Section 11.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the Photoluminescent Floor Proximity Emergency Escape Path Lighting strip is unserviceable.

Operating Procedures

None required.

Maintenance Procedures

- Placard in the flight compartment specific Photoluminescent Floor Proximity Emergency Escape Path Lighting strips that are unserviceable.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-4 Interior/Exterior EMERGENCY LIGHTING
Switch (Passenger Compartment)****33-50-4-1 Switch Cover/Guard**

Interval	Installed	Required	Procedure
C	1	0	(O)

Switch cover/guard may be inoperative or missing provided the Emergency Lighting System is monitored for inadvertent switch operation.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative EMERGENCY LIGHTING switch cover guard and/or NORMAL/ON indication lights located over the flight attendant's handset in the passenger cabin.

Operating Procedures

Inform SCC during the preflight briefing of the missing guard and advise her to stay cautious of inadvertent selection of Emergency Lights.

Maintenance Procedures

1. Inoperative EMERGENCY LIGHTING switch cover/guard and/or NORMAL/ON indication lights must be placarded on the forward flight attendant's panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-4 Interior/Exterior EMERGENCY LIGHTING
Switch (Passenger Compartment)****33-50-4-2 NORMAL/ON Indication Lights**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative provided the EMERGENCY LIGHTING Switch is verified operative prior to first flight each day.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative EMERGENCY LIGHTING switch cover guard and/or NORMAL/ON indication lights located over the flight attendant's handset in the passenger cabin.

Operating Procedures

1. Prior to first flight each day, verify the EMERGENCY LIGHTING switch located over the flight attendant's handset in the passenger cabin is operational.
2. To verify the operation of the Emergency Lighting switch in the passenger cabin, carry out the following steps:
 - a) Set the Emergency Lighting knob in the flight compartment to the "ARMED" position.
 - b) Alternate the pressing of the Emergency Lighting switch in the passenger cabin between NORMAL and ON. The Emergency Lighting should alternate between OFF and ON respectively.
 - c) Depress the Emergency Light switch one more time if necessary, to turn OFF the Emergency Lights to complete the verification.

NOTE:

1. This operational check is to verify the switch in the passenger cabin is still operational for whose indication lights may be inoperative. This procedure is not for the EMERGENCY switch in the flight deck which must be fully operational.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****LIGHTS******ATA 33*****33-50-4 Interior/Exterior EMERGENCY LIGHTING
Switch (Passenger Compartment)****33-50-4-2 NORMAL/ON Indication Lights**

2. Both the ON or NORMAL indication lights each have two light emitting elements within the switch. The MMEL associated with this system treats degradation (1 of 2 elements inoperative) as failure of the associated indication.
3. Keeping the Emergency Lighting System active (ON) for a prolonged period will drain the Emergency Lighting System Battery Packs regardless of availability of 28 VDC Power on the Left Essential Bus.

Maintenance Procedures

1. Inoperative EMERGENCY LIGHTING switch cover/guard and/or NORMAL/ON indication lights must be placarded on the forward flight attendant's panel.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

33-50-4. 3