

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-1 Door Seal System Charging Valve**

Interval	Installed	Required	Procedure
C	1	0	(M#)

May be inoperative provided the valve is secured in the closed position.

Minimum Equipment List Procedures (MELP)**Placard**

Placard the inoperative charging valve in the wardrobe or at the adjacent supporting frame.

Operating Procedures

None required.

Maintenance Procedures

1. For Pre-Mod 4-153583
 - a) Remove the inner liner of the wardrobe.
 - b) Install a steel cap on the inoperative charging valve.
 - c) Install the inner liner.
 - d) Placard the inoperative charging valve in the wardrobe.
 - e) Make appropriate entry in the aircraft journey log.
2. For Post-Mod 4-153583
 - a) Remove floor panel 131CZ.
 - b) Locate the charging valve beneath the floor.
 - c) Install a steel cap on the inoperative charging valve.
 - d) Placard the inoperative charging valve on the adjacent supporting frame.
 - e) Replace the floor panel.
 - f) Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-2 Door Seal Drain Valve****52-10-2-1**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be failed in the closed position.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the door seal drain valve is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Placard in the flight compartment that the Door Seal Drain Valve is inoperative.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-2 Door Seal Drain Valve****52-10-2-2**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be failed in the open position provided flight is conducted in an unpressurized configuration, at or below 10,000 feet MSL in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT-BLEED ON.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the door seal drain valve is inoperative.

Operating Procedures

Carry out unpressurized flight in accordance with AFM Supplement 113, UNPRESSURIZED FLIGHT - BLEED ON.

Maintenance Procedures

1. Placard in the flight compartment that the Door Seal Drain Valve is inoperative.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 0 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-2 Door Seal Drain Valve****52-10-2-3**

Interval	Installed	Required	Procedure
C	1	0	(M#)

May be failed in the open position provided Door Seal Pressurization system can be pressurized.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the door seal drain valve is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Gain access to the door seal drain valve and reservoir tank.
2. Remove the drain line connecting the reservoir tank outlet to the drain valve inlet. See FIGURE 52-1.
3. Install suitable aluminum plug and caps (similar specification as AN806-4D or AN929-4W) on the reservoir tank outlet and drain valve inlet. Torque caps to aircraft maintenance manual specifications.
4. Placard in the flight compartment that the door seal drain valve is inoperative.
5. Make appropriate entry on the aircraft journey log.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-2. 3



DHC-8-402


MINIMUM EQUIPMENT LIST

DOORS

ATA 52


52-10-2 Door Seal Drain Valve

52-10-2-3

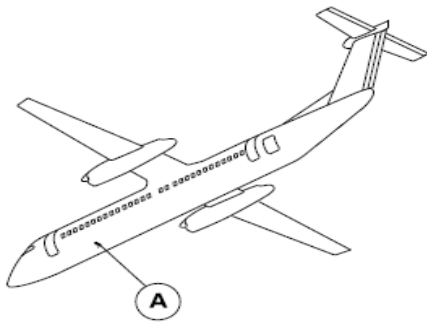

LEGEND

- 1. Reservoir tank.
- 2. Door seal line.
- 3. Drain line.
- 4. Drain valve.

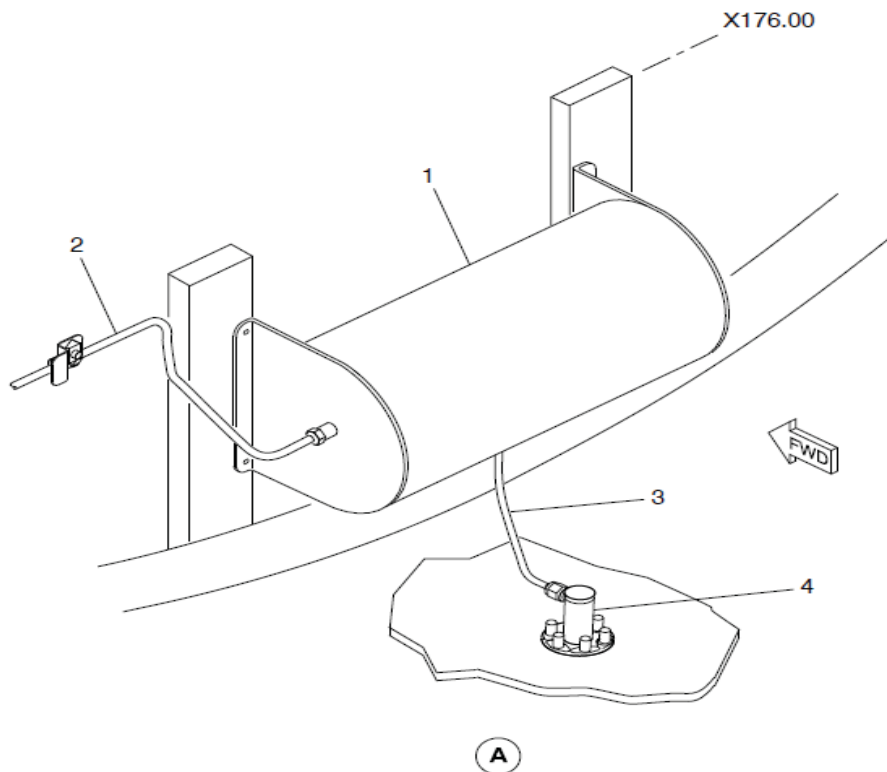

DOOR SEAL DRAIN VALVE

Figure 52-1

brbu74a01.dwg, gv, nov05/2015

ISS III R00

APPROVED BY DAW DELHI, DA700 -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-3 Internal Baggage Door****52-10-3-1 "INTERNAL BAGG DOOR" Caution Light**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- Access to the forward baggage compartment through the internal baggage door is considered inoperative,
- Internal Baggage Door is secured closed by an acceptable means or method, and
- Internal Baggage Door is placarded "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

NOTE: Only applicable for aircraft without Flight Deck Door Remote Access System installed, and with Forward Baggage Compartment installed.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative "INTERNAL BAGG DOOR" caution light in the flight compartment.
- Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

None required.

Maintenance Procedures

NOTE: When carrying out the procedures associated with closing the internal baggage door from within the forward baggage compartment, have procedures in place to prevent closing of the forward baggage compartment door while baggage compartment is occupied.

- Before first dispatch, close and secure the Internal Baggage Door to the Forward Baggage Compartment by an acceptable means or method.
- Enter the Forward Baggage Compartment through the external door and push the internal baggage door firmly and check that it does not open.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-3 Internal Baggage Door

52-10-3-1 “INTERNAL BAGG DOOR” Caution Light

3. Placard the internal baggage door on the inboard side, “INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN”.
4. Placard the glareshield with “INTERNAL BAGG DOOR Caution Light INOP”.
5. If the “INTERNAL BAGG DOOR” caution light has failed in the illuminated condition, at the Caution and Warning Panel, remove the front lens module containing the INTERNAL BAGG DOOR legend, then remove the respective 4 LEDs. Re-install the lens module.
6. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-3 Internal Baggage Door****52-10-3-2 Door Handle****52-10-3-2A**

Interval	Installed	Required	Procedure
C	1	0	(M)

If door cannot be unlatched, may be inoperative provided:

- Access to the forward baggage compartment through the internal baggage door is considered inoperative,
- Internal Baggage Door is secured closed by an acceptable means or method, and
- Internal Baggage Door is placarded "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

NOTE: Only applicable if Forward Baggage Compartment installed.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative "INTERNAL BAGG DOOR" caution light in the flight compartment.
- Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

None required.

Maintenance Procedures

NOTE: When carrying out the procedures associated with closing the internal baggage door from within the forward baggage compartment, have procedures in place to prevent closing of the forward baggage compartment door while baggage compartment is occupied.

- Before first dispatch, enter the forward baggage compartment through the external door. Push the internal baggage door firmly and check that it does not open.
- Placard the inoperative internal door in the flight compartment.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-3 Internal Baggage Door

52-10-3-2 Door Handle

52-10-3-2A

3. Placard the internal door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
4. Make appropriate entry in the aircraft journey log.



ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-3 Internal Baggage Door****52-10-3-2 Door Handle****52-10-3-2B**

Interval	Installed	Required	Procedure
C	1	0	(M#)

If door cannot be latched, may be inoperative provided:

- Access to the forward baggage compartment through the internal baggage door is considered inoperative,
- Internal Baggage Door is secured closed by an acceptable means or method, and
- Internal Baggage Door is placarded "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

NOTE: Only applicable if Forward Baggage Compartment installed.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative "INTERNAL BAGG DOOR" caution light in the flight compartment.
- Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

None required.

Maintenance Procedures

NOTE: When carrying out the procedures associated with closing the internal baggage door from within the forward baggage compartment, have procedures in place to prevent closing of the forward baggage compartment door while baggage compartment is occupied.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-3 Internal Baggage Door****52-10-3-2 Door Handle****52-10-3-2B****Aircraft Serial Number (ASN) Applicability:**

- (a) ASN prior to 4042 without Modsums 4-900792 or 4-900793 installed, and
(b) Excludes ASN 4001 - 4004, 4007, 4011, 4016 and 4017.

1. Open the latch cover(s) of the inoperative latch(es) on the baggage compartment side of the internal door.
2. If one latch is inoperative, close and latch the internal door from the cabin. If both latches are inoperative, enter the forward baggage compartment through the external door and pull the internal door closed. An assistant may be required to push and hold the internal door from the cabin.
3. From within the baggage compartment, push each exposed latch pin and check that it is securely latched. If a latch pin is not secure, dispatch is not permitted.
4. Close the latch cover(s).
5. Placard the inoperative Internal Baggage Door Latch System in the flight compartment.
6. Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
7. Make appropriate entry in the aircraft journey log.

Aircraft Serial Number (ASN) Applicability:

- (a) ASN 4001 - 4004, 4007, 4011, 4016, 4017,
(b) ASN prior to 4042 with Modsums 4-900792 or 4-900793 installed, and
(c) ASN 4042 and above.

1. Open the bellcrank cover (round panel near the middle) on the baggage compartment side of the internal door.
2. Enter the forward baggage compartment through the external door and pull the internal door closed. An assistant may be required to push and hold the internal door from the cabin.
3. From within the forward baggage compartment, turn the bellcrank or move the pushrods to drive the latch pins. Check that all three pins are securely latched. If a latch pin is not secure, dispatch is not permitted.
4. Close bellcrank cover.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-3 Internal Baggage Door

52-10-3-2 Door Handle

52-10-3-2B

5. Placard the inoperative Internal Baggage Door Latch System in the flight compartment.
6. Placard the Internal Baggage Door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
7. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-3. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-5 FUSELAGE DOORS Warning System****52-10-5-1 Airstair Door, Forward Baggage Door, Aft Passenger Door and Aft Service Door Proximity Sensors****52-10-5-1B Post-Mod 4-126420 or 4-126432**

Interval	Installed	Required	Procedure
A	8	7	(M)(O)

May be inoperative for one door provided:

- The affected door is physically verified closed and locked prior to each flight,
- The warning light is verified to re-trigger flashing upon subsequent door opening, and
- Repairs are made within one flight day.

NOTE: An inoperative Passenger Airstair door warning system sensor will render AUTO Mode of the Cabin Pressure Control System inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative Door Proximity Sensor in the flight compartment.
- Placard Auto Mode inoperative, if the un-vented door proximity sensor is inoperative.

Operating Procedures

- Physically confirm that the affected door is closed and locked prior to each flight:
 - For Airstair Door, check that the internal handle is fully down or that the external handle is fully up,
 - For Aft Entry Door, Aft Service Door or Forward Baggage Door (if installed), check that the external handles are flush. Push the vent panel inward and check that it does not open.

NOTE: For the Cargo/Combi configuration, the Aft Entry Door and Aft Service Door are disabled and permanently blocked. Instead two (2) type III Emergency Exit Doors, are added at Station X=479.7.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-5 FUSELAGE DOORS Warning System****52-10-5-1 Airstair Door, Forward Baggage Door, Aft Passenger Door and Aft Service Door Proximity Sensors****52-10-5-1B Post-Mod 4-126420 or 4-126432**

2. Prior to engine start on the ground, close all doors and press the Master WARNING switchlight. Check that the FUSELAGE DOORS warning light stops flashing and remains steadily illuminated.
3. On the ESID control panel, set MFD1 or MFD2 to SYS and select the DOORS page. Check that the five (four, if forward baggage door not installed) doors not checked in Step 1 are indicating closed and locked.
4. If the FUSELAGE DOORS warning light still flashes on the ground, repair inoperative door proximity sensor systems.
5. If the FUSELAGE DOORS warning light flashes in flight, flight must be conducted in accordance with the AFM.
6. In the event the inoperative proximity sensor is rendering the AUTO Mode inoperative, Cabin Pressure Control will be performed in MAN Mode, and, AUTO Mode shall not be selected in-flight, as this action will cause rapid loss of cabin pressure.

Maintenance Procedures

1. On the ESID control panel, set MFD1 or MFD2 to SYS and select the DOORS page. Determine which proximity sensor or associated wiring is causing the FUSELAGE DOORS warning.
2. For intermittent indications caused by a faulty proximity sensor, deactivate the sensor by either disconnecting or removing the sensor. Stow the sensor and its wire in a manner that will not impede door operation. Alternatively, the sensor target can be disconnected and removed as opposed to the sensor. removal/disconnection of either sensor or sensor target will result in the sensor being considered inoperative in the failed "Open" position.
3. Verify that the affected door is actually in the closed and locked condition:
 - a) For Airstair Door, check that the internal handle is fully down or that the external handle is fully up,
 - b) For Aft Entry Door, Aft Service Door or Forward Baggage Door (if installed), check that the external handles are flush. Push the vent panel inward and check that it does not open.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-5 FUSELAGE DOORS Warning System

**52-10-5-1 Airstair Door, Forward Baggage Door, Aft Passenger Door
and Aft Service Door Proximity Sensors**

52-10-5-1B Post-Mod 4-126420 or 4-126432

NOTE: For the Cargo/Combi configuration, the Aft Entry Door and Aft Service Door are disabled and permanently blocked. Instead two (2) type III Emergency Exit Doors, are added at Station X=479.7.

4. With FUSELAGE DOORS warning light steadily illuminated (by pushing the Master WARNING switchlight if necessary), unlock or open a door not already unlocked or open, and observe that the FUSELAGE DOORS warning light re-triggers flashing.
5. Placard inoperative door proximity sensor in the flight compartment.
6. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST****DOORS****ATA 52****52-10-5 FUSELAGE DOORS Warning System**

52-10-5-2 Airstair Door, Aft Passenger Door and Aft Service Door Proximity Sensors (Forward baggage compartment not installed)

Interval	Installed	Required	Procedure
A	6	5	(M)(O)

May be inoperative for one door provided:

- The affected door is physically verified closed and locked prior to each flight,
- The warning light is verified to re-trigger flashing upon subsequent door opening, and
- Repairs are made within one flight day.

NOTE: An inoperative Passenger Airstair door warning system sensor will render AUTO MODE of the Cabin Pressure Control System inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative Door Proximity Sensor in the flight compartment.
- Placard Auto Mode inoperative, if the un-vented door proximity sensor is inoperative.

Operating Procedures

- Physically confirm that the affected door is closed and locked prior to each flight:
 - For Airstair Door, check that the internal handle is fully down or that the external handle is fully up,
 - For Aft Entry Door, Aft Service Door or Forward Baggage Door (if installed), check that the external handles are flush. Push the vent panel inward and check that it does not open.

NOTE: For the Cargo/Combi configuration, the Aft Entry Door and Aft Service Door are disabled and permanently blocked. Instead two (2) type III Emergency Exit Doors, are added at Station X=479.7.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-5 FUSELAGE DOORS Warning System****52-10-5-2 Airstair Door, Aft Passenger Door and Aft Service Door Proximity Sensors (Forward baggage compartment not installed)**

2. Prior to engine start on the ground, close all doors and press the Master WARNING switchlight. Check that the FUSELAGE DOORS warning light stops flashing and remains steadily illuminated.
3. On the ESID control panel, set MFD1 or MFD2 to SYS and select the DOORS page. Check that the five (four, if forward baggage door not installed) doors not checked in Step 1 are indicating closed and locked.
4. If the FUSELAGE DOORS warning light still flashes on the ground, repair inoperative door proximity sensor systems.
5. If the FUSELAGE DOORS warning light flashes in flight, flight must be conducted in accordance with the AFM.
6. In the event the inoperative proximity sensor is rendering the AUTO Mode inoperative, Cabin Pressure Control will be performed in MAN Mode, and, AUTO Mode shall not be selected in-flight, as this action will cause rapid loss of cabin pressure.

Maintenance Procedures

1. On the ESID control panel, set MFD1 or MFD2 to SYS and select the DOORS page. Determine which proximity sensor or associated wiring is causing the FUSELAGE DOORS warning.
2. For intermittent indications caused by a faulty proximity sensor, deactivate the sensor by either disconnecting or removing the sensor. Stow the sensor and its wire in a manner that will not impede door operation. Alternatively, the sensor target can be disconnected and removed as opposed to the sensor. removal/disconnection of either sensor or sensor target will result in the sensor being considered inoperative in the failed "Open" position.
3. Verify that the affected door is actually in the closed and locked condition:
 - a) For Airstair Door, check that the internal handle is fully down or that the external handle is fully up,
 - b) For Aft Entry Door, Aft Service Door or Forward Baggage Door (if installed), check that the external handles are flush. Push the vent panel inward and check that it does not open.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-10-5 FUSELAGE DOORS Warning System

52-10-5-2 Airstair Door, Aft Passenger Door and Aft Service Door Proximity Sensors (Forward baggage compartment not installed)

NOTE: For the Cargo/Combi configuration, the Aft Entry Door and Aft Service Door are disabled and permanently blocked. Instead two (2) type III Emergency Exit Doors, are added at Station X=479.7.

4. With FUSELAGE DOORS warning light steadily illuminated (by pushing the Master WARNING switchlight if necessary), unlock or open a door not already unlocked or open, and observe that the FUSELAGE DOORS warning light re-triggers flashing.
5. Placard inoperative door proximity sensor in the flight compartment.
6. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-5. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-10-6 Electro Pneumatic Shut-Off Valve (EPSOV)**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The EPSOV is verified open,
- Auto Mode of Cabin Pressure Control System must be operative, and
- The flight is conducted pressurized.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Electro Pneumatic Shut-Off Valve (EPSOV) is placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Pull and clip circuit breaker AIRSTAIR DOOR SOV on the Left Main DC Bus.
- Make sure that the door seal system is pressurized. If necessary:
 - Pressurize the reservoir tank for the door seal system (Refer to AMM TASK 12-10-52-863-801), or
 - Run an engine to supply bleed air to the door seal system.
- Verify correct operation (inflation and deflation) of the forward passenger door seal by conducting Procedure A or Procedure B below:
 - Procedure A (verification through manual operation of the airstair door lever):
 - Close and lock the airstair door to allow the supplied air to inflate the seal.
 - Make sure that the airstair door seal is inflated and stays inflated.

NOTE: The door seal inflation can be verified visually, from inside of the aircraft.

- Unlock the airstair door.
- Make sure that the airstair door seal is deflated fully in 7 seconds or less.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-10-6. 1



Electro Pneumatic Shut-Off Valve (EPSOV)

NOTE 2: A failed/damaged door seal can cause the cabin not to pressurize.

- Remove the interior panel at the door entrance to gain access to seal control valve.
- Push and hold the airstair door seal control valve push button, to allow the supplied air to inflate the seal.

- c) Make sure that the airstair door seal is inflated and stays inflated.
- d) Release the seal control valve push button.
- e) Make sure that the airstair door seal is deflated fully in 7 seconds or less.

NOTE: Removal of the EPSOV constitutes the same failure condition as an open EPSOV as the air is discharged directly from the door seal system.

- Disconnect and remove the electrical connector.
- Loosen the door seal end of line.
- Loosen the clamp.
- Remove the Electro Pneumatic Shut-Off Valve.
- Secure the end of pneumatic line.

5. Inoperative Electro Pneumatic Shut-Off Valve is placarded in the flight compartment.
6. Make appropriate entry in the aircraft journey log.

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-30-1 Aft Baggage Door Counter Balance System**

Interval	Installed	Required	Procedure
C	2	0	(M)

May be inoperative provided:

- Baggage door is verified closed, latched and not used, and
- Baggage door is placarded "BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Door Counter Balance System must be placarded in the flight compartment and at baggage door threshold.

Operating Procedures

None required.

Maintenance Procedures

- Verify the baggage door is closed and locked and ensure the external handle is seated flush with the door. Push the handle in ensuring that the latch is engaged and fully flush, confirming door is locked.
- Placard Exterior of the Baggage Door "BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-30-2 Aft Baggage Door Telescopic Strut****52-30-2A**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- Baggage door is verified closed, locked, and not used, and
- Baggage door is placarded "BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Door Telescopic Strut must be placarded in the flight compartment and at baggage door threshold.

Operating Procedures

None required.

Maintenance Procedures

- Verify the baggage door is closed and locked and ensure the external handle is seated flush with the door.
- Placard Exterior of the Baggage Door "BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DAT 50 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-30-2 Aft Baggage Door Telescopic Strut****52-30-2B**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided an alternate approved means to support the baggage door in the open position is established and used.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Door Telescopic Strut must be placarded in the flight compartment and at baggage door threshold.

Operating Procedures

None required.

Maintenance Procedures

1. Operator to develop an approved means to support the baggage door in the open position.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-30-2 Aft Baggage Door Telescopic Strut****52-30-2-1 Lock Release Collar**

Interval	Installed	Required	Procedure
C	1	0	NIL

May be inoperative provided the strut is only used in the non-extended position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Baggage Door Telescopic Strut must be placarded in the flight compartment and at baggage door threshold.

Operating Procedures

None required.

Maintenance Procedures

1. Placard telescopic strut, "LOCKING COLLAR INOPERATIVE - DO NOT EXTEND STRUT".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-30-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-1 Automatic Locking System (Primary System)****52-50-1-1A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment,
- Access to the Forward baggage compartment through the Internal baggage door is considered inoperative,
- Internal baggage door to the Forward baggage compartment is secured closed by an acceptable means or method, and
- Internal baggage door is placarded, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

With the Forward baggage compartment installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "INTERNAL DOORS" caution light in the flight compartment.
- Placard Internal baggage door "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-1 Automatic Locking System (Primary System)****52-50-1-1A Forward baggage compartment installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door.

Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Before each dispatch, close and secure the internal baggage door to the Forward Baggage compartment.
6. Placard the glareshield with "INTERNAL DOORS Caution Light INOP".
7. Placard the Internal baggage door, "INTERNAL BAGGAGE DOOR LOCKED – DO NOT OPEN".
8. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-1 Automatic Locking System (Primary System)****52-50-1-1B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door, and
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

With the forward baggage compartment NOT installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "COCKPIT DOOR" caution light in the flight compartment.

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

*(...Continued)***ISS III R04****APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-1 Automatic Locking System (Primary System)****52-50-1-1B Forward baggage compartment not installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door.

Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment NOT installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Placard the glareshield with "COCKPIT DOOR caution light INOP".
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R04**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-2 Flight Deck Emergency Access Function****52-50-1-2A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment,
- Access to the Forward baggage compartment through the Internal baggage door is considered inoperative,
- Internal baggage door to the Forward baggage compartment is secured closed by an acceptable means or method, and
- Internal baggage door is placarded, "INTERNAL BAGGAGE DOOR INOPERATIVE – DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

With the Forward baggage compartment installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "INTERNAL DOORS" caution light in the flight compartment.
- Placard Internal baggage door "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-2 Flight Deck Emergency Access Function****52-50-1-2A Forward baggage compartment installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Before each dispatch, close and secure the internal baggage door to the Forward Baggage compartment.
6. Placard the glareshield with "INTERNAL DOORS Caution Light INOP".
7. Placard the Internal baggage door, "INTERNAL BAGGAGE DOOR LOCKED – DO NOT OPEN".
8. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-2 Flight Deck Emergency Access Function****52-50-1-2B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

With the forward baggage compartment NOT installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "COCKPIT DOOR" caution light in the flight compartment.

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DAT 0 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-2 Flight Deck Emergency Access Function****52-50-1-2B Forward baggage compartment not installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment NOT installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Placard the glareshield with "COCKPIT DOOR caution light INOP".
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 8

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-3 DENY Function****52-50-1-3A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment,
- Access to the Forward baggage compartment through the Internal baggage door is considered inoperative,
- Internal baggage door to the Forward baggage compartment is secured closed by an acceptable means or method, and
- Internal baggage door is placarded, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

With the Forward baggage compartment installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "INTERNAL DOORS" caution light in the flight compartment.
- Placard Internal baggage door "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 9

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-3 DENY Function****52-50-1-3A Forward baggage compartment installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Before each dispatch, close and secure the internal baggage door to the Forward Baggage compartment.
6. Placard the glareshield with "INTERNAL DOORS Caution Light INOP".
7. Placard the Internal baggage door, "INTERNAL BAGGAGE DOOR LOCKED – DO NOT OPEN".
8. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 10

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-3 DENY Function****52-50-1-3B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

With the forward baggage compartment NOT installed:

- Placard in the flight compartment that the Automatic Locking and Remote Access System is inoperative.
- Placard inoperative "COCKPIT DOOR" caution light in the flight compartment.

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 11

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-3 DENY Function****52-50-1-3B Forward baggage compartment not installed**

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

With Forward baggage compartment NOT installed:

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative Cockpit Door Automatic Locking System (Primary) in the flight compartment.
5. Placard the glareshield with "COCKPIT DOOR caution light INOP".
6. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 12

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-4 UNLK Function**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Automatic locking system is verified operative,
- Emergency access function is verified operative, and
- Alternate procedures are established and used for using the mechanical (Deadbolt) system, and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the automatic UNLK function is inoperative.

Operating Procedures

- On the INTERNAL DOORS pilot control panel, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.
- With the door in auto locked position, push switch / indicator button located in the maintenance panel above the wardrobe and observe the following:
 - Illumination of a white light indication on the FA indicator/switch,
 - Illumination of the "AUTO UNLK" – COCKPIT DOOR advisory light on the pilot control panel,
 - Master Caution tone sounds, Master Caution indicator flashes, and With Forward baggage compartment installed, "INTERNAL DOORS" caution light illuminates,OR
With Forward baggage compartment NOT installed, "COCKPIT DOOR" caution light illuminates,
 - After 40 seconds the cockpit door unlocks, and the amber light indicates on the FA push button switch illuminates.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 13



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-50-1 Fortified Flight Deck Door (With Remote Access System)

52-50-1-4 UNLK Function

(And)

Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier - Q400 para 10.3.7.3 Sub Point – 2.

Maintenance Procedures

1. Placard in the flight compartment that the automatic UNLK function is inoperative.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 14



**52-50-1-5 Emergency Access Push Button Switch Panel White/Amber
Indication Lights**

Interval	Installed	Required	Procedure
C	4	0	(O)

May be inoperative provided Emergency access function is verified operative.

Minimum Equipment List Procedures (MELP)

Placard

Placard in the maintenance panel above the wardrobe that the white/amber lights are inoperative.

Operating Procedures

With the door in auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, and observe the following:

1. Illumination of the "AUTO UNLK" - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel,
2. Master caution tone sounds, Master Caution indicator flashes, and With Forward baggage compartment installed, "INTERNAL DOORS" caution light illuminates, OR With Forward baggage compartment NOT installed, "COCKPIT DOOR" caution light illuminates,
3. After 40 seconds the cockpit door unlocks.

Maintenance Procedures

1. Placard in the maintenance panel above the wardrobe that the white/amber lights are inoperative.
2. Make appropriate entry in the aircraft journey log.

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-6 “FAIL” - COCKPIT DOOR Advisory Light****52-50-1-6A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Door Unlock and Auto Lock functions are verified operative,
- “COCKPIT DOOR” caution light is verified operative, and
- “CKPT DOOR” and “AUTO UNLK” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “FAIL” - COCKPIT DOOR advisory light is inoperative.

Operating Procedures

- On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.
- On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to UNLK position and verify that the door is unlocked.

Maintenance Procedures

With Forward baggage compartment installed:

- With the door in auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe and observe the following:
 - Illumination of the “AUTO UNLK” - COCKPIT DOOR advisory light on the cockpit panel,

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 16



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-50-1 Fortified Flight Deck Door (With Remote Access System)

52-50-1-6 “FAIL” - COCKPIT DOOR Advisory Light

52-50-1-6A Forward baggage compartment installed

- b) Master Caution tone sounds, Master Caution indicator flashes, “INTERNAL DOORS” caution light illuminates,
 - c) After 40 seconds the cockpit door unlocks, and with the door open observe that “CKPT DOOR” - OPEN advisory light illuminates.
2. Open the Forward baggage door and observe that “BAGG DOOR” - OPEN advisory light illuminates.
 3. Placard the inoperative “FAIL” - COCKPIT DOOR advisory light in the flight compartment.
 4. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 17

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-6 “FAIL” - COCKPIT DOOR Advisory Light****52-50-1-6B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Door Unlock and Auto Lock functions are verified operative,
- “COCKPIT DOOR” caution light is verified operative, and
- “CKPT DOOR” and “AUTO UNLK” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “FAIL” - COCKPIT DOOR advisory light is inoperative.

Operating Procedures

- On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.
- On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to UNLK position and verify that the door is unlocked.

Maintenance Procedures

With Forward baggage compartment NOT installed:

- With the door in auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe and observe the following:
 - Illumination of the “AUTO UNLK” – COCKPIT DOOR advisory light on the cockpit panel,

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 18



DHC-8-402

MINIMUM EQUIPMENT LIST

DOORS

ATA 52

52-50-1 Fortified Flight Deck Door (With Remote Access System)

52-50-1-6 “FAIL” - COCKPIT DOOR Advisory Light

52-50-1-6B Forward baggage compartment not installed

- b) Master Caution tone sounds, Master Caution indicator flashes, “COCKPIT DOOR” caution light illuminates,
 - c) After 40 seconds the cockpit door unlocks, and with the door open observe that “CKPT DOOR” – OPEN advisory light illuminates.
2. Placard the inoperative “FAIL – ” COCKPIT DOOR advisory light in the flight compartment.
 3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R04

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 19

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-7 “CKPT DOOR” - OPEN Advisory Light****52-50-1-7A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Automatic door lock function is verified operative,
- “INTERNAL DOORS” caution light is verified operative in the event door is left open more than three (3) minutes, and
- “BAGG DOOR”, “FAIL”, and “AUTO UNLK” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “CKPT DOOR” - OPEN advisory light is inoperative.

Operating Procedures

On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.

Maintenance Procedures

With Forward baggage compartment installed:

- Open the cockpit door, observe that the “CKPT DOOR” - OPEN advisory light is not illuminated. Keep the door open for at least three (3) minutes and check that the Master Caution tone sounds, Master Caution indicator flashes and the “INTERNAL DOORS” caution light on the Caution and Warning Panel illuminates.
- Open the Forward Baggage door and observe that “BAGG DOOR - ” OPEN Advisory light illuminates.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 20

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-7 “CKPT DOOR” - OPEN Advisory Light****52-50-1-7A Forward baggage compartment installed**

3. With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, observe that the “AUTO UNLK” - COCKPIT DOOR advisory light on the cockpit panel illuminates.
4. With the cockpit door open, push down and rotate the INTERNAL DOORS pilot control panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.
 - a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door) to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, “INTERNAL DOORS” caution light illuminates and the “FAIL” - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the “FAIL” - COCKPIT DOOR advisory light and “INTERNAL DOORS” caution light extinguish.
5. Placard the inoperative “CKPT DOOR” - OPEN advisory light on the INTERNAL DOORS pilot control panel.
6. Make appropriate entry in the aircraft journey log.
 - a) Master Caution tone sounds, Master Caution indicator flashes, “INTERNAL DOORS” caution light illuminates,
 - b) After 40 seconds the cockpit door unlocks, and with the door open observe that “CKPT DOOR” - OPEN advisory light illuminates.
5. Open the Forward baggage door and observe that “BAGG DOOR” - OPEN advisory light illuminates.
6. Placard the inoperative “FAIL” - COCKPIT DOOR advisory light in the flight compartment.
7. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATE -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 21

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-7 “CKPT DOOR” - OPEN Advisory Light****52-50-1-7B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- a) Automatic door lock function is verified operative,
- b) “COCKPIT DOORS” caution light is verified operative in the event door is left open more than three (3) minutes, and
- c) “FAIL”, and “AUTO UNLK” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “CKPT DOOR” - OPEN advisory light is inoperative.

Operating Procedures

On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.

Maintenance Procedures

With Forward baggage compartment NOT installed:

1. Open the cockpit door, observe that the “CKPT DOOR” – OPEN advisory light is not illuminated. Keep the door open for at least three (3) minutes and check that the Master Caution tone sounds, Master Caution indicator flashes and the “COCKPIT DOOR” caution light on the Caution and Warning Panel illuminates.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 22

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-7 “CKPT DOOR” - OPEN Advisory Light****52-50-1-7B Forward baggage compartment not installed**

2. With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, observe that the “AUTO UNLK” – COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
3. With the cockpit door open, push down and rotate the INTERNAL DOORS pilot control panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.
 - a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door) to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position.
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, “COCKPIT DOOR” caution light illuminates and the “FAIL” – COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the “FAIL” – COCKPIT DOOR advisory light and “COCKPIT DOOR” caution light extinguish.
4. Placard the inoperative “CKPT DOOR” – OPEN advisory light on the INTERNAL DOORS pilot control panel.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 23

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-8 “AUTO UNLK” - COCKPIT DOOR Advisory Light****52-50-1-8A Forward baggage compartment installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Emergency access function is verified operative,
- “INTERNAL DOORS” caution light is verified operative, and
- “BAGG DOOR”, “CKPT DOOR” and “FAIL” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “AUTO UNLK” - CKPT DOOR advisory light is inoperative.

Operating Procedures

With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, and observe the following:

- Illumination of a white light indication on the FA indicator/switch,
- Master caution tone sounds, Master Caution indicator flashes, and With Forward baggage compartment installed, “INTERNAL DOORS” caution light illuminates,

OR

With Forward baggage compartment NOT installed, “COCKPIT DOOR” caution light illuminates,

- After 40 seconds the cockpit door unlocks and the amber light indication on the FA push button switch illuminates.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 24

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-8 “AUTO UNLK” - COCKPIT DOOR Advisory Light****52-50-1-8A Forward baggage compartment installed****Maintenance Procedures**

With Forward baggage compartment installed:

1. Open the Forward baggage door and observe that “BAGG DOOR” – OPEN advisory light illuminates.
2. With the cockpit door in the open position, observe that “CKPT DOOR” – OPEN advisory light illuminates.
3. With the cockpit door open, push down and rotate the INTERNAL DOORS Control Panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.
 - a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door), to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position.
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, “INTERNAL DOORS caution light illuminates and the “FAIL” - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the “FAIL” - COCKPIT DOOR advisory light and “INTERNAL DOORS” caution light extinguish.
4. Placard the inoperative “AUTO UNLK” - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel.
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 25

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-8 “AUTO UNLK” - COCKPIT DOOR Advisory Light****52-50-1-8B Forward baggage compartment not installed**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Emergency access function is verified operative,
- “COCKPIT DOORS” caution light is verified operative, and
- “CKPT DOOR”, and “FAIL” advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the “AUTO UNLK” - CKPT DOOR advisory light is inoperative.

Operating Procedures

With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe, and observe the following:

- Illumination of a white light indication on the FA indicator/switch,
- Master caution tone sounds, Master Caution indicator flashes, and With Forward baggage compartment installed, “INTERNAL DOORS” caution light illuminates,

OR

With Forward baggage compartment NOT installed, “COCKPIT DOOR” caution light illuminates,

- After 40 seconds the cockpit door unlocks and the amber light indication on the FA push button switch illuminates.

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 26

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-8 “AUTO UNLK” - COCKPIT DOOR Advisory Light****52-50-1-8B Forward baggage compartment not installed****Maintenance Procedures**

With Forward baggage compartment NOT installed:

1. With the cockpit door in the open position, observe that “CKPT DOOR” OPEN advisory light illuminates.
2. With the cockpit door open, push down and rotate the INTERNAL DOORS pilot control panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.
 - a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door), to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position.
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, “COCKPIT DOOR” caution light illuminates and the “FAIL” – COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS Control Panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the “FAIL” – COCKPIT DOOR advisory light and “COCKPIT DOOR” caution light extinguish.
3. Placard the inoperative “AUTO UNLK” – COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel.
4. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R04**APPROVED BY DAW DELHI, DATED –****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 27

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-9 "BAGG DOOR" - OPEN Advisory Light (Forward Baggage Compartment Installed)**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- Forward baggage door lock is operative,
- "INTERNAL DOORS" caution light is verified operative, and
- "CKPT DOOR", "FAIL" and "AUTO UNLK" advisory lights are verified operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard on the INTERNAL DOORS pilot control panel that the "BAGG DOOR" - OPEN advisory light is inoperative.

Operating Procedures

Check the forward baggage door lock is working.

Maintenance Procedures

- With the door in the auto locked position, push the switch/indicator button located in the maintenance panel above the wardrobe and observe the following:
 - Illumination of a white light indication on the FA indicator/switch,
 - Master Caution tone sounds, Master Caution indicator flashes, "INTERNAL DOORS" caution light and "AUTO UNLK" - COCKPIT DOOR advisory lights illuminate.
- Open the cockpit door and verify that "CKPT DOOR" - OPEN advisory light illuminates.
- With the cockpit door open, push down and rotate the INTERNAL DOORS pilot control panel UNLK/AUTO/DENY rotary switch to the UNLK position and hold. The solenoid will pull in to the disengaged (unlocked) position.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 28

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-9 "BAGG DOOR" - OPEN Advisory Light (Forward Baggage Compartment Installed)**

- a) Use a screwdriver or other solid tool (ensuring not to damage the solenoid or door), to prevent the solenoid from moving to the engaged (locked) position. (This can be done even without using tools, by manually pushing down and holding).
 - b) Release the rotary switch to the AUTO position.
 - c) Verify the Master Caution tone sounds, Master Caution indicator flashes, "INTERNAL DOORS" caution light illuminates and the "FAIL" - COCKPIT DOOR advisory light on the INTERNAL DOORS pilot control panel illuminates.
 - d) Press the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel by lifting the switch guard first. Door lock solenoid is disengaged (unlocked).
 - e) Release solenoid striker. Close door.
 - f) Restore system to normal operation by pressing the LOCK ISOLATE switch.
 - g) Observe the "FAIL" - COCKPIT DOOR advisory light and "INTERNAL DOORS" caution light extinguish.
4. Placard the inoperative "BAGG DOOR" - OPEN advisory light on the INTERNAL DOORS pilot control panel
 5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 29

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-10 Deadbolt (Secondary locking system)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided Automatic locking (Remote Access) system is operative.

Minimum Equipment List Procedures (MELP)**Placard**

Placard in the flight compartment that the Deadbolt is inoperative.

Operating Procedures

1. On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to default AUTO position and verify that the door is locked.
2. On the INTERNAL DOORS pilot control panel, located on the overhead console inside the flight compartment, set the UNLK/AUTO/DENY rotary switch to UNLK position and verify that the door is unlocked.

Maintenance Procedures

1. Placard in the flight compartment that the Deadbolt is inoperative.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 30

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-11 "INTERNAL DOORS" Caution Light (Forward baggage compartment installed)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Automatic locking (Remote Access) system is deactivated,
- Secondary locking system (Deadbolt) is verified operative and used to lock the door,
- Alternate procedures are established and used for using the mechanical (Deadbolt) system, and for accessing the flight compartment,
- Access to the Forward baggage compartment through the Internal baggage door is considered inoperative,
- Internal baggage door is secured closed by an acceptable means or method, and
- Internal baggage door is placarded, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Minimum Equipment List Procedures (MELP)**Placard**

- Placard inoperative "INTERNAL DOORS" caution light in the flight compartment.
- Placard the Internal baggage door on the inboard side, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(And)

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 31

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-11 "INTERNAL DOORS" Caution Light (Forward baggage compartment installed)**

Internal Baggage Compartment Door must be closed and verified locked by crew member. Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier – Q400 para 10.3.7.3 Sub Point – 2

Maintenance Procedures

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Before each dispatch, close and secure the Internal baggage door to the Forward baggage compartment.
5. Placard the inoperative "INTERNAL DOORS" caution light on the glareshield.
6. Placard the Internal baggage door, "INTERNAL BAGGAGE DOOR INOPERATIVE - DO NOT OPEN".
7. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 32

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-12 "COCKPIT DOOR" Caution Light (Forward baggage compartment not installed)**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- a) Automatic locking (Remote Access) system is deactivated,
- b) Secondary locking system (Deadbolt) is verified operative and used to lock the door, and
- c) Alternate procedures are established and used for using the mechanical (Deadbolt) system, and for accessing the flight compartment.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative "COCKPIT DOOR" caution light in the flight compartment.

Operating Procedures

A third member must be brought into the flight compartment prior to a pilot leaving in order to protect access to the flight deck in the event of incapacitation of the remaining pilot.

(And)

(...Continued)

ISS III R04**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 33

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-1 Fortified Flight Deck Door (With Remote Access System)****52-50-1-12 "COCKPIT DOOR" Caution Light (Forward baggage compartment not installed)**

Internal Baggage Compartment Door must be closed and verified locked by crew member. Cockpit Automatic locking system shouldn't be used and must be placarded. Manual Locking must be used. Captain must brief Cabin Crew In-Charge (CCIC) and provide Flight Deck Access Door key to CCIC in case of normal and emergency operation of the cockpit door. Same procedure is provided in Cabin Attendant Manual Bombardier – Q400 para 10.3.7.3 Sub Point – 2

Maintenance Procedures

1. Pull and clip circuit breaker CKPT DOOR on the R ESS CB Panel.
2. Ensure the LOCK ISOLATE Switch on the INTERNAL DOORS pilot control panel is NOT engaged (NOT pressed in) and verify that the SOLENOID LOCK is not engaged.
3. Ensure the mechanical Deadbolt is operative and can be used to lock and unlock the door from inside the cockpit.
4. Placard the inoperative "COCKPIT DOOR" caution light on the glareshield.
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R04**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-1. 34

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-3 Lavatory Door****52-50-3-1 Door Lock**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Lavatory door latch operates normally, and
- Procedures are established and used to inform occupants of inoperative door lock.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Lavatory Door Lock must be placarded in the flight and passenger compartments.

Operating Procedures

Crew shall brief the passenger of the INOP door locking mechanism and to maintain caution while using lavatory.

Maintenance Procedures

- Placard inoperative Lavatory Door lock in the flight and passenger compartments.
- Make appropriate entry in the aircraft journey log book.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****DOORS******ATA 52*****52-50-3 Lavatory Door****52-50-3-2 Door Latch**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided lavatory door is locked closed and placarded, "INOPERATIVE - DO NOT ENTER".

Minimum Equipment List Procedures (MELP)**Placard**

1. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
2. Placard the flight compartment that lavatory is inoperative.

Operating Procedures

None required.

Maintenance Procedures

1. Place placard in flight compartment indicating lavatory is inoperative.
2. Lock the lavatory door by placing a pen or other similar object in the hole in the latch and sliding it to the locked position.
3. Placard lavatory door "INOPERATIVE - DO NOT ENTER".
4. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

52-50-3. 2