Table of Contents

Purpose/Policy:.....1

Scope:.....2

Definitions/Acronyms:.....2

Authorities/Responsibilities:.....2

Resources and Materials:.....2

PPE Required:.....3

Procedures:.....3

Setting up the Filtec:.....3

Operation of the Filtec:.....3

Changeover Guide:.....4

Shutting Down Filtec:.....5

Basic Cleaning of the Filtec:.....5

Deep Cleaning:.....6

Forms:.....6

Reference Documents:.....6

Common Issues:.....6

Document History and Approval:.....6

Purpose/Policy:

This Filtec standard operating procedure has been created to assist operators with setup, operations, changeover, cleaning, and troubleshooting.

Scope:

The purpose of the Filtec is to test cans as they pass through it and make sure they are filled and pressurized by the right amount. The Filtec uses a ping tone to test the pressure in a can and uses low level radiation to check the fill height. Cans travel on a conveyor underneath the Filtec unit where they are tested as they pass through.

Definitions/Acronyms:

- SOP – Standard Operating Procedure
- PPE – Personal Protective Equipment
- HMI – Human Machine Interface (the touch screen used to control a machine)
- E-Stop – Emergency Stop button
- Filtec – Inspection unit that checks can fill height and pressure

Authorities/Responsibilities:

This SOP can be completed by an entry level packaging operator after proper training from a senior member of the Can line packaging team. The objective of this SOP is to gain the knowledge needed to operate the Filtec and test it to make sure it is in working order.

Resources and Materials:

Operations:

- Two 12oz plastic test cans (one red and one green)
- Two 16oz plastic test cans (one red and one green)
- One full and one low fill 19.2oz can
- A full but depressurized 12oz can
- A full but depressurized 16oz can
- A full but depressurized 19.2oz can

Basic Cleaning:

- Damp cloth

Deep Clean:

- Refer to SOP Document # CL###
    - Link to document goes here.

Troubleshooting:

- No Equipment required.

PPE Required:

No formal PPE required suggested nitrate gloves for cleaning.

Procedures:

Setting up the Filtec:

1. Before starting operation of the Filtec make sure to reset any counters from the previous run.
    1.1 To reset the counter from the main screen, press the menu button on the bottom of the HMI.
    1.2 Next press the “Counters Menu” in the upper left corner of the menu screen.
    1.3 Next press the “Shift Counters” button.
    1.4 On the “Shift Counters” menu press “Clear Shift Counters”.
    1.5 Now press the menu button twice at the bottom of the screen and then press the “Dashboard” button to return to the operation screen.
2. Now that the counter has been reset, we want to test the “slugs”
    2.1 Before sending the slugs through we need to start up the conveyors.
    2.2 On the control panel use the panel view C1000 conveyor controls to turn on the consol by pulling out the E-Stop and then pressing the green reset button.
    2.3 On the HMI press the “Second Floor Conveyor Start” button.
    2.4 Now we can test the slugs by using the appropriate size plastic can.
    2.5 Carefully place the depressurized can and the red and green slugs on the conveyor up stream of the Filtec unit.
    2.6 The red slug and depressurized can should both get kicked out into the reject conveyor and the green one should continue the line.
        2.6.1 **Note:** Make sure to grab the green slug before it goes downstairs.
        2.6.2 **Note:** If the red slug or the depressurized can don’t get kicked out please see trouble shooting section.


Operation of the Filtec:

1. Once every hour during a run tests the two plastic slugs and the depressurized can.
    1.1 Using the appropriate size depressurized can and plastic slugs. Carefully place them on the conveyor upstream of the Filtec unit.
    1.2 The red slug and depressurized can should both get kicked out into the reject conveyor and the green one should continue the line.
        1.2.1 **Note:** Make sure to grab the green slug before it goes downstairs.

1.2.2 **Note:** If the red slug or the depressurized can don't get kicked out please see trouble shooting section.

Changeover Guide:

1. In order to adjust the height of the Filtec unit you will need to follow the following steps.
   1.1 On the bottom left side of the Filtec unit on the infeed side loosen the level.
      1.1.1 **Note:** Not loosening this lever will cause issues with raising and lowering the Filtec unit. This lever locks the Filtec into place.
      1.1.2

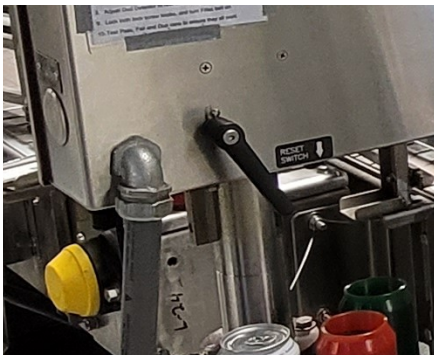

   1.2 Once the Filtec is unlocked, use the handle on top of the unit to adjust the height.
      1.2.1 There is a counter just below the handle that is used to determine the correct position of the Filtec.



   1.3 Once you have moved the Filtec to the correct number lock it down with lever from section 1.1.
2. Once the height is set for the correct size, we will then need to set the Dud Detector height.
   2.1 The dud detector is located on the out feed of the Filtec.

2.2 To set the dud detector correctly , locate the two knobs on top of the dud detector. Loosen them both.



2.3 On top of the Filtec there is a small height adjustment plate. Slide a full can underneath the dud detector with the height adjustment plate on top of it.

2.4 Tighten down the two knobs of the dud detector.

2.4.1 **WARNING: Do not <u>ever</u> reach into the inspection area from the front without closing the radiation safety shutter - make this adjustment <u>only</u> from the rear (outfeed side) of the machine. <u>Radiation can and will be</u> <u>present while the safety shutter is open, even if the machine is idle!</u>**

2.5 Remove the can and the height adjustment plate from the line.

3. Now the changeover is complete you want to make sure the Filtec is working properly.

3.1 Turn the conveyors on as it is outlined in the “Setting up the Filtec” section 2.2.

3.2 Test the Filtec with the appropriate size can and plastic test cans.

3.2.1 If it is working correctly no further action is required.

3.2.2 If it does not kick out the dud test can or red plastic can, see trouble shooting section. If it kicks out the green plastic can also see trouble shooting section.

Shutting Down Filtec:

1. Make sure to reset counters. To do this please refer to “Setting Up the Filtec” section.
2. In case of a full shutdown please see maintenance for instructions.

Basic Cleaning of the Filtec:

1. With a damp cloth wipe down the outside of the unit carefully to remove any beer soilage.

Deep Cleaning:

Outline the deep cleaning process for the SOP equipment. See below for example:

1. Refer to SOP Document # CL###
    1.1 Link to document goes here.

Forms:

Not Applicable

Reference Documents:

Not Applicable

Common Issues:

1. If the dud can does not get kicked out, follow these steps to try and trouble shoot the problem.
    1.1 The first thing to do is turn off the conveyors.
    1.2 Then follow the instruction on how to adjust the dud detector from the “Changeover Guide” section 2.
2. If the red plastic slug doesn’t get kicked out, follow these steps to try and trouble shoot the problem.
    2.1 Double check to make sure you have adjusted the height of the Filtec unit to the correct number/height.
    2.2 If it is still not kicking out the red slug, contact a supervisor or maintenance.
3. If the green plastic slug does get kicked out, follow these steps to try and trouble shoot the problem.
    3.1 Double check to make sure you have adjusted the height of the Filtec unit to the correct number/height.
    3.2 If it is still getting kicked out contact a supervisor or maintenance.

Document History and Approval:

Revise document history as described in the table and key below.

(Reference to following document: B1C.SOP.P001: Document Control and Approval Procedure Template)

VERSION NO.	VERSION DATE	DESCRIPTION OF CHANGE	AUTHOR NAME/PROJECT MANAGER
001	2024/03/22		Kyle Szymanski
002	2026/10/26	Updated SOP to Newest Layout Version	Kyle Szymanski

Version Approval Number: 002

Approved by: Kyle Szymanski

Position Title: OSCI Manager

Date: 10/26/26