Titanium Backpacking Cookware Set

1. In	troduction	3
	1.1: Welcome to Backcountry Cookware	. 3
2. A	ssembling the Cookware Set	4
	2.1 Attaching the Pot Gripper	4
	2.2 Securing the Folding Spork	4
	2.3 Setting Up the Stove	4
	2.4 Connecting the Fuel Canister	4
	2.5 Diagram	4
3. C	ooking Instructions	6
	3.1: Using the Pot	6
	3.2: Using the Pan	6
4. C	leaning and Maintenance	8
	4.1 Cleaning	8
	4.2 Maintenance	8
5. Tr	oubleshooting	9
	5.1 Cookware Not Heating Evenly	9
	5.2 Difficulty Opening/Closing Lids	9
	5.3 Non-Stick Coating Wearing Off	. 9
	5.4 Handles Getting Loose	9
	5.5 Cookware Warping	9

1. Introduction

1.1: Welcome to Backcountry Cookware

Welcome to the exciting world of backcountry cooking with your new Titanium Backpacking Cookware Set from Backcountry Cook. We are thrilled to have you join our community of outdoor enthusiasts who are passionate about creating delicious meals on the go. Our cookware set is designed to be ultra-light and compact, making it the perfect companion for any adventure. Whether you're backpacking through the mountains or camping by the lake, our non-stick cookware set will help you cook gourmet meals with ease. Get ready to elevate your outdoor cooking experience with the Titanium Backpacking Cookware Set!

2. Assembling the Cookware Set

To assemble the Titanium Backpacking Cookware Set, follow these easy steps:

2.1 Attaching the Pot Gripper

- 1. Locate the pot gripper with the red handle.
- 2. Slide the pot gripper onto the handle of the pot or the lid. Ensure it fits snugly.

2.2 Securing the Folding Spork

- 1. Retrieve the folding spork from the storage pouch.
- 2. Unfold the spork and securely attach it to the designated slot on the cookware handle.


2.3 Setting Up the Stove

- 1. Place the compact stove on a flat, stable surface.
- 2. Extend the stove arms to create a stable base for the cookware.

2.4 Connecting the Fuel Canister

- 1. Grab the fuel canister and check for any damage or leaks.
- 2. Attach the fuel canister securely to the stove by following the manufacturer's instructions.

2.5 Diagram

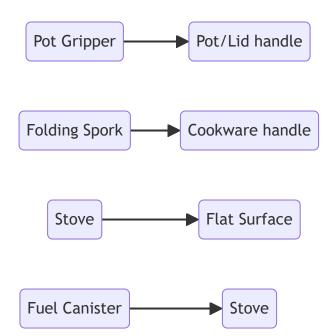

3. Cooking Instructions

3.1: Using the Pot

To use the Titanium Backpacking Cookware Set pot, follow these simple steps:

- 1. **Preparation:** Before placing the pot on the heat source, ensure the area is clean and level. Place the pot on the stove or heat source.
- 2. **Adding Ingredients:** Once the pot is on the heat source, add your desired ingredients. The non-stick surface allows for easy cooking and cleaning.
- 3. **Heat Adjustment**: Adjust the heat to your desired level using the heat control knob on your stove or heat source.
- 4. **Stirring:** Use gentle utensils to stir the ingredients as needed. Avoid using metal utensils that could scratch the non-stick surface.
- 5. **Checking Temperature:** Use the built-in temperature gauge to monitor the cooking temperature.
- 6. **Serving:** Once the cooking is complete, carefully remove the pot from the heat source and serve your delicious meal.

3.2: Using the Pan

When using the Titanium Backpacking Cookware Set pan, follow these steps:

- 1. **Heating the Pan:** Place the pan on the heat source and allow it to heat up for a few minutes.
- 2. **Adding Ingredients:** Once the pan is heated, add your desired ingredients. The non-stick surface ensures easy cooking and cleaning.
- 3. **Heat Adjustment:** Adjust the heat to your desired level using the heat control knob on your stove or heat source.
- 4. **Flipping or Turning:** Use the ergonomic handle to flip or turn ingredients as needed. The handle remains cool to the touch for safe and comfortable use.
- 5. **Checking Temperature:** Use the built-in temperature gauge to monitor the cooking temperature.

6.	. Serving: Once the cooking is complete, carefully remove the pan from the heat source and serve your gourmet meal.	e

4. Cleaning and Maintenance

4.1 Cleaning

To clean your Titanium Backpacking Cookware Set, follow these simple steps:

- 1. After use, allow the cookware to cool down before cleaning.
- 2. Use a non-abrasive sponge or cloth and mild dish soap to clean the cookware.
- 3. Gently scrub the interior and exterior of the cookware to remove any food residue.
- 4. Rinse thoroughly with clean water.
- 5. Dry the cookware completely before storing it.

Note: Avoid using harsh cleaning chemicals or abrasive scrubbers, as they can damage the cookware's non-stick coating.

4.2 Maintenance

Proper maintenance of your cookware set will ensure its longevity and performance. Follow these maintenance tips:

- 1. Before each use, check for any signs of damage or wear and tear, such as scratches or dents.
- 2. If you notice any damage, refrain from using the cookware and contact Backcountry Cook customer support for assistance.
- 3. Store the cookware set in a cool, dry place to prevent moisture build-up and potential damage.
- 4. Periodically inspect the handles and lids for tightness and secure any loose components.

Important: Do not use the Titanium Backpacking Cookware Set over an open flame, as it may cause damage to the cookware.

5. Troubleshooting

5.1 Cookware Not Heating Evenly

If you find that your Titanium Backpacking Cookware Set is not heating evenly, there may be a few things to check. First, ensure that the cookware is placed on a flat surface, as uneven surfaces can cause the heat to distribute unevenly. Additionally, make sure that the cookware is properly positioned over the heat source, and that the flame or heat is at an appropriate level. If the issue persists, please contact Backcountry Cook customer service for further assistance.

5.2 Difficulty Opening/Closing Lids

If you are experiencing difficulty opening or closing the lids of your Titanium Backpacking Cookware Set, try applying a small amount of cooking oil to the hinges to lubricate them. It may also help to gently tap the edges of the lid to release any pressure that may be causing it to stick. If these steps do not resolve the issue, please reach out to Backcountry Cook for support.

5.3 Non-Stick Coating Wearing Off

The non-stick coating on the Titanium Backpacking Cookware Set is designed to be durable, but if you find that it is wearing off, it may be due to abrasive cleaning methods or the use of metal utensils. To prevent this issue, only use wooden or plastic utensils when cooking with the cookware, and avoid using abrasive sponges or cleaning pads. If the non-stick coating continues to deteriorate, please get in touch with our customer service team for guidance.

5.4 Handles Getting Loose

If the handles of your Titanium Backpacking Cookware Set start to feel loose, check the screws on the handles to ensure they are tightened securely. If the handles continue to feel unstable, refrain from using the cookware and contact Backcountry Cook for assistance. Loose handles can be hazardous, and it's crucial to address this issue promptly.

5.5 Cookware Warping

If you notice any warping or deformation in the shape of your cookware, it's essential to discontinue use immediately. Warping can occur due to exposure to excessive heat, cold water while the cookware is still hot, or sudden temperature changes. To prevent warping,

ensure that you are using the cookware within its recommended temperature range and allow it to cool down before cleaning. If you observe any warping, please contact Backcountry Cook for further instructions.