



Operator Manual

For printer model:

**CL4NX
CL6NX**

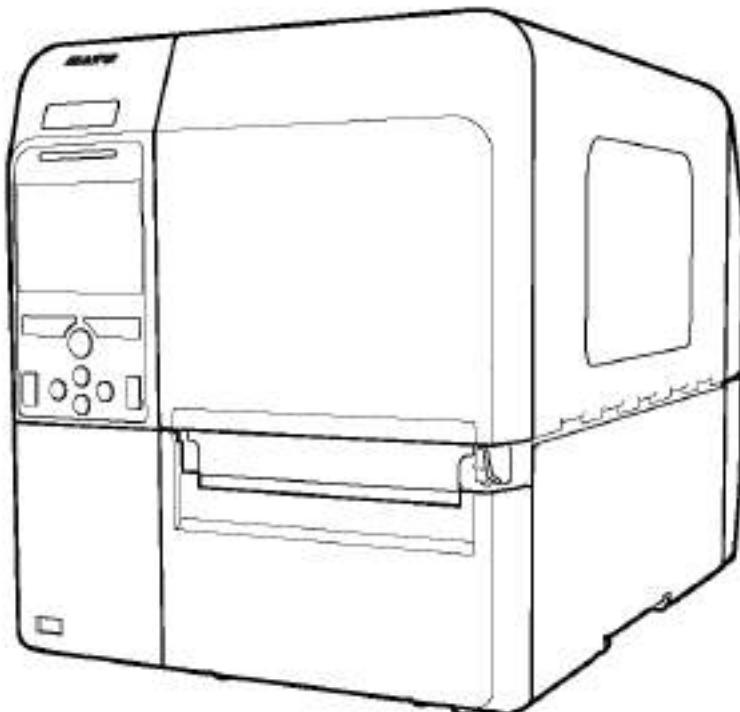


Table of Contents

Before You Start.....	8
About This Manual.....	8
Features of the Product.....	9
Safety Precautions.....	10
Precautions for Installation and Handling.....	16
Select a Safe Location.....	16
Power Supply.....	17
Printing.....	18
Regulatory Approval.....	19
Environmentally Hazardous Materials.....	22
Copyrights/Limitation of Liability/Trademarks.....	23
Copyrights.....	23
Limitation of Liability.....	24
Trademarks.....	25
Basic Information.....	26
Bundled Accessories.....	26
Optional Devices.....	27
Parts Identification.....	29
Parts Identification for the Product.....	29
Front View.....	29
Rear View.....	30
Internal View.....	31
Parts Identification for the Operator Panel.....	32
Using the Operator Panel.....	34
Display and Operation of the Operator Panel.....	34
LED Indicator.....	34
Operations in Online/Offline Mode.....	34
Status Icon.....	36
Operations When Errors Occur.....	41
Guidance Videos.....	45
Adjusting the Print Settings During Printing.....	50
Canceling the Print Job.....	51
Settings Mode.....	53
Settings Mode Menus.....	53
Changing to the Settings Mode.....	53
Logging In to/Logging Out of the Settings Mode.....	55
Item Selection.....	55
Setting Value Input or Selection.....	57
Product Memory and USB Memory.....	62
Getting Started.....	63
Installation.....	63
Installation Precautions.....	63
Installation Space.....	65
Front View.....	65
Side View.....	66
Bottom View.....	67
Powering On/Off the Product.....	69

Connecting the Power Cord.....	69
Powering On the Product.....	71
Powering Off the Product.....	72
Initial Setup (Startup Guide).....	74
Overview of the Startup Guide.....	75
Startup Screen.....	79
Language Selection.....	80
Region Setting with Optional RTC Kit.....	81
City Setting with Optional RTC Kit.....	82
Date Setting with Optional RTC Kit.....	83
Time Setting with Optional RTC Kit.....	84
Print Method Setting.....	85
Ribbon Setting.....	86
Media Sensor Type Setting.....	87
Media Setting.....	88
Completion of Initial Setup Screen.....	90
Startup Guide Cancellation.....	91
Configuring the Product According to Media and Options.....	92
Print Method.....	93
Media Sensor Type.....	96
Print Mode.....	100
Connecting the Product to a Computer.....	104
Procedure for Connecting the Product to a Computer.....	105
Connecting Interfaces.....	106
Available Interfaces.....	106
USB Interface Connection (Standard).....	107
LAN Interface Connection (Standard).....	107
Bluetooth Interface Connection (Standard).....	108
NFC Interface Connection (Standard).....	108
RS-232C Interface Connection (Standard).....	109
IEEE1284 Interface Connection (Standard).....	110
Wireless LAN Interface Connection (Optional).....	111
Configuring the Interface Settings.....	113
Interface Setting Methods.....	113
Configuring the Interface Settings from the Interface Menu of the Product.....	113
Configuring the Interface Settings Using the All-In-One Tool.....	116
Installing the Printer Driver.....	125
Basic Information about the Printer Driver.....	125
Installing the Printer Driver (USB).....	125
Installing the Printer Driver (LAN/Wireless LAN).....	130
Installing the Printer Driver (Bluetooth).....	137
Installing the Printer Driver (RS-232C).....	147
Installing the Printer Driver (IEEE1284).....	152
Uninstalling the Printer Driver.....	159
Printer Driver Features.....	162
Configuring the Printer Driver Settings as an Administrator.....	162
Configuring the Driver Settings.....	167
Configuring the Printer Settings.....	169
Outputting a Label from an Application Software.....	171
Printer Driver Sharing Function.....	173
All-In-One Tool Features.....	175
Loading Media and Ribbon.....	176
Media, Ribbon and Print Methods.....	176
Loading Media.....	177
Usable Media.....	178
Adjusting the Position of the Media Sensor.....	179

Loading the Media.....	180
Precautions for Loading the Media.....	180
Loading the Media Roll.....	180
Loading the Fan-fold Media.....	184
Loading the Media with the Optional Cutter Unit.....	185
Loading the Media with the Optional Dispenser Unit and Liner Discharge Outlet.....	191
Loading the Media with the Optional Dispenser Unit and Liner Discharge Rewinder.....	195
Removing the Liner from the Rewinder.....	200
Loading Ribbon.....	201
Checking the Ink Side of the Ribbon.....	202
Loading the Ribbon.....	203
Replacing the Ribbon.....	207
When to Replace Media and Ribbon.....	211
Checking the Remaining Amount of Media and Ribbon.....	211
Conditions That Trigger Paper End, Label Near End, Ribbon End and Ribbon Near End.....	212
Conditions That Trigger Paper End.....	212
Conditions That Trigger Label Near End.....	215
Conditions That Trigger Ribbon End.....	215
Conditions That Trigger Ribbon Near End.....	215
Various Settings of the Product.....	216
The Product's [Settings] Menu.....	216
[Shortcut] Menu.....	216
[Printing] Menu.....	217
[Label Length].....	218
[Label Width].....	219
[Auto Measure].....	220
[Printing Mode].....	221
[Ribbon Near End].....	221
[Speed].....	222
[Sensor Type].....	223
[Auto-mode].....	223
[Print Mode].....	224
[Backfeed].....	225
[Eject Cut].....	226
[Darkness Range].....	226
[Darkness].....	227
[Imaging].....	227
[Advanced].....	231
[Interface] Menu.....	252
[Network].....	253
[IEEE1284].....	364
[RS-232C].....	365
[USB].....	369
[Bluetooth].....	372
[NFC].....	378
[Ignore CR/LF].....	379
[Ignore CAN/DLE].....	379
[External I/O].....	380
[RFID] (CL4NX only).....	386
[Applications] Menu.....	402
[Protocol].....	403
[SBPL].....	404
[SZPL].....	417
[SIPL].....	423
[STCL].....	426
[SDPL].....	434
[SEPL].....	456

[AEP].....	460
[System] Menu.....	464
[Regional].....	465
[Notifications].....	471
[Sound].....	478
[Energy Saving].....	480
[LCD Brightness].....	481
[Show Total Count].....	481
[Password].....	482
[Start on AC].....	486
[Tools] Menu.....	487
[Test Print].....	488
[HEX-Dump].....	500
[Reset].....	508
[Profiles].....	512
[Certificates].....	515
[Barcode Checker].....	517
[Clone].....	529
[Support Info].....	530
[Logging Function].....	531
[Startup Guide].....	534
[Information] Menu.....	535
[Help].....	536
[Build Version].....	541
[Applications].....	542
[Installation Log].....	543
[Print Module].....	544
[Counters].....	546
[IPv4 Address].....	547
[IPv6 Address].....	547
[LAN MAC].....	548
[Wi-Fi MAC].....	548
[Wi-Fi Region].....	549
[Wi-Fi Status].....	549
[Wi-Fi Direct].....	550
[Wi-Fi Versions].....	550
Configuring the Product Settings from a Web Browser.....	551
Accessing to the Web Configuration Page.....	551
Dashboard.....	553
Settings.....	555
Tools.....	557
Certificates.....	559
Various Ways to Output.....	560
Outputting with General-purpose Software.....	560
Outputting and Controlling with Dedicated Command.....	561
Controlling the Product with External Signal.....	562
Adjusting the Product.....	563
Printable Area.....	563
Media Sensor Positions and Media Stop Positions.....	565
Flow of Printing Operations.....	567
Printing Operations.....	567
Operations in Continuous Mode.....	568
Operations in Tear-Off Mode.....	572
Operations in Cutter Mode.....	578

Operations in Dispenser Mode.....	595
Operations in Linerless Mode (CL4NX only).....	613
Operations for RFID Write (CL4NX only).....	619
Operations When the Barcode Check Function Is Enabled.....	627
Operations When the Media Sensor Is Disabled.....	632
Adjusting the Base Reference Point.....	633
About the Base Reference Point.....	633
Adjusting the Print Position.....	635
Adjusting the Media Stop Position.....	638
Notes on the Stop/Cut Position of Different Media.....	641
Adjusting the Print Quality.....	643
Adjusting the Print Darkness.....	643
Adjusting the Print Speed.....	646
Adjusting the Product's Buzzer Volume.....	649
Adjusting the Head Pressure Balance.....	651
Print Head Balance.....	651
Head Pressure Setting.....	652
Pressure Balance Setting.....	653
Configuring Optional RFID (CL4NX only).....	655
Types of Usable IC Tags and IC Cards.....	655
Configuring the Product to Encode Inlays.....	656
Printing RFID Tag Errors.....	660
RFID Error and Reset Timing.....	666
External Signal (EXT) Interfaces When RFID Mode Is Enabled.....	669
RFID Printing Tips.....	671
Configuring Optional Barcode Check Function.....	672
Basic Specifications of the Barcode Check Function.....	672
Setting Up the Barcode Checker.....	679
Operational Settings for the Barcode Checker and Installation.....	679
Changing How the RS-232C Interface is Used (When Using the KEYENCE Barcode Checkers).....	680
Doing a Test Read with the Barcode Checker.....	682
Enabling the Barcode Check.....	686
Selecting the Barcode Check Mode.....	686
Contents of the Check for Readable Mode and Comparison Mode.....	688
Restrictions for the Barcode Check Function.....	691
Initializing the Product.....	694
Procedures for Initializing.....	694
Initializing the Data Saved on the Product.....	694
Initializing the Setting Values and Data on the Product.....	697
Initializing the Setting Values on the Product.....	701
List of Initial Values.....	706
[Printing] Menu.....	706
[Interface] Menu.....	709
[Applications] Menu.....	723
[System] Menu.....	727
[Tools] Menu.....	729
[Information] Menu.....	733
Maintenance.....	734
Cleaning the Product.....	734
Cleaning.....	734
Cleaning the Print Head and Platen Roller.....	735
Cleaning Intervals.....	735
Cleaning Using the Cleaning Kit.....	735
Cleaning the Optional Linerless Cutter Kit (CL4NX only).....	738
Cleaning Using the Cleaning Sheet.....	739

Replacing Consumable Parts.....	742
Replacing the Print Head.....	742
Replacing the Platen Roller.....	744
Operating the Notification Screen of SOS (SATO Online Services) (SOS users only).....	747
Operating the Notification Screen of the SOS (SATO Online Services) On-Demand Mode (SOS users only).....	747
Operating the Date and Time Settings Notification Screen of SOS (SATO Online Services) (SOS users only).....	749
SOS (SATO Online Services) Application (SOS users only).....	751
When You Are in Trouble.....	752
When an Error Message Appears.....	752
Error Message Indication and Operating Procedure When the SOS (SATO Online Services) Is Enabled (SOS users only).....	796
Contact Information for When You Are in Trouble.....	798
Product Specifications.....	799
Specifications.....	799
Hardware.....	799
Interface.....	804
Supported Interfaces.....	804
USB Interface.....	805
LAN Interface.....	805
Bluetooth Interface.....	806
NFC Interface.....	807
RS-232C Interface.....	807
IEEE1284 Interface.....	809
External Signal (EXT) Interface.....	810
Wireless LAN Interface.....	818
Built-in Functions.....	821
Printer Languages.....	823
Standards.....	824
Usable Media and Ribbon.....	826
Media.....	826
Ribbon.....	830
Usable Fonts and Barcodes.....	831
Fonts.....	831
Barcodes.....	855
Support and Warranty.....	857
SOS (SATO Online Services) (SOS users only).....	857
Maintenance Support.....	858
Warranty Period for Consumables.....	859

Before You Start

About This Manual

Thank you for purchasing the SATO CL4NX/CL6NX (hereafter referred to as "the product").

This manual supplies basic information on how to operate the CL4NX/CL6NX. Read the manual carefully to understand each function of the CL4NX/CL6NX before operation.

Symbols

This operator manual uses following symbols:

Item	Description
 Warning	The Warning symbol indicates that you can cause death or serious injury if you do not follow the instructions or procedures.
 Caution	The Caution symbol indicates that you can cause injury or property damage if you do not follow the instructions or procedures.
 Note	The Note symbol indicates useful and supplemental information that you should know.
 Reference	The Reference symbol indicates the link of relevant information.



- Reproduction in any manner of all or part of this document is prohibited.
- The contents of this document may be changed without prior notice.
- Great care has been taken in the preparation of this document, but if any problems, mistakes, or omission are found, please contact your SATO reseller or technical support center.



- The illustrations and screens in this manual are from CL4NX, if there are no instructions.
- This manual uses the build version 1.10.0-r1 firmware in its descriptions.

Features of the Product

CL4NX/CL6NX is a high-performance labeling system with a robust casing made of metal and equipped with versatile functions. The main features of CL4NX/CL6NX are as follows:

- Simple and stylish design
- High-quality printing
- Designed for better usability
- Equipped with high legibility TFT color 3.5-inch LCD and LED
- Onboard Guidance Videos
- Print head and platen roller can be replaced without using extra tools
- Supports a 600 meters (1968.5 feet) ribbon
- Supports 31 languages for display and 47 languages for printing scalable fonts
- Supports various communication interfaces
- Supports protocols such as IPv6, SNMP and NTP
- Certified by Wi-Fi alliance



- Compatible with Cisco CCX V4.0



SATO CL4NX/CL6NX printer has tested compatible with Cisco CCX, version 4.0. The Cisco Compatible logo signifies that SATO product has undergone interoperability testing by SATO together with Cisco and a third-party test house based on testing criteria set by Cisco.

SATO is solely responsible for the support and warranty of its product. Cisco makes no warranties, express or implied, with respect to SATO product or its inter operation with the listed Cisco product(s) and disclaims any implied warranties of merchantability, fitness for a particular use, or against infringement.

- Conforms to international ENERGY STAR® program



CL4NX/CL6NX complies with the requirements of the ENERGY STAR. As an ENERGY STAR Partner, SATO Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Safety Precautions

This topic describes how to use the product safely.

Be sure to read the following information carefully before using the product.

Pictographic Symbols

This operator manual and the product labels use a variety of pictographic symbols. These symbols emphasize the safe and correct use of the product and to prevent injury to others and property damage. The explanation of the symbols is as follows. Be sure to understand these symbols well before you read the main text.

 Warning	Ignoring the instructions marked by this symbol and erroneously operating the product could result in death or serious injury.
 Caution	Ignoring the instructions marked by this symbol and erroneously operating the product could result in injury or property damage.

Example Pictographs



The  pictograph means "Caution is required". A specific warning symbol is contained inside this pictograph (The symbol at left is for electric shock).



The  pictograph means "Should not be done". What is specifically prohibited is contained in or near the pictograph (The symbol at left means "Disassembly prohibited").



The  pictograph means "Must be done". What is specifically to be done is contained in the pictograph (The symbol at left means "Unplug the power cord from the outlet").

⚠ Warning

 Do not set on an unstable area	<ul style="list-style-type: none"> Do not set on an unstable area, such as a wobbly table or slanted area or an area subject to strong vibration. If the product falls off or topples over, it could injure someone.
   Do not place containers full of water or other liquid on the product	<ul style="list-style-type: none"> Do not place flower vases, cups, or other containers holding liquids, such as water or chemicals, or small metal objects near the product. If they are spilled and get inside the product, immediately turn off the power switch, unplug the power cord from the outlet, and contact your SATO reseller or technical support center. Using the product in this condition could cause a fire or electric shock.
   Do not put objects inside the product	<ul style="list-style-type: none"> Do not insert or drop in metal or burnable objects inside the product's openings (cable outlets, etc.). If foreign objects do get inside the product, immediately turn off the power switch, unplug the power cord from the outlet, and contact your SATO reseller or technical support center. Using the product in this condition could cause a fire or electric shock.
  Do not use other than the specified voltage	<ul style="list-style-type: none"> Do not use other than the specified voltage. Doing so could result in fire or electric shock.
  Always ground the connections	<ul style="list-style-type: none"> Always connect the product's ground wire to a ground. Not grounding the ground wire could result in electric shock.

   <p>Handling the power cord</p>	<ul style="list-style-type: none"> Do not damage, break, or modify the power cord. Also, do not place heavy objects on the power cord, heat it, or pull it because doing so could damage the power cord and cause a fire or electric shock. If the power cord becomes damaged (core is exposed, wires broken, etc.), contact your SATO reseller or technical support center. Using the power cord in this condition could cause a fire or electric shock. Do not modify, excessively bend, twist, or pull the power cord. Using the power cord in such a condition could cause a fire or electric shock. The power cord set that comes with the product is designed especially for this product. Do not use it with any other electrical devices.
   <p>When the product has been dropped or broken</p>	<ul style="list-style-type: none"> If the product is dropped or broken, immediately turn off the power switch, unplug the power cord from the outlet, and contact your SATO reseller or technical support center. Using the product in this condition could cause a fire or electric shock.
  <p>Do not use the product when something is abnormal about it</p>	<ul style="list-style-type: none"> Continuing to use the product in the event something is abnormal about it, such as smoke or unusual smells coming from it, could result in fire or electric shock. Immediately turn off the power switch, unplug the power cord from the outlet, and contact your SATO reseller or technical support center for repairs. It is dangerous for the customer to try to repair it, so absolutely do not attempt repairs on your own.
  <p>Do not disassemble the product</p>	<ul style="list-style-type: none"> Do not disassemble or modify the product. Doing so could result in fire or electric shock. Ask your SATO reseller or technical support center to conduct internal inspections, adjustments, and repairs.
  <p>Do not operate with wet hands</p>	<ul style="list-style-type: none"> Do not operate the power switch or plug in/ unplug the power cord with wet hands. Doing so increases the risk of electric shock.

  Using the head cleaning fluid	<ul style="list-style-type: none"> Use of flame or heat around the head cleaning fluid is prohibited. Absolutely do not heat it or subject it to flames. Keep the fluid out of reach of children to prevent them from accidentally drinking it. If a child accidentally drinks the fluid, immediately consult with a physician.
 Laser beam	<ul style="list-style-type: none"> Do not look into the laser radiation window, and do not direct the laser beam at someone. If the laser beam hits eyes, it may cause visual disturbance.
   Print head	<ul style="list-style-type: none"> The print head is hot after printing. Be careful not to get burned when replacing media or cleaning immediately after printing. Touching the edge of the print head with bare hands could result in injury. Be careful not to become injured when replacing media or cleaning.
 Regarding the cutter	<ul style="list-style-type: none"> Do not touch the cutter with your hands or do not put something into the cutter. Doing so could result in an injury.
 Do not use in hazardous locations	<ul style="list-style-type: none"> The product is not explosion proof certified. Do not use in a potentially explosive environment or atmosphere.

⚠ Caution

 Do not place in areas with high humidity	<ul style="list-style-type: none"> Do not place the product in areas with high humidity or where condensation forms. If condensation forms, immediately turn off the power switch and do not use the product until it dries. Using the product while condensation is on it could result in electric shock.
---	---

 <p>Carrying the product</p>	<ul style="list-style-type: none"> When moving the product, always unplug the power cord from the outlet and check to make sure all external wires are disconnected before moving it. Moving the product with the wires still connected could damage the cords or connecting wires and result in a fire or electric shock. Do not carry the product with media loaded in it. The media could fall out and cause an injury. When setting the product on the floor or a stand, make sure not to get your fingers or hands pinched under the product feet. Do not carry the product with the barcode checker stand installed. The barcode checker stand could fall out and cause injury.
 <p>Handling the barcode checker stand kit</p>	<ul style="list-style-type: none"> Be careful avoid injury from pointed part of the barcode checker stand kit.
 <p>Always close the cover of the product</p>	<ul style="list-style-type: none"> Always close the cover of the product during operation. You may get injured by touching the moving parts. Also, dust or foreign objects may enter and cause the product to malfunction.
 <p>Top cover</p>	<ul style="list-style-type: none"> Be careful not to get your fingers pinched when opening or closing the top cover. Also be careful that the top cover does not slip off and drop.
 <p>Loading media</p>	<ul style="list-style-type: none"> When loading a media roll, be careful not to get your fingers pinched between the media roll and the supply unit.
 <p>When not using the product for a long time</p>	<ul style="list-style-type: none"> When not using the product for a long time, unplug the power cord from the outlet to maintain safety.
 <p>During maintenance and cleaning</p>	<ul style="list-style-type: none"> When maintaining and cleaning the product, unplug the power cord from the outlet to maintain safety.

 <p>Power cord and cables</p>	<ul style="list-style-type: none"> Grab power cords and cables by their plug when removing from electrical outlets or connector ports. Removing power cords and cables by grabbing the cord/cable may result in exposure of wires, breakage, fire, or electric shock. Do not place power cords and cables near heaters or other sources of heat. Placing power cords and cables near heaters or other sources of heat may result in melting of the power cord/cable sheathing, fire, or electric shock.
 <p>Opening and closing the print head</p>	<ul style="list-style-type: none"> When opening and closing the print head, be careful not to insert foreign materials, other than media, in the print head. Otherwise, it may result in injury or damage.

Precautions for Installation and Handling

Select a Safe Location

Product operations can be affected by the product's environment.

Refer to the following instructions regarding how to install and handle the product.

- **Place the product on a surface that is flat and level.**

If the surface is not flat and level, this may cause bad print quality. This may also cause a malfunction and decrease the life span of the product.

- **Do not place the product in a location that is subject to vibration.**

Subjecting the product to severe vibration or shock may cause a failure or damage to the product, leading to a product malfunction.

- **Keep the product out of high temperature and humidity.**

Avoid locations subject to extreme or fast changes in temperature or humidity.

- **Do not install the product in a location exposed to water or oil.**

Water or oil entering inside the product may cause a fire, electric shock or malfunction.

- **Avoid dust.**

Dust build up may cause lowered print quality, faults, or malfunctions.

- **Keep out of direct sunlight.**

The product has a built-in optical sensor. Exposure to direct sunlight may cause incorrect detection by the sensor so the product does not operate normally. Therefore, close the cover when using the product.

- **Do not use in hazardous locations.**

Do not use in a potentially explosive environment or atmosphere. Doing so could cause a fire or explosion.

Power Supply

Product operations can be affected by the product's environment.

Refer to the following instructions regarding how to install and handle the product.

- **The product requires an AC power supply.**

Be sure to connect the product to an AC power supply.

- **Connect the power cord to a grounded AC outlet.**

Make sure that the product is connected to a grounded AC outlet.

- **Supply a stable source of electricity to the product.**

When using the product, do not share its AC outlet with other electrical devices. This could cause power fluctuations and performance issues with your product.

Printing

The print result varies depending on the usage environment (temperature and humidity), the supply condition (the combination of media and ribbon), and the product settings (the print speed, the print darkness, etc.).

Please sufficiently test the product in your usage environment, and use it with the optimal combination.

If anything is unclear, or if you have any questions, contact your SATO sales representative or reseller.

Regulatory Approval

FCC Warning

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cable must be used in order to comply with the emission limits.

FCC Statement for Optional Wireless LAN

This device complies with RF radiation exposure limits set forth for an uncontrolled environment.

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all people and must not be collocated or operating in conjunction with any other antenna or transmitter.

Bluetooth/Wireless Communication

Compliance Statement

This product has been certified for compliance with the relevant radio interference regulations of your country or region. To make sure continued compliance, do not:

- Disassemble or modify this product.
- Remove the certificate label (serial number seal) affixed to this product.

Use of this product near microwave and/or other wireless LAN equipment, or where static electricity or radio interference is present, may shorten the communication distance, or even disable communication.

Industry Canada (IC) Statement for Bluetooth

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be

installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- L'appareil ne doit pas produire de brouillage.
- L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



A product marked with this symbol on itself or on its packaging shall not be treated as household waste. Instead it shall be handed over to an appropriate collection point for the recycling of electrical and electronic equipment in accordance with local regulations. Inappropriate waste handling of this product may cause detrimental consequences for the environment and damage to human health. The recycling of materials will help to conserve natural resources and contribute to your community. For more detailed information on recycling of this product, please contact your local municipal organization, your household waste disposal service or the dealer where you purchased the product.

机器名称:条码打印机

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ⁶⁺)	多溴联苯 (PBB)	多溴二 苯醚 (PBDE)
印刷电路板	×	○	○	○	○	○
电源、交流转换器 电池	×	○	○	○	○	○
热敏头、液晶显示屏	×	○	○	○	○	○
电动机、切纸机	×	○	○	○	○	○
树脂(ABS、PC等)	×	○	○	○	○	○
金属(铁、非铁金属)	×	○	○	○	○	○
电缆等	○	○	○	○	○	×
包装材料(纸盒等)	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○：表示该有毒有害物质在该部件所有均质材料中的含量均在

GB/T 26572 “电子信息产品中有毒有害物质的限量要求”的标准规定以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出

GB/T 26572 “电子信息产品中有毒有害物质的限量要求”的标准规定。

环保使用期限



本标志中的年数，是根据2006年2月28日公布的“电子信息产品污染防治管理办法”和SJ/T11364 “产品污染防治标识要求”，适用于在中华人民共和国（除台湾、香港和澳门外）生产或进口的电子信息产品的“环保使用期限”。在遵守使用说明书中记载的有关本产品安全和使用上的注意事项、且没有其他法律和规定的免责事由的情况下，在从生产日开始的上述年限内，产品的有毒、有害物质或元素不会发生外泄或突变，使用该产品不会对环境造成严重污染或对使用者人身、财产造成严重损害。

注1)：“环保使用期限”不是安全使用期限。尤其不同于基于电气性能安全、电磁安全等因素而被限定的使用期限。产品在经适当使用后予以废弃时，希望依照有关电子信息产品的回收和再利用的法律与规定进行处理。

注2)：本标志中的年数为“环保使用期限”，不是产品的质量保证期限。对于同一包装内包含电池、充电器等附属品的产品，产品和附属品的环保使用期限可能不同。

Environmentally Hazardous Materials

RoHS Directive

This product restricts the use of the six hazardous materials listed below, as specified by RoHS directive.

Hexavalent chromium	Max. 0.1%
Lead and lead compounds	Max. 0.1%
Mercury and mercury compounds	Max. 0.1%
Cadmium and cadmium compounds	Max. 0.01%
Polybrominated biphenyls (PBB)	Max. 0.1%
Polybrominated diphenyl ethers (PBDE)	Max. 0.1%

Compliance Status of REACH Regulation

(1) Status of registered chemical substances

No chemical substances are intentionally emitted, nor are there any chemical substances that are registered with the European Chemicals Agency.

(2) Information about the Substances of Very High Concern (SVHC) contained in the product

Currently, there has been no information communicated regarding SVHC that exceed 0.1% of the product's weight. In the future, if SVHC that exceed 0.1% of the product's weight are found, we will immediately communicate that information.

Copyrights/Limitation of Liability/Trademarks

Copyrights

Any unauthorized reproduction of the contents of this document, in part or whole, is strictly prohibited.

© 2018 SATO Corporation. All rights reserved.

Limitation of Liability

- SATO Corporation and its subsidiaries in Japan, the U.S. and other countries make no representations or warranties of any kind regarding this material, including, but not limited to, implied warranties of merchantability and fitness for a particular purpose. SATO Corporation shall not be held responsible for errors contained herein or any omissions from this material or for any damages, whether direct, indirect, incidental or consequential, in connection with the furnishing, distribution, performance or use of this material.
- Specifications and contents in this document are subject to change without notice.
- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

Trademarks


- SATO is a registered trademark of SATO Holdings Corporation and its subsidiaries in Japan, the U.S. and other countries.
- NiceLabel is a trademark or registered trademark of Euro Plus d.o.o. in the U.S.A and other countries.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance.
- Wi-Fi Direct™, Wi-Fi Protected Setup™, WPA™ and WPA2™ are trademarks of Wi-Fi Alliance.
- Windows and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Cisco, the Cisco logo, and Cisco Systems are trademarks or registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.
- Bluetooth is a trademark of Bluetooth SIG, Inc., U.S.A.
- ENERGY STAR® and ENERGY STAR mark are registered U.S. marks.
- ICODE, I-CODE, and SLI are registered trademarks of NXP B.V.
- MIFARE® is a registered trademark of NXP B.V.
- Tag-it™ is a trademark of Texas Instruments.
- my-d™ is a registered trademark of Infineon Technologies AG.
- FeliCa is a registered trademark of Sony Corporation.
- FeliCa is a contactless IC card technology developed by Sony Corporation.
- Android, YouTube, the YouTube logo, and Google Chrome are trademarks or registered trademarks of Google LLC.
- iPad, iPhone, and Safari are trademarks of Apple Inc., registered in the U.S. and other countries.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- All other trademarks are the property of their respective owners.

Basic Information


Bundled Accessories

After unpacking the product, make sure that you have all the bundled accessories. If there are any missing items, contact the SATO reseller where you purchased the product.

- User documents (Quick Guide, Safety Instructions, and Global Warranty Program leaflet)

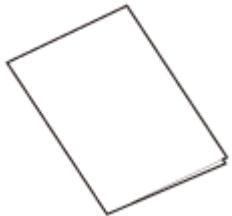

- Power cord

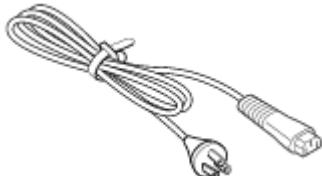

The shape of power plug varies depending on the region in which it was purchased.



- Keep the packaging box and cushioning material after installing the product. You can pack the product with this packaging box for shipment when requesting for repairs.

Optional Devices

The optional devices for the product are as follows. The optional devices can be factory installed or installed by the customer engineer. Contact your SATO reseller or technical support center.

Optional Devices	Description	Supported Models	
		CL4NX	CL6NX
Cutter unit	Automatically cuts the media in the designated number of pages.	Available	Available
Simple dispenser kit	Removes the label from the liner. The liner is ejected out of the product.	Available	Available
Dispenser unit (with internal liner rewinder)	Removes the label from the liner. The liner can be ejected out of the product or rewound inside of the product.	Available	Available
Linerless cutter kit	The environmentally friendly linerless labels can be used.	Available	-
RTC (Calendar) kit	A calendar system for printing the date and time on a label to output.	Available	Available
External rewinder	Automatically rewinds the label output by the product.	Available RWG500	Available RWG500 (6-inch extension kit)
UHF RFID kit (ISO/IEC 18000-6 Type C Gen2)	Supports UHF RFID. It can read and write to the IC tag and label.	Available	-
HF RFID kit (ISO/IEC15693, ISO/IEC 14443 TypeA, FeliCa Lite-S)	Supports HF RFID. It can read and write to the IC tag and label.	Available	-
WLAN 802.11a/b/g/n Dual Band WLAN (2.4GHz, 5GHz)	Communicates with the wireless LAN.	Available	Available
Barcode checker stand kit	A stand kit to mount the barcode checker.	Available	Available
External cover kit	A set of covers to prevent dust from entering the external openings for label supply.	Available	Available




- For more details about the optional devices, contact your SATO sales representative.
-

Parts Identification

Parts Identification for the Product

Front View

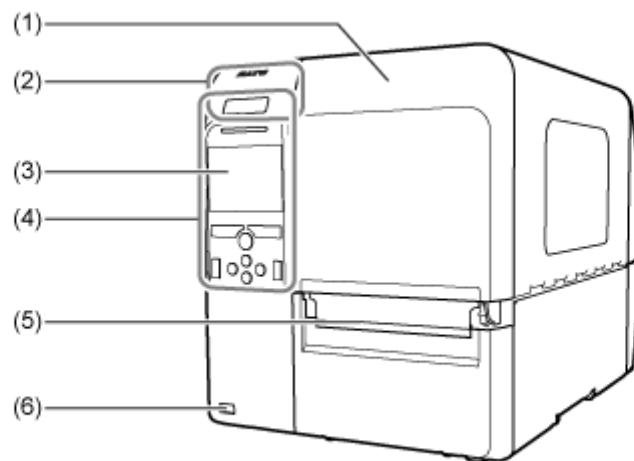

(1) **Top cover**

(2) **NFC antenna location**

*This feature is supported on products from serial number 6B~ and above.

(3) **Color LCD**

(4) **Operator panel**

(5) **Media discharge outlet**

(6) **USB connector (Type A)**


Enable the storage of product settings information with USB memory.

Also, other devices like a barcode checker, barcode scanner or keyboard can be connected.



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

Rear View

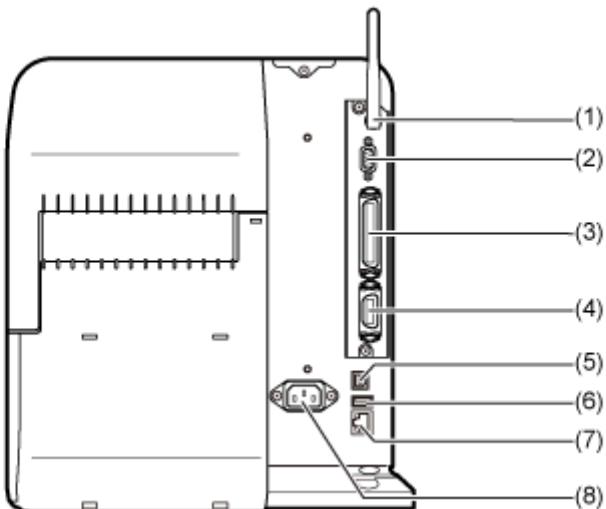

(1) Wireless LAN antenna (Optional)

Connector for installation of optional wireless LAN antenna.

(2) RS-232C connector

To connect the product to the computer using the RS-232C serial interface.

You can also connect a barcode checker.

Usage of the RS-232C interface can be selected in the [Tools] > [Barcode Checker] > [Test] > [Interface] menu.

(3) IEEE1284 connector

To connect the product to the computer using the IEEE1284 interface.

(4) EXT connector (External signal interface)

Interface connector for external signals. Connect an optional device to this terminal.

(5) USB connector (Type B)

To connect the product to the computer using the USB interface.

(6) USB connector (Type A)

Enable the storage of product settings information with USB memory.

Also, other devices like a barcode checker, barcode scanner or keyboard can be connected.



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

(7) LAN connector


To connect the product to the network using the LAN interface.

(8) AC input terminal

Supplies power to the product through the inserted power cord.

Before connecting, make sure that the AC voltage of your region is in the range of AC 100 to 240 V, 50 to 60 Hz.

Internal View

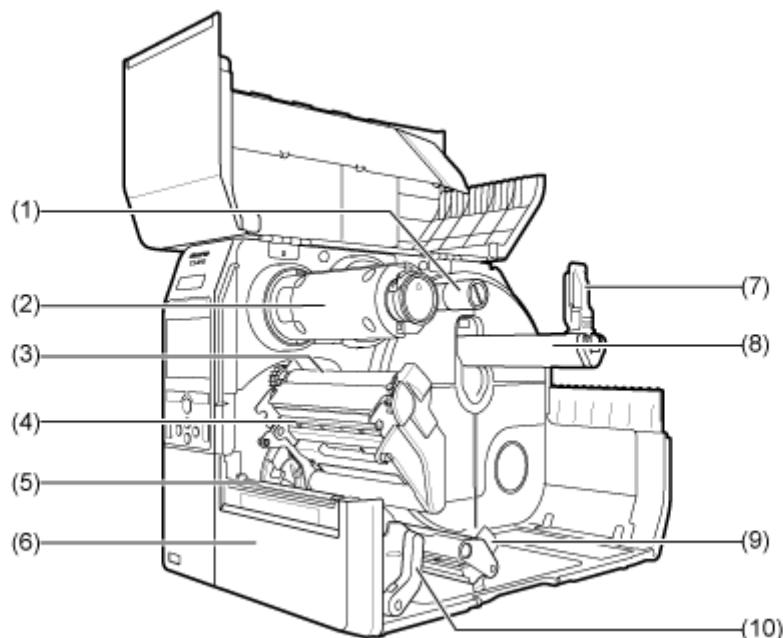

(1) Ribbon supply spindle

(2) Ribbon rewind spindle

(3) Ribbon roller

(4) Print head (Consumables)

Creates an image directly on the media or by using a ribbon. Clean the print head regularly.

(5) Platen roller (Consumables)

(6) Front cover

(7) Media holder guide

Used to hold the media roll.

(8) Media roll holder


Used to hang the media roll to the bar.

(9) Media guide

(10) Head lock lever

Used to release the print head assembly.

Parts Identification for the Operator Panel

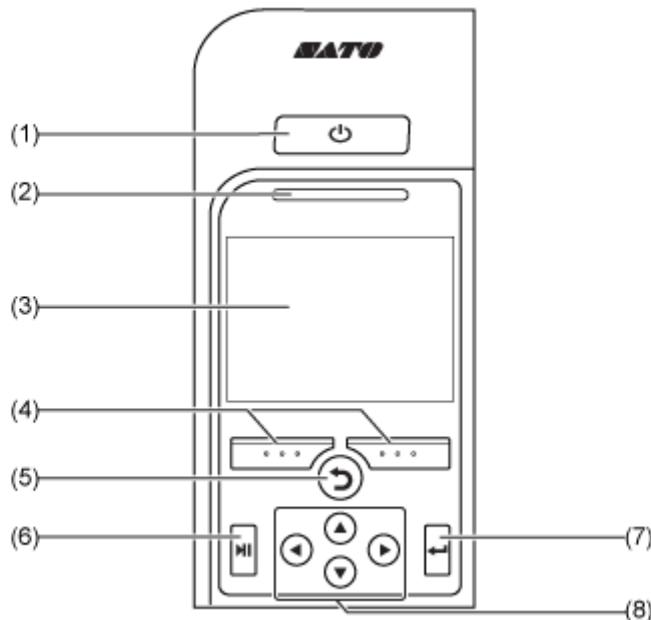

(1) Power button

To power on the product, press the power button until the LED lights up in blue.

To power off the product, press the power button for more than two seconds.

(2) LED indicator

(3) Color LCD

(4) Soft buttons

The functions change depending on the screen. The functions of the buttons are indicated on the bottom of the screen.

Example 1: In Offline mode



left soft button: ONLINE, right soft button: FEED

Example 2: The numerical value input screen of the Settings menu



left soft button: Delete one character, right soft button: Save

- (5) **Back button**

Returns to the previous screen.

- (6) **Line button**

Toggle between Online/Offline mode or playback/pause the video.

- (7) **Enter button**

Confirm the selected item or setting value.

- (8) **Arrow buttons**

Navigate the selection in the screen menu.

Using the Operator Panel

Display and Operation of the Operator Panel

LED Indicator

The LED indicator lights up or flashes to show the current status of the product. The product statuses which the LED indicator shows are as follows:

LED Indicator	Color/Status	Description
	Blue/Lights on	Online mode
	Lights off	Power off or Offline mode
	Red/Lights on	Product error (for example, when the ribbon runs out)
	Blue/Flashes at intervals of two seconds	Sleep mode (energy saving mode)




- If the product enters sleep mode during a product error status (LED lights red), the LED indicator will flash blue at intervals of two seconds.
- By default, the product goes into sleep mode after 60 minutes of inactivity. Use the [Energy Saving] menu to change the period before the product enters sleep mode.

Operations in Online/Offline Mode

Online Mode

In Online mode, you can execute the print job.

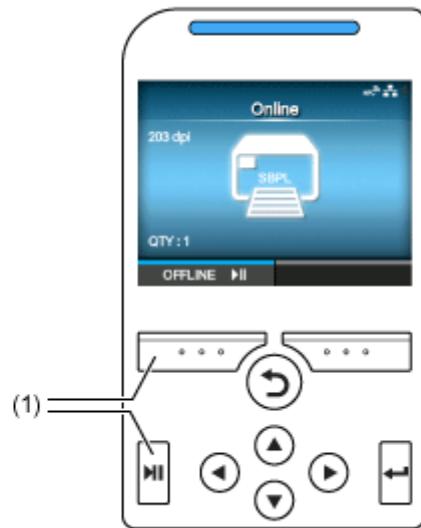

(1) Change to Offline mode.

Offline Mode

In Offline mode, the print job will stop.

You can adjust the print settings, cancel the print job or feed the media.

After you complete or cancel the print job, you can show the Settings mode.



(1) Cancel the print job.

(2) Change to Online mode.

(3) Feed the media.

(4) Shows the Adjustments mode when the print job is paused.

Shows the Settings mode when there are no print jobs.

Status Icon

The icons on the status bar of the display show the product's status.




(1) Status bar

Communication Interface Status

Icon	Description
	Bluetooth is enabled but not connected.
	Bluetooth is enabled and connected.
	Network link is enabled but not connected.
	Network link is enabled and connected.
	NFC is enabled but not connected.

Icon	Description
	NFC is enabled and connected.
	Not connected to the NTP time server.
	Wi-Fi is authenticated, but not connected.
	Wi-Fi is connected. Signal Level: 1
	Wi-Fi is connected. Signal Level: 2
	Wi-Fi is connected. Signal Level: 3
	Wi-Fi is connected. Signal Level: 4
	Wi-Fi Direct is not connected.
	Wi-Fi Direct is connected. Signal Level: 1

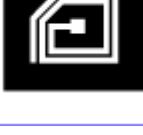Icon	Description
	Wi-Fi Direct is connected. Signal Level: 2
	Wi-Fi Direct is connected. Signal Level: 3
	Wi-Fi Direct is connected or the product is set to act as an access point. Signal Level: 4
	Product is connected to USB host.
	Waiting for external input/output signal.
	RFID mode is enabled. (CL4NX only)
	Standard code is disabled.
	The On-Demand mode of the SOS (SATO Online Services) is enabled.
	The Real Time mode of the SOS is enabled. The product is connected to the SOS cloud.

Icon	Description
	The Real Time mode of the SOS is enabled, but not connected to the SOS cloud. If the LAN or Wi-Fi icon is grayed out, the product is not connected to the network. If the LAN or Wi-Fi icon is active, the Internet connection of the SOS cloud has a trouble.
	Time period set for periodic notification for On-Demand mode for SOS has been reached. Scan the QR code and send the information to the SOS cloud.
	IP address could not be acquired. Or a communication error has occurred.

USB Memory Status

Icon	Description
	USB memory is connected.

Barcode Checker Status

Icon	Description
	Barcode checker is connected.

Barcode Scanner Status

Icon	Description
	Barcode scanner is connected in AEP mode.

Print Job Status

Icon	Description
	Waiting for media removal. Remove the media.
	Ribbon is near the end. The rest of the ribbon is decreased. Prepare a new ribbon.
	Label is near the end. The rest of the media is decreased. Prepare new media.
	Command error detected. Check the print data.
	Receive buffer is nearly full. Stop sending print data until the buffer is no longer nearly full.
	Defective print head is detected. Replace the print head.
	Incompatible print head is detected. Replace the print head.

Maintenance Status

Icons notify you about cleaning the product and replacing parts at the set periods when [Notifications] is enabled.

Icon	Description
	Clean the print head or platen roller.
	Replace the print head.
	Replace the platen roller.
	Replace the cutter unit.


Operations When Errors Occur

When a product error occurs, an icon and message (the error and solution) for the error appear on the display. When an error occurs, you can perform the following operations:

- Change to Offline mode.
- Cancel the error.
- Feed the media.
- Change to Settings mode.
- Change to guidance video.
- Change to the SOS error screen on which the QR code and phone number are displayed if the SOS (SATO Online Services) is enabled.



- The available operations vary, depending on the situation.

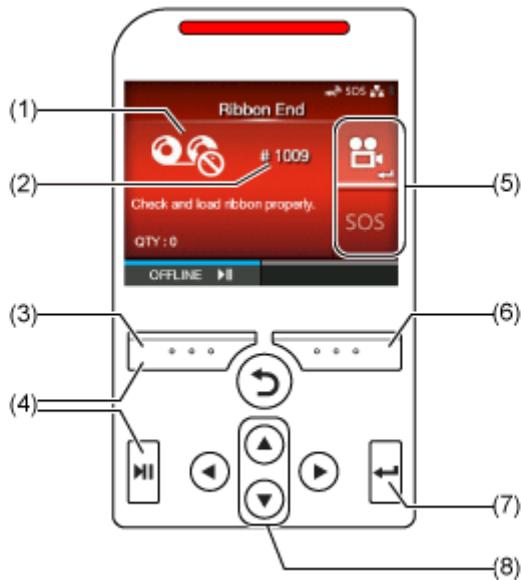

(1) Error Icon

(2) Error number

(3) Clear the error if allowed for the active error.

(4) Change to Offline mode if allowed for the active error.

(5) The icon appears when the Settings mode or guidance video is available.

The SOS icon appears when the SOS is enabled.

(6) Feed the media if allowed for the active error.

(7) Change to Settings mode or guidance video.

Change to the SOS error screen on which the QR code and phone number are displayed if the SOS is enabled.

(8) When there are two icons on the (5) area, select the icon by using / buttons. The selected icon will be highlighted.

Error Icon

Icon	Description
	Paper end is detected.
	Ribbon end is detected.

Icon	Description
	Print data is larger than the media size.
	Sensor error is detected.
	Print head is unlocked.
	Print head error is detected.
	<ul style="list-style-type: none"> Communication error is detected. BCC error is detected. CRC error is detected.
	Receive buffer overflow.
	Cutter error is detected.
	<ul style="list-style-type: none"> USB memory is not accessible. There is no free space in the USB memory.
	Calendar error is detected.

Icon	Description
	<ul style="list-style-type: none"> Writing/reading information to/from the RFID tag failed. (CL4NX only) With Non-RFID warning enabled and RFID tag loaded, the items received do not contain an RFID issue command. (CL4NX only)
	<ul style="list-style-type: none"> Wireless LAN setting error is detected. Authentication with the server failed. Authentication with the server timed out.
	<ul style="list-style-type: none"> No print head installed or head resolution was changed. Product error was detected.
	The temperature of the print head has exceeded the tolerance range.
	RFID module is defective. (CL4NX only)
	Bluetooth module is defective.
	Paper jam is detected. (CL4NX only)
	NFC error is detected.
	NFC command error is detected.

Icon	Description
	The barcode checker is not detected at product startup or at the start of printing when the barcode check mode is enabled.
	<ul style="list-style-type: none"> The barcode could not be read. The read result of the barcode does not match the command data.

Guidance Videos

The product contains guidance videos that are shown on the display for visual reference of the product's operations.

List of the Guidance Videos

The product contains the following guidance videos for visual reference of product operations.

The onboard guidance videos are as follows:

No.	Guidance Videos	Show video from		
		Error screen	Startup Guide	[Information] Menu
1	Media roll loading (Standard)	-	Possible	Possible
2	Media roll loading (Cutter)	-	Possible	Possible
3	Media roll loading (Linerless) (CL4NX only)	-	Possible	Possible
4	Media roll loading (Dispenser)	-	Possible	Possible
5	Media roll loading (Dispenser with rewinder)	-	Possible	Possible
6	Fan-fold media loading (Standard)	-	Possible	Possible
7	Fan-fold media loading (Cutter)	-	Possible	Possible
8	Ribbon loading	-	Possible	Possible
9	Media roll replacement (Standard)	Possible	-	Possible

No.	Guidance Videos	Show video from		
		Error screen	Startup Guide	[Information] Menu
10	Media roll replacement (Cutter)	Possible	-	Possible
11	Media roll replacement (Linerless) (CL4NX only)	Possible	-	Possible
12	Media roll replacement (Dispenser)	Possible	-	Possible
13	Media roll replacement (Dispenser with rewinder)	Possible	-	Possible
14	Fan-fold media replacement (Standard)	Possible	-	Possible
15	Fan-fold media replacement (Cutter)	Possible	-	Possible
16	Ribbon replacement	Possible	-	Possible
17	Print head replacement	-	-	Possible
18	Platen roller replacement	-	-	Possible
19	Cleaning	-	-	Possible

Playing the Guidance Video from the Error Screen

Play the guidance video from the error screen and resolve the error by following the procedure of the video.

1. On the error screen, press the  button to play the guidance video.



If there are more videos to choose from, press the arrow buttons to select the guidance video, and then press the  button. The guidance video starts.

2. Follow the procedures to resolve the error according to the guidance video.

Getting Access to the Guidance Video in Online Mode

When in the Online mode, play the guidance video according to the following procedure.

1. Press the  button in Online mode.




The product changes to Offline mode.

2. Press the  button.



The product changes to Settings mode.


3. Select [Information] using the  /  buttons.

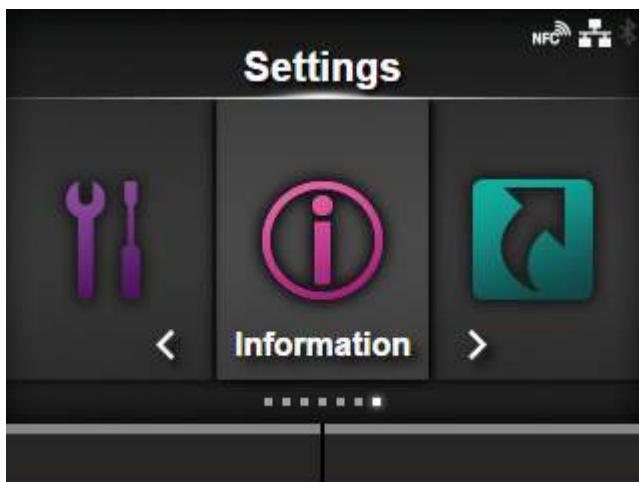

4. Press the  button.

The item list appears.


5. Select [Help] using the / buttons.

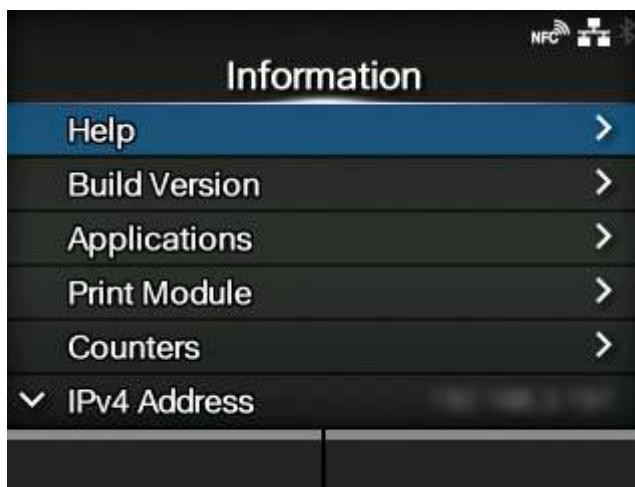

6. Press the button.


The guidance video list appears.

7. Select the video for playback using the / buttons, and then press the button.

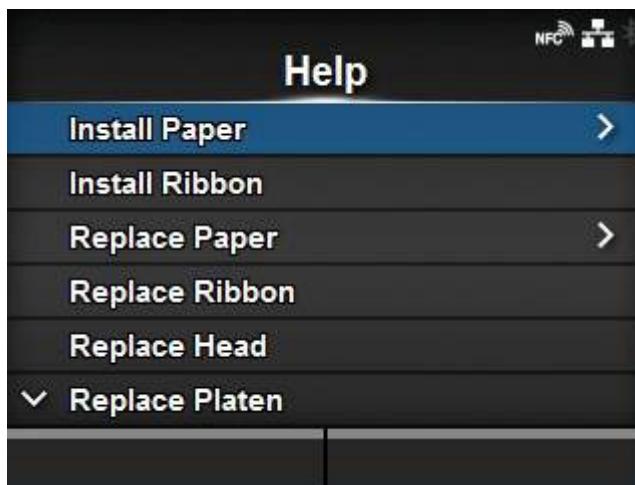

The guidance video starts.

Operating the Guidance Video

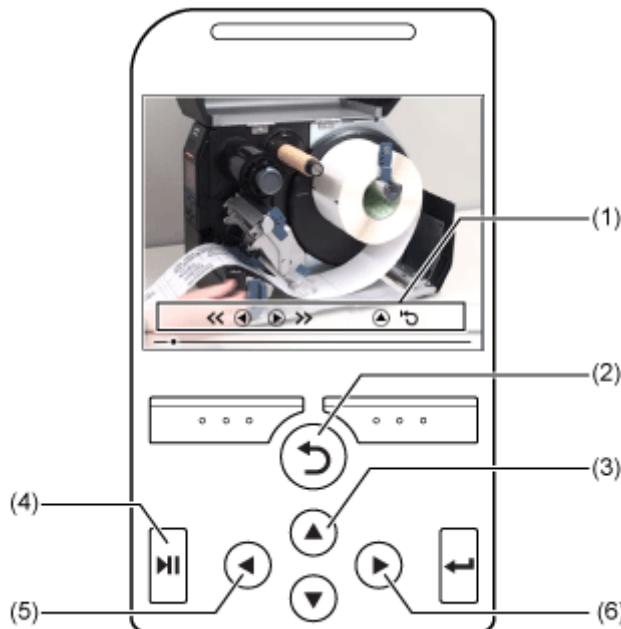

- (1) Indication panel appears again when one of the buttons is pressed.
- (2) Stop the playback of the video and return to menu.
- (3) Playback the video from the start.
- (4) Playback or pause the video.
- (5) Rewind the video.
- (6) Fast-forward the video.

Adjusting the Print Settings During Printing

Follow the procedure below to adjust the print position, print darkness and print speed during printing.


1. Press the  button to pause print job and change the product to Offline mode.

2. Press the  button.



The Adjustments mode appears.

3. Select an item and adjust the setting.

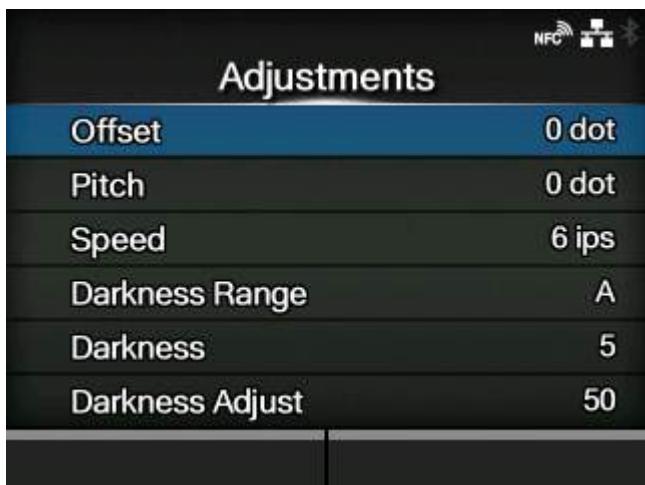

4. Press the  button to return to Offline mode.

5. Press the  button to change to Online mode.

The print job resumes with the adjusted settings.



- When [Printing] > [Advanced] > [Prioritize] menu has been set to [Commands] and the print settings have been specified by command, the changes made in the Adjustments mode will be applied only to the data already analyzed at that time. The settings specified by command will be applied to the rest of the data.

Canceling the Print Job

Cancel the print job according to the following procedure. When the print job is canceled, the data stored in the receive buffer of the product is also deleted.


1. Press the  button to change the product to Offline mode.

2. Press the  button.



A message appears, confirming that you want to cancel the print job.

3. Press the  button.

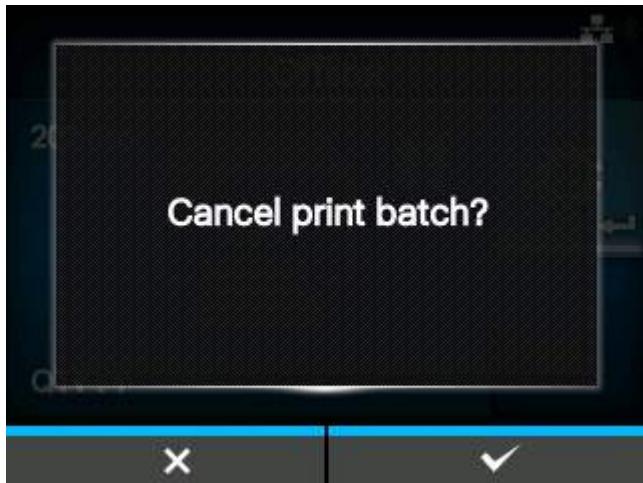


The print job is canceled.

Settings Mode

In the Settings mode, you can set the product's various settings. The topics here explain how to operate the Settings mode.

Settings Mode Menus

There are six main menus in the Settings mode and each menu contains many layers of submenus. Frequently used settings are also listed in the [Shortcut] menu so that you can directly access them.

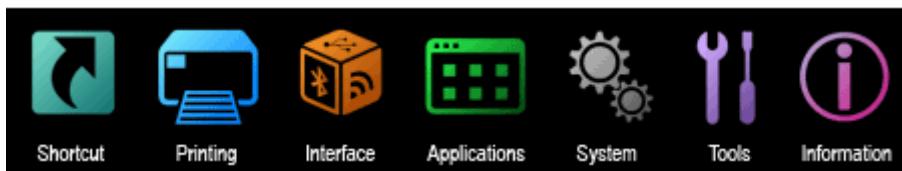

Menu	Description
Shortcut Menu	Directly access frequently used settings.
Printing Menu	Access the settings related to printing.
Interface Menu	Access the settings related to the interfaces.
Applications Menu	Access the settings related to the printer command.
System Menu	Access the settings related to the display language, buzzer volume etc.
Tools Menu	Access the test print, initialization and other settings.
Information Menu	Displays the information and guidance videos for the product.



The  icon appears between the [Information] menu and [Shortcut] menu when the [System] > [Regional] > [Display Language Icon] menu is enabled. You can easily access the [Language] menu.

Changing to the Settings Mode

The Settings mode appears when no print jobs remain in the product.

Change the product to the Settings mode according to the following procedure:

1. Press the  button in Online mode.




The product changes to Offline mode.

2. Press the  button.



The product changes to Settings mode.

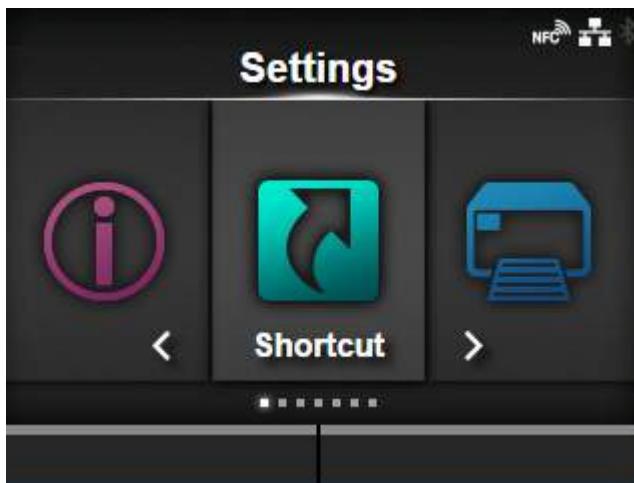



- To exit the Settings mode, press the button.

Logging In to/Logging Out of the Settings Mode


The Settings mode logs in and logs out by the following procedure, if the password is enabled.

- If the password is enabled, input the password after entering the Settings mode.



When logged in to the Settings mode, [LOG OUT] appears on the bottom left of the screen.

- Press the button to log out of the Settings mode.

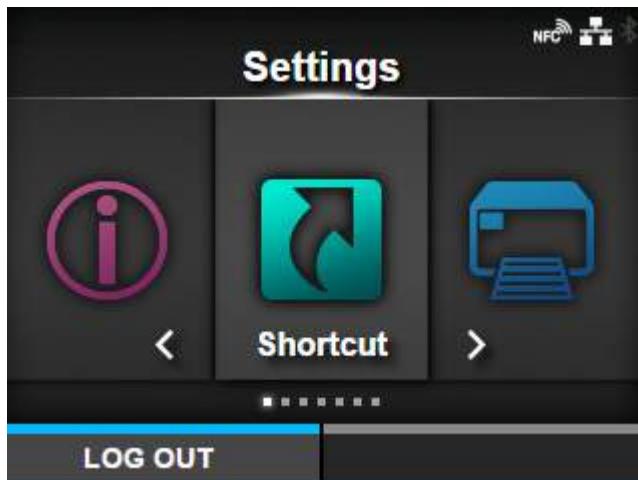

Password is required to enter the Settings mode again.



- With password enabled, if no button is pressed for about 10 minutes after login, the login session will end automatically. Password is required to enter the Settings mode again.

Item Selection

Select an item in Settings mode according to the following procedure:

1. Select menu using the  /  buttons.

2. Press the  button.



The item list appears.

3. Select an item using the  /  buttons.

4. Press the  button.



If the selected item is a setting item, the setting screen appears.


If the selected item is a handling item such as the auto calibration, copy, or delete, the starting screen or confirmation screen appears.

Items with a [>] indicated on the right side have more items in the next layer of the submenu.

Press the  or  button to show the next layer.

Similarly, select an item using the  /  and  buttons.

Press the  button to return to the previous screen.

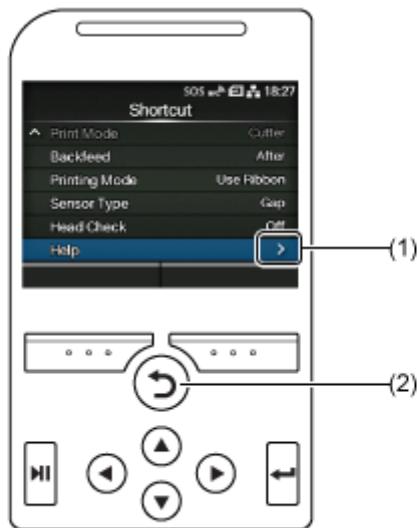

(1) There are more items in the next layer.

(2) Return to the previous screen.


Setting Value Input or Selection

This topic describes the character and number input on the setting screen and how to select an item from the list.




- You can also input characters and numbers from a USB keyboard by connecting it to the product.
- [Character Input](#)
- [Numeric Input](#)
- [Selection from the List](#)
- [Selection from the Box](#)
- [IP Address Input](#)

- **Character Input**

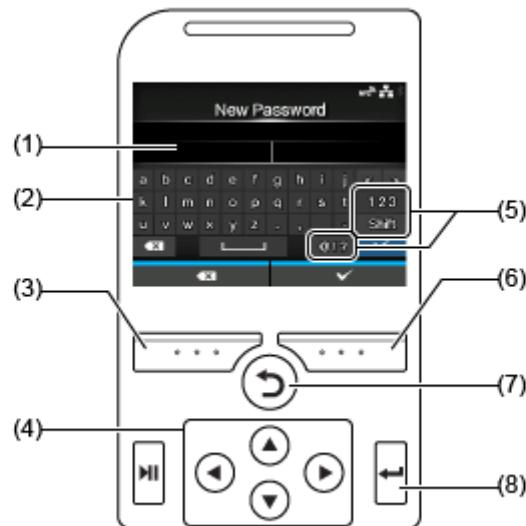


- **Numeric Input**

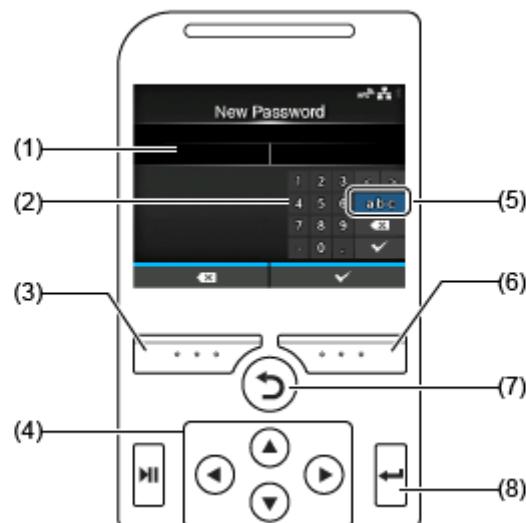

- (1) Text box


- (2) Selection area
- (3) Delete the number displayed to the left of the cursor in the text box.
- (4) Select the number for input using the arrow buttons. The selected number will be highlighted in the selection area.
- (5) Change the input mode.
- (6) Save the number you enter in the text box and return to the item list.
- (7) Cancel the number you enter in the text box and return to the item list.
- (8) Enter the selected number into the text box.

- **Selection from the List**

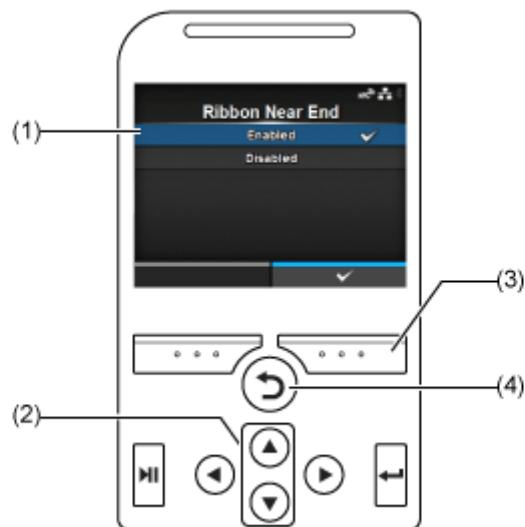


- (1) Selection area
- (2) Select an item using the / buttons. The selected item will be highlighted in the selection area.
- (3) Save the selection from the list and return to the item list.
- (4) Cancel the selection from the list and return to the item list.

- **Selection from the Box**

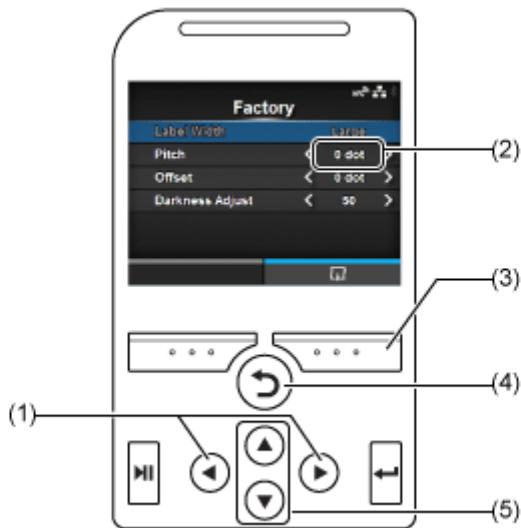

- (1) Change the value in the selection box using the / buttons.
- (2) Selection box
- (3) Perform the function as shown on the screen above.
- (4) Return to the previous screen.
- (5) Select an item using the / buttons. The selected item will be highlighted in the selection area.

- **IP Address Input**

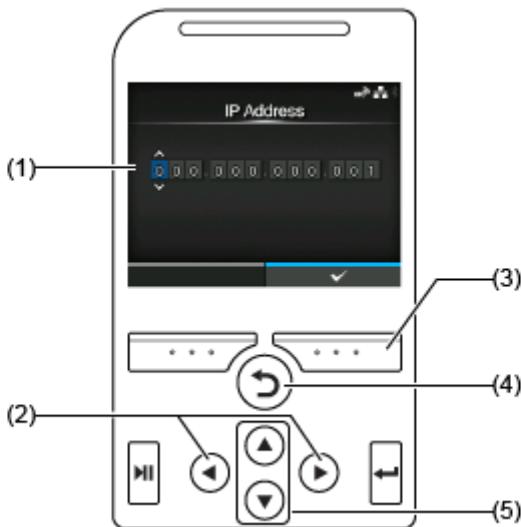

- (1) Text box
- (2) Select the digit for input using the / buttons.
- (3) Save the IP address you enter in the text box and return to the item list.

(4) Cancel the IP address you enter in the text box and return to the item list.

(5) Select the number to input using the  /  buttons.

Product Memory and USB Memory

The memory of the user area of the product is a maximum of 679 MB.

However, you cannot use the whole memory of the user area, because this area is also used for the log data and HEX dump functions.

USB memory can be connected to the product. There is no capacity limit for USB memory.

There are two USB connectors (Type A) at front and back of the product. USB memory can be connected to either connector.

What you can do with this product while it is connected to USB memory is as follows:

- Get the HEX dump data
- Install certificates used for Wi-Fi authentication and for HTTPS
- Get the barcode check log data
- Create clone data (copy the product's settings information)
- Get the support information



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.
-



- The product does not support USB memory with security functions such as fingerprint authentications.
 - The product does not support connection through the USB HUB.
-

Getting Started

Installation

Installation Precautions

Install the product in a location as follows:

- A location that is horizontal and stable.
- A location that has sufficient space for operating the product.

Do not install the product in a location as follows. Doing so could cause the product to malfunction.

- A location that is subject to vibration.




- A location with high temperature and humidity.



- A dusty location.



- A location exposed to direct sunlight.

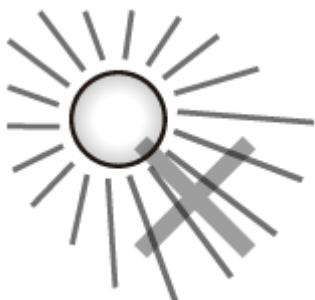

- A location with a lot of electrical noise.



- A location with a large fluctuation in power.



- A location with an explosive atmosphere (flammable gas or vapor).


Installation Space

Front View


Make sure that there is sufficient space around the product so that the top cover can be fully opened when operating or cleaning the product, or replacing consumables.

The dimensions of the front view of the product are as follows:

CL4NX

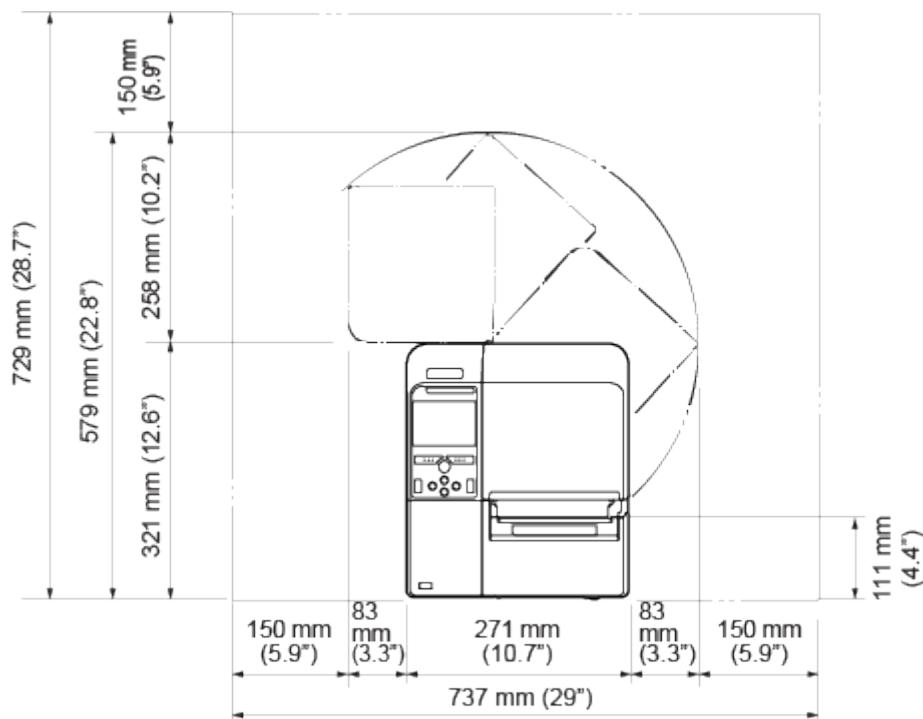

- The image above is the standard model.

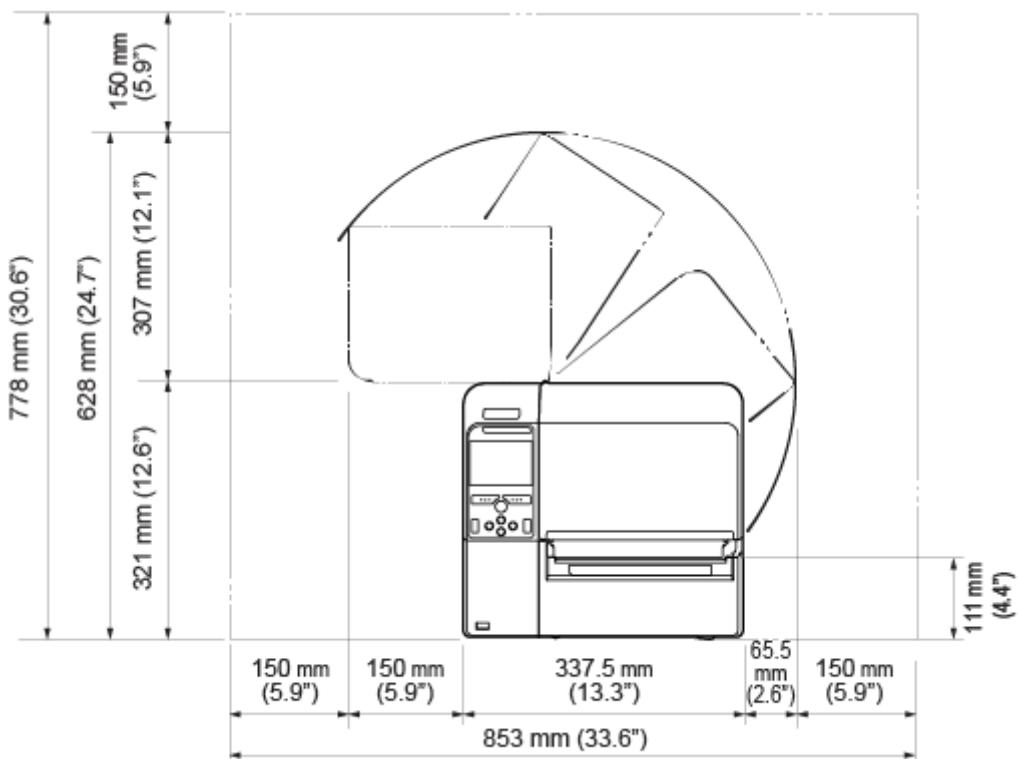CL6NX


- The image above is the standard model.

Side View

Make sure that there is sufficient space around the product so that the top cover can be fully opened when operating or cleaning the product, or replacing consumables.

Make sure that there is sufficient space on the rear side of the product so that no stress is applied to the power cord or cables connected to the product.

The dimensions of the side view of the product are as follows:

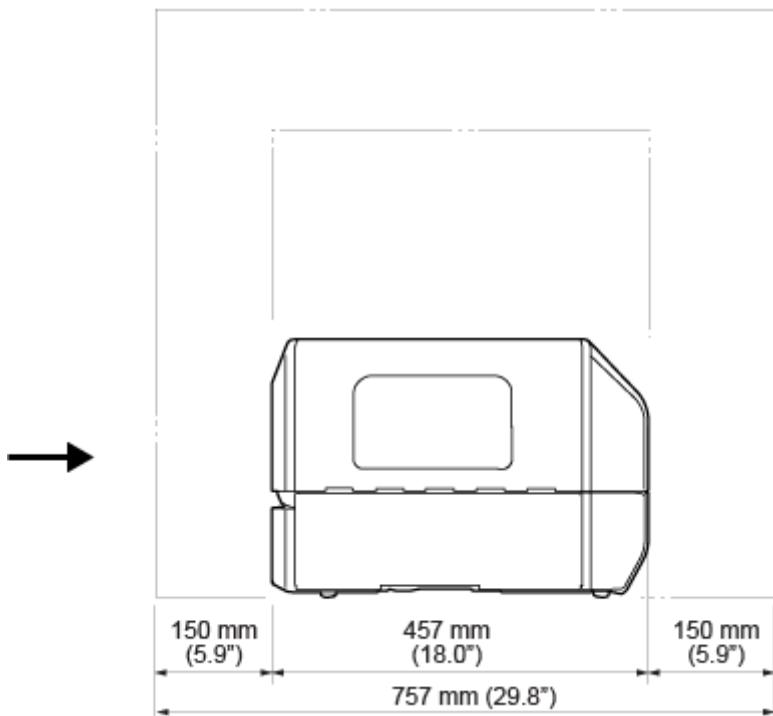


- The arrow indicates the front of the product.

Bottom View


The bottom surface dimensions of the product are as follows:

CL4NX

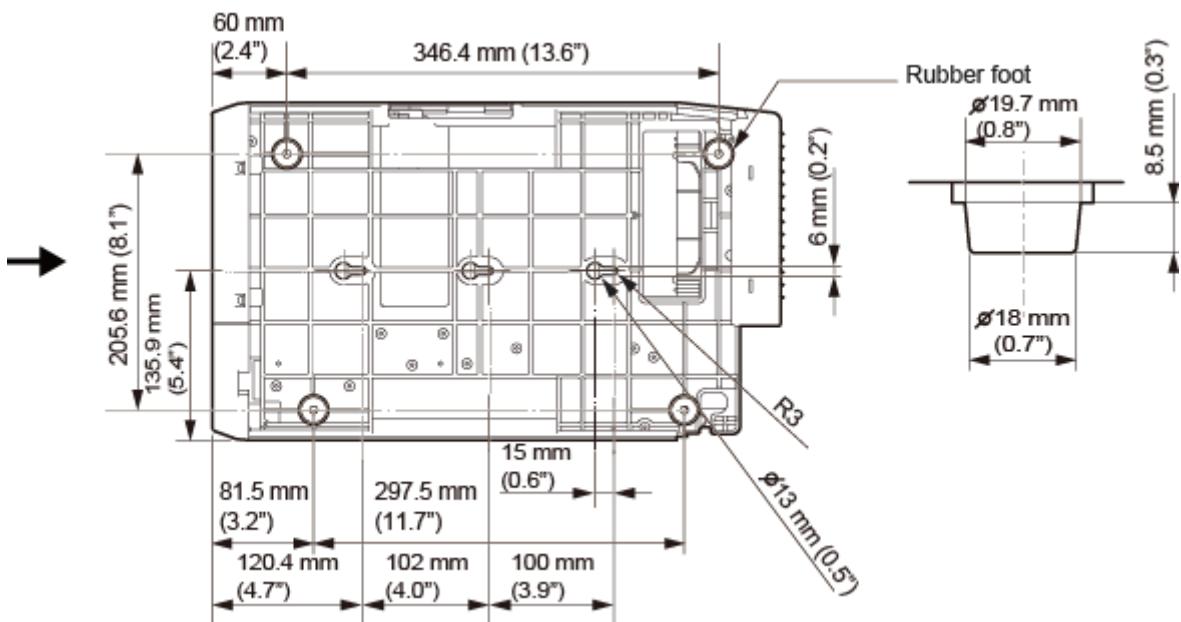

- The arrow indicates the front of the product.

CL6NX

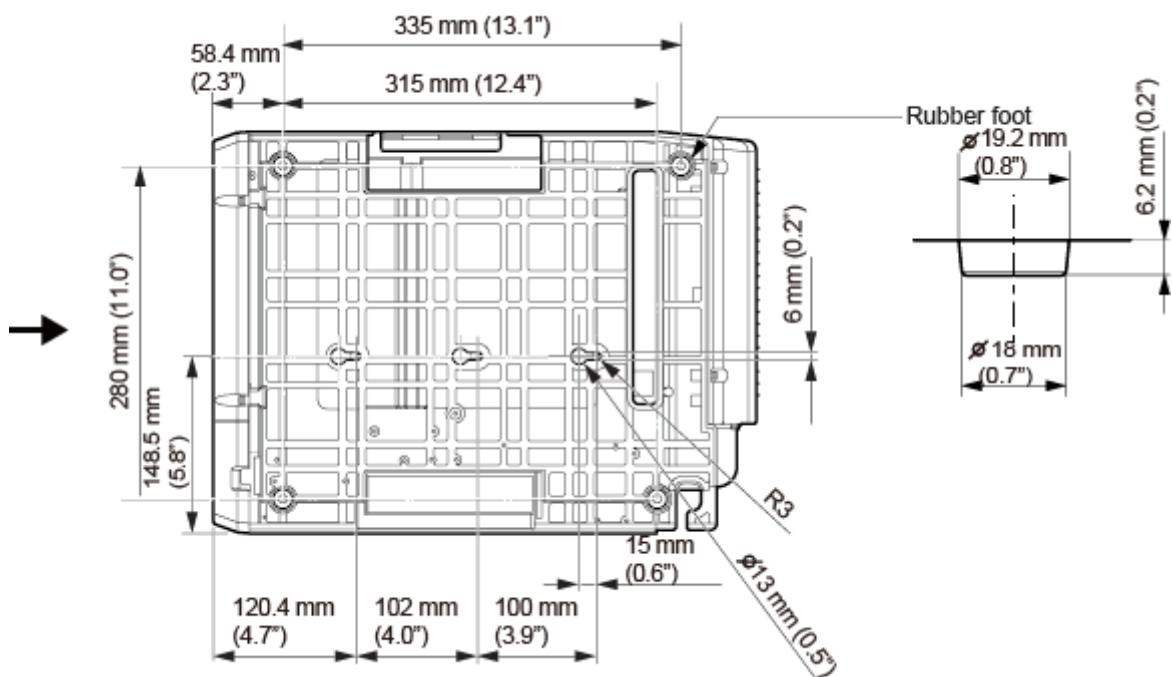

- The arrow indicates the front of the product.

Powering On/Off the Product

Connecting the Power Cord




- Do not power on or off the product, connect or disconnect the power cord while your hands are wet. Doing so could cause an electric shock.
 - Always connect the ground wire to a ground terminal. Electric shock could occur if you do not.
 - Make sure that the AC voltage of your region is in the range of AC 100 - 240 V, 50 - 60 Hz. If your local voltage is not in the stated range, contact your SATO reseller or technical support center.
-




- The attached power cord is designed exclusively for this product. Do not use it with other devices.
-

1. Connect the power cord to the AC input terminal (1) at the rear of the product.

Take note of the orientation of the connector. Secure the product with one hand, and insert the connector tightly.

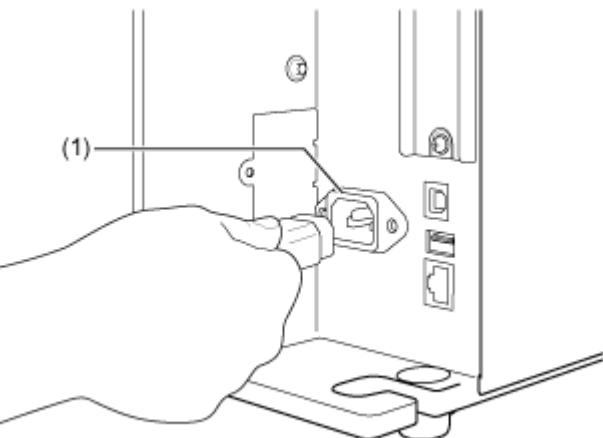

2. Insert the power plug into an AC outlet.

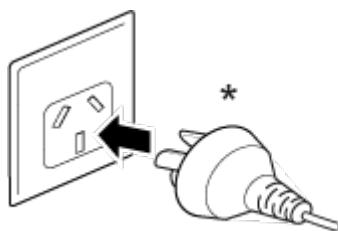

* The shape of the power plug varies depending on the region in which it was purchased.



- This product is also designed for IT power distribution system with phase-to-phase voltage 230 V.
-

Powering On the Product




- Do not power on or off the product, connect or disconnect the power cord while your hands are wet. Doing so could cause an electric shock.



- You can power on/off the product from the main power source by enabling [Start on AC] under the [System] menu.

1. Press the  power button of the operator panel until the LED lights up in blue to power on the product.

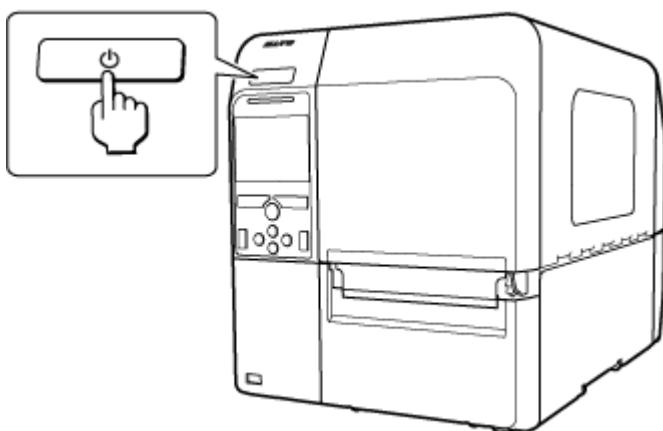

"Online" appears on the screen.



Powering Off the Product



- Do not power on or off the product, connect or disconnect the power cord while your hands are wet. Doing so could cause an electric shock.



- Do not power off the product during operation, such as when printing or updating. Doing so could cause a malfunction of the product.
- Do not disconnect the power cord until the powering off process is completed on the product.
- An incorrect power on/off operation may damage the product settings. In such a case, the product settings are reset to their default values. It is always recommended to use the power button to allow proper shutdown of the product and ensure changes made to menu settings are saved appropriately.




- You can power on/off the product from the main power source by enabling [Start on AC] under the [System] menu.

1. Make sure that the product is in Offline mode before you power off.



If "Online" appears on the screen, press the button to change to Offline mode.

2. Press the  power button for more than two seconds to power off the product.

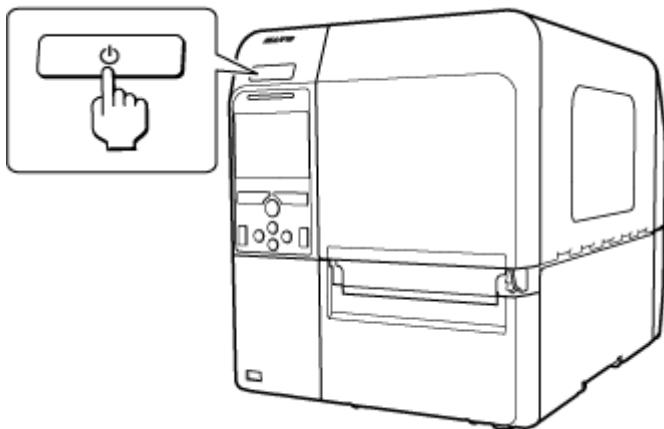

Initial Setup (Startup Guide)

The topics here explain how to complete the startup guide that appears when you power on the product for the first time after purchase.

Overview of the Startup Guide

When you power on the product for the first time after purchase, the display shows the startup guide. The startup guide is a function to help you through the initial product settings, such as setting date and time, and loading the ribbon and media.


You can cancel the startup guide and perform the configuration later from the menu.



- If you have installed the optional RTC (Real Time Clock) kit, the time zone, date and time setting screens appear.

The startup guide lets you configure the product by the following flow:

1. Startup Screen

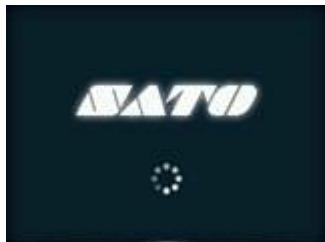

2. Language Selection

Select the display language.



3. Region Setting with Optional RTC Kit

Set the region (time zone).




4. City Setting with Optional RTC Kit


Set the city (time zone).

**5. Date Setting with Optional RTC Kit**

Set the date.

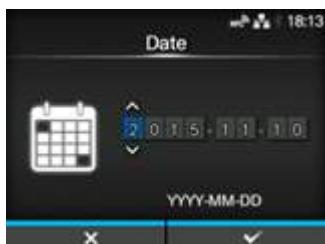**6. Time Setting with Optional RTC Kit**

Set the time.

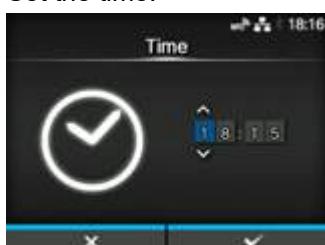**7. Print Method Setting**


Set whether to use the ribbon or direct thermal media to print.



8. Ribbon Setting


Load the ribbon.

Appears if you have selected [Use Ribbon] in the print method setting.

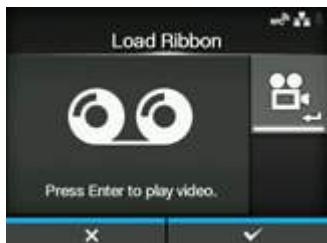


9. Media Sensor Type Setting

Set the sensor type for detecting the media.

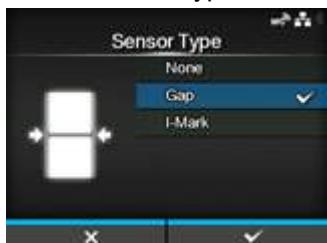


10. Media Setting

Load the media.

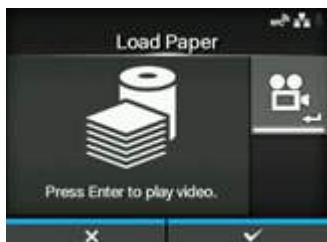

11. Completion of Initial Setup Screen

Finish the startup guide.

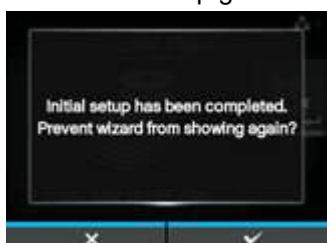

Startup Guide Cancelation

To cancel the startup guide in the middle of the configuration, press the button.


Select whether or not to show the startup guide during the next startup, and press the  button to confirm.

Startup Screen

When you power on the product for the first time after purchase, the display shows the startup guide.

1. Press the  power button of the operator panel until the LED lights blue to power on the product.

The startup screen appears.

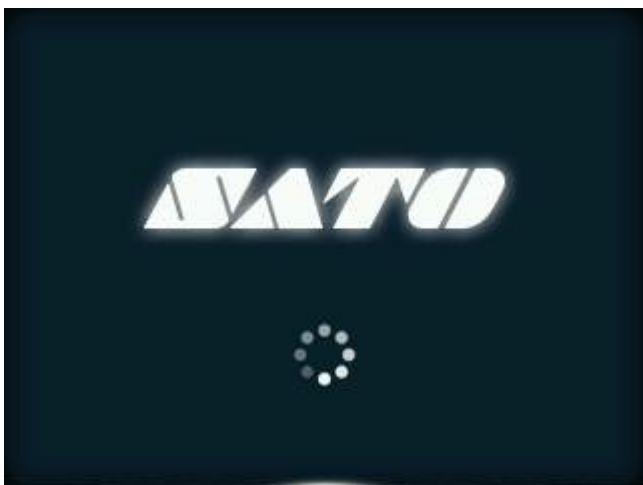

Language Selection

Select the display language.

1. Select the language name using the / buttons.



2. Press the button or button to confirm.

Region Setting with Optional RTC Kit

Set the region (time zone).

1. Select the region using the / buttons.



2. Press the button or button to confirm.

City Setting with Optional RTC Kit

Set the city (time zone).

1. Select the city using the / buttons.




2. Press the button or button to confirm.

Date Setting with Optional RTC Kit

Set the date.


1. Select the current value using the  /  buttons, and move the cursor using the  /  buttons.

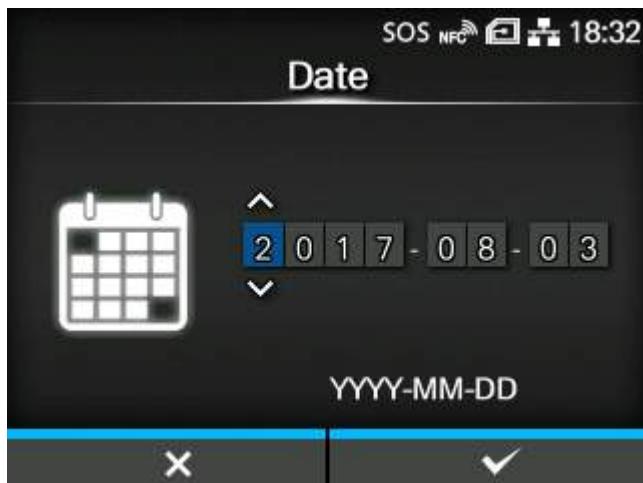

2. When you have completed the date setting, press the  button or 

The confirmation screen appears.


3. Press the  button to confirm.

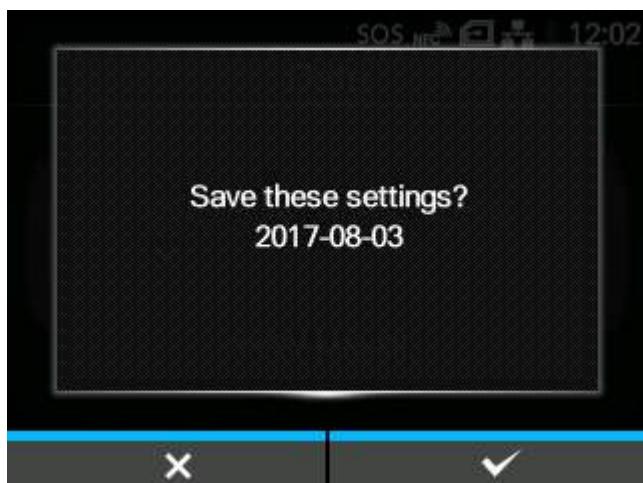

Time Setting with Optional RTC Kit

Set the time.

1. Select the current value using the / buttons, and move the cursor using the / buttons.

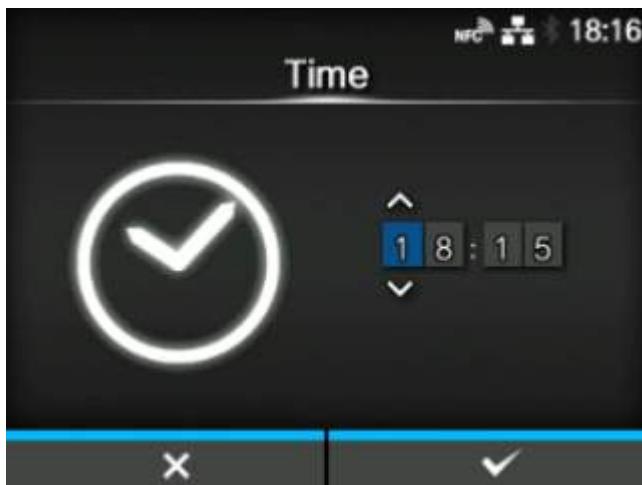


2. When you have completed the time setting, press the button or button.



- The time is set in 24-hour format.

The confirmation screen appears.


3. Press the button to confirm.

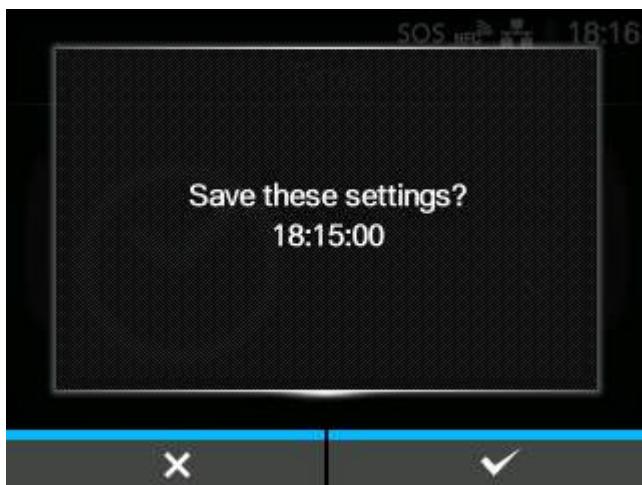

Print Method Setting

Set whether to use the ribbon or direct thermal media to print.

1. Select the print method using the buttons.

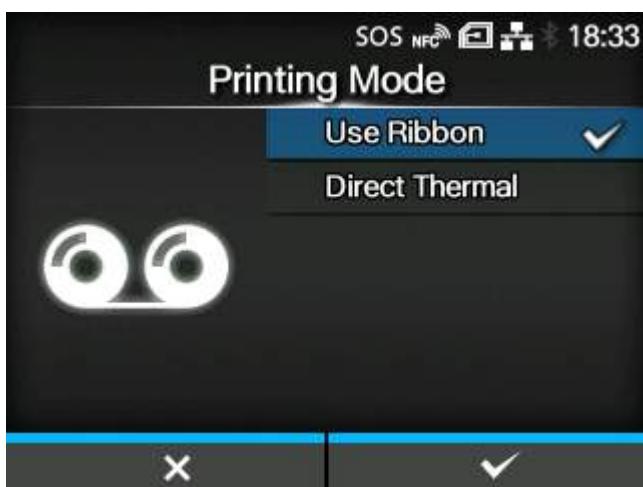

[Use Ribbon]

Print using a ribbon.

[Direct Thermal]

Print using direct thermal media.

2. Press the button or button to confirm.

If you have selected [Use Ribbon], the ribbon setting screen appears.


If you have selected [Direct Thermal], the media sensor type setting screen appears.

Ribbon Setting

Load the ribbon. You can check the loading method of the ribbon through the video.

- Appears if you have selected [Use Ribbon] in the print method setting.

1. Press the  button to play the video.

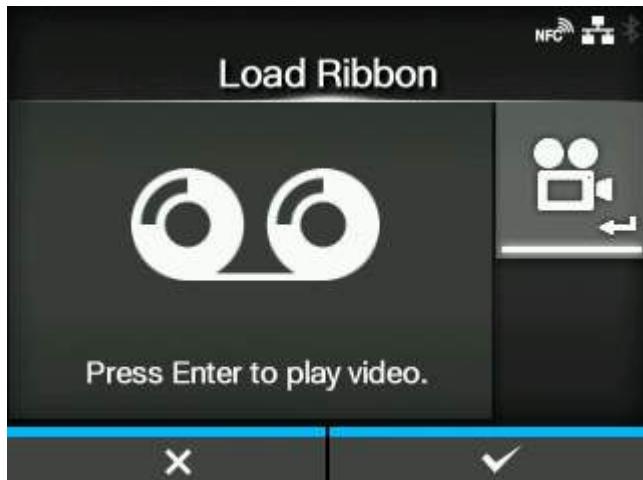

The video starts.



2. Load the ribbon while checking the video.
3. After you complete the ribbon setting, press the  button to stop the video.


The display returns to the previous screen.

4. Press the  button to go to the next screen.

Media Sensor Type Setting

Set the sensor type for detecting the media.

1. Select the media sensor type using the / buttons.

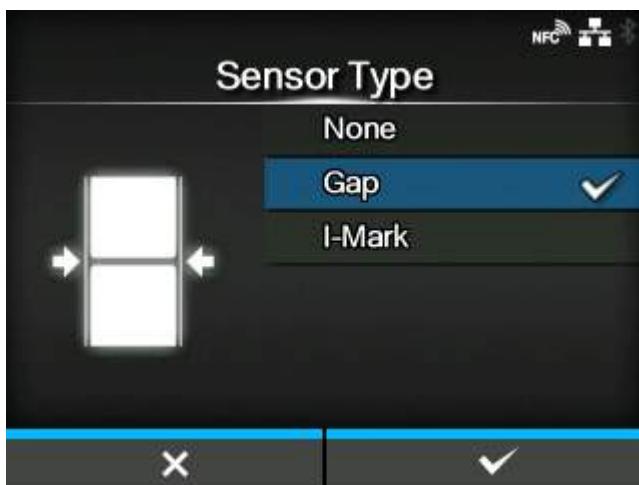

[None]

Disable the media sensor.

[Gap]

Select this option when using gap type media. Use the transmissive type sensor.

[I-Mark]

Select this option when using I-mark type media. Use the reflective type sensor.




- The available options will vary depending on the [Print Mode] set on the product. The initial value of [Print Mode] differs depending on the options installed on the product.
 - If [Print Mode] is set to [Tear-Off], [Dispenser], or [Cut & Print], only [Gap] and [I-Mark] will be available.
 - For CL4NX, if [Print Mode] is set to [Linerless], only [None] and [I-Mark] will be available.

2. Press the button or button to confirm.

Media Setting

Load the media. You can check the loading method of the media through the video.

1. Press the  button.

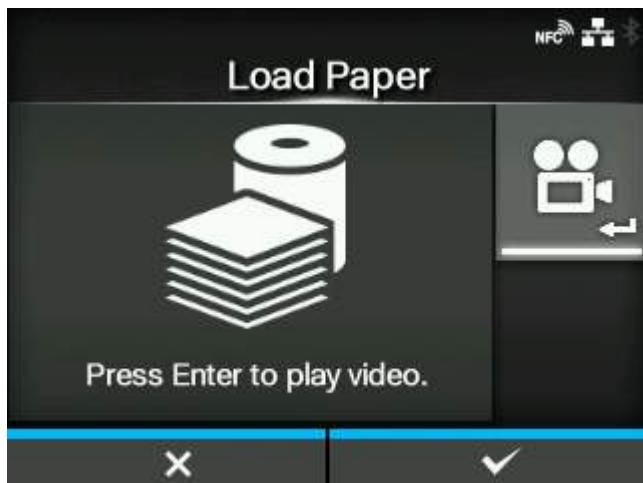

For the models other than the CL4NX linerless model, the selection screen of the video for playback appears. Proceed to step 2.

For the CL4NX linerless model, the video appears immediately after the  button is pressed. Proceed to step 4.

2. Select the video to playback using the  /  buttons.

For Standard Model and Cutter Model



[Roll]

Shows the video on how to load the media roll.

[Fanfold]

Shows the video on how to load the fan-fold media.

For Dispenser Model



[Dispenser]

Shows the video on how to eject the liner out of the product.

[Rewinder]

Shows the video on how to rewind the liner in the product.

3. Press the button or button.

The video starts.




4. Load the media while checking the video.
 5. After you complete the media setting, press the button to stop the video.
- The display returns to the previous screen.
6. Press the button to go to the next screen.

Completion of Initial Setup Screen

When the startup guide completes, the completion of initial setup screen appears.

1. If you want the startup guide to show the next time you start up, press the  button. If not, press the  button.

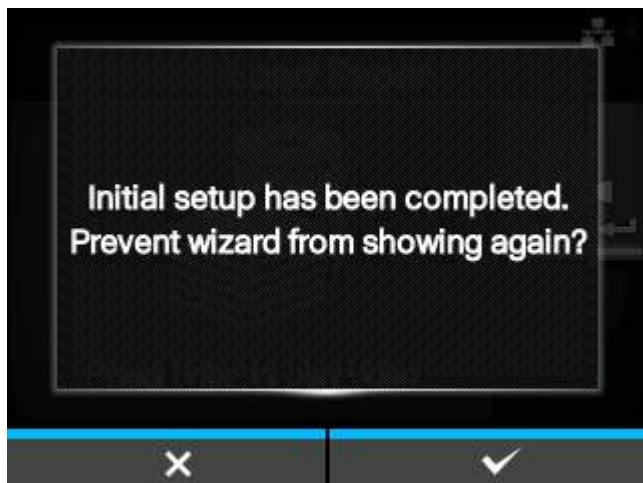


When you press one of the soft buttons, the product automatically feeds the media (to the print head position) and changes to Online mode.




- You can enable or disable the startup guide in [Startup Guide] under the [Tools] menu.

Startup Guide Cancellation

You can cancel the startup guide at any time.

1. Press the  button while configuring the startup guide.

The screen to confirm whether or not to show the startup guide again appears.

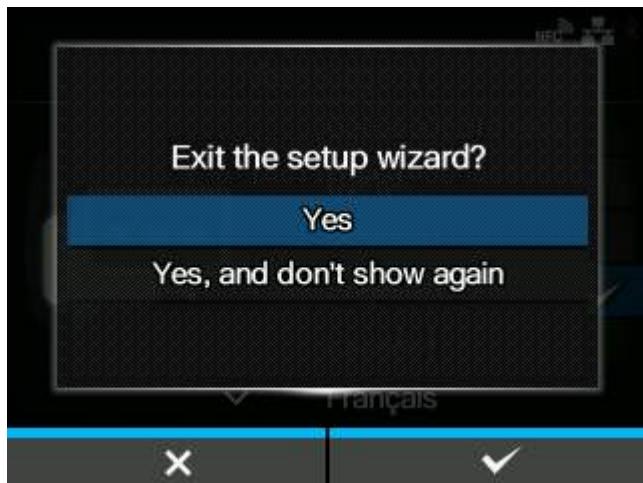

2. Select whether or not to show the startup guide during the next startup using the  /  buttons, and press the  button to confirm.

Press the  button to return to the startup guide setting without canceling it.



- You can enable or disable the startup guide in [Startup Guide] under the [Tools] menu.
- Even if you cancel the startup guide before completing it, the product will save the settings you have changed.

Configuring the Product According to Media and Options

Before starting to print with the product, configure the product according to the media to be used and the installed options.

Print Method

The product supports two types of print methods, thermal transfer and direct thermal.

Thermal transfer

Prints using a ribbon.

Direct thermal

Prints using direct thermal media.



- Ribbon is not necessary if you are using direct thermal media.

Change the print method according to the following procedure:

1. Press the button in Online mode.




The product changes to Offline mode.

2. Press the  button.



The product changes to Settings mode.

3. Select [Printing] using the  /  buttons.

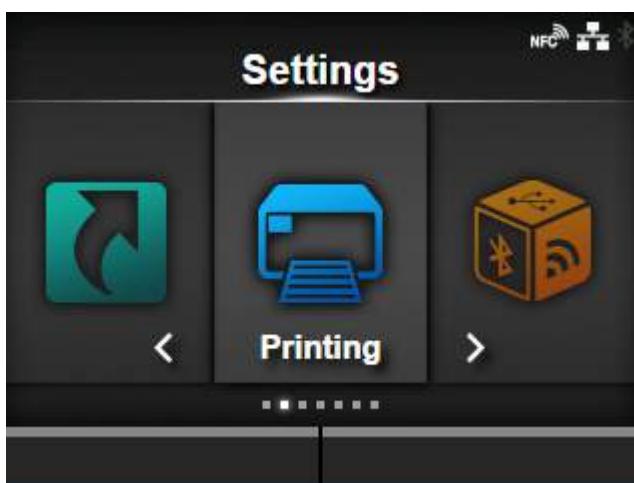

4. Press the  button.

The item list appears.

Printing	
Label Length	20000 dot
Label Width	832 dot
Auto Measure	<input type="checkbox"/>
Printing Mode	Use Ribbon
Ribbon Near End	<input checked="" type="checkbox"/>
Speed	6 ips


5. Select [Printing Mode] using the  /  buttons.



6. Press the  button.

The [Printing Mode] screen appears.

7. Select the print method using the  /  buttons.

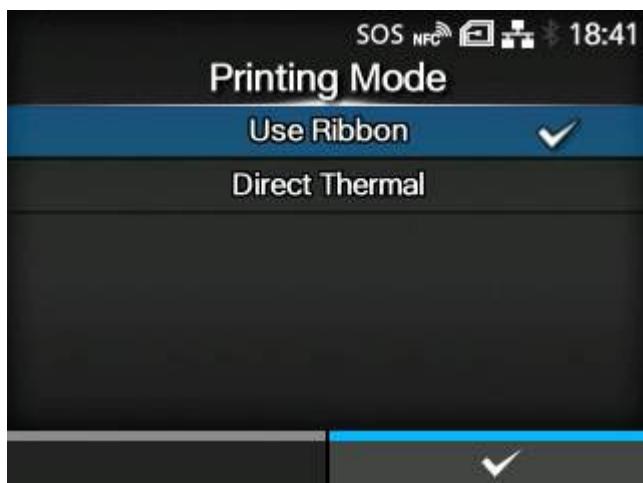

[Use Ribbon]

Prints using a ribbon.

[Direct Thermal]

Prints using direct thermal media.

8. Press the  button to confirm.

Media Sensor Type

The product adjusts the print position precisely by detecting I-marks or gaps on the media (label) using media sensors.

The I-marks or gaps on each type of media are as follows:

I-mark label	Gap label	I-mark journal paper/ linerless label (CL4NX only)

(1) Media feed direction

Set the sensor type to detect the print position according to the media to be used.

Set the sensor type according to the following procedure:

1. Press the button in Online mode.




The product changes to Offline mode.

2. Press the  button.



The product changes to Settings mode.

3. Select [Printing] using the  /  buttons.

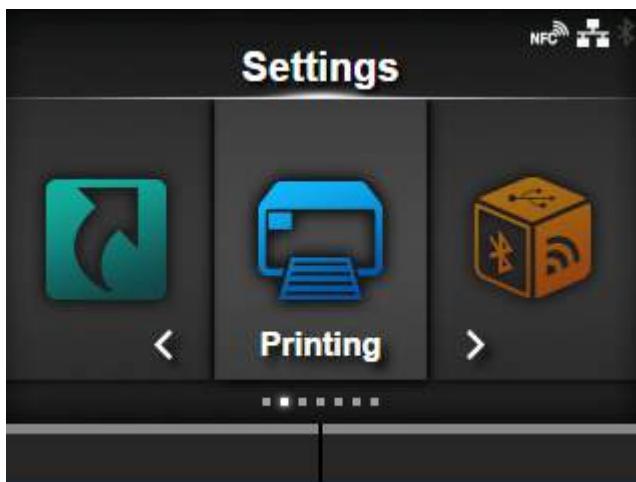

4. Press the  button.

The item list appears.

Printing	
Label Length	20000 dot
Label Width	832 dot
Auto Measure	<input type="checkbox"/>
Printing Mode	Use Ribbon
Ribbon Near End	<input checked="" type="checkbox"/>
Speed	6 ips


5. Select [Sensor Type] using the  /  buttons.



6. Press the  button.

The [Sensor Type] screen appears.

7. Select the sensor type to detect the print position using the  /  buttons.

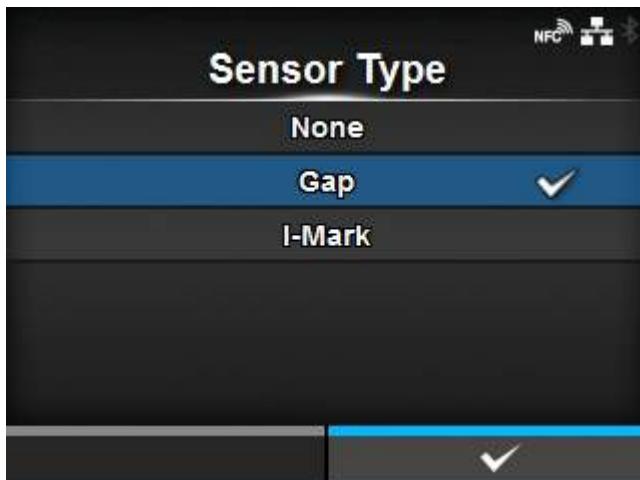

[None]

Disables the media sensor.

[Gap]

Select when using gap type media. Use the transmissive type sensor.

[I-Mark]

Select when using I-mark type media. Use the reflective type sensor.



- If you have selected [Tear-Off], [Dispenser], or [Cut & Print] in the [Print Mode] menu, only [Gap] and [I-Mark] will be available.
- If you have selected [Linerless] in the [Print Mode] menu (CL4NX only), only [None] and [I-Mark] will be available.

8. Press the  button to confirm.

Print Mode

You can change the print mode of the product according to its usage and installed options.

The product has the following print modes:

[Continuous]

Prints the specified number of media. The media remains in position for printing at all times.

[Tear-Off] (Feeding media to the position for manual cutting)

After printing the specified number of media, the product feeds the last printed media so that it is fully extended out of the product's front for removal. After printing, tear off the media manually.

The media will be back to the print head position to start the next printing.

[Cutter]

Cuts each media while printing the specified number of media. You can specify this option if you have installed the cutter unit.

[Cut & Print]

Allows you to continuously print and cut at the specified media repeat. If no print data is received within the period specified for [Eject Cut], the product will feed the media to the cut position and cut the last printed media. You can specify this option if you have installed the cutter unit.

[Dispenser]

Peels the liner from the printed label as the label is fed to the product's front. Once the printed label has been removed from the product for application, the next label will retract and position itself for printing. You can specify this option if you have installed the dispenser unit.

[Linerless] (CL4NX only)

Cuts each label while printing the specified number of labels. You can specify this option if you have installed the linerless cutter kit.



- You cannot set the [Print Mode] if [Auto-mode] is [Enabled].
-

Change the print mode according to the following procedure:

1. Press the  button in Online mode.




The product changes to Offline mode.

2. Press the  button.



The product changes to Settings mode.

3. Select [Printing] using the  /  buttons.

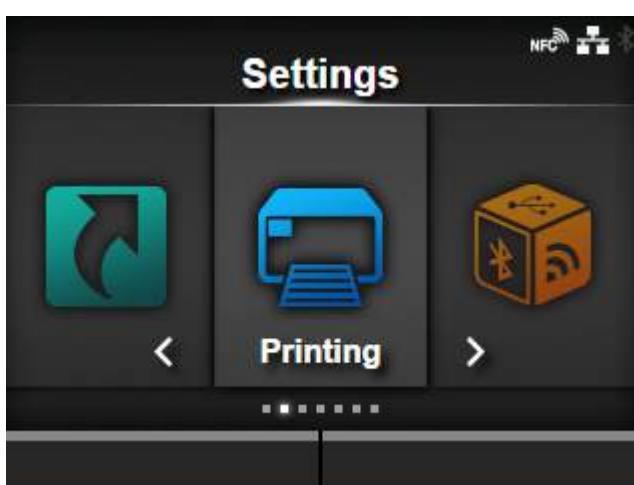


4. Press the  button.

The item list appears.



5. Select [Print Mode] using the  /  buttons.

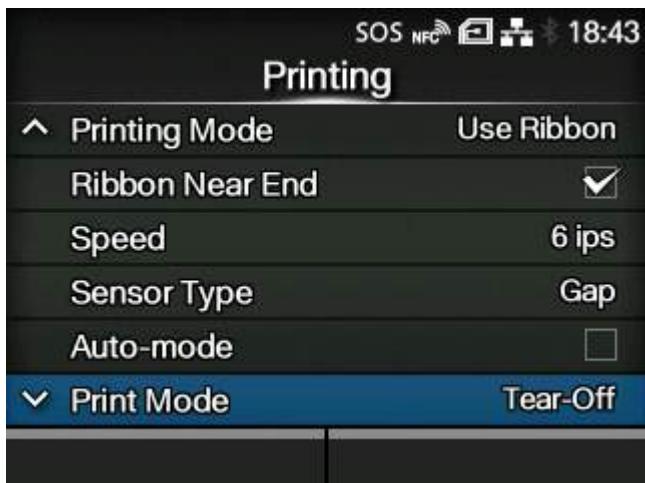

6. Press the  button.

The [Print Mode] screen appears.

7. Select the print mode using the  /  buttons.



- If no option is installed, [Continuous] and [Tear-Off] are available.
- If the optional cutter unit is installed, [Continuous], [Tear-Off], [Cutter], and [Cut & Print] are available.
- If the optional dispenser unit is installed, [Continuous], [Tear-Off], and [Dispenser] are available.
- If the optional linerless cutter kit is installed to CL4NX, only [Linerless] is available.

8. Press the  button to confirm.

Connecting the Product to a Computer

This section explains how to connect the product to a computer, and how to install the printer driver and the All-In-One Tool.

Procedure for Connecting the Product to a Computer

The product supports various interfaces and can be connected to a computer in an optimum way for your environment. When you have installed the printer driver to the computer, the data created with the computer (documents and illustrations) can be printed to a label through easy operations.

Also, you can print by sending a command directly to the product.

The product can be connected to a computer in the following ways.

1. [Connecting Interfaces](#)



2. [Configuring the Interface Settings](#)

Set the product's interface from the [Interface] menu on the Settings menu, which can be accessed from the product's display or the web configuration page. It can also be accessed from the All-In-One Tool, which can be used by installing it to a computer.

- When you connect them with LAN or wireless LAN interfaces, configure the communication conditions, such as the IP address of the product.
- When you connect them with other interfaces, configure the communication conditions when needed to adapt to the computer to which you are connecting.
- To use the printer driver, the communication protocol must be set to Status4. (The initial value for the communication protocol for the product's interfaces is Status4.)



3. [Installing the Printer Driver](#) (Unnecessary when using commands)



-
- Use barcode fonts to create a barcode. Sometimes the barcode may not be read by a scanner if it is created with tools for creating images (such as BMP) and printed from this product. Because the tools create the barcode as an image only, the barcode may not be the correct data. Therefore, if the barcode cannot be read by a scanner, it is not a failure of the product or printer driver. Note that reading of the barcode is not guaranteed if it is created by such tools.
 - The head check is just for a reference to check a broken element of the print head, and it is not a function to guarantee barcode readability. A regular barcode reader test is required.
-


Connecting Interfaces

Available Interfaces

The product supports the following interfaces.



- A product connected with multiple interface cables can continue to operate when receiving data. However, you cannot receive data from more than one interface at a time. Normally, do not use multiple interfaces at a time.
- The product prints the received data in order of reception. The next received data is stored in the receive buffer while the first data is printed.

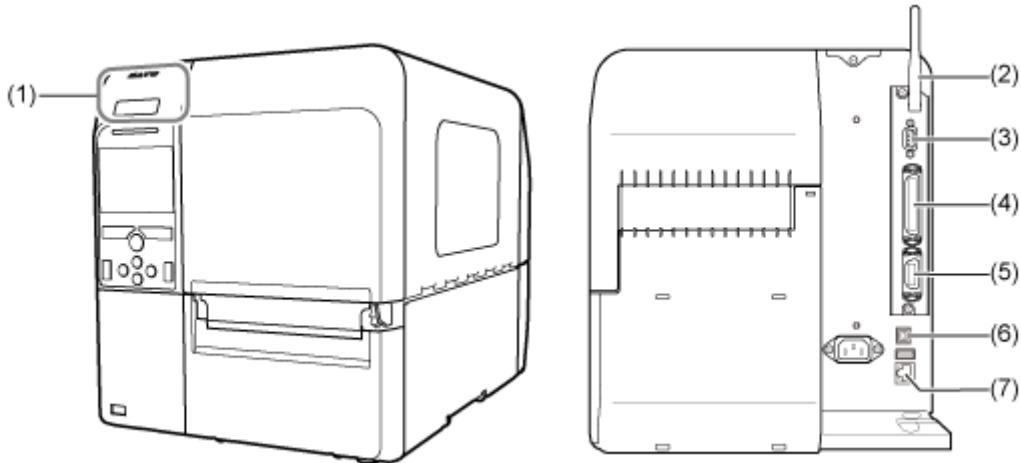

(1) NFC

*This feature is supported on products from serial number 6B~ and above.

(2) Wireless LAN

(3) RS-232C

(4) IEEE1284

(5) External signal (EXT)

(6) USB

(7) LAN

- Bluetooth



- The wireless LAN interface is optional.
- The NFC interface supports the handover function that simplifies the Bluetooth/Wi-Fi connection setup with Android devices. In addition, the NFC interface can be used for changing product settings with an Android device while the product is powered off and the power cord is not connected.




- Do not connect or disconnect the interface cables (or use a switch box) while power is supplied to either the product or computer. This may cause damage to the interface circuitry in the product or computer and is not covered by warranty.

USB Interface Connection (Standard)

Connect the interface cable when the product is powered off.

Connect the USB cable to the USB connector (Type B) (1) of the product.

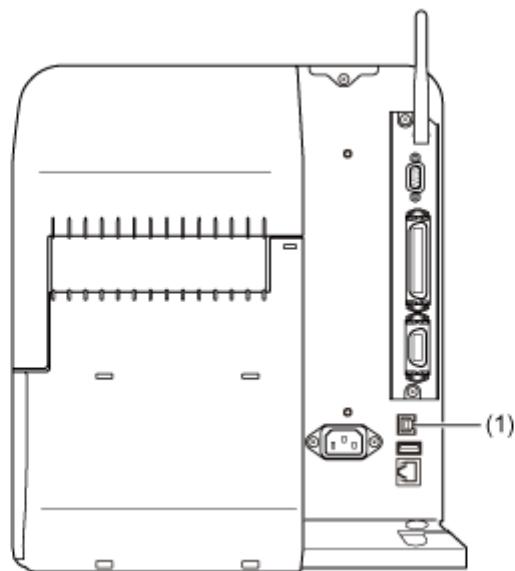

The USB interface is selected after connecting the USB cable to the computer and the product, and powering on the product while the computer is turned on.




- If the product is powered on without installing the printer driver, Windows' Plug & Play runs. When using the printer driver, do not power on the product while the USB cable is connected until instructed in the procedure for installing the printer driver.
- The recommended USB cable is the one within 2 meters (6.6 feet) length.

LAN Interface Connection (Standard)

Connect the interface cable when the product is powered off.

Connect the LAN cable to the LAN connector (1) of the product.

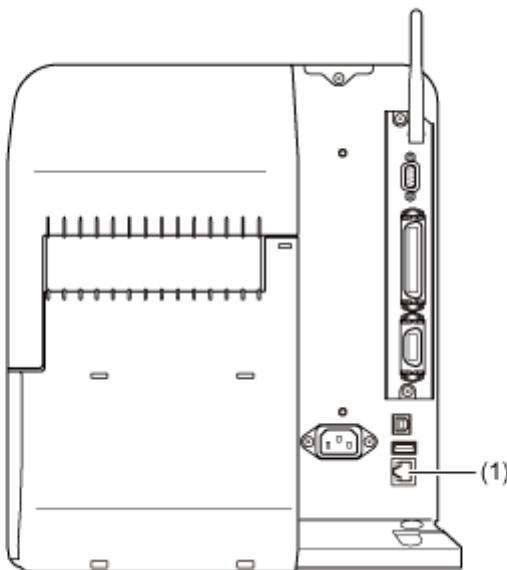

The communication condition settings must be configured according to your network environment. Set the IP address of the product.

The IP address of the product can be set through the product's [Interface] menu or the All-In-One Tool.



- To use the printer driver, the communication protocol must be set to Status4. (The initial value for the communication protocol for the product's LAN interface is Status4 ENQ.)

Bluetooth Interface Connection (Standard)

The product can perform wireless communication with Bluetooth-compatible computers placed within about 10 meters (32.8 feet) from it.

Make sure that the Bluetooth function of the product and the computer is enabled, and then add the product as a Bluetooth device on the computer.

The product's Bluetooth function is enabled by default and can be configured from the [Interface] menu or the All-In-One Tool.




- To use the printer driver, the communication protocol must be set to Status4. (The initial value for the communication protocol for the product's Bluetooth interface is Status4 Multi.)

NFC Interface Connection (Standard)

The NFC interface of the product supports a handover function that simplifies the Bluetooth/Wi-Fi connection setup with Android devices.

The handover function only performs the connection setup, such as the pairing and authentication with NFC, and passes the actual interface to the more advanced Bluetooth and Wi-Fi when communicating between NFC supported devices. In general, the pairing and authentication require some procedures to enter authentication information, but the connection can be completed simply by holding the Android devices over the product while using NFC.

Touch the NFC antenna (1) of the product with the NFC mark on the Android device.

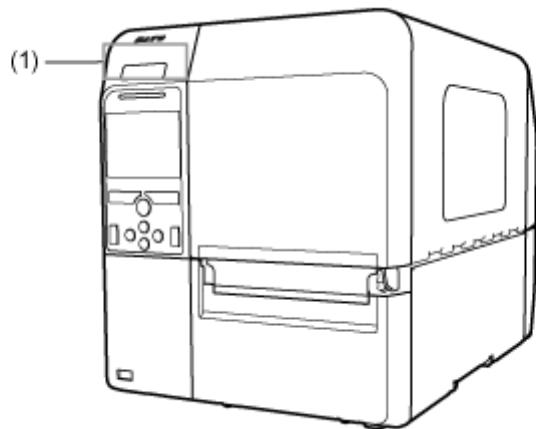


- This feature is supported on products from serial number 6B~ and above.
- If it does not communicate well, shift the Android device to the front, back, left and right, and then hold it up again.
- For the operation of the NFC for the Android device, refer to the user manual for the Android device.

RS-232C Interface Connection (Standard)

Connect the interface cable when the product is powered off.

Connect the RS-232C cable to the RS-232C connector (1) of the product.

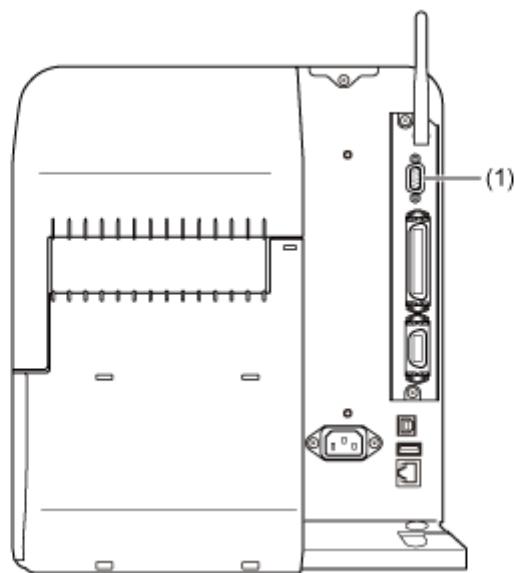

Configure the interface settings of the product according to the interface settings of the computer.

The communication conditions of the RS-232C interface can be set from the product's [Interface] menu or the All-In-One Tool.




- To use the RS-232C interface to connect with the computer, the product's [Tools] > [Barcode Checker] > [Test] > [Interface] menu must be set to [RS-232C].
- The interface settings of the computer can be confirmed by the following. In the Device Manager, right-click [Ports] > [Communications Port (COM1)] and select [Properties]. Then, check the [Port Settings] tab of the displayed Properties screen.
- For the RS-232C cable, note that the connection cable varies according to the communication protocol setting. If you use the wrong cable, it will not operate correctly.
- If the communication settings differ between the computer and product, it will not operate correctly. A communication error will be detected.
- To use the printer driver, the communication protocol must be set to Status4. (The initial value for the communication protocol for the product's RS-232C interface is STATUS4.)
- Be sure to use the recommended RS-232C cable.
- Printing using the USB serial conversion cable is not guaranteed. Also, no support for the connection procedure is provided.

Product DB-9P		Host DB-9P	
1	CD	1	CD
2	RD	3	SD
3	SD	2	RD
4	ER	6	DR
5	SG	5	SG
6	DR	4	ER
7	RS	8	CS
8	CS	7	RS

IEEE1284 Interface Connection (Standard)

Connect the interface cable when the product is powered off.


Connect the IEEE1284-compliant cable to the IEEE1284 connector (1) of the product.

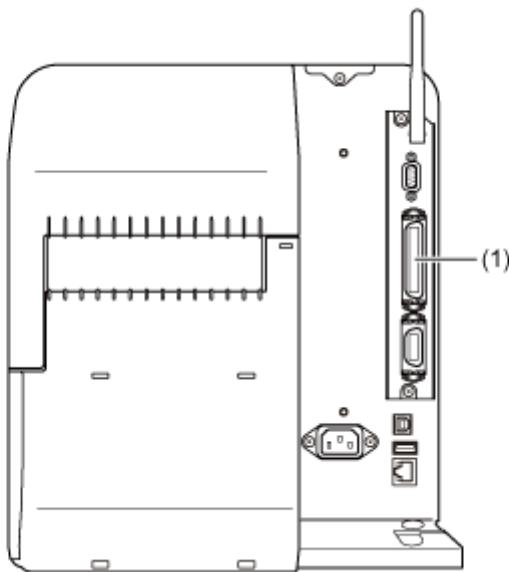

- If the product is powered on without installing the printer driver, Windows' Plug & Play runs. When you use the printer driver, do not power on the product while the cable is connected, until instructed in the procedure for installing the printer driver.
- Be sure to use the recommended IEEE1284-compliant cable. If you use cables other than the IEEE1284-compliant cable, your data may become corrupt.
- IEEE1284-compliant: compatible mode, ECP mode, and nibble mode are supported.
- Some computers may not support ECP mode.
- ECP mode is configured in the BIOS settings of the computer. Some computers may use the software tools for Windows.
- Some computer models may not perform ECP operations even if they are set to ECP mode. Contact the computer manufacturer.
- Printing using the USB parallel conversion cable is not guaranteed. Also, no support for the connection procedure is provided.

Wireless LAN Interface Connection (Optional)

Check if the wireless LAN antenna (1) is attached to the product.

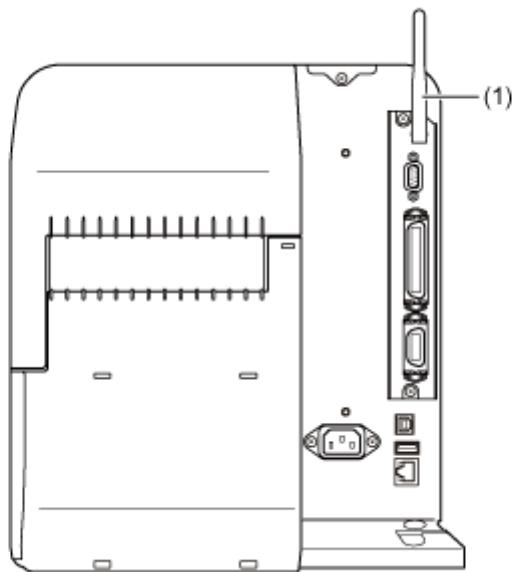

The printer driver performs data communication using the dedicated SOCKET interfaces.

The communication condition settings must be configured according to your network environment. Set the IP address of the product.

The IP address of the product can be set through the product's [Interface] menu or the All-In-One Tool.



- To use the printer driver, the communication protocol must be set to Status4. (The initial value for the communication protocol for the product's wireless LAN interface is Status4 ENQ.)
- The product does not support Atheros, SuperG, or XR functions.

Configuring the Interface Settings

Interface Setting Methods

Configure the interface settings of the product according to the communication conditions of the connected network and computer.

You can set the interface settings of the product doing either of the following.

- Set from the [Interface] menu of the product
- Set using the All-In-One Tool from the computer

Configuring the Interface Settings from the Interface Menu of the Product

Configure the settings related to the interfaces from the [Interface] menu in the Settings mode of the product.

1. Press the  button in Online mode.



The product changes to Offline mode.

2. Press the  button.



The product changes to Settings mode.


3. Select [Interface] using the  /  buttons.



4. Press the  button.

The item list appears.

5. Select the interface using the / buttons.

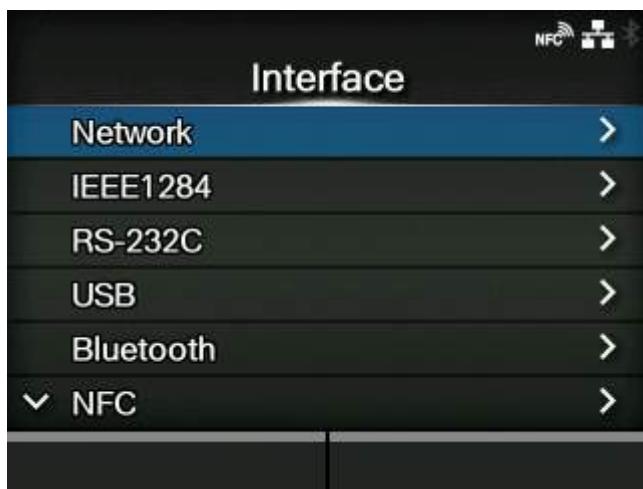

[Network]

Sets the LAN connection and wireless LAN connection.

[IEEE1284]

Sets the IEEE1284 connection.

Appears only if the combo interface board is installed.

[RS-232C]

Sets the RS-232C connection.

Appears only if the combo interface board is installed.

[USB]

Sets the USB connection.

[Bluetooth]

Sets the Bluetooth connection.

[NFC]

Sets the NFC connection.

*This feature is supported on products from serial number 6B~ and above.

[Ignore CR/LF]

Sets to ignore CR/LF codes.

[Ignore CAN/DLE]

Sets to ignore CAN/DLE codes.

[External I/O]

Sets the external signal (EXT).

Appears only if the combo interface board is installed.

[RFID] (CL4NX only)

Sets the RFID.

Appears only for the RFID model.

6. Press the  button.

The settings items of the selected interface appear.

Change the settings according to the communication conditions of the connected network and computer.

Configuring the Interface Settings Using the All-In-One Tool

Installing the All-In-One Tool

When you use the All-In-One Tool, you can easily set and manage the product.

Download the All-In-One Tool and All-In-One Tool Manual from the SATO All-In-One Tool download site <http://www.satoworldwide.com/software/all-in-one-tool.aspx>, and install the software to a computer. For the compatible OS, refer to the "System Requirements" section of the All-In-One Tool Manual.

LAN Interface Settings

Confirm and configure the LAN interface settings such as the IP address by using the All-In-One Tool.

Confirm and configure the IP address of the product, which is added to the All-In-One Tool, from the [Interface Configuration] in the [Configuration] panel.

When you add the product to the All-In-One Tool, you can manage and monitor the product.




- If the product's [Settings] > [Interface] > [Network] > [Advanced] > [Firewall] > [Enable] menu is set to [Enabled], [Settings] > [Interface] > [Network] > [Advanced] > [Firewall] > [Allow Services And Ports] > [SATO All-In-One Tool] must be set to [Enabled].

1. Connect the LAN cable to the product, and power on the product.

Make sure that the LED of the product's LAN connector is lit.

2. Activate [SATO] > [SATO All-In-One Application] on the computer.

3. Select [Auto-Discover] from the [Tools] menu on the main screen.

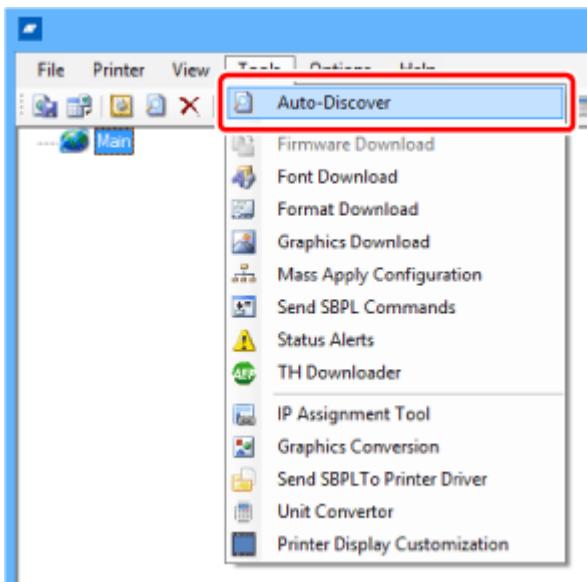


The product is shown on the main screen.



- If it is not detected, try to add it manually from [Add new printer]. If it is still not detected, try the following.
 - Check that the product is powered on.
 - Make sure that the LED of the LAN connector is lit.
 - Check that the computer and product you are using are connected to the network.
 - Directly connect the computer and product with a LAN cross cable, or disconnect it from the hub cascade and make it a local LAN environment.


Adding the Product Manually from [Add new printer]

a. Select [Add new printer] from the [Printer] menu on the main screen.

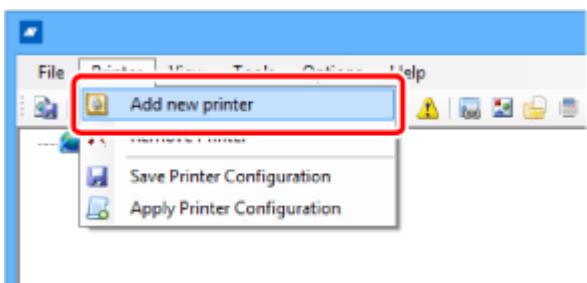

b. Enter [Printer Name], and select the model name of the product from the [Model] drop down list.


- c. Enter the IP address of the product into [LAN/Wireless IP], and click [OK].

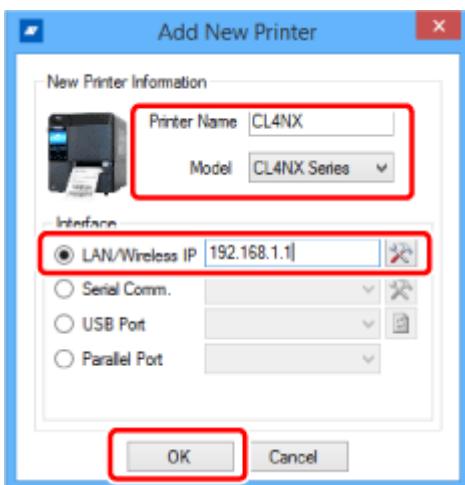


- When confirming or changing the port number, click the icon on the right side of the IP address input column to show the [LAN / Serial Comm. Port Setting] screen.
- You can check the current IP address of the product in the [Information] menu of the Settings menu of the product.

The product is added to the main screen.


4. Select the product on the main screen, and click [Interface Configuration].

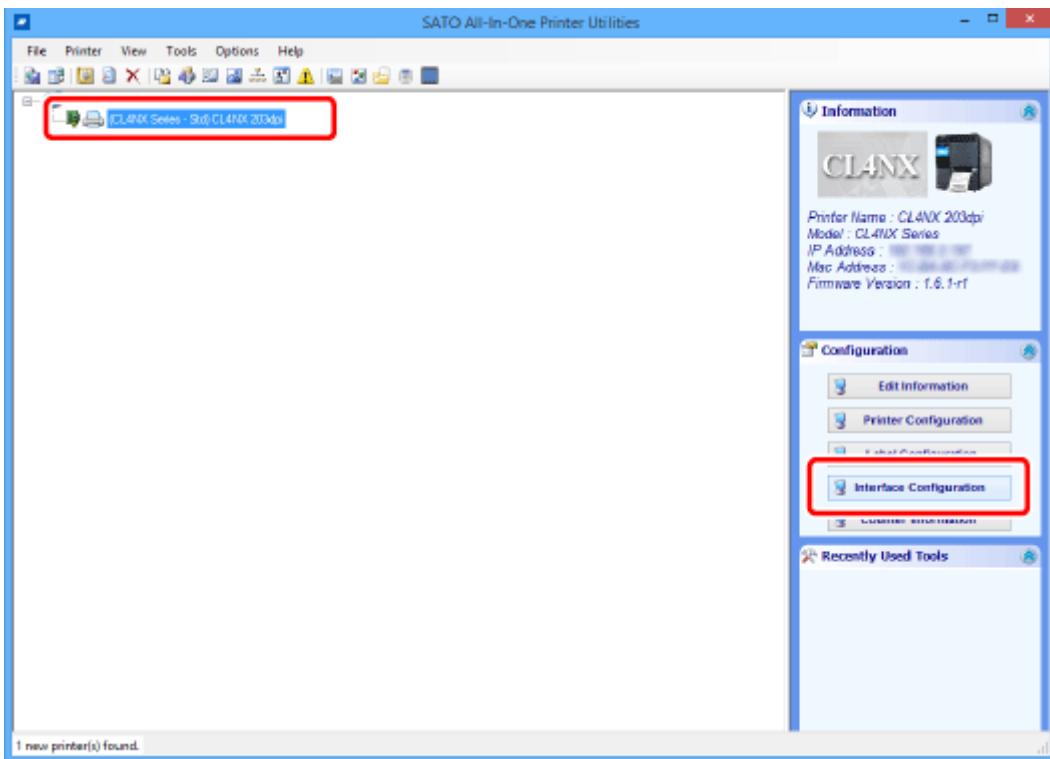

5. Open the [LAN] tab.

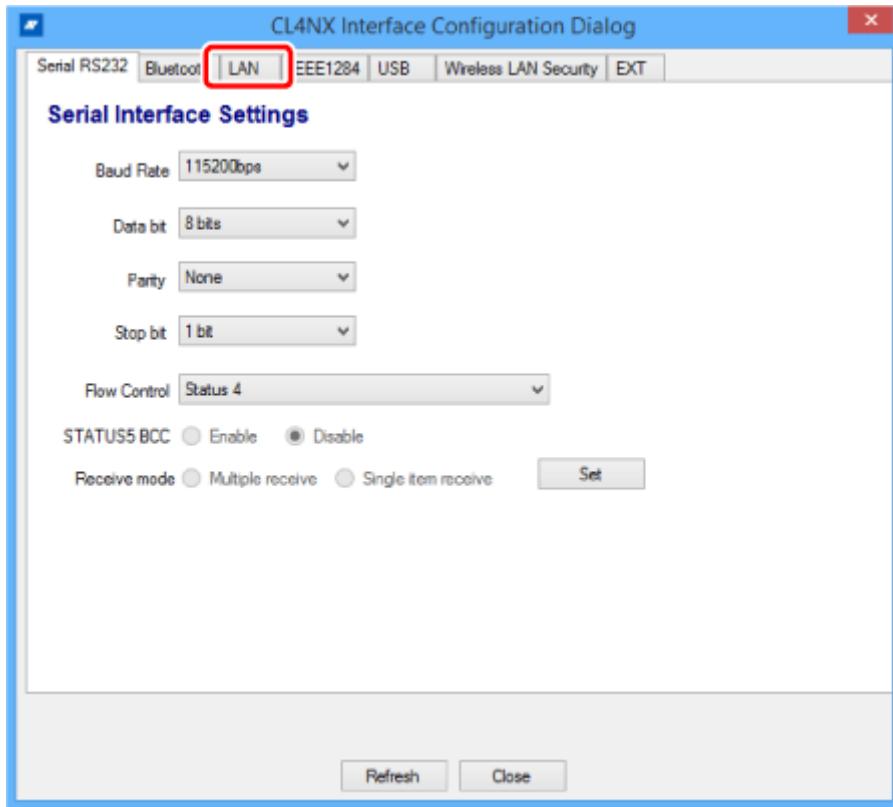

6. Select or enter the LAN settings as necessary.

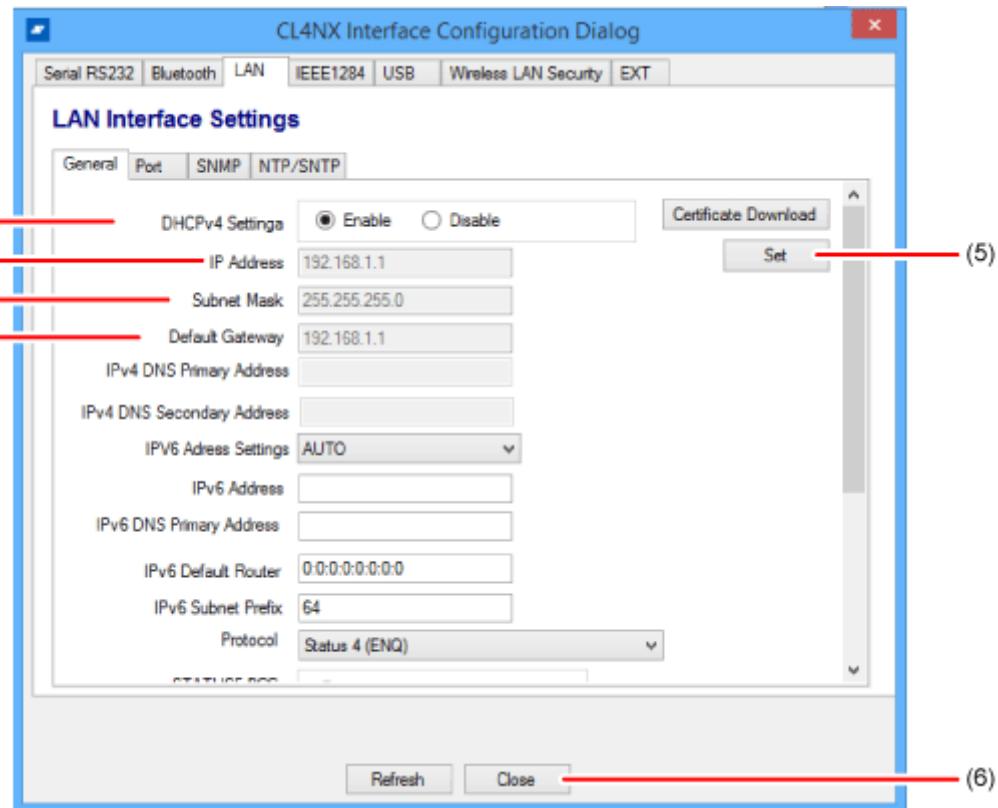

- (1) When you select [Enable], the IP address which is assigned from the DHCP server becomes available. You cannot set the IP address, subnet mask, or default gateway address. When you set the IP address manually, select [Disable].
- (2) Specify the IP address.
- (3) Specify the subnet mask.
- (4) Specify the default gateway address.
- (5) The settings on the screen will be sent when you enter the LAN settings (such as the IP address) and click [Set].
- (6) Close the interface settings screen.



- In the initial value of the LAN settings, the DHCP is enabled.

7. Restart the product.

Wireless LAN Interface Settings

Configure the wireless LAN interface settings such as the IP address by using the All-In-One Tool.

Before setting the wireless LAN interfaces, connect the product to a computer with a USB cable or LAN cable other than the wireless LAN interfaces.

The following explanation uses an example in which the product and computer are connected with a USB cable.



- The factory settings of the wireless LAN interfaces are as follows:

Wireless Mode	Ad-hoc
Communication Channel	6
SSID	SATO_PRINTER
Security	None
IP Address	0.0.0.0
Subnet Mask	255.255.255.0
Gateway Address	0.0.0.0

- When you use the wireless LAN connection, the communication condition settings must be configured according to your network environment. For details, consult with the network administrator.
- If the product's [Settings] > [Interface] > [Network] > [Advanced] > [Firewall] > [Enable] menu is set to [Enabled], [Settings] > [Interface] > [Network] > [Advanced] > [Firewall] > [Allow Services And Ports] > [SATO All-In-One Tool] must be set to [Enabled].


1. Connect the USB cable to the product, and power on the product.



- If the product is turned on without installing the printer driver, Windows' Plug & Play runs.
 - For Windows 7 or later, the product will be added to [Devices and Printers] as an unspecified device.
 - If a message is displayed that indicates new hardware is detected on Windows Vista/Server 2008, cancel it.

2. Activate [SATO] > [SATO All-In-One Application] on the computer.

3. Select [Auto-Discover] from the [Tools] menu on the main screen.

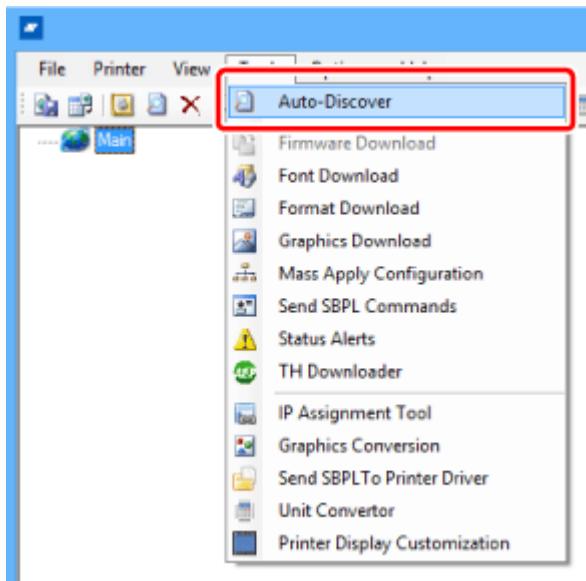


The product is shown on the main screen.


If it is not detected, try to add it manually from [Add new printer].

Adding the Product Manually from [Add new printer]

a. Select [Add new printer] from the [Printer] menu on the main screen.

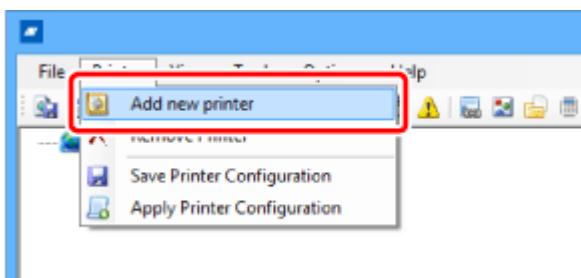


- b. Select [USB Port]. Select the product to add from the drop down list, and click [OK].

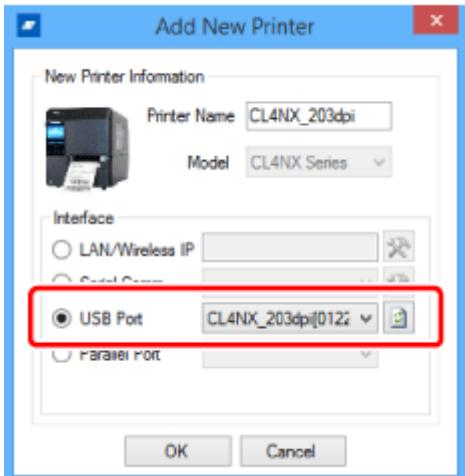


The product is added on the main screen.


4. Select the product on the main screen, and click [Interface Configuration].

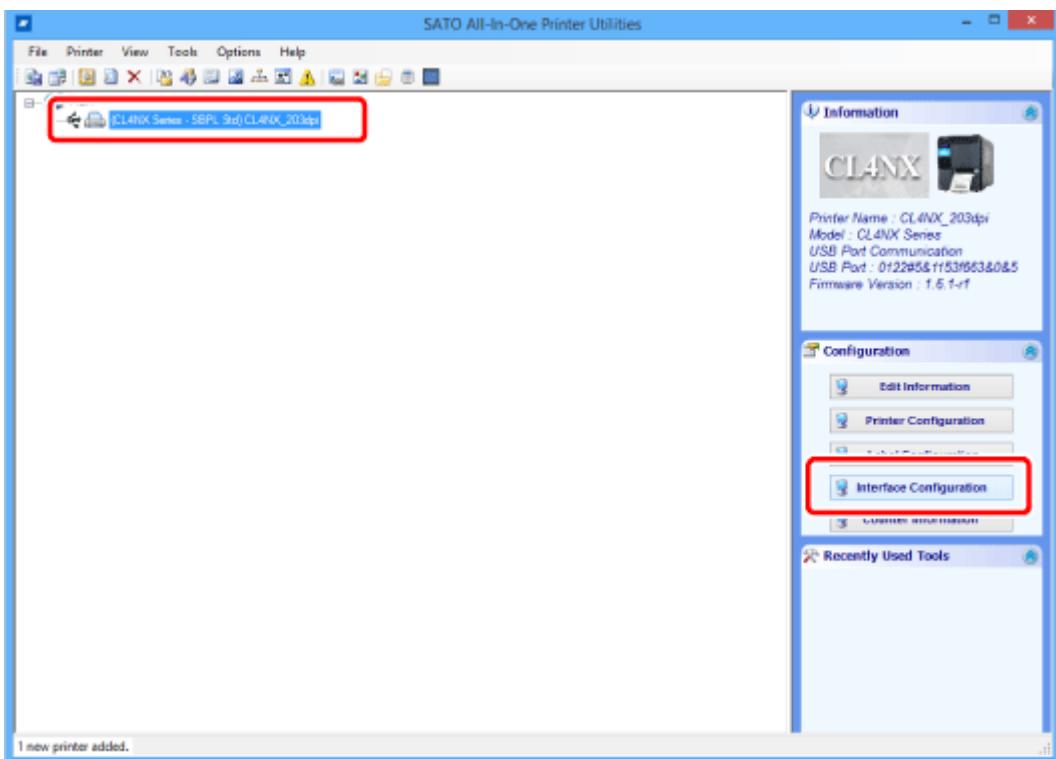

5. Open the [Wireless LAN Security] tab.

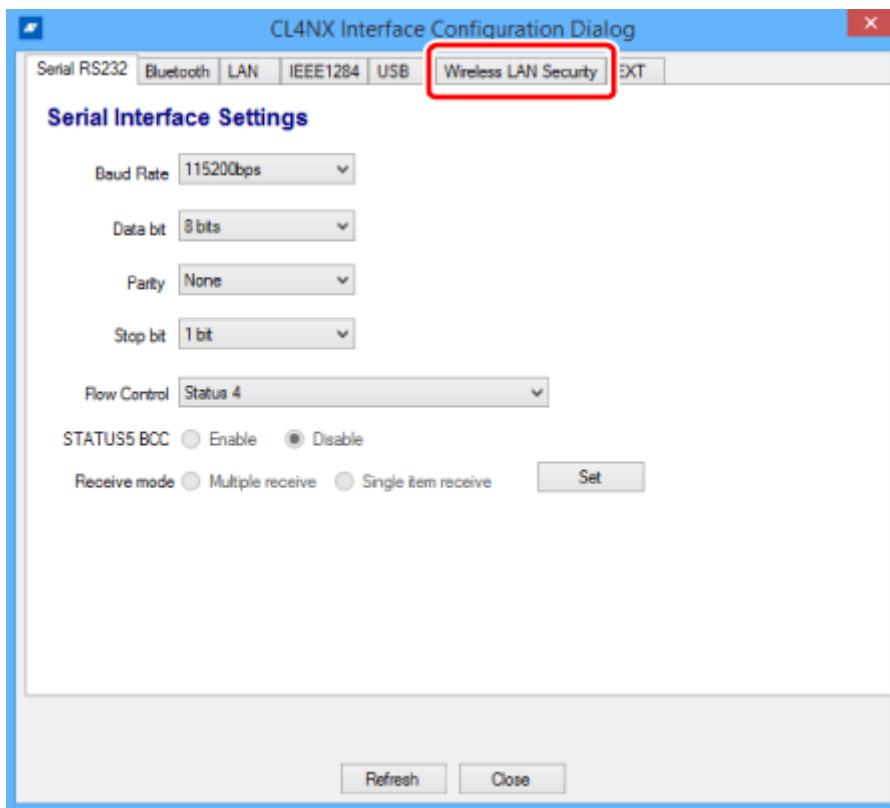

6. Select or enter the wireless LAN settings as necessary.

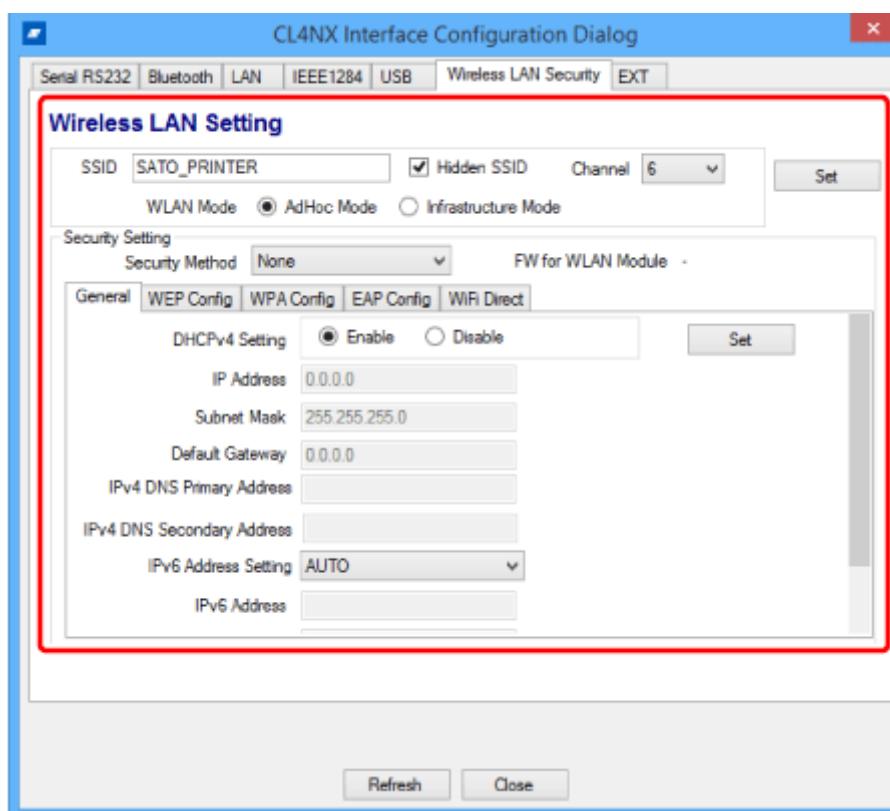

7. When the settings are completed, click [Set].

The settings on the screen are sent to the product.

8. Power off the product, disconnect the USB cable, and power on the product.

Installing the Printer Driver

Basic Information about the Printer Driver

The printer driver is software that can send data created on the computer (documents and illustrations) to the product and print it to a label.

Before installing the printer driver, check the following basic information.

Driver Name

Install the printer driver according to the model and resolution of the product you are using.

Driver Name	Supported Model
SATO CL4NX 203dpi	CL4NX
SATO CL4NX 305dpi	
SATO CL4NX 609dpi	
SATO CL6NX 203dpi	CL6NX
SATO CL6NX 305dpi	

Compatible OS

For OS compatible with the printer driver, access the SATO printer driver download site <http://www.satoworldwide.com/software/gallerydriver.aspx> and refer to the "Support OS" row of the SATO Windows printer driver.



- This manual uses the printer driver version 7.4.00.11674 for description. Note that the screen layout may differ depending on the version of the printer driver.

Installing the Printer Driver (USB)


When the computer is connected to the Internet, the printer driver is automatically installed after connecting the USB cable between the computer and the product and powering on the product.

Do the following procedures to install the printer driver when the computer is not connected to the Internet. The following procedures use Windows 10 as an example.




- Before starting the installation, close all applications.
- Power off the product and connect the interface cable to a computer.
- When you do the printer driver setup, the properties settings, or the print settings, log in with Administrator Privilege.
- When you use the printer driver, enable bi-directional communication.
- If the terminal service is being started with Windows Server 2008, change the terminal service to the install mode. However, it is not guaranteed that the printer driver can be used in the terminal service environment.
- When using multiple products, it is necessary to install as many printer drivers as products, to identify each product.
- After installing the printer driver for the first product, the printer driver for the second and additional products will be automatically installed when the products are connected to the computer and powered on. However, the name of the printer drivers will be "driver name (1)", "driver name (2)", and so on. To change the driver name, right-click the product in [Devices and Printers], select [Printer properties], and change the name at the top of the [General] tab.


1. **Power off the product and connect the USB cable to a computer.**
2. **Start Windows.**
3. **Download the printer driver from the SATO printer driver download site. <http://www.satoworldwide.com/software/gallerydriver.aspx>**
4. **Extract the downloaded compressed file of the printer driver.**
5. **Execute PrnInst.exe to start the installer.**
6. **If a user account control message appears, click [Yes] or [Continue].**
7. **Click [Next].**

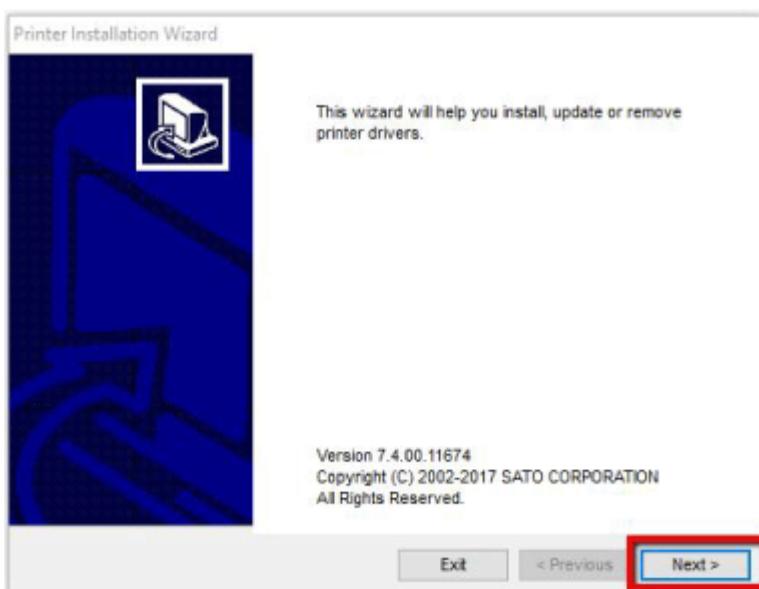


8. Click [Install Printer Driver].

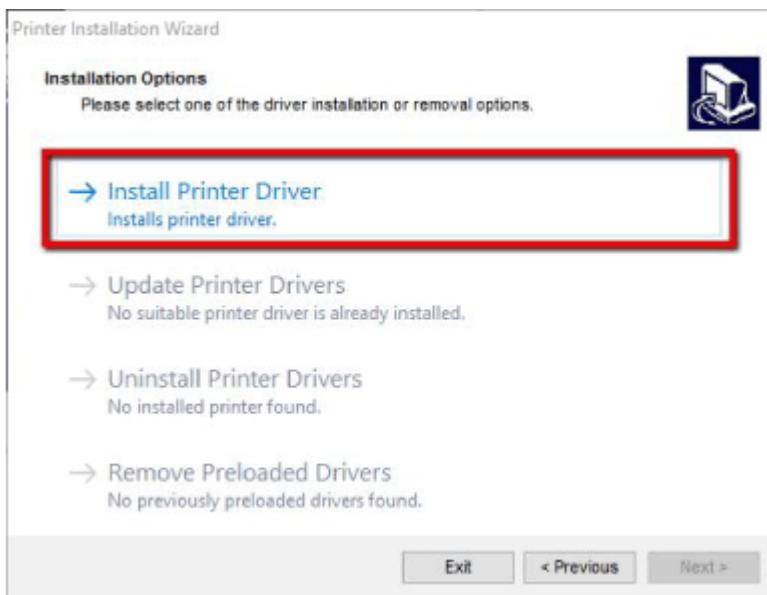


9. Click [USB Port].

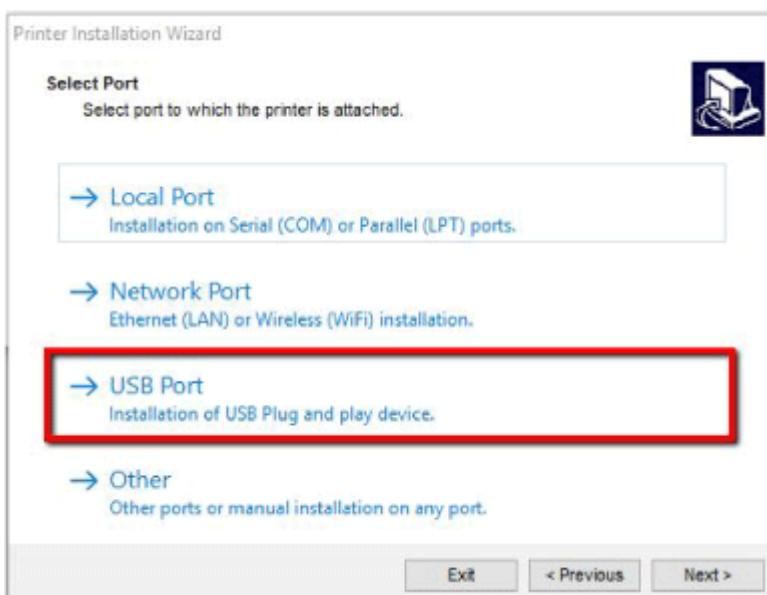


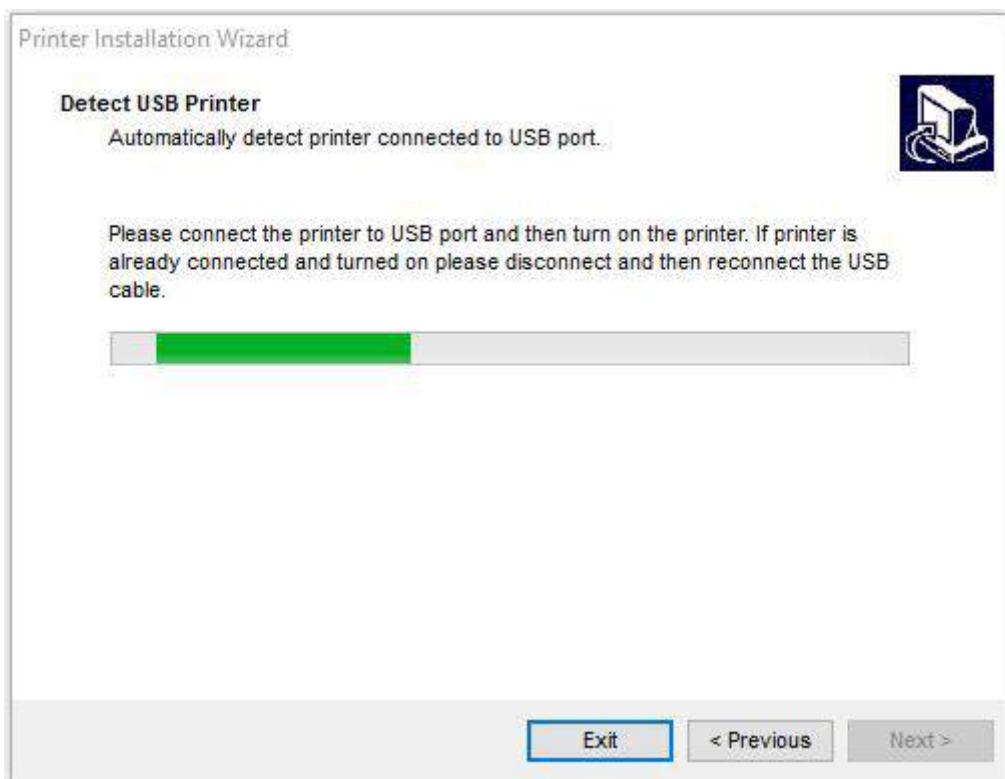10. Follow the instructions on the screen to power on the product.

Windows' Plug & Play runs, and the [Printer Options] screen appears.

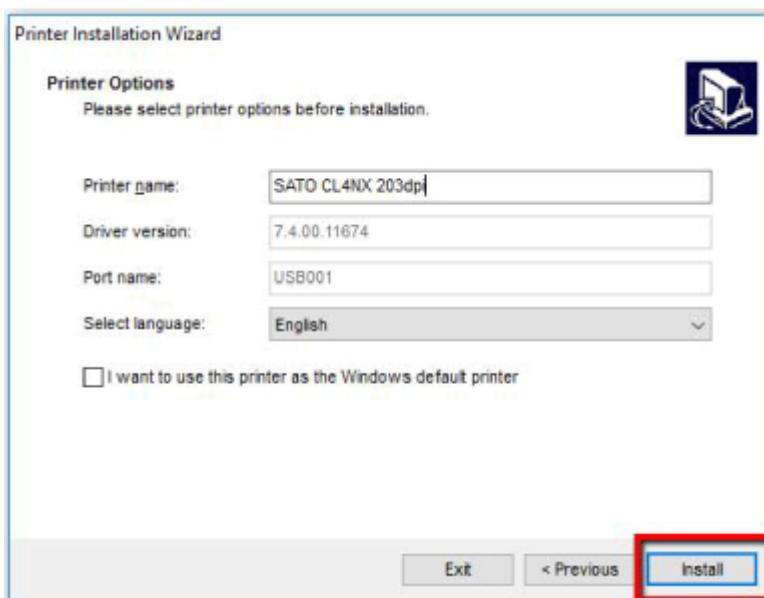11. Click [Install].

12. When the security warning screen appears, click [Install].

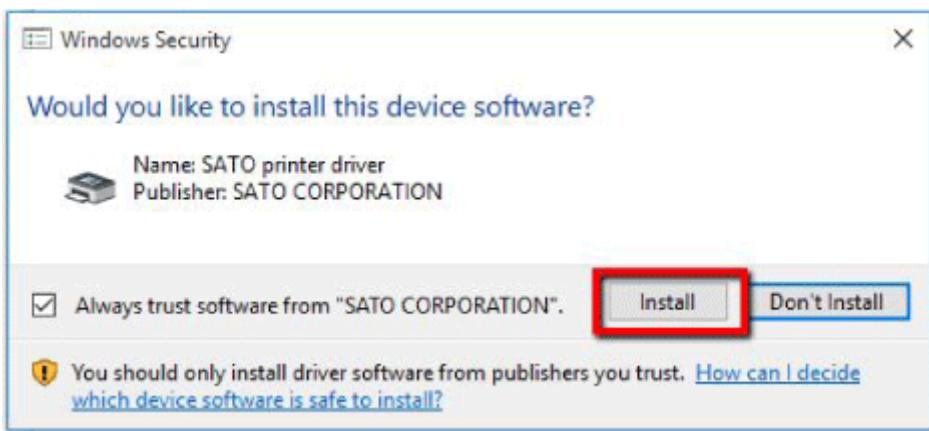


The printer driver is installed.




- The warning screen above may not appear, depending on the version of the printer driver or your computer environment.
- If a security warning screen indicating that another process is blocking access appears, follow the steps on the screen, and click [Next].

13. Click [Exit] to complete the installation.

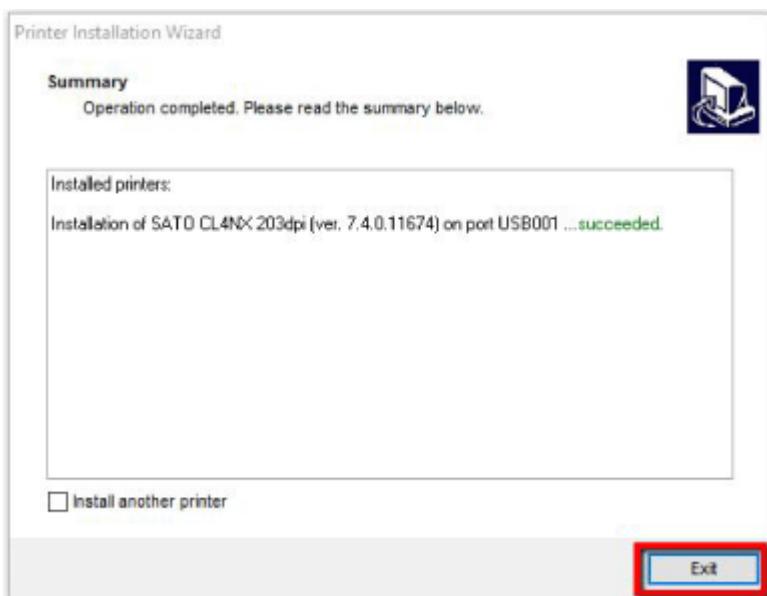

14. In [Devices and Printers], confirm that the product is added to [Printers].

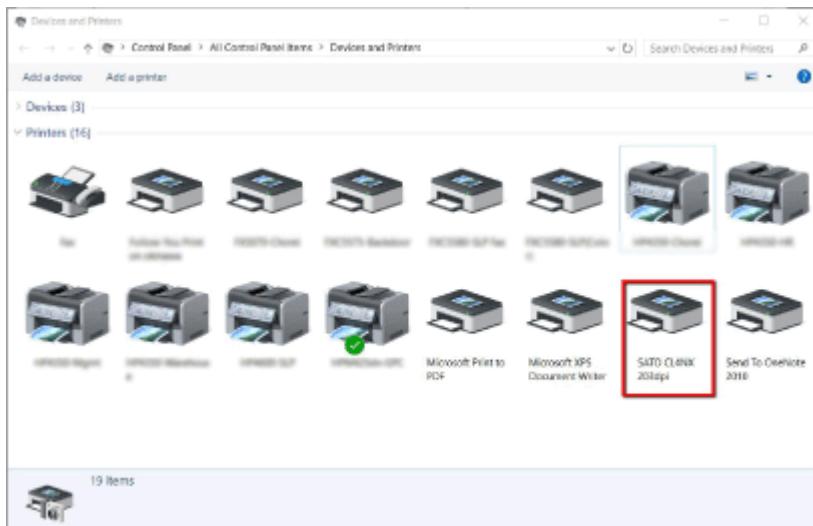

- The settings of the printer driver should be performed by the Administrator Privilege.

Installing the Printer Driver (LAN/Wireless LAN)

Do the following procedures to install the printer driver using a LAN/Wireless LAN. The following procedures use Windows 10 as an example.




- Before starting the installation, close all applications.
- Power off the product and connect the interface cable to a computer.
- When you do the printer driver setup, the properties settings, or the print settings, log in with Administrator Privilege.
- When you use the printer driver, enable bi-directional communication.
- If the terminal service is being started with Windows Server 2008, change the terminal service to the install mode. However, it is not guaranteed that the printer driver can be used in the terminal service environment.
- When using multiple products, it is necessary to install as many printer drivers as products, to identify each product.


- 1. Power on the product, and confirm that the product is connected to the network.**
- 2. Start Windows.**
- 3. Download the printer driver from the SATO printer driver download site. <http://www.satoworldwide.com/software/gallerydriver.aspx>**
- 4. Extract the downloaded compressed file of the printer driver.**
- 5. Execute PrnInst.exe to start the installer.**

6. If a user account control message appears, click [Yes] or [Continue].


7. Click [Next].

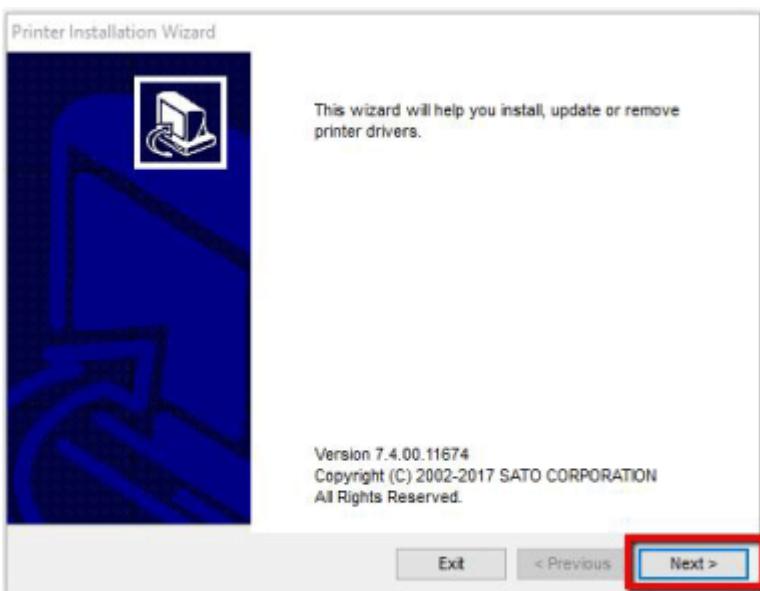

8. Click [Install Printer Driver].

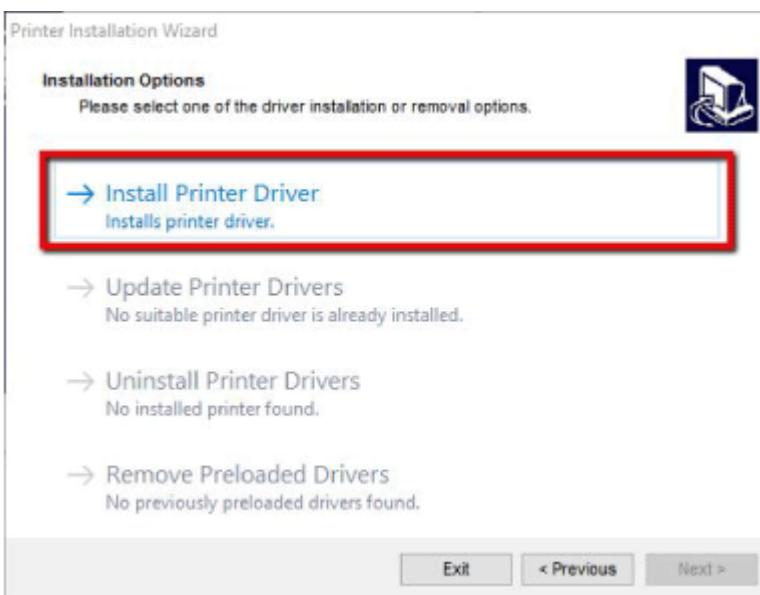


9. Click [Network Port].

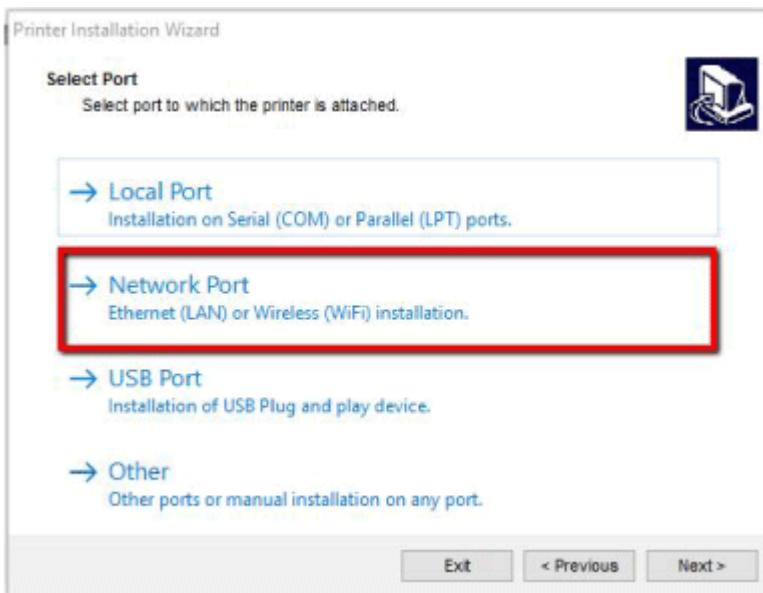


A list of the printers found on the network appears.

10. Select the printer to add and click [Add].

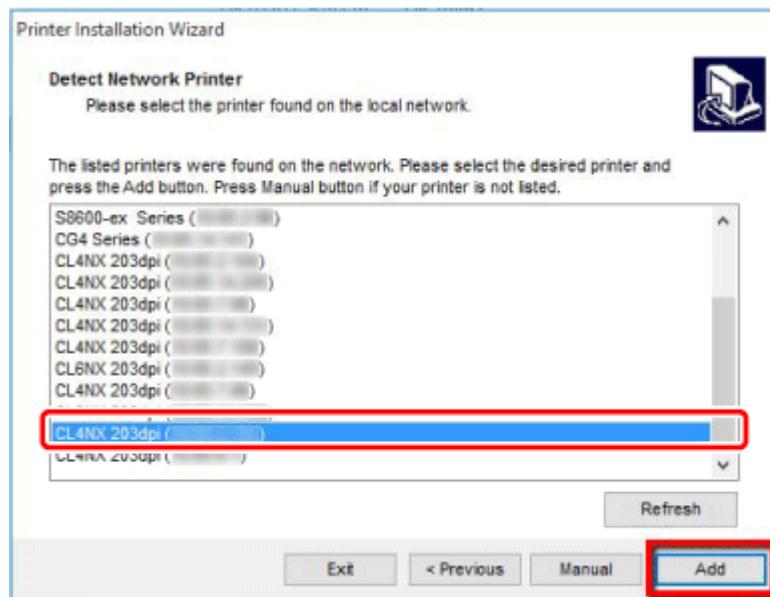


If the product is not shown on the list, click [Refresh]. If the product is still not shown on the list, add the product using the following procedures.

a. Click [Manual].

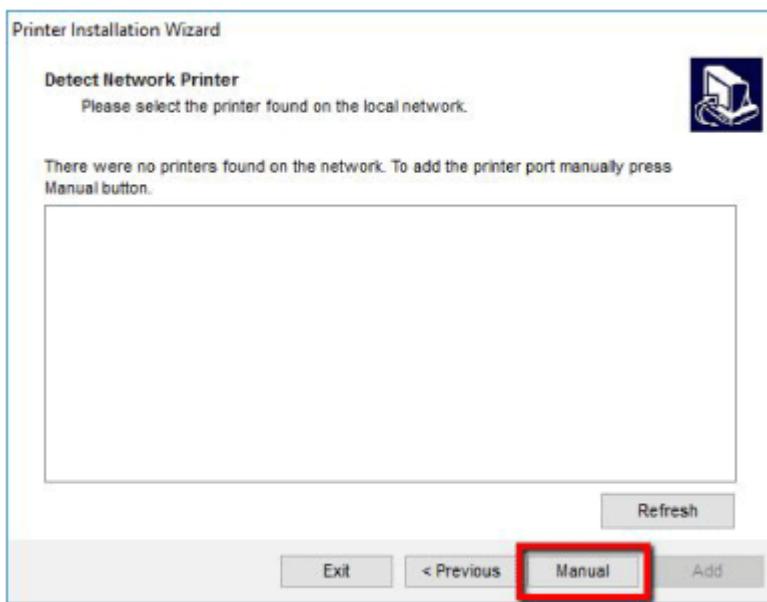

b. Select the model of the product and click [Next].

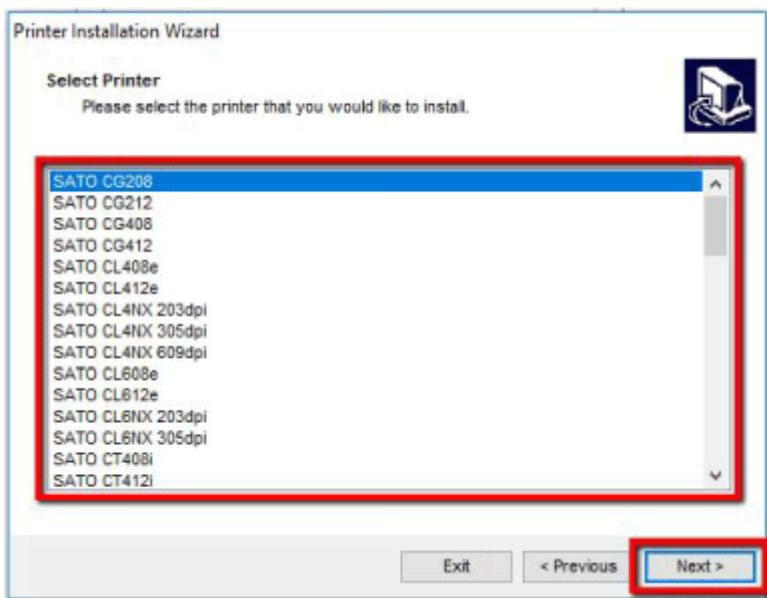




- Select the model which is compatible with the resolution of the product. The resolution of the product is displayed on the upper left of the Online/Offline screen.




- c. Select the network port, and click [Next].

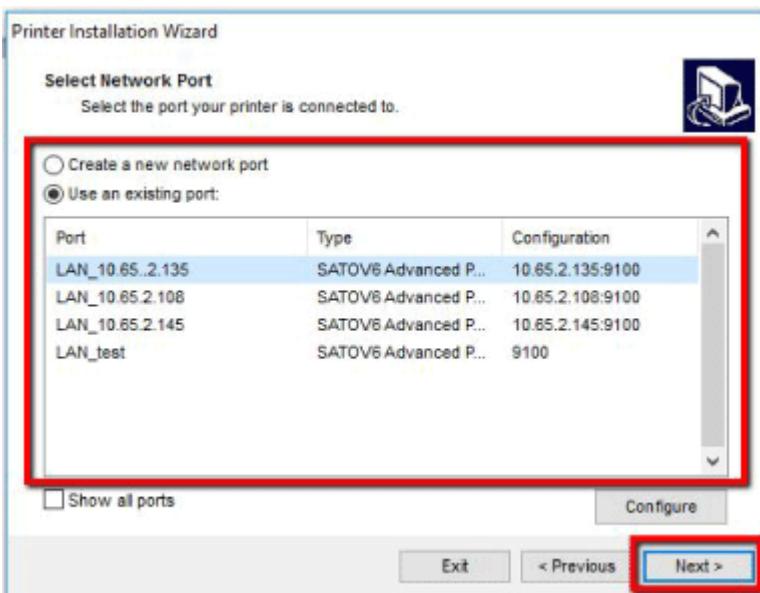


If you have selected [Create a new network port], proceed to step d.


If you have selected [Use an existing port] and then selected a port from the list, proceed to step 11.

- d. Enter the printer name or IP address, and click [Next].

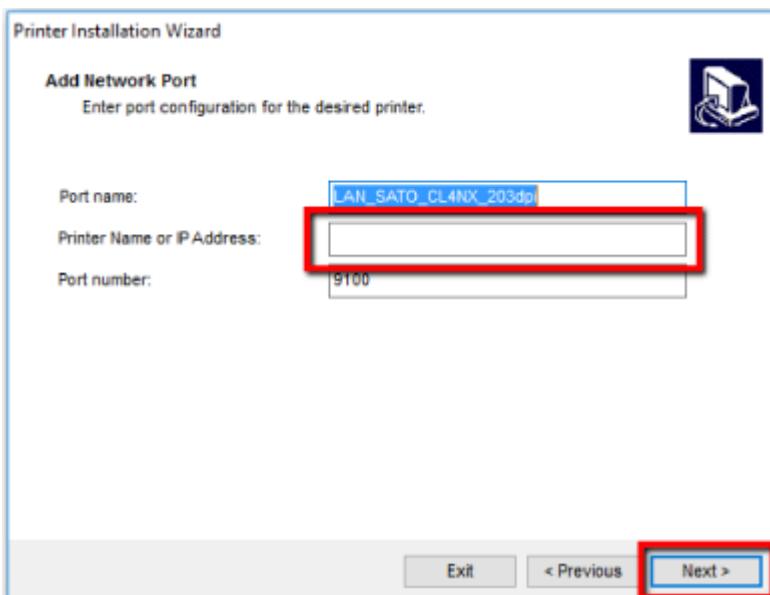

11. Click [Install].

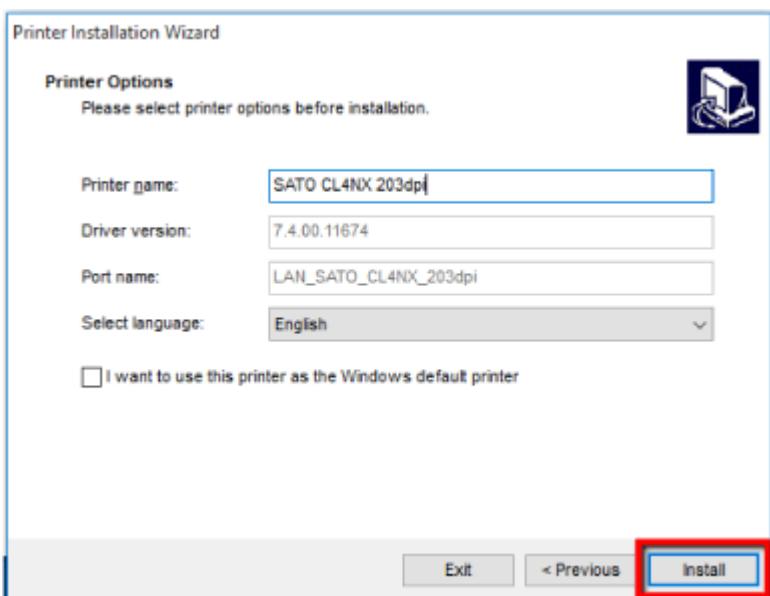


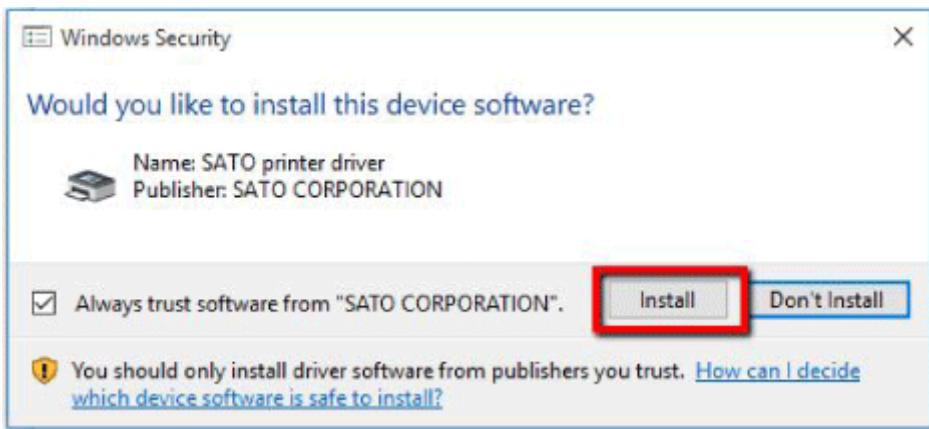12. When the security warning screen appears, click [Install].

The printer driver is installed.




- The warning screen above may not appear, depending on the version of the printer driver or your computer environment.
- If a security warning screen indicating that another process is blocking access appears, follow the steps on the screen, and click [Next].

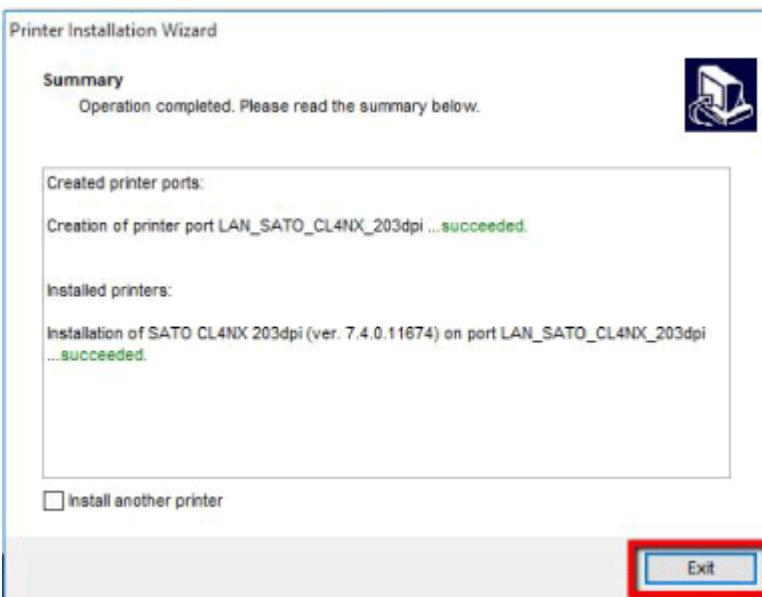13. Click [Exit] to complete the installation.

14. Open [Devices and Printers]* and confirm that the printer driver is installed.

*[Printers] in Windows Vista

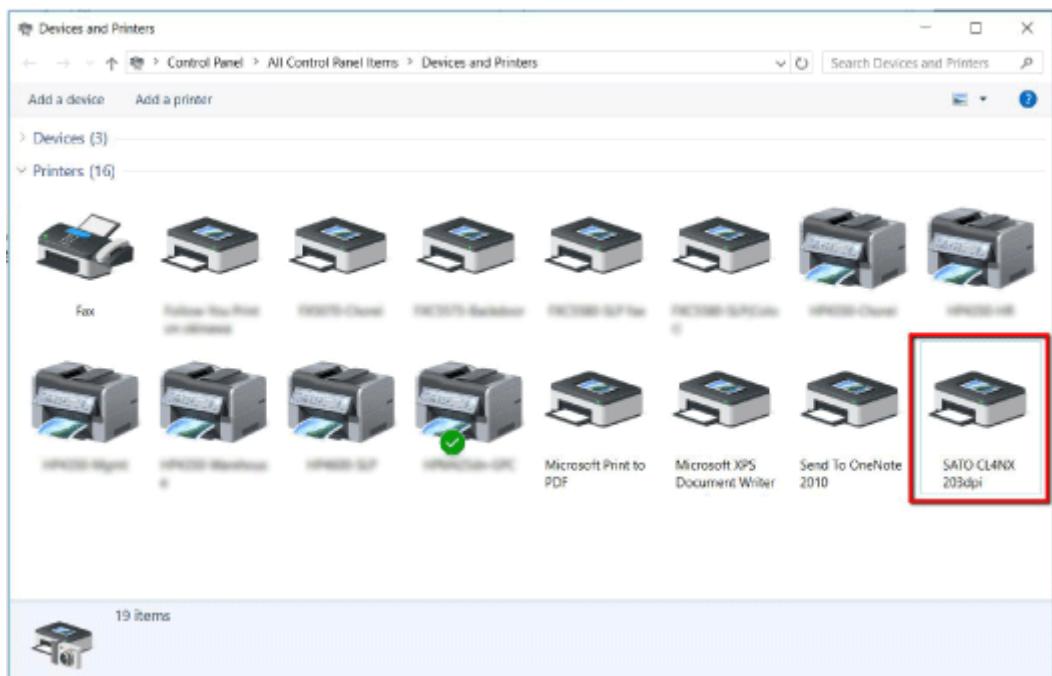

- The settings of the printer driver should be performed by the Administrator Privilege.

Installing the Printer Driver (Bluetooth)

To use the printer driver with the Bluetooth interface connection, add the product to the computer as a Bluetooth device, and then install the printer driver. During the installation, it is necessary to match the port setting of the added Bluetooth device and the printer driver.


The procedure for adding (pairing) the Bluetooth device varies depending on the environment of your computer. The following procedure is an example of Windows 10. For details, refer to the user manual of your computer.




- Before starting the installation, close all applications.
- When you do the printer driver setup, the properties settings, or the print settings, log in with Administrator Privilege.
- When you use the printer driver, enable bi-directional communication.
- If the terminal service is being started with Windows Server 2008, change the terminal service to the install mode. However, it is not guaranteed that the printer driver can be used in the terminal service environment.
- When using multiple products, it is necessary to install as many printer drivers as products, to identify each product.

1. Start Windows.

2. Power on the product.
3. Confirm that Bluetooth is enabled (initial value) in the [Interface] menu of the product.
4. Right-click the Bluetooth icon at the lower-right corner of the Windows desktop screen, and select [Add a Bluetooth Device].

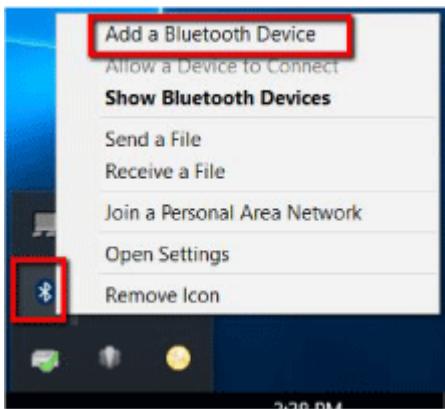


5. Select the product from the search device list and click [Pair].

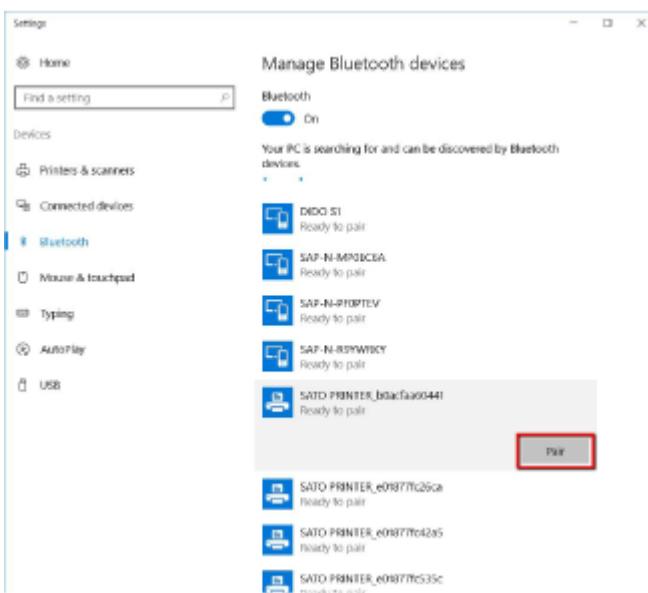


- The initial value of the device name for the product is "SATO PRINTER_xxxxxxxxxxxxxx (BD address)". You can check and change it on the [Bluetooth] > [Name] on the [Interface] menu of the product.

6. Enter the passcode for the product and click [Next].

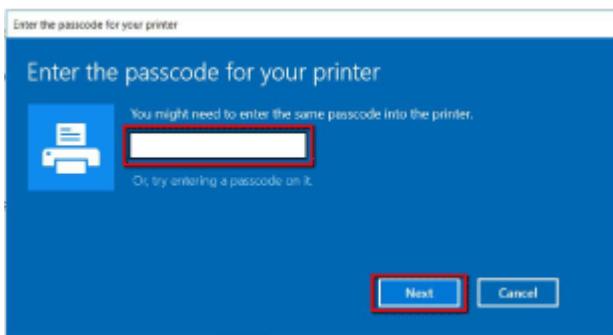


- The default passcode of the product is "0000". You can check and change it on the [Bluetooth] > [PIN Code] on the [Interface] menu of the product.

The product is added as a Bluetooth device.

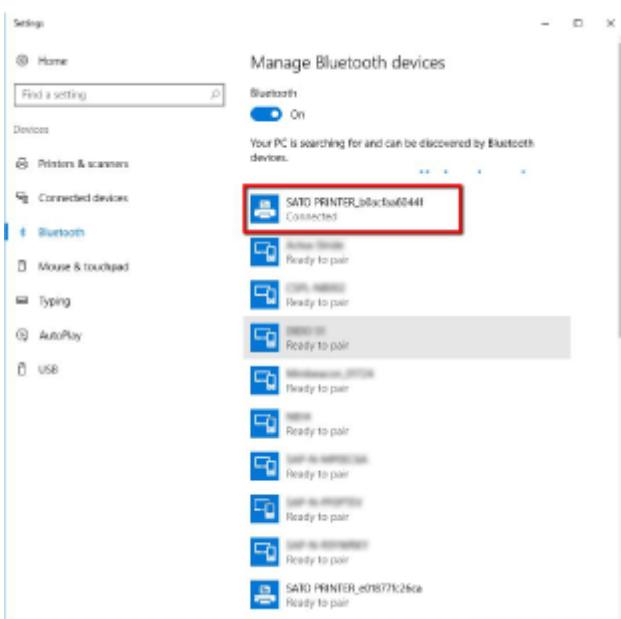

7. Open [Devices and Printers]*, right-click the product added as a Bluetooth device, and select [Properties].

*[Printers] in Windows Vista

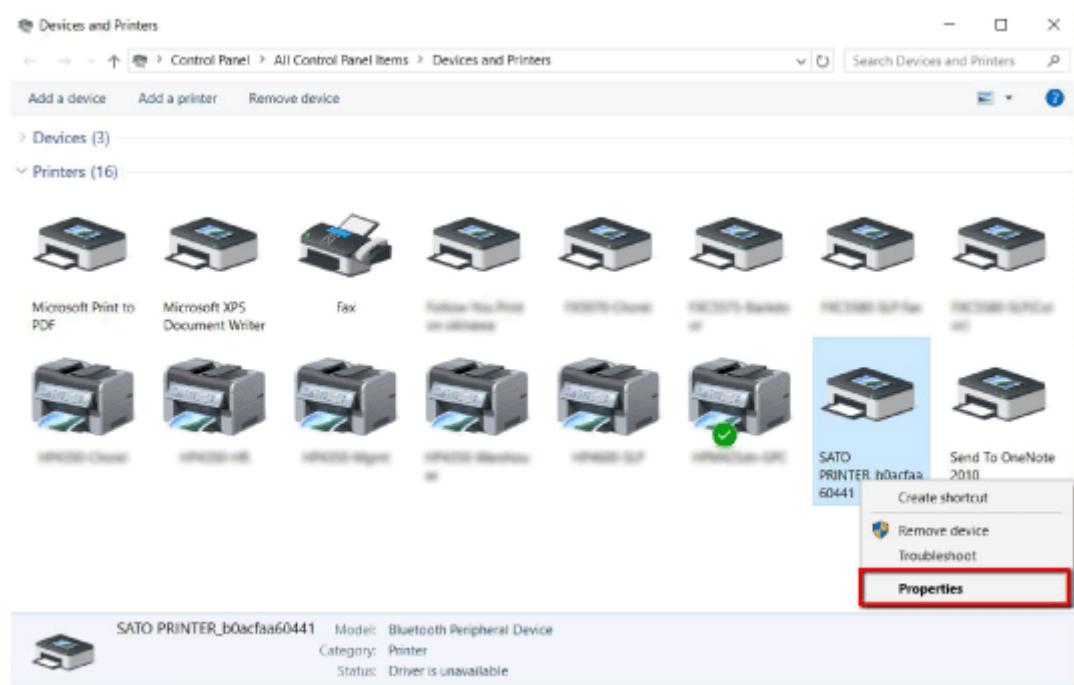


8. Confirm the port assigned as the [Serial port (SPP)] in the [Services] tab, and click [OK].


Note down this information as it will be necessary for the printer driver installation.





9. Download the printer driver from the SATO printer driver download site. <http://www.satoworldwide.com/software/gallerydriver.aspx>
10. Extract the downloaded compressed file of the printer driver.
11. Execute PrnInst.exe to start the installer.
12. If a user account control message appears, click [Yes] or [Continue].
13. Click [Next].

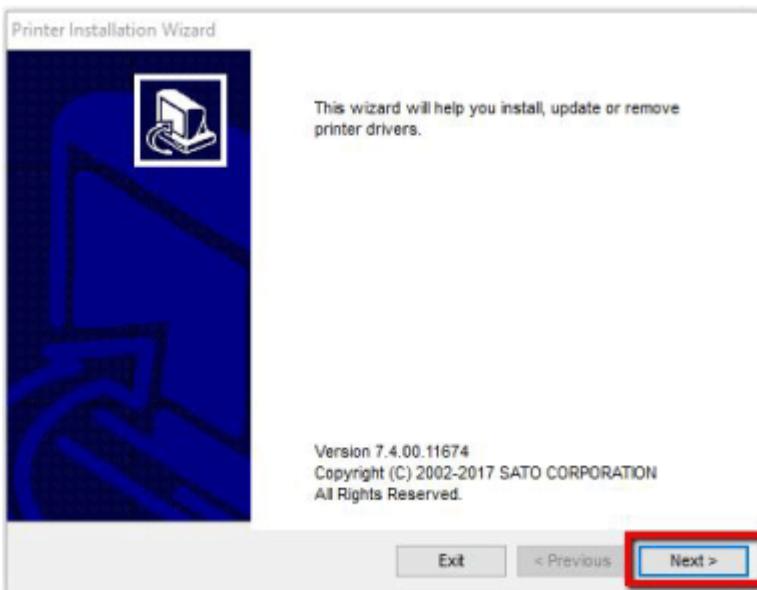

14. Click [Install Printer Driver].

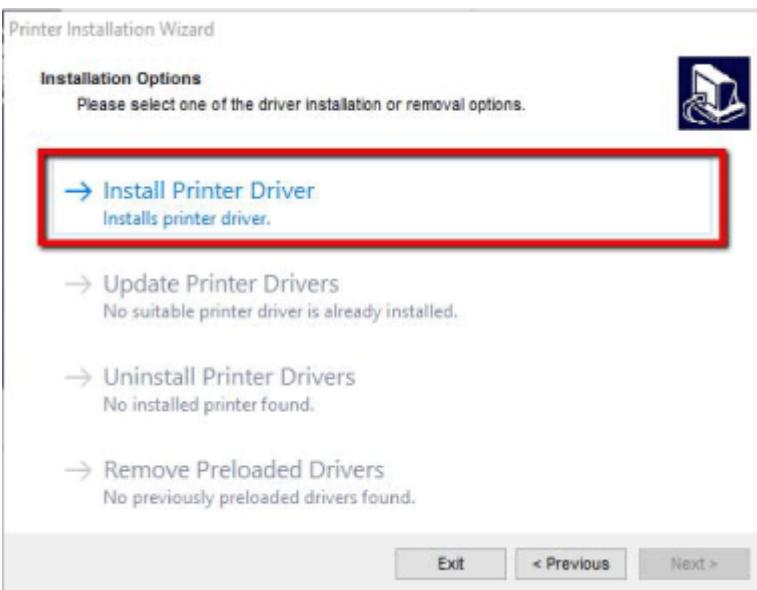

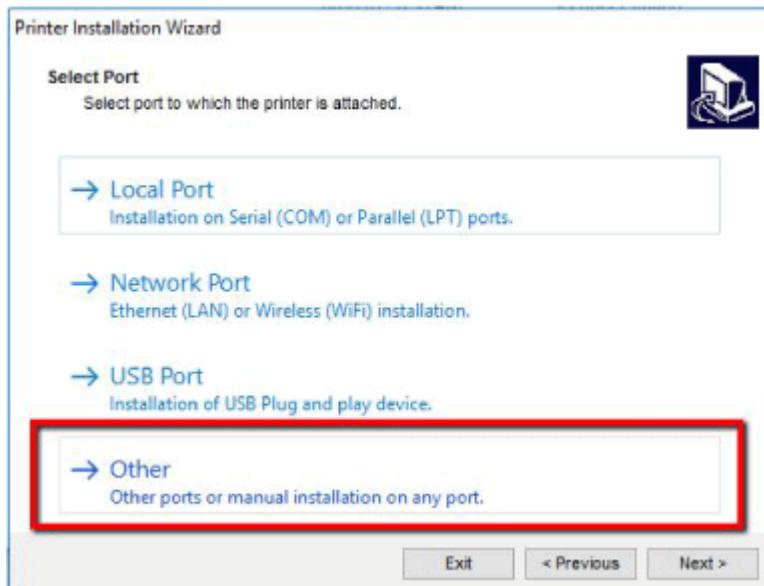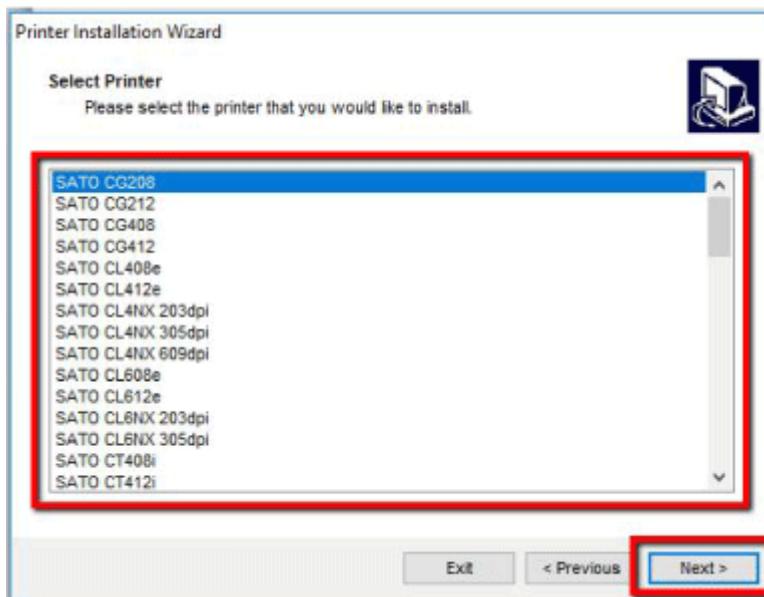
15. Click [Other].**16. Select the model of the product and click [Next].**




- Select the model which is compatible with the resolution of the product. The resolution of the product is displayed on the upper left of the Online/Offline screen.




17. Click [Add] and add a port manually.

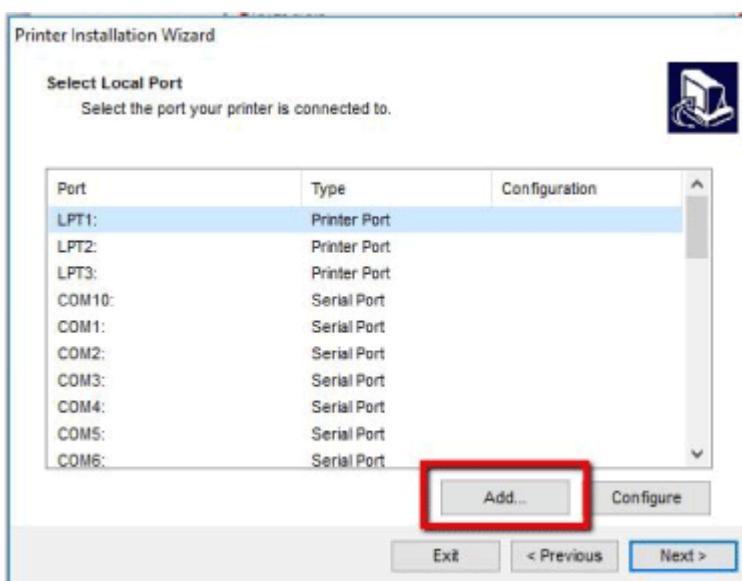


18. Select [SERIAL (COM)] from the [Select port type] drop down list and click [OK].

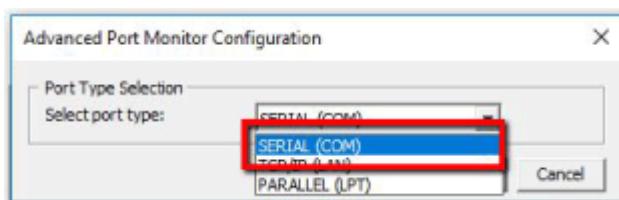


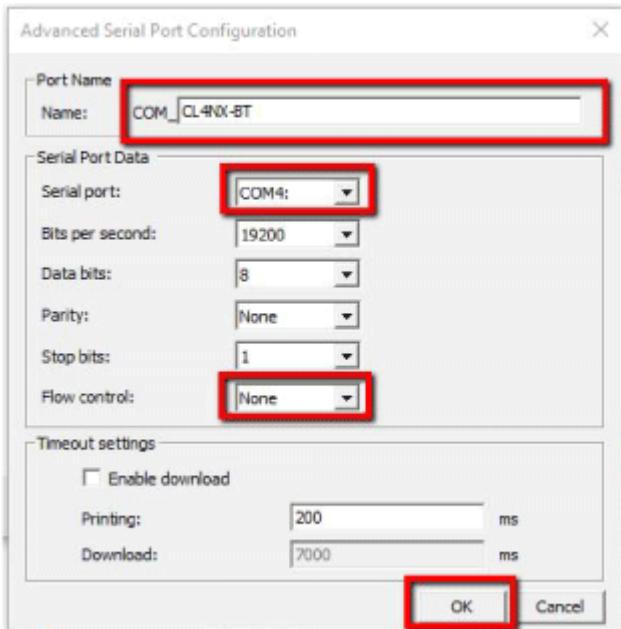19. Configure the port setting.

- Enter the port name.
- In [Serial port], select the port of the Bluetooth device checked in step 8.
- In [Flow control], select [None].
- Click [OK].

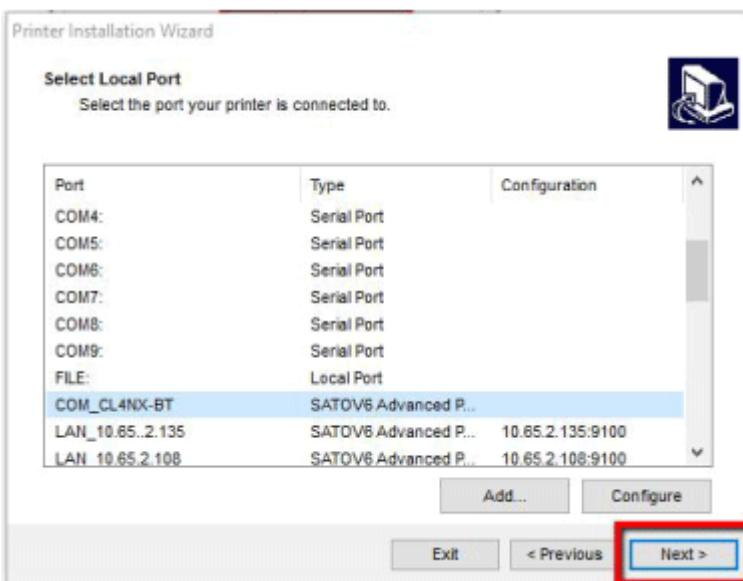20. Click [Next].

21. Click [Install].

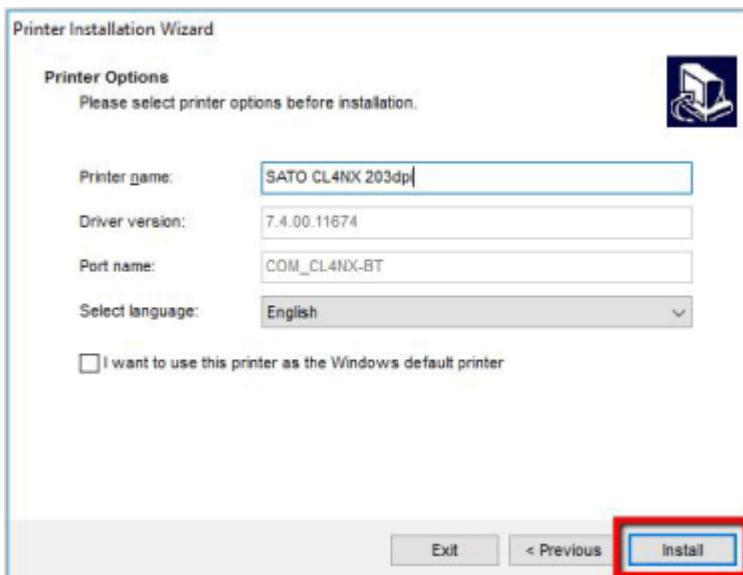

22. When the security warning screen appears, click [Install].




The printer driver is installed.




- The warning screen above may not appear, depending on the version of the printer driver or your computer environment.
- If a security warning screen indicating that another process is blocking access appears, follow the steps on the screen, and click [Next].

23. Click [Exit] to complete the installation.

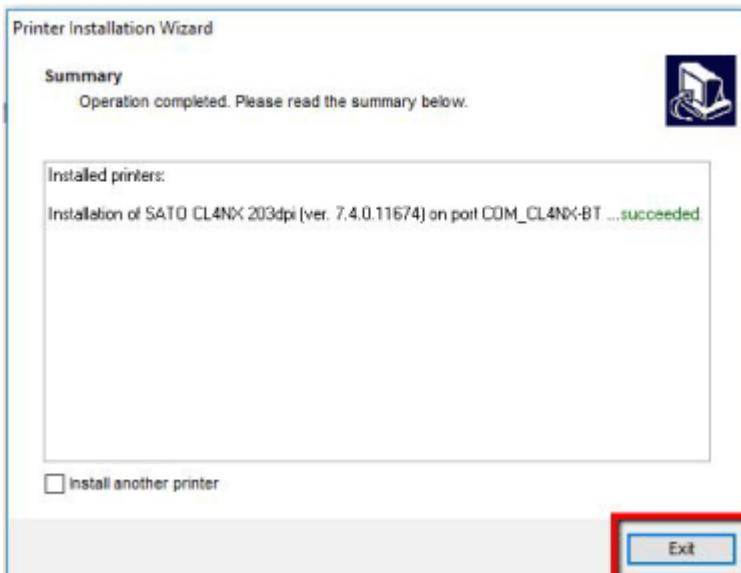

24. Open [Devices and Printers]* and confirm that the printer driver is installed.

*[Printers] in Windows Vista

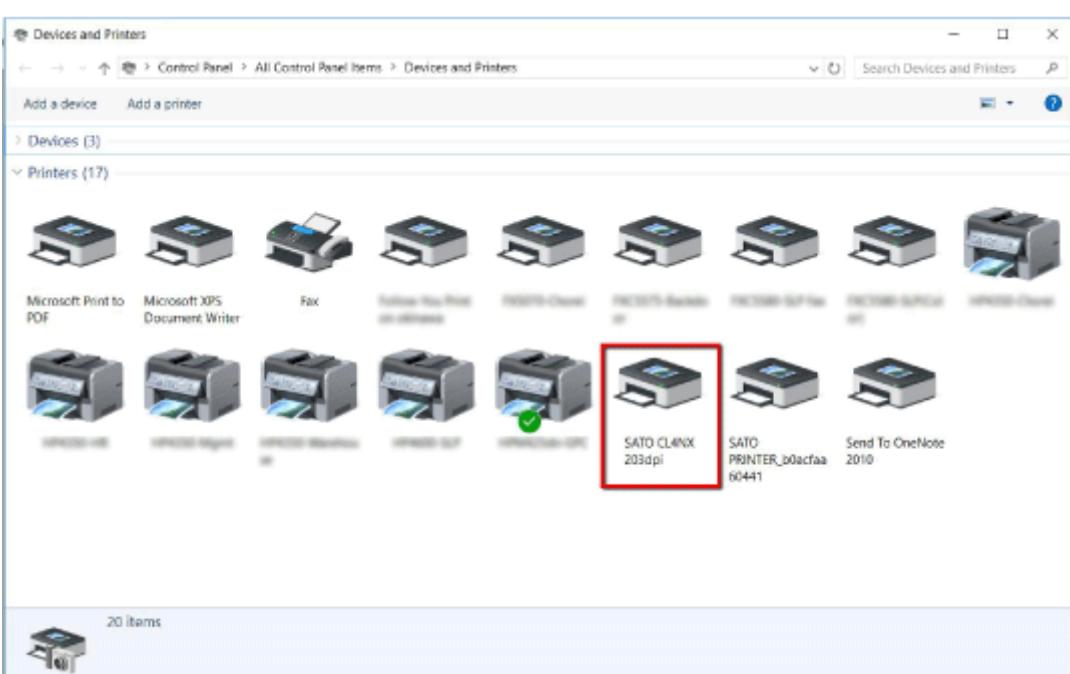

The printer driver can be used with the Bluetooth interface connection.

When printing, use the product added when the printer driver was installed, not the product added as the Bluetooth device.



- The settings of the printer driver should be performed by the Administrator Privilege.

Installing the Printer Driver (RS-232C)


Do the following procedures to install the printer driver using RS-232C interfaces. The following procedures use Windows 10 as an example.




- Before starting the installation, close all applications.
- Power off the product and connect the interface cable to a computer.
- When you do the printer driver setup, the properties settings, or the print settings, log in with Administrator Privilege.
- When you use the printer driver, enable bi-directional communication.
- If the terminal service is being started with Windows Server 2008, change the terminal service to the install mode. However, it is not guaranteed that the printer driver can be used in the terminal service environment.
- When using multiple products, it is necessary to install as many printer drivers as products, to identify each product.
- The interface settings of the connection port (COM) for the product and computer should match. You can check the interface settings in the [Interface] menu of the product. The interface settings of the computer can be confirmed by the following. In the Device Manager, right-click [Ports] > [Communications Port (COM1)] and select [Properties]. Then, check the [Port Settings] tab of the displayed Properties screen.
- To use the RS-232C interface to connect with the computer, the product's [Tools] > [Barcode Checker] > [Test] > [Interface] menu must be set to [RS-232C].

1. **Connect the product and computer with the RS-232C cable, and power on the product.**
2. **Start Windows.**
3. **Download the printer driver from the SATO printer driver download site. <http://www.satoworldwide.com/software/gallerydriver.aspx>**
4. **Extract the downloaded compressed file of the printer driver.**
5. **Execute PrnInst.exe to start the installer.**
6. **If a user account control message appears, click [Yes] or [Continue].**


7. Click [Next].

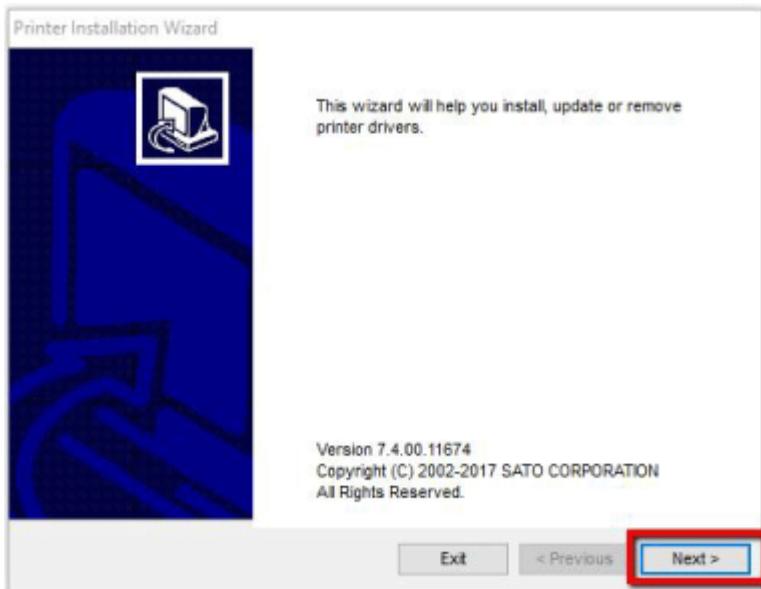


8. Click [Install Printer Driver].

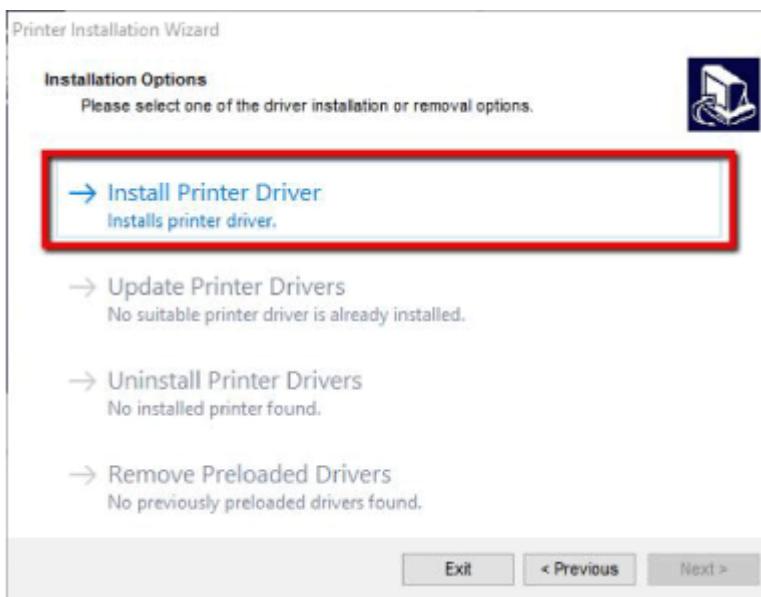

9. Click [Local Port].

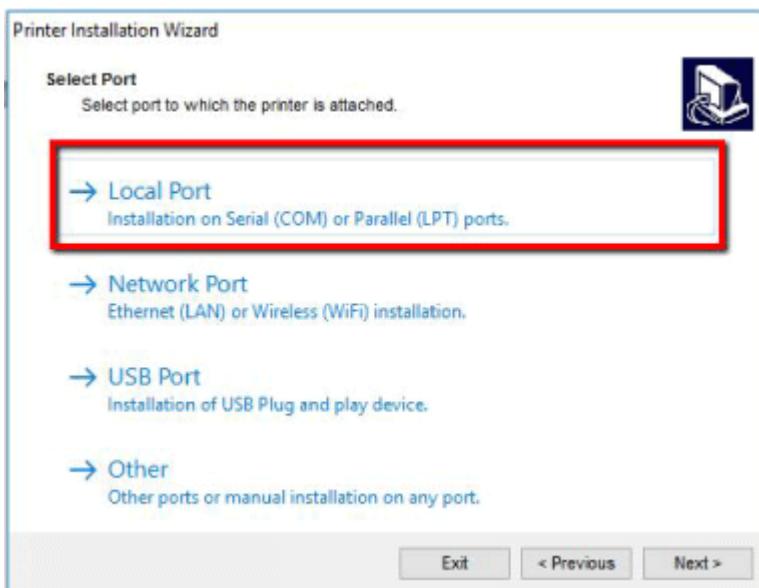

10. Select the model of the product and click [Next].

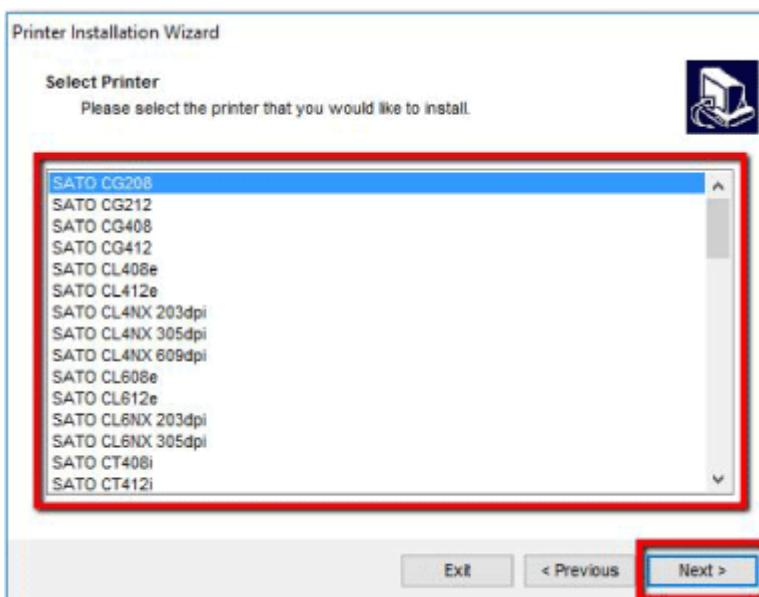





- Select the model which is compatible with the resolution of the product. The resolution of the product is displayed on the upper left of the Online/Offline screen.



11. Select a serial (COM) port and click [Next].

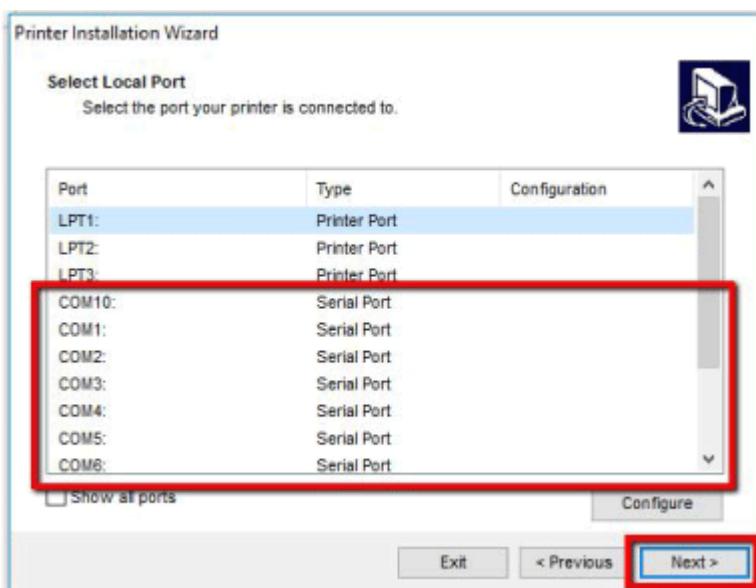

12. Click [Install].

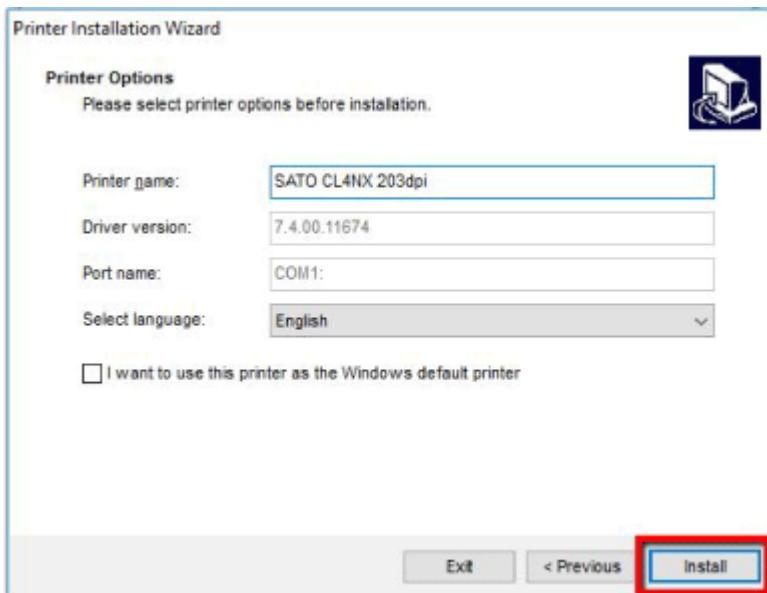


13. When the security warning screen appears, click [Install].




The printer driver is installed.



- The warning screen above may not appear, depending on the version of the printer driver or your computer environment.
- If a security warning screen indicating that another process is blocking access appears, follow the steps on the screen, and click [Next].

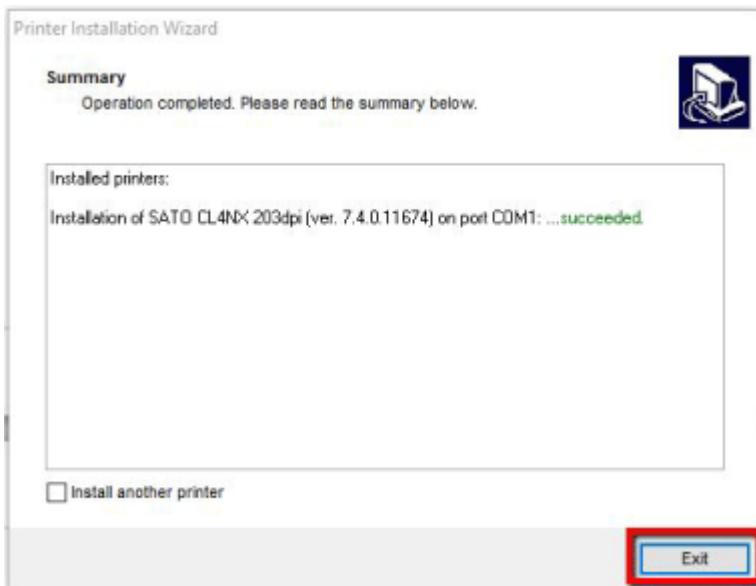14. Click [Exit] to complete the installation.**15. Open [Devices and Printers]* and confirm that the printer driver is installed.**

*[Printers] in Windows Vista

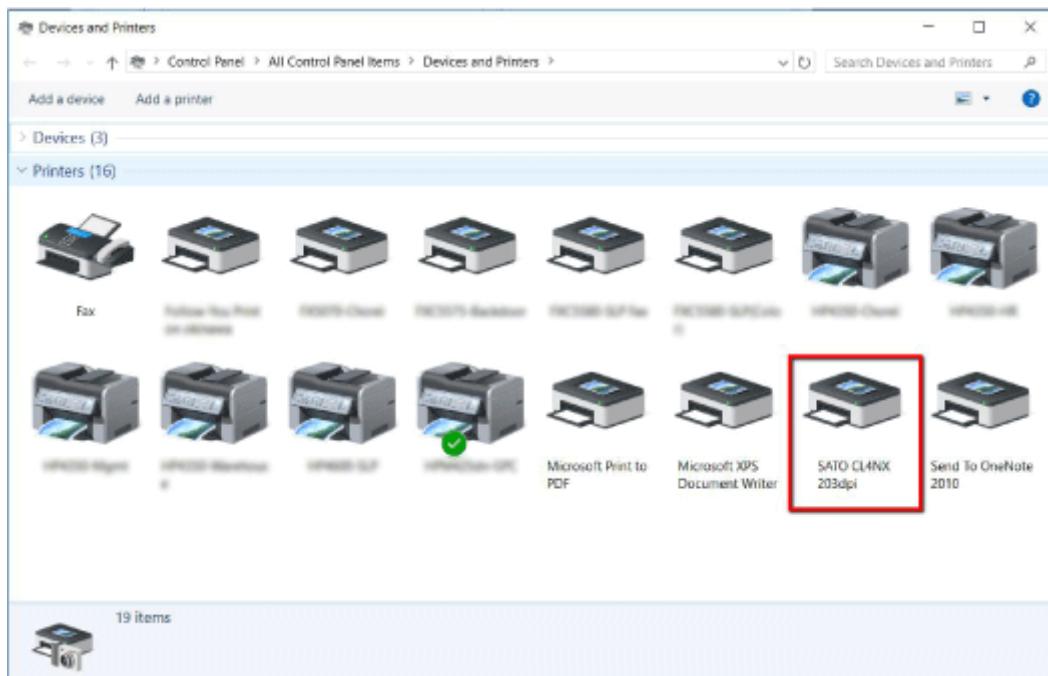

- The settings of the printer driver should be performed by the Administrator Privilege.

Installing the Printer Driver (IEEE1284)

When the computer is connected to the Internet, the printer driver is automatically installed after connecting the IEEE1284 compliant cable between the computer and the product and powering on the product.


Do the following procedures to install the printer driver when the computer is not connected to the Internet. The following procedures use Windows 10 as an example.




- Before starting the installation, close all applications.
- Power off the product and connect the interface cable to a computer.
- When you do the printer driver setup, the properties settings, or the print settings, log in with Administrator Privilege.
- When you use the printer driver, enable bi-directional communication.
- If the terminal service is being started with Windows Server 2008, change the terminal service to the install mode. However, it is not guaranteed that the printer driver can be used in the terminal service environment.
- When using multiple products, it is necessary to install as many printer drivers as products, to identify each product.
- After installing the printer driver for the first product, the printer driver for the second and additional products will be automatically installed when the products are connected to the computer and powered on. However, the name of the printer drivers will be "driver name (1)", "driver name (2)", and so on. To change the driver name, right-click the product in [Devices and Printers], select [Printer properties], and change the name at the top of the [General] tab.

1. **Power off the product and connect the IEEE1284 compliant cable to a computer.**
2. **Start Windows.**
3. **Download the printer driver from the SATO printer driver download site. <http://www.satoworldwide.com/software/gallerydriver.aspx>**
4. **Extract the downloaded compressed file of the printer driver.**
5. **Execute PrnInst.exe to start the installer.**
6. **If a user account control message appears, click [Yes] or [Continue].**


7. Click [Next].

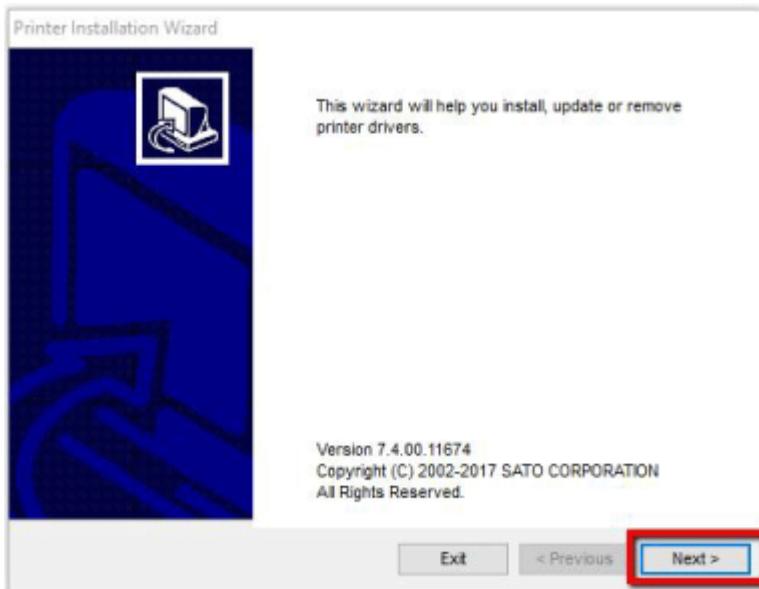


8. Click [Install Printer Driver].

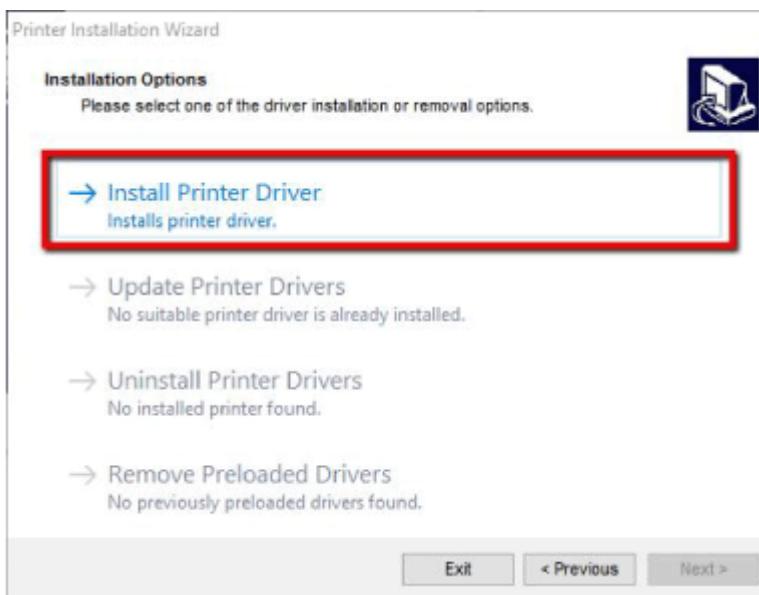

9. Click [Local Port].

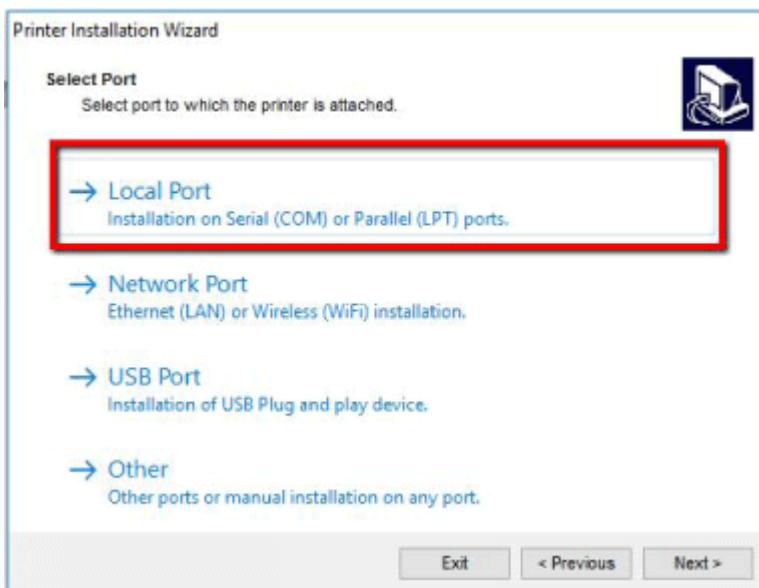

10. Select the model of the product and click [Next].

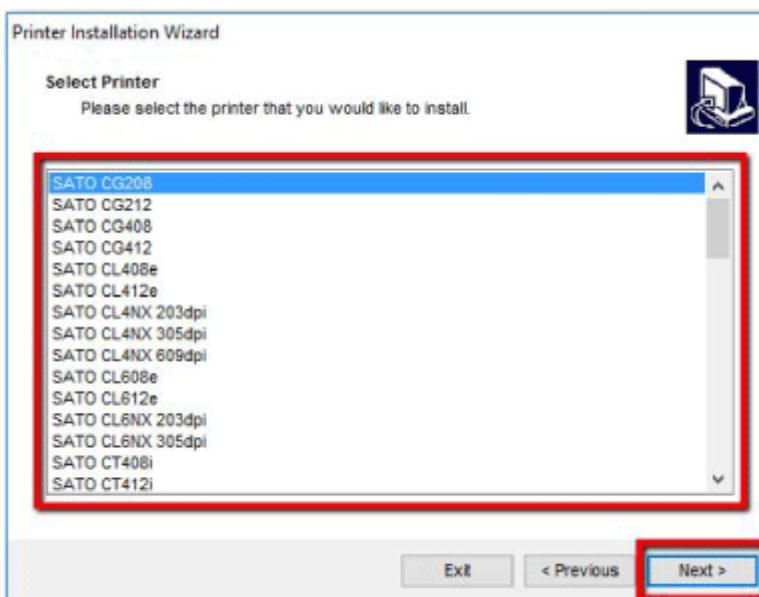





- Select the model which is compatible with the resolution of the product. The resolution of the product is displayed on the upper left of the Online/Offline screen.




11. Select a printer port (LPT) and click [Next].

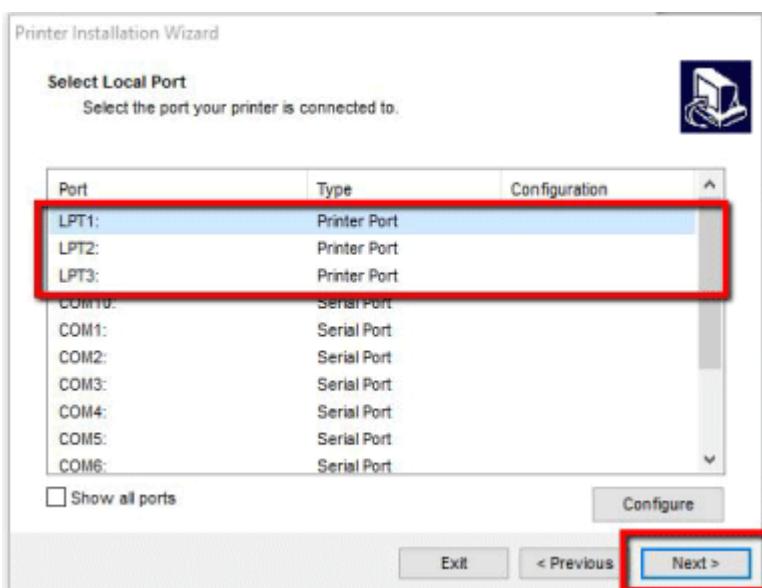

12. Click [Install].

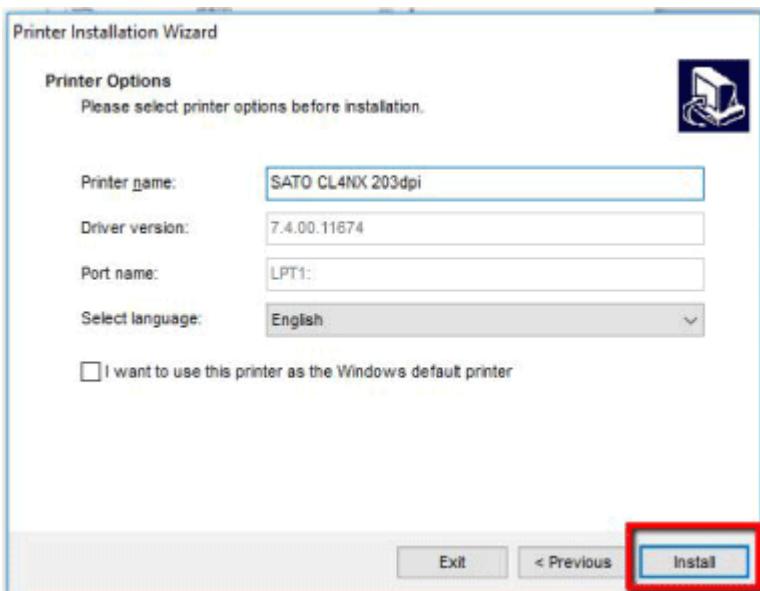

13. When the security warning screen appears, click [Install].

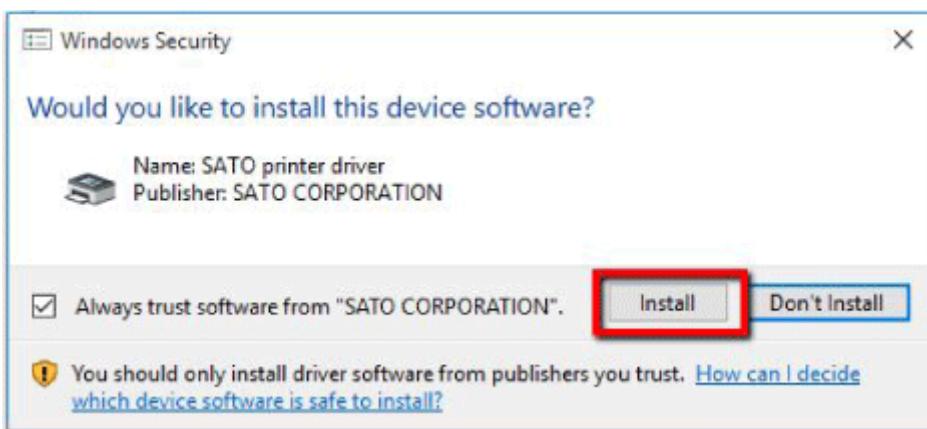


The printer driver is installed.



- The warning screen above may not appear, depending on the version of the printer driver or your computer environment.
- If a security warning screen indicating that another process is blocking access appears, follow the steps on the screen, and click [Next].

14. Click [Exit] to complete the installation.

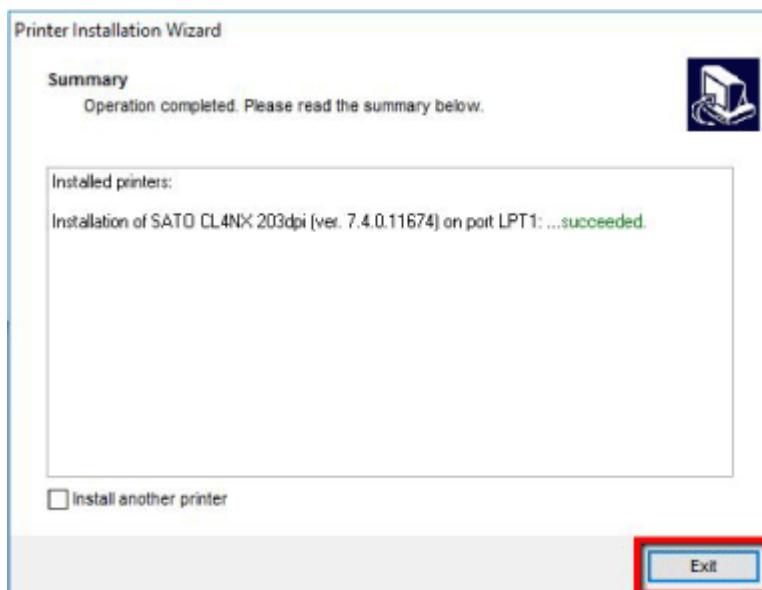


15. Power on the product.

Windows' Plug & Play runs.

16. Open [Devices and Printers]* and confirm that the printer driver is installed.

*[Printers] in Windows Vista

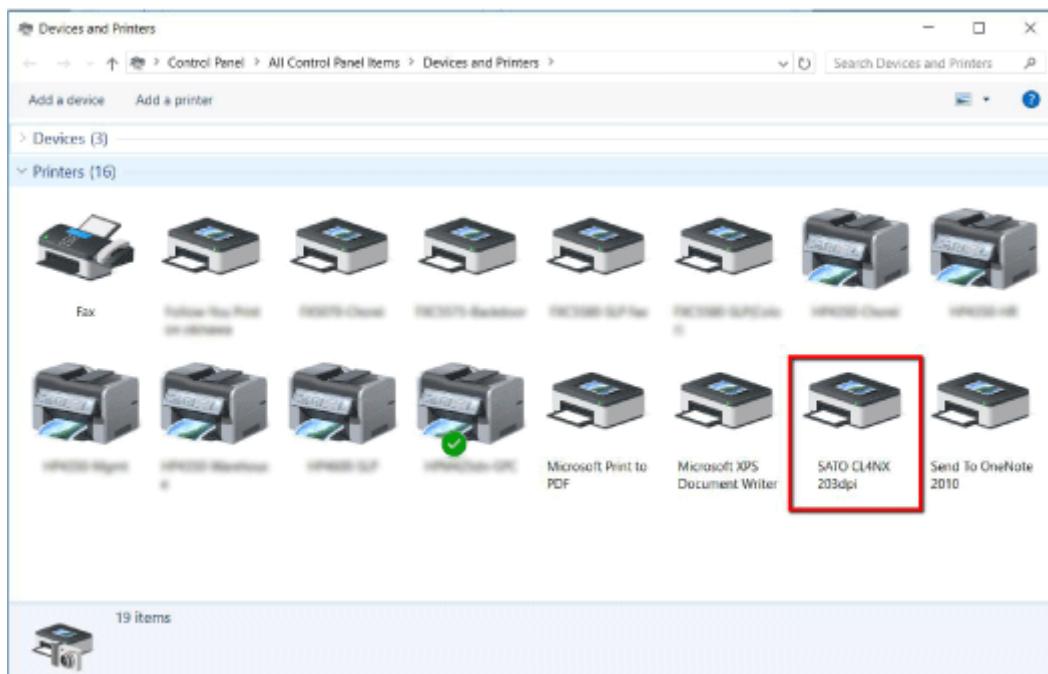

- The settings of the printer driver should be performed by the Administrator Privilege.

Uninstalling the Printer Driver


The printer driver is uninstalled using the installer with the following procedures. The following procedures use Windows 10 as an example.

Do not remove the device from [Devices and Printers].




- Before starting the uninstallation, close all applications.
- When you do the printer driver setup, the properties settings, or the print settings, log in with Administrator Privilege.

1. Power off the product.
2. Start Windows.
3. Download the printer driver from the SATO printer driver download site. <http://www.satoworldwide.com/software/gallerydriver.aspx>
4. Extract the downloaded compressed file of the printer driver.
5. Execute PrnInst.exe to start the installer.
6. If a user account control message appears, click [Yes] or [Continue].
7. Click [Next].

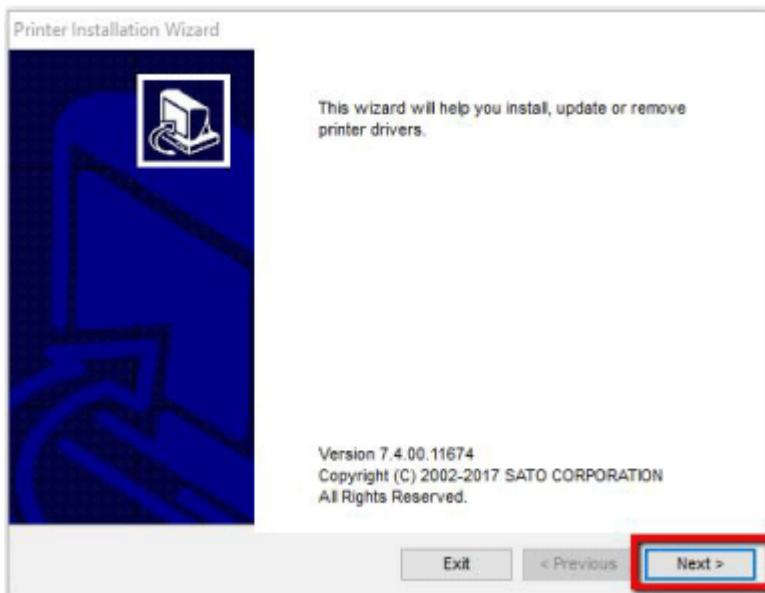


8. Click [Uninstall Printer Drivers].

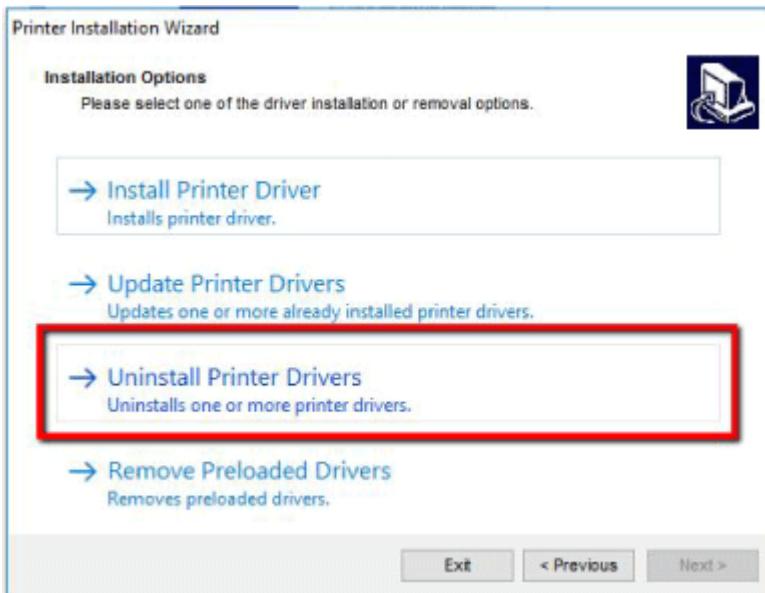

9. Check the check box of the printer you want to uninstall and click [Next].

You can select multiple printers.

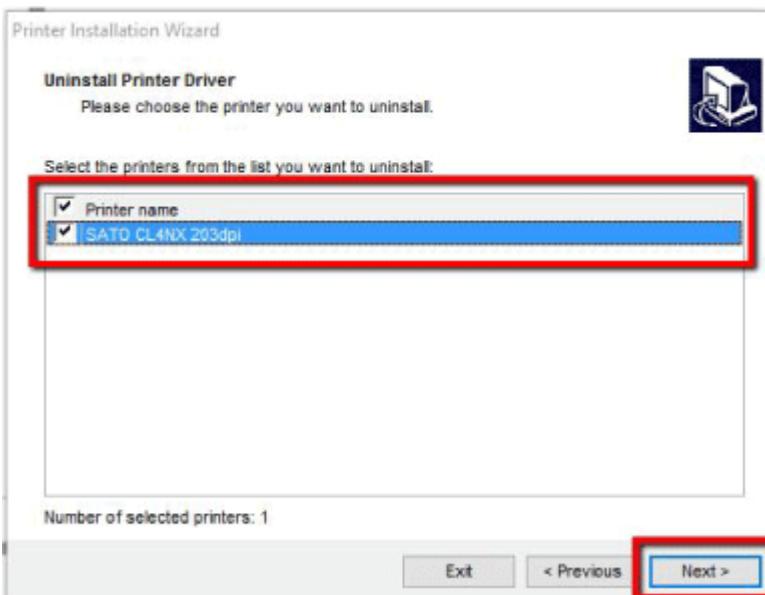


The printer driver is uninstalled.



- When the multiple printers are shown, as long as you do not remove all of the printers, the files related to the installed printer drivers are not removed. In that case, only the printer name is removed.
- If a security warning screen indicating that another process is blocking access appears, follow the steps on the screen, and click [Next].

10. Click [Exit].

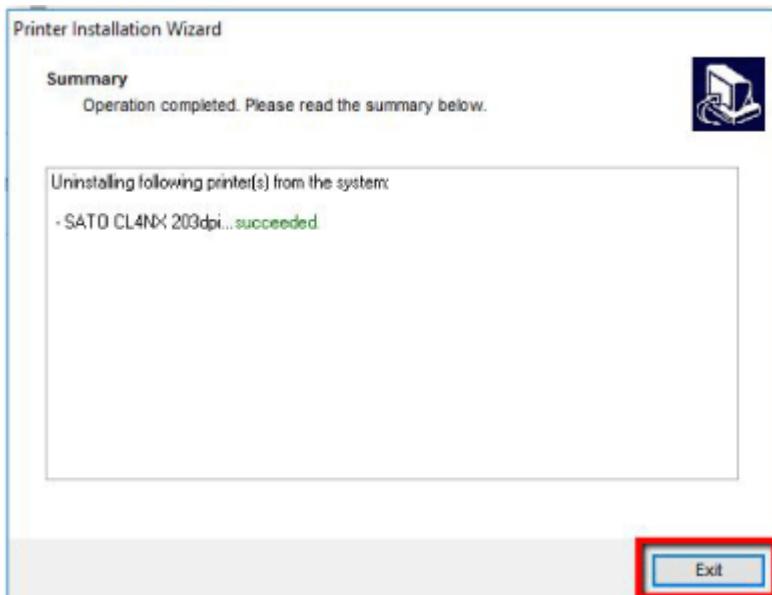

Printer Driver Features

The topics here explain how to open the printer driver setting screens and provide an overview of the printer driver features.

Configuring the Printer Driver Settings as an Administrator


Configuring the Printer Driver Settings as an Administrator (Windows 7 or Later)

When printing a layout created by an application software, configure the printer driver settings first.


The settings of the printer driver should be done by the administrator. If you change a setting value or add a printer port through someone other than the administrator, an error screen appears and the processes you operated are not reflected.


In Windows 7 or later, open the properties screen of the printer driver as an administrator with the following procedures. The following procedures use Windows 8.1 as an example.


- 1. Open the [Devices and Printers] folder.**
- 2. Right-click the icon of the printer you use and select [Printer properties].**

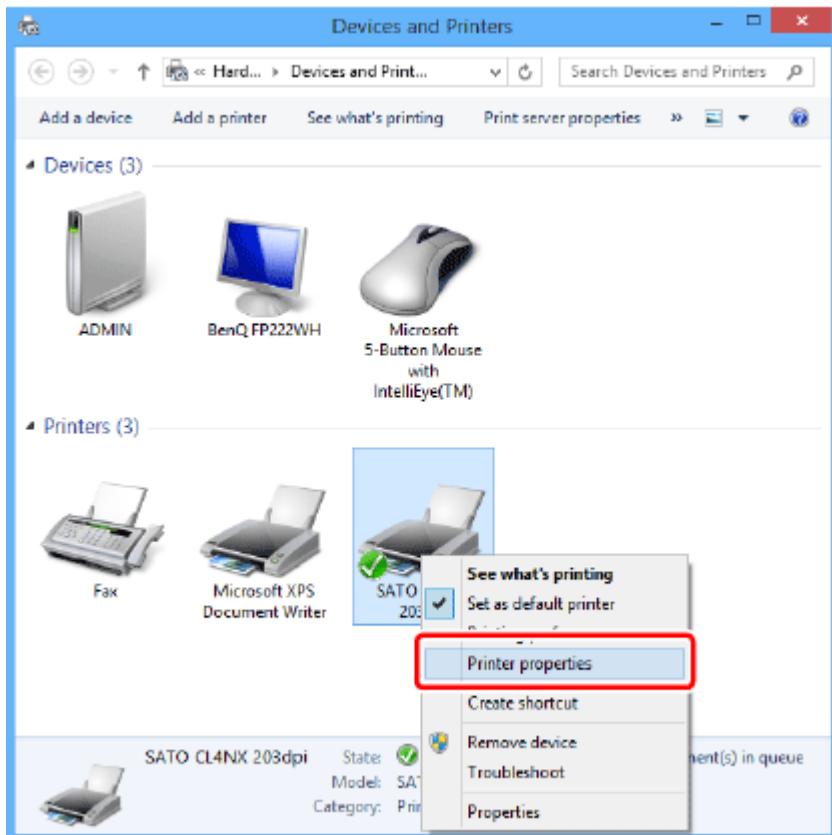

3. Open the [Sharing] tab.

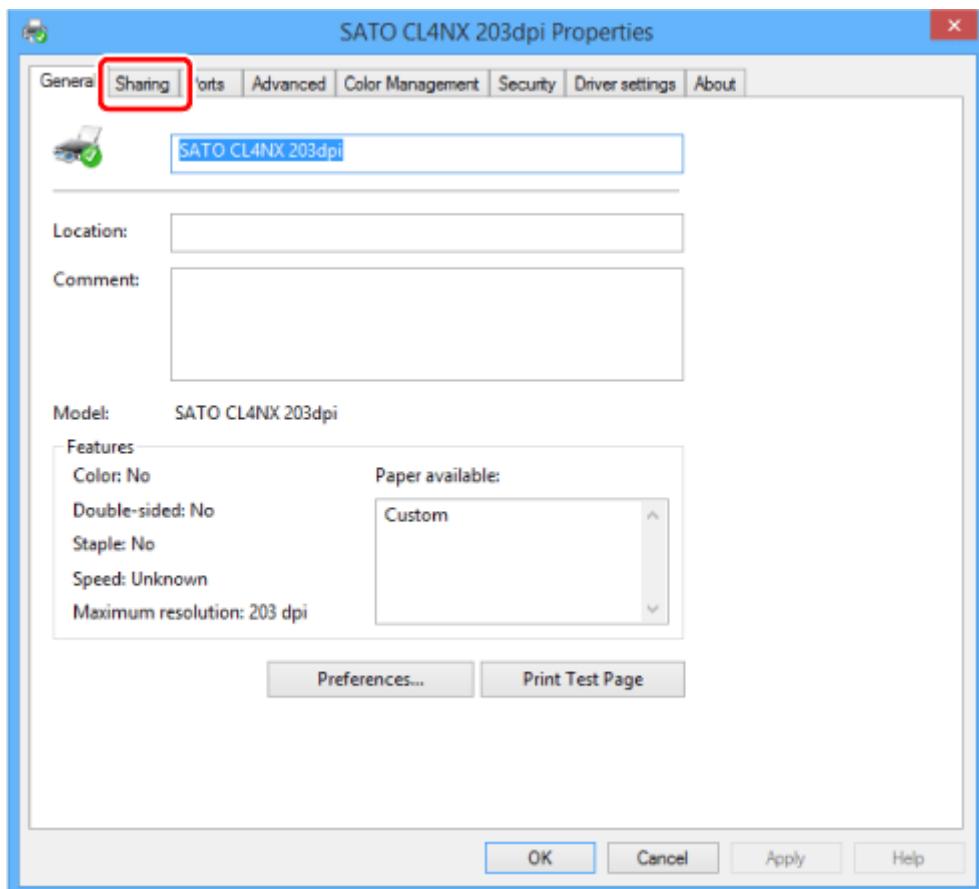

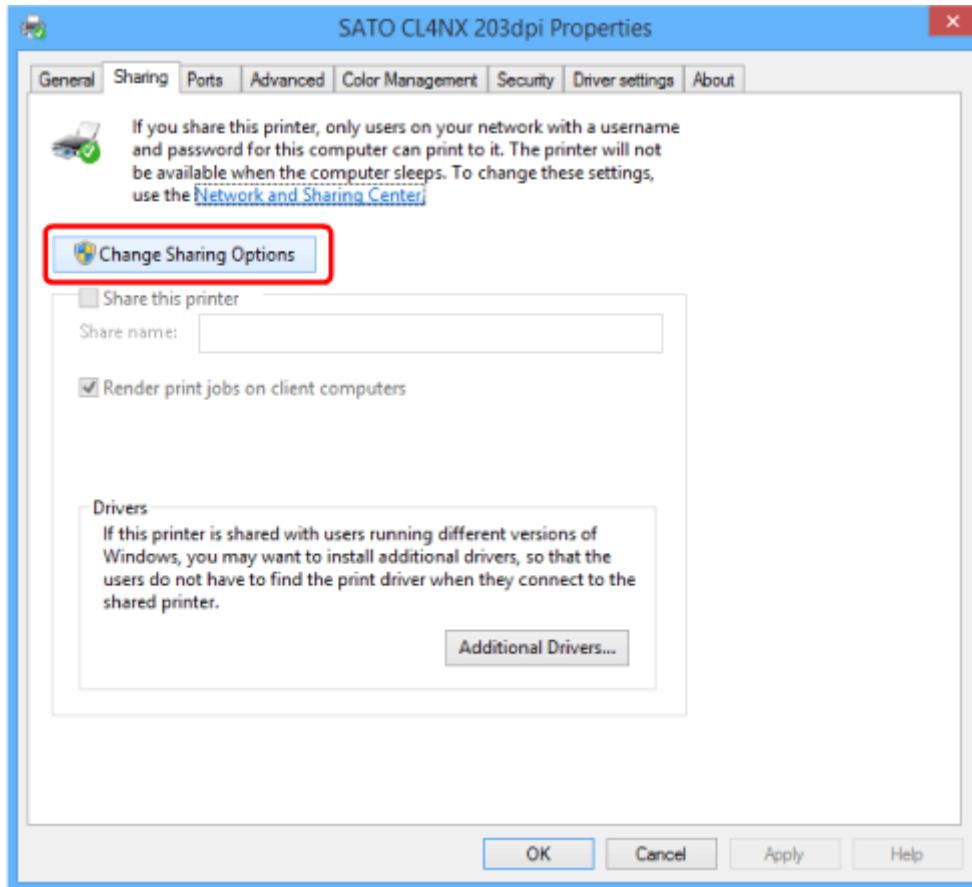
4. Click [Change Sharing Options].

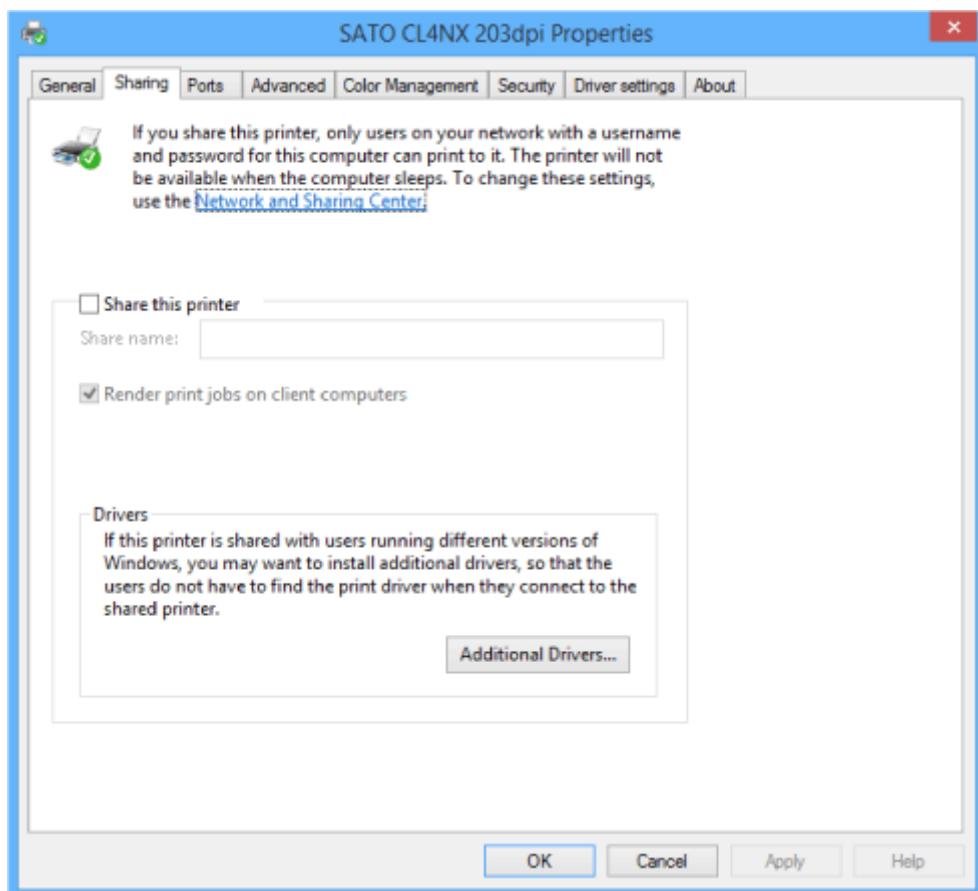


If [Change Sharing Options] is not shown, do the following procedures.

- a. Open the [Control Panel] and select [Network and Sharing Center].

- b. Select [Change advanced sharing settings].

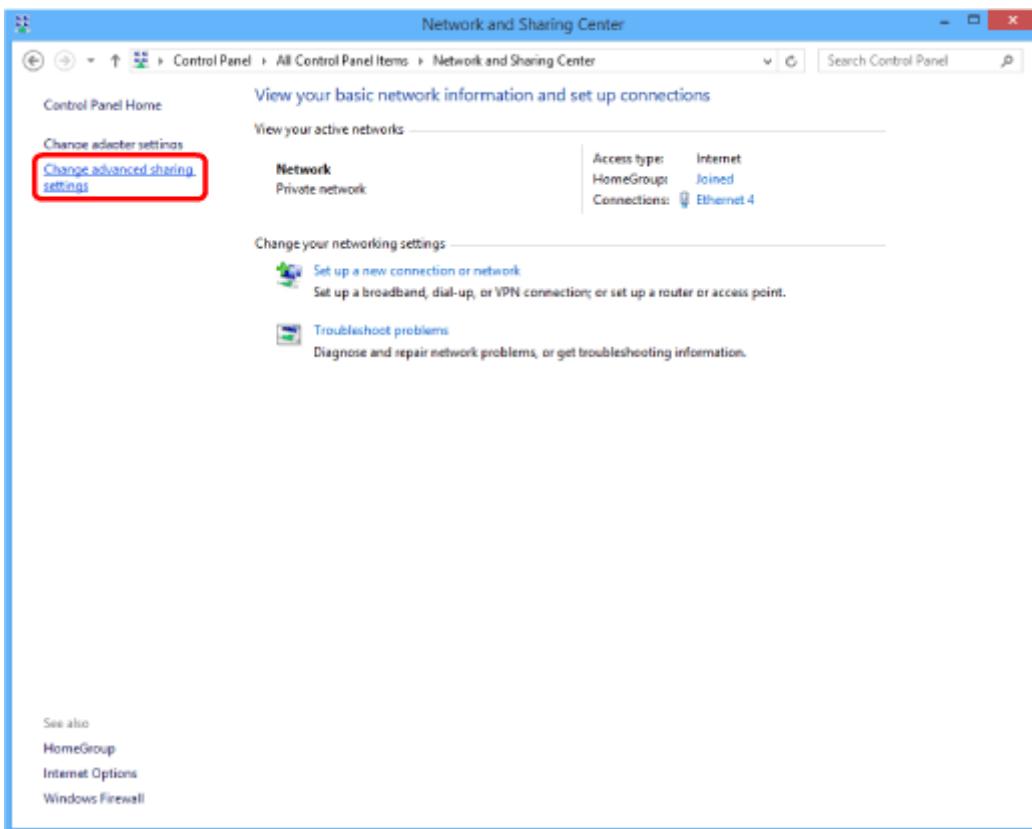

- c. In [File and printer sharing], select [Turn off file and printer sharing] and click the [Save changes] button.

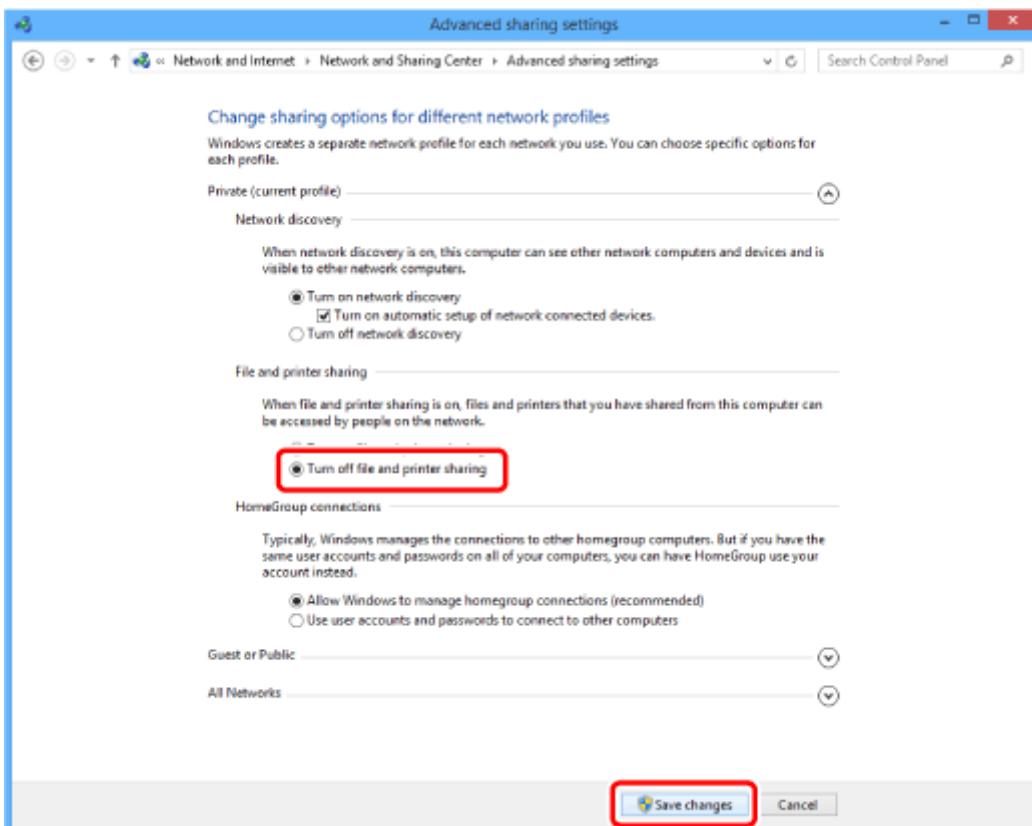


Configuring the Printer Driver Settings as an Administrator (Windows Vista/Server 2008)

When printing a layout created by an application software, configure the printer driver settings first.

The settings of the printer driver should be done by the administrator. If you change a setting value or add a printer port through someone other than the administrator, an error screen appears and the processes you operated are not reflected.

In Windows Vista/Server 2008, open the properties screen of the printer driver as an administrator with the following procedures. The following procedures use Windows Vista as an example.

1. Open the [Printers] folder.
2. Right-click the icon of the printer you use and select [Run as administrator], and then [Properties].

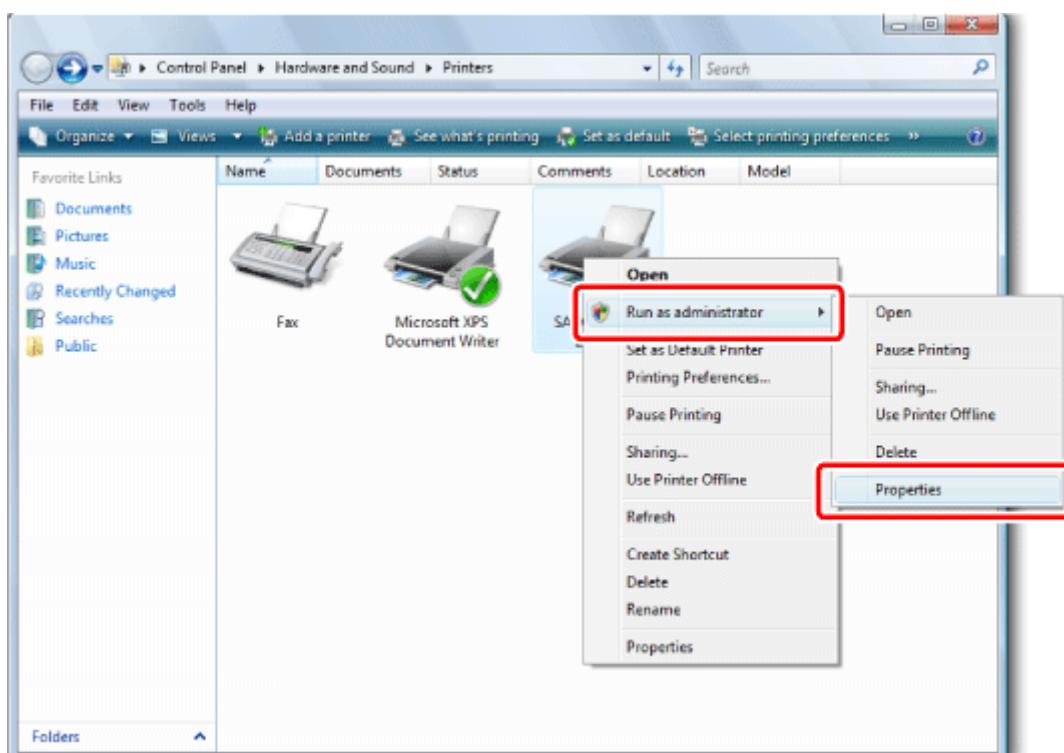


Configuring the Driver Settings

In the printer driver [Properties] > [Driver settings] tab, various settings can be configured, such as adding media size and fonts and importing/exporting the driver settings.



- The settings of the printer driver should be done by an administrator.

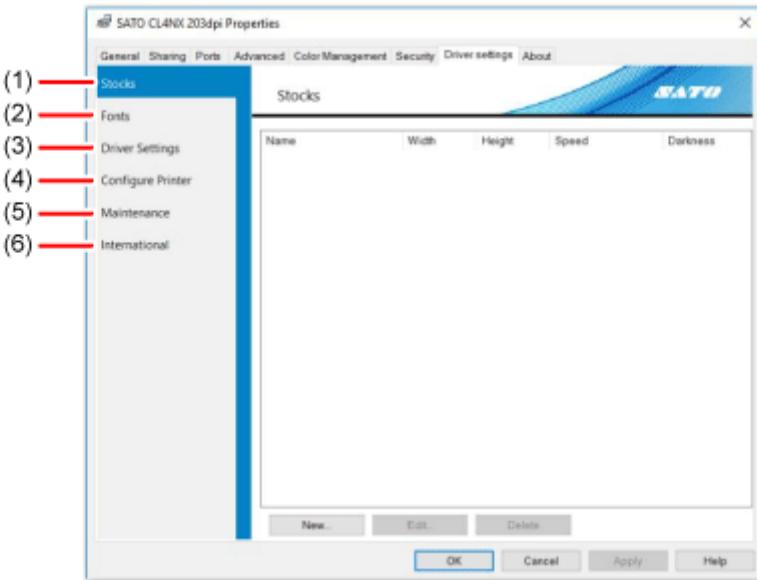

(1) [Stocks]

Manages stored media. The stored media can be used from applications.

(2) [Fonts]

Defines and manages barcode fonts and command fonts. You can add, modify, and delete definitions. Also, you can print by replacing the system fonts with the product's device fonts when defining replacement fonts.

(3) [Driver Settings]

Sets whether to enable the driver settings or application settings.

(4) [Configure Printer]

Obtains and changes the settings of the connected product.

(5) [Maintenance]

Outputs the current driver settings to a file and reads the settings.

(6) [International]

Sets the display language of the printer driver.



- Be sure to manage the master data for fonts by customer. SATO do not take responsibility for data stored on the product.

Configuring the Printer Settings

[Printing Defaults] and [Printing Preferences]

These functions can configure the media settings and printing modes of the product from the printer driver and send them to the product.

Use [Printing Defaults] or [Printing Preferences] from the properties screen of the product's printer driver.

When configuring the printer driver for all users, use [Printing Defaults].


When configuring the printer driver for each user, use [Printing Preferences].



- The settings of the printer driver should be done by an administrator.


How to Show the [Printing Defaults] Settings Screen

When you open the printer driver [Properties], select the [Advanced] tab and click [Printing Defaults], the [Printing Defaults] settings screen is opened. The printer driver settings for all users can be selected.

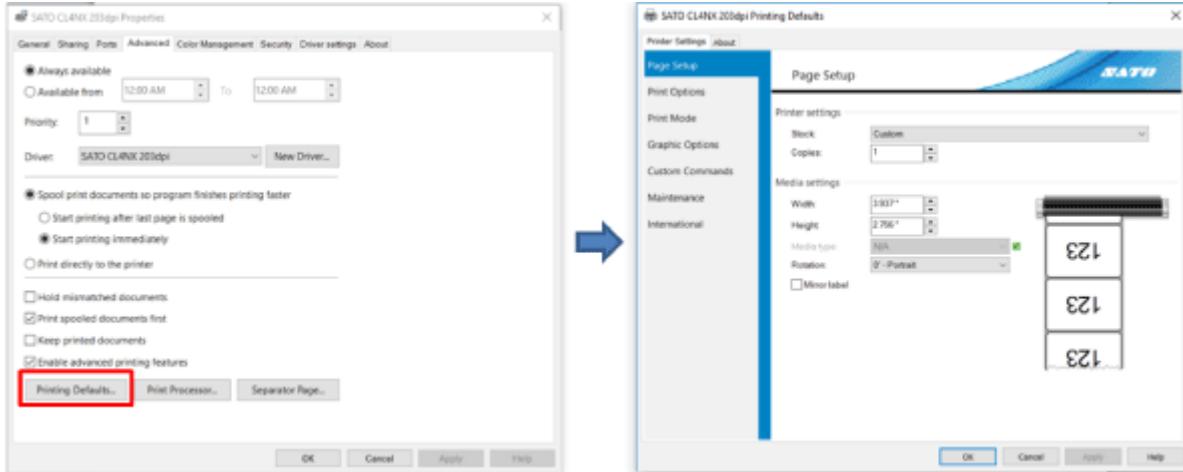

How to Show the [Printing Preferences] Settings Screen

When you open the printer driver [Properties], select the [General] tab and click [Preferences], the [Printing Preferences] settings screen is opened. The user specific printer driver settings can be selected.

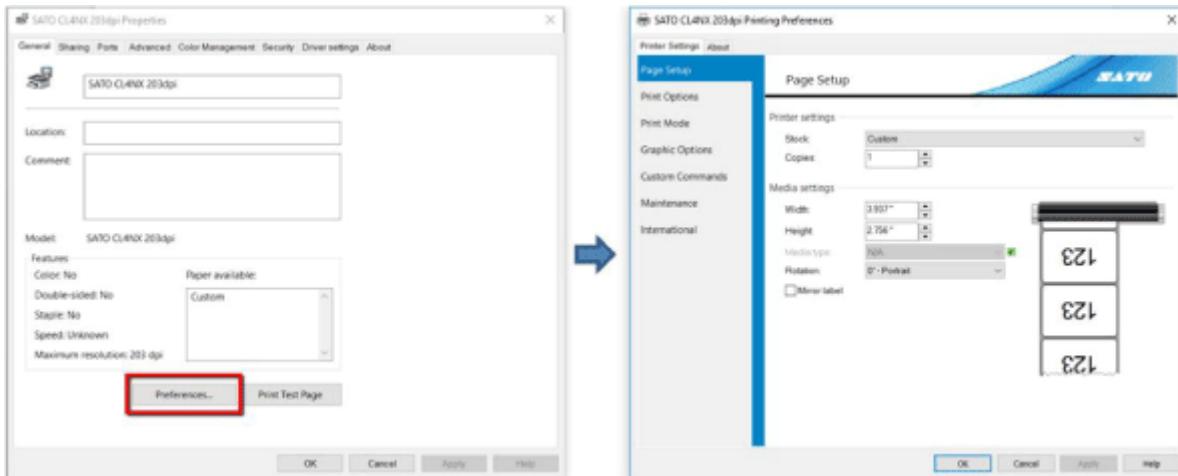


- When you right-click the product in [Devices and Printers] and select [Printing preferences], the same screen as the settings screen for the [Printing Preferences] appears.

Overview of the Printer Settings

The product settings can be configured from the printer settings screen of [Printing Defaults] or [Printing Preferences].



- The settings of the printer driver should be done by an administrator.

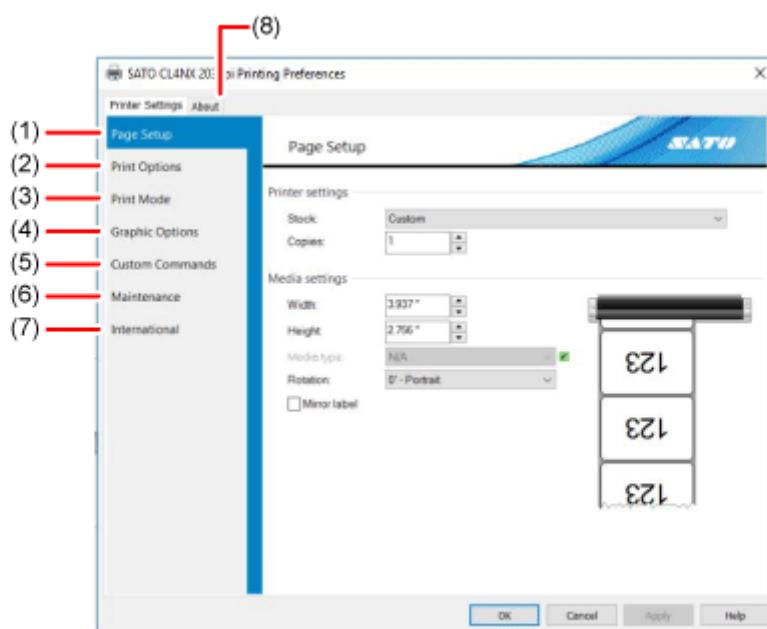

(1) [Page Setup]

Sets the size and sensor type of the media set to the product.

(2) [Print Options]

Adjusts the settings of the print speed, print darkness, and base reference point.

(3) [Print Mode]

Sets the print mode of the product.

(4) [Graphic Options]

Specifies dithering and the graphic form when sending to the product.

It is not necessary to change it in particular, and it is available with initial values.

(5) [Custom Commands]

Specifies the method to control the product behavior directly.

It is best to use this method only if user understands the SBPL command or the programming references.

(6) [Maintenance]

Returns the printer driver settings to their initial values.

(7) [International]


Selects the unit to be used.

(8) [About]

Shows the version of the printer driver and provides access to the SATO homepage.

Outputting a Label from an Application Software

The method for starting a print job varies depending on application software. In general, print jobs begin when you click [Print] button in the dialog that is displayed after selecting [Print] from the [File] menu. Refer to the user manual of the application software you are using.

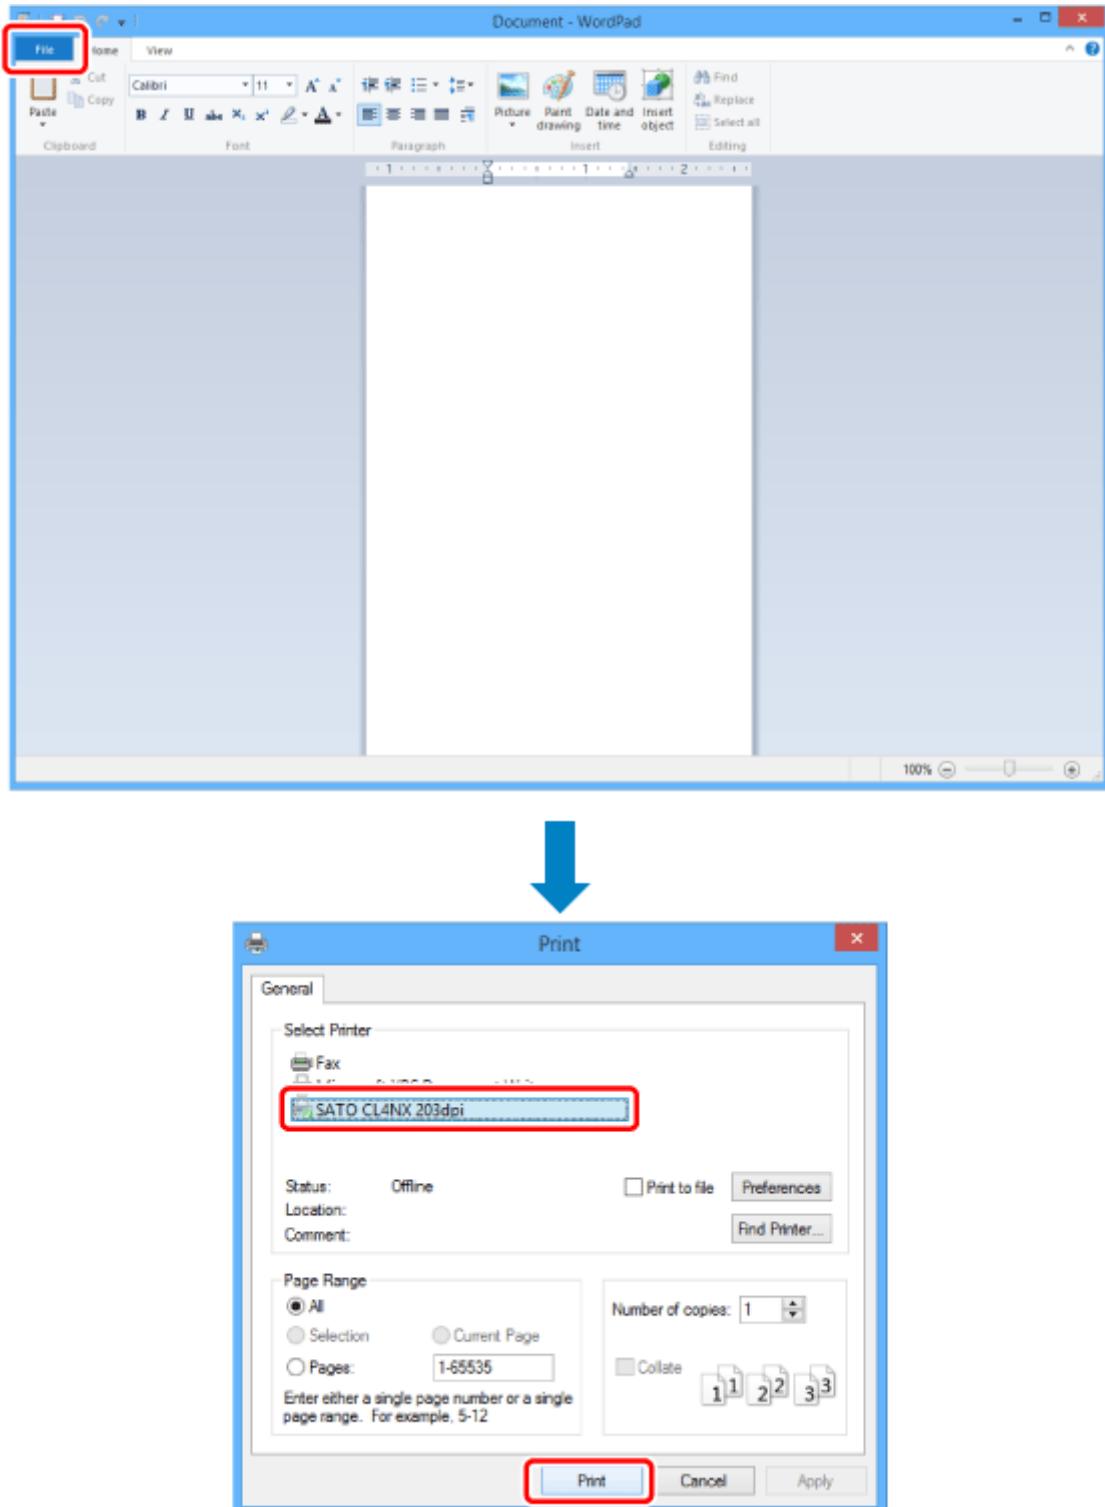

Before starting the print job, confirm that the printer driver to be used in the application software is set to the appropriate printer driver for the product you are using.

The method for setting the printer driver varies depending on the application software. In general, select the item you want from the list that is displayed when you select [Print] from the [File] menu, or when you click [\blacktriangledown] in [Printer Name] in the dialog.

Depending on the application software, it may be necessary to select the media again in the media selection function of the application software to use the media selected in the [Page Setup] of the printer driver.




- If you use software such as NiceLabel, the settings of the software are enabled, not the settings of the printer driver.

Printer Driver Sharing Function

Connecting When Using the Printer Driver with Sharing Settings

The figure below shows how to connect when using the printer driver with sharing settings.

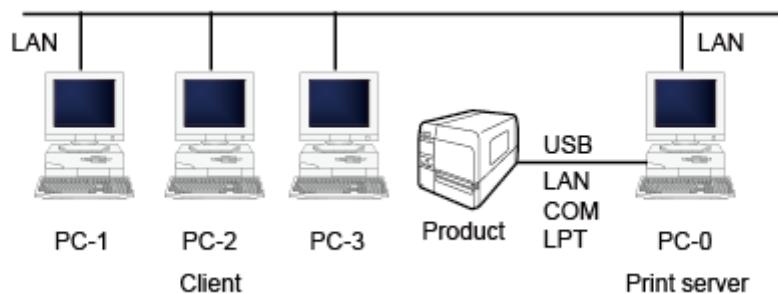

Set one computer (PC-0) as the print server and set other computers (PC-1, PC-2, PC-3, and so on) as clients. All computers should be connected using a LAN connection and the print server and product should be connected using LPT, COM, USB, or LAN.

Printer Driver Sharing Settings

The following shows how to set the printer driver when using the printer driver with sharing settings.

1. In both the print server and clients, download and install the printer driver from the SATO printer driver download site. <http://www.satoworldwide.com/software/gallerydriver.aspx>



- If you are adding it with the [Add a printer] icon from the [Printers] folder, the necessary files may not be installed and may not perform correctly (the copy of the sharing printer icon on the network computer will be the same).

2. After confirming that a label can be output correctly from the printer driver of the print server, set the printer driver to "Shared".
3. Specify the output port of the client's printer driver to the sharing printer configured on the server.

Environment	Setting Method
Windows Vista/Server 2008	In the printer driver, open [Properties] > [Ports] > [Add Port] > [Local Port], and specify the port name as "\Sharing computer name\Sharing printer name".
Windows 7 or later	In the printer driver, open [Printer properties] > [Ports] > [Add Port] > [Local Port], and specify the port name as "\Sharing computer name\Sharing printer name".

4. Turn off the bi-directional communication of the printer driver in the client.

Environment	Setting Method
Windows Vista/Server 2008	In the printer driver, open [Properties] > [Ports], and uncheck [Enable bidirectional support].
Windows 7 or later	In the printer driver, open [Printer properties] > [Ports], and uncheck [Enable bidirectional support].

Restrictions When Using the Printer Driver with Sharing Settings

When you use the printer driver with sharing settings, the following restrictions occur because bi-directional communication is disabled in the client.

- Errors that occur with the product, such as "Paper End" and "Ribbon End", cannot be recognized.
- In the printer driver [Properties] > [Driver settings] tab > [Configure Printer], [Get from printer] and [Send to printer] cannot be used.
- The settings you change in the printer driver [Printing Preferences] > [Printer Settings] tab cannot be sent to the product (when the green check box is not selected).


All-In-One Tool Features

When you add the product to the All-In-One Tool, you can easily set and manage the product.

The main functions of the All-In-One Tool are as follows:



- For details of the All-In-One Tool, download and read the All-In-One Tool Manual from the SATO All-In-One Tool download site. <http://www.satoworldwide.com/software/all-in-one-tool.aspx>
- If the product's [Settings] > [Interface] > [Network] > [Advanced] > [Firewall] > [Enable] menu is set to [Enabled], [Settings] > [Interface] > [Network] > [Advanced] > [Firewall] > [Allow Services And Ports] > [SATO All-In-One Tool] must be set to [Enabled].

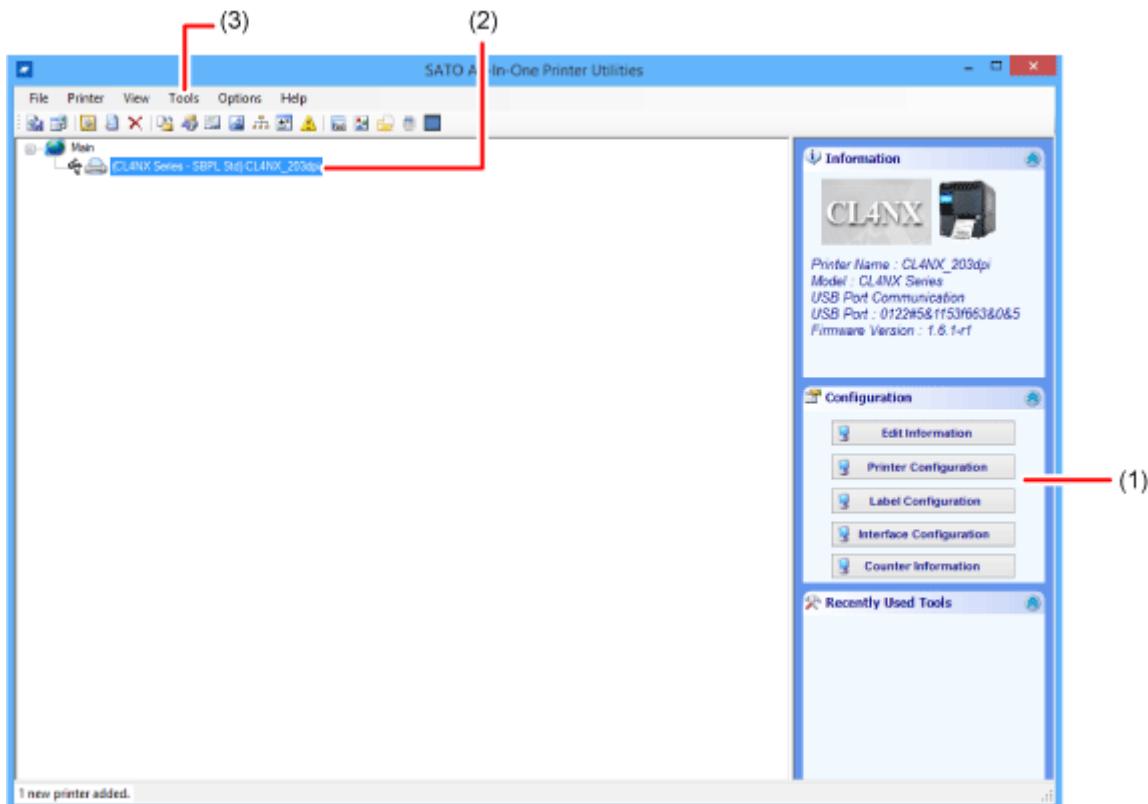

- (1) Print and interface settings can be configured from the [Configuration] panel displayed when selecting the product on the main screen.
- (2) Application settings and status monitoring of the product can be enabled from the menu displayed when right-clicking after selecting the product on the main screen.
- (3) Fonts and graphics can be stored in the product and the SBPL command can be sent from the [Tools] menu of the main screen.

Loading Media and Ribbon

Media, Ribbon and Print Methods

The product supports two types of print methods, thermal transfer and direct thermal.

The media or ribbon to be used varies depending on the print method.

Thermal transfer

Prints using a ribbon.

Direct thermal

Prints using direct thermal media.



- Ribbon is not necessary if you are using direct thermal media.

Loading Media




The topics here explain how to load the media.

Usable Media

The product can print on the following two types of media.

- Media roll
- Fan-fold media

The product uses media sensors to detect I-marks or gaps on the media in order to precisely print the content.

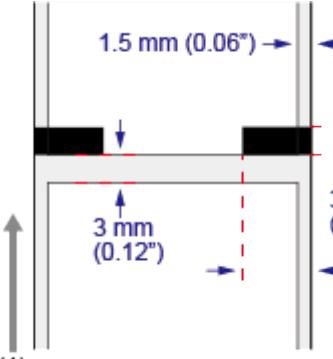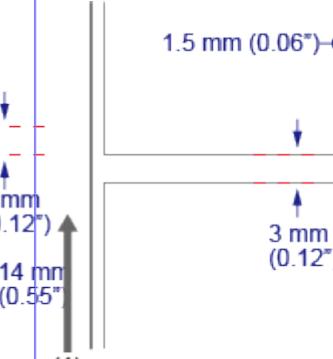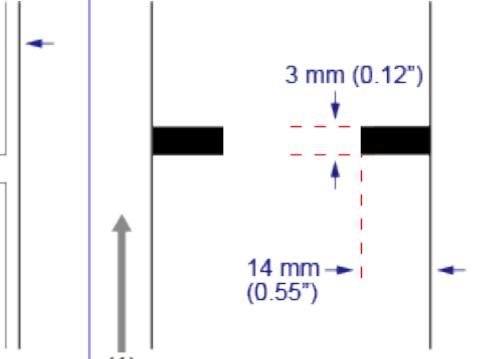
I-mark label	Gap label	I-mark journal paper/ linerless label (CL4NX only)
		

(1) Media feed direction


Adjusting the Position of the Media Sensor

When you use nonstandard media (for example, media with printing on the underside, or media with a special shape), the media sensor cannot detect the I-mark or gap of the media correctly. In such a case, adjust the position of the media sensor to detect the I-mark or gap correctly.

- **Adjust the media sensor guide to the position where it can detect the I-mark or gap of the media.**

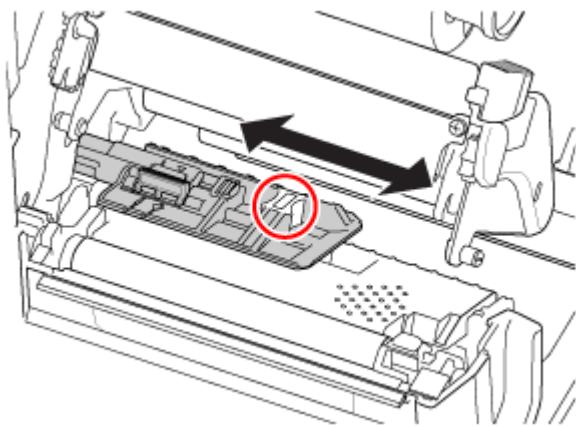

- The I-mark sensor (reflective type) is below the \Box mark, and the Gap sensor (transmissive type) is below the ∇ mark.

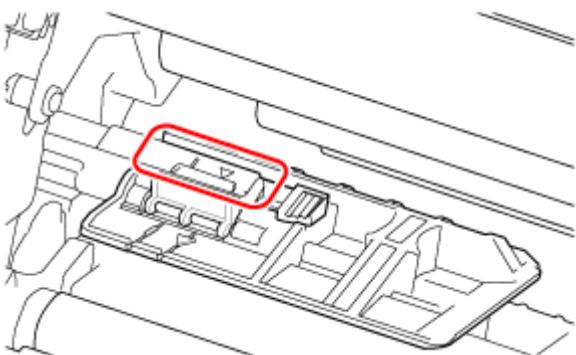

Loading the Media

Precautions for Loading the Media

Use genuine SATO media and ribbons for the product, for optimum print quality.



- The print head and its surroundings are hot after printing. Be careful not to touch it, to avoid being burned.
- Touching the edge of the print head with your bare hand could cause injury.




- The usable media sizes, the output speed and print quality vary depending on the media specification, media and ribbon combination, product settings and outputting environment. It is recommended to perform a test print with the media and ribbon to be used in advance.

Loading the Media Roll



- The routing path of the media is shown in the below picture.

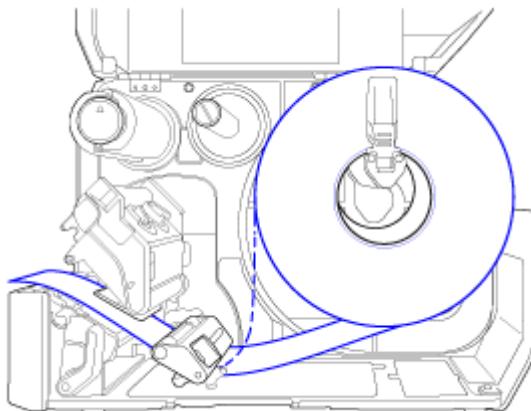

Face-in media




Face-out media


1. Open the top cover (1).



- Open the top cover fully to prevent accidental drop of the cover.


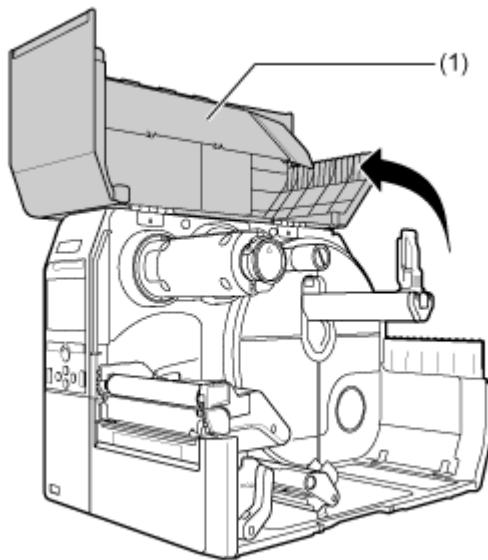


2. Push the head lock lever (2) towards the rear.

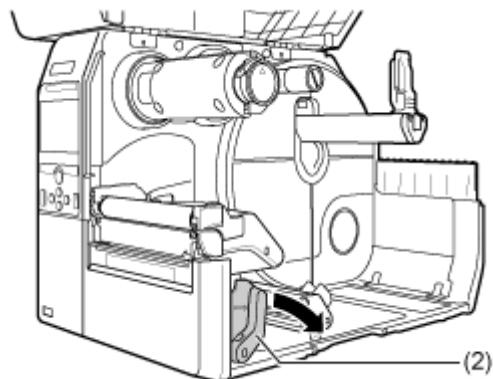


3. Pull the media holder guide (3) and media guide (4) away from the product.


Turn the knob (5) counterclockwise to release the media guide.

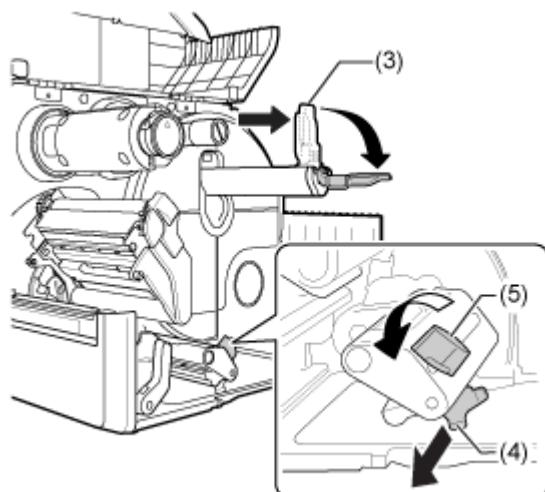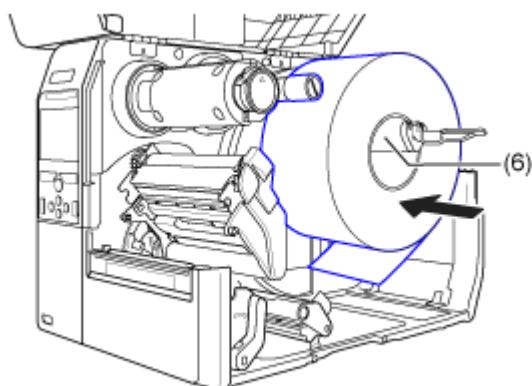**4. Load the media in the media holder (6).**

Make sure that the media roll is all the way in towards the inside of the product.

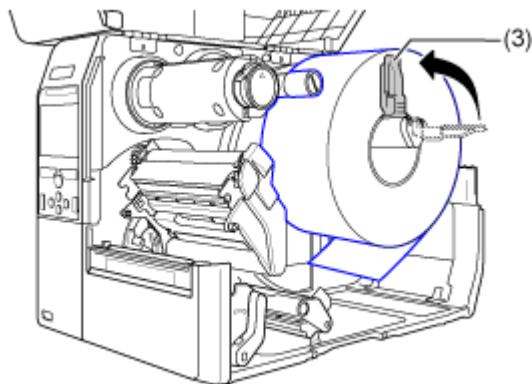
5. Push the media holder guide (3) lightly against the media roll.

6. Pass the media below the media damper (7) and the media sensor guide (8) while pushing the media to inside of the product.

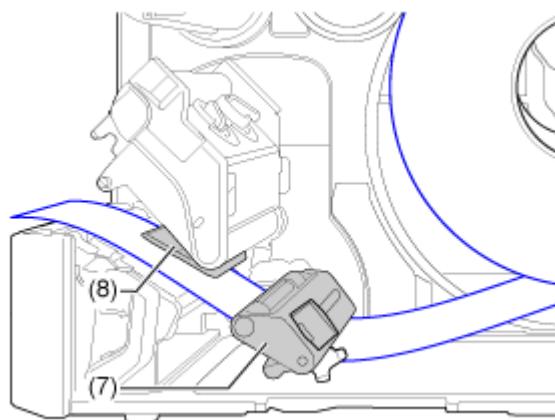


Make sure that the end of the media extends out the front of the product.

7. Press the print head down until the head lock lever is locked.

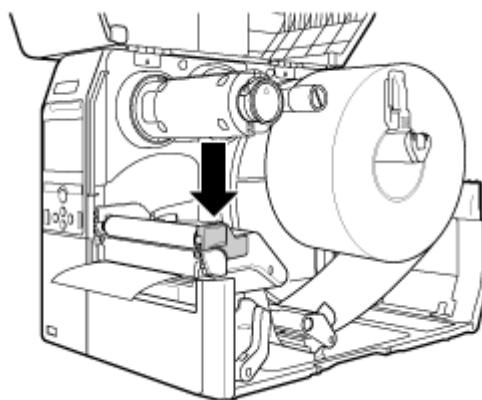

8. Press the media guide (4) lightly against the end of the media, and turn the knob (5) to lock the media guide.

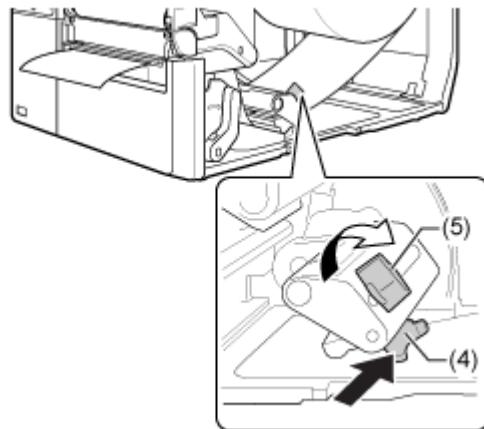

9. Close the top cover.



- When closing the top cover, be careful not to pinch your fingers.

10. Perform a test print to make sure that the media is loaded correctly.




- You need to load the ribbon when printing using thermal transfer.

Loading the Fan-fold Media


1. Open the top cover (1).



- Open the top cover fully to prevent accidental drop of the cover.

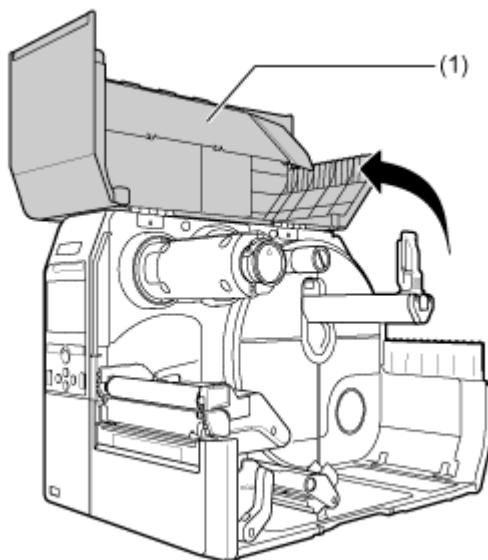


2. Push the head lock lever (2) towards the rear.

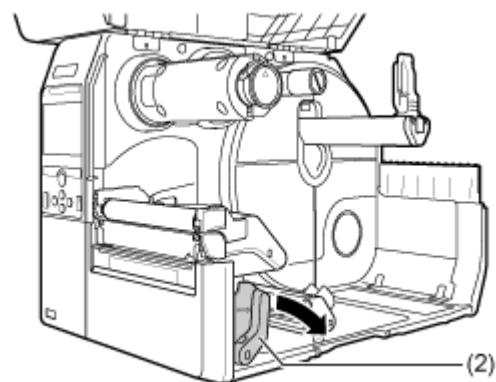

3. Place the fan-fold media on a flat location, and load the media from the media slot on the rear or the bottom of the product.

The routing path of the media is shown in the below picture.

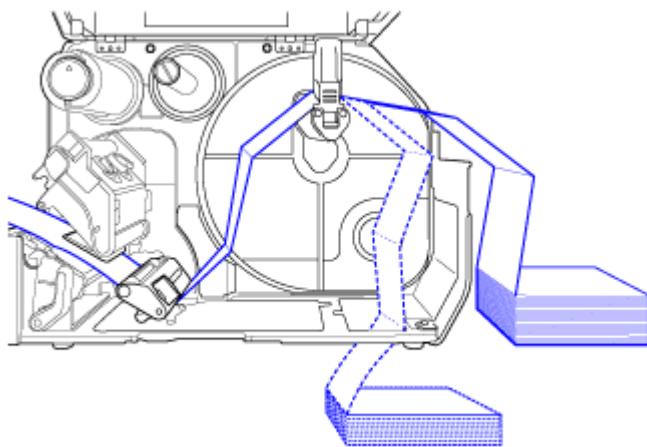

Load the media from the rear of the product

Load the media from the bottom of the product.



- When loading the media, make sure that the print side faces up.

4. After passing the media through the slot, refer to the same steps as the Media Roll to load the media.
5. Perform a test print to make sure that the media is loaded correctly.



- You need to load the ribbon when printing using thermal transfer.
- If a media jam frequently occurs with the media being loaded from the bottom of the product, change the load location to the rear of the product.

Loading the Media with the Optional Cutter Unit




- Be careful not to touch the cutter blade.


1. Open the top cover (1).



- Open the top cover fully to prevent accidental drop of the cover.

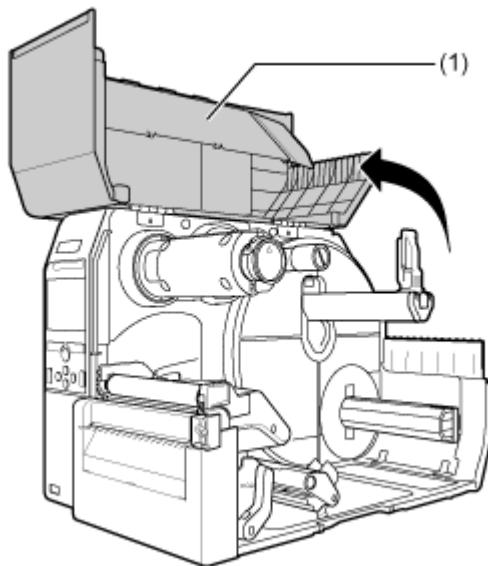


2. Push the head lock lever (2) towards the rear.

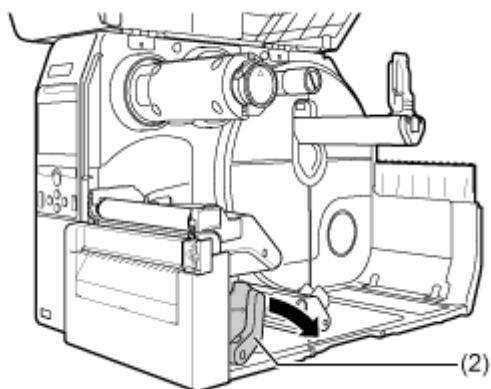

3. Pull the media holder guide (3) and media guide (4) away from the product.


Turn the knob (5) counterclockwise to release the media guide.

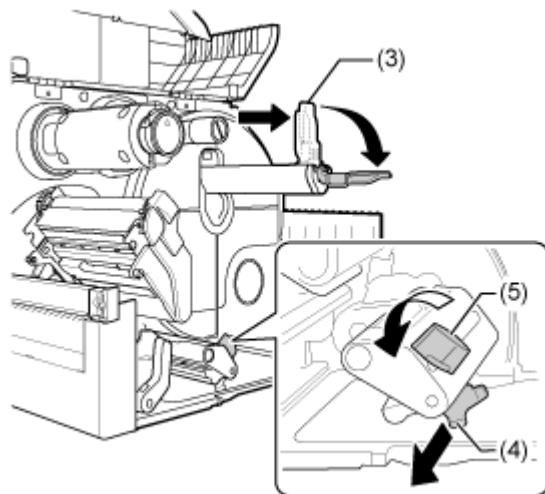

4. Load the media roll or the fan-fold media.

For Media Roll


The routing path of the media is shown in the below picture.

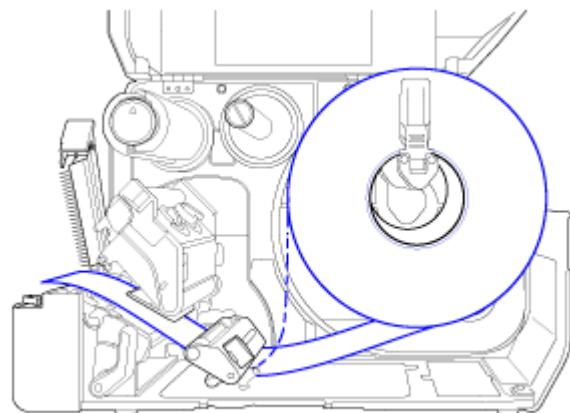

— Face-in media


--- Face-out media

- a. Load the media in the media holder (6).

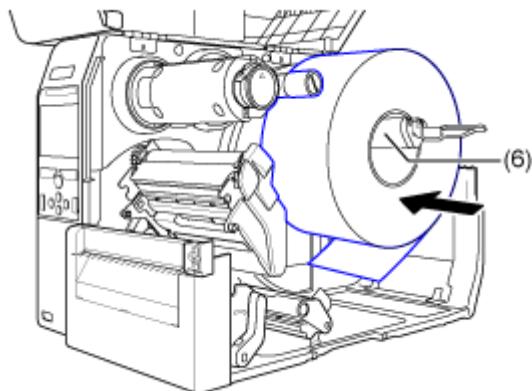

Make sure that the media roll is all the way in towards the inside of the product.


- b. Push the media holder guide (3) lightly against the media roll.

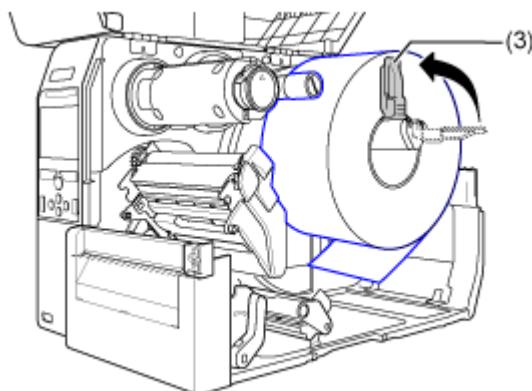

For Fan-fold Media

- a. Place the fan-fold media on a flat location, and then load the media from the rear of the product or from the media slot on the bottom of the product.

The routing path of the media is shown in the below picture.

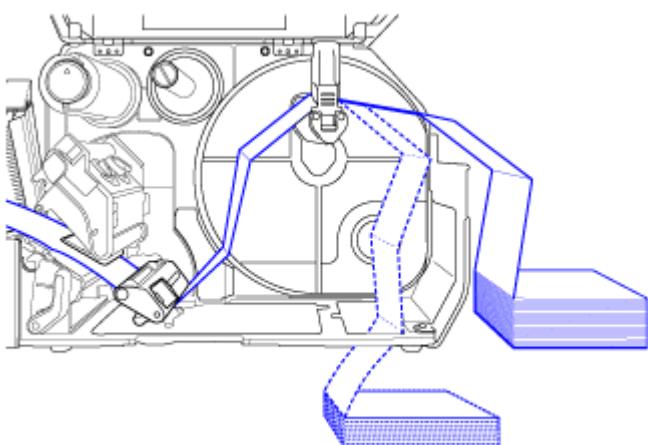


Load the media from the rear of the product

Load the media from the bottom of the product.




- When loading the media, make sure that the print side faces up.

5. Pull the tab (7) of the cutter unit in the direction A, and then open up the cutter-open lever to (B).

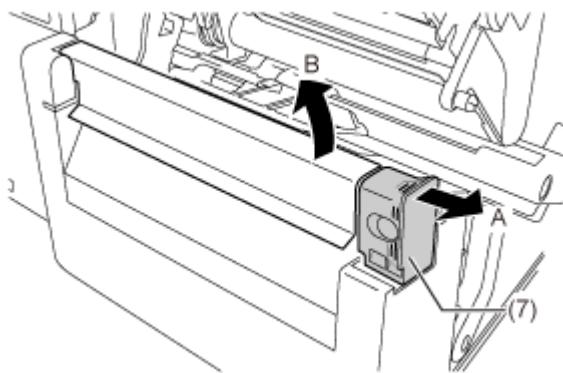


6. Pass the media below the media damper (8) and media sensor guide (9) and through the cutter unit while pushing the media to inside of the product.

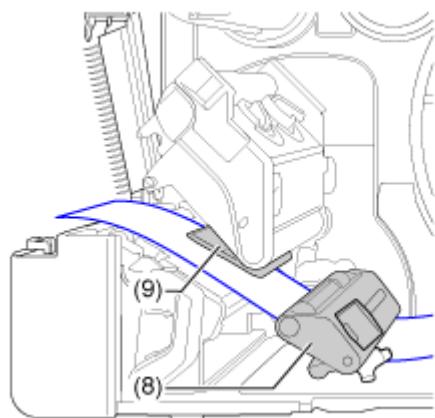


Make sure that the end of the media extends out the front of the product.


7. Press the print head down until the head lock lever is locked.

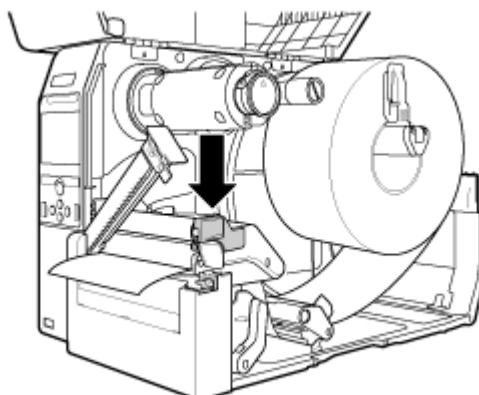

8. Close the cutter and then push the tab (7) in the reverse direction to lock it.

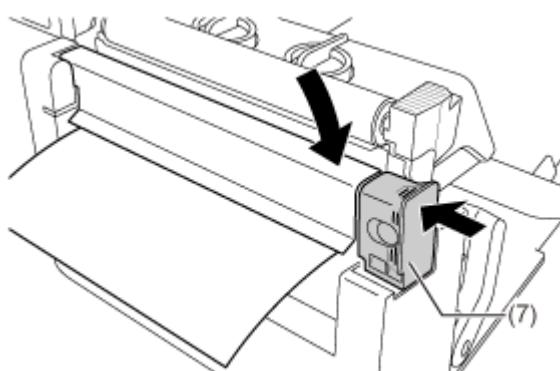

9. Press the media guide (4) lightly against the end of the media, and then turn the knob (5) to lock the media guide.

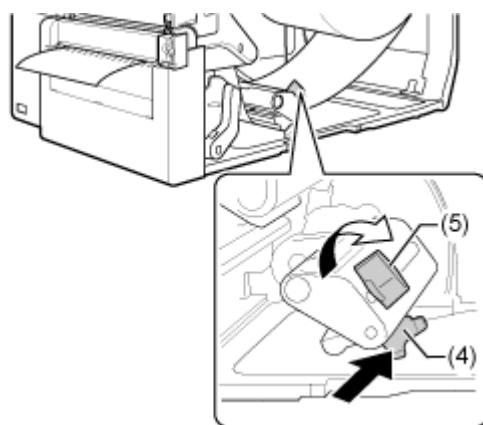

10. Close the top cover.



- When closing the top cover, be careful not to pinch your fingers.

11. Perform a test print to make sure that the media is loaded correctly.



- You need to load the ribbon when printing using thermal transfer.


Loading the Media with the Optional Dispenser Unit and Liner Discharge Outlet

The below topic describes the procedure to dispense the label and eject the liner out of the product.


1. Open the top cover (1).



- Open the top cover fully to prevent accidental drop of the cover.

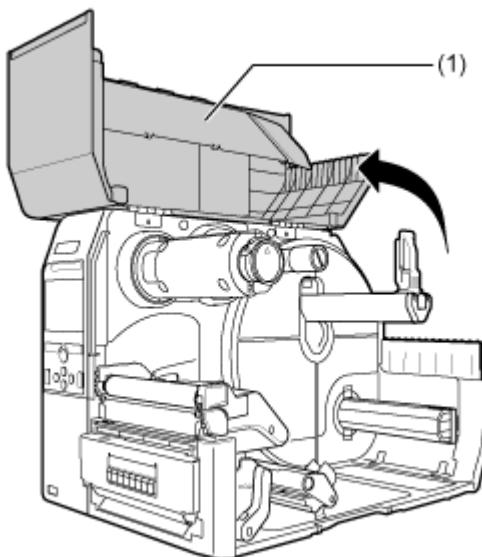


2. Push the head lock lever (2) towards the rear.

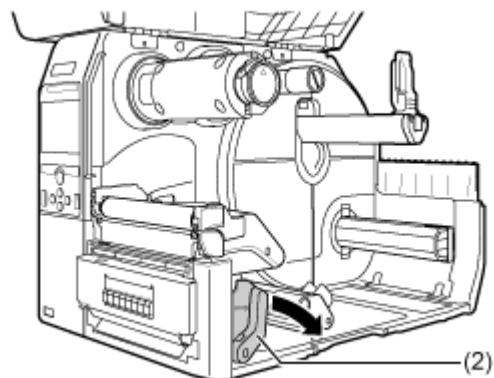


3. Pull the media holder guide (3) and media guide (4) away from the product.

Turn the knob (5) counterclockwise to release the media guide.

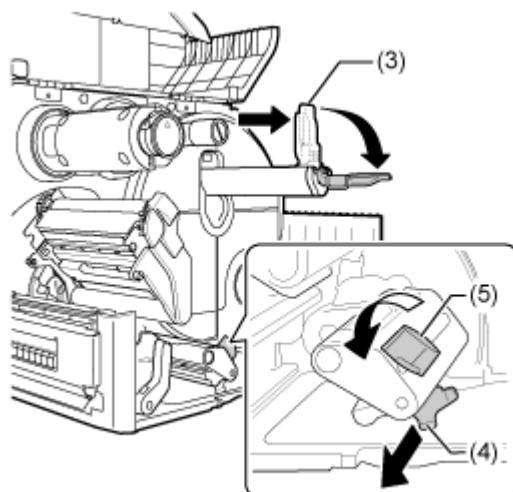


4. Load the media in the media holder (6).

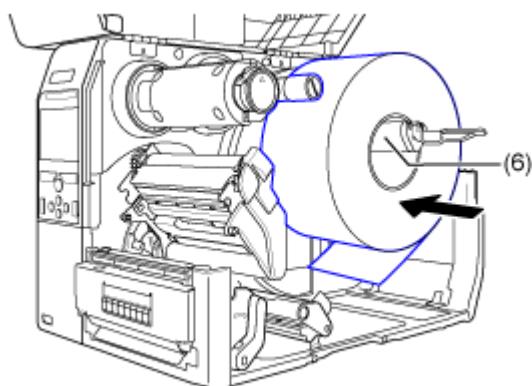


Make sure that the media roll is all the way in to inside of the product.

5. Push the media holder guide (3) lightly against the media roll.

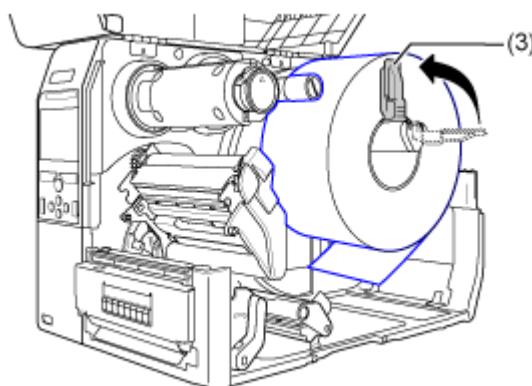


6. Pass the media below the media damper (7) and the media sensor guide (8) while pushing the media to inside of the product.

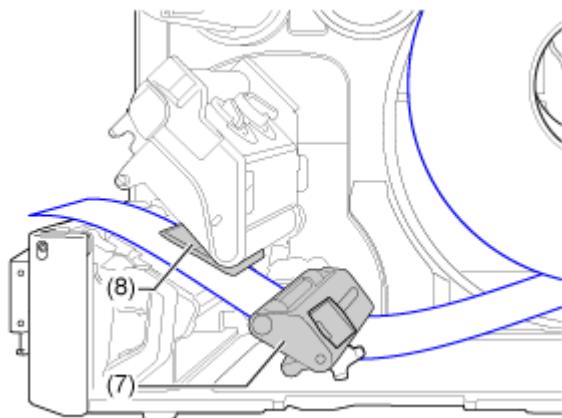


Make sure that the end of the media extends out the front of the product.


7. Press the tab (9) at the front of the product to open the dispenser unit (10).

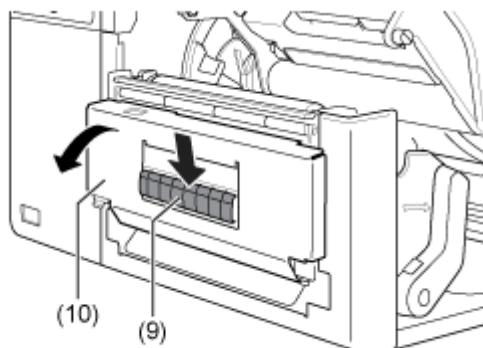


8. Remove about 30 cm (11.8") of labels (11) from the liner (12).

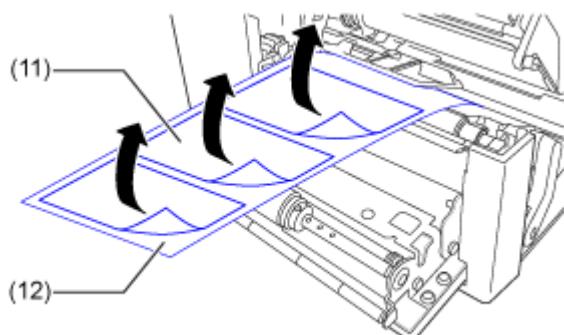

9. Pass the liner (12) through the gap of the dispenser unit to the outside of the product.

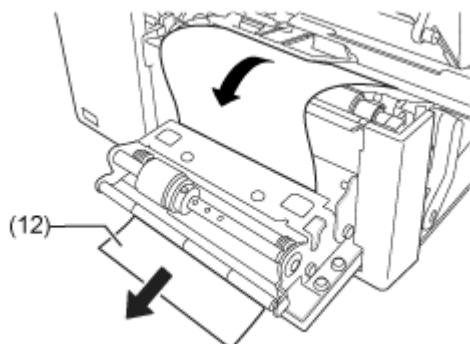

10. Adjust the dispenser roller (13) to the center of the label.

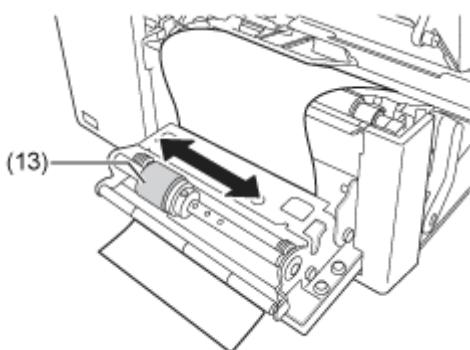

11. Close the print head.

12. Close the dispenser unit.

13. Press the media guide lightly against the end of the media, and then turn the knob to lock the media guide.

14. Close the top cover.



- When closing the top cover, be careful not to pinch your fingers.

15. Perform a test print to make sure that the media is loaded correctly.



- You need to load the ribbon when printing using thermal transfer.




- When not using the product for a long time, keep the dispenser unit open to protect the roller.

Loading the Media with the Optional Dispenser Unit and Liner Discharge Rewinder

The below topic describes the procedure to dispense the label and rewind the liner in the product.



- The maximum diameter of the liner that can be rewound in the product is $\varnothing 120$ mm (4.72").
- The routing path of the media is shown in the below picture.

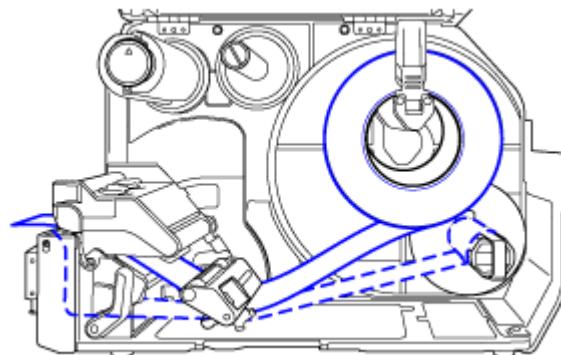


— Label

- - - Liner


1. Open the top cover (1).



- Open the top cover fully to prevent accidental drop of the cover.

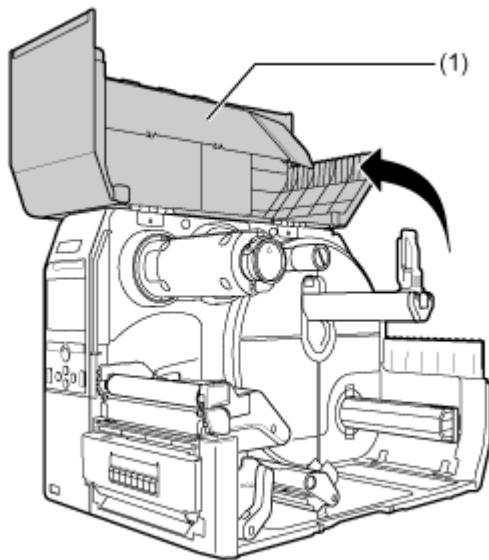


2. Push the head lock lever (2) towards the rear.

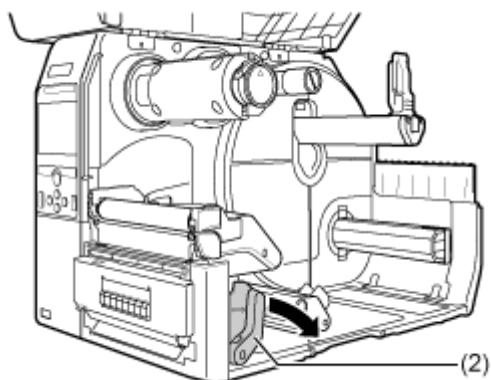


3. Pull the media holder guide (3) and media guide (4) away from the product.

Turn the knob (5) counterclockwise to release the media guide.

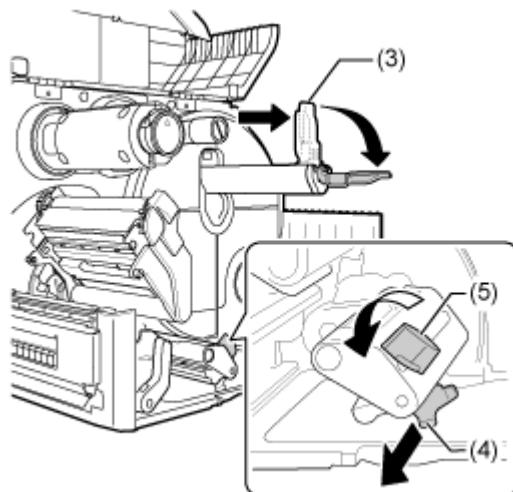


4. Load the media in the media holder (6).

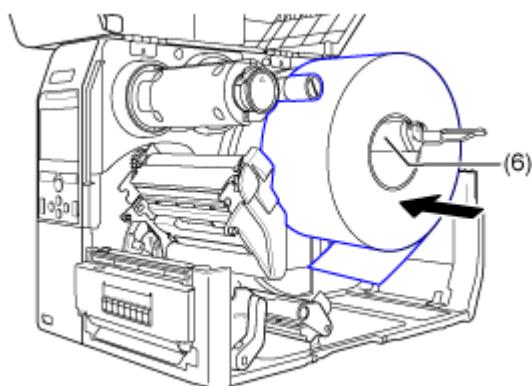


Make sure that the media roll is all the way in to inside of the product.

5. Push the media holder guide (3) lightly against the media roll.

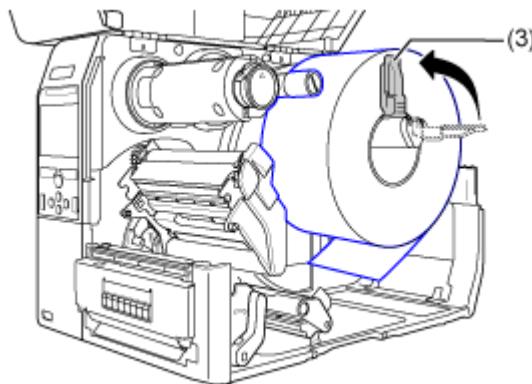


6. Pass the media below the media damper (7) and the media sensor guide (8) while pushing the media to inside of the product.

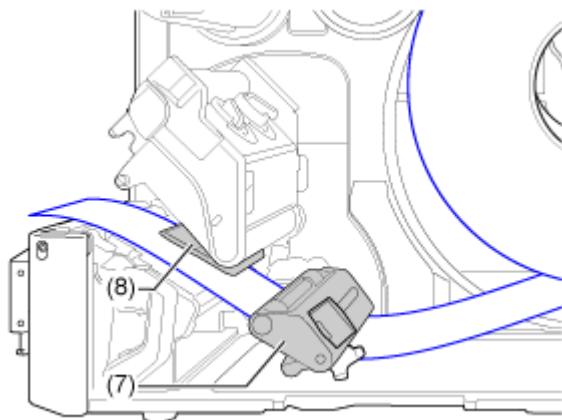


Make sure that the end of the media extends out the front of the product.


7. Press the tab (9) at the front of the product to open the dispenser unit (10).

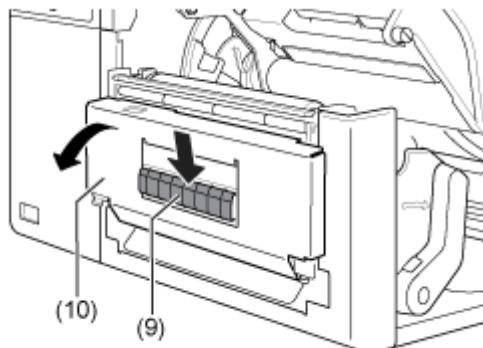


8. Remove about 80 cm (31.5") of labels (11) from the liner (12).

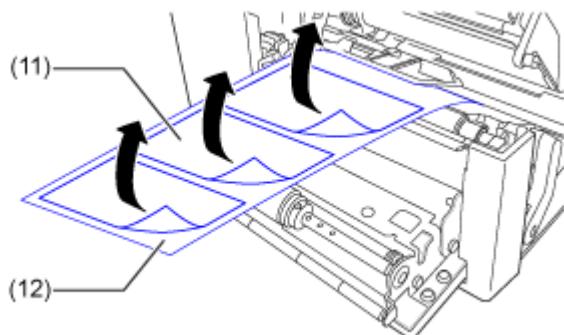


- 9. Pass the liner (12) through the gap of the dispenser unit to the inside of the product.**

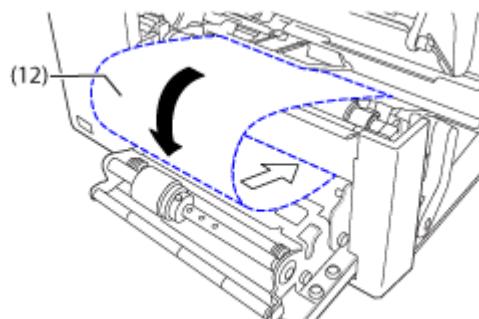


- 10. Adjust the dispenser roller (13) to the center of the label.**

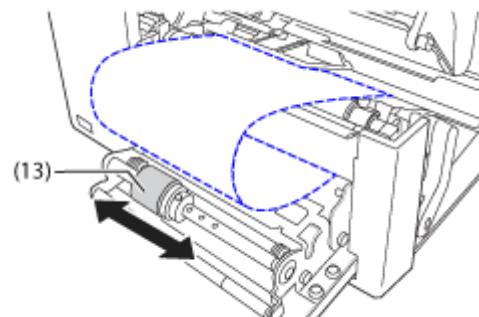

- 11. Pass the liner (12) below the liner rewinder (14), and attach it with the clip (15).**

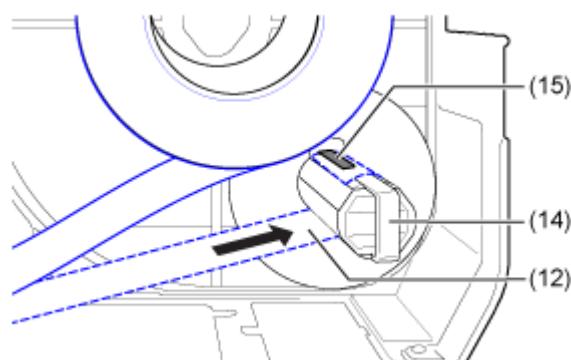

- 12. Rotate the liner rewinder (14) counterclockwise by hand, to wind the liner.**

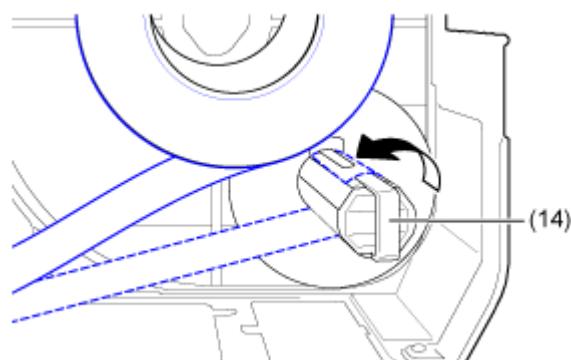

13. Close the print head.

14. Close the dispenser unit.

15. Press the media guide lightly against the end of the media, and then turn the knob to lock the media guide.

16. Close the top cover.



- When closing the top cover, be careful not to pinch your fingers.

17. Perform a test print to make sure that the media is loaded correctly.



- You need to load the ribbon when printing using thermal transfer.




- When not using the product for a long time, keep the dispenser unit open to protect the roller.

Removing the Liner from the Rewinder



- The rewinder can take up maximum a diameter of 120 mm (4.72") of liner.

1. Confirm that the liner (1) has been cut, pull the clip (2) towards you, and pull out the liner (1).

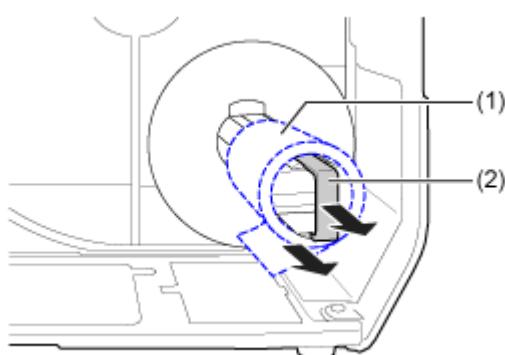

2. Place the clip back to its original position.


Loading Ribbon

You need to load the ribbon when printing using thermal transfer. The topics here explain how to load and replace the ribbon.


Checking the Ink Side of the Ribbon

There are two wind directions for the ribbon. Face-out means the ink is on the outer side and Face-in means the ink is on the inner side. The product supports both wind directions. You can examine the ink side of the ribbon using the following procedure.

1. Place the outer side of the ribbon onto the media (touching).

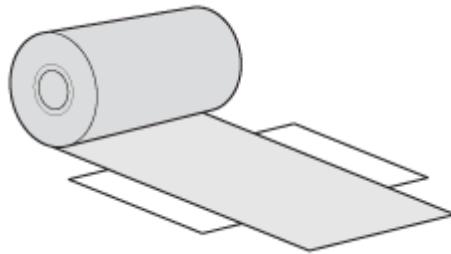


2. Scratch the inner side of the ribbon with your fingernail or a pointed object.

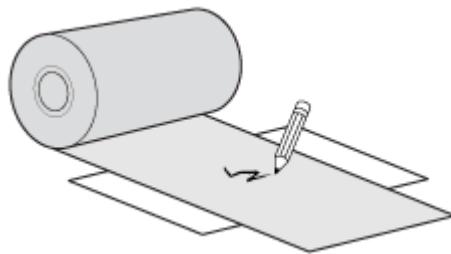


If there is a mark on the media, the ink is coated on the outer side of the ribbon.

- The ink is coated on the outer side. (Face-out ribbon)



- The ink is coated on the inner side. (Face-in ribbon)




Loading the Ribbon



- The print head and its surroundings are hot after printing. Be careful not to touch it, to avoid being burned.
- Touching the edge of the print head with your bare hand could cause injury.



- Use genuine SATO media and ribbons for the product, for optimum print quality.
- The routing path of the ribbon is shown in the below picture.

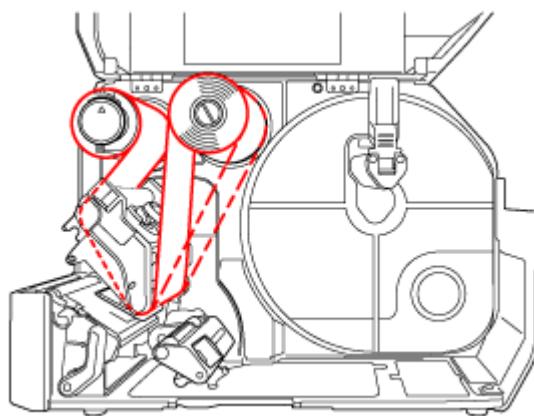

— Face-in ribbon


--- Face-out ribbon

- You can also refer to the sticker located on the inner side of the top cover.


1. Open the top cover (1).



- Open the top cover fully to prevent accidental drop of the cover.

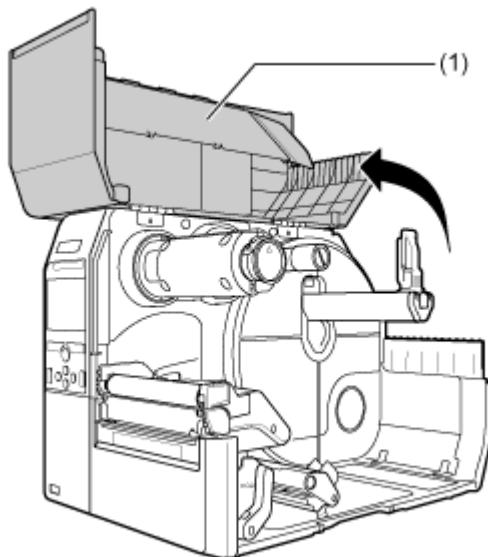


2. Push the ribbon rewind spindle (2) all the way in.

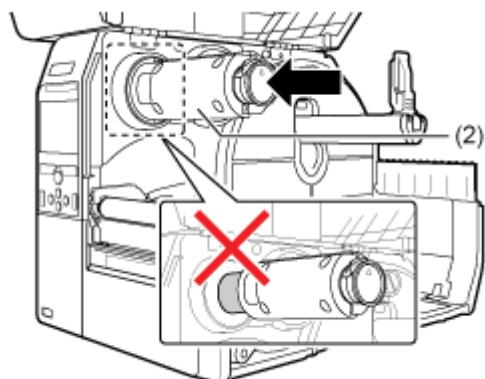


If there is any ribbon on the ribbon rewind spindle, remove it from the spindle before installing new ribbon.

3. Push the head lock lever (3) towards the rear.

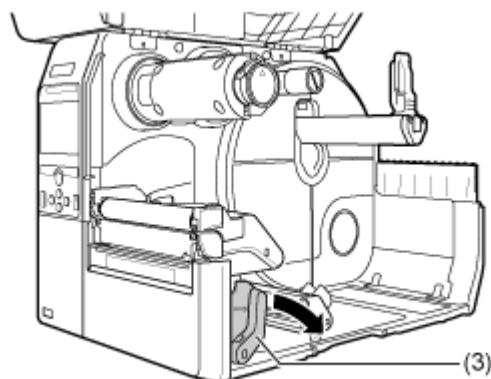


4. Load the ribbon (4) onto the ribbon supply spindle (5).

While taking note of the wind direction, insert the ribbon all the way in.

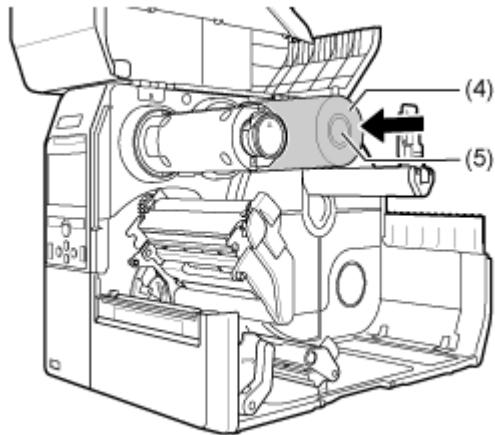


5. From the ribbon supply spindle (5), pass the ribbon below the print head (6).

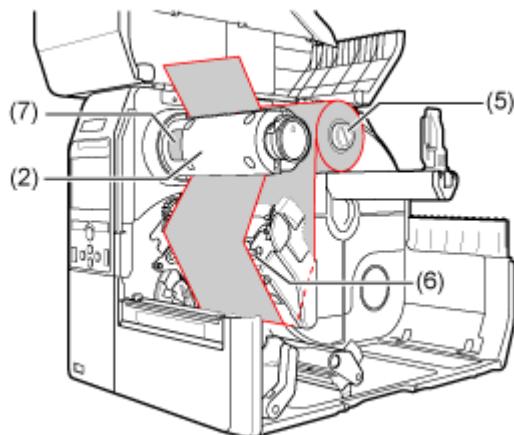


6. Wind the ribbon counterclockwise to the ribbon rewind spindle (2) and grip sheet (7).

Turn the ribbon rewind spindle counterclockwise for several rounds, to wind the ribbon.

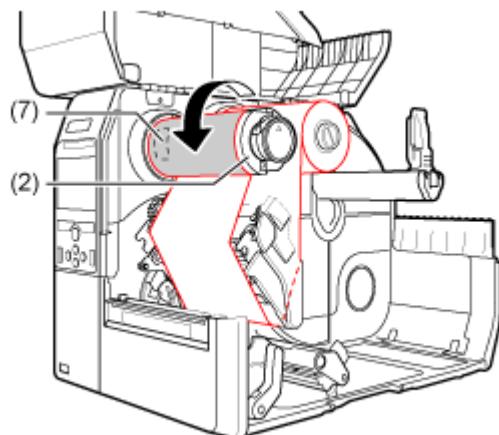

7. If the media is already loaded, press the print head down until the head lock lever is locked.

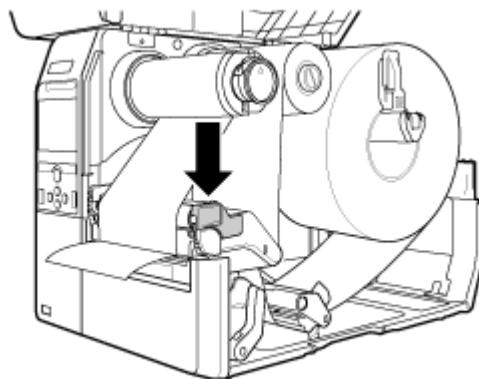

If the media is not loaded, load the media.

8. Close the top cover.




- When closing the top cover, be careful not to pinch your fingers.


Replacing the Ribbon

1. Open the top cover (1).


-  • Open the top cover fully to prevent accidental drop of the cover.

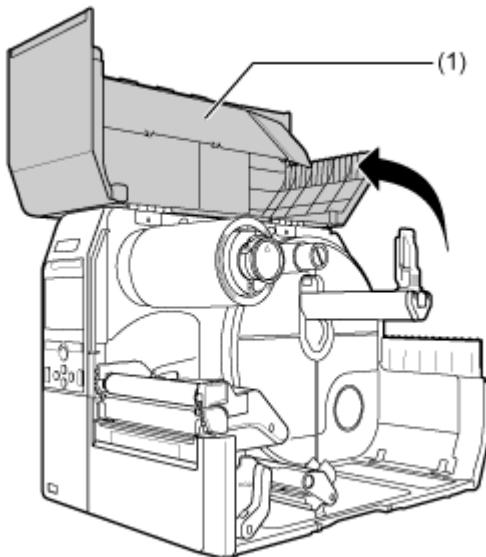


2. Push the head lock lever (2) towards the rear.

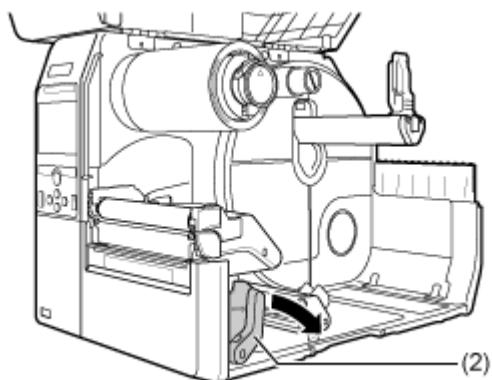


3. Press the tab (3) on the tip of the ribbon rewind spindle to pull it out.

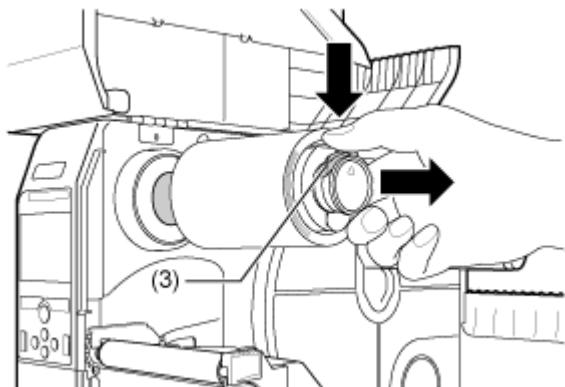

4. Pull to remove the used ribbon from the ribbon rewind spindle.

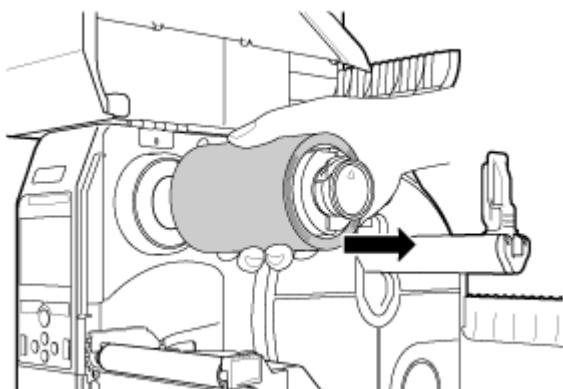


5. Push the ribbon rewind spindle (4) all the way in.

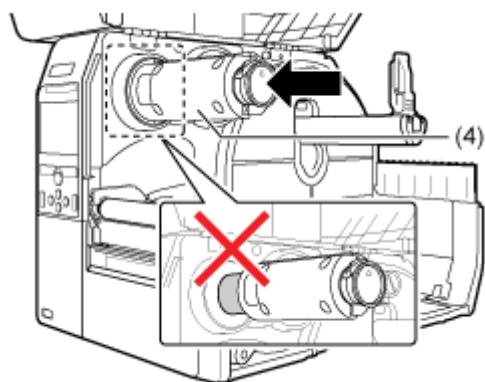


6. Remove the used ribbon core from the ribbon supply spindle.

7. Load the ribbon (5) onto the ribbon supply spindle (6).

While taking note of the wind direction, insert the ribbon all the way in.

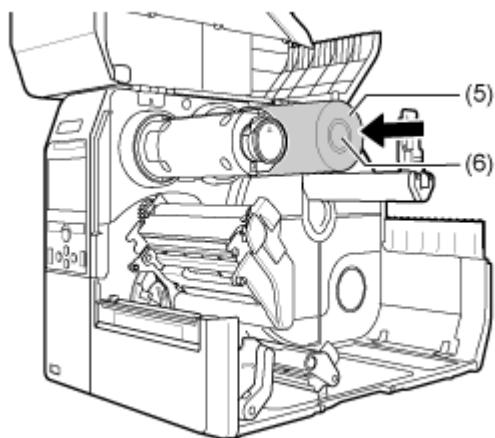


8. From the ribbon supply spindle (6), pass the ribbon below the print head (7).

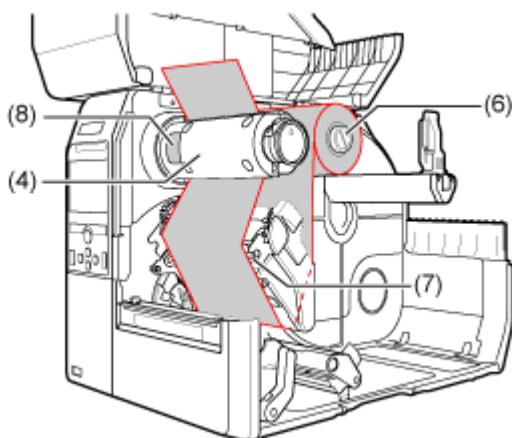


9. Wind the ribbon counterclockwise to the ribbon rewind spindle (4) and grip sheet (8).

Turn the ribbon rewind spindle counterclockwise for several rounds, to wind the ribbon.

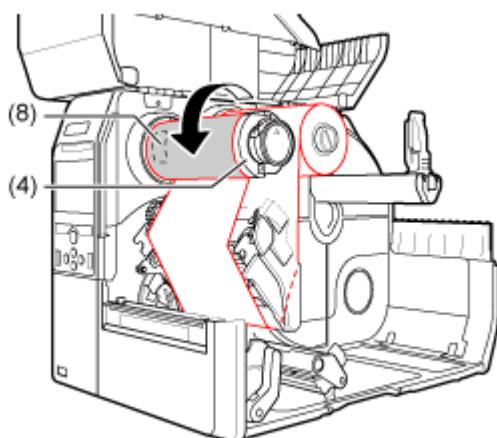

10. Press the print head down until the head lock lever is locked.

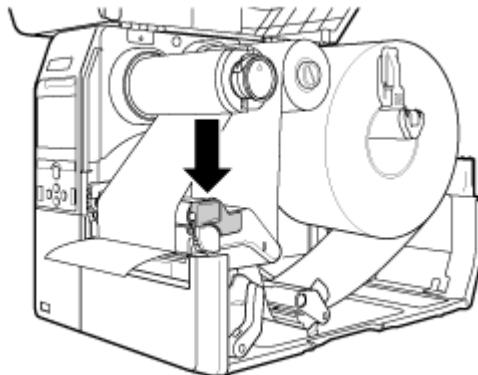

11. Close the top cover.



- When closing the top cover, be careful not to pinch your fingers.

12. Press the  button (FEED) to feed the media.

13. Press the  button (ONLINE) to change to Online mode.


When to Replace Media and Ribbon

Checking the Remaining Amount of Media and Ribbon

You can check the remaining amount of media and ribbon according to the following procedure.

- **Checking through the window on the right side of the product**

You can visually check the remaining amount of media and ribbon in the product through the window on the right side of the product (1).

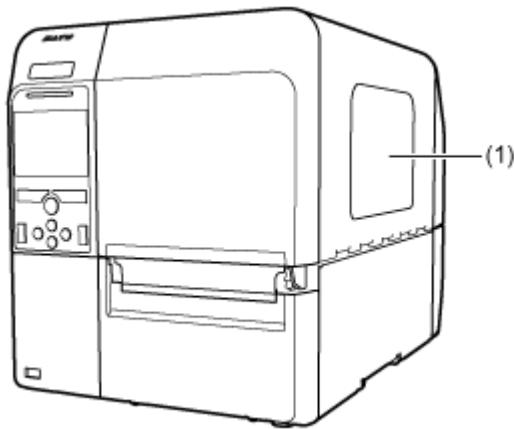

- **Checking through the notifications of the product**

The product has Near End and End detection functions for the media and ribbon.

With icons and error messages on the display of the product, you can check if you need to replace the media or ribbon soon, or if the remaining amount of media and ribbon is scarce.

*Label Near End is supported on products from serial number 6B~ and above.


Conditions That Trigger Paper End, Label Near End, Ribbon End and Ribbon Near End

Conditions That Trigger Paper End

The conditions that trigger paper end vary depending on the operation of the product.

Conditions That Trigger Paper End in the Feeding Operation

A paper-end occurs if the no-paper condition persists even after the paper-end sensor detects the no-paper condition when 15 mm (0.59") continues to be fed.

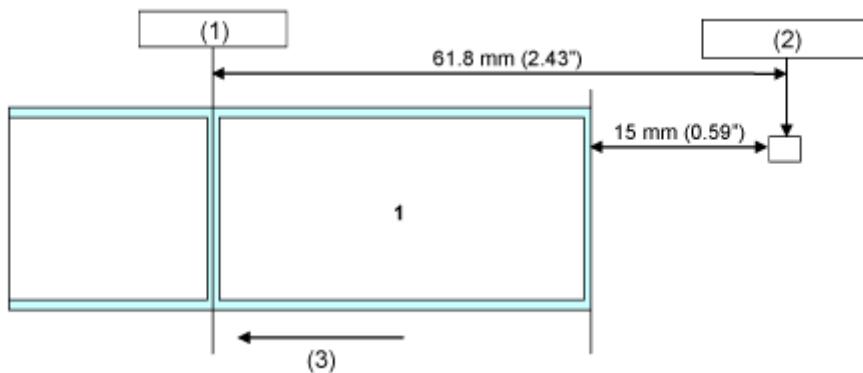

- (1) Print head position
- (2) Paper end sensor: I-mark sensor/Gap sensor

Select in [Printing] > [Advanced] > [Paper End] menu, or specify by command.


- (3) Media feed direction

Conditions That Trigger Paper End in the Printing Operation

1. The paper end sensor detects a no-paper condition at the position where 15 mm (0.59") has been fed.

2. If the amount of printing remaining is less than the distance between the print head position and paper end sensor -15 mm (-0.59"), a paper end error occurs after completing the output of 1.

If the amount of media remaining is more than the distance between the print head position and paper end sensor -15 mm (-0.59"), a paper end error occurs right after detecting the paper end, and the product will reprint after clearing the paper end error.

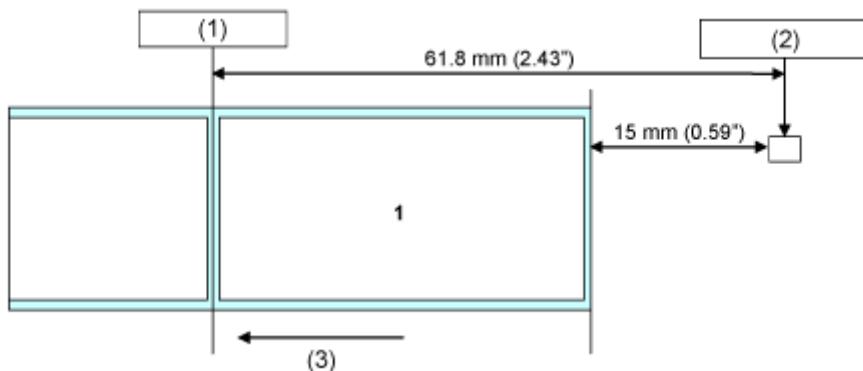

(1) Print head position

(2) Paper end sensor: I-mark sensor/Gap sensor


Select in [Printing] > [Advanced] > [Paper End] menu, or specify by command.

(3) Media feed direction

If a paper end error is detected while printing, operation varies depending on the amounts of printing and media remaining when the error was detected.

The amount of media remaining can be calculated as follows:

Amount of media remaining = distance between print head position and paper end sensor -15 mm (-0.59")

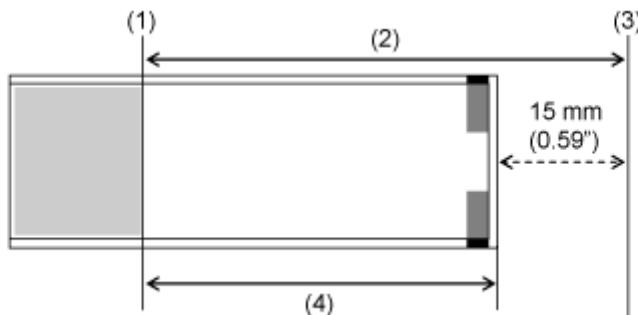

(1) Print head position


(2) Distance between the print head position and paper end sensor

(3) Paper end sensor

(4) Amount of media remaining

- When the Amount of Printing Remaining Is More Than the Amount of Media Remaining


If the amount of printing remaining is more than the amount of media remaining when a paper end error is detected, the product cannot finish the print job. Printing stops immediately and a paper end error occurs.

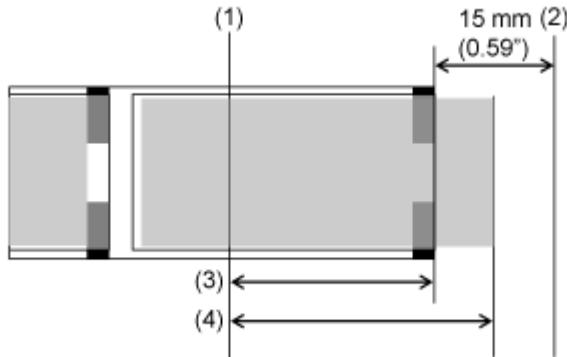

- (1) Print head position
- (2) Paper end sensor
- (3) Amount of media remaining
- (4) Amount of printing remaining


- When the Amount of Printing Remaining Is Less Than the Amount of Media Remaining

If the amount of printing remaining is less than the amount of media remaining, the product will finish the print job and a paper end error will occur.

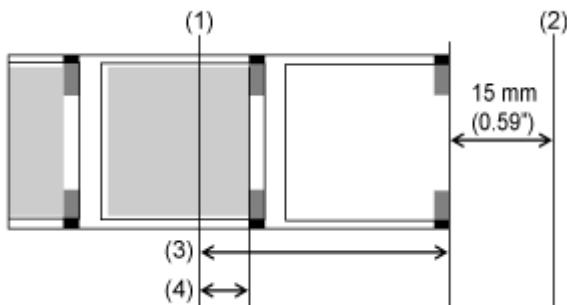

- (1) Print head position
- (2) Paper end sensor
- (3) Amount of media remaining
- (4) Amount of printing remaining

If there are multiple sheets between the print head and paper end sensor when a paper end error is detected, a paper end error will occur only after finishing the label currently being printed.

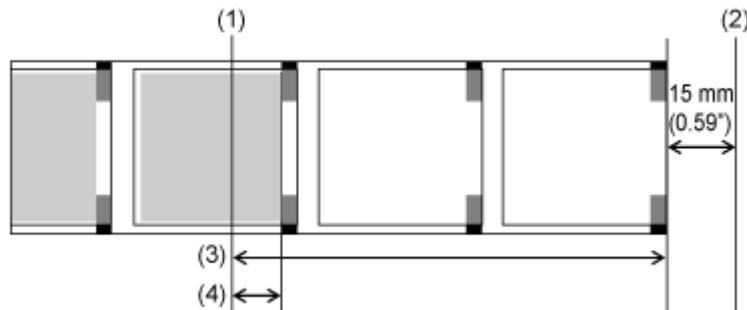

- (1) Print head position
- (2) Paper end sensor
- (3) Amount of media remaining
- (4) Amount of printing remaining

Conditions That Trigger Label Near End

Label near end is detected by the label near end sensor.

Label near end occurs when the amount of label remaining is less than approximately 12 meters (39.4 feet) (media thickness: 160 µm (0.0063"), label diameter: approximately φ96 mm (3" core)).



- This feature is supported on products from serial number 6B~ and above. Although this setting appears on products with serial number 6A~ or below, it is not supported.
- Detection of the label near end is only for reference. The timing of label near end and paper end may overlap, or the paper end may occur before the label near end occurs depending on the label thickness and the top and bottom fluttering of the paper core.

Conditions That Trigger Ribbon End

Ribbon end error is detected by the ribbon sensor in the ribbon supply spindle. Ribbon end error occurs when the product detects that the ribbon in the ribbon supply spindle has not moved (rolled) more than 15 mm (0.59") after feeding the media.

Conditions That Trigger Ribbon Near End

Ribbon near end is detected by the ribbon sensor in the ribbon supply spindle. Ribbon near end occurs when the amount of ribbon remaining is approximately less than 15 meters (49.2 feet) (ribbon diameter: approximately 36 mm (1.42")).




- The amount of ribbon remaining (15 meters (49.2 feet)) is only for reference. The timing of ribbon near end varies depending on the ribbon thickness and the reading status of the ribbon sensor.

Various Settings of the Product

The Product's [Settings] Menu



[Shortcut] Menu

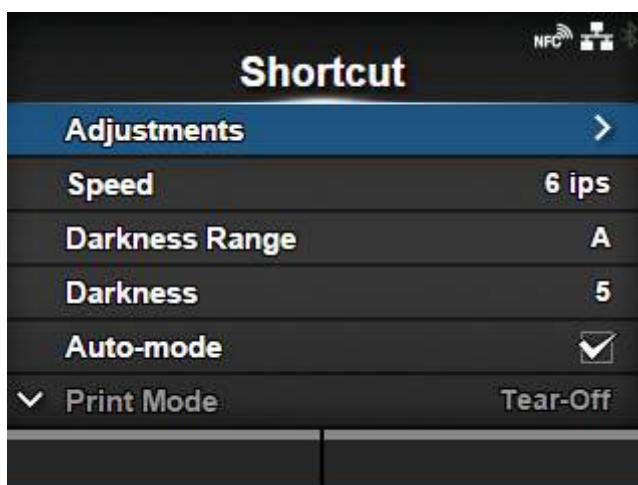

Frequently used settings are listed in the [Shortcut] menu.



[Printing] Menu



The following settings are available in the [Printing] menu:

Label Length

Set the length of the media.

Label Width

Set the width of the media.

Auto Measure

Automatically measure the length of the media.

Printing Mode

Set whether to print using a ribbon or direct thermal media.

Ribbon Near End

Enable or disable the warning when the ribbon is about to run out.

- Appears if you have selected [Use Ribbon] in the [Printing Mode] menu.

Speed

Set the print speed.

Sensor Type

Set the media sensor type.

Auto-mode

Automatically set the print mode.

Print Mode

Manually set the print mode.

Backfeed

Set the backfeed operation.

Eject Cut

Set the time from the print completion until the print cut.

- Appears if you have selected [Cut & Print] in the [Print Mode] menu.

Darkness Range

Set the range of the print darkness.

Darkness

Set the print darkness.

Imaging

Set the print reference position in the vertical and horizontal directions.

Advanced

Set the sensor operation and print motion.

[Label Length]

Set the length of the media.

The setting range varies depending on the print resolution of the product.

The setting range of the label length is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	1 to 20000 dots	1 to 20000 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	1 to 18000 dots	1 to 18000 dots
609 dpi	1 to 9600 dots	-

Resolution	CL4NX	CL6NX
(1 dot = 0.042 mm (0.0017"))		



- Set the label size to a value that includes the liner.

[Label Width]



Set the width of the media.

The setting range varies depending on the print resolution of the product.


The setting range of the label width is as follows:

Resolution	CL4NX	CL6NX	CL6NX
		If [Head Base Position] is [Standard]	If [Head Base Position] is [Left-justify]
203 dpi (1 dot = 0.125 mm (0.0049"))	1 to 832 dots	1 to 1216 dots	1 to 1340 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	1 to 1248 dots	1 to 1984 dots	1 to 2010 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	1 to 2496 dots	-	-



- Set the label size to a value that includes the liner.

[Auto Measure]

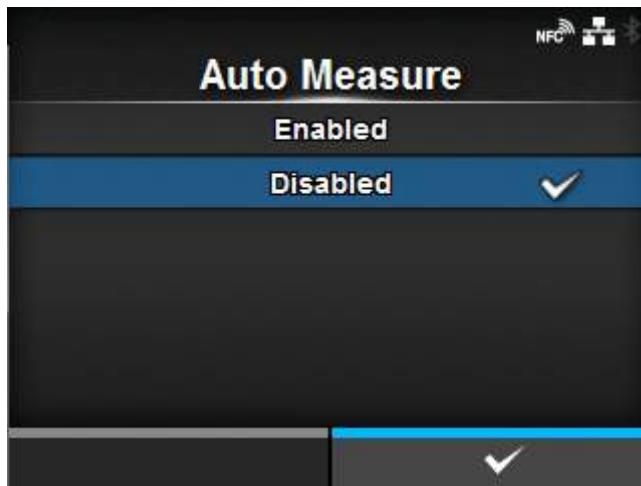

The product automatically measures the length of the media.

The measured length of the media will be automatically saved in [Label Length].

The Auto Measure function can be performed when [Sensor Type] is set to [Gap] or [I-Mark].


The setting procedure of the label length using the Auto Measure function is as follows:

1. Load the media.
2. Set [Auto Measure] to [Enabled].
3. Press the  button or  button to show the Online or Offline screen.
4. Open the print head. (Head Open error occurs.)
5. Close the print head. (The display returns to Offline screen.)
6. When you press the  button, the product feeds two pieces of label and measures the label length.
7. The measured label length is saved in [Label Length].



- When you have set [Auto Measure] to [Enabled], this function executes when the product powers on.

[Printing Mode]

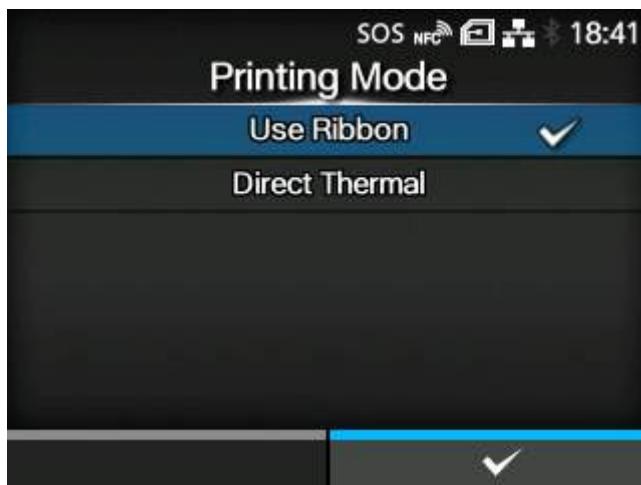

Set whether to print using a ribbon or direct thermal media.

The options are as follows:


Use Ribbon

Print using a ribbon.

Direct Thermal

Print using direct thermal media.

[Ribbon Near End]

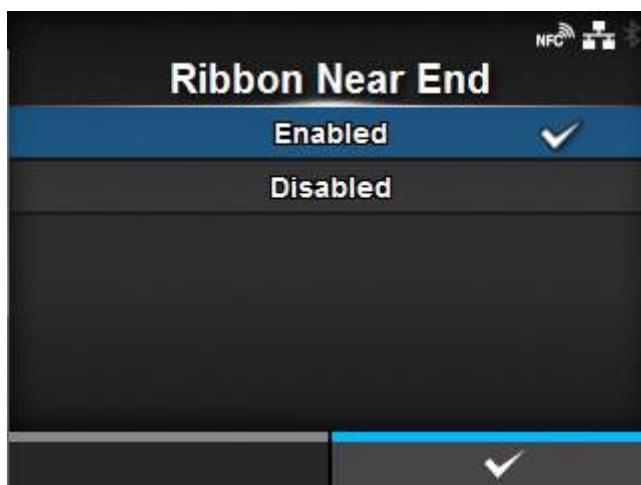

Shows or does not show the warning icon when the ribbon is about to run out. Printing does not stop even if the warning icon shows up.

Appears if you have selected [Use Ribbon] in the [Printing Mode] menu.

The options are as follows:

Enabled


Shows the warning icon.

Disabled

Does not show the warning icon.



- The warning icon is shown in the status bar on the upper part of the screen.

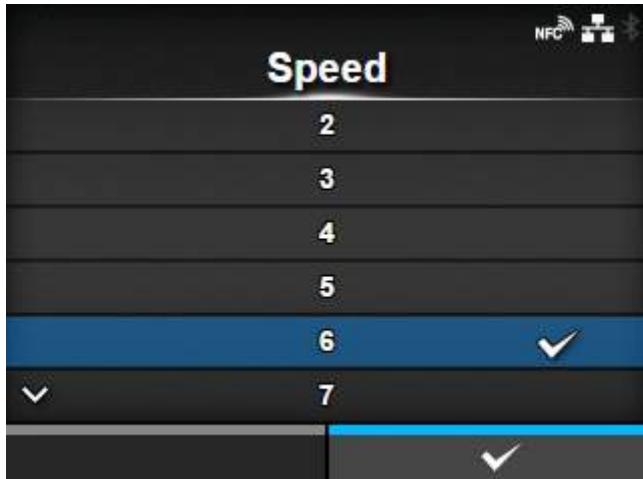[Speed]

The setting range varies depending on the print resolution of the product.


The setting range of the print speed is as follows:

Resolution	CL4NX	CL6NX
203 dpi (8 dots/mm)	2 to 10 ips (inches/sec) (50.8 to 254 mm/sec)	2 to 10 ips (inches/sec) (50.8 to 254 mm/sec)
305 dpi (12 dots/mm)	2 to 8 ips (inches/sec) (50.8 to 203.2 mm/sec)	2 to 8 ips (inches/sec) (50.8 to 203.2 mm/sec)
609 dpi (24 dots/mm)	2 to 6 ips (inches/sec) (50.8 to 152 mm/sec)	-



- If the optional linerless cutter kit is installed to CL4NX, the setting range is as follows:
 - The setting range is 2 to 6 ips (inches/sec) (50.8 to 152 mm/sec) regardless of the printing resolution.
 - If the [Speed] is set more than 7 ips (177.8 mm/sec), it is changed to 4 ips after installing the linerless cutter kit.
- Setting the print speed to a level that is too fast may affect the print quality.

[Sensor Type]

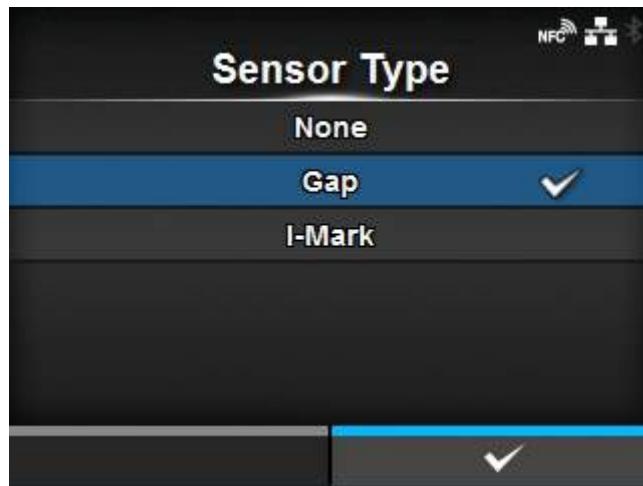

Set the sensor type for detecting the media.

The options are as follows:

None

Disable the media sensor.

Gap

Select when using gap type media. Use the transmissive type sensor.


I-Mark

Select when using I-mark type media. Use the reflective type sensor.



- If you have selected [Tear-Off], [Dispenser], or [Cut & Print] in the [Print Mode] menu, only [Gap] and [I-Mark] will be available.
- If you have selected [Linerless] in the [Print Mode] menu (CL4NX only), only [None] and [I-Mark] will be available.

[Auto-mode]

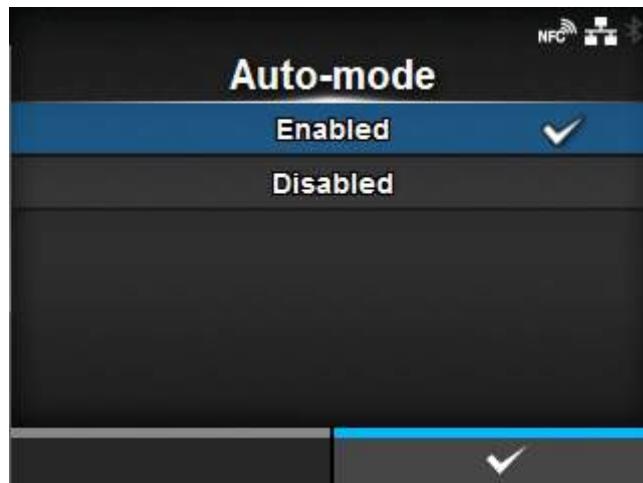

When using [Auto-mode], the print mode changes automatically according to the status of the installed option unit.

The options are as follows:

Enabled

The print mode changes automatically.

Disabled

The print mode changes according to the setting of the [Print Mode].



- Operate in cutter mode if you have installed the optional cutter unit.
- Operate in dispenser mode if you have installed the optional dispenser unit.
- Operate in linerless mode if you have installed the optional linerless cutter kit (CL4NX only).

[Print Mode]



Set the print mode.

The options are as follows:

Continuous

Continuously print the specified number of the media. The media remains in position for printing at all times.

Tear-Off (Feeding media to the position for manual cutting)

After continuously printing the specified number of the media, feed the media to the point to remove the media. After printing, tear off the media manually. The media will be back to the print head position for starting the next printing.

Cutter

Cut each media while printing the specified number of media. You can specify this option if you have installed the cutter unit.

Cut & Print

Allows you to continuously print and cut at the specified media repeat. If no print data is received within the period specified for [Eject Cut], the product will feed the media to the cut position and cut the last printed media. You can specify this option if you have installed the cutter unit.

Dispenser

Peel the liner from the printed label as the label is fed to the product's front. Once the printed label has been removed from the product for application, the next label will retract and position itself for printing. You can specify this option if you have installed the dispenser unit.


Linerless (CL4NX only)

Cut each label while printing the specified number of labels. You can specify this option if you have installed the linerless cutter kit.



- If no option is installed, [Continuous] and [Tear-Off] are available.
- If the optional cutter unit is installed, [Continuous], [Tear-Off], [Cutter], and [Cut & Print] are available.
- If the optional dispenser unit is installed, [Continuous], [Tear-Off], and [Dispenser] are available.
- If the optional linerless cutter kit is installed to CL4NX, only [Linerless] is available.
- You cannot set the [Print Mode] if [Auto-mode] is [Enabled].

[Backfeed]

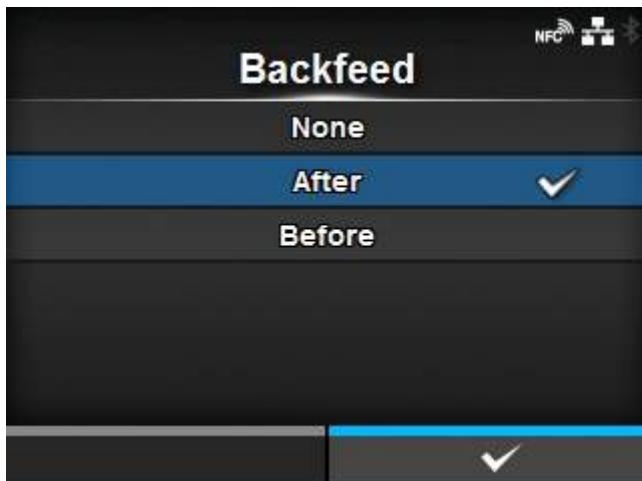

[Backfeed] is applicable when the print mode is set to tear-off mode, cutter mode, cut & print mode, dispenser mode or linerless mode (CL4NX only).

The options are as follows:

None

Do not backfeed.

After

After cut, backfeed the front part of the next media to the print head position. For dispenser mode, backfeed the front part of the next label after dispensing the label.

Before

Before printing, backfeed the front part of the next media to the print head position.



- If you have selected [Tear-Off] or [Linerless] (CL4NX only) in the [Print Mode], only [Before] is available.
- If you have selected [Cut & Print] in the [Print Mode], only [After] is available.

[Eject Cut]




Set the Eject cut motion for the last printed media. Cut the last media after the specified timing.

Appears if you have selected [Cut & Print] in the [Print Mode] menu.

The setting range is Off, or from 1 to 5 (sec).

[Darkness Range]

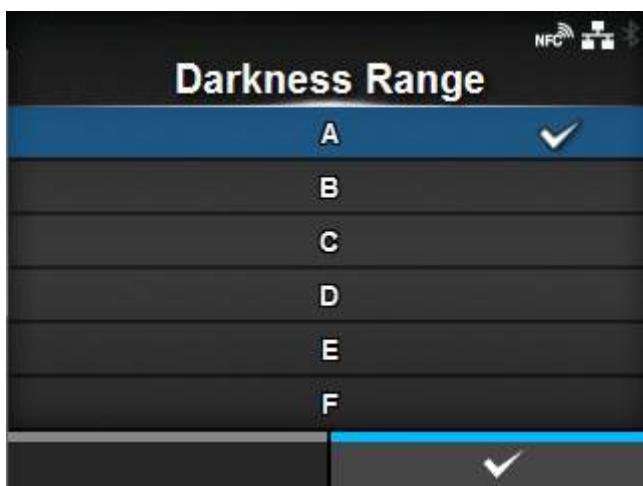

Set the range of the print darkness.

The darkness range affects the print darkness.


The options are as follows:

A, B, C, D, E, F



- The normal setting is A. You can also select B to F but the print darkness does not change.

[Darkness]

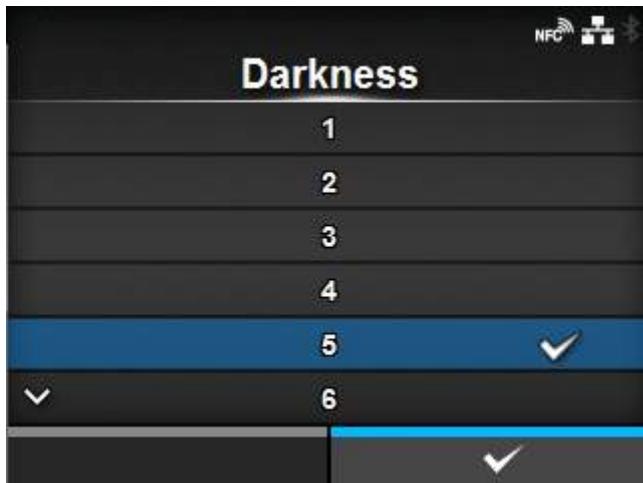


Specify the print darkness from 10 steps.

The setting range is from 1 to 10. 1 is the lightest and 10 is the darkest.



- To further fine tune the print darkness, set [Printing] > [Advanced] > [Adjustments] > [Darkness Adjust].

[Imaging]

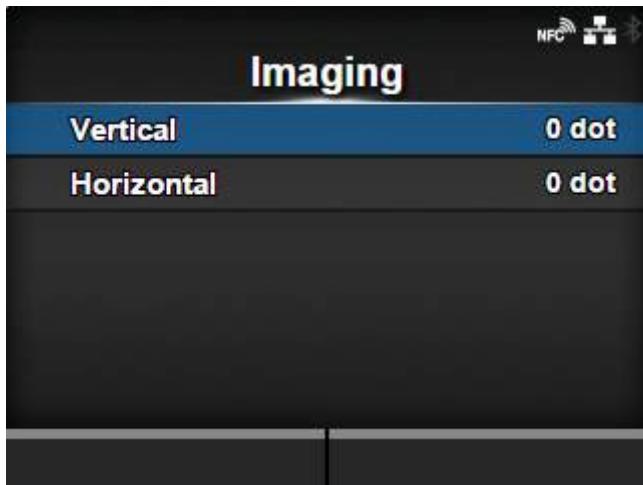

Set the print reference position in the vertical and horizontal directions.


The setting items are as follows:

Vertical

Adjust the print position in the vertical (feed) direction.


Horizontal

Adjust the print position in the horizontal direction.

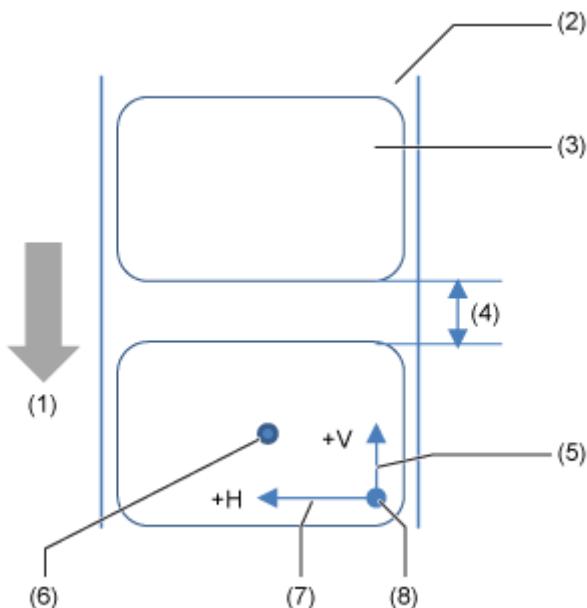Adjusting direction of the print reference position and base reference point


- (1) Feed direction
- (2) Liner
- (3) Label
- (4) Gap between labels
- (5) Adjustment of vertical base reference point
- (6) Base reference point after adjustment
- (7) Adjustment of horizontal base reference point
- (8) Print reference position

[Vertical]

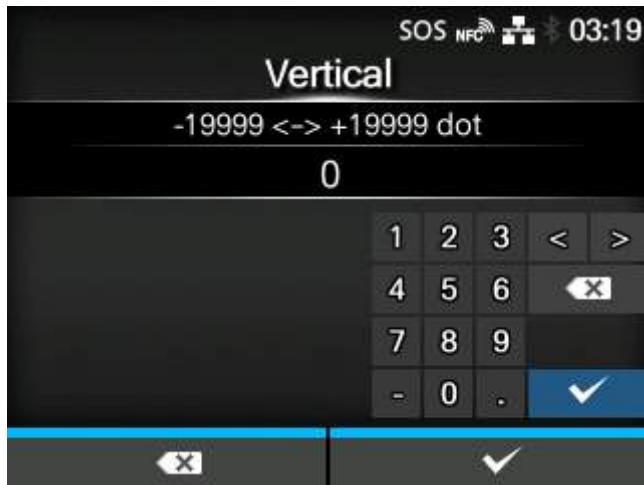

Set the print position in the vertical direction.

Set the correction value from the standard printing position as "-" for the direction of the paper feed and "+" for the direction opposite to the paper feed.

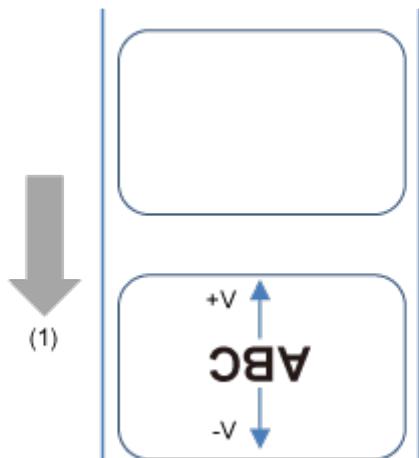

(1) Feed direction

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-19999 to 0 to 19999 dots	-19999 to 0 to 19999 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-17999 to 0 to 17999 dots	-17999 to 0 to 17999 dots
609 dpi	-9599 to 0 to 9599 dots	-


Resolution	CL4NX	CL6NX
(1 dot = 0.042 mm (0.0017"))		

[Horizontal]



Set the print position in the horizontal direction.

Set the correction value from the standard printing position when facing the product, use "-" to adjust to the right side and "+" to adjust to the left side.

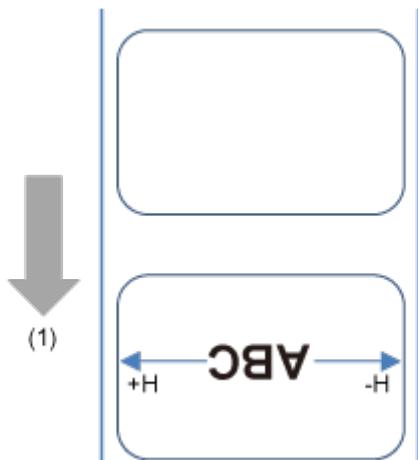

(1) Feed direction


The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX If [Head Base Position] is [Standard]	CL6NX If [Head Base Position] is [Left-justify]
203 dpi	-831 to 0 to 831 dots	-1215 to 0 to 1215 dots	-1339 to 0 to 1339 dots

Resolution	CL4NX	CL6NX If [Head Base Position] is [Standard]	CL6NX If [Head Base Position] is [Left-justify]
(1 dot = 0.125 mm (0.0049"))			
305 dpi (1 dot = 0.083 mm (0.0033"))	-1247 to 0 to 1247 dots	-1983 to 0 to 1983 dots	-2009 to 0 to 2009 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-2495 to 0 to 2495 dots	-	-

[Advanced]

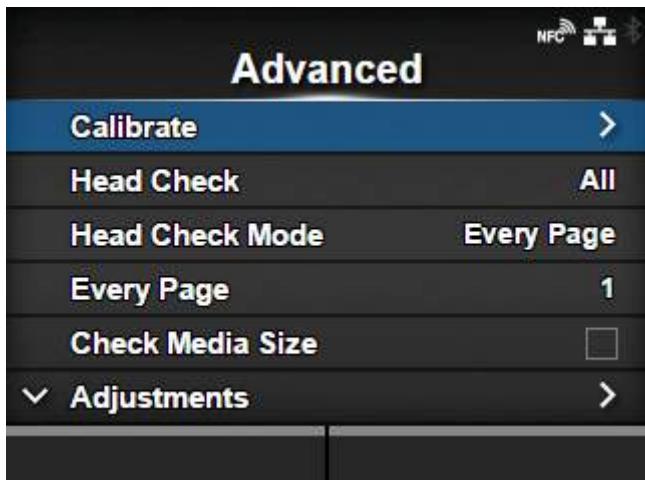

Set detailed sensor operation and print motion.

The setting items are as follows:

Calibrate

Adjust the media sensor.

Head Check

Check if there is a broken element of the print head.

Head Check Mode

Set the mode for head check.

- Appears if you have selected [All] or [Barcode] in the [Head Check] menu.

Every Page

Set the interval for head check.

- Appears if you have selected [Every Page] in the [Head Check Mode] menu.

[Check Media Size](#)

Enable or disable media size check.

- Appears if you have selected [Gap] or [I-Mark] in the [Sensor Type] menu.

[Adjustments](#)

Correct the offset value, print position and print darkness.

[Start Online](#)

Set whether to power on the product in Online mode.

[Feed After Error](#)

Set whether to automatically feed the media when recovering from an error.

[Feed At Power On](#)

Set whether to automatically feed the media when the product is powered on.

[Finisher Feed](#)

Set the length to feed after printing.

[Paper End](#)

Select the sensor for sensing the paper end.

[Head Base Position](#)

Set the edge position for printing.

[Prioritize](#)

For product settings, set whether to prioritize the settings that are done through the product or through commands.

[Reprint](#)

Enable or disable the reprint function.

[Print End Position](#)


Adjust the media stop position or cut position when [Sensor Type] is set to [None].

[Label Near End](#)

Enable or disable the warning when the media is about to run out.

*This feature is supported on products from serial number 6B~ and above. Although this setting appears on products with serial number 6A~ or below, it is not supported.

[Calibrate]

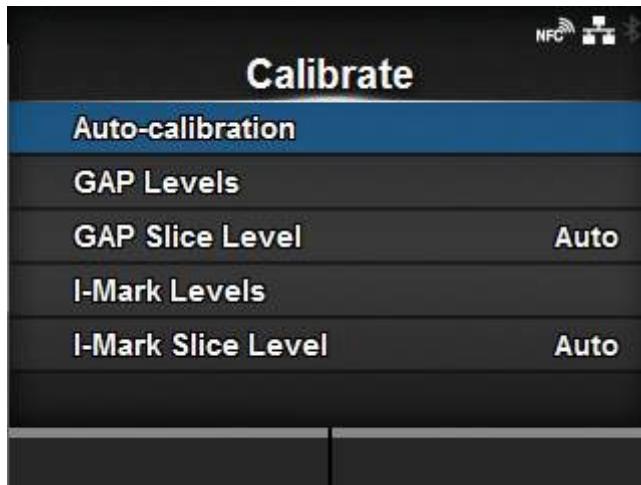

Adjust the media sensor level.

In instances of media detection malfunction, adjust the media sensor level (Gap and I-mark sensors).

The setting items are as follows:

Auto-calibration

Automatically adjust the sensor level.

- Does not appear if you have installed the optional linerless cutter kit (CL4NX only).

GAP Levels

Manually set the Gap sensor level.

GAP Slice Level

Manually set the Gap sensor slice level.


I-Mark Levels

Manually set the I-mark sensor level.

I-Mark Slice Level

Manually set the I-mark sensor slice level.

[Auto-calibration]

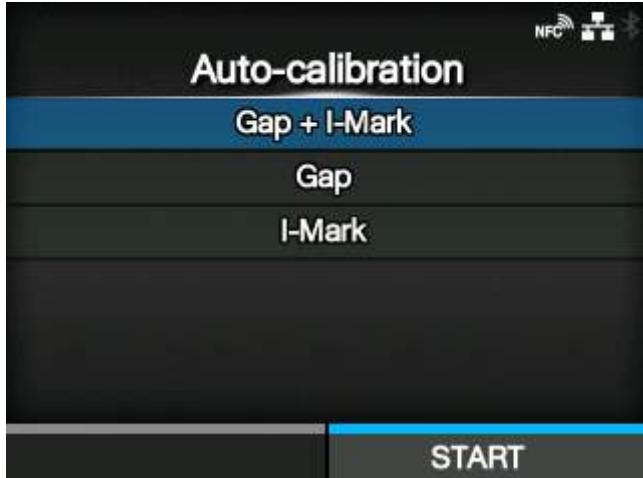

Perform the auto-calibration for the selected media sensor.

[Auto-calibration] is not available if you have installed the optional linerless cutter kit (CL4NX only).

Gap + I-Mark

Adjusts both the Gap sensor and I-mark sensor.

Gap

Adjusts the Gap sensor.

I-Mark

Adjusts the I-mark sensor.


The procedure to auto-calibrate the media sensor is as follows:

1. Push the head lock lever towards the rear to unlock the print head.
2. Pass the media below the media sensor guide. If you are using labels, remove the label from the liner. Align it so that the media sensor does not detect the I-mark (black mark).
3. Press the print head down until the head lock lever is locked. To get the correct adjustment result, adjust after you have locked the print head.
4. Press the / buttons to select the type of sensor to be adjusted.
5. Press the button or button.
6. When the confirmation screen appears, press the button to start the sensor adjustment.
7. The result of the sensor adjustment is shown. To exit the adjustment, press the button.
8. Set to Offline mode. Press the button to confirm that the media is fed correctly.



- If the media is not fed correctly after doing [Auto-calibration], contact your SATO reseller or technical support center.

[GAP Levels]

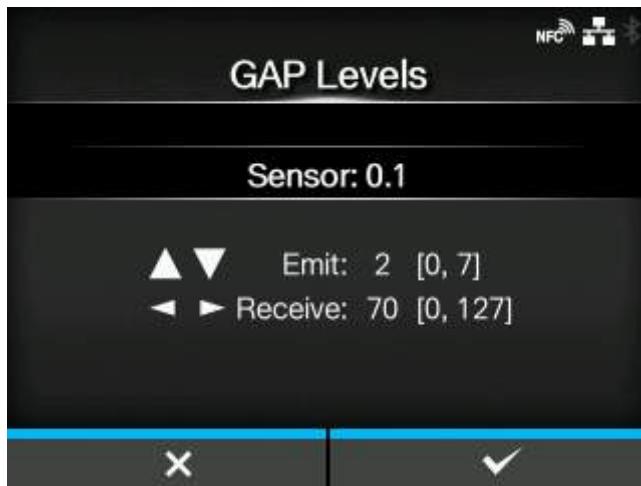

Manually set the Gap sensor level.

The setting procedure is as follows:

First, adjust the "Low" level (voltage) of the Gap sensor.

1. Remove the label from the liner.
2. Pass the liner through the media sensor. Align it so that the media sensor does not detect the I-mark (black mark).
3. Close the print head. To get the correct adjustment result, adjust after you have closed the print head.
4. Select the [GAP Levels] in the [Calibrate] menu and press the button.
5. Press the / buttons to change the [Emit] value until the [Sensor] value is below 0.5 (V). Set the [Emit] value as low as possible.
6. If the [Sensor] value does not decrease below 0.5 after you changed the [Emit] value, press the / buttons to change the [Receive] value.
7. Take a note of the [Sensor] value from the above procedure. This is the "Low" level value for the Gap sensor.

Next, check the "High" level (voltage) of the Gap sensor as follows:

1. Pass the media (attached with liner) between the media sensors. Align it so that the media sensor does not detect the I-mark (black mark).
2. Close the print head.
3. Check the [Sensor] value.
If the value is 1.0 (V) higher than the "Low" level value you have recorded, this is the "High" level value for the Gap sensor.
If the difference between the "High" and the "Low" levels is less than 1.0, adjust the [Emit] and [Receive] values so that the difference is more than 1.0, or adjust the "Low" level (voltage) of the Gap sensor again.
4. If both "High" and "Low" levels comply with the standard value, press the button to confirm the value.

The standard values for the "High" and "Low" levels for the Gap sensor are as follows:

- Low (with only liner) \leq 0.5 (V)
- High (media attached with liner) - Low \geq 1.0 (V)

[GAP Slice Level]



Set the Gap sensor slice level.


The setting procedure is as follows:

1. Use the following formula to calculate the slice level:
 $(\text{High level} - \text{Low level}) \times 0.3 + \text{Low level} = \text{slice level}$
2. Select the [GAP Slice Level] in the [Calibrate] menu and press the button.
3. Press the buttons to change the [Slice level] value. Set the [Slice level] to the level calculated in step 1.
4. Press the button to confirm the value.



- If you set the [Slice level] to 0.0 (V), the product sets the slice level automatically.

[I-Mark Levels]

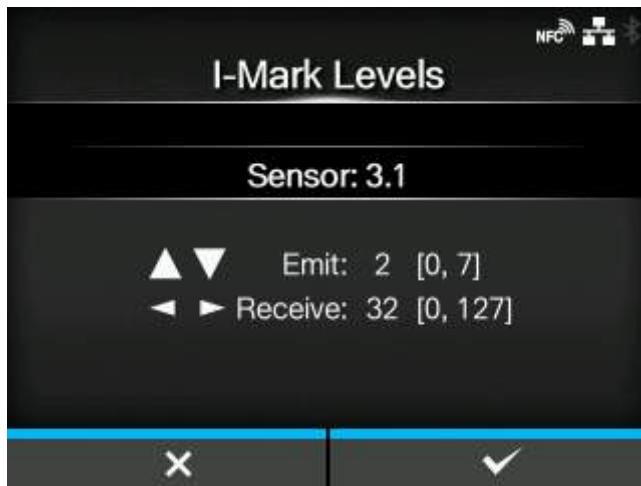

Manually set the I-mark sensor level.

The setting procedure is as follows:

First, adjust the "Low" level (voltage) of the I-mark sensor.

1. Pass the media (attached with liner) between the media sensors. Align it so that the media sensor does not detect the I-mark (black mark).
2. Close the print head. To get the correct adjustment result, adjust after you have closed the print head.
3. Select the [I-Mark Levels] in the [Calibrate] menu and press the button.
4. Press the / buttons to change the [Emit] value until the [Sensor] value is below 0.5 (V). Set the [Emit] value as low as possible.
5. If the [Sensor] value does not decrease below 0.5 after you changed the [Emit] value, press the / buttons to change the [Receive] value.
6. Take a note of the [Sensor] value from the above procedure. This is the "Low" level value for the I-mark sensor.

Next, check the "High" level (voltage) of the I-mark sensor as follows:

1. Pass the media between the media sensors so that the media sensor can detect the I-mark (black mark).
2. Close the print head.
3. Check the [Sensor] value.
If the value is 1.0 (V) higher than the "Low" level value you have recorded, this is the "High" level value for the I-mark sensor.
If the difference between the "High" and the "Low" levels is less than 1.0, adjust the [Emit] and [Receive] values so that the difference is more than 1.0, or adjust the "Low" level (voltage) of the I-mark sensor again.
4. If both "High" and "Low" levels comply with the standard value, press the button to confirm the value.

The standard values for the "High" and "Low" levels for the I-mark sensor are as follows:

- Low (without I-mark) \leq 0.5 (V)
- High (with I-mark) - Low \geq 1.0 (V)

[I-Mark Slice Level]



Set the I-mark sensor slice level.


The setting procedure is as follows:

1. Use the following formula to calculate the slice level:
 $(\text{High level} - \text{Low level}) \times 0.7 + \text{Low level} = \text{slice level}$
2. Select the [I-Mark Slice Level] in the [Calibrate] menu and press the button.
3. Press the / buttons to change the [Slice level] value. Set the [Slice level] to the slice level calculated in step 1.
4. Press the button to confirm the value.



- If you set the [Slice level] to 0.0 (V), the product sets the slice level automatically.

[Head Check]

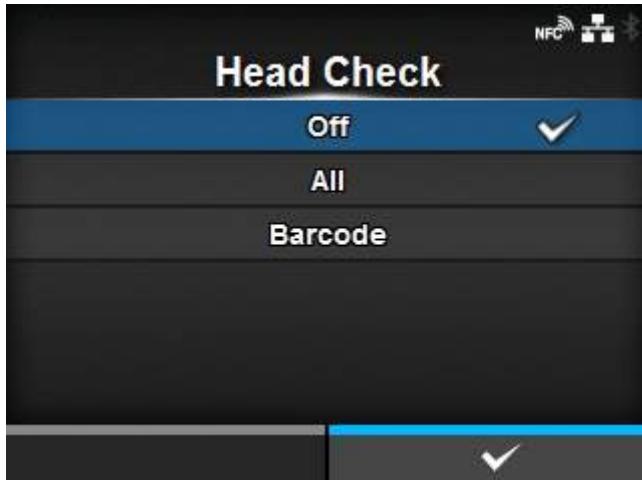

Automatically check if there is a broken element of the print head.

The options are as follows:

Off

Disable the Head Check.

All

Check the entire print area.

Barcode


Check only the area for printing a barcode. Head check is not applicable for barcodes printed as graphic data.



- Head check is a reference for checking for a broken element of the print head. This function does not guarantee barcode readability. A regular barcode reader test is required. When a void of printing got up, the head check function may not work immediately. Some gaps may occur.

For the outputted label after the head error, perform the scanner reader of the printed barcode to check the label.

[Head Check Mode]

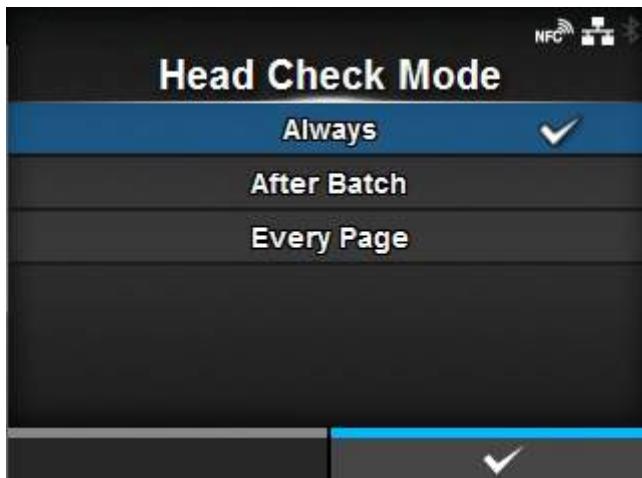

Set the method for head check.

Appears if you have selected [All] or [Barcode] in the [Head Check] menu.

The options are as follows:

Always

Perform the head check for every item.


After Batch

The head check occurs before starting to print and when printing is stopped. If backfeed is applicable, the head check occurs before starting to print, when stopping to print and during the backfeed.

Every Page

Perform the head check for each specified number of media.

[Every Page]

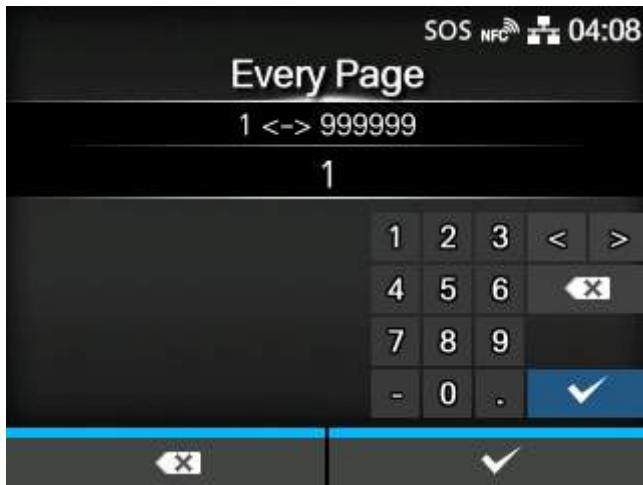


Perform the head check for each specified number of media.

Appears if you have selected [Every Page] in the [Head Check Mode] menu.

The setting range is from 1 to 999999.

[Check Media Size]

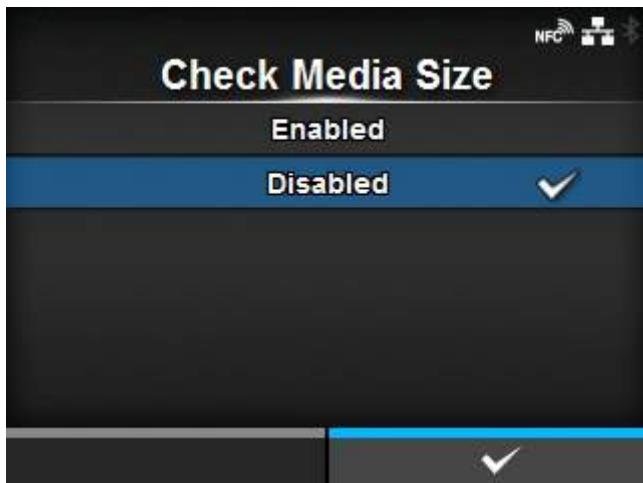

Enable or disable media size check.

Appears if you have selected [Gap] or [I-Mark] in the [Sensor Type] menu.

By enabling this function, "Media Error" is shown if either of the following conditions applies:

- If the media is more than 3 mm (0.12") longer than the media length specified with the media size command ESC+A1.
- If the current media feed length is more than 3 mm (0.12") longer than the media length fed for the first time after this function is enabled.

The options are as follows:


Enabled

Enable media size check.

Disabled

Disable media size check.

[Adjustments]

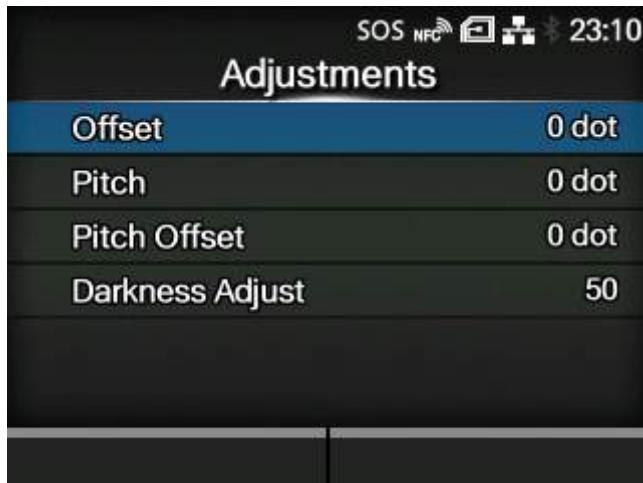

Correct the offset position, print position and print darkness.

The setting items are as follows:

Offset

Adjusts the backfeed/stop position for Tear-off/Cut/Dispense operation.

Pitch

Adjusts the print start position thus effects the vertical print position placement.

Pitch Offset

Adjusts the offset position and the pitch position at the same time.

Darkness Adjust

Fine tune the print darkness.

[Offset]



Correct the offset position.

Offset adjusts the backfeed/stop position for Tear-off/Cut/Dispense operation.

Set the value '+' to move the offset position in the direction opposite to the feed direction and '-' to move in the feed direction.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:


Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-90 to 0 to 90 dots	-

[Pitch]



Pitch adjusts the print start position thus effects the vertical print position placement.

Set the value '+' to move print position in the direction opposite to the feed direction and '-' to move in the feed direction.

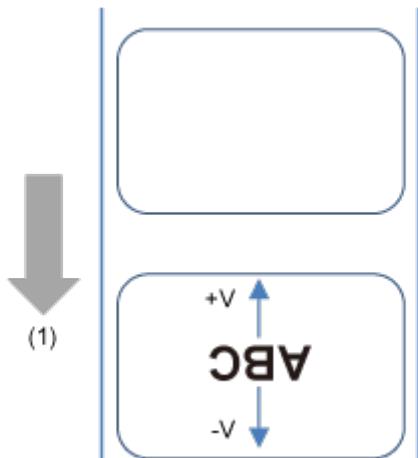


(1) Feed direction

The setting range varies depending on the print resolution of the product.

The setting range is as follows:


Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-90 to 0 to 90 dots	-

[Pitch Offset]

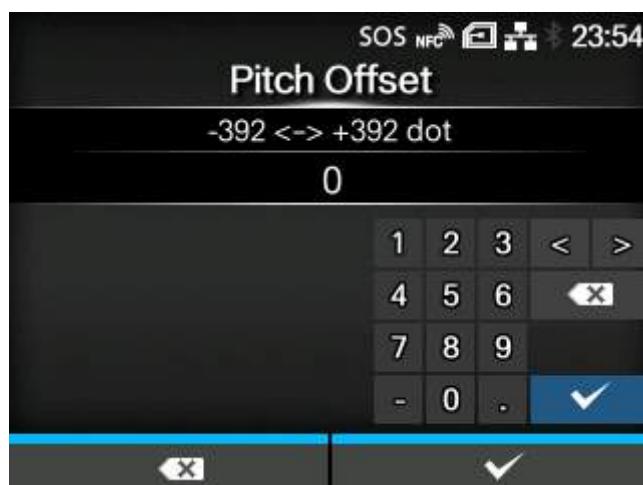

Pitch Offset adjusts the offset position and the pitch position at the same time.

Set the value '+' to move the offset and pitch positions in the direction opposite to the feed direction and '-' to move in the feed direction.

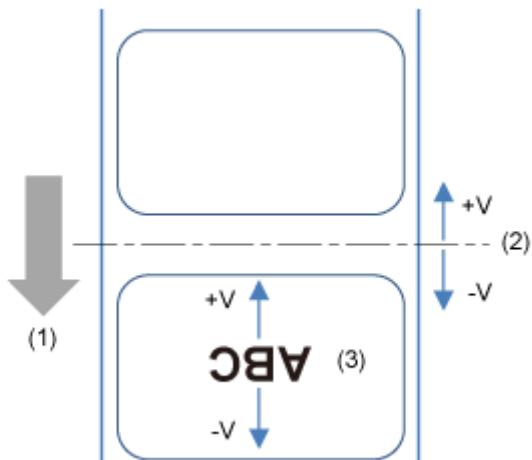

(1) Feed direction

(2) Offset position (backfeed/stop position for Tear-off/Cut/Dispense operation)

(3) Pitch position (leading edge of media position that decides the vertical print position)

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-392 to 0 to 392 dots	-392 to 0 to 392 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-588 to 0 to 588 dots	-588 to 0 to 588 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-1176 to 0 to 1176 dots	-

[Darkness Adjust]




Fine tune the print darkness.

The setting range is from 0 to 99.

0 is the lightest and 99 is the darkest.

[Start Online]

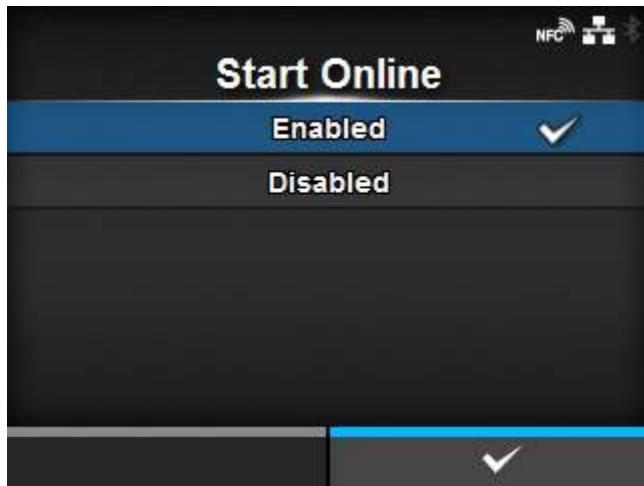

Select default mode when the product is powered on.


The options are as follows:

Enabled

The product powers on in Online mode.

Disabled

The product powers on in Offline mode.

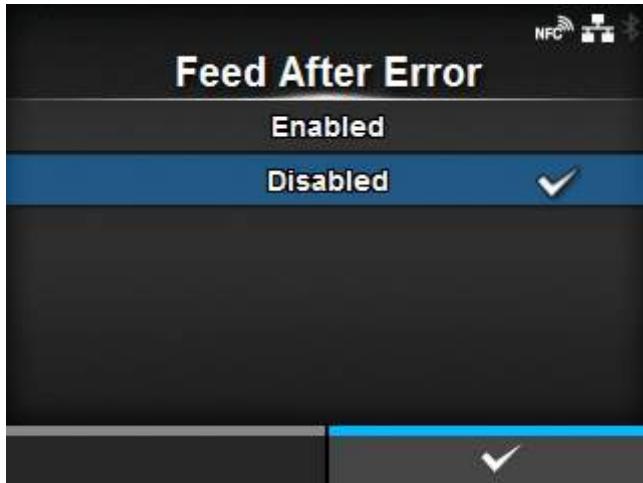[\[Feed After Error\]](#)

Set whether to automatically feed the media when recovering from an error and changing to Online mode.

The options are as follows:


Enabled

Feed the media when changing to Online mode after recovering from an error.

Disabled

Do not feed the media when changing to Online mode after recovering from an error.

However, if [Feed At Power On] is set to [Enabled], the product feeds the media when it is powered on and changes to Online mode.

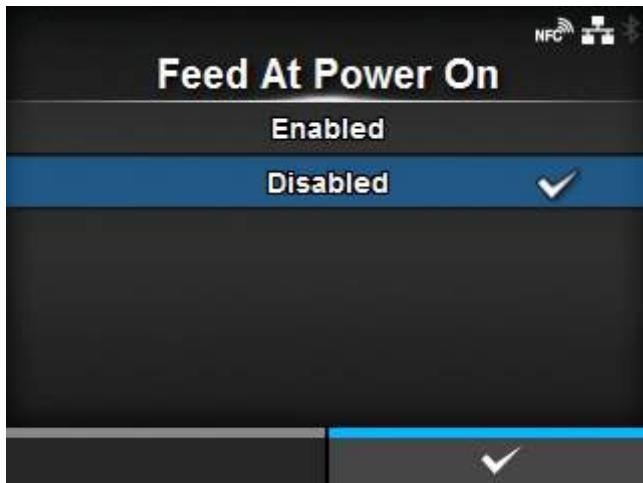[\[Feed At Power On\]](#)

Set whether to automatically feed the media when the product is powered on.

The options are as follows:

Enabled

Feed the media when the product is powered on.

Disabled

Do not feed the media when the product is powered on.

However, if [Feed After Error] is set to [Enabled], the product feeds the media when it is powered on and changes to Online mode.

[Finisher Feed]



Set the media feed amount for Tear-off, cut and dispense stop. Set the media feed amount based on the print head position of 0.

The actual media feed amount is the value of [Offset] + [Finisher Feed].

The setting range varies depending on the print resolution of the product.


The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	0 to 2040 dots	0 to 2040 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	0 to 3060 dots	0 to 3060 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	0 to 6120 dots	-



- When [Printing Mode] is set to [Use Ribbon], the length of label backfeed needs to be under 30 mm (1.18"). If it is over 30 mm (1.18"), the end of the ribbon may be falsely detected.
- A message prompting you to restart the product will appear on the Online/Offline screen if you have made any changes. In such a case, reboot the product to apply the settings.

[Paper End]

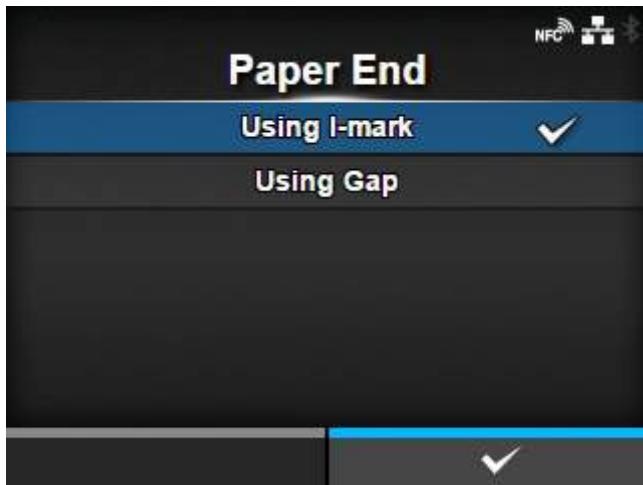

Select the sensor for sensing the paper end.

The options are as follows:

Using I-mark

Use the I-mark sensor (reflective type) to detect the paper end.

Using Gap

Use the Gap sensor (transmissive type) to detect the paper end.

[Head Base Position]



Set the position used for the base reference point for printing.

The options are as follows:


Item	CL4NX	CL6NX
[Standard]	Print with a standard base reference point.	Print with a standard base reference point.

Item	CL4NX	CL6NX
[Left-justify]	Move the base reference point 2 mm (0.08") to the left toward the product.	Expand the width of the printable area (maximum print width) to 167.5 mm (6.59"). Move the base reference point 2 mm (0.08") to the left toward the product.



- A message prompting you to restart the product will appear on the Online/Offline screen if you have made any changes. In such a case, reboot the product to apply the settings.

[Prioritize]

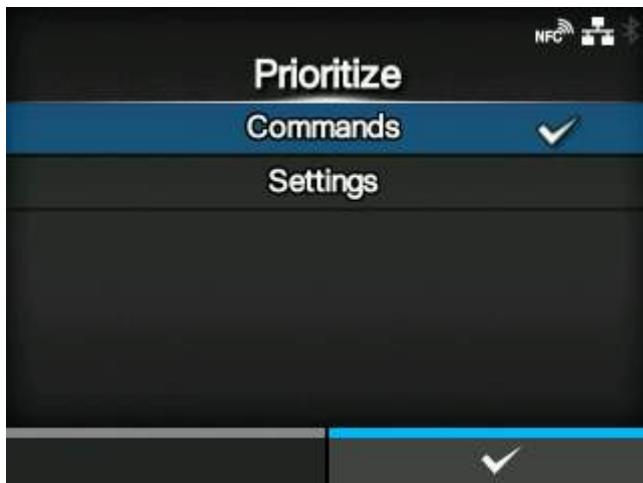

For product settings, set whether to prioritize the settings that are done through the product or through commands.


The options are as follows:

Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

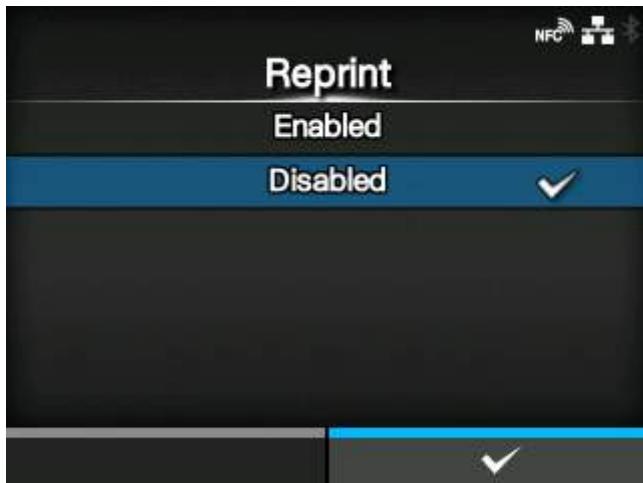[\[Reprint\]](#)

Enable or disable the reprint function.

The options are as follows:

Enabled

Enable the reprint function.


Disabled

Disable the reprint function.

If you have selected [Enabled] in [Reprint], you can press the button ([REPRINT]) on the Online screen to print the previous data again.



- The previous data will be lost if you power off the product.

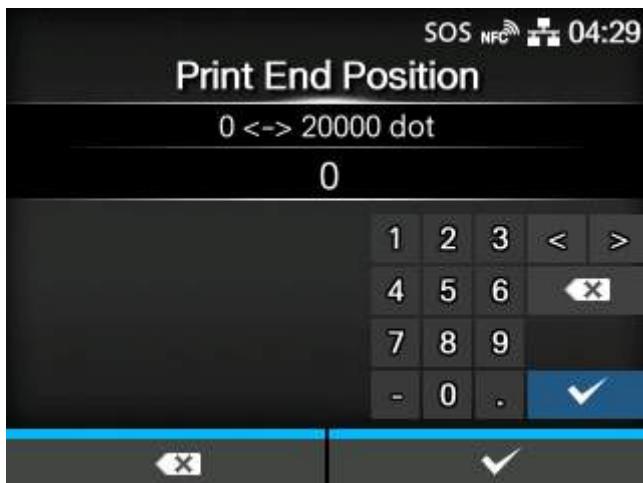[\[Print End Position\]](#)


Adjust the media stop position or cut position when the [Sensor Type] is set to [None]. This adjustment also sets the blank amount from the media stop position.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	0 to 20000 dots	0 to 20000 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	0 to 18000 dots	0 to 18000 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	0 to 9600 dots	-

[Label Near End]

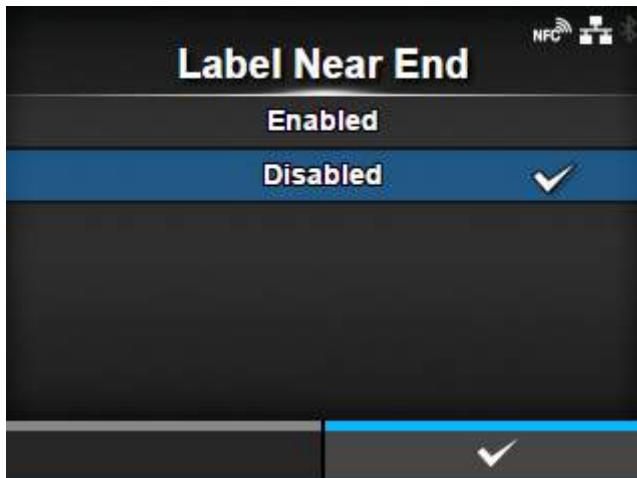

Shows or does not show the warning icon when the media is about to run out. Printing does not stop even if the warning icon shows up.

The options are as follows:

Enabled

Shows the warning icon.

Disabled


Does not show the warning icon.



- This feature is supported on products from serial number 6B~ and above. Although this setting appears on products with serial number 6A~ or below, it is not supported.
- The warning icon is shown in the status bar on the upper part of the screen.



[Interface] Menu

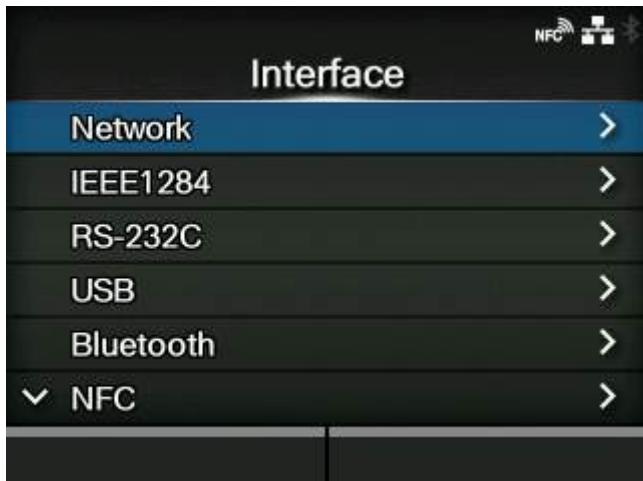

The following settings are available in the [Interface] menu:

Network

Set the LAN connection and wireless LAN connection.

IEEE1284

Set the IEEE1284 connection.

- Appears only if the combo interface board is installed.

RS-232C

Set the RS-232C connection.

- Appears only if the combo interface board is installed.

USB

Set the USB connection.

Bluetooth

Set the Bluetooth connection.

NFC

Set the NFC connection.

*This feature is supported on products from serial number 6B~ and above.

Ignore CR/LF

Set to ignore CR/LF codes.

Ignore CAN/DLE

Set to ignore CAN/DLE codes.

External I/O

Set the external signal (EXT).


- Appears only if the combo interface board is installed.

RFID (CL4NX only)

Set the RFID.

- Appears only for the RFID model.

[Network]

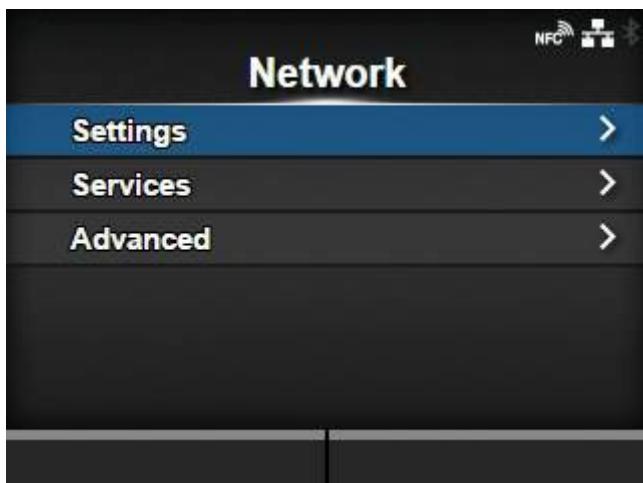

This menu is for using LAN and wireless LAN for the interface between the computer and the product.

The setting items are as follows:

Settings

Set LAN or wireless LAN, or select an interface.


Services

Set the TCP/IP port number, NTP, LPD, FTP, SNMP, or SOS (SATO Online Services).

Advanced

Set the advanced function for the interface.

[Settings]

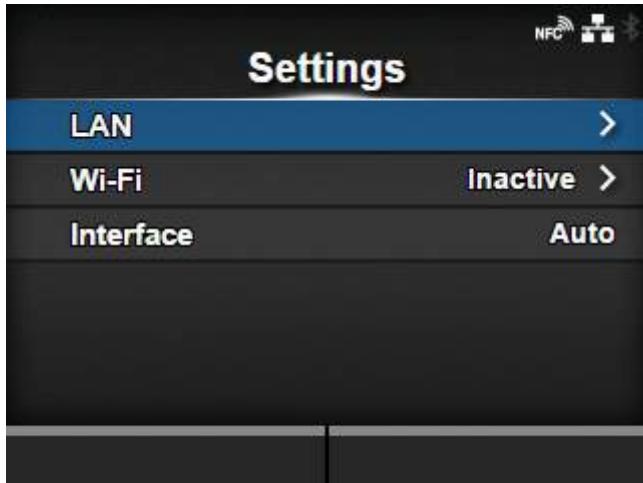

Set the LAN or wireless LAN, or select the interface.

The setting items are as follows:

LAN

Set the LAN.

Wi-Fi

Set the wireless LAN.

- Appears only if you have installed the optional wireless LAN.

Interface


Select the network interface.

- This item is to select the network interface from LAN or wireless LAN when you have installed the optional wireless LAN.



- You cannot use LAN and wireless LAN at the same time. The wireless LAN function is available only if you have installed the wireless LAN.

[LAN]

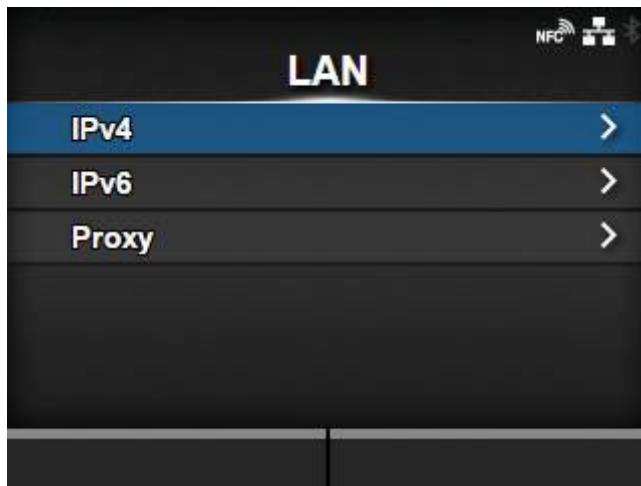

Set the IPv4, IPv6 or proxy for the LAN.

The setting items are as follows:

IPv4

Set the IPv4 for the LAN.


IPv6

Set the IPv6 for the LAN.

Proxy

Set the proxy for the LAN.

[IPv4]

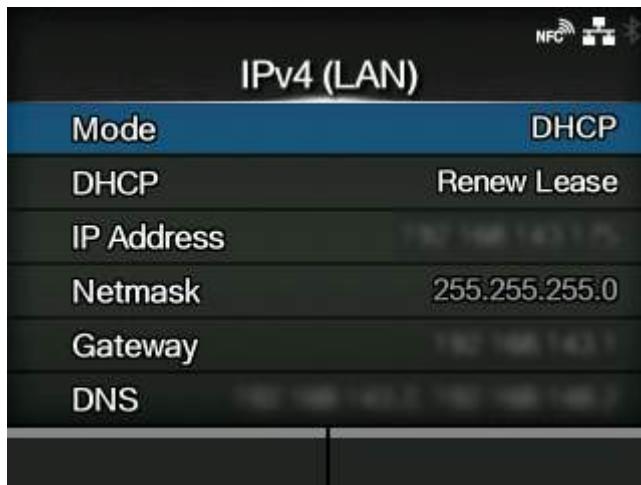

Set IPv4 for the LAN.

The setting items are as follows:

Mode

Select the IP address assignment method.

DHCP / Renew Lease

Update the lease time and get the IP address from the DHCP server again.

- Appears only if you have selected [DHCP] in the [Mode] menu and LAN is the active interface.
- Does not appear if the wireless LAN is the active interface.

IP Address

Set and check the IP address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the IP address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select this to set the IP address.

Netmask

Set and check the subnet mask address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the subnet mask address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select this to set the subnet mask address.

Gateway

Set and check the default gateway address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the gateway address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select this to set the default gateway address.

DNS

Set and check DNS server addresses.

If you have selected [Static] in the [Mode] menu, select this to set and check DNS server addresses.




- After doing the settings, press the button to enable the new settings. Press the button to cancel the new settings and return to the previous settings.



- You cannot change [IP Address], [Netmask], [Gateway], or [DNS] when [Mode] is [DHCP].

[Mode]

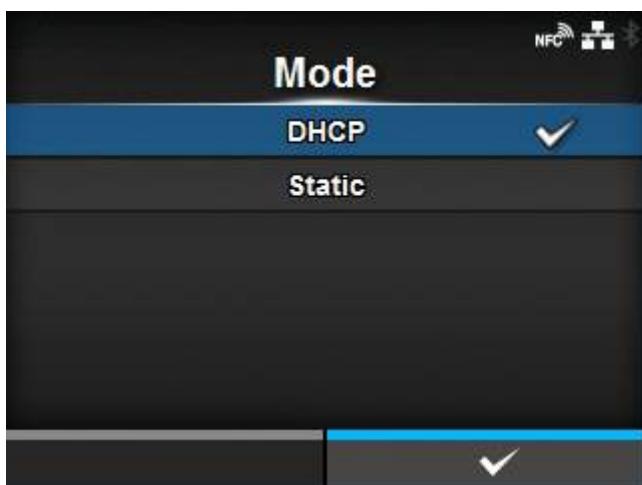

Select the IP address assignment method.

The options are as follows:

DHCP

Automatically retrieve the IP address, gateway and subnet mask from the DHCP server.

Static

Manually set the IP address, gateway and subnet mask.

[IP Address]




If you have selected [Static] in the [Mode] menu, set the IP address.

The setting range is as follows:

000.000.000.000 to 255.255.255.255

[Netmask]

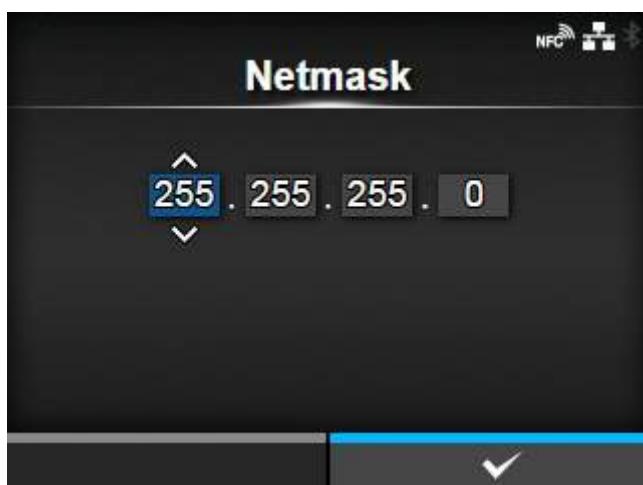


If you have selected [Static] in the [Mode] menu, set the subnet mask address.

Each group of the address can be set cyclically among 0, 128, 192, 224, 240, 248, 252, 254 and 255.

The setting range is as follows:

128.000.000.000 to 255.255.255.254

[Gateway]

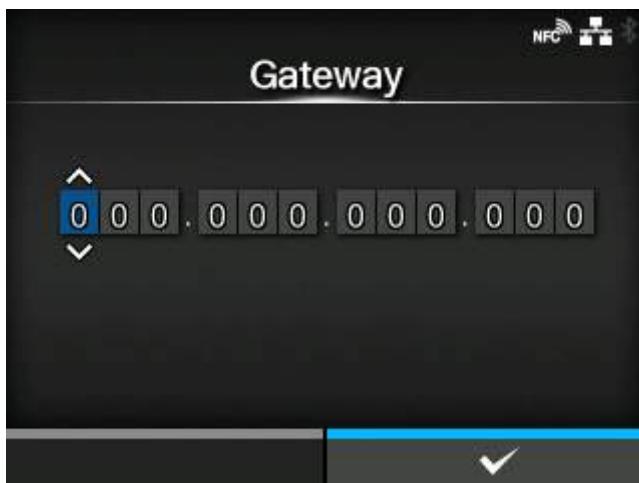


If you have selected [Static] in the [Mode] menu, set the default gateway address.

The setting range is as follows:

000.000.000.000 to 255.255.255.255

[DNS]

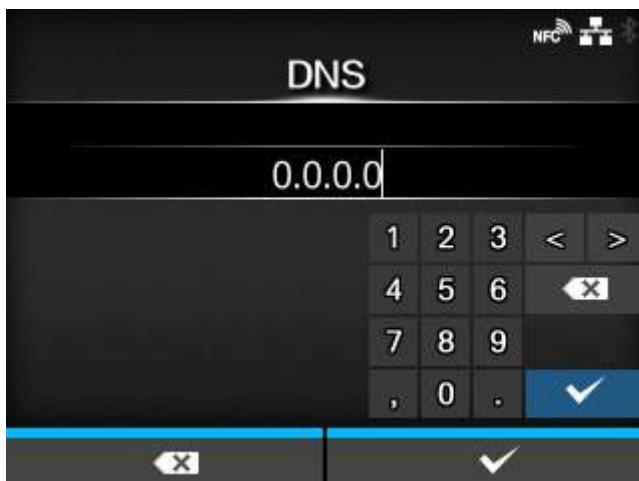

If you have selected [Static] in the [Mode] menu, set and check DNS server addresses.


The setting range is as follows:

000.000.000.000 to 255.255.255.255



- You can register up to three IP addresses for the DNS server. Use a comma to delimit different IP addresses.

[IPv6]

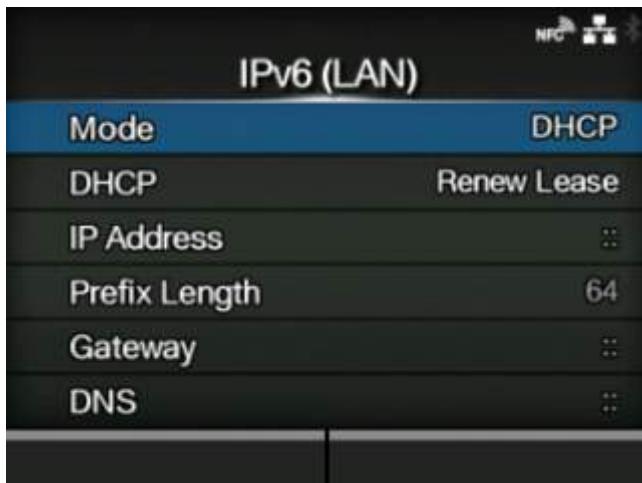

Set the IPv6 for the LAN.

The setting items are as follows:

Mode

Select the IP address assignment method or disable IPv6.

DHCP / Renew Lease

Update the lease time and get the IP address from the DHCP server again.

- Appears only if you have selected [DHCP] in the [Mode] menu.
- Does not appear if the wireless LAN is the active interface.

IP Address

Set and check the IP address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the IP address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select this to set the IP address.

Prefix Length

Set and check the prefix.

Gateway

Set and check the default gateway address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the gateway address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select this to set the default gateway address.

DNS


Set and check the address of the primary DNS server.

If you have selected [Static] in the [Mode] menu, select to set the primary address of the DNS server.

-  • After doing the settings, press the  button to enable the new settings. Press the  button to cancel the new settings and return to the previous settings.

-  • You cannot change [IP Address], [Prefix Length], [Gateway], or [DNS] if [Mode] is anything other than [Static].

[Mode]

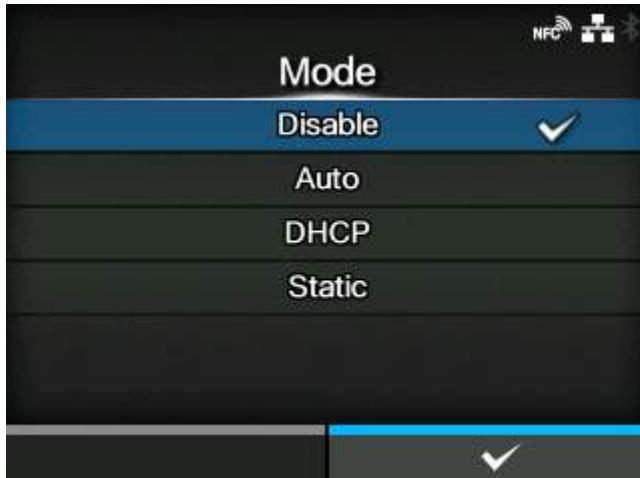

Select the IP address assignment method or disable IPv6.

The options are as follows:

Disable

Disable IPv6.

Auto

Automatically generate the IP address and gateway (stateless mode).

DHCP

Automatically retrieve the IP address and gateway from the DHCP server (stateful mode).

Static

Manually set the IP address, gateway and prefix length.

[IP Address]



If you have selected [Static] in the [Mode] menu, set the IP address.

The setting range is as follows:


0:0:0:0:0:0:1 to ffff:ffff:ffff:ffff:ffff:ffff:ffff

[Prefix Length]



If you have selected [Static] in the [Mode] menu, set the prefix.


The setting range is from 1 to 128.

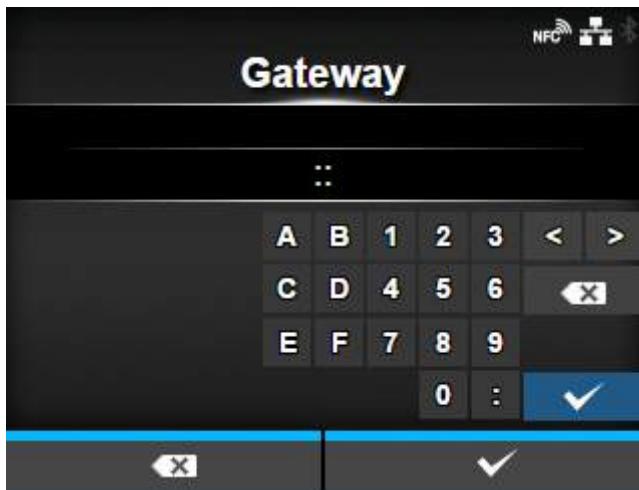[\[Gateway\]](#)

If you have selected [Static] in the [Mode] menu, set the default gateway address.

The setting range is as follows:

0:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff:ffff

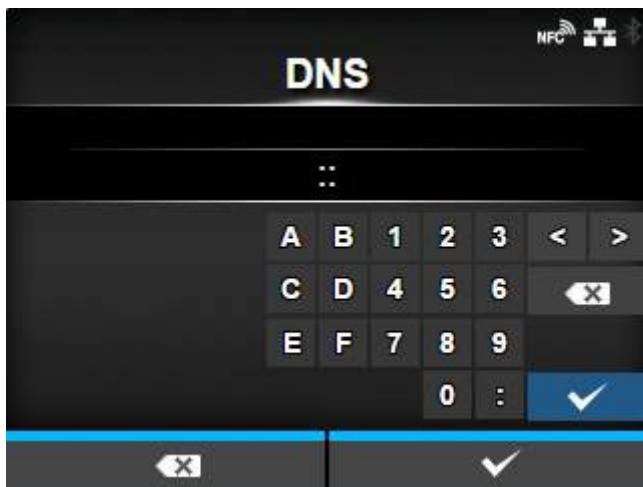[\[DNS\]](#)

If you have selected [Static] in the [Mode] menu, set the primary address of the DNS server.


The setting range is as follows:

0:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff:ffff



- You can register only one IP address for the DNS server for IPv6.

[Proxy]

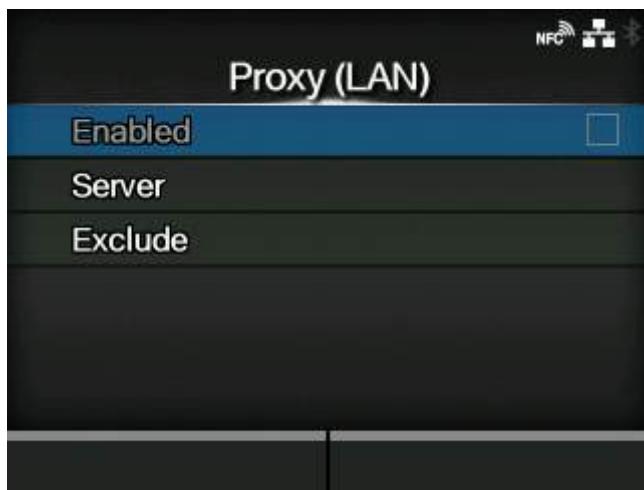

Set the proxy for the LAN.

The setting items are as follows:

Enabled

Enable or disable use of proxy.


Server

Set the proxy server address.

Exclude

Exclude the proxy from usage.

[Enabled]

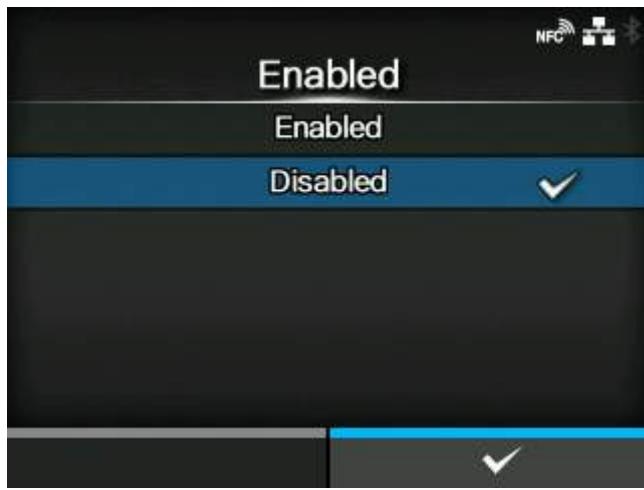

Enable or disable use of proxy.

The options are as follows:

Enabled

Enable proxy server usage.

Disabled

Disable proxy server usage.



- To enable the proxy, [Server] should be set and [Exclude] must contain at least 127.0.0.1 and localhost.


[Server]

Set the name or IP address of the proxy server.

Example of input) 172.128.1.100:8080



- Server should be set with a valid name or IP address and port number.
- Separate the IP address and port number with a colon (:).

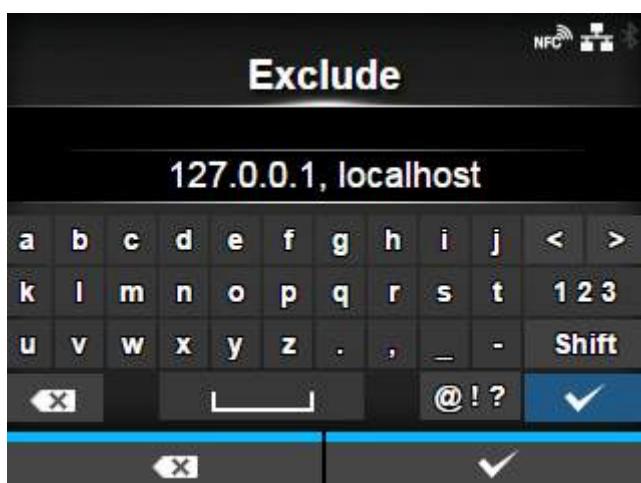
[Exclude]

Set names, IP addresses or domains for the proxy to exclude.



- Exclude must contain at least 127.0.0.1 and localhost.

[Wi-Fi]

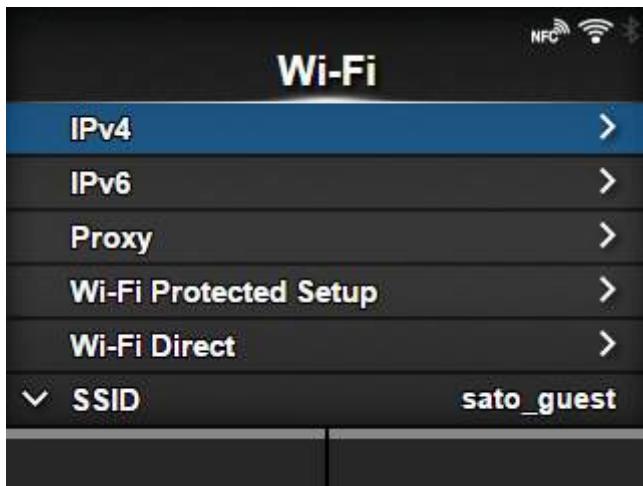

Set the wireless LAN.

Appears only if you have installed the optional wireless LAN.

The setting items are as follows:

IPv4

Configure IPv4 for Wi-Fi.

IPv6

Configure IPv6 for Wi-Fi.

Proxy

Configure the proxy for Wi-Fi.

Wi-Fi Protected Setup

Set the wireless LAN connection with the Wi-Fi Protected Setup (WPS) function.

Wi-Fi Direct

Set the Wi-Fi Direct function.

- Enabled only if you have selected [Infrastructure] in the [Mode] menu.

SSID

Set the SSID.

Hidden SSID

Set the hidden SSID.

- Appears only if you have selected [Infrastructure] in the [Mode] menu.

Mode

Set the communication mode.

Channel

Set the communication channel.

Security

Set the security (encryption method).

[WEP Conf.](#)

Set the WEP key.

- Appears only if you have selected [WEP] in the [Security] menu.

[WPA Conf.](#)

Set the WPA authentication.

- Appears only if you have selected [WPA2/WPA] or [WPA2] in the [Security] menu.

[EAP Conf.](#)

Set the EAP authentication.


- Appears only if you have selected [Dynamic WEP] in the [Security] menu.



- After doing the settings, press the button to enable the new settings. Press the button to cancel the new settings and return to the previous settings.



- When [Wi-Fi Direct] is active, [IPv6] and [Wi-Fi Protected Setup] do not appear on the screen.

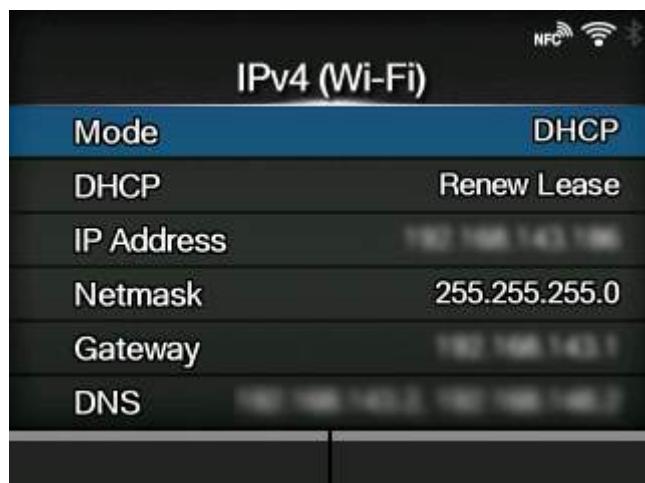[\[IPv4\]](#)

Configure IPv4 for Wi-Fi.

The setting items are as follows:

[Mode](#)

Select the IP address assignment method.

[DHCP / Renew Lease](#)

Update the lease time and get the IP address from the DHCP server again.

- Appears only if you have selected [DHCP] in the [Mode] menu.
- Does not appear if LAN is the active interface.

IP Address

Set and check the IP address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the IP address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select to set the IP address.

Netmask

Set and check the subnet mask address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the subnet mask address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select to set the subnet mask address.

Gateway

Set and check the default gateway address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the gateway address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select to set the default gateway address.

DNS

Set and check DNS server addresses.

If you have selected [Static] in the [Mode] menu, select to set and check DNS server addresses.




- After doing the settings, return to the [Wi-Fi] screen by pressing the button, and then press the button to enable the new settings. Press the button to cancel the new settings and return to the previous settings.



- When [Wi-Fi Direct] is active, [Mode], [DHCP] and [DNS] do not appear. In addition, you cannot change [IP Address], [Netmask], or [Gateway] if [DHCP] or [Wi-Fi Direct] is active. [DNS] cannot be changed if [Mode] is [DHCP].

[Mode]

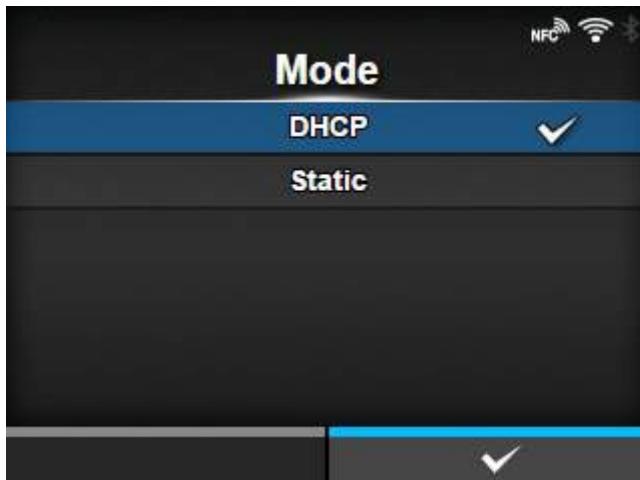

Select the IP address assignment method.

The options are as follows:

DHCP

Automatically retrieve the IP address, gateway and subnet mask from the DHCP server.

Static


Manually set the IP address, gateway and subnet mask.

[\[IP Address\]](#)

If you have selected [Static] in the [Mode] menu, set the IP address.

The setting range is as follows:

000.000.000.000 to 255.255.255.255

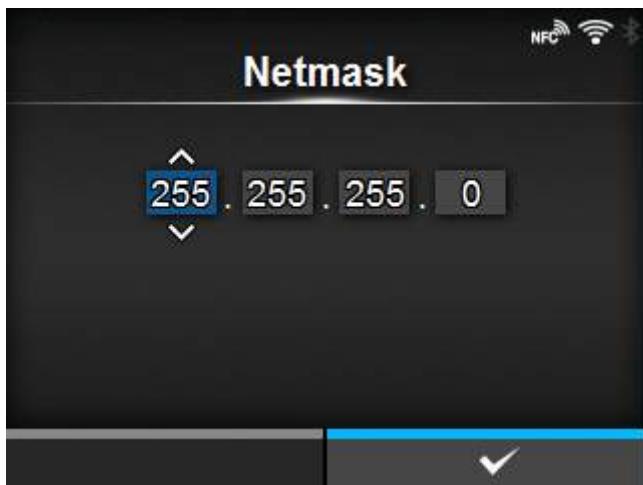[\[Netmask\]](#)


If you have selected [Static] in the [Mode] menu, set the subnet mask address.

Each group of the address can be set cyclically among 0, 128, 192, 224, 240, 248, 252, 254 and 255.

The setting range is as follows:

128.000.000.000 to 255.255.255.254

[Gateway]

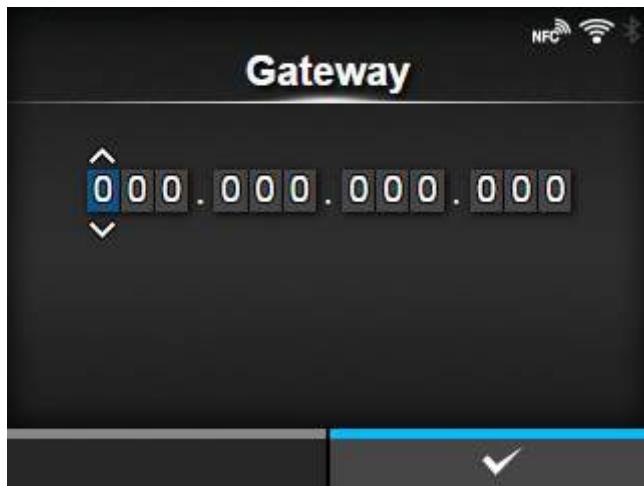


If you have selected [Static] in the [Mode] menu, set the default gateway address.

The setting range is as follows:

000.000.000.000 to 255.255.255.255

[DNS]

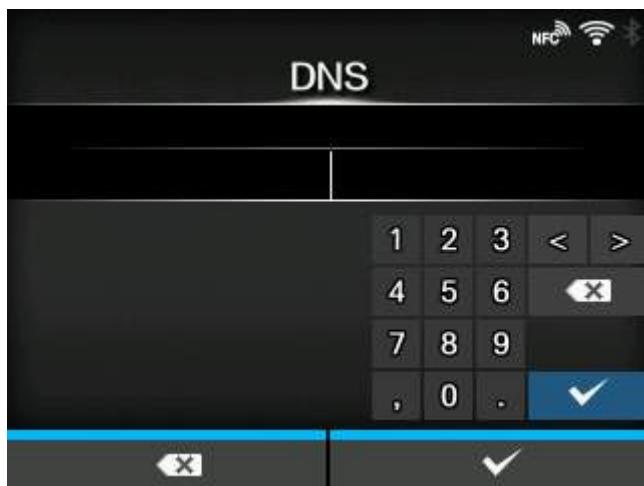


If you have selected [Static] in the [Mode] menu, set and check DNS server addresses.

The setting range is as follows:

000.000.000.000 to 255.255.255.255



- You can register up to three IP addresses for the DNS server. Use a comma to delimit different IP addresses.

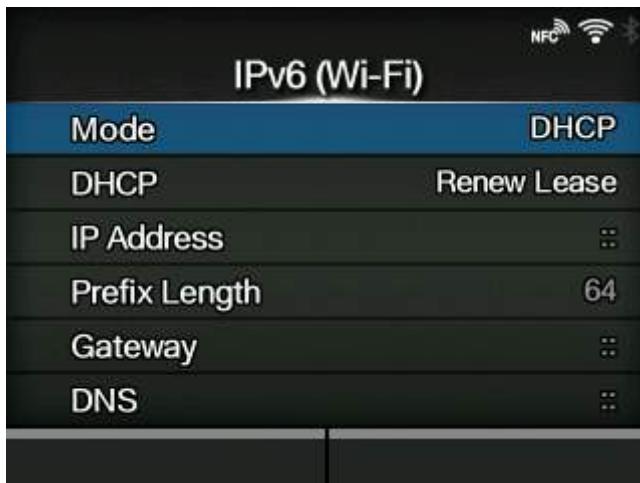[IPv6]

Configure IPv6 for Wi-Fi.

The setting items are as follows:

Mode

Select the IP address assignment method or disable IPv6.

DHCP / Renew Lease

Update the lease time and get the IP address from the DHCP server again.

- Appears only if you have selected [DHCP] in the [Mode] menu.
- Does not appear if LAN is the active interface.

IP Address

Set and check the IP address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the IP address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select to set the IP address.

Prefix Length

Set and check the prefix.

Gateway

Set and check the default gateway address.

If you have selected [DHCP] in the [Mode] menu, the screen shows the gateway address you received from the DHCP server.

If you have selected [Static] in the [Mode] menu, select to set the default gateway address.

DNS

Set and check the address of the primary DNS server.

If you have selected [Static] in the [Mode] menu, select to set the primary address of the DNS server.




- After doing the settings, return to the [Wi-Fi] screen by pressing the button, and then press the button to enable the new settings. Press the button to cancel the new settings and return to the previous settings.



- When [Wi-Fi Direct] is active, this [IPv6] screen does not appear. In addition, you cannot change [IP Address], [Prefix Length], [Gateway], or [DNS] if [Mode] is anything other than [Static].

[Mode]

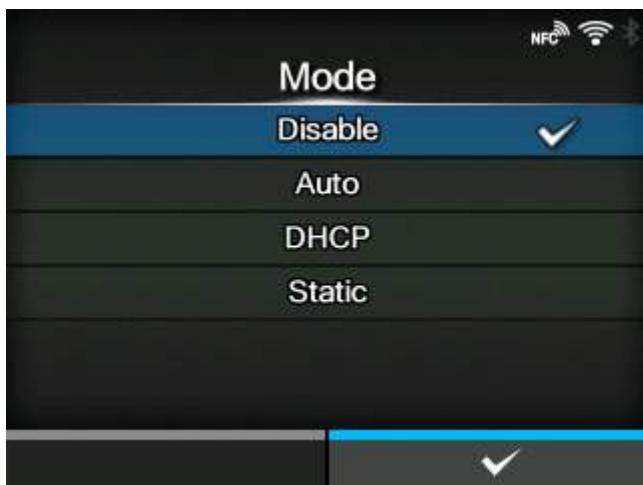

Select the IP address assignment method or disable IPv6.

The options are as follows:

Disable

Disable IPv6.

Auto

Automatically generate the IP address and gateway (stateless mode).

DHCP

Automatically retrieve the IP address and gateway from the DHCP server (stateful mode).

Static


Manually set the IP address, gateway and prefix length.

[IP Address]

If you have selected [Static] in the [Mode] menu, set the IP address.

The setting range is as follows:


0:0:0:0:0:0:1 to ffff:ffff:ffff:ffff:ffff:ffff:ffff

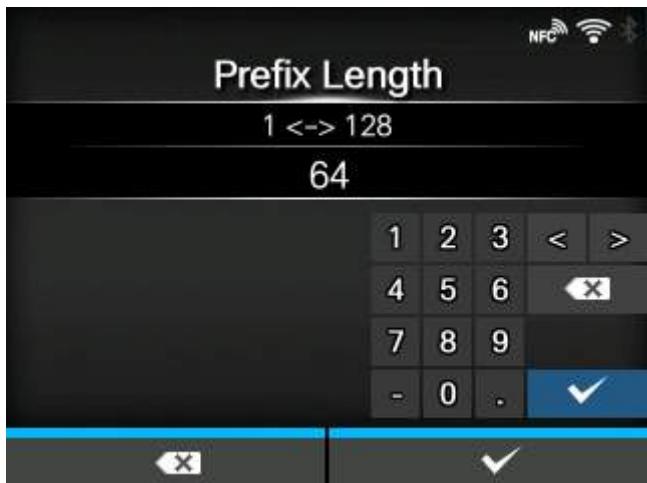[Prefix Length]

If you have selected [Static] in the [Mode] menu, set the prefix.

The setting range is from 1 to 128.

[Gateway]

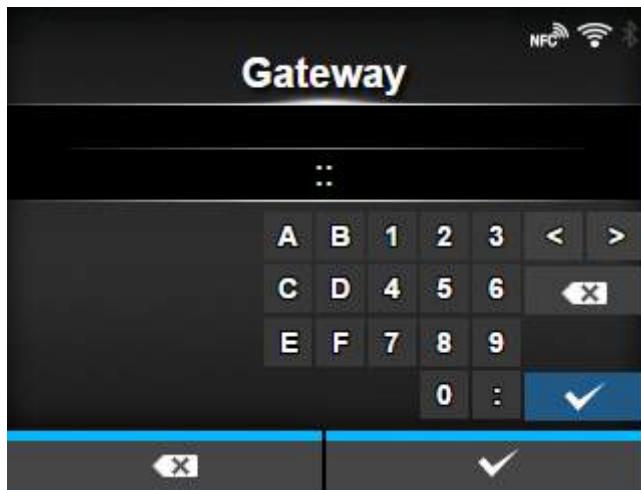


If you have selected [Static] in the [Mode] menu, set the default gateway address.

The setting range is as follows:

0:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff:ffff

[DNS]

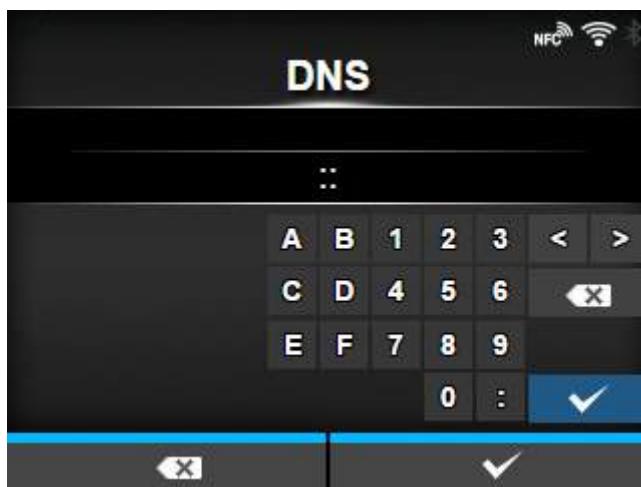


If you have selected [Static] in the [Mode] menu, set the primary address of the DNS server.

The setting range is as follows:

0:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff:ffff



- You can register only one IP address for the DNS server for IPv6.

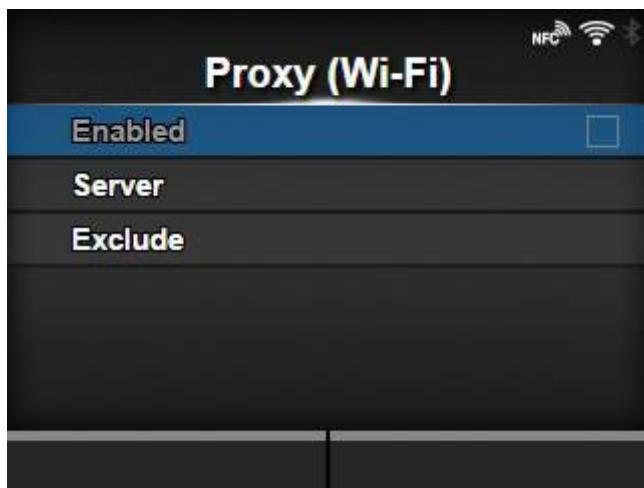[\[Proxy\]](#)

Configure the proxy for Wi-Fi.

The setting items are as follows:

Enabled


Enable or disable use of proxy.

Server

Set the proxy server address.

Exclude

Exclude the proxy from usage.

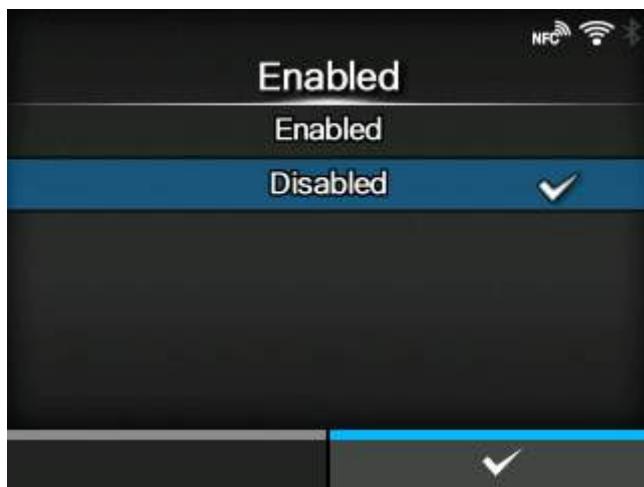[\[Enabled\]](#)

Enable or disable use of proxy.

The options are as follows:

Enabled

Enable proxy server usage.

Disabled

Disable proxy server usage.



- To enable the proxy, [Server] should be set and [Exclude] must contain at least 127.0.0.1 and localhost.

[Server]




Set the name or IP address of the proxy server.

Example of input) 172.128.1.100:8080



- Server should be set with a valid name or IP address and port number.
- Separate the IP address and port number with a colon (:).

[Exclude]

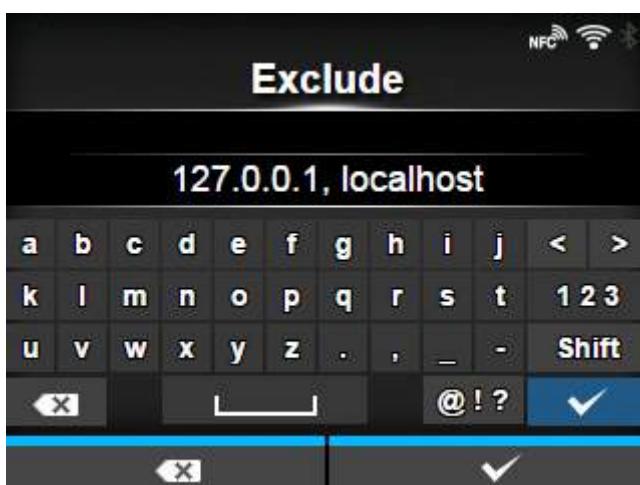


Set names, IP addresses or domains for the proxy to exclude.



- Exclude must contain at least 127.0.0.1 and localhost.

[Wi-Fi Protected Setup]

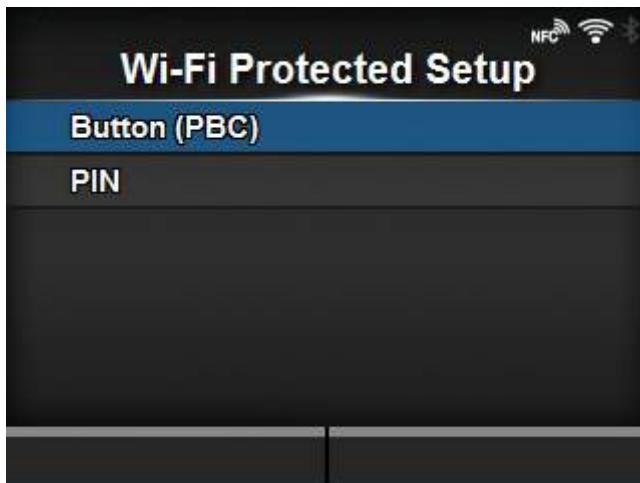

Set the wireless LAN connection using the push button or PIN code method.

The setting items are as follows:

Button (PBC)

Set the wireless LAN connection using the push button method.


PIN

Set the wireless LAN connection using the PIN code method.



- Refer to the manual of the access point device for its operation.
- This screen does not appear if [LAN] or [Wi-Fi Direct] is active.


[Button (PBC)]

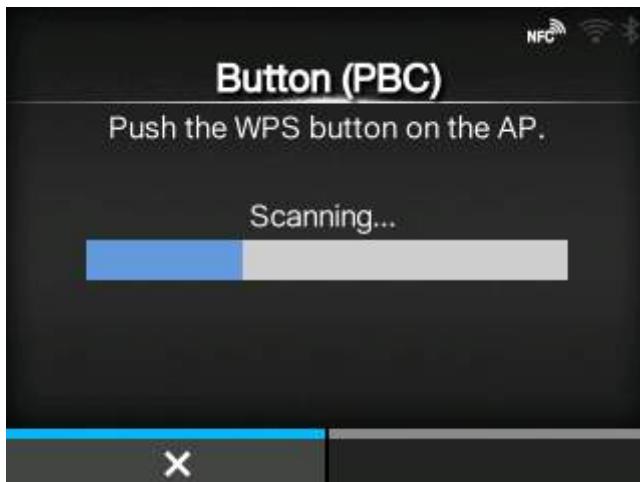


Set the wireless LAN connection using the push button method.

1. Select [Button (PBC)] in the [Wi-Fi Protected Setup] menu and press the button.
2. When [Scanning...] appears on the screen, press the WPS button on the access point of the wireless LAN device.

- When the connection to the access point is established, [Successfully configured.] appears on the screen.

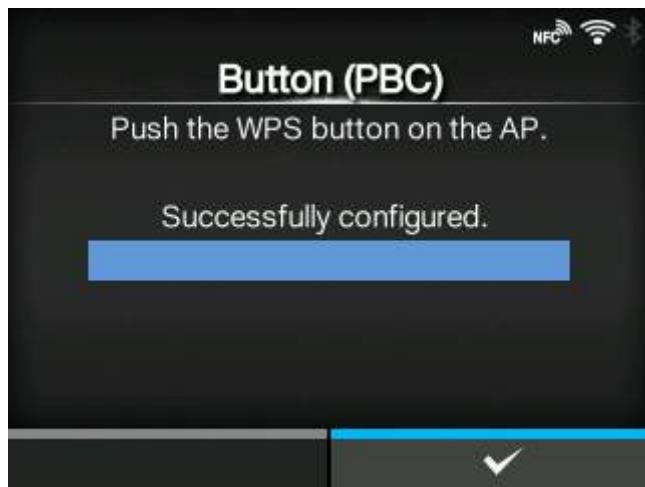


[PIN]

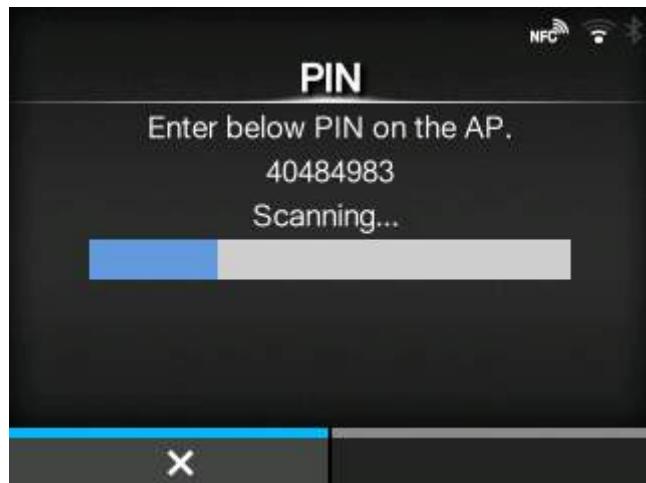

Set the wireless LAN connection using the PIN code method.

- Select [PIN] in the [Wi-Fi Protected Setup] menu and press the button.
- When [Scanning...] appears on the screen, set the PIN code shown on the screen to the access point of the wireless LAN or computer.

3. When the connection to the access point is established, [Successfully configured.] appears on the screen.

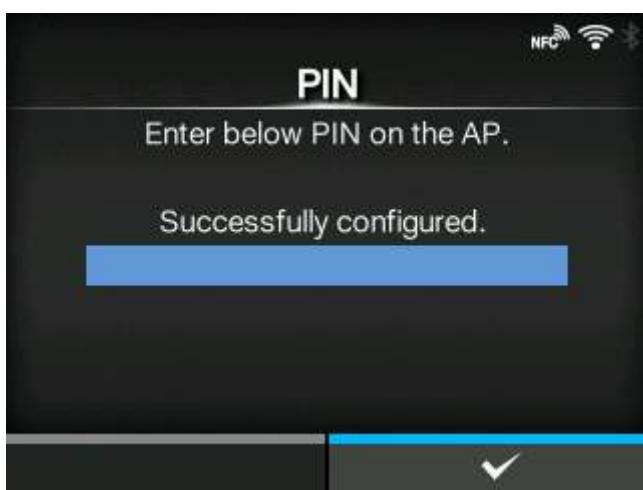

[Wi-Fi Direct]

Connect without group



Connect with group



Set the Wi-Fi Direct function.


The Wi-Fi Direct function is enabled if you have selected [Infrastructure] in the [Mode] menu. If you have changed the setting from [Ad-hoc] to [Infrastructure] in the [Mode] menu, reboot the product before setting the Wi-Fi Direct function.

The setting procedure is as follows:

1. Set the device name for the product using [Device Name]. You can enter 1 to 32 characters. Alphabets (capital and small letters), numbers and symbols can be used. Press the  button to return to the [Wi-Fi] menu and press the  button to enable changes.
2. Select [Connect] to search and show the connectable device names or to accept connection requests when the product is the GO (Group Owner). Select the device name you want to connect using the  /  buttons, and press the  button.
3. Select [Start Group] if you want to start a new persistent group or select a group from the list.



4. Select [Remove Group] to remove the persistent group in step 3.

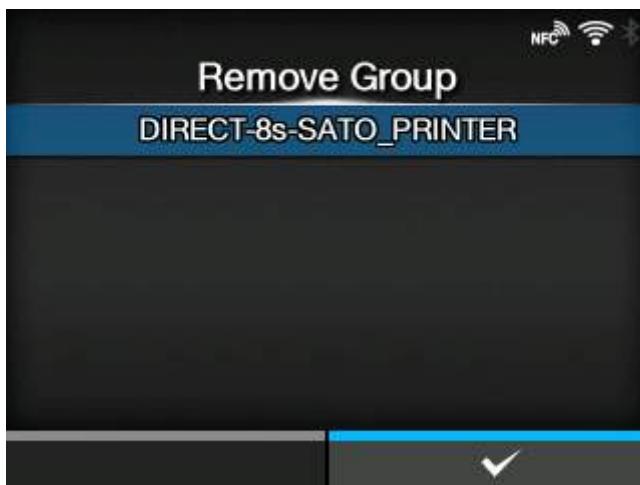

5. Complete the connection according to the display on the product or device you want to connect.
6. Select [Disconnect] if you want to stop the connection.



- You can connect a maximum of 10 devices.
- When Wi-Fi Direct is active, [Device Name] cannot be changed.
- [Start Group] and [Remove Group] are shown only if Wi-Fi is active and the product is not connected to a Wi-Fi Direct network.
- [Remove Group] is shown if Wi-Fi is active and the product is connected.
- After setting up a start group, the product will be set to the GO (Group Owner) and will wait for a connection request from another device.
- If the product is powered off during a persistent group connection, the group will be started automatically after the product is powered on.

[SSID]

Set the SSID.

The screen shows the Wi-Fi network detected by the product.


Select the name of the Wi-Fi network you want to connect using the / buttons and press the button to confirm.

To register a Wi-Fi network manually, press the button and enter the name of the network.

You can enter a maximum of 32 characters. Alphabets (capital and small letters), numbers and symbols can be used.



[Hidden SSID]

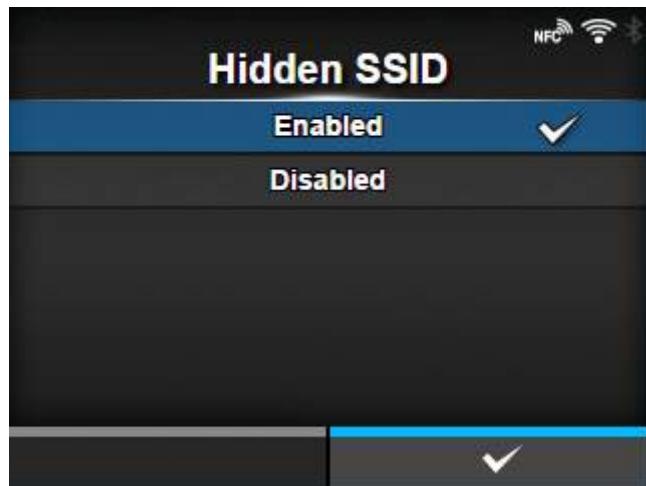

Set the hidden SSID (stealth function).

Appears if you have selected [Infrastructure] in the [Mode] menu.

The options are as follows:


Enabled

Enable the hidden SSID.

Disabled

Disable the hidden SSID.

[Mode]

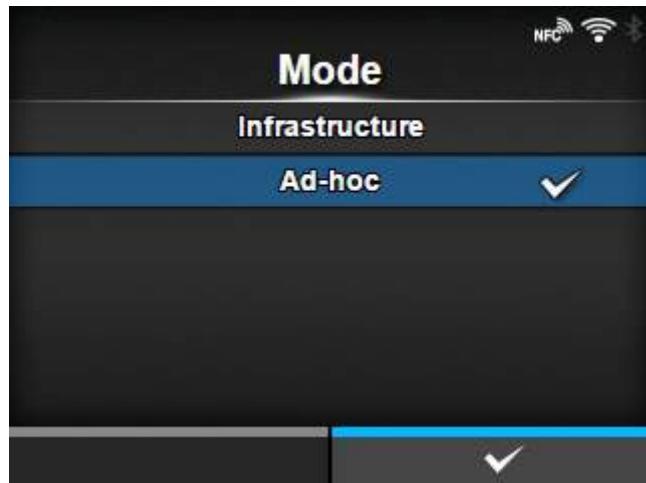

Set the communication method of the wireless LAN.

The options are as follows:

- [Infrastructure]
- [Ad-hoc]

[Channel]




Set the communication channel.

[Channel] can be set only if you have selected [Ad-hoc] in the [Mode] menu.

The number of channels you can set varies depending on the region of the product.

[Security]

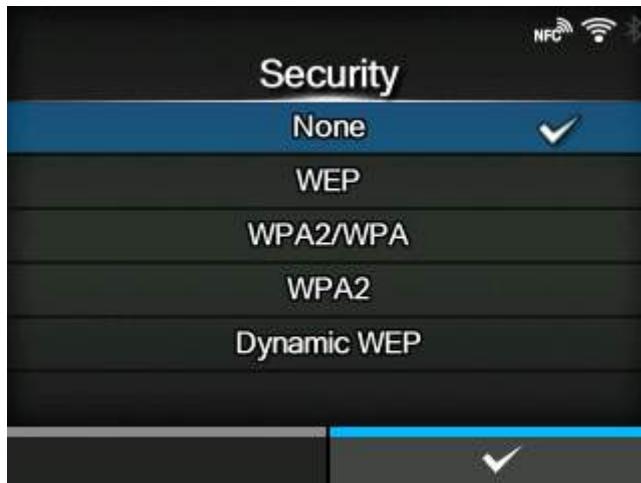


Set the security method of the network. Set the security methods so that the product, host and network devices match.

The options are as follows:

- [None]
- [WEP]
- [WPA2/WPA]
- [WPA2]
- [Dynamic WEP]

If you have selected [Ad-hoc] in the [Mode] menu, only [None] and [WEP] will be available.

[WEP Conf.]

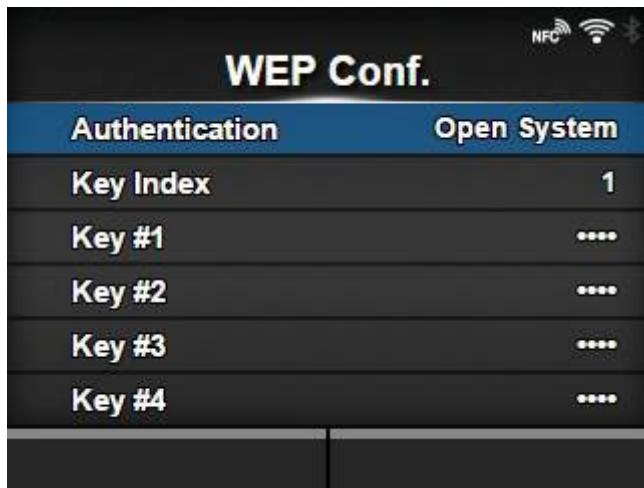

Set the WEP key.

Appears if you have selected [WEP] in the [Security] menu.

The setting items are as follows:

Authentication

Set the WEP authentication method.

Key Index

Set the key index.

Key #1 to Key #4

Set the WEP key1 - key4.


[Authentication]



Set the WEP authentication method.

The options are as follows:

- [Open System]
- [Shared Key]

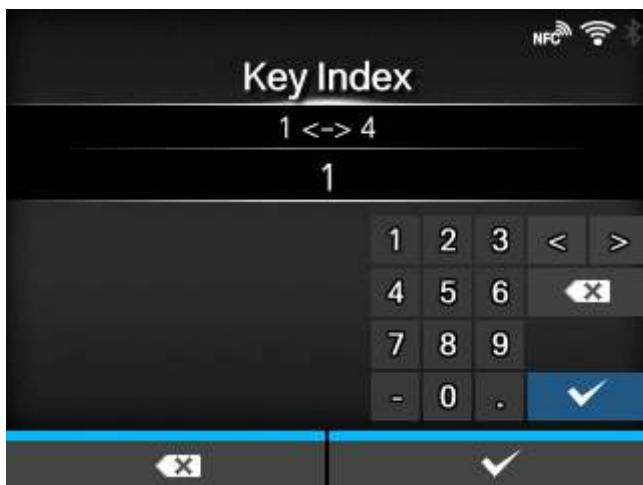[\[Key Index\]](#)

Set the key index.

Set the key index (WEP key) according to the access point of the wireless LAN you connect.

The setting range is from 1 to 4.



- Depending on the connecting device, the range of the key index may be 0 to 3. In such a case, if you have set the product to 1, set the connecting device to 0.

[\[Key #1\] to \[Key #4\]](#)

Set the WEP key #1 - key #4.

You can enter alphabets (capital and small letters) and numbers.

Depending on the length of the WEP key, the number of characters you can set is as follows:

- When the key length is 64 bits
 - ASCII: Five characters
 - Hexadecimal: 10 characters
- When the key length is 128 bits
 - ASCII: Thirteen characters
 - Hexadecimal: 26 characters

[WPA Conf.]



Set the WPA authentication.

Appears only if you have selected [WPA2/WPA] or [WPA2] in the [Security] menu.

The setting items are as follows:

WPA Authentication

Set the WPA authentication method.

PSK

Set the PSK shared key.

- Appears only if you have selected [Personal (PSK)] in the [WPA Authentication] menu.

EAP Conf.

Set the functions for EAP.

- Appears only if you have selected items other than [Personal (PSK)] in the [WPA Authentication] menu.

[WPA Authentication]



Set the WPA authentication method.

The options are as follows:

- [Personal (PSK)]
- [Enterprise (802.1x)]
- [CCKM]

[PSK]




Set the PSK shared key.

Appears only if you have selected [Personal (PSK)] in the [WPA Authentication] menu.

You can enter 8 to 63 ASCII characters or 64 hexadecimal digits. Alphabets, numbers and symbols can be used.

[EAP Conf.]

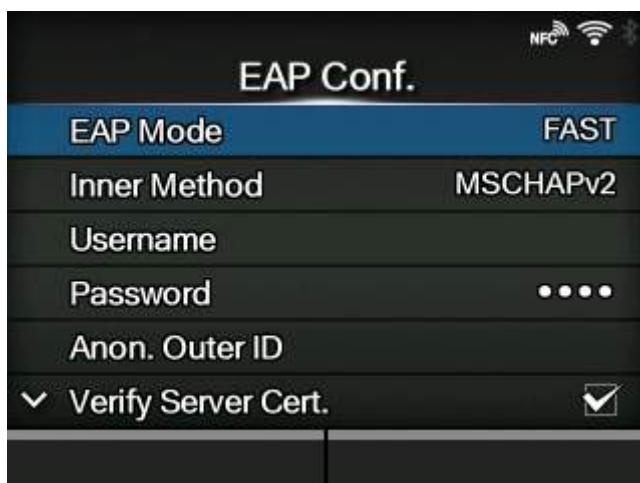

Set the functions for EAP.

Appears only if you have selected items other than [Personal (PSK)] in the [WPA Authentication] menu or if you have selected [Dynamic WEP] in the [Security] menu.

The setting items are as follows:

EAP Mode

Set the EAP Mode (authentication mode).

Inner Method

Set the inner method.

- Appears only if you have selected [FAST], [PEAP], or [TLS] in the [EAP Mode] menu.

Username

Set the user name.

Password

Set the password.

Anon. Outer ID

Set the external ID.

- Appears only if you have selected [FAST], [PEAP], or [TLS] in the [EAP Mode] menu.

Verify Server Cert.

Enable or disable server authentication.

- Appears if you have selected anything other than [LEAP] in the [EAP Mode] menu.

Private Key P/W

Set the Private Key password.

- Appears only if you have selected [TLS] in either the [EAP Mode] menu or [Inner Method] menu.

PAC Auto Provisioning


Enable or disable PAC Auto Provisioning.

- Appears only if you have selected [FAST] in the [EAP Mode] menu.

PAC P/W

Set the PAC password.


- Appears only if you have selected [FAST] in the [EAP Mode] menu and if you have selected [Disabled] in [PAC Auto Provisioning].

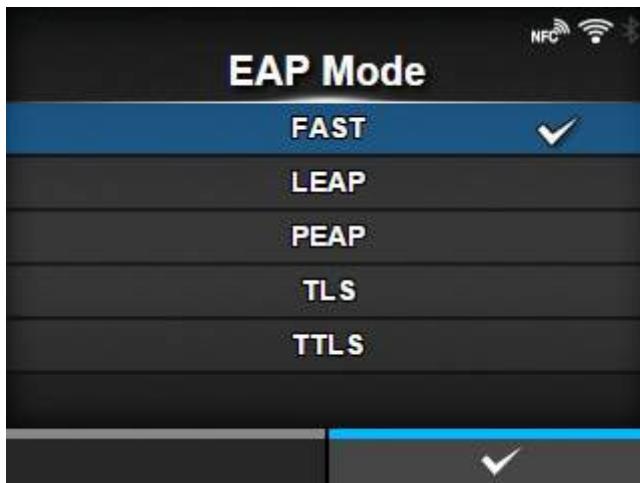[EAP Mode]

Set the EAP Mode (authentication mode).

The options are as follows:

- [FAST]
- [LEAP]
- [PEAP]
- [TLS]
- [TTLS]

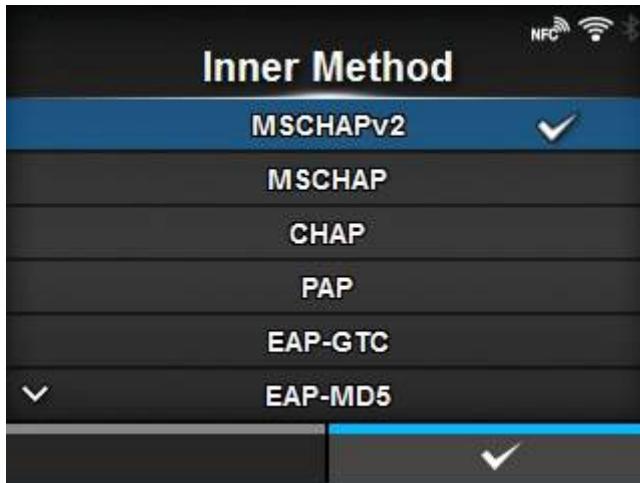
[Inner Method]

Set the inner method.

Appears only if you have selected [FAST], [PEAP], or [TTLS] in the [EAP Mode] menu.

- If you have selected [FAST] in the [EAP Mode] menu, the options are [MSCHAPv2], [GTC], and [TLS].
- If you have selected [PEAP] in the [EAP Mode] menu, the options are [MSCHAPv2], [GTC], [MD5], [OTP], and [TLS].
- If you have selected [TTLS] in the [EAP Mode] menu, the options are [MSCHAPv2], [MSCHAP], [CHAP], [PAP], [EAP-GTC], [EAP-MD5], [EAP-MSCHAPV2], [EAP-OTP], and [EAP-TLS].

[Username]

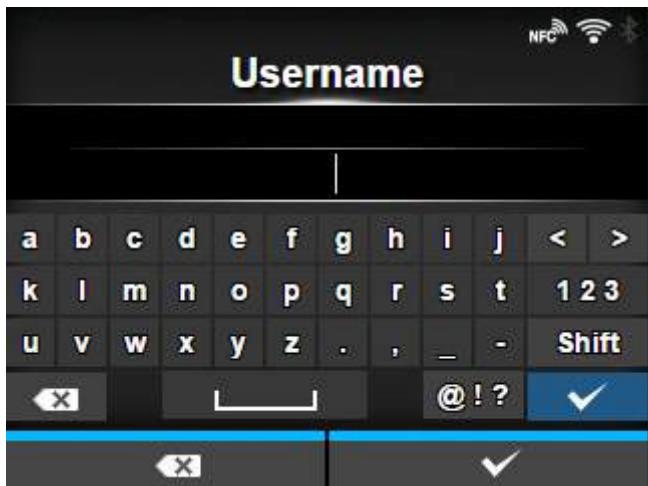

Set the user name.


You can enter 0 to 63 characters. Alphabets, numbers and symbols can be used.

[Password]



Set the password.


You can enter 0 to 32 characters. Alphabets, numbers and symbols can be used.

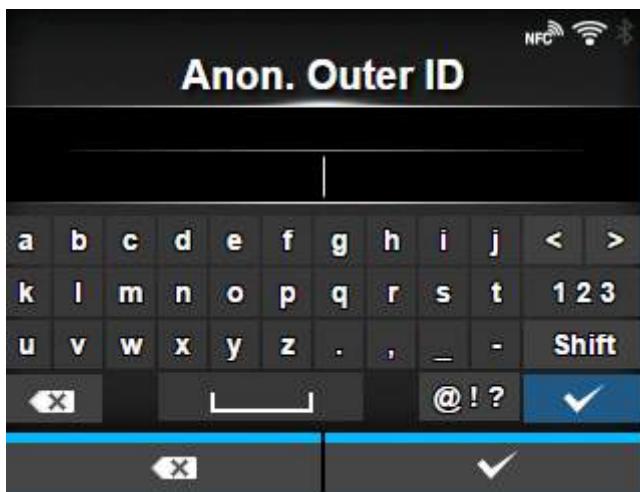[\[Anon. Outer ID\]](#)

Set the external ID.

Appears if you have selected [FAST], [PEAP], or [TTLS] in the [EAP Mode] menu.

You can enter 0 to 63 characters. Alphabets, numbers and symbols can be used.

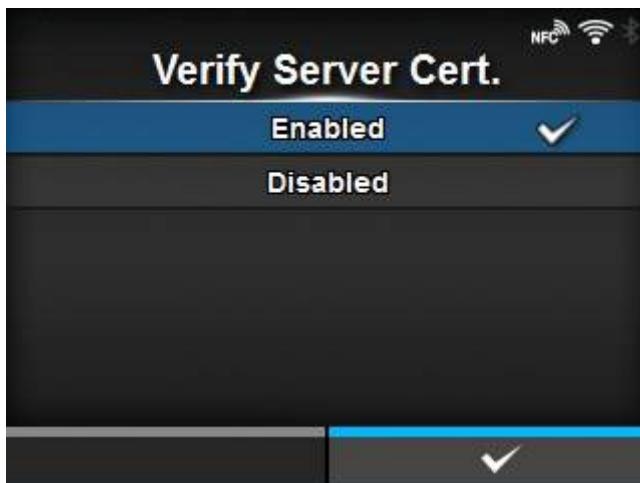[\[Verify Server Cert.\]](#)

Enable or disable server certificate validation.

Appears if you have selected anything other than [LEAP] in the [EAP Mode] menu.

The options are as follows:

Enabled

Enable server certificate validation.

Disabled

Disable server certificate validation.

[Private Key P/W]




Set the Private Key password.

Appears only if you have selected [TLS] in either the [EAP Mode] menu or [Inner Method] menu.

You can enter 0 to 64 characters. Alphabets, numbers and symbols can be used.

[PAC Auto Provisioning]

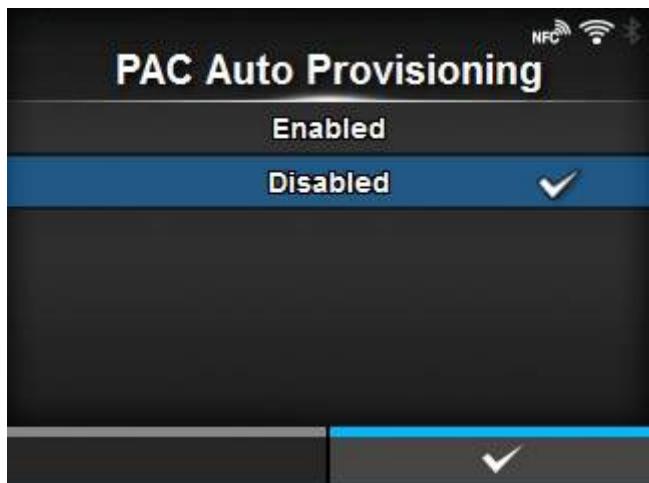

Enable or disable PAC auto provisioning.

Appears if you have selected [FAST] in the [EAP Mode] menu.


The options are as follows:

Enabled

Enable PAC auto provisioning.

Disabled


Disable PAC auto provisioning.

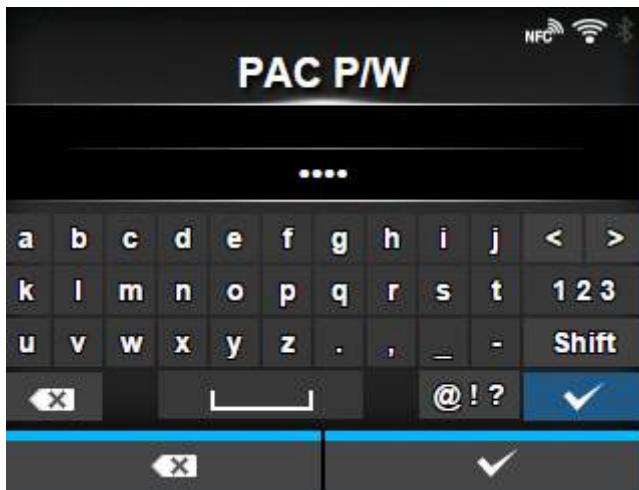[PAC P/W]

Set the PAC password.

Appears only if you have selected [FAST] in the [EAP Mode] menu and if you have selected [Disabled] in [PAC Auto Provisioning].

You can enter 0 to 64 characters. Alphabets, numbers and symbols can be used.

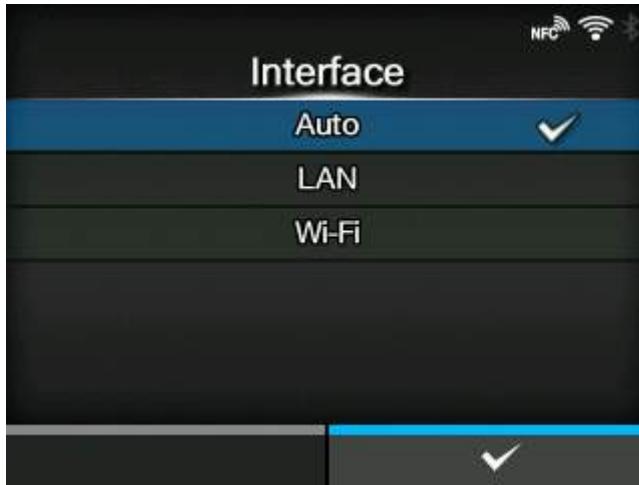[Interface]

Select the network interface.

This item is to select the network interface from LAN or wireless LAN when you have installed the optional wireless LAN.

The options are as follows:

Auto

Automatically select between LAN and wireless LAN interface at product startup. LAN is selected if LAN cable is connected to a link-established hub (Link LED is flashing) at product startup. Wireless LAN is selected if LAN is not detected at product startup.

LAN

Use LAN interface (or force LAN interface).

Wi-Fi


Use wireless LAN interface (or force wireless LAN interface).

- Appears only if you have installed the optional wireless LAN.



- A message prompting you to restart the product will appear on the Online/Offline screen if you have made any changes. In such a case, reboot the product to apply the settings.

[Services]

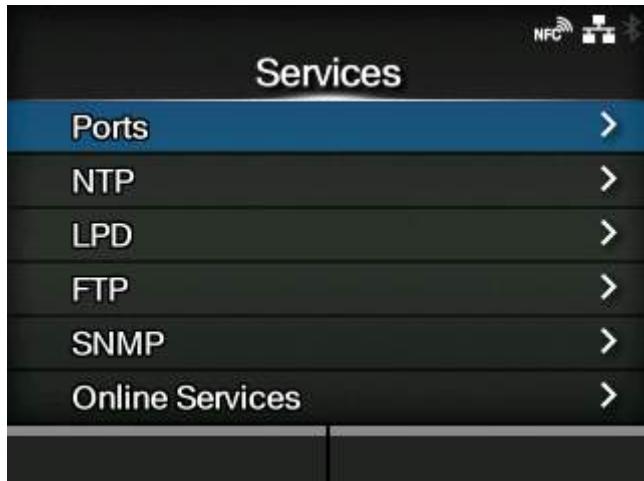

Set the TCP/IP port number, NTP, LPD, FTP, SNMP, or SOS (SATO Online Services).

The setting items are as follows:

Ports

Set the TCP/IP port number.

NTP

Set the functions for NTP.

LPD

Set the functions for LPD.

FTP


Set the functions for FTP.

SNMP

Set the functions for SNMP.

Online Services

Set the functions for SOS (SATO Online Services).

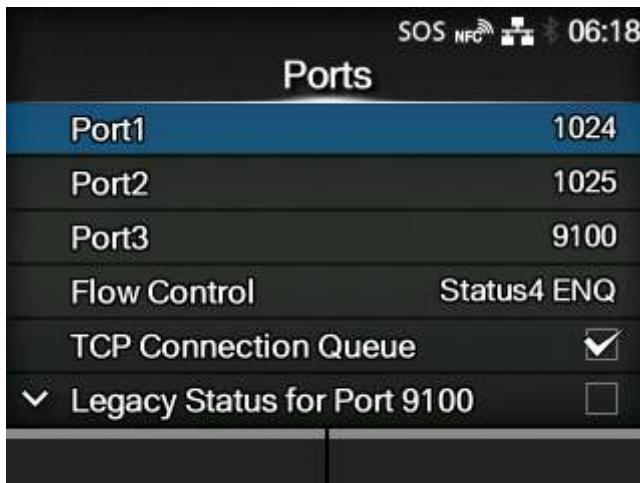[Ports]

Set the TCP/IP port number.

The setting items are as follows:

Port1

Set the port number of Port1.

For the two-port connection of Status4, this port is used for receiving print data. For the one-port connection of Status3/Status5, this port is used for both receiving print data and returning the product status.

Port2

Set the port number of Port2.

For the two-port connection of Status4, this port is used for returning the product status.

Port3

Set the port number of Port3.

For the one-port connection of Status3/Status4/Status5, this port is used for both receiving print data and returning the product status.

Flow Control

Set the communication protocol.

TCP Connection Queue

Set whether to allow queuing for connection when multiple hosts or applications are sending connection requests to the product.

Legacy Status for Port 9100

Set whether to change the return status format of Port3 to legacy status.

- Does not appear if you have selected [None] in the [Flow Control] menu.

ENQ Reply Delay

Set the period to delay status reply to status request ENQ.

- Not available if you have selected [Status4] in the [Flow Control] menu.

Status4 Cyclic Response

Set the interval for the cyclic status response.

- Available only if you have selected [Status4] in the [Flow Control] menu.

BCC

Set the BCC check function.

- Appears only if you have selected [Status5] in the [Flow Control] menu.

Roles of Port1 to Port3


In the socket server function of TCP/IP, either of the following connection methods can be used.

The ports to be used and their roles change depending on the connection method and communication protocol.

Two-port connection

Port1 is used for receiving print data, and Port2 is used for returning the product status.


Two-port connection is available when the communication protocol is Status4.

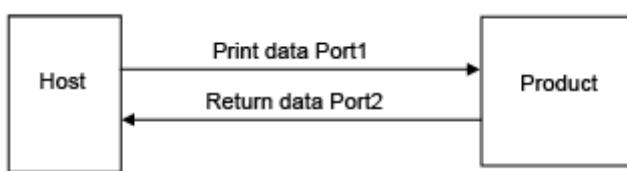


One-port connection

One port is used for both receiving print data and returning the product status.

When the communication protocol is Status4, Port3 is used.

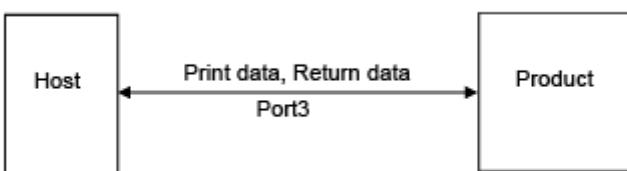

When the communication protocol is Status3 or Status5, Port1 or Port3 is used.

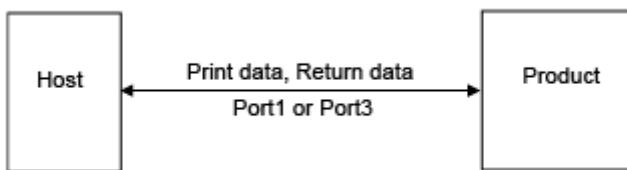

[Port1]


Set the port number of Port1.

For the two-port connection of Status4, this port is used for receiving print data. For the one-port connection of Status3/Status5, this port is used for both receiving print data and returning the product status.

The setting range is from 1 to 65535.



- Each port (1, 2 and 3) must be set to different values.

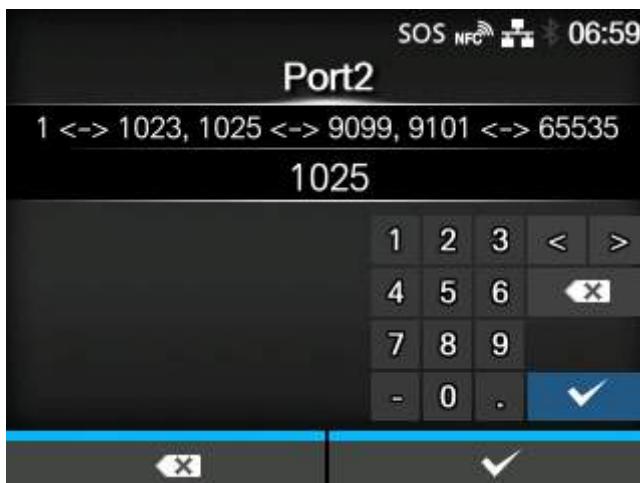[Port2]

Set the port number of Port2.

For the two-port connection of Status4, this port is used for returning the product status.

The setting range is from 1 to 65535.



- Each port (1, 2 and 3) must be set to different values.



- This setting is disabled when AEP mode is enabled.

[Port3]



Set the port number of Port3.

For the one-port connection of Status3/Status4/Status5, this port is used for both receiving print data and returning the product status.

The setting range is from 1 to 65535.




- Each port (1, 2 and 3) must be set to different values.



- You can change the return status format of port3 to Compatible mode by enabling [Legacy Status for Port 9100].

[Flow Control]

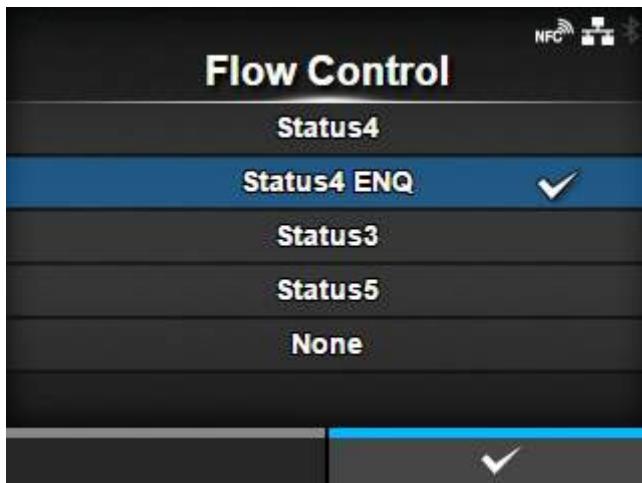


Set the communication protocol.

The options are as follows:

- [Status4]
- [Status4 ENQ]
- [Status3]
- [Status5]

- [None]

[TCP Connection Queue]

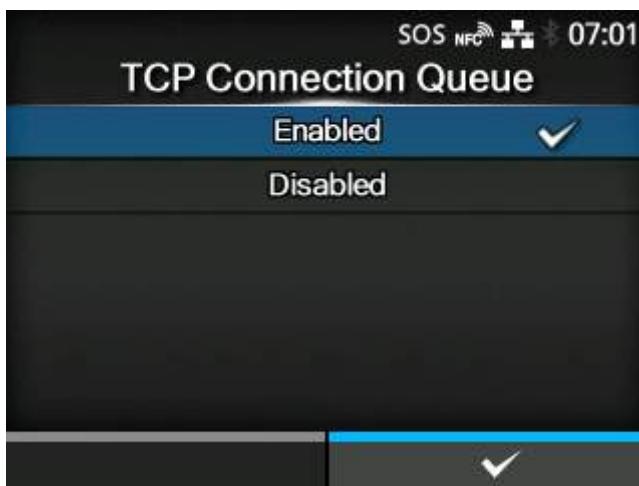

Set whether to allow queuing for connection when multiple hosts or applications are sending connection requests to the product.

The options are as follows:

Enabled

While connecting with one host or application, the product can receive connection requests from other hosts or applications. The subsequent connection requests are put on hold, and processed in order of reception after the first connection is closed.


Disabled

While connecting with one host or application, the product cannot receive connection requests from other hosts or applications.



- When you have selected [Enabled], be sure to use one port connection for Status3, Status4, and Status5. Operation using two port connections for Status4 is not guaranteed.

[Legacy Status for Port 9100]

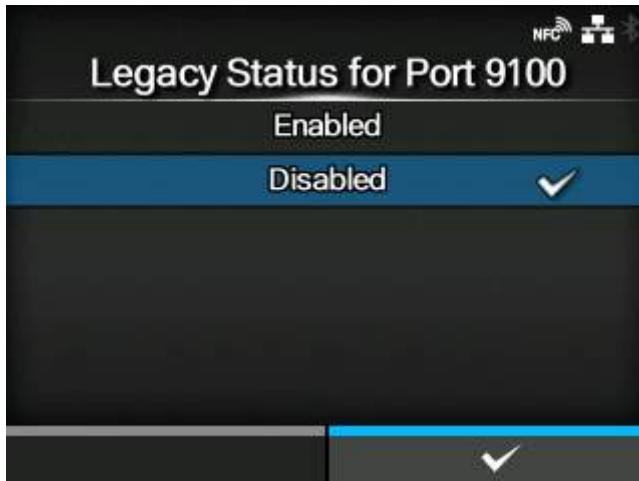

Set whether to change the return status format of port3 to legacy status.

Does not appear if you have selected [None] in the [Flow Control] menu.

The options are as follows:

Enabled


Change the return status format of port3 to legacy status.

Disabled


Do not change the return status format of port3 to legacy status.

In legacy status, the return status format of port3 becomes as follows:

Status3

Mode	Data format
Normal ([Legacy Status for Port 9100] is [Disabled])	<p>ACK/NAK Reply</p>  <p>Status Reply</p> 
Legacy status ([Legacy Status for Port 9100] is [Enabled])	<p>ACK/NAK Reply</p>  <p>Status Reply</p> 

Status4

Mode	Data format
Normal ([Legacy Status for Port 9100] is [Disabled])	<p>ACK/NAK Reply</p>  <p>Status Reply</p> 
Legacy status ([Legacy Status for Port 9100] is [Enabled])	<p>ACK/NAK Reply</p>  <p>Status Reply</p> 

Status5

Mode	Data format
Normal ([Legacy Status for Port 9100] is [Disabled])	ACK/NAK Reply No Reply Status Reply 
Legacy status ([Legacy Status for Port 9100] is [Enabled])	ACK/NAK Reply No Reply Status Reply 

[ENQ Reply Delay]



Set the period to delay status reply to status request ENQ.

The target interfaces are LAN and Wireless LAN.

The target statuses are Status3, Status4 ENQ reply, and Status5.

The setting range is from 0 to 9999 ms.



- Normally, keep this setting at the default value.

[Status4 Cyclic Response]




Set the interval for the cyclic status response.

The target interfaces are LAN and Wireless LAN.

The target status is Status4 reply cycle.

The setting range is from 100 to 999 ms.

[BCC]

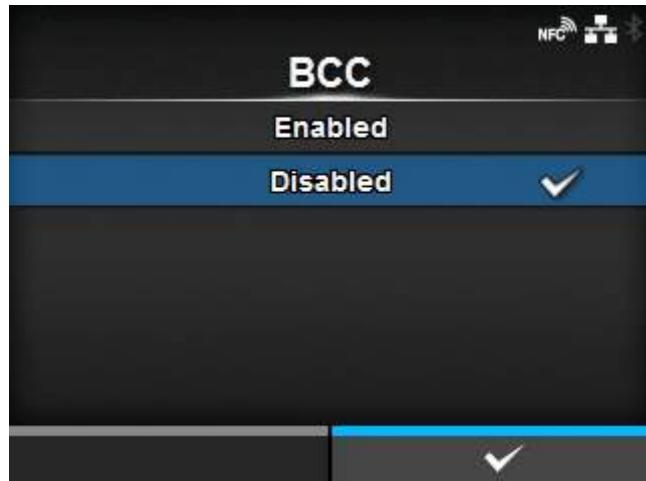

Enable or disable the BCC check function.

Appears only if you have selected [Status5] in the [Flow Control] menu.


The options are as follows:

Enabled

Enable the BCC check function.

Disabled

Disable the BCC check function.

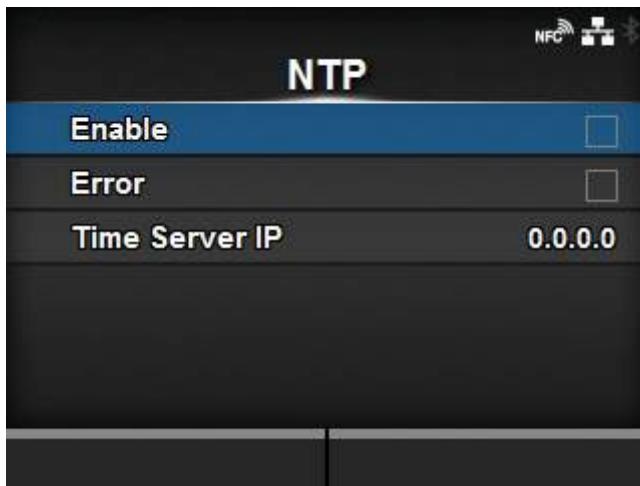[NTP]

Set the functions for NTP.

The NTP function gets the time information from the NTP server through the network and sets the time of the product.

The setting items are as follows:

Enable


Enable or disable the functions for NTP.

Error

Set to show the NTP error message if detected.

Time Server IP

Set the IP address of the NTP server.

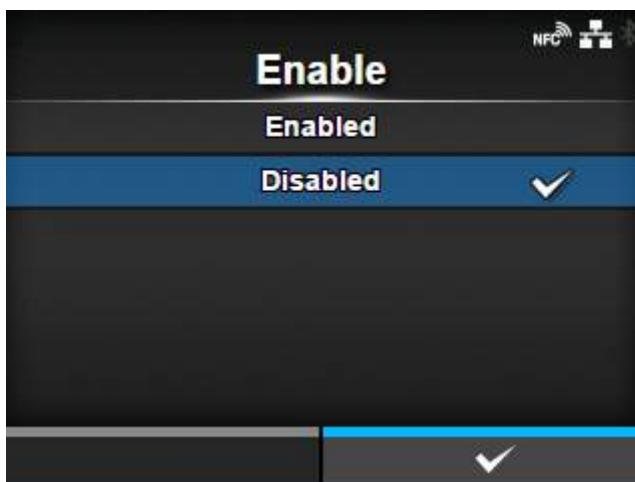[Enable]

Enable or disable the functions for NTP.

The options are as follows:


Enabled

Enable the NTP function.

Disabled

Disable the NTP function.

[Error]

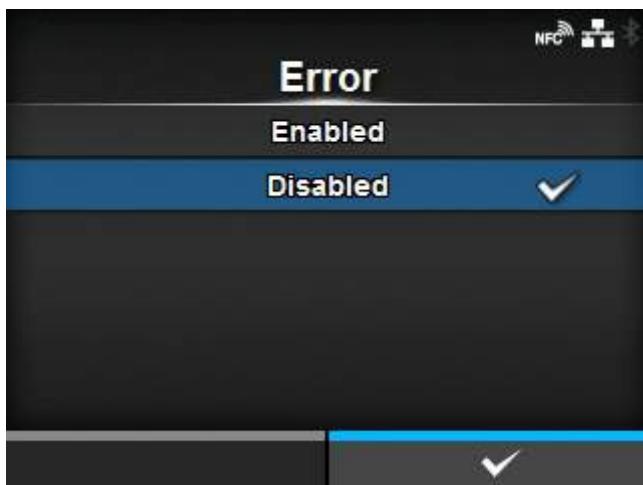

Set to show the NTP error message if detected.

The options are as follows:

Enabled

Shows the error message.

Disabled

Does not show the error message.

[Time Server IP]




Set the IP address of the NTP server.

The setting range is as follows:

0.0.0.0 to 255.255.255.255

The IP address should normally be set to 0.0.0.0 (the default value). For the default value, the global NTP servers are assigned automatically. Set to a valid IP if the time synchronization is requested for a specific server.

[LPD]

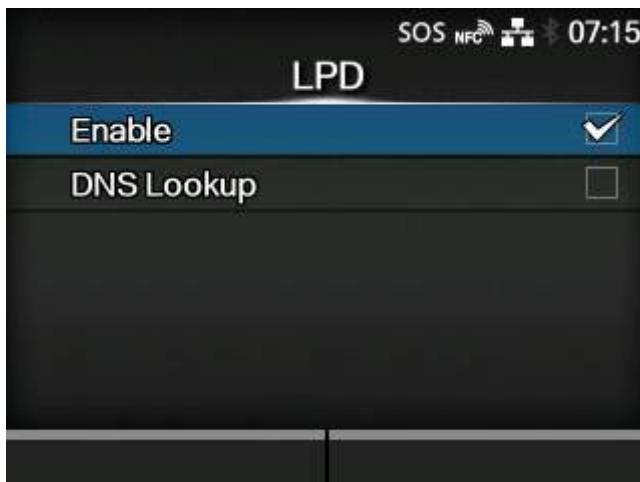

Set the functions for LPD.

The setting items are as follows:


Enable

Enable or disable the LPD function.

DNS Lookup

Enable or disable the DNS Lookup function.

[Enable]

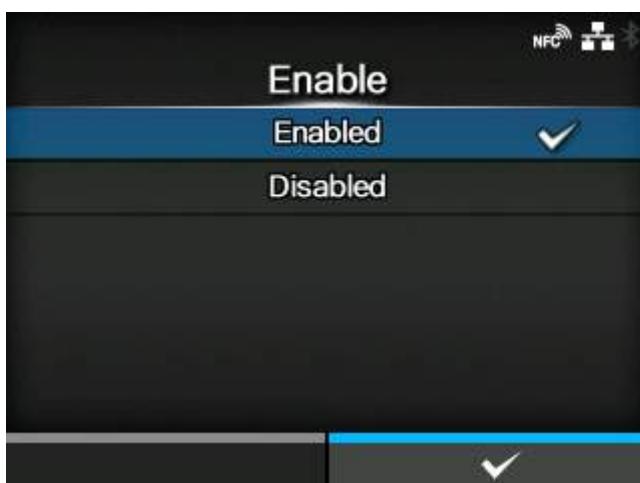

Enable or disable the LPD function.

The options are as follows:


Enabled

Enable the LPD function.

Disabled

Disable the LPD function.

[DNS Lookup]

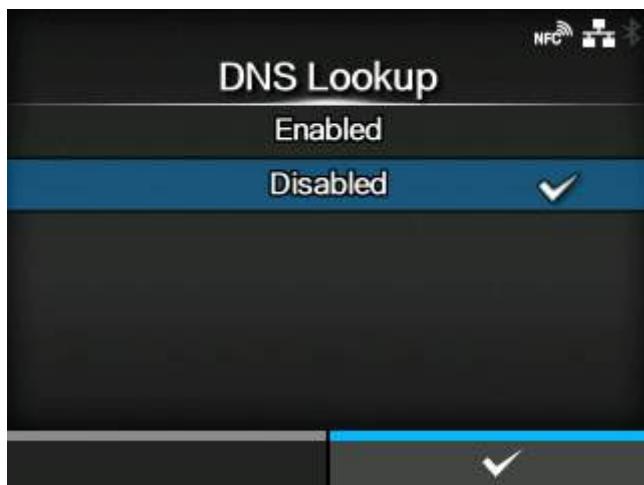

Enable or disable the DNS Lookup function.

The options are as follows:


Enabled

Enable the DNS Lookup function.

Disabled

Disable the DNS Lookup function.

[FTP]

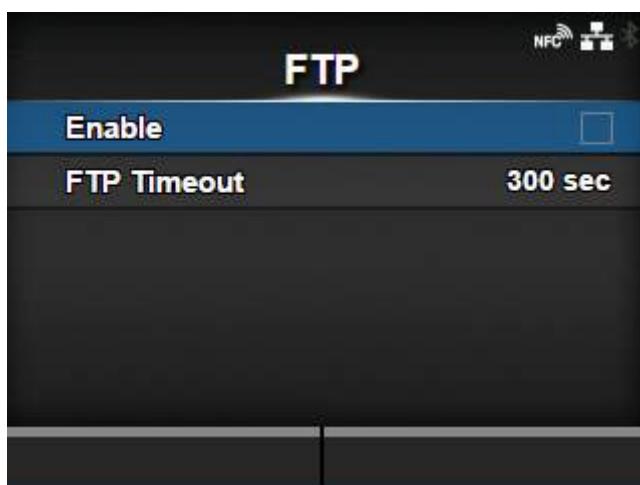

Set the functions for FTP.

The setting items are as follows:


Enable

Enable or disable the functions for FTP.

[FTP Timeout](#)

Set the connection timeout period between the product's FTP server and clients.

[Enable]

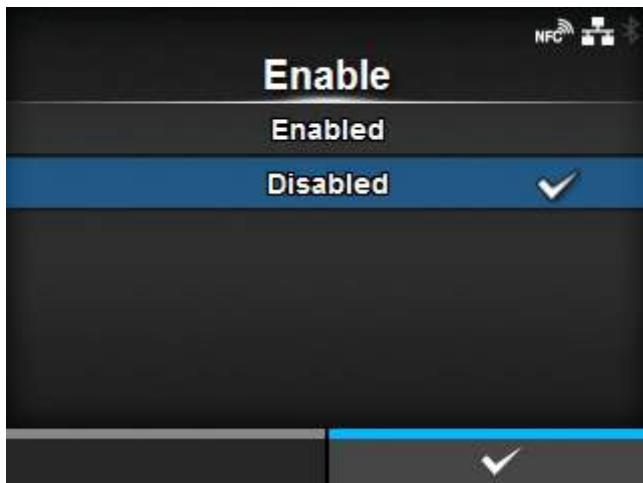

Enable or disable the functions for FTP.

The options are as follows:

Enabled

Enable the FTP function.

Disabled

Disable the FTP function.

[FTP Timeout]




Set the connection timeout period between the product's FTP server and clients.

Specify the maximum number of seconds that the product's FTP server will allow clients to stay connected without receiving any data on either the control or data connection.

The setting range is from 10 to 3600 seconds.

[SNMP]

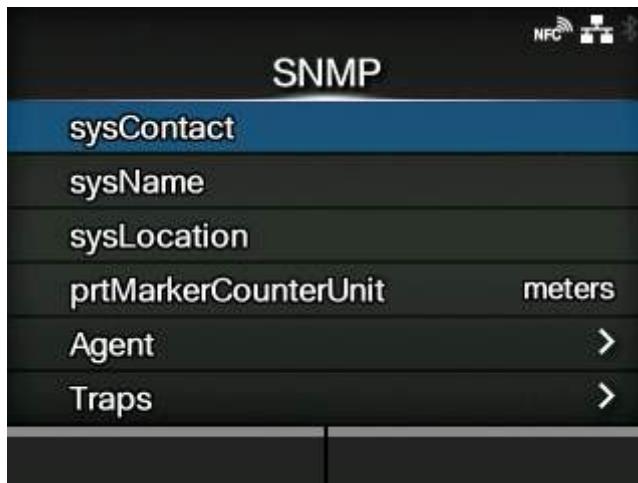

Set the functions for SNMP.

The SNMP function enables you to monitor and manage a UDP/IP based network.

The setting items are as follows:

sysContact

Set the contact information.

sysName

Set the name information.

sysLocation

Set the location information.

prtMarkerCounterUnit

Set the unit to use for reporting counter values for subunits.

Agent

Set the Agent function.

Traps

Set the Traps function.

[\[sysContact\]](#)

Set the contact information.

You can enter 0 to 255 characters. Alphabets, numbers and symbols can be used.

[\[sysName\]](#)

Set the name information.

You can enter 0 to 255 characters. Alphabets, numbers and symbols can be used.

[\[sysLocation\]](#)



Set the location information.

You can enter 0 to 255 characters. Alphabets, numbers and symbols can be used.

[\[prtMarkerCounterUnit\]](#)



Set the unit to use for reporting counter values for subunits.

The options are as follows:


impressions

Report the number of printed labels.

meters

Report the length of printed labels in meters.

[Agent]

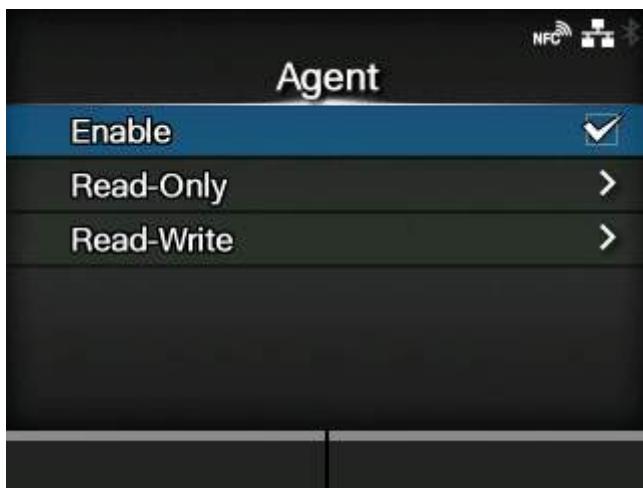

Set the Agent function.

The setting items are as follows:

Enable

Use the Agent function.


Read-Only

Set the read-only function.

Read-Write

Set the read-write function.

[Enable]

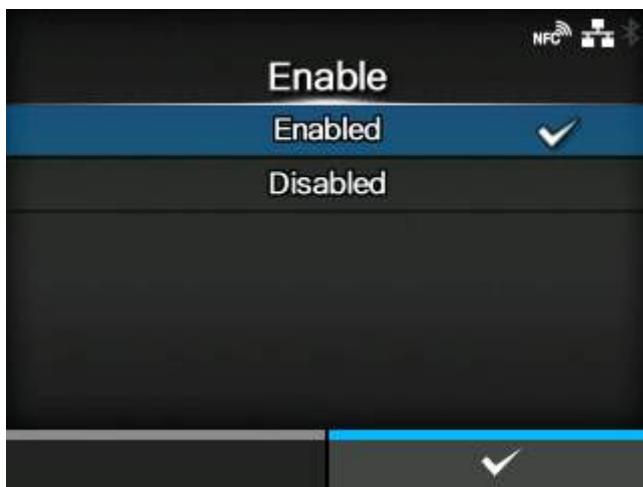

Enable or disable the functions for Agent.

The options are as follows:


Enabled

Enable the functions for Agent.

Disabled

Disable the functions for Agent.

[\[Read-Only\]](#)

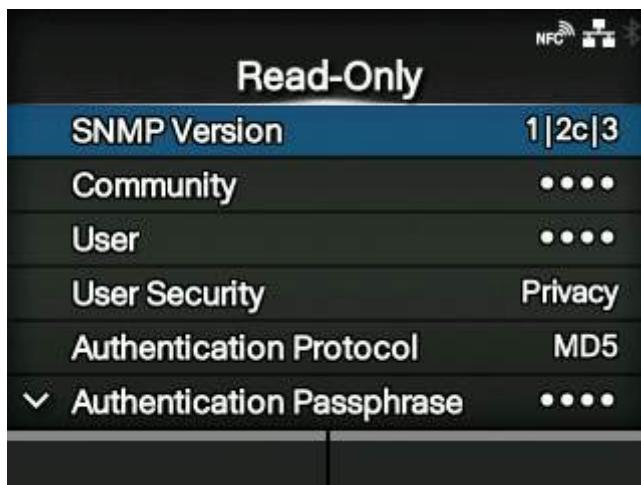

Set the read-only function.

The setting items are as follows:

[SNMP Version](#)

Set the SNMP version.

[Community](#)

Set the read-only community name.

- Appears only if you have selected [1|2c|3] or [1|2c] in the [SNMP Version] menu.

[User](#)

Set the read-only user name.

- Appears only if you have selected [1|2c|3] or [3] in the [SNMP Version] menu.

[User Security](#)

Set the read-only security level.

- Appears only if you have selected [1|2c|3] or [3] in the [SNMP Version] menu.

[Authentication Protocol](#)

Set the authentication protocol.

- Appears only if you have selected [Authentication] or [Privacy] in the [User Security] menu.

[Authentication Passphrase](#)

Set the authentication passphrase.

- Appears only if you have selected [Authentication] or [Privacy] in the [User Security] menu.

[Privacy Protocol](#)


Set the privacy protocol.

- Appears only if you have selected [Privacy] in the [User Security] menu.

[Privacy Passphrase](#)

Set the privacy passphrase.


- Appears only if you have selected [Privacy] in the [User Security] menu.

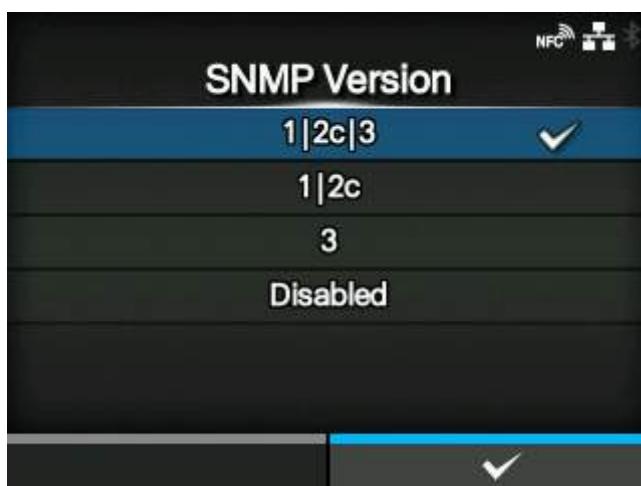[\[SNMP Version\]](#)

Set the SNMP version.

The options are as follows:

- [1|2c|3]
- [1|2c]
- [3]
- [Disabled]

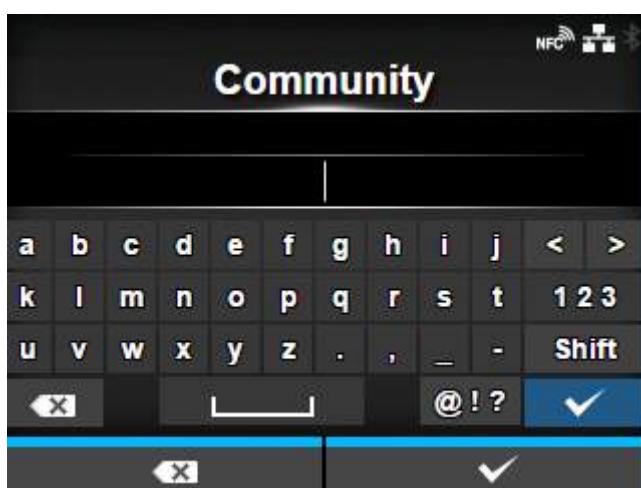[\[Community\]](#)

Set the read-only community name.

Appears only if you have selected [1|2c|3] or [1|2c] in the [SNMP Version] menu.

You can enter 1 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: public

[User]



Set the read-only user name.

Appears only if you have selected [1|2c|3] or [3] in the [SNMP Version] menu.

You can enter 1 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: rouser

[User Security]



Set the read-only security level.

Appears only if you have selected [1|2c|3] or [3] in the [SNMP Version] menu.

The options are as follows:

- [None]
- [Authentication]
- [Privacy]

[Authentication Protocol]

Set the authentication protocol.

Appears only if you have selected [Authentication] or [Privacy] in the [User Security] menu.

The options are as follows:

- [MD5]
- [SHA]

[Authentication Passphrase]

Set the authentication passphrase.

Appears only if you have selected [Authentication] or [Privacy] in the [User Security] menu.

You can enter 8 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: mypassword

[Privacy Protocol]



Set the privacy protocol.

Appears only if you have selected [Privacy] in the [User Security] menu.

The options are as follows:

- [DES]
- [AES]

[Privacy Passphrase]




Set the privacy passphrase.

Appears only if you have selected [Privacy] in the [User Security] menu.

You can enter 8 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: mypassword

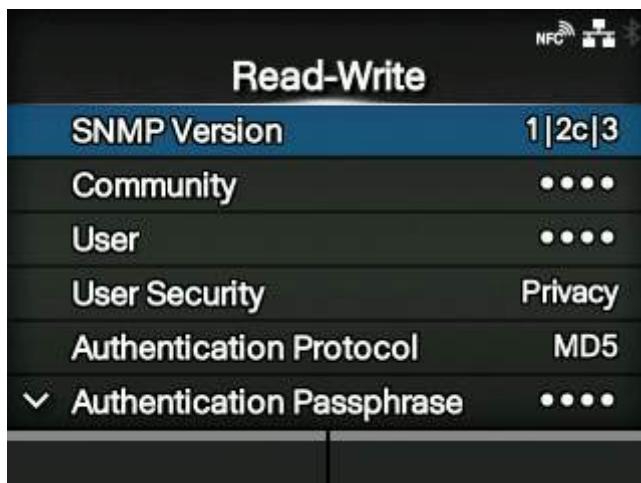[Read-Write]

Set the read-write function.

The setting items are as follows:

SNMP Version

Set the SNMP version.

Community

Set the read-write community name.

- Appears only if you have selected [1|2c|3] or [1|2c] in the [SNMP Version] menu.

User

Set the read-write user name.

- Appears only if you have selected [1|2c|3] or [3] in the [SNMP Version] menu.

User Security

Set the read-write security level.

- Appears only if you have selected [1|2c|3] or [3] in the [SNMP Version] menu.

Authentication Protocol

Set the authentication protocol.

- Appears only if you have selected [Authentication] or [Privacy] in the [User Security] menu.

Authentication Passphrase

Set the authentication passphrase.

- Appears only if you have selected [Authentication] or [Privacy] in the [User Security] menu.

Privacy Protocol

Set the privacy protocol.

- Appears only if you have selected [Privacy] in the [User Security] menu.

Privacy Passphrase

Set the privacy passphrase.

- Appears only if you have selected [Privacy] in the [User Security] menu.

[SNMP Version]



Set the SNMP version.

The options are as follows:

- [1|2c|3]
- [1|2c]
- [3]
- [Disabled]

[Community]



Set the read-write community name.

Appears only if you have selected [1|2c|3] or [1|2c] in the [SNMP Version] menu.

You can enter 1 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: private

[User]



Set the read-write user name.

Appears only if you have selected [1|2c|3] or [3] in the [SNMP Version] menu.

You can enter 1 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: rwuser

[User Security]



Set the read-write security level.

Appears only if you have selected [1|2c|3] or [3] in the [SNMP Version] menu.

The options are as follows:

- [None]
- [Authentication]
- [Privacy]

[Authentication Protocol]



Set the authentication protocol.

Appears only if you have selected [Authentication] or [Privacy] in the [User Security] menu.

The options are as follows:

- [MD5]
- [SHA]

[Authentication Passphrase]



Set the authentication passphrase.

Appears only if you have selected [Authentication] or [Privacy] in the [User Security] menu.

You can enter 8 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: mypassword

[Privacy Protocol]

Set the privacy protocol.

Appears only if you have selected [Privacy] in the [User Security] menu.

The options are as follows:

- [DES]
- [AES]

[Privacy Passphrase]

Set the privacy passphrase.


Appears only if you have selected [Privacy] in the [User Security] menu.

You can enter 8 to 32 characters. Alphabets, numbers and symbols can be used.


Initial setting: mypassword

[Traps]

If [SNMP Version] is [1]

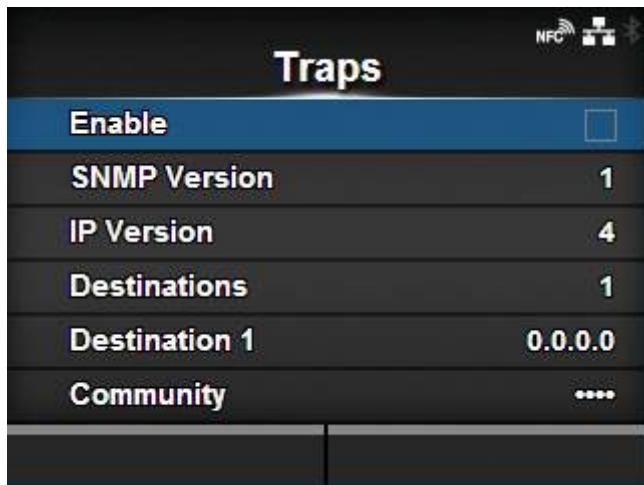

If [SNMP Version] is [3]

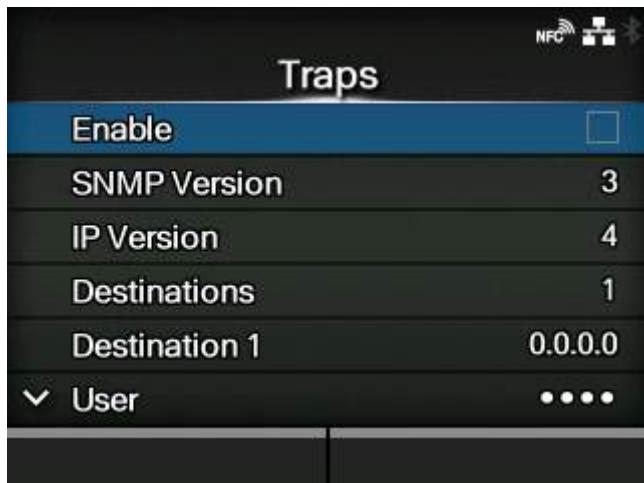

If [Security] is [Privacy]



Set the Traps function.

The setting items are as follows:

Enable

Enable the Traps function.

SNMP Version

Set the SNMP version.

IP Version

Set the IP version to use for trap destinations.

Destinations

Set the number of trap destinations.

Destination 1

Set address 1 for the trap destination.

Destination 2

Set address 2 for the trap destination.

- Appears only if you have selected [2] or [3] in the [Destinations] menu.

Destination 3

Set address 3 for the trap destination.

- Appears only if you have selected [3] in the [Destinations] menu.

Community

Set the Traps community name.

- Appears only if you have selected [1] or [2c] in the [SNMP Version] menu.

User

Set the Traps user name.

- Appears only if you have selected [3] in the [SNMP Version] menu.

Engine ID

Set the engine ID.

- Appears only if you have selected [3] in the [SNMP Version] menu.

Security

Set the security level.

- Appears only if you have selected [3] in the [SNMP Version] menu.

Authentication Protocol

Set the authentication protocol.

- Appears only if you have selected [Authentication] or [Privacy] in the [Security] menu.

Authentication Passphrase

Set the authentication passphrase.

- Appears only if you have selected [Authentication] or [Privacy] in the [Security] menu.

Privacy Protocol

Set the privacy protocol.


- Appears only if you have selected [Privacy] in the [Security] menu.

Privacy Passphrase

Set the privacy passphrase.

- Appears only if you have selected [Privacy] in the [Security] menu.

[Enable]

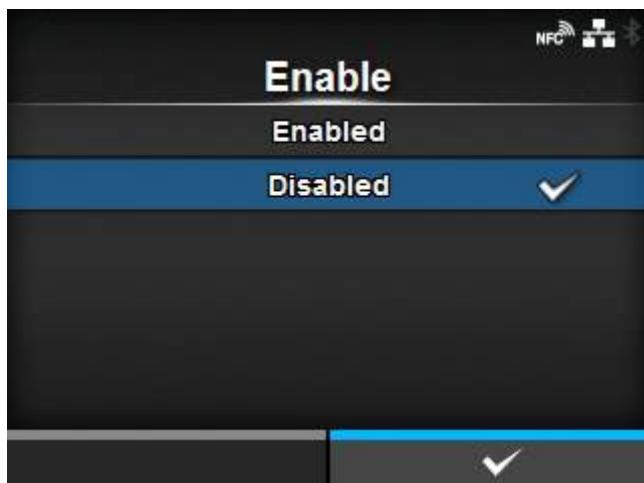

Enable or disable the functions for Traps.


The options are as follows:

Enabled

Enable the Traps function.

Disabled


Disable the Traps function.

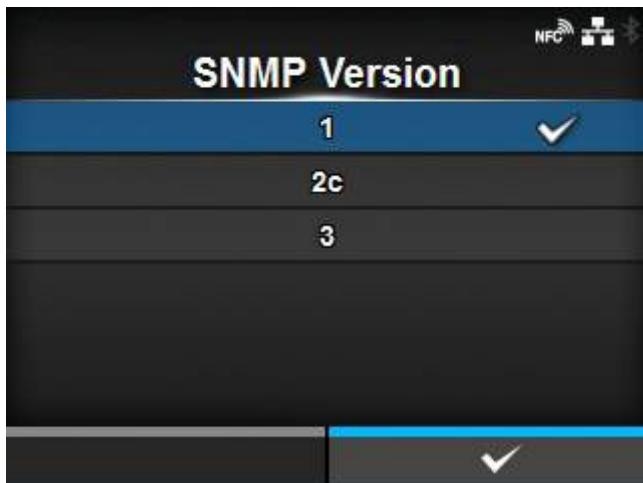[\[SNMP Version\]](#)

Set the SNMP version.

The options are as follows:

- [1]
- [2c]
- [3]

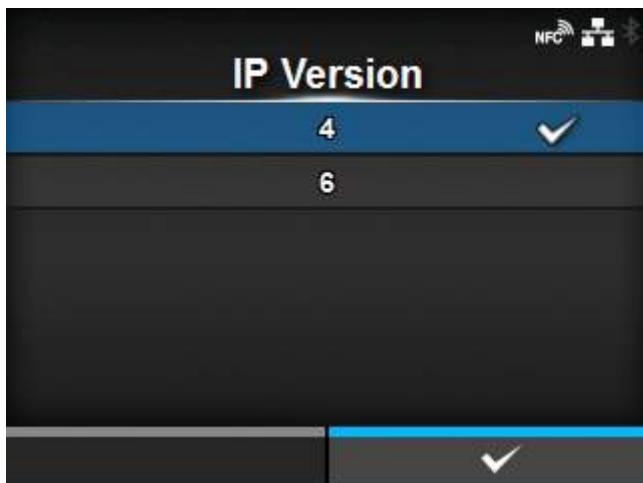[\[IP Version\]](#)

Set the IP version to use for trap destinations.

The options are as follows:


4

Set the IP version to IPv4.

6

Set the IP version to IPv6.

[Destinations]

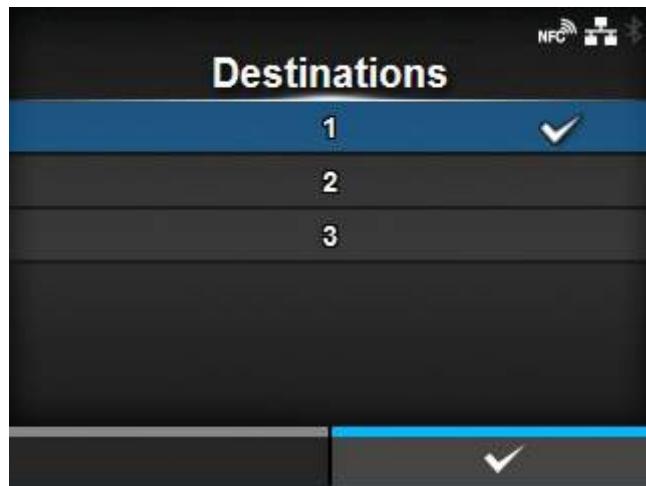

Set the number of trap destinations.

The setting range is from 1 to 3.

[Destination 1]



Set address 1 for the trap destination.

The displayed IP version differs depending on the [IP Version] setting.

[Destination 2]

Set address 2 for the trap destination.

The displayed IP version differs depending on the [IP Version] setting.

Appears only if you have selected [2] or [3] in the [Destinations] menu.

[Destination 3]

Set address 3 for the trap destination.

The displayed IP version differs depending on the [IP Version] setting.

Appears only if you have selected [3] in the [Destinations] menu.

[Community]



Set the Traps community name.

Appears only if you have selected [1] or [2c] in the [SNMP Version] menu.

You can enter 1 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: trapcom

[User]




Set the Traps user name.

Appears only if you have selected [3] in the [SNMP Version] menu.

You can enter 1 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: trapuser

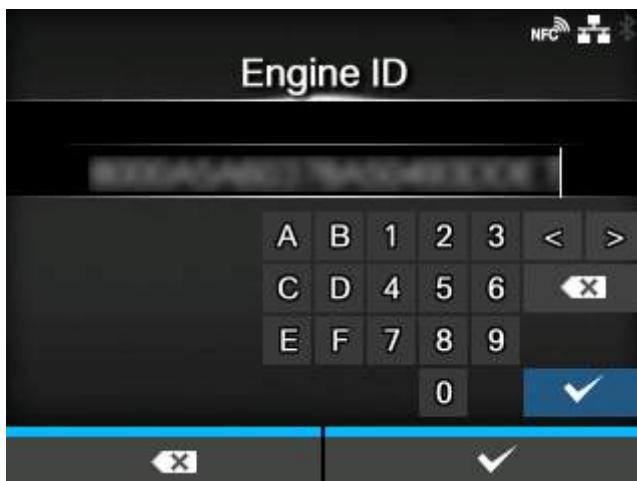[\[Engine ID\]](#)

Set the engine ID.

Appears only if you have selected [3] in the [SNMP Version] menu.

Initial setting: Created from the MAC address.

Hexadecimal characters are allowed and the range is from 10 to 64 characters. (Only an even number of characters is allowed.)

[\[Security\]](#)

Set the security level.

Appears only if you have selected [3] in the [SNMP Version] menu.

The options are as follows:

- [None]
- [Authentication]
- [Privacy]

[Authentication Protocol]



Set the authentication protocol.

Appears only if you have selected [Authentication] or [Privacy] in the [Security] menu.

The options are as follows:

- [MD5]
- [SHA]

[Authentication Passphrase]



Set the authentication passphrase.

Appears only if you have selected [Authentication] or [Privacy] in the [Security] menu.

You can enter 8 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: mypassword

[Privacy Protocol]

Set the privacy protocol.

Appears only if you have selected [Privacy] in the [Security] menu.

The options are as follows:

- [DES]
- [AES]

[Privacy Passphrase]


Set the privacy passphrase.

Appears only if you have selected [Privacy] in the [Security] menu.

You can enter 8 to 32 characters. Alphabets, numbers and symbols can be used.

Initial setting: mypassword

[Online Services] (SOS users only)

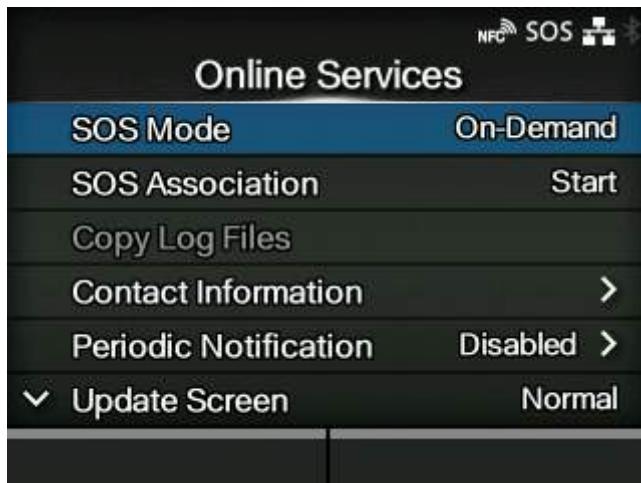

Set the functions for SOS (SATO Online Services).

To use SOS Real-Time and On-Demand periodic notification, it is necessary to first create an SOS account and add the product.

The setting items are as follows:

SOS Mode

Selects the mode for SOS or disable SOS.

Allow Remote Control

Sets whether to allow setting the product (remote control) from SOS.

- Appears only if you have selected [Real-Time] in the [SOS Mode] menu.

MQTT Protocol

Set the communication method for MQTT.

- Appears only if you have selected [Real-Time] in the [SOS Mode] menu.

SOS Association

Shows the serial number and association code that are necessary when adding the product to SOS.

- Appears only if you have selected [On-Demand] or [Real-Time] in the [SOS Mode] menu.

Copy Log Files

Copies an SOS log file to USB memory.

- Appears only if you have selected [On-Demand] or [Real-Time] in the [SOS Mode] menu. It is available only when the log data is in the product and the USB memory is inserted into the product.

Contact Information

Sets the SOS contact information that is displayed at the time of the error outbreak.

- Appears only if you have selected [On-Demand] or [Real-Time] in the [SOS Mode] menu.

Periodic Notification

Sets the functions for periodic SOS notifications.

A specialized application is required to scan the QR code displayed on the screen of this function.

- Appears only if you have selected [On-Demand] in the [SOS Mode] menu.

Update Screen

Sets whether or not to print the QR code displayed with the regular notification or with SOS update.

A specialized application is required to scan the QR code.

- Appears only if you have selected [On-Demand] in the [SOS Mode] menu.

QR code offset

Adjusts the print position for printing a QR code displayed on the notification screen for SOS (SATO Online Services).

- Appears only if you have selected [On-Demand] in the [SOS Mode] menu.


SOS Update

Shows the current product information with a QR code. Scan the QR code with a tablet or smartphone, and send it to the SOS cloud.

A specialized application is required to scan the QR code.

- Appears only if you have selected [On-Demand] in the [SOS Mode] menu.

[SOS Mode] (SOS users only)

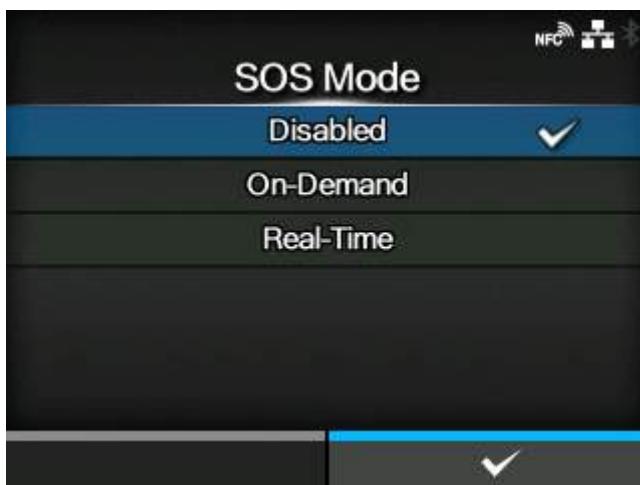

Select or disable the SOS (SATO Online Services) mode.

The options are as follows:

Disabled

Disables SOS.

On-Demand

Shows the product information with a QR code. Scan the displayed QR code with a tablet or smartphone, and send the information to the SOS cloud.

A specialized SOS application is required to scan the QR code.

Real-Time

Sends the product information to the SOS cloud in real-time using a LAN/wireless LAN connection.

A confirmation screen appears if you select [Real-Time]. To agree with the Terms of Use and enable the Real-Time mode, press  button.

[**\[Allow Remote Control\] \(SOS users only\)**](#)



Set whether to allow setting the product (remote control) from SOS (SATO Online Services).

Appears only if you have selected [Real-Time] in the [SOS Mode] menu.

The options are as follows:

Deny

Does not allow remote control from SOS.


Until Reboot

Allows remote control from SOS until the product reboots.

Always

Always allows remote control from SOS.

[MQTT Protocol] (SOS users only)

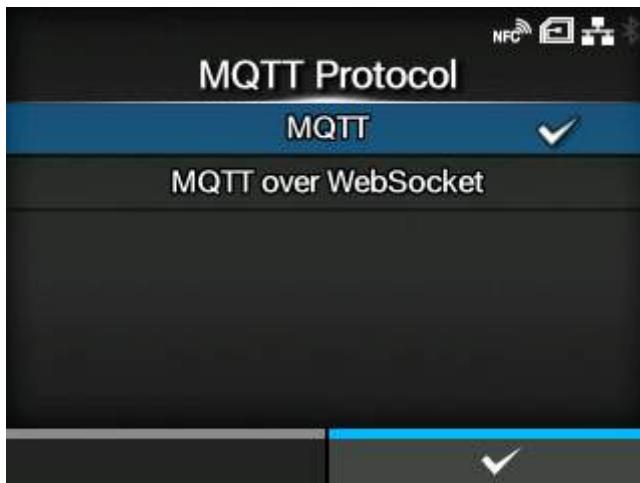

Set the communication method for MQTT.

The options are as follows:


MQTT

Set when allowing the 8883 port.

MQTT over WebSocket

Set when allowing the 443 port or accessing through the proxy server.

[SOS Association] (SOS users only)

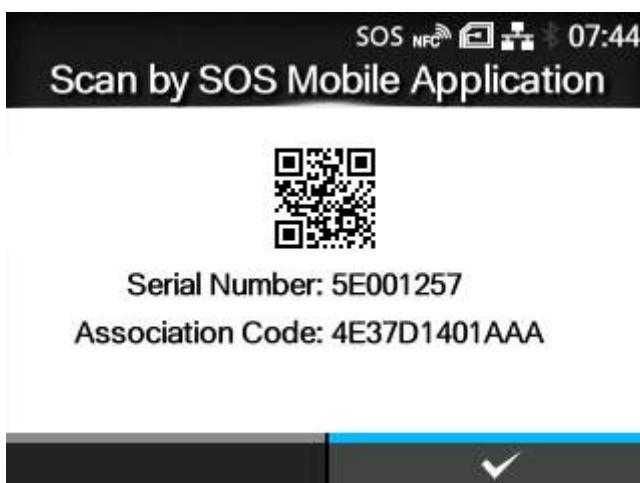

Shows the serial number and association code that are necessary when adding the product to SOS (SATO Online Services).

Appears only if you have selected [On-Demand] or [Real-Time] in the [SOS Mode] menu.

In Real-Time Mode

The screen shown above appears after the standby screen.

In the SOS specialized application, scan the QR code or input the information displayed on the screen. Finally, press the button to complete SOS association.

In On-Demand Mode

A QR code and serial number appears. In the SOS specialized application, scan the QR code or input the information displayed on the screen. Then press the  button.


When a PIN code input screen appears, input the PIN code shown on the application and press the  button.

The screen including the association code shown above appears. In the SOS specialized application, scan the QR code or input the information displayed on the screen. Finally, press the  button to complete SOS association.



- To add a product to SOS, refer to the SOS user manual.
http://www.sato-sos.com/en/support/sos_usermanual.pdf

[Copy Log Files] (SOS users only)

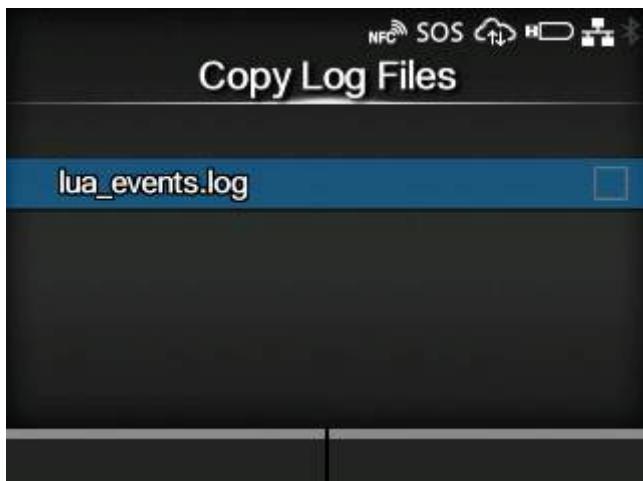

Copies SOS (SATO Online Services) log files to USB memory.

Appears only if you have selected [On-Demand] or [Real-Time] in the [SOS Mode] menu.

It is available only when the log data is in the product and the USB memory is inserted into the product.




- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

The procedure to copy the log file is as follows:

1. Select the file to copy and press the  button. A check mark is shown on the right side of the file name.
2. After you select the file, press the  button to copy the selected file to the USB memory.

[Contact Information] (SOS users only)

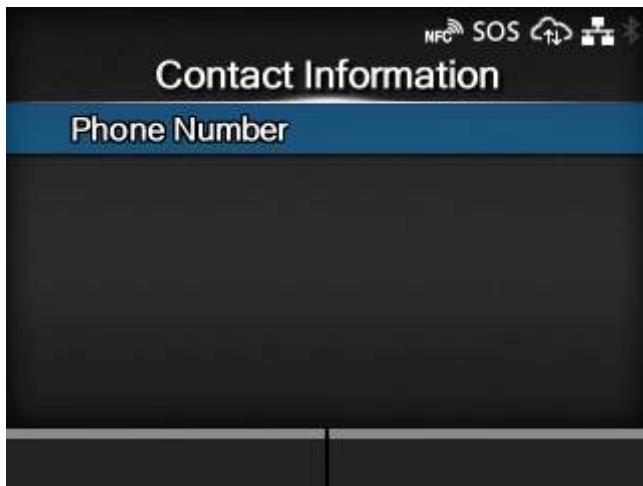

Sets the SOS (SATO Online Services) contact information that is displayed at the time of the error outbreak.

Appears only if you have selected [On-Demand] or [Real-Time] in the [SOS Mode] menu.

The setting items are as follows:

Phone Number

Sets the phone number that is displayed on the SOS error screen when you select the SOS icon on an error message screen.

[Phone Number] (SOS users only)




Sets the phone number that is displayed on the SOS error screen when you select the SOS (SATO Online Services) icon on an error message screen.

Up to 20 characters can be set.

[Periodic Notification] (SOS users only)

When [Counter] is set with [Head] in the [Type] menu

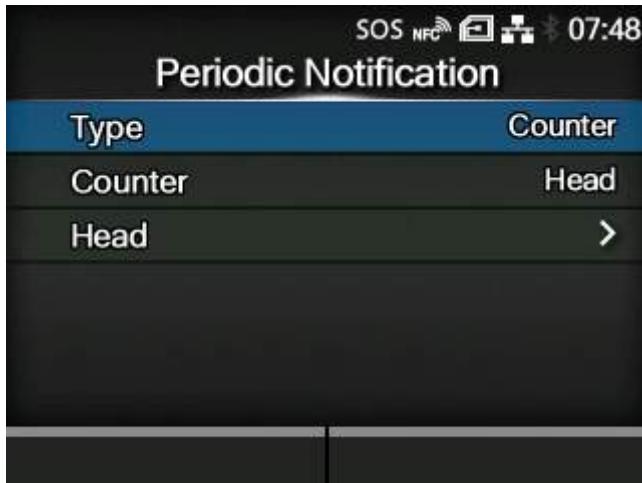

Sets the function for periodic SOS (SATO Online Services) notifications.

Appears only if you have selected [On-Demand] in the [SOS Mode] menu.

In this function, the product information is shown periodically with a QR code. Scan the displayed QR code with a tablet or smartphone, and send the information to the SOS cloud.

A specialized application is required to scan the QR code.

The setting items are as follows:

Type

Select the timing to perform the periodic notification or disable this function.

Counter

You can select the counter for the print head, cutter, or both for the timing to perform the periodic notification.

- Appears only if you have selected [Counter] in the [Type] menu.

Head

You can specify or check the print distance of the print head for the timing to perform the periodic notification.

- Appears only if you have set [Counter] with [Head] or [Head+Cutter] in the [Type] menu.

Cutter

You can specify or check the number of cut times of the cutter for the timing to perform the periodic notification.

- Appears only if you have set [Counter] with [Cutter] or [Head+Cutter] in the [Type] menu.

Notifications

Specifies the number of periodic notifications to be sent per day.

- Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Daily] in the [Type] menu.

Weekday

Specifies the day of the week to perform the periodic notification.

- Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Weekly] in the [Type] menu.

Day

Sets the date to perform the periodic notification.

- Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Monthly] in the [Type] menu.

Time 1

Specifies the time to perform the first periodic notification.

- Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Daily] in the [Type] menu.

Time 2

Specifies the time to perform the second periodic notification.

- Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Daily] in the [Type] menu and have set more than two times for [Notifications].

Time 3

Specifies the time to perform the third periodic notification.


- Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Daily] in the [Type] menu and have set three times for [Notifications].

Time

Specifies the time of the specified day or date to perform periodic notifications.

- Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Weekly] or [Monthly] in the [Type] menu.

[Type] (SOS users only)

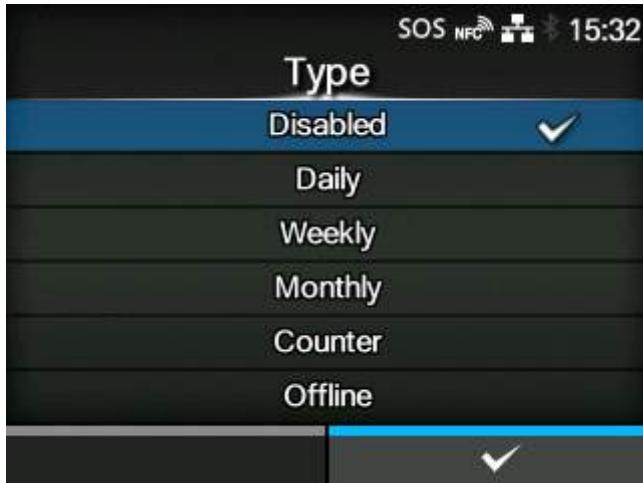

Select the timing to perform the periodic notification or disable this function.

Advanced setting items appear on the [Periodic Notification] menu according to the selected options.

The options are as follows:

Disabled

Disables the periodic notification function.

Daily

Displays the notification screen every day for specified number of times, at the specified time.

- Appears only if you have enabled the NTP function or installed the optional RTC kit.

Weekly

Displays the notification screen every week at the specified day of week and time.

- Appears only if you have enabled the NTP function or installed the optional RTC kit.

Monthly

Displays the notification screen every month at the specified day and time.

- Appears only if you have enabled the NTP function or installed the optional RTC kit.


Counter

Displays the notification screen when the counter of a consumable reaches to the specified value.

Offline

Displays the notification screen when the product is changed to Offline mode.

[Counter] (SOS users only)

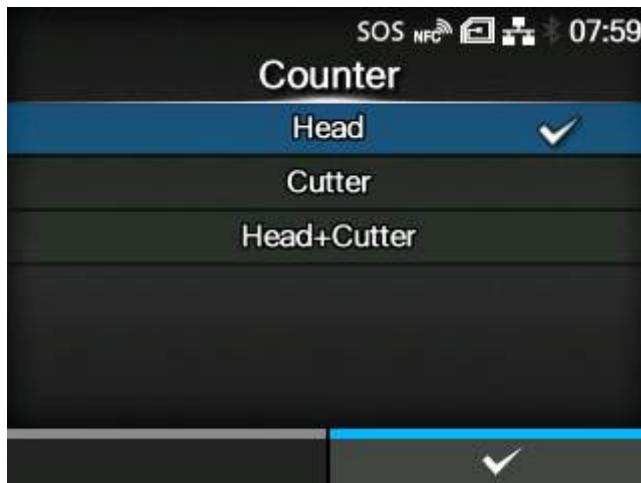

You can select the counter for the print head, cutter, or both for the timing to perform the periodic notification.

Appears only if you have selected [Counter] in the [Type] menu.

Advanced setting items appear on the [Periodic Notification] menu according to the selected options.

The options are as follows:

- [Head]
- [Cutter]
- [Head+Cutter]

[Head] (SOS users only)



You can specify or check the print distance of the print head for the timing to perform the periodic notification.

Appears only if you have selected [Head] or [Head+Cutter] for [Counter] in the [Type] menu.

The setting items are as follows:

Meters

Specifies the print distance of the print head for the timing to perform the periodic notification.

Last Update

Shows the print distance of the print head for the last periodic notification.

Next Update

Shows the print distance of the print head for the next periodic notification.

Current Value

Shows the current print distance of the print head.

[Meters] (SOS users only)



Specifies the print distance of the print head for the timing to perform the periodic notification. You will be notified for every meter you specify.

The setting range is from 1 to 100,000.

[Cutter] (SOS users only)



You can specify or check the number of cut times of the cutter for the timing to perform the periodic notification.

Appears only if you have selected [Cutter] or [Head+Cutter] for [Counter] in the [Type] menu.

The setting items are as follows:

Cuts

Specifies the number of cut times of the cutter for the timing to perform the periodic notification.

Last Update


Shows the number of cut times of the cutter for the last periodic notification.

Next Update

Shows the number of cut times of the cutter for the next periodic notification.


Current Value

Shows the current number of cut times of the cutter.

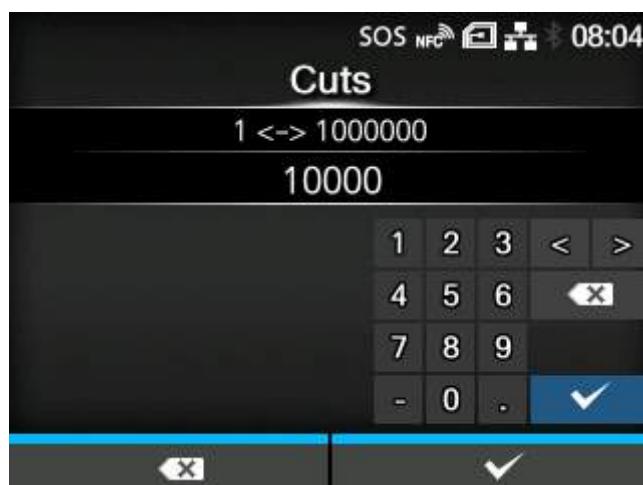[Cuts] (SOS users only)

Specifies the number of cut times of the cutter for the timing to perform the periodic notification. You will be notified for each number of cut times you specify.

The setting range is from 1 to 1000000.

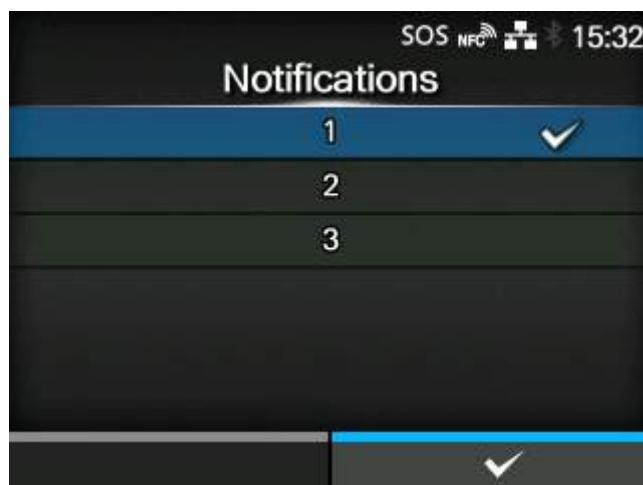
[Notifications] (SOS users only)

Specifies the number of periodic notifications to be sent per day.

Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Daily] in the [Type] menu.

The setting range is from 1 to 3.

[Weekday] (SOS users only)

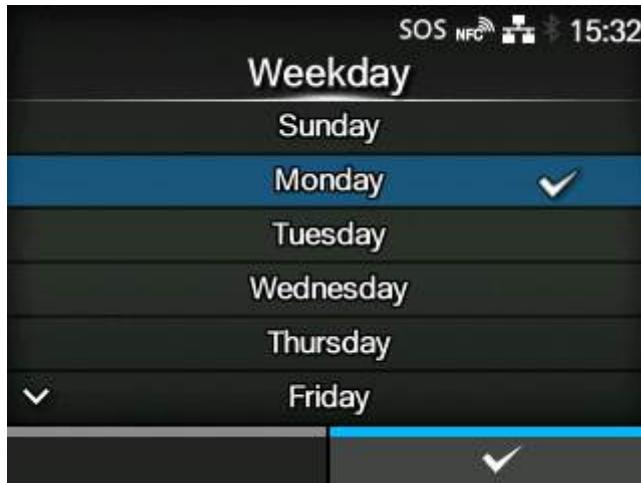


Specifies the day of the week to perform the periodic notification.

Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Weekly] in the [Type] menu.

The setting range is from Sunday to Saturday.


[Day] (SOS users only)

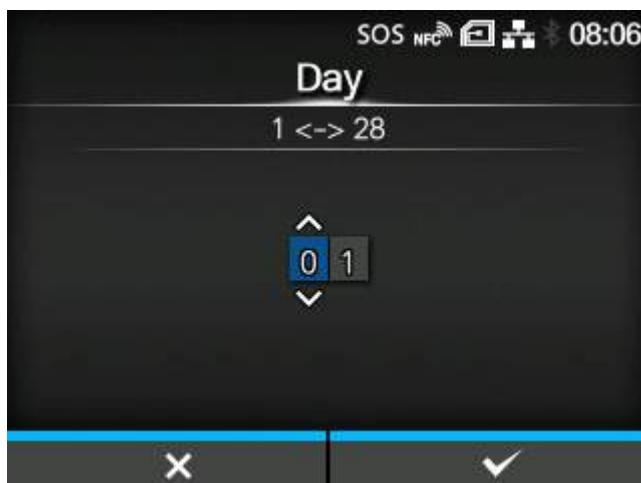

Sets the date to perform the periodic notification.


Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Monthly] in the [Type] menu.

The setting range is from 1 to 28.

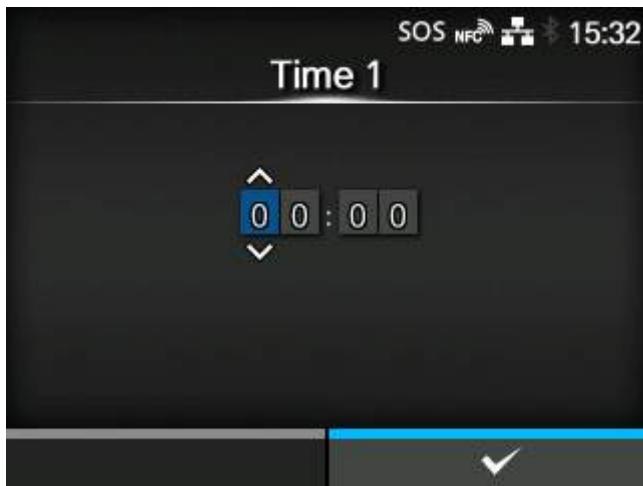[\[Time 1\] \(SOS users only\)](#)

Specifies the time to perform the first periodic notification.


Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Daily] in the [Type] menu.

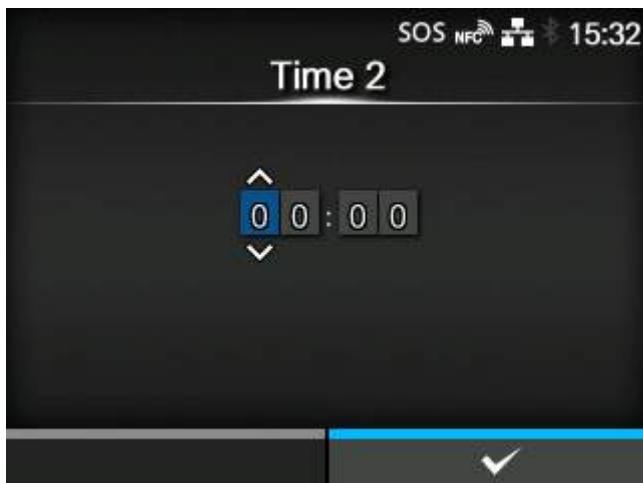[\[Time 2\] \(SOS users only\)](#)

Specifies the time to perform the second periodic notification.

Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Daily] in the [Type] menu and have set more than two times for [Notifications].


[Time 3] (SOS users only)

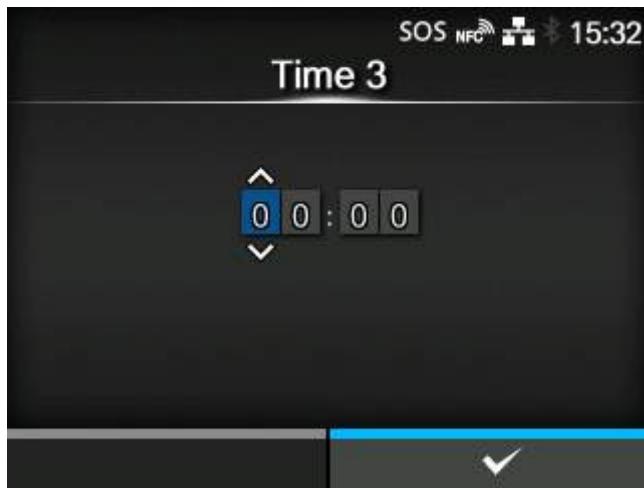

Specifies the time to perform the third periodic notification.

Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Daily] in the [Type] menu and have set three times for [Notifications].


[Time] (SOS users only)

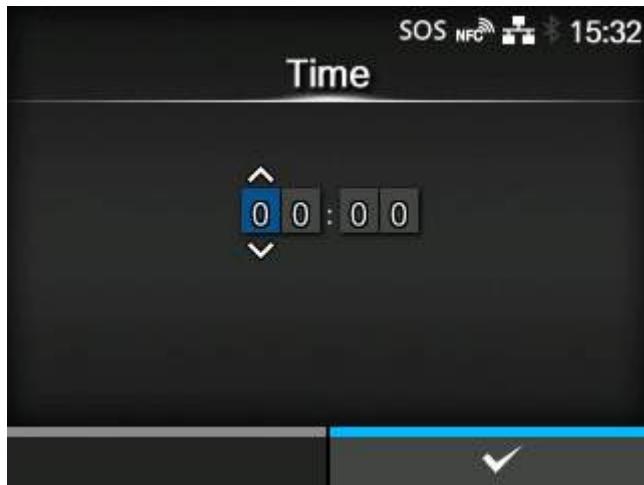

Specifies the time of the specified day or date to perform periodic notifications.

Appears only if you have enabled the NTP function or installed the optional RTC kit, and if you have selected [Weekly] or [Monthly] in the [Type] menu.

[Update Screen] (SOS users only)

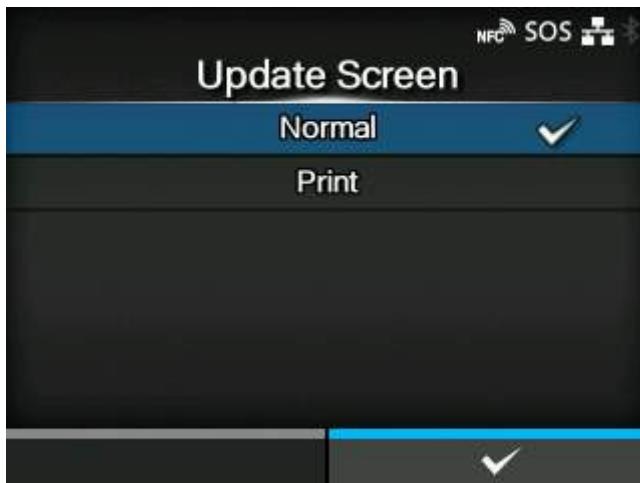

Sets whether to print a QR code displayed with SOS (SATO Online Services) periodic notification or SOS update.

Appears only if you have selected [On-Demand] in the [SOS Mode] menu.

A specialized application is required to scan the QR code.

The options are as follows:

Normal


Shows the scan screen of a normal QR code.

Print

Prints with the scan screen for the QR code. Press the button to print the QR code.

To print the QR code, use media of more than 33 mm (1.3") in length and more than 33 mm (1.3") in width (not including the liner).

[QR code offset] (SOS users only)

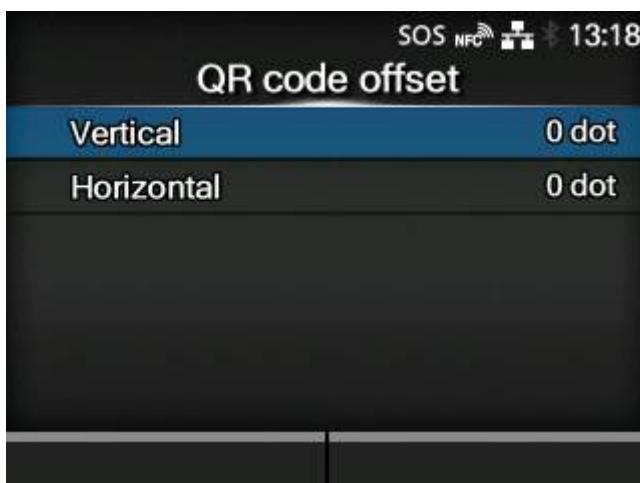

Adjust the print position for printing a QR code displayed on the notification screen for SOS (SATO Online Services).

Appears only if you have selected [On-Demand] in the [SOS Mode] menu.

Available only if you have selected [Print] in the [Update Screen] menu.

The options are as follows:

Vertical

Adjust the print position of the QR code in the vertical direction.

Horizontal


Adjust the print position of the QR code in the horizontal direction.

[Vertical] (SOS users only)



Adjust the print position of the QR code for SOS (SATO Online Services) in the vertical direction.

Set the correction value from the standard printing position as "+" for the direction opposite to the media feed and "-" for the direction of the media feed.

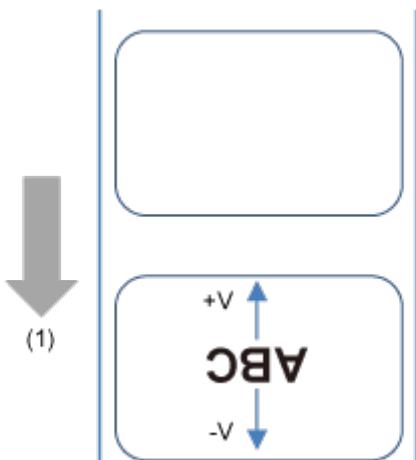

(1) Feed direction

The setting range is from -792 to +792 dots.




- The length of 1 dot varies depending on the print resolution of the product.
 - 203 dpi : 1 dot = 0.125 mm (0.0049")
 - 305 dpi : 1 dot = 0.083 mm (0.0033")
 - 609 dpi : 1 dot = 0.042 mm (0.0017")

[Horizontal] (SOS users only)



Adjust the print position of the QR code for SOS (SATO Online Services) in the horizontal direction.

Set the correction value from the standard printing position when facing the product as "+" to adjust to the left side and "-" to adjust to the right side.

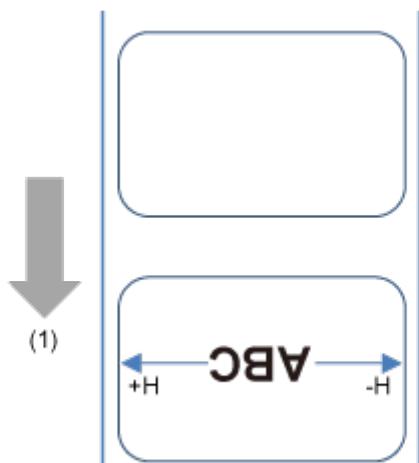


(1) Feed direction

The setting range is from -792 to +792 dots.



- The length of 1 dot varies depending on the print resolution of the product.
 - 203 dpi : 1 dot = 0.125 mm (0.0049")
 - 305 dpi : 1 dot = 0.083 mm (0.0033")
 - 609 dpi : 1 dot = 0.042 mm (0.0017")

[SOS Update] (SOS users only)

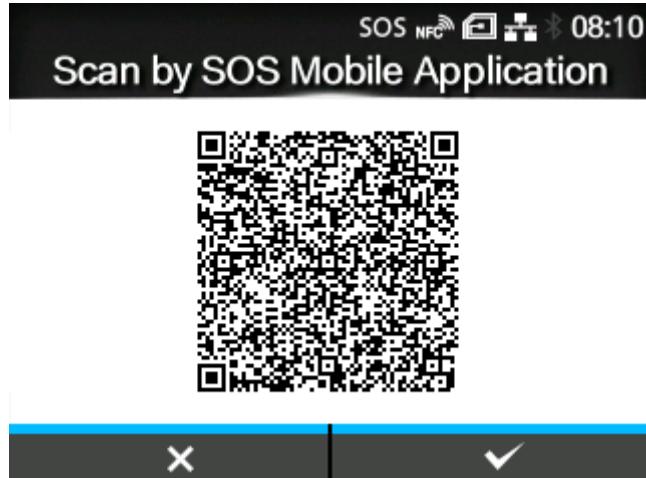

Shows the current product information with a QR code. Scan the QR code with a tablet or smartphone, and send it to the SOS cloud.


Appears only if you have selected [On-Demand] in the [SOS Mode] menu.

A specialized application is required to scan the QR code.

If you have selected [Print] in the [Update Screen], press the button to print the QR code.

To print the QR code, use media of more than 33 mm (1.3") in length and more than 33 mm (1.3") in width (not including the liner).

[Advanced]

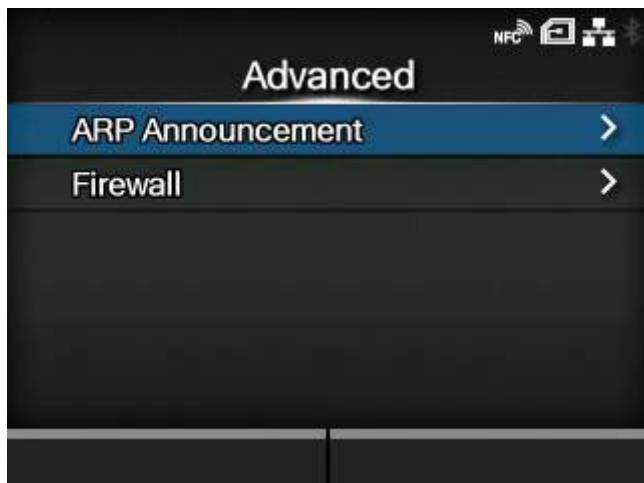

Set the advanced function for the interface.

The setting items are as follows:


ARP Announcement

Set the ARP announcement.

Firewall

Set the functions for the firewall.

[ARP Announcement]

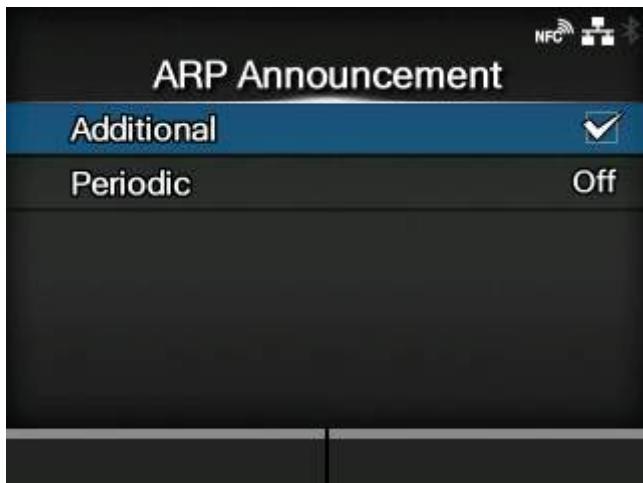

Set the functions for ARP announcement.

The ARP announcement is useful for updating other hosts mapping of a hardware address when the IP address or MAC address of the sender has changed.

The setting items are as follows:


Additional

Enable or disable the additional ARP announcement.

Periodic

Set the periodic timing for ARP announcement.

[Additional]

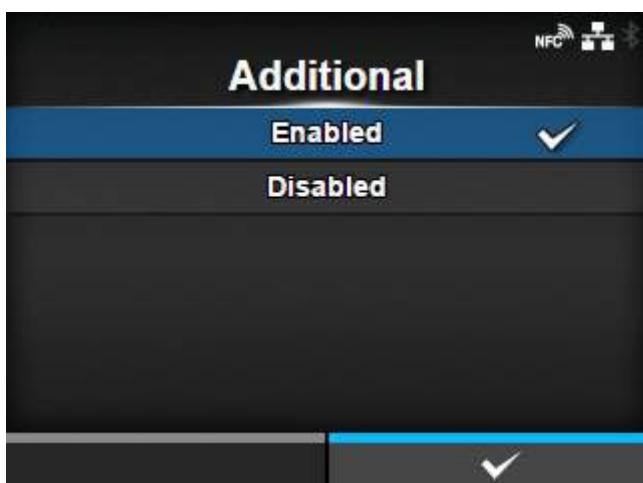

Set the additional ARP announcement.

The options are as follows:


Enabled

Enable the additional ARP announcement. The ARP is sent at 1, 2, 4, 8 and 16 seconds after the link up/DHCP assignment.

Disabled

Disable the additional ARP announcement. The ARP is only sent at 1 second after the link up/DHCP assignment.


[Periodic]

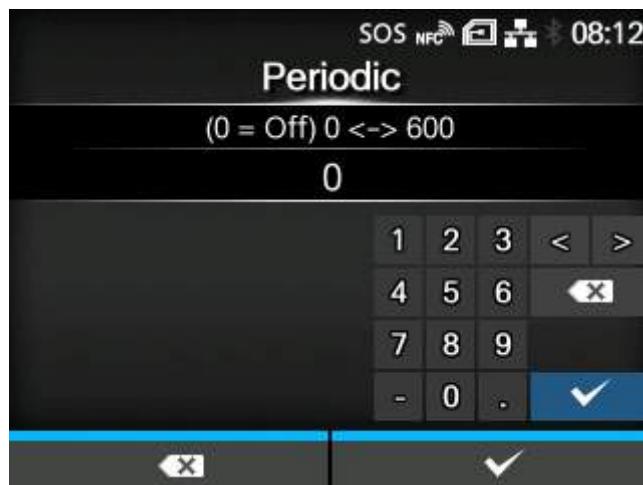

Set the interval of the ARP announcement in the range of 0 to 600 seconds.

Initial setting: 0

[Firewall]

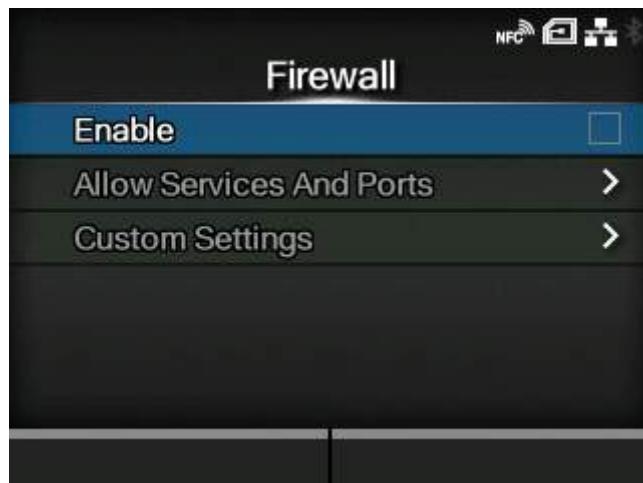

Set the functions for the firewall.

A firewall can improve security. It prevents unauthorized access from external computers or malicious programs. When the firewall is enabled, only the services and ports that are allowed will be able to access the product.



- As a basic policy of filtering, all OUTPUT is allowed (ACCEPT) and both INPUT and FORWARD are not allowed (DROP).

The setting items are as follows:

Enable

Enable or disable the firewall function.

Allow Services And Ports

Set the service or port to allow communication.


- Available only if you have selected [Enabled] in the [Enable] menu.

Custom Settings

Specify the ICMP type or the port number of TCP or UDP to allow communication.

- Available only if you have selected [Enabled] in the [Enable] menu.

[Enable]

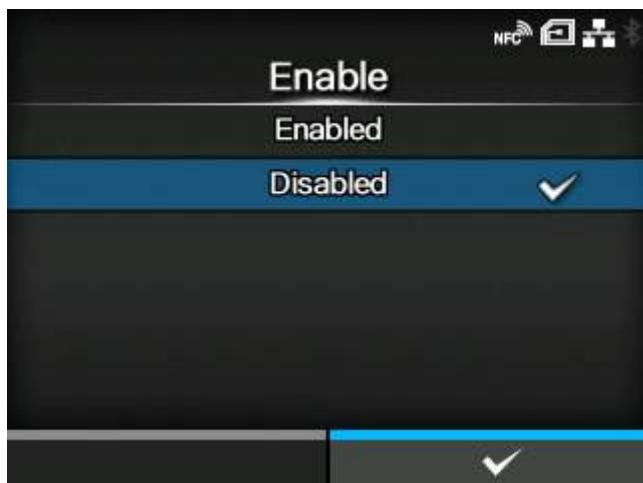

Enable or disable the firewall function.

The options are as follows:


Enabled

Enable the firewall function.

Disabled

Disable the firewall function.

[Allow Services And Ports]

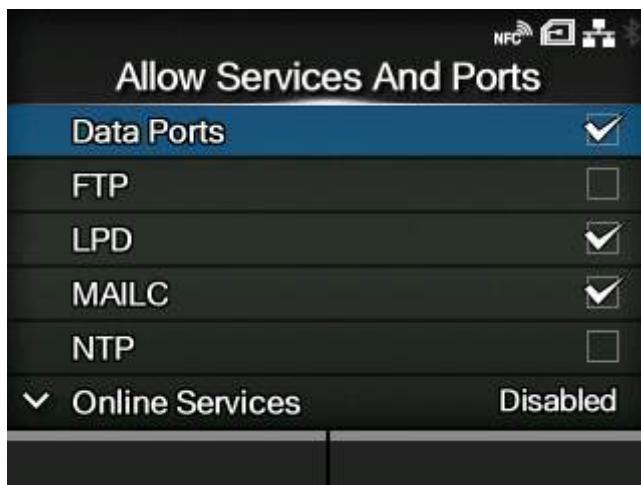

Set the service or port to allow communication.

Available only if you have selected [Enabled] in the [Enable] menu.



- The product becomes accessible only through services or ports that are allowed in [Allow Services And Ports].

The setting items are as follows:

Data Ports

Enable or disable access through data ports.

FTP

Enable or disable the functions for FTP.

The setting changes in conjunction with [Enable] in the [FTP] menu.

LPD

Enable or disable the LPD function.

The setting changes in conjunction with [Enable] in the [LPD] menu.

MAILC

When using the AEP (Application Enabled Printing) function, enable or disable port access for the product's internal e-mail client function.

NTP

Enable or disable the functions for NTP.

The setting changes in conjunction with [Enable] in the [NTP] menu.

Online Services

Selects the mode for SOS or disable SOS.

The setting changes in conjunction with [SOS Mode].

PING

Enable or disable PING access.

SATO All-In-One Tool

Enable or disable the access from SATO All-In-One Tool.

SCP

When using the AEP (Application Enabled Printing) function, enable or disable port access for the SCP client function.

SNMP Agent

Enable or disable the SNMP Agent function.

The setting changes in conjunction with [Enable] in the [Agent] menu.

WEBC

When using the AEP (Application Enabled Printing) function, enable or disable port access for the Web client function.

WebConfig


Enable or disable access to the web configuration page.

The below table shows the packet filtering setting for each allowed services and port setting.

[Allow Services And Ports]	[TCP Source Port]	[TCP Destination Port]	[UDP Source Port]	[UDP Destination Port]	[ICMP Type]
[Data Ports] *	-	1024,1025,9100	-	-	-
[FTP]	-	20,21	-	-	-
[LPD]	-	515	53	-	-
[MAILC]	465,587	-	53	-	-
[NTP]	-	-	53,123	-	-
[Online Services]*	443,8883	-	53	-	-
[PING]	-	-	-	-	0,8
[SATO All-In-One Tool]	-	9100	-	161,19541	-
[SCP]	22	-	53	-	-
[SNMP Agent]	-	-	-	161	-
[WEBC]	80,443,8080	-	53	-	-
[WebConfig]	-	80,443	-	-	-

*The values may vary depending on other settings.

[Online Services] (SOS users only)

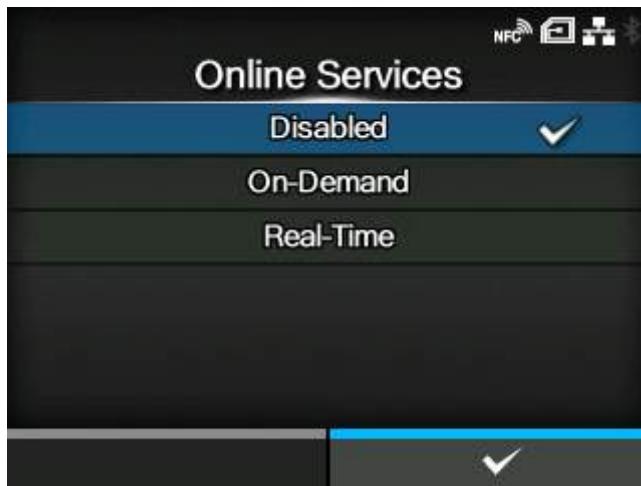

Select or disable the SOS (SATO Online Services) mode.

The options are as follows:

Disabled

Disable SOS.

On-Demand

Shows the product information with a QR code. Scan the displayed QR code with a tablet or smartphone, and send the information to the SOS cloud.

A specialized application is required to scan the QR code.


Real-Time

Sends the product information to the SOS cloud in real-time using a LAN/wireless LAN connection.

A confirmation screen appears if you select [Real-Time]. To agree with the Terms of Use and enable the Real-Time mode, press the button.



- The setting changes in conjunction with [SOS Mode].
-

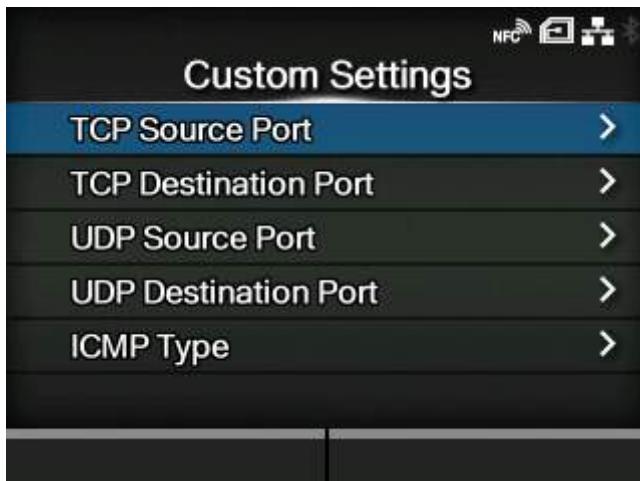[\[Custom Settings\]](#)

Specify the ICMP type or the port number of TCP or UDP to allow communication.

Available only if you have selected [Enabled] in the [Enable] menu.

The setting items are as follows:

[TCP Source Port](#)

Register the TCP source port number to allow communication.

[TCP Destination Port](#)

Register the TCP destination port number to allow communication.

[UDP Source Port](#)

Register the UDP source port number to allow communication.

[UDP Destination Port](#)

Register the UDP destination port number to allow communication.

[ICMP Type](#)

Register the ICMP type to allow communication.

[\[TCP Source Port\]](#)

Existing Port No.

The port number of the items enabled in [Allow Services And Ports] are shown.

Additional Port No.

Register the TCP source port number to allow communication.

[Additional Port No.]



Register the TCP source port number to allow communication.

The acceptable input values are as follows:

Active port number	An integer from 1 to 65535
Specifying multiple values	Delimit active port numbers using a comma “,”
Specifying a range	Create a range of active port numbers using a colon “:” (Input in the order of low port number: high port number)
Maximum number of specifications	21 ports in total by specifying with either numbers or a range
No setting	Blank

Input Example

Port number	Comments
10000	-
10000,10001,10002,10003	This results in the same ports in both settings to be allowed.
10000:10003	
10000,10001,10002,10003,20000	This results in the same ports in both settings to be allowed.
10000:10003,20000	

Port number	Comments
Blank	Keep it blank when no setting is needed

[TCP Destination Port]



Existing Port No.

The port number of the items enabled in [Allow Services And Ports] are shown.

Additional Port No.

Register the TCP destination port number to allow communication.

[Additional Port No.]



Register the TCP destination port number to allow communication.

The acceptable input values are as follows:


Active port number	An integer from 1 to 65535
Specifying multiple values	Delimit active port numbers using a comma ","
Specifying a range	Create a range of active port numbers using a colon ":" (Input in the order of low port number: high port number)

Maximum number of specifications	21 ports in total by specifying with either numbers or a range
No setting	Blank

Input Example

Port number	Comments
10000	-
10000,10001,10002,10003	This results in the same ports in both settings to be allowed.
10000:10003	
10000,10001,10002,10003,20000	This results in the same ports in both settings to be allowed.
10000:10003,20000	
Blank	Keep it blank when no setting is needed

[UDP Source Port]

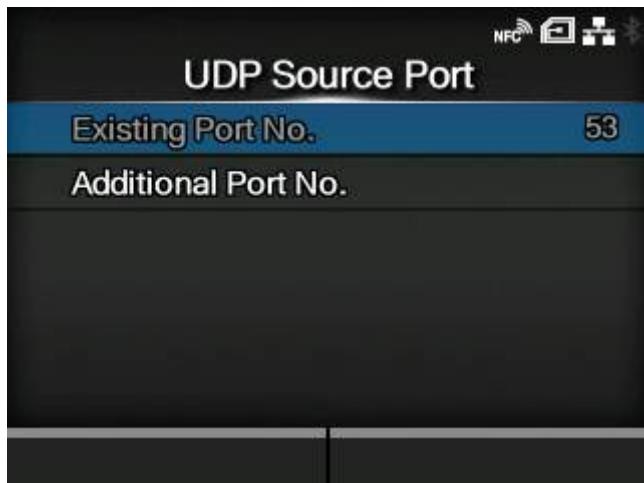


Existing Port No.

The port number of the items enabled in [Allow Services And Ports] are shown.

Additional Port No.

Register the UDP source port number to allow communication.

[Additional Port No.]

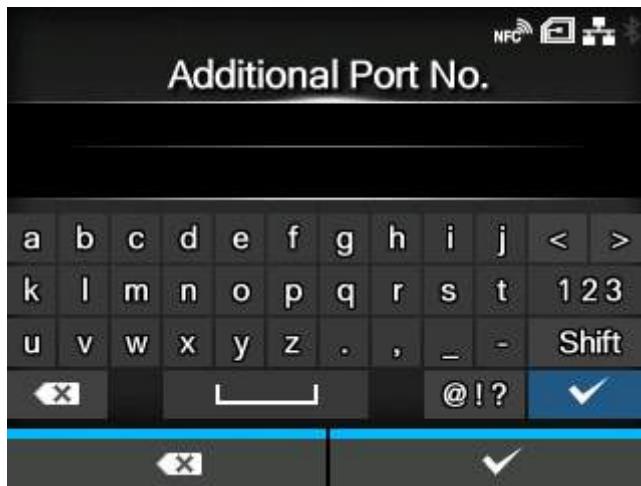

Register the UDP source port number to allow communication.


The acceptable input values are as follows:

Active port number	An integer from 1 to 65535
Specifying multiple values	Delimit active port numbers using a comma “,”
Specifying a range	Create a range of active port numbers using a colon “:” (Input in the order of low port number: high port number)
Maximum number of specifications	21 ports in total by specifying with either numbers or a range
No setting	Blank

Input Example

Port number	Comments
10000	-
10000,10001,10002,10003	This results in the same ports in both settings to be allowed.
10000:10003	This results in the same ports in both settings to be allowed.
10000,10001,10002,10003,20000	
10000:10003,20000	
Blank	Keep it blank when no setting is needed

[UDP Destination Port]

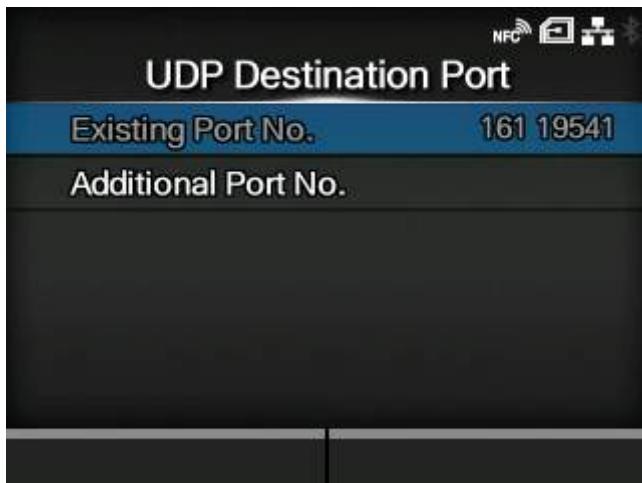


Existing Port No.

The port number of the items enabled in [Allow Services And Ports] are shown.

Additional Port No.

Register the UDP destination port number to allow communication.

[Additional Port No.]

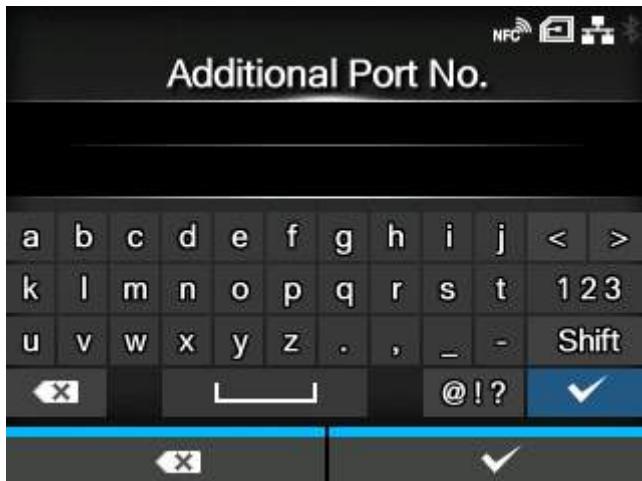

Register the UDP destination port number to allow communication.

The acceptable input values are as follows:


Active port number	An integer from 1 to 65535
Specifying multiple values	Delimit active port numbers using a comma ","
Specifying a range	Create a range of active port numbers using a colon ":" (Input in the order of low port number: high port number)
Maximum number of specifications	21 ports in total by specifying with either numbers or a range

No setting	Blank
------------	-------

Input Example

Port number	Comments
10000	-
10000,10001,10002,10003	This results in the same ports in both settings to be allowed.
10000:10003	
10000,10001,10002,10003,20000	This results in the same ports in both settings to be allowed.
10000:10003,20000	
Blank	Keep it blank when no setting is needed

[ICMP Type]

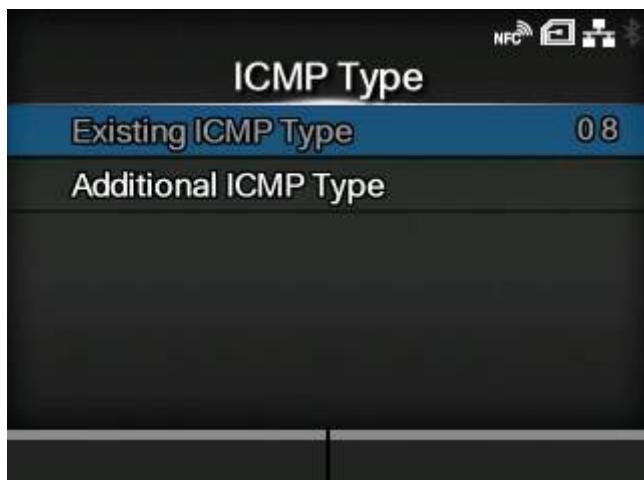
Existing ICMP Type

The ICMP type number of the items enabled in [Allow Services And Ports] are shown.

Additional ICMP Type

Register the ICMP type number to allow communication.

[Additional ICMP Type]

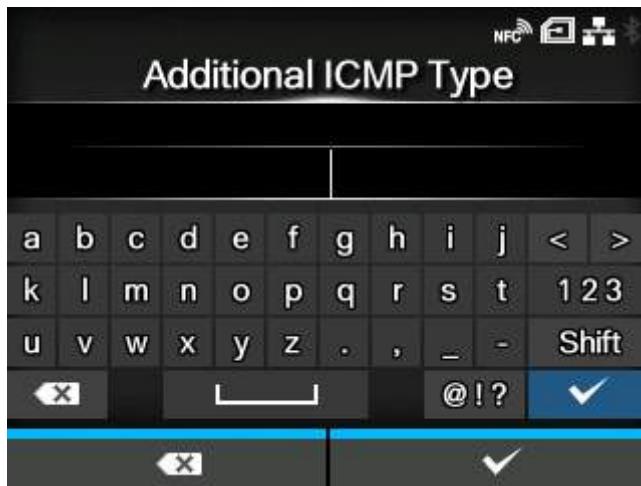


Register the ICMP type number to allow communication.

The acceptable input values are as follows:

Active ICMP type	An integer from 0 to 43
Specifying multiple values	Delimit active ICMP types using a comma “,”
Maximum number of specifications	44 ports
No setting	Blank

Input Example

ICMP type	Comments
0	-
0,1,2,3	-
Blank	Keep it blank when no setting is needed

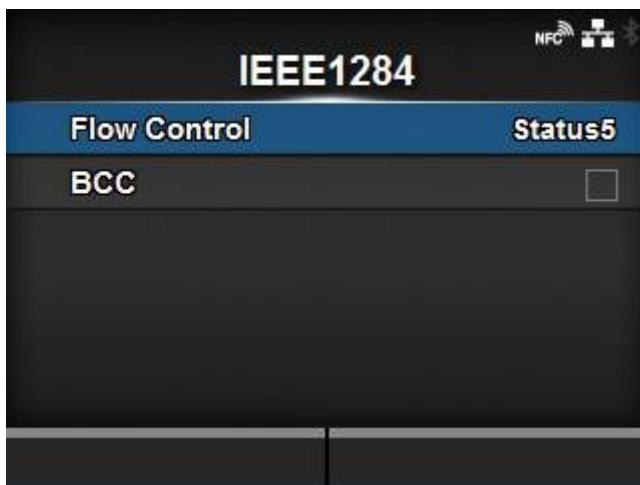[\[IEEE1284\]](#)

Set the IEEE1284 connection.

Appears only if the combo interface board is installed.

The setting items are as follows:


[Flow Control](#)

Set the communication protocol.

[BCC](#)

Set the BCC check function.

- Appears only if you have selected [Status5] in the [Flow Control] menu.

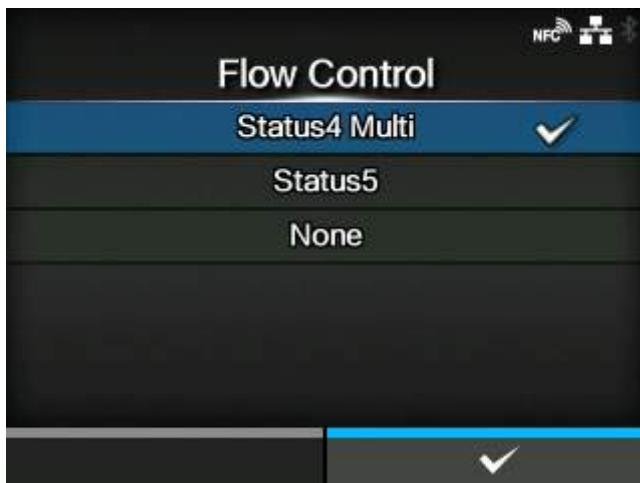[\[Flow Control\]](#)


Set the communication protocol.

The options are as follows:

- [Status4 Multi]
- [Status5]

- [None]

[BCC]

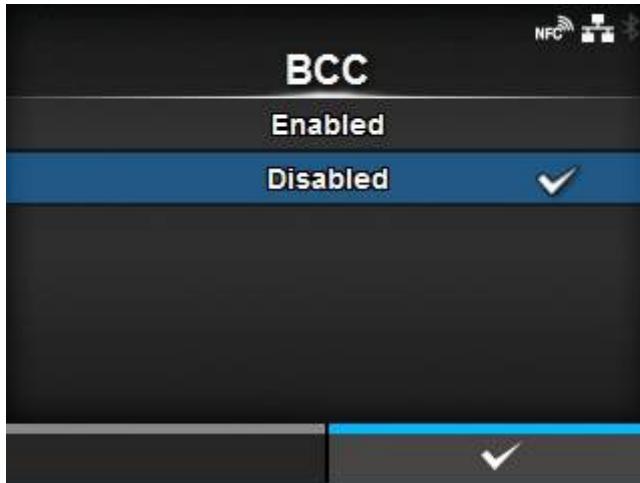

Enable or disable the BCC check function.

Appears only if you have selected [Status5] in the [Flow Control] menu.

The options are as follows:

Enabled

Enable the BCC check function.

Disabled

Disable the BCC check function.

[RS-232C]



Set the RS-232C connection.

Appears only if the combo interface board is installed.

The setting items are as follows:

Baudrate

Set the communication speed.

Parameters

Set the data parameters.

Flow Control

Set the communication protocol.

BCC


Set the BCC check function.

- Appears only if you have selected [STATUS5] in the [Flow Control] menu.



- When [Tools] > [Barcode Checker] > [Test] > [Interface] is set to [RS-232C Reader], you cannot change the [RS-232C] menus.

[Baudrate]

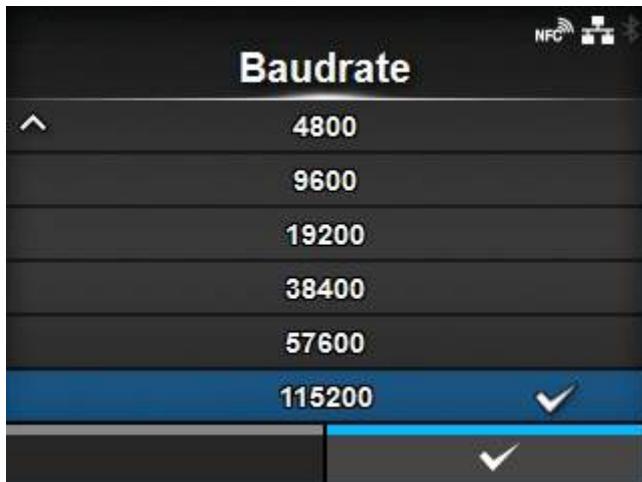


Set the baudrate (bps).

Available to change only if you have selected [RS-232C] in the [Tools] > [Barcode Checker] > [Test] > [Interface] menu.

The options are as follows:

- [2400]
- [4800]
- [9600]
- [19200]
- [38400]
- [57600]
- [115200]

[Parameters]

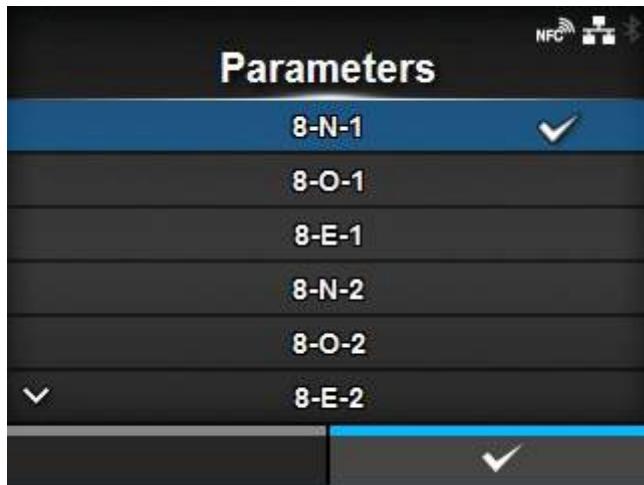

Set the data parameters.

Available to change only if you have selected [RS-232C] in the [Tools] > [Barcode Checker] > [Test] > [Interface] menu.

The options are as follows:

Refer to the table below for the parameter configurations.


- [8-N-1]
- [8-O-1]
- [8-E-1]
- [8-N-2]
- [8-O-2]
- [8-E-2]
- [7-N-1]
- [7-O-1]
- [7-E-1]
- [7-N-2]
- [7-O-2]
- [7-E-2]

Parameter Configurations List

Parameters	Data length (bit)	Parity	Stop bit (bit)
8-N-1	8	NONE	1
8-O-1	8	ODD	1
8-E-1	8	EVEN	1
8-N-2	8	NONE	2
8-O-2	8	ODD	2

Parameters	Data length (bit)	Parity	Stop bit (bit)
8-E-2	8	EVEN	2
7-N-1	7	NONE	1
7-O-1	7	ODD	1
7-E-1	7	EVEN	1
7-N-2	7	NONE	2
7-O-2	7	ODD	2
7-E-2	7	EVEN	2

[Flow Control]

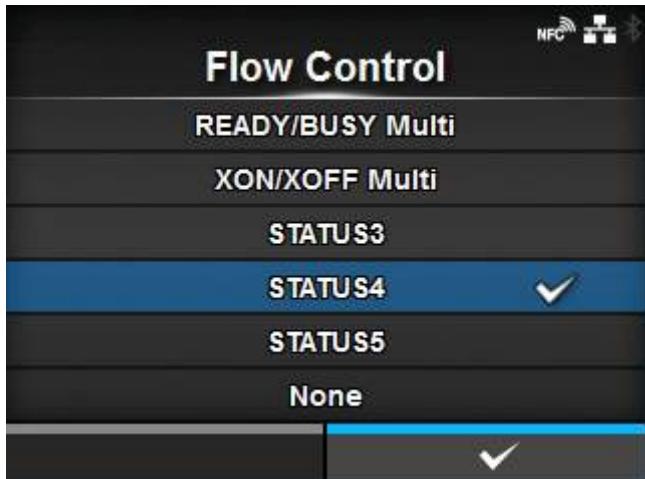


Set the communication protocol.

Available to change only if you have selected [RS-232C] in the [Tools] > [Barcode Checker] > [Test] > [Interface] menu.

The options are as follows:

- [READY/BUSY Multi]
- [XON/XOFF Multi]
- [STATUS3]
- [STATUS4]
- [STATUS5]
- [None]

[BCC]

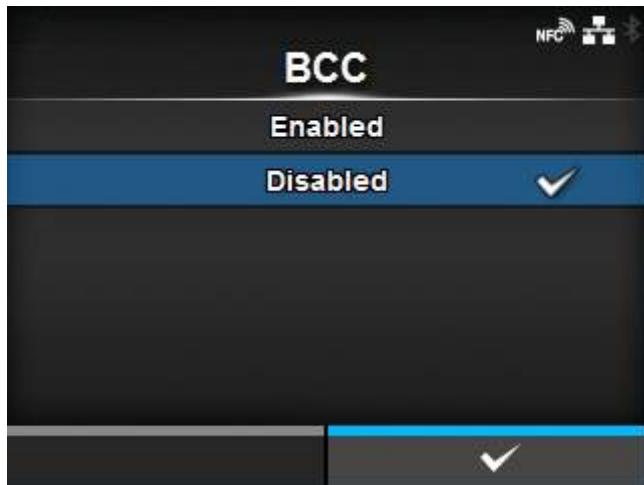

Enable or disable the BCC check function.

Appears only if you have selected [RS-232C] in the [Tools] > [Barcode Checker] > [Test] > [Interface] menu and if you have selected [STATUS5] in the [Flow Control] menu.

The options are as follows:


Enabled

Enable the BCC check function.

Disabled

Disable the BCC check function.

[USB]

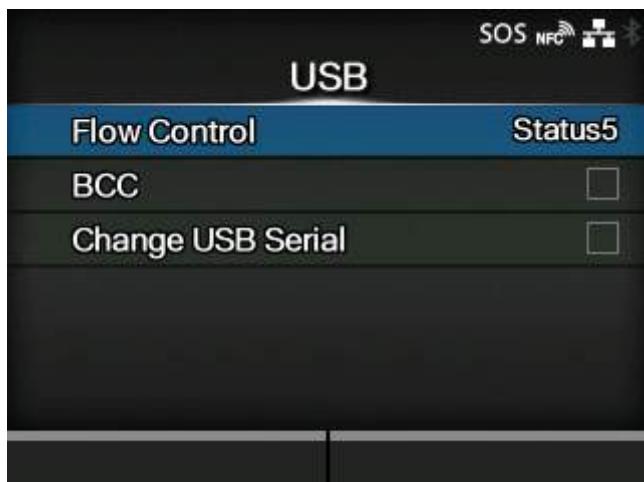

Set the USB connection.

The setting items are as follows:

Flow Control

Set the communication protocol.


BCC

Set the BCC check function.

- Appears only if you have selected [Status5] in the [Flow Control] menu.

Change USB Serial

Set the type of the USB serial number that the product returns.

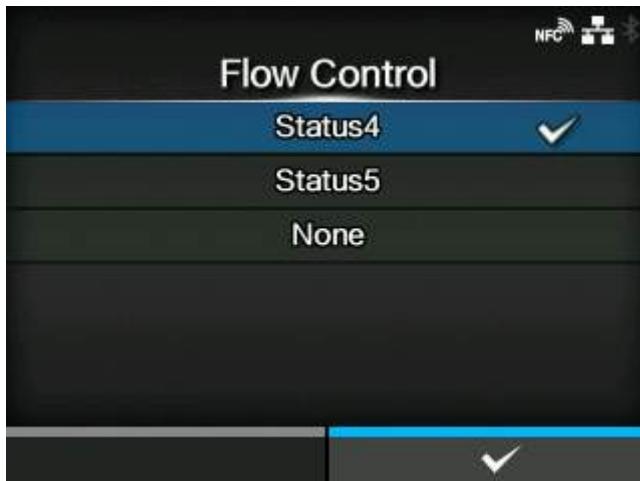[\[Flow Control\]](#)

Set the communication protocol.

The options are as follows:

- [Status4]
- [Status5]
- [None]

[\[BCC\]](#)

Enable or disable the BCC check function.

Appears only if you have selected [Status5] in the [Flow Control] menu.

The options are as follows:


Enabled

Enable the BCC check function.

Disabled

Disable the BCC check function.

[Change USB Serial]

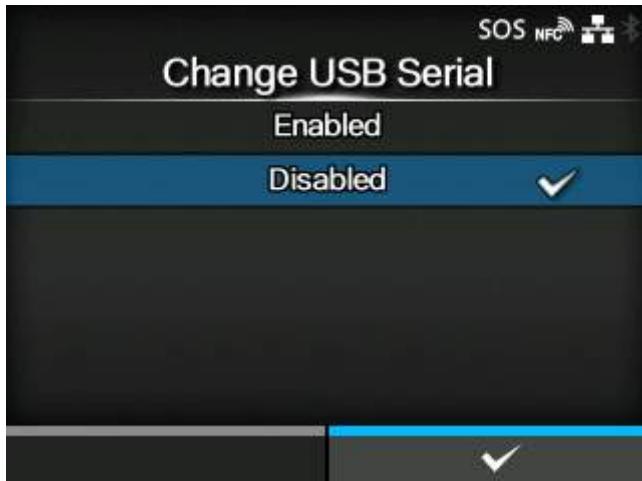

Set the type of the USB serial number that the product returns.

The options are as follows:

Enabled

Returns the USB serial number (00000000).

This option is suitable when you want to replace the product without adding a new printer driver.

To do so, you need to set this setting to enabled before installing the product.

Disabled


Returns the factory set USB serial number (unique to each product).

This option is suitable when you want to set the printer driver for each product.



- If two products that have the same USB serial number connected to the same computer, it may cause the computer to show a blue screen error.

[Bluetooth]

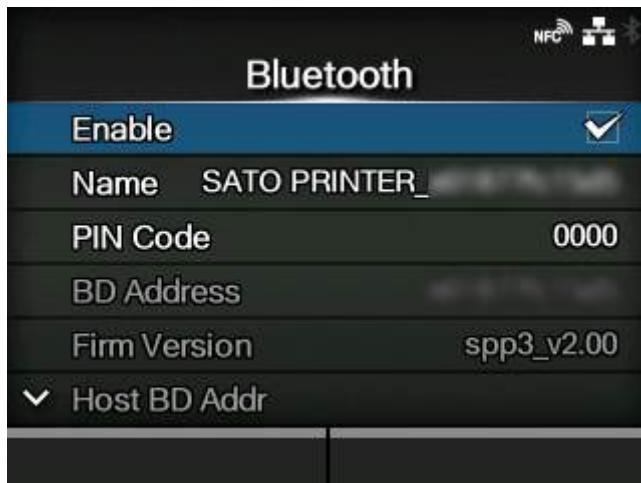

Set the Bluetooth connection.

The setting items are as follows:

Enable

Enable or disable the functions for Bluetooth.

Name

Set the device name for the product.

PIN Code

Set the PIN code.

BD Address

Shows the BD address of the product. (You cannot change this address.)

Firm Version

Shows the firmware version of the Bluetooth. (You cannot change this value.)

Host BD Addr

Check the Host BD address.

Authentication

Set the authentication level.

ISI

Set the ISI communication parameter.

ISW

Set the ISW communication parameter.

PSI

Set the PSI communication parameter.

PSW

Set the PSW communication parameter.


CRC Mode

Set the CRC check function.

Flow Control

Set the communication protocol.

[Enable]

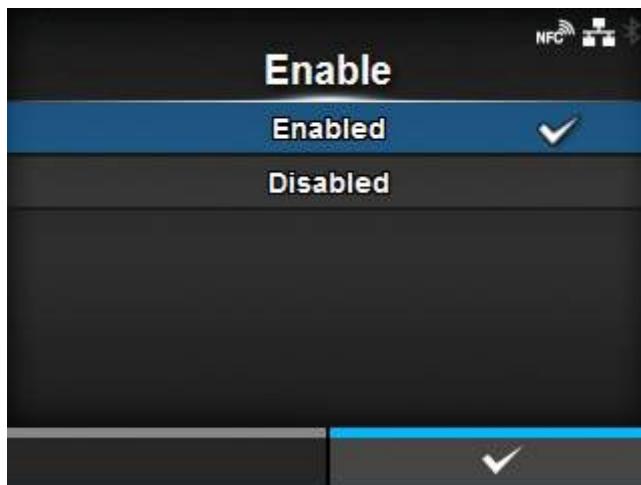

Enable or disable the functions for Bluetooth.

The options are as follows:

Enabled

Enable the Bluetooth function.

Disabled

Disable the Bluetooth function.

[Name]



Set the device name for the product.

You can enter 1 to 53 characters. Alphabets (capital and small letters), numbers and symbols can be used.


[PIN Code]



Set the PIN code.

You can enter 4 to 16 characters for the PIN code. Alphabets (capital and small letters), numbers and symbols can be used.

[Authentication]

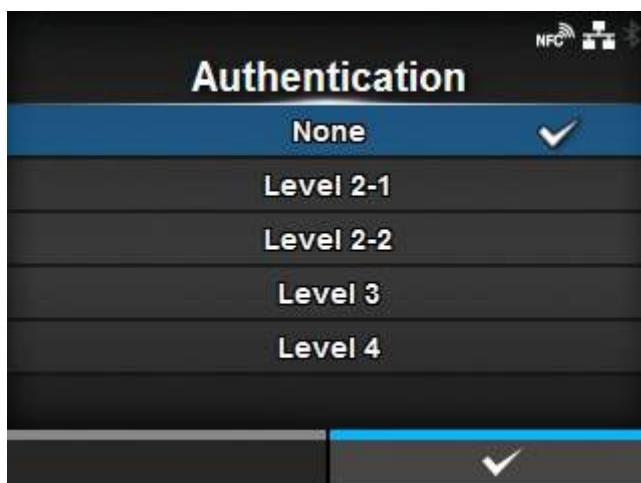

Set the authentication level.

The options are as follows:

None

None

Level 2-1

PIN code authentication, service level, no encryption

Level 2-2

PIN code authentication, service level, encryption

Level 3

PIN code authentication, link level, no encryption

Level 4

Secure Simple Pairing compatible, service level, encryption (Can be communicated with devices that are not compatible with Secure Simple Pairing)

[ISI]




Set the ISI communication parameter.

The setting range is from 18 to 4096.

Set to a value that is higher than the ISW communication parameter setting value.

[ISW]

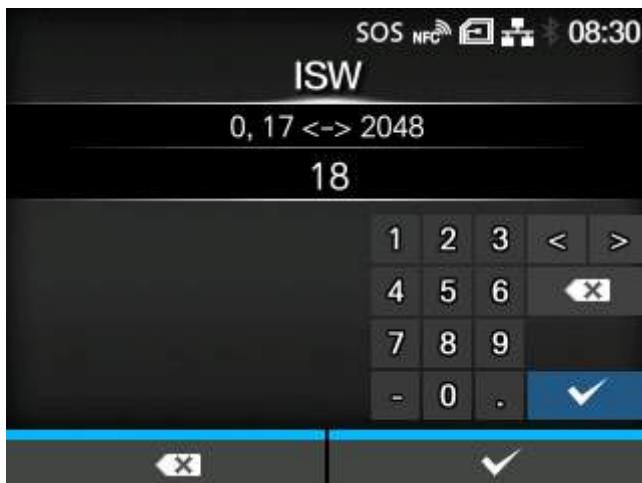

Set the ISW communication parameter.

The setting range is 0, or from 17 to 4096.

The setting range varies depending on the ISI communication parameter setting value.

Set to a value that is less than the ISI communication parameter setting value.

[PSI]



Set the PSI communication parameter.

The setting range is from 18 to 4096.

Set to a value that is higher than the PSW communication parameter setting value.

[PSW]




Set the PSW communication parameter.

The setting range is from 17 to 4096.

The setting range varies depending on the PSI communication parameter setting value.

Set to a value that is less than the PSI communication parameter setting value.

[CRC Mode]

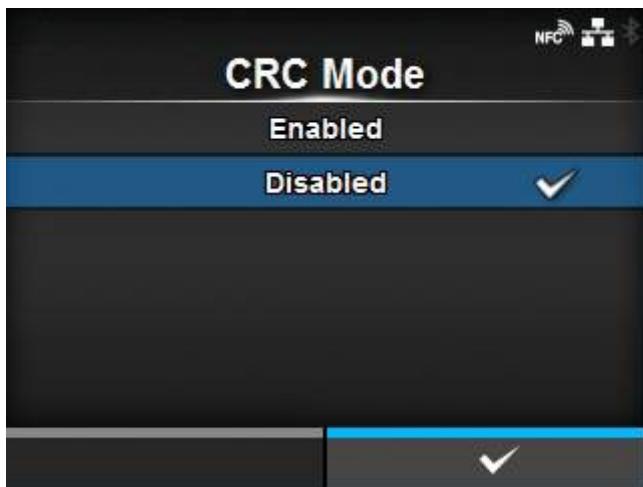

Enable or disable the CRC check function.

The options are as follows:


Enabled

Enable the CRC check function.

Disabled

Disable the CRC check function.

[Flow Control]

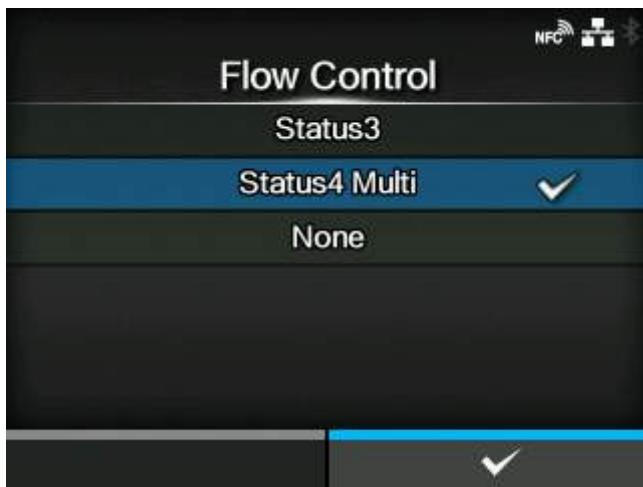


Set the communication protocol.

The options are as follows:

- [Status3]
- [Status4 Multi]
- [None]

[NFC]

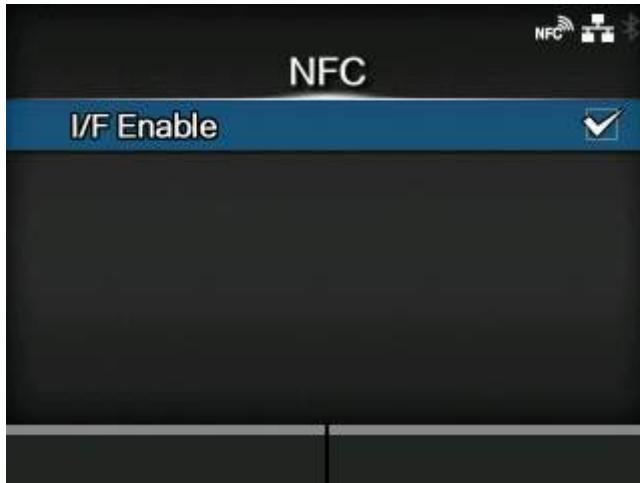

Sets the NFC connection.

The setting item is as follows:


I/F Enable

Enables or disables the NFC interface.



- This feature is supported on products from serial number 6B~ and above.

[I/F Enable]

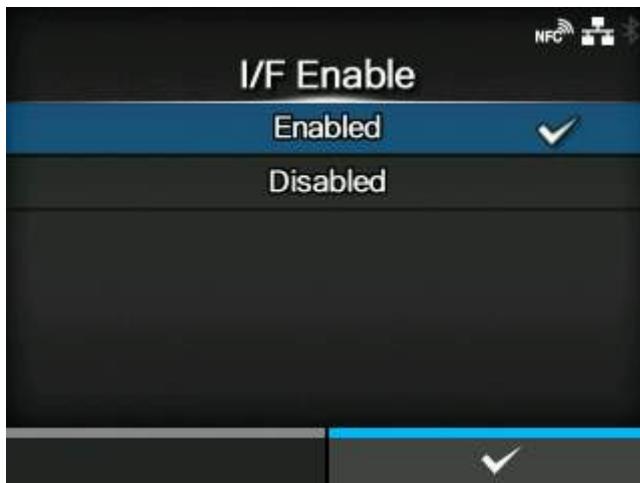

Enables or disables the NFC interface.

The options are as follows:

Enabled

Enables the NFC interface.


Disabled

Disables the NFC interface.



- This feature is supported on products from serial number 6B~ and above.

[Ignore CR/LF]

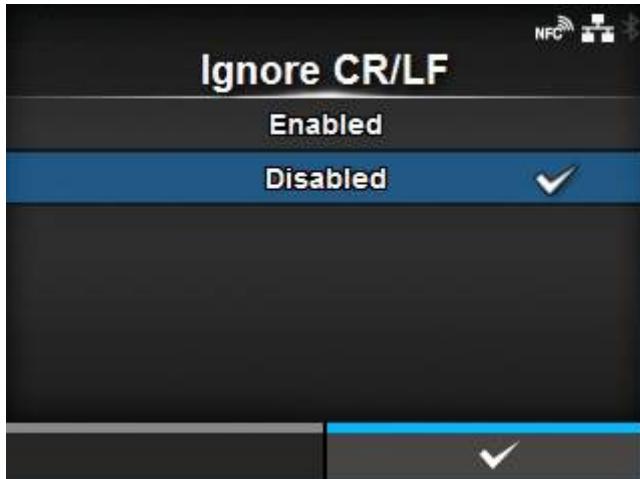

Set whether to ignore the CR/LF code (0x0D / 0x0A) in the received data.

The options are as follows:


Enabled

Ignore the CR/LF code.

Disabled

Do not ignore the CR/LF code.

[Ignore CAN/DLE]

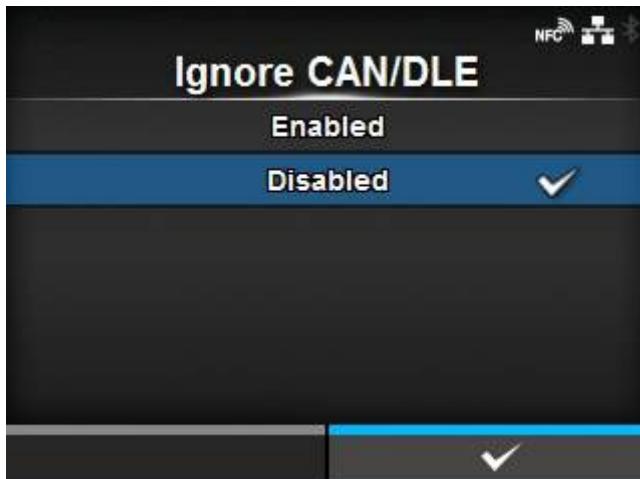

Set whether to ignore the CAN/DLE code (0x18 / 0x10) in the received data.

The options are as follows:

Enabled

Ignore the CAN/DLE code.

Disabled

Do not ignore the CAN/DLE code.

[External I/O]



Use the external (EXT) terminal as an interface between the external device and the product.

Appears if the combo interface board is installed.

The setting items are as follows:

Print Start Signal

Enable or disable the Print Start signal.

Signals


Set the input/output signals.

- Appears if you have selected [Enabled] in the [Print Start Signal] menu.

EXT I/O Re-print

Set the reprint function that uses the external terminal.

[Print Start Signal]

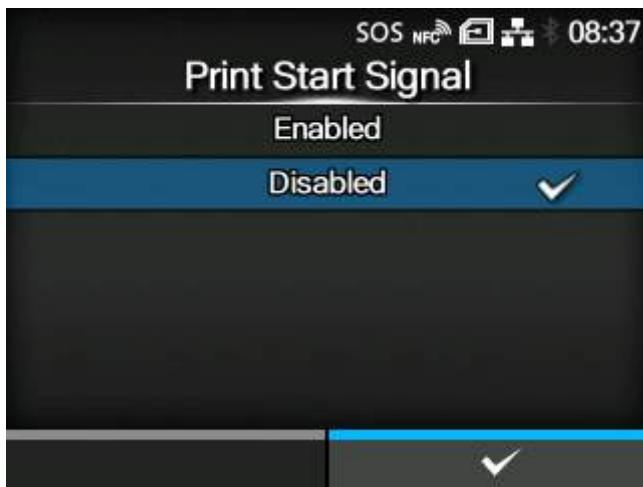

Enable or disable the Print Start signal.

The options are as follows:


Enabled

Enable the Print Start signal.

Disabled

Disable the Print Start signal.

[Signals]

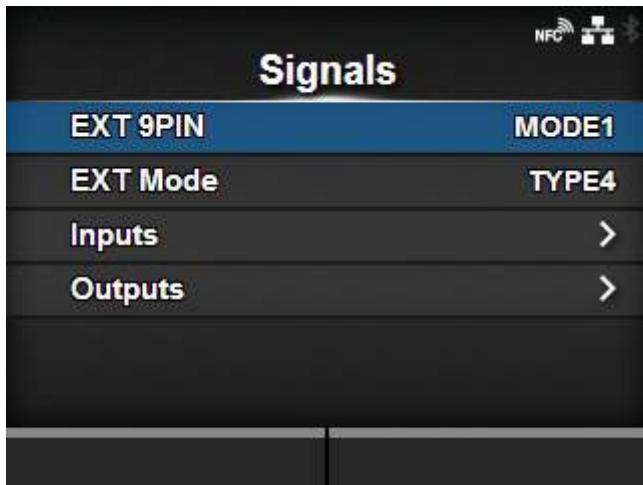

Set the input/output signals.

Appears only if you have selected [Enabled] in the [Print Start Signal] menu.

The setting items are as follows:

EXT 9PIN

Set the function of the EXT 9PIN output.

EXT Mode


Set the mode of the Print End signal.

Inputs

Assign the pin No. to the input signals Print Start and Reprint.

Outputs

Assign the pin No. to output signals.

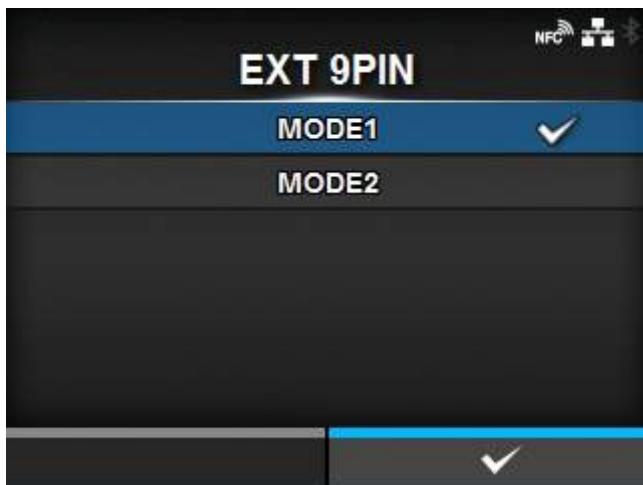[EXT 9PIN]

Set the function of the EXT 9PIN output.


The options are as follows:

MODE1

The output signal becomes "Active" only when there is data in print buffer and product is ONLINE.

MODE2

The output signal becomes "Active" when product is ONLINE.

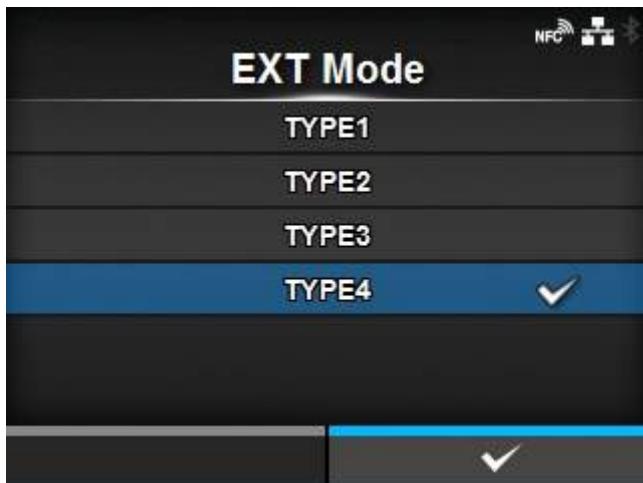[EXT Mode]

Set the mode of the Print End signal.

The options are as follows:

TYPE1

20 ms "LOW" pulse will be provided after the completion of print and dispense for the Print End signal (PREND).

TYPE2

20 ms "HIGH" pulse will be provided after the completion of print and dispense for the Print End signal (PREND).

TYPE3

The Print End signal (PREND) will be "LOW" during label printing and feed forwarding.


TYPE4

The Print End signal (PREND) will be "HIGH" during label printing and feed forwarding.



- For details, refer to the Timing Charts.

[Inputs]

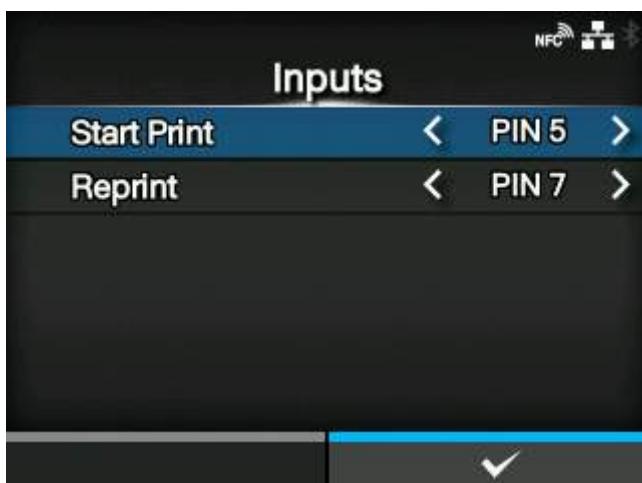

Assign the pin No. to the input signals Print Start and Reprint.

Press the / buttons to highlight the item that you want to change, and press the / buttons to change the pin No.

Press the button to save the settings and return to the [Signals] menu.

The setting items are as follows:

Start Print

Assign the pin No. for the Print Start signal input.

The options are as follows:

[PIN 5]	Assign Pin 5 to the Print Start signal.
[PIN 7]	Assign Pin 7 to the Print Start signal.

Reprint

Assign the pin No. for the Reprint signal input.

The options are as follows:


[PIN 5]	Assign Pin 5 to the Reprint signal.
[PIN 7]	Assign Pin 7 to the Reprint signal.




- You cannot set any inputs using the same pin number. If you attempt to set the same number, the settings will be shown in red and you cannot save the settings.

[Outputs]

If the mode is other than RFID mode

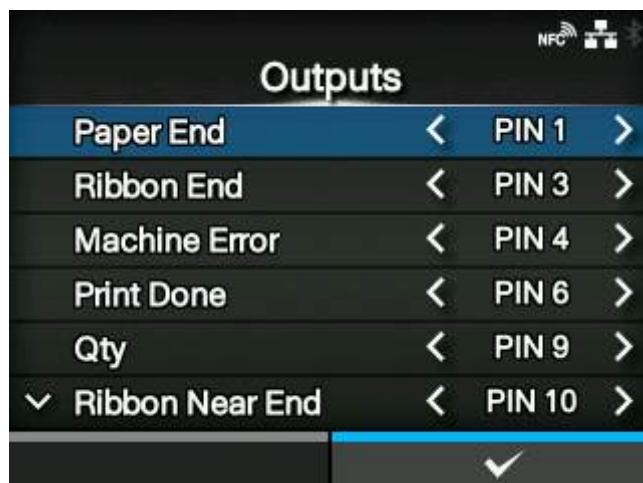

If RFID mode is enabled (CL4NX only)

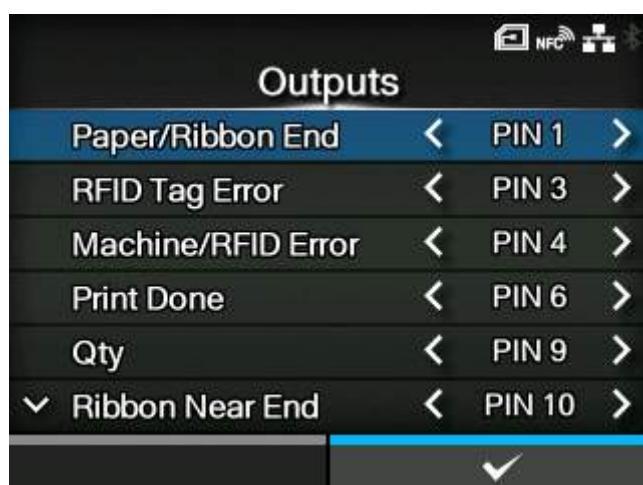

Assign the pin No. to output signals.

Press the / buttons to highlight the item that you want to change, and press the / buttons to change the pin No.

Press the button to save the settings and return to the [Signals] menu.

The setting items are as follows:

Paper End

Paper/Ribbon End (If RFID mode is enabled) (CL4NX only)

Assign the pin No. for the Paper End signal output.

Assign the pin No. for the Paper/Ribbon End signal output if you have installed the RFID.

Ribbon End

RFID Tag Error (If RFID mode is enabled) (CL4NX only)

Assign the pin No. for the Ribbon End signal output.

Assign the pin No. for the RFID Tag Error signal output if you have installed the RFID.

Machine Error

Machine/RFID Error (If RFID mode is enabled) (CL4NX only)

Assign the pin No. for the Machine Error signal output.

Assign the pin No. for the Machine/RFID Error signal output if you have installed the RFID.

Print Done

Assign the pin No. for the Print Done signal output.

Qty

Offline

[Qty] is shown if [MODE1] is selected in the [EXT 9PIN] menu.

[Offline] is shown if [MODE2] is selected in the [EXT 9PIN] menu.

Assign the pin No. for the Qty/Offline signal output.

Ribbon Near End

Assign the pin No. for the Ribbon Near End signal output.

Dispenser

Assign the pin No. for the Dispenser signal output.

- Use this signal to connect the dispenser unit or linerless cutter kit (CL4NX only).

Label Near End

Assign the pin No. for the Label Near End signal output.

*This feature is supported on products from serial number 6B~ and above.

The options for each signal output are as follows:


[PIN 1]	Set the selected signal to pin 1.
[PIN 3]	Set the selected signal to pin 3.
[PIN 4]	Set the selected signal to pin 4.
[PIN 6]	Set the selected signal to pin 6.
[PIN 9]	Set the selected signal to pin 9.
[PIN 10]	Set the selected signal to pin 10.

[OFF]	Set the selected signal to off mode.
-------	--------------------------------------



- You cannot set any outputs using the same pin number. If you attempt to set the same number, the settings will be shown in red and you cannot save the settings.

[EXT I/O Re-print]

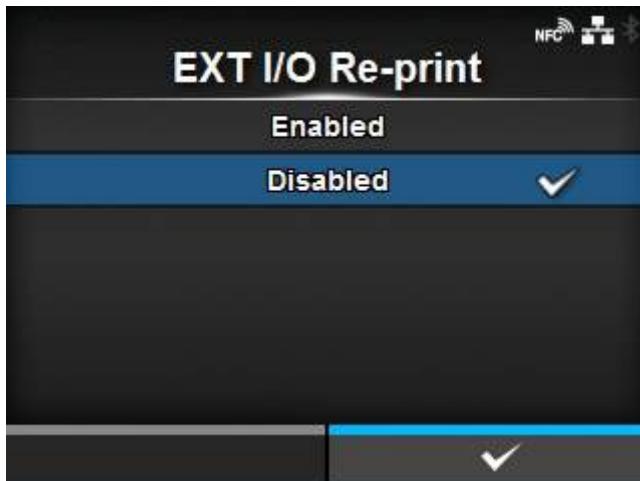

Set the reprint function that uses the external terminal.

The options are as follows:

Enabled

Enable the reprint function.

Disabled

Disable the reprint function.

[RFID] (CL4NX only)



Set the RFID.

Appears only for the RFID model.

The setting items are as follows:

[Antenna Pitch](#)

Set the antenna pitch.

[Write Power](#)

Set radio power level used to write information to RFID tag.

[Read Power](#)

Set radio power level used to read information from RFID tag.

[Tag Offset](#)

Set distance to print on label BEFORE pausing to encode RFID.

[Reader Model](#)

Shows the RFID module model.

[Reader Version](#)

Shows the RFID module firmware version.

[View](#)

Shows the RFID tag data.

[Filter Function](#)

Set the RSSI filter function.

[Retry Mode](#)

Set whether to retry encoding of failed data when an RFID error occurs.

[Retries](#)

Set the number of failed encoding attempts before error warning/print pause.

[Mark bad tags](#)

Set the error print for the RFID tag error.

[Non-RFID Warning](#)

Set the non-RFID warning message.

[Log RFID Data](#)

Set the log function to record the encoded tag information.

[Data To Record](#)

Set the data to be recorded.

[Output Error Mode](#)

Set the signal type for RFID errors.

[Pulse Length](#)

Set the length of an RFID error pulse.

- Appears only if you have selected [Pulse] in the [Output Error Mode] menu.


[Counters](#)

Shows the RFID counter.

Paper

Set the paper type of RFID tags and the print reference position in the vertical direction.

[Antenna Pitch]  

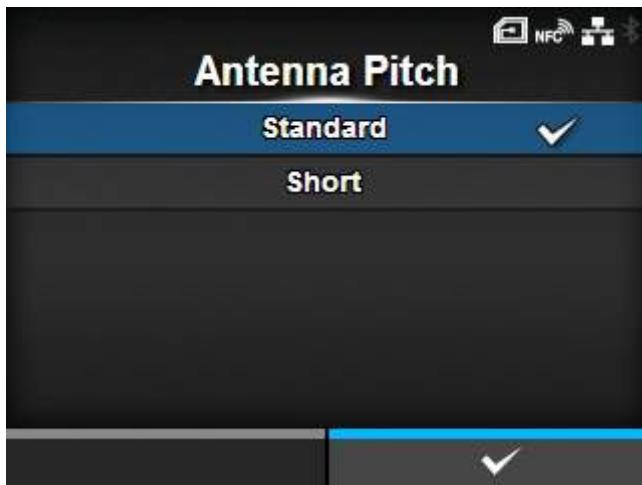

Set the antenna pitch according to the Inlay Configuration Guide. For details, access the following URL:

<http://www.satoworldwide.com/rfid/>

Appears only if the module is UHF.

The options are as follows:

- [Standard]
- [Short]

[Write Power]  



Set radio power level used to write information to RFID tag according to the Inlay Configuration Guide. For details, access the following URL:

<http://www.satoworldwide.com/rfid/>

Appears only if the module is UHF.

The setting range is from 0 to 24 dBm.

[Read Power]  



Set radio power level used to read information from RFID tag according to the Inlay Configuration Guide. For details, access the following URL:

<http://www.satoworldwide.com/rfid/>

Appears only if the module is UHF.

The setting range is from 0 to 24 dBm.

[Tag Offset]  




Set distance to print on label BEFORE pausing to encode RFID according to the Inlay Configuration Guide. This setting will be used when labels are not compatible with the CL4NX's antenna positions. For details, access the following URL:

<http://www.satoworldwide.com/rfid/>

The setting range is from 0 to 240 mm.

[View]

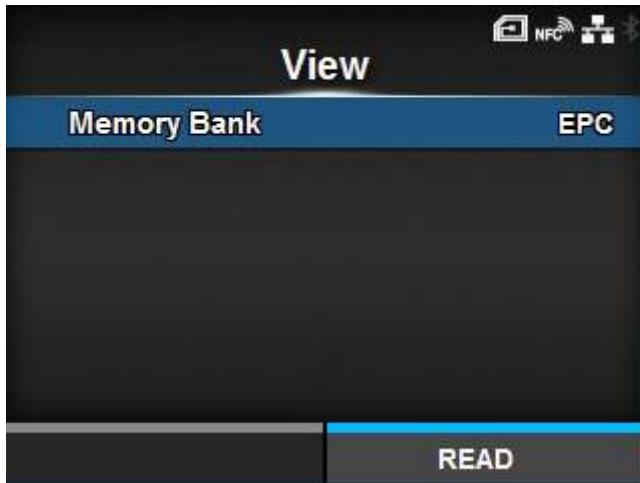


Shows the RFID tag data.

Press the button to change to the [Memory Bank] screen.

Press the button (READ) to change to the [Data Reading] screen, to read and show the data.

On the [Data Reading] screen, you can press the button to feed the media and attempt to read the tag currently set in the product.

[Memory Bank]

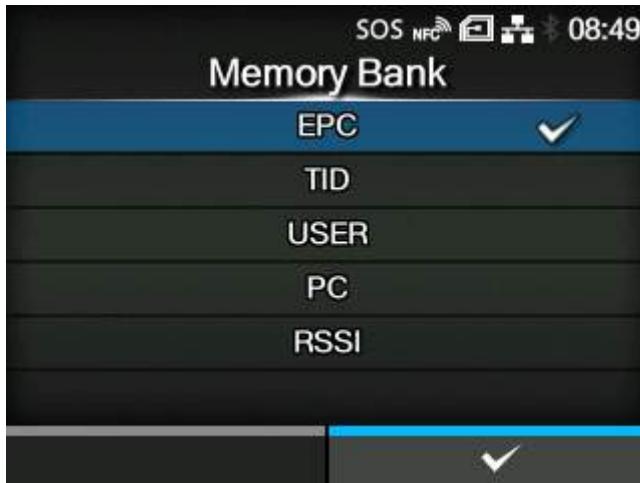

Set the memory area of the RFID tag to read.

The readable memory areas are as follows:

If the installed module is UHF

EPC

 EPC area

TID

 TID area

USER

USER area

PC

PC/AFI area

RSSI

RSSI area

If the installed module is HF


USER

USER area

UID

UID area

[Filter Function]

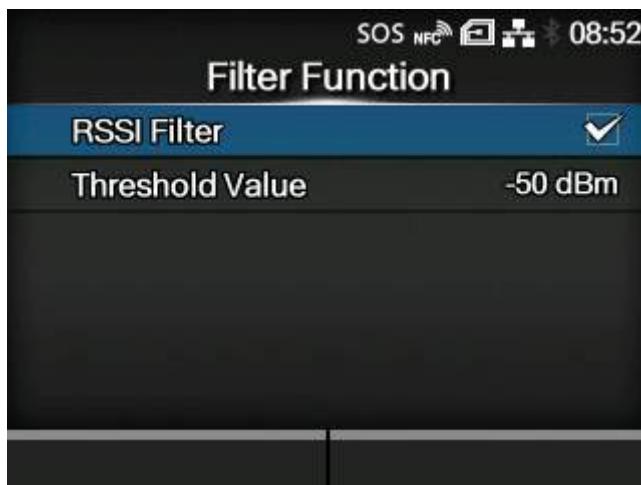

Set the filter function by RSSI (Received Signal Strength Indication). If the RSSI value read while printing an RFID tag is lower than the specified threshold value, the RFID tag is processed as an NG tag.

The setting items are as follows:


RSSI Filter

Enable or disable the RSSI filter function.

Threshold Value

Set the threshold value for the RSSI filter.

- Appears only if [Enabled] is selected in the [RSSI Filter] menu.

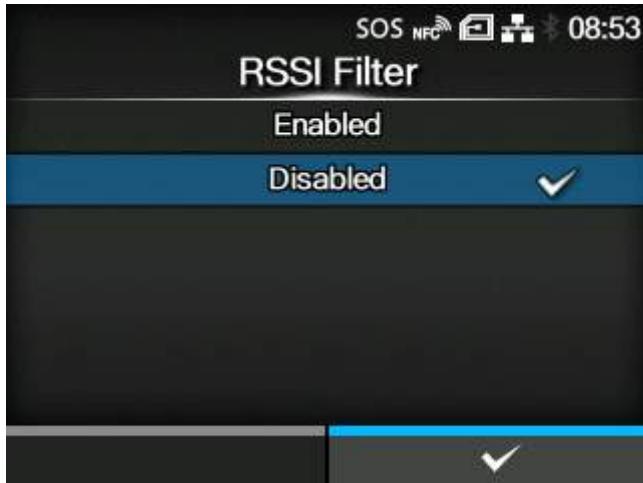[\[RSSI Filter\]](#)

Enable or disable the RSSI filter function.


The options are as follows:

Enabled

Enable the RSSI filter function.

Disabled

Disable the RSSI filter function.

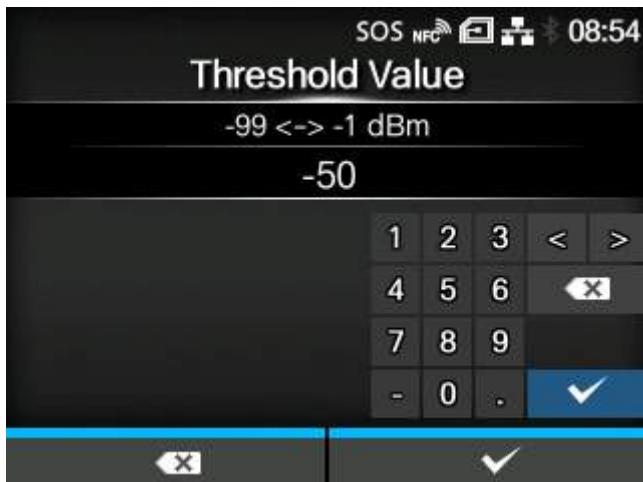
[\[Threshold Value\]](#)

Set the threshold value for the RSSI filter.

Appears only if [Enabled] is selected in the [RSSI Filter] menu.

The setting range is from -99 to -1 dBm.

[Retry Mode]  

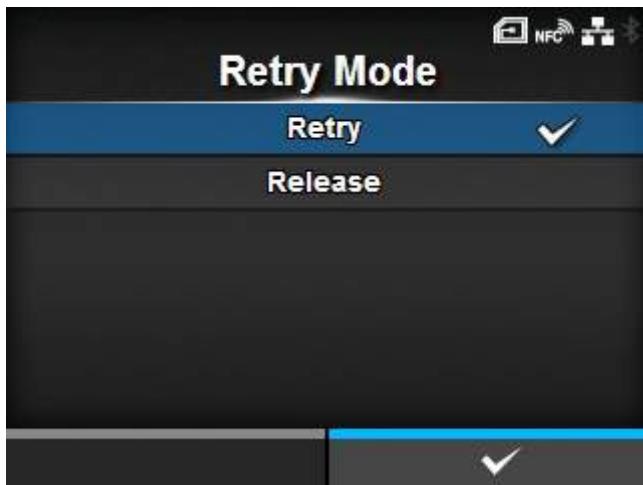

Set whether to retry encoding of failed data when an RFID error occurs.

The options are as follows:

Retry

The product will continue to attempt encoding the same data. However, if you have set [Retries] to 0, the RFID error screen appears and printing continues.

Release

Deletes the current print job, allowing the product to move on to the next print job. If the RFID error occurs continuously and reaches the maximum number of [Retries], printing stops.

[Retries]  




Set the number of failed encoding attempts before error warning/print pause.

The setting range is from 0 to 9.

If you set to 0, the RFID error screen appears and printing continues.

[Mark bad tags]  

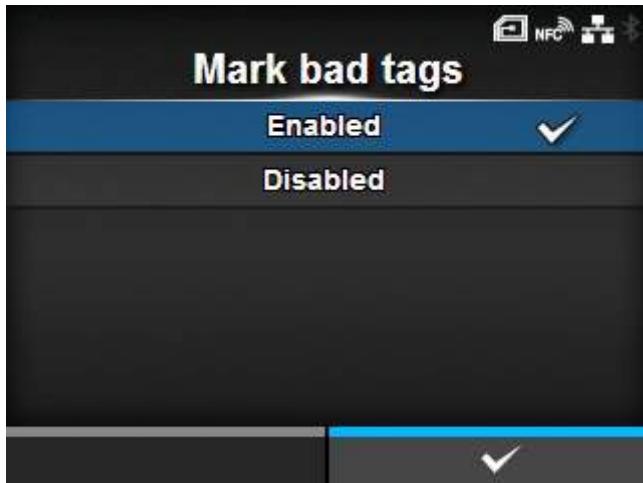

Set the error print for the RFID tag error.


Enabled

Enable the RFID error print function.

Disabled

Disable the RFID error print function.

[Non-RFID Warning]  

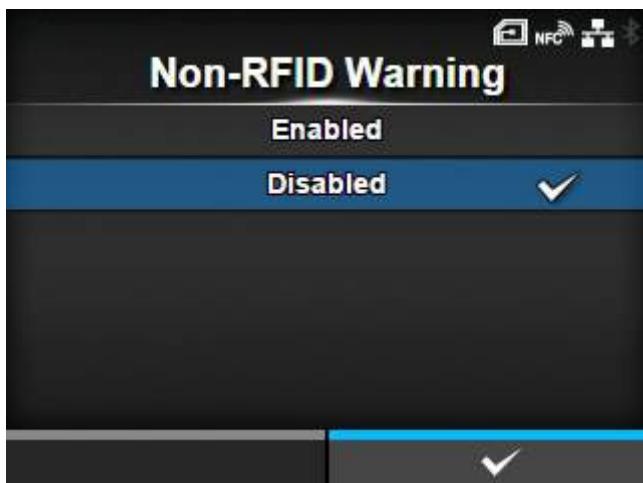

Set whether to warn the use of an RFID tag by mistake if RFID command is not used.

The options are as follows:

Enabled

Shows the non-RFID warning upon error.

Disabled


Ignore the non-RFID error.

With Non-RFID warning enabled and RFID tag loaded, if the items received do not contain an RFID issue command, a warning error appears before printing so that the RFID tag will not be wasted.



Press the button (CANCEL) to clear the warning message.

[Log RFID Data]

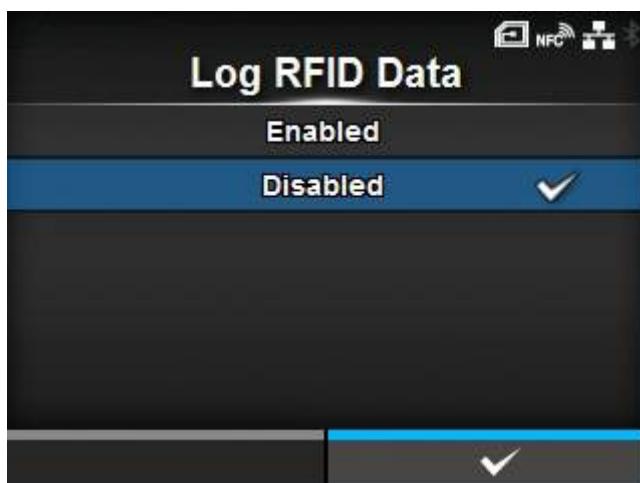

Set the log function to record the encoded tag information.

The log data can record up to 100 tags of information.

The options are as follows:

Enabled


Enable the log function to record the RFID data.

Disabled

Disable the log function to record the RFID data.



- UID data is recorded if the module is HF.

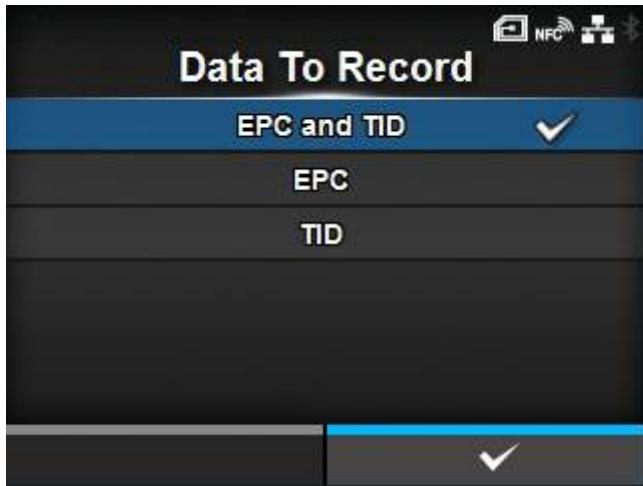[Data To Record]  

Set the data to record the log when [Log RFID Data] is enabled.

Appears only if the module is UHF.

The options are as follows:

EPC and TID


Store the EPC and TID data.

EPC

Store the EPC data.

TID

Store the TID data.

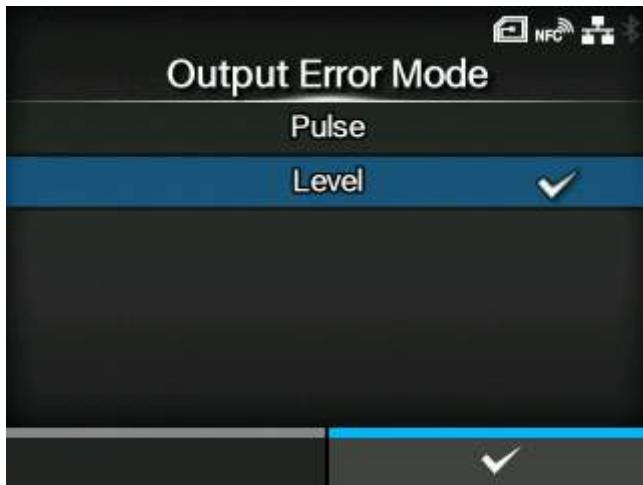[Output Error Mode]  

Set the signal type for RFID errors.

The options are as follows:


Pulse

Outputs a pulse as the output signal when an RFID error occurs.

Level

Outputs a level as the output signal when an RFID error occurs.

[Pulse Length]  

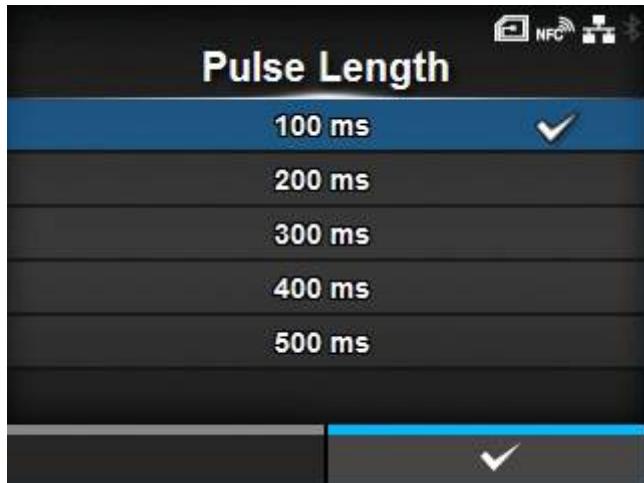


Set the length of an RFID error pulse.

Appears only if you have selected [Pulse] in the [Output Error Mode] menu.

The options are as follows:

- [100 ms]
- [200 ms]
- [300 ms]
- [400 ms]
- [500 ms]

[Counters]  

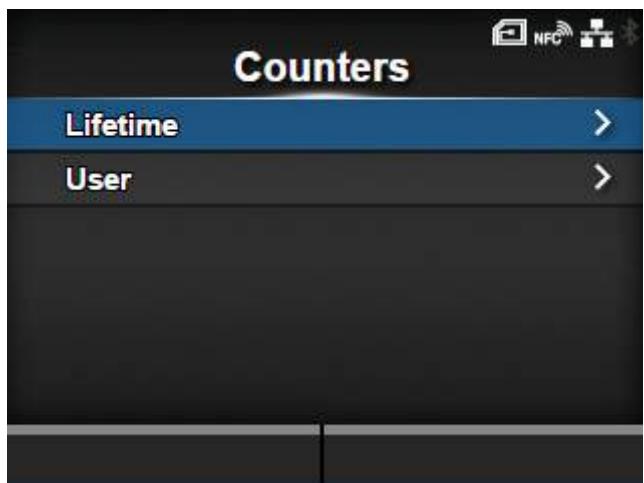

Shows the RFID counter.

The display items are as follows:


Lifetime

Shows the number of encoding successes, failures, and total attempts.

User

Shows the number of encoding successes, failures, and total attempts after the RFID counter is cleared.

[Lifetime]  

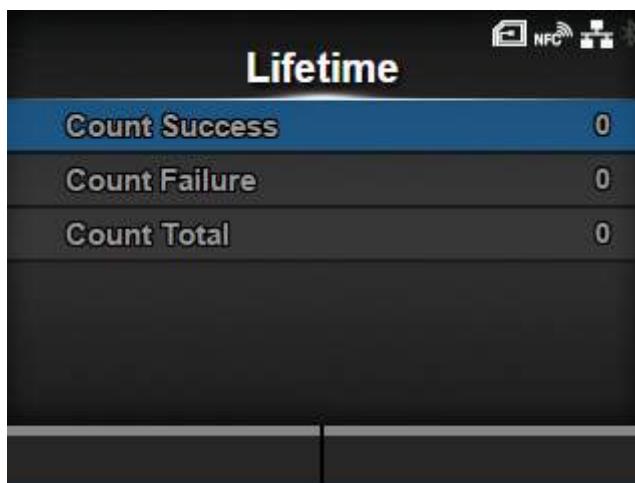

Shows the number of encoding successes, failures, and total attempts.

The display items are as follows:

Count Success

Shows the total number of successful times you have written to an RFID tag.

Count Failure

Shows the total number of RFID write errors.

Count Total

Shows the total number of times you have written to an RFID tag.

This is the total number including [Count Success] and [Count Failure].

[User] UHF HF



Shows the number of encoding successes, failures, and total attempts after the RFID counter is cleared.

The display items are as follows:

Count Success

Shows the total number of successful times you have written to an RFID tag after the RFID counter is cleared.

Count Failure

Shows the total number of RFID write errors after the RFID counter is cleared.

Count Total


Shows the total number of times you have written to an RFID tag after the RFID counter is cleared.

This is the total number including [Count Success] and [Count Failure].



- You can reset the counter using the  button ([CLEAR]) when the counter is 1 or higher.

[Paper]

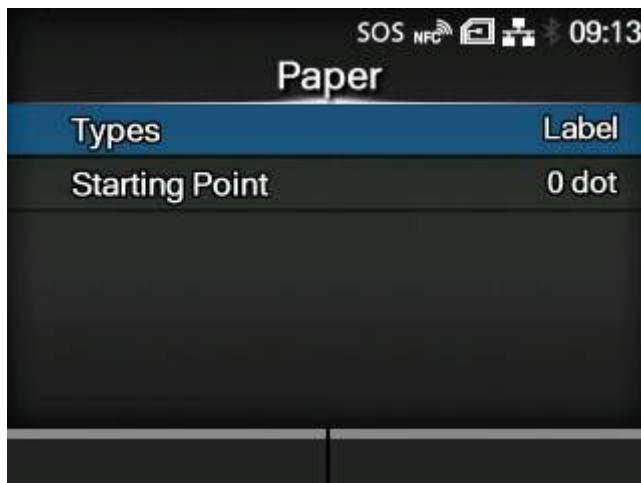

Set the paper type of RFID tags and the print reference position in the vertical direction.

The setting items are as follows:


Types

Set the paper type of RFID tags.

Starting Point

Set the print reference position of RFID tags in the vertical direction.

[Types]

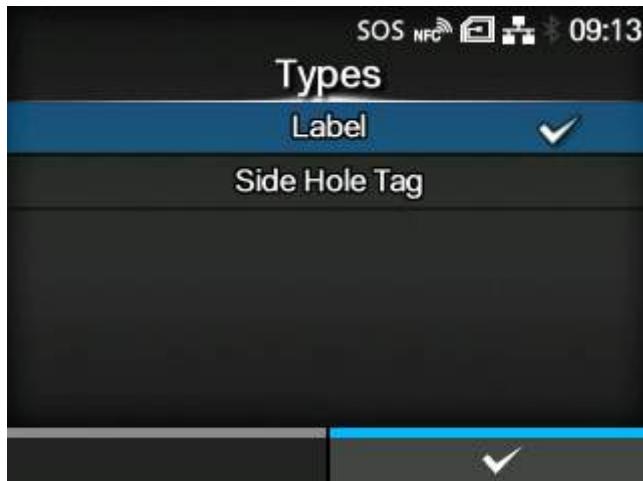

Set the paper type of RFID tags.

The options are as follows:

Label

Use normal RFID tags.


Side Hole Tag

Use side hole tags.



(1) Media feed direction

[Starting Point]

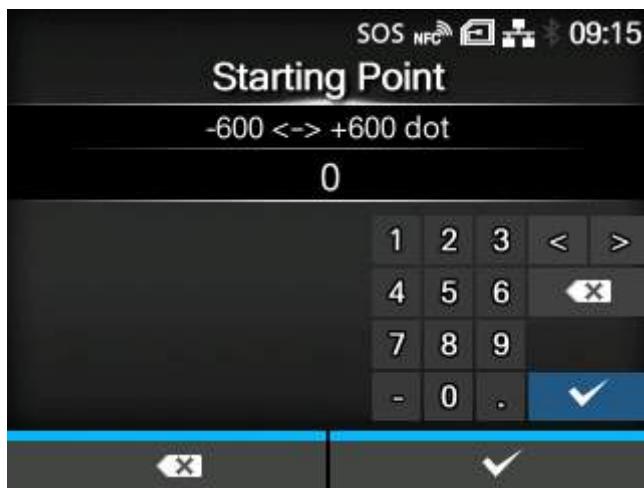

Set the print reference position of RFID tags in the vertical direction.

Set the print reference position as "+" for the direction of the paper feed and "-" for the direction opposite to the paper feed.


The setting range is from -600 to +600 dots.



- The length of 1 dot varies depending on the print resolution of the product.
 - 203 dpi : 1 dot = 0.125 mm (0.0049")
 - 305 dpi : 1 dot = 0.083 mm (0.0033")
 - 609 dpi : 1 dot = 0.042 mm (0.0017")



[Applications] Menu

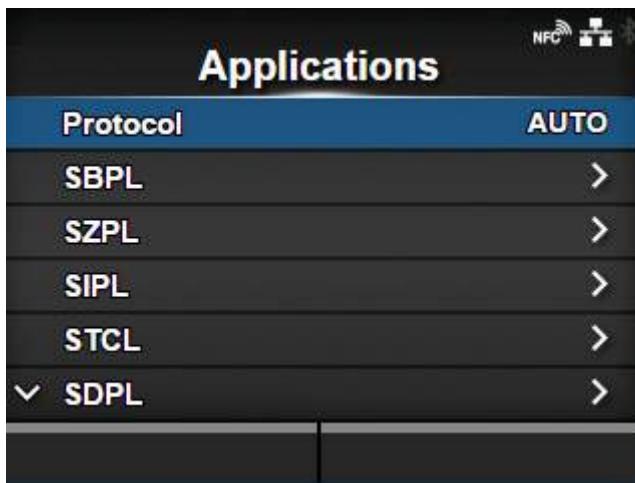

The following settings are available in the [Applications] menu:

Protocol

Set the printer language.

SBPL

Set the SBPL printer command.

SZPL

Set the SZPL printer command.

SIPL

Set the SIPL printer command.

STCL

Set the STCL printer command.

SDPL

Set the SDPL printer command.


SEPL

Set the SEPL printer command.

AEP

Set the functions for AEP (Application Enabled Printing).

[Protocol]

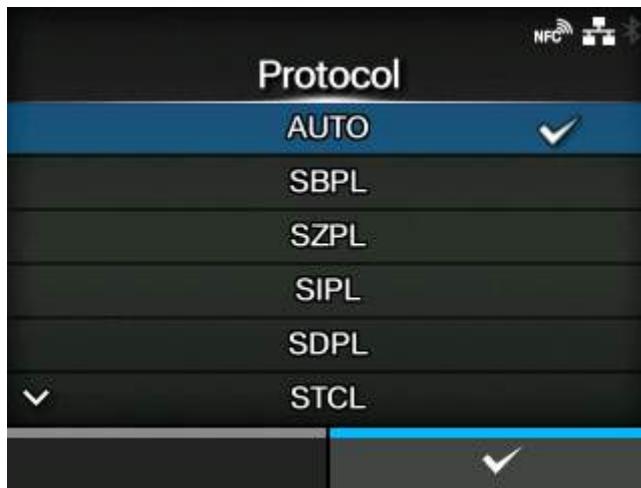

Set the printer language.

The options are as follows:

AUTO

Automatically analyze the received print data and set the printer language. In [AUTO] mode, the product can change the language after startup by receiving another language.

SBPL

Set when you use the SBPL printer language or XML.

SZPL

Set when you use the SZPL printer language.

SIPL

Set when you use the SIPL printer language.

SDPL

Set when you use the SDPL printer language.

STCL

Set when you use the STCL printer language.


SEPL

Set when you use the SEPL printer language.



(When [AUTO] is selected in the [Protocol] menu)

- A message prompting you to restart the product will appear on the Online/Offline screen if you select [AUTO]. In such a case, reboot the product to apply the settings.
- Once the printer language is fixed, the name of the printer language will appear on the Online/Offline screen. The area to show the name of the printer language will remain blank until the printer language is finalized.

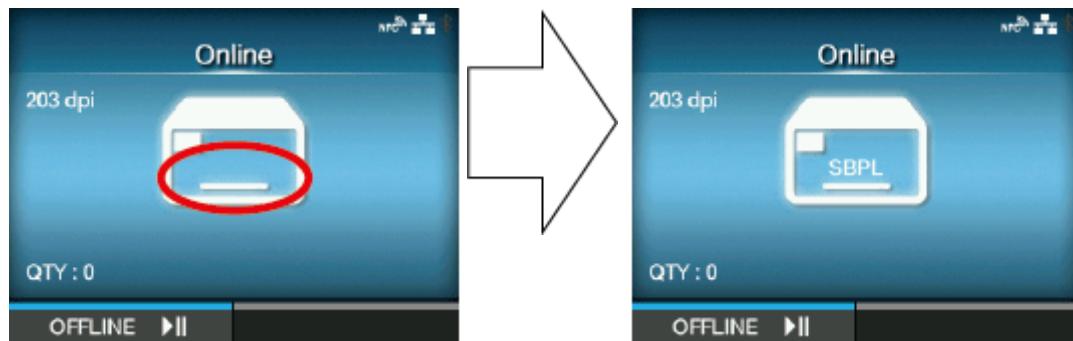


The area remains blank until the printer language is finalized.

When the print data has been sent in SBPL.

- Printer language is finalized with the received print data.
- When [SBPL] > [Standard Code] in the [Applications] menu is disabled, the [Protocol] setting will be changed to [SBPL].

[SBPL]

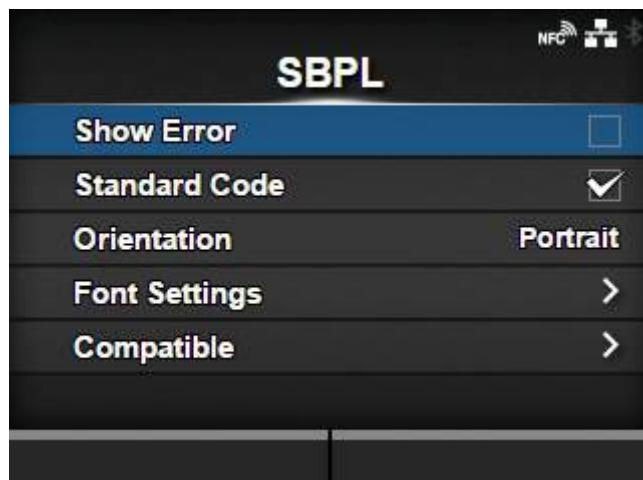

SBPL (SATO Barcode Printer Language) is the common command that controls SATO barcode label printers.

To use SBPL as a printer command, set the following items:

Show Error

Enable or disable the command error indication.

Standard Code

Set the protocol code.

Orientation

Set the layout for printing.


Font Settings

Set the font.

Compatible

Set the compatible code.

[\[Show Error\]](#)

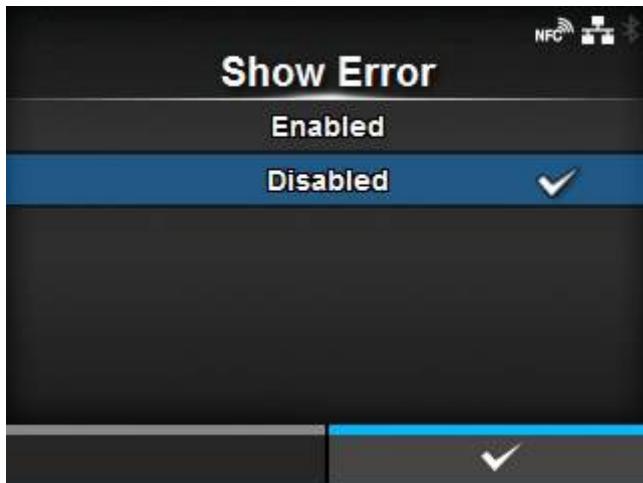

Enable or disable the command error indication when incorrect command or parameter is detected in the print data.


The options are as follows:

Enabled

The error screen is displayed. The print operation is paused.

Disabled

The error screen is not displayed, but the command error status icon appears in the status bar.

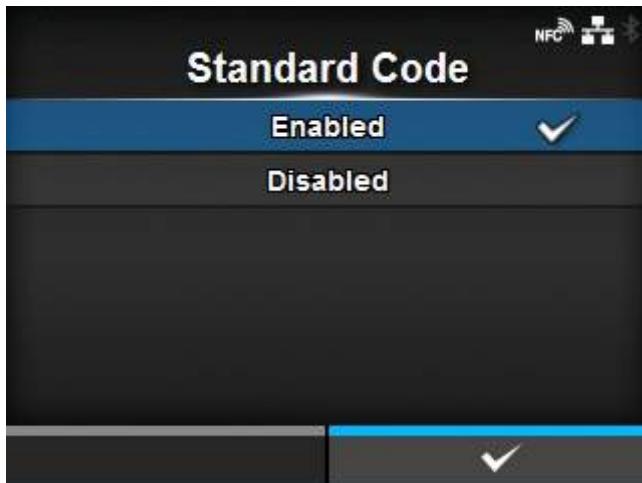[\[Standard Code\]](#)

Set the protocol code.

The options are as follows:

Enabled


Use a standard code.

Disabled

Use a non-standard code.



- A message prompting you to restart the product will appear on the Online/Offline screen if you have made any changes. In such a case, reboot the product to apply the settings. When [AUTO] is selected in the [Protocol] menu while [Disabled] is selected, the setting will be changed to [Enabled].

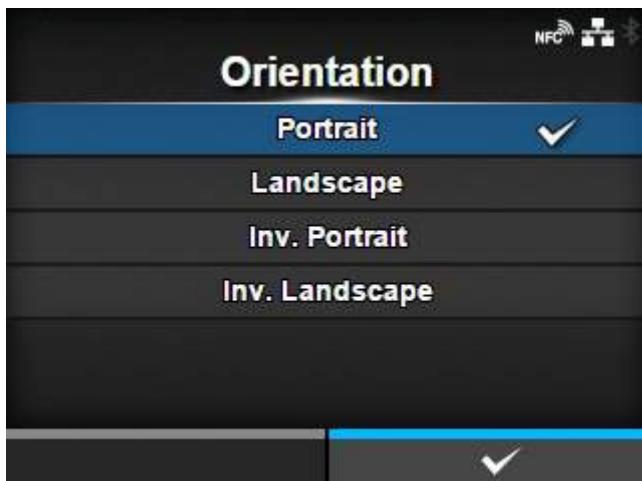[\[Orientation\]](#)

Select the layout for printing the label.

Portrait

Use a portrait layout. (No rotation)

Landscape

Use a landscape layout. (90-degree rotation)


Inv. Portrait

Use an inverse portrait layout. (180-degree rotation)

Inv. Landscape

Use an inverse landscape layout. (270-degree rotation)

[Font Settings]

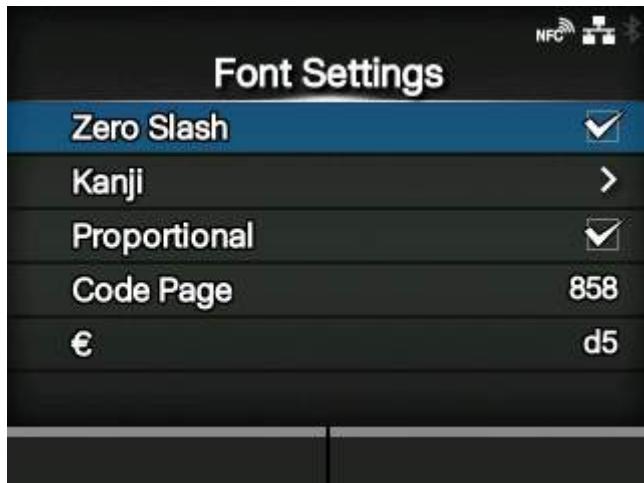

Set the font.

The setting items are as follows:

Zero Slash

Set the type for printing zero.

Kanji

Set the kanji code to be used.

Proportional

Set the character pitch for printing.


Code Page

Set the code page to be used.

€

Set the European currency symbol to the ASCII code.

[Zero Slash]

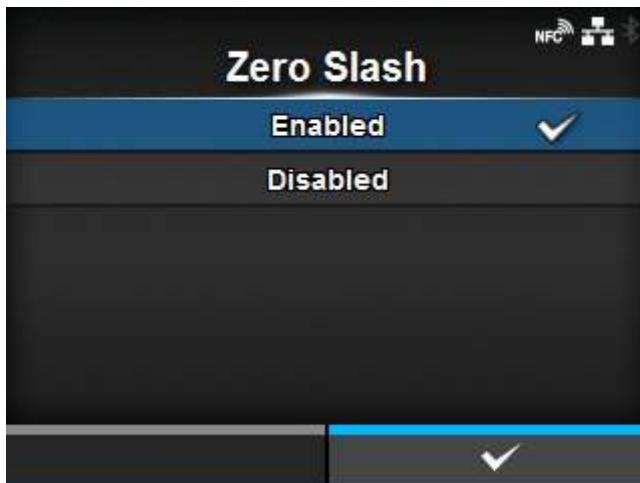

Set whether to print the number zero (0) with or without a slash (/).

This setting is applied to the following bitmap fonts:

U, S, M, WB, WL, XU, XS, XM, XL, X20, X21, X22, X23, X24

The options are as follows:


Enabled

Print zero with a slash.

Disabled

Print zero without a slash.

[Kanji]

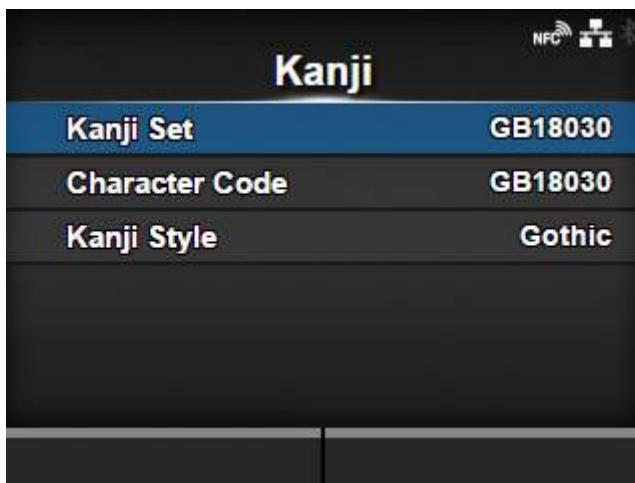

Set the kanji code to be used.

The setting items are as follows:

Kanji Set

Set the kanji code to be used.


Character Code

Set the character code to be used.

Kanji Style

Set the font to be used.

[Kanji Set]

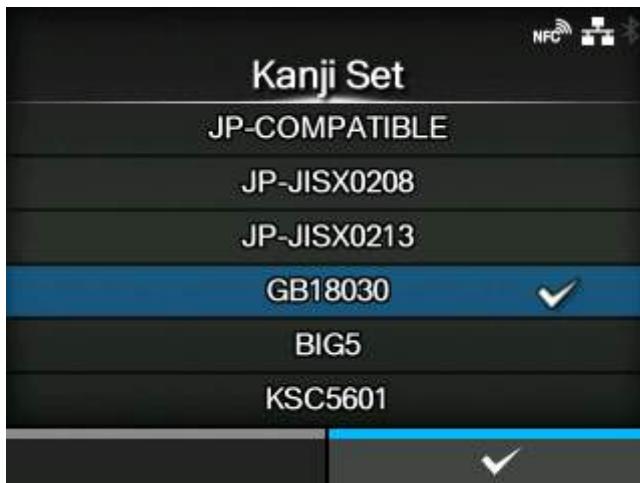

Set the kanji code to be used.

The options are as follows:

- [JP-COMPATIBLE]
- [JP-JISX0208]
- [JP-JISX0213]
- [GB18030]
- [BIG5]
- [KSC5601]

[Character Code]



Set the character code to be used.

The options vary depending on the kanji code set in the [Kanji Set]:

- When set to [JP-COMPATIBLE] or [JP-JISX0208]
 - [JIS]

- [SJIS]
 - [UTF-16]
 - [UTF-8]
- When set to [JP-JISX0213]
 - [SJIS]
 - [UTF-16]
 - [UTF-8]
- When set to [GB18030]
 - [GB18030]
 - [UTF-8]
- When set to [BIG5]
 - [BIG5]
 - [UTF-8]
- When set to [KSC5601]
 - [KSC5601]
 - [UTF-8]

[Kanji Style]




Set the font to be used.

The options are as follows:

- [Mincho]
- [Gothic]

[Proportional]

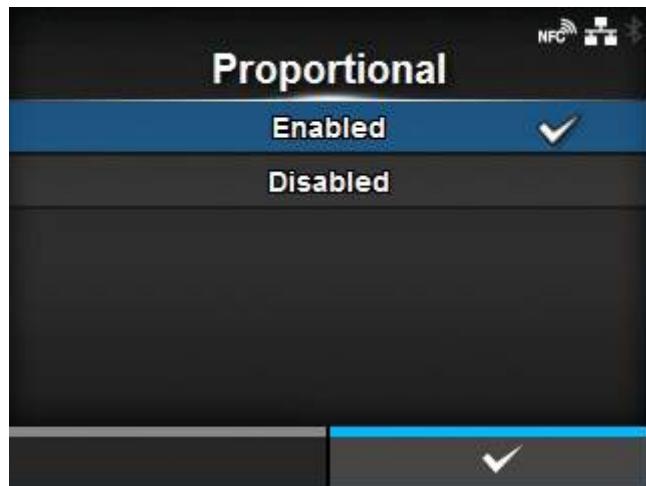

Set whether to print each character using a proportional pitch or fixed pitch.

The options are as follows:


Enabled

Print each character with a proportional pitch.

Disabled


Print all characters with a fixed pitch.

[Code Page]

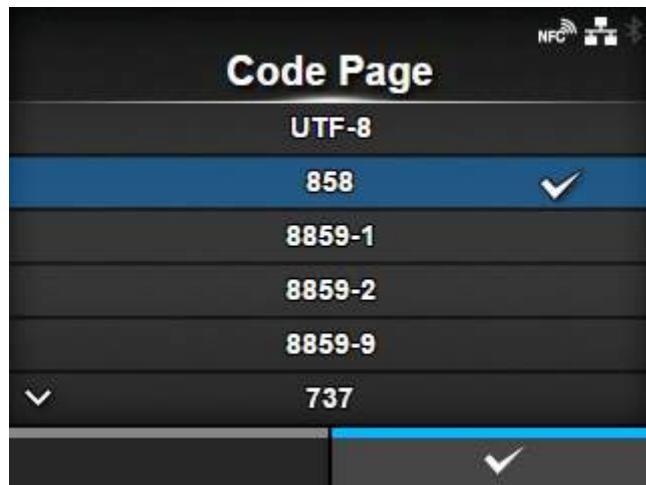

Select the code page to be used from the list.

[€]

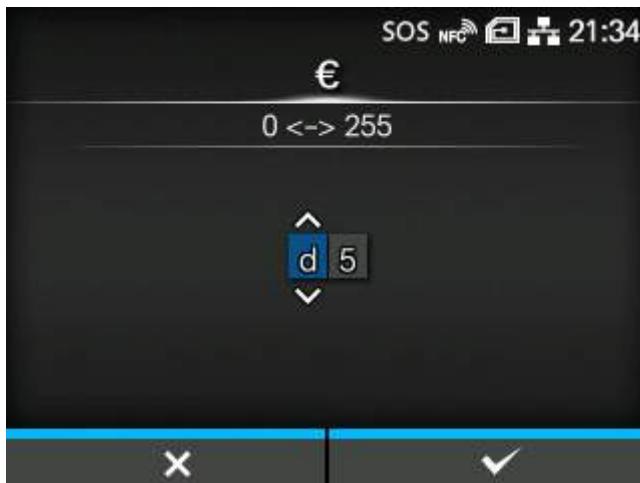

Set the European currency symbol to the ASCII code.

The setting range is from 00 to ff (hexadecimal).

[Compatible]



Set the compatible code for SBPL.

The setting items are as follows:

M-8400 Compatibility

Enable or disable the M-8400 printer compatibility function.

CODE128(C) Zero Fill

Set whether to allow odd digits and print the barcode with zero-filling at the end of the data when start code C is used in CODE128.

- If [M-8400 Compatibility] is set to [Enabled], this setting is automatically enabled and does not appear.

Kanji Command

Set the product behavior when the received data includes the Kanji command ESC+K5, ESC+K6 or ESC+K7.

[Call Font/Logo](#)

Set how to process the character code specified in Recall font & logo command (ESC+RF).


[A3 Command Save\(S-type\)](#)

Set whether to save all values (with or without +/- sign) specified by the Base Reference Point command ESC+A3 to the product's [Imaging] menu.

[PDF417 ECC Level fixed](#)

Set whether to print the PDF417 code with the security level specified by the PDF417 printing command.

[M-8400 Compatibility]

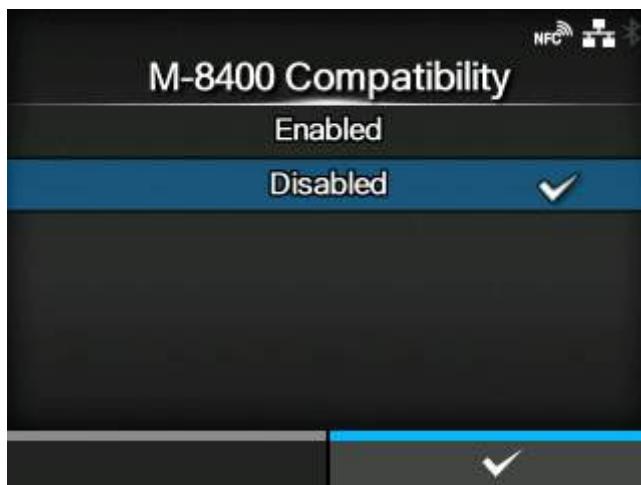

Enable or disable the M-8400 printer compatibility function.

The options are as follows:

Enabled

Enable the M-8400 printer compatibility function.


Disabled

Disable the M-8400 printer compatibility function.



- Contact your SATO sales representative for more information about the M-8400 printer compatibility function.
- If [M-8400 Compatibility] is set to [Enabled], [CODE128(C) Zero Fill] is automatically enabled and the setting item does not appear.

[CODE128(C) Zero Fill]

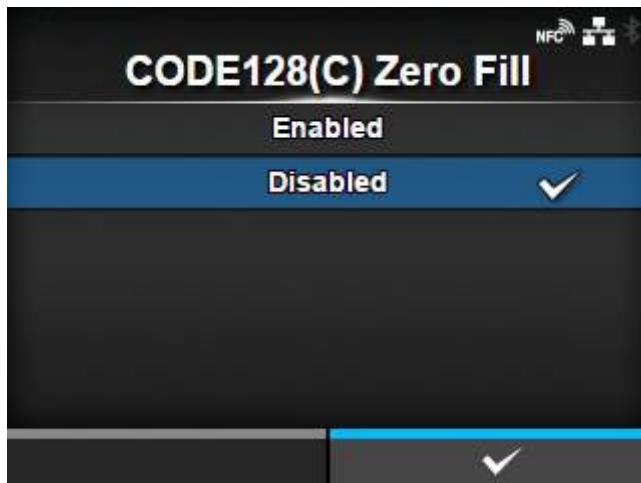

Set whether to allow odd digits and print the barcode with zero-filling at the end of the data when start code C is used in CODE128.

If [M-8400 Compatibility] is set to [Enabled], this setting is automatically enabled and does not appear.

The options are as follows:


Enabled

Allow odd digits and print the barcode with zero-filling.

Disabled

Do not allow odd digits. A command error occurs and the barcode will not be printed.

[Kanji Command]

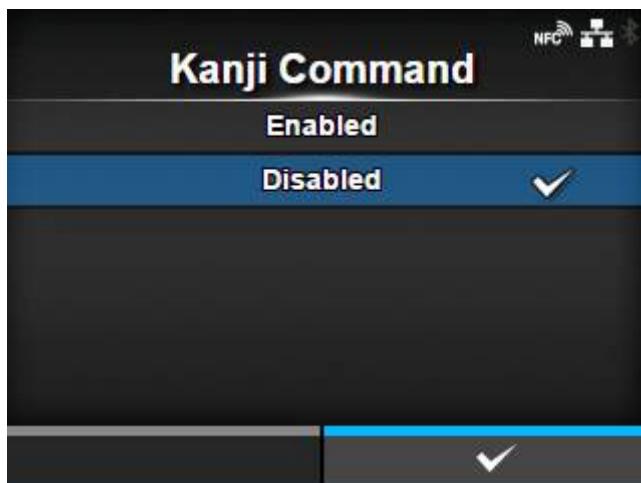

Set the product behavior when the received data includes the Kanji command ESC+K5, ESC+K6 or ESC+K7.

The options are as follows:

Enabled

Change the Kanji commands ESC+K5, ESC+K6 and ESC+K7 in the received data to the proper commands and print.

- ESC+K5: 16x16 dots Kanji in horizontal line with one-byte character


- ESC+K6: 24x24 dots Kanji in horizontal line with one-byte character
- ESC+K7: 22x22 dots Kanji in horizontal line

Disabled

Do not change the Kanji commands ESC+K5, ESC+K6 and ESC+K7 in the received data. The product behavior when it receives these commands is as follows:

- ESC+K5: Print with 40x40 dots Kanji in horizontal line.
- ESC+K6: A command error occurs and the data will not be printed.
- ESC+K7: A command error occurs and the data will not be printed.

[Call Font/Logo]

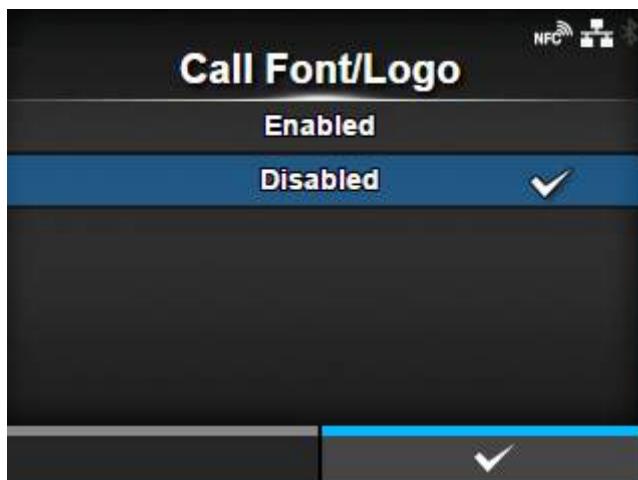

Set how to process the character code specified in Recall font & logo command (ESC+RF).

The options are as follows:


Enabled

Character codes are processed in little-endian format.

Disabled

Character codes are processed in big-endian format.

[A3 Command Save(S-type)]

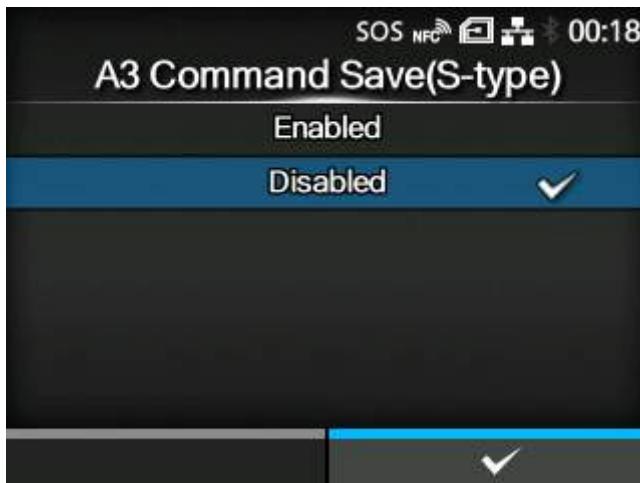

Set whether to save all values (with or without +/- sign) specified by the Base Reference Point command ESC+A3 to the product's [Imaging] menu.

The options are as follows:


Enabled

All values (with or without +/- sign) specified by the command ESC+A3 are saved to the product's [Imaging] menu.

Disabled

Only values without +/- sign specified with the command ESC+A3 are saved to the product's [Imaging] menu. Values with +/- sign are not saved.

[PDF417 ECC Level fixed]

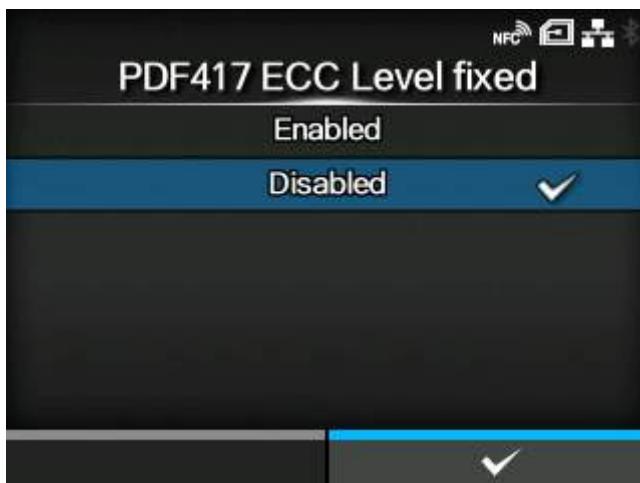

Set whether to print the PDF417 code with the security level specified by the PDF417 printing command.

The options are as follows:

Enabled

Print the PDF417 code with the security level specified by the PDF417 printing command.

Disabled

Print the PDF417 code with the security level specified by the PDF417 (or higher) printing command.

[SZPL]



To use SZPL as a printer command, set the following items:

Label

Set the print position.

Label Rotation

Set the page orientation for label printing.

Caret

Set the caret (^) code.

Delimiter

Set the delimiter (,) code.

Tilde

Set the tilde (~) code.

Clock Format

Set the date format.

Default Font

Select the default font for when printing using a multilingual font contained in the product.

[Label]



Set the print position.

The setting items are as follows:


Shift

Set the shift offset position of the label.

Top

Set the top offset position of the label.

[Shift]

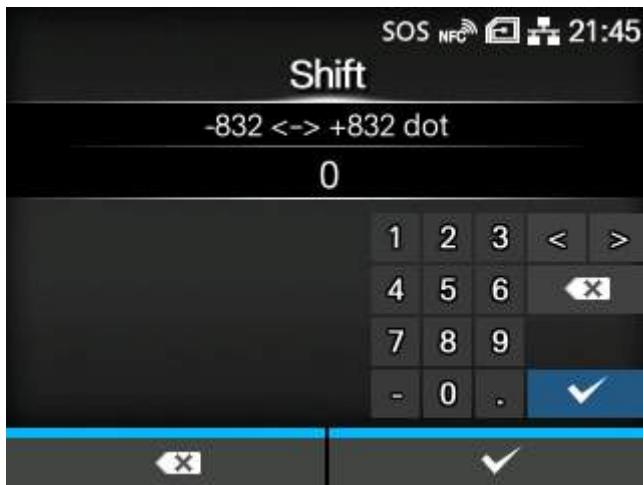

Set the shift offset position of the label.


The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-832 to 0 to 832 dots	-832 to 0 to 832 dots

Resolution	CL4NX	CL6NX
305 dpi (1 dot = 0.083 mm (0.0033"))	-1248 to 0 to 1248 dots	-1248 to 0 to 1248 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-2496 to 0 to 2496 dots	-

[Top]

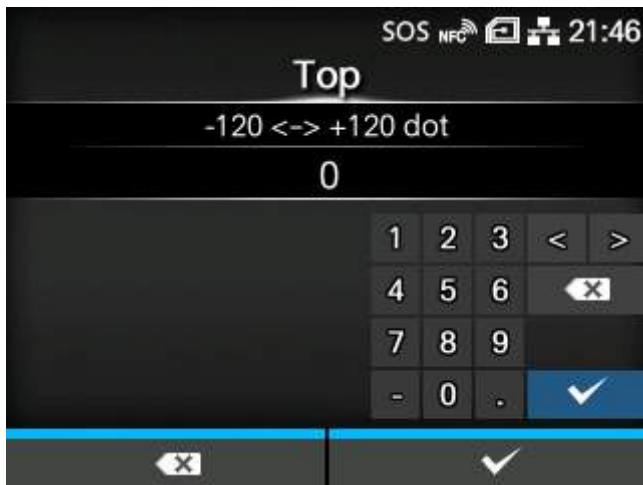

Set the top offset position of the label.

The setting range is from -120 to +120 dots.



- The length of 1 dot varies depending on the print resolution of the product.
 - 203 dpi : 1 dot = 0.125 mm (0.0049")
 - 305 dpi : 1 dot = 0.083 mm (0.0033")
 - 609 dpi : 1 dot = 0.042 mm (0.0017")

[\[Label Rotation\]](#)

Set the page orientation for label printing.

The label size set in the product is used as a reference for rotation.


The options are as follows:

0 degree

Labels are printed in a portrait orientation.

180 degree


Labels are printed in an inverse-portrait orientation.

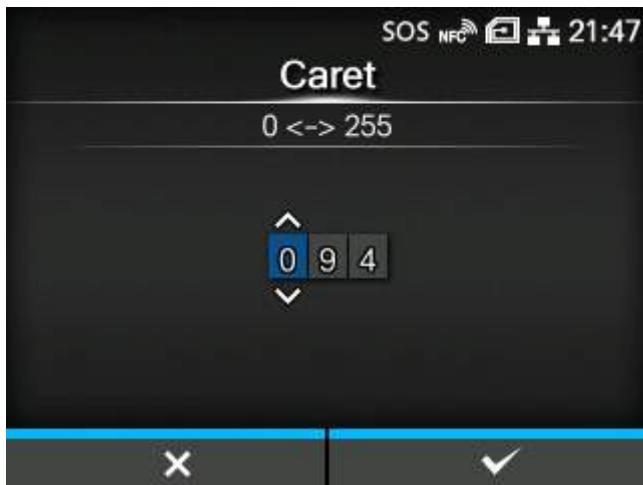[\[Caret\]](#)

Set the caret (^) code.

The setting range is from 0 to 255.


[Delimiter]

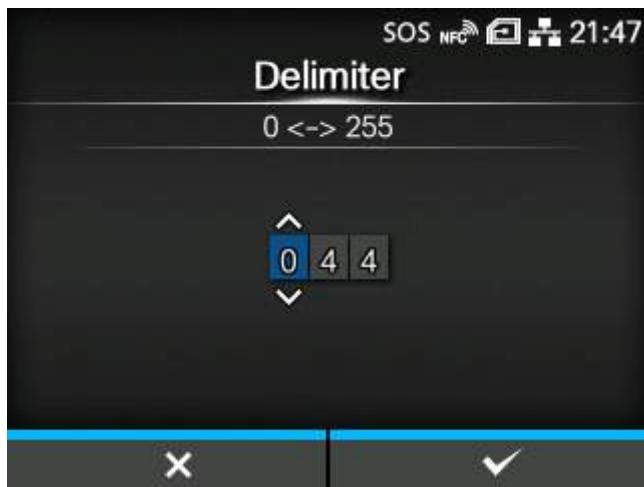

Set the delimiter (,) code.


The setting range is from 0 to 255.

[Tilde]

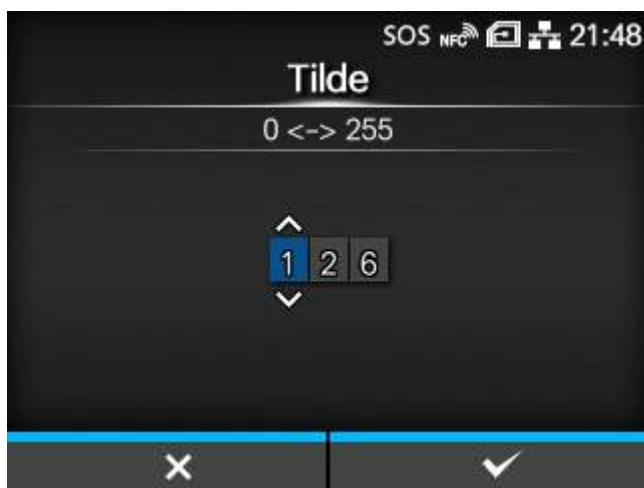

Set the tilde (~) code.

The setting range is from 0 to 255.

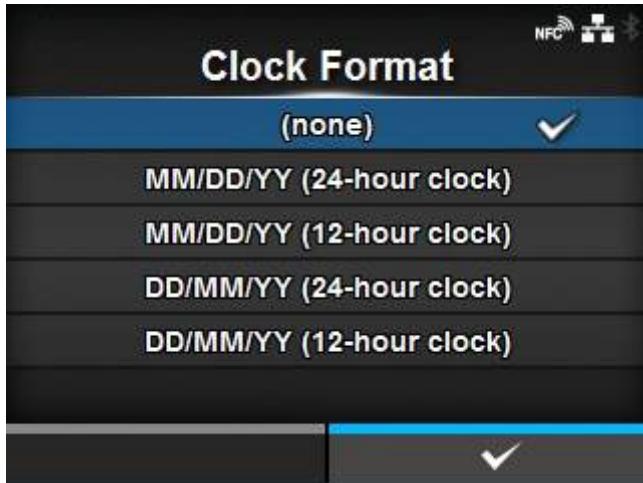[\[Clock Format\]](#)

Set the date format.


The options are as follows (January 24, 2017, at 1:45 pm, for example):

- [(none)]
- [MM/DD/YY (24-hour clock)] (Example: 01/24/17 (13:45))
- [MM/DD/YY (12-hour clock)] (Example: 01/24/17 (01:45))
- [DD/MM/YY (24-hour clock)] (Example: 24/01/17 (13:45))
- [DD/MM/YY (12-hour clock)] (Example: 24/01/17 (01:45))

[\[Default Font\]](#)

Select a default font from the list for when printing using a multilingual font contained in the product.

[S IPL]

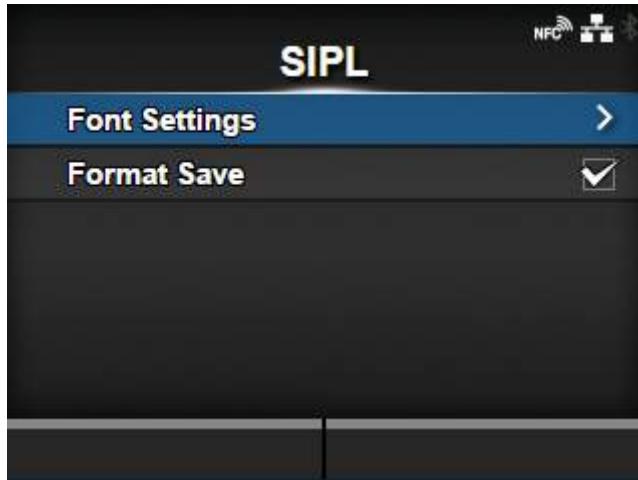

To use SIPL as a printer command, set the following items:


Font Settings

Set the font.

Format Save

Set whether to save the user format data registered at printing in the product.

[Font Settings]

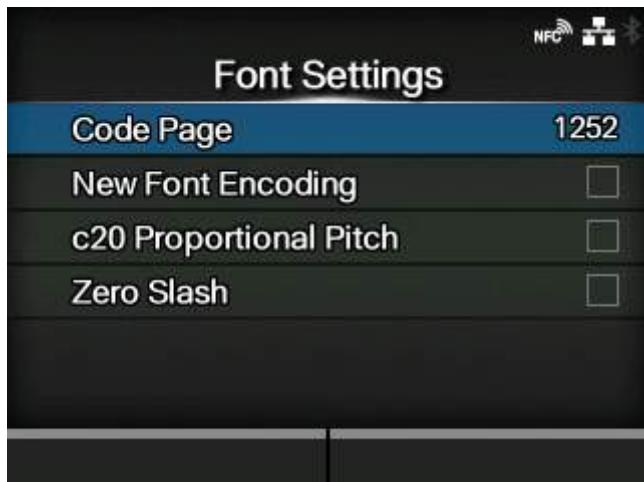

Set the font.

The setting items are as follows:

Code Page

Set the code page to be used.

New Font Encoding


Enable or disable new font encoding.

[c20 Proportional Pitch](#)


Set the character pitch for printing.

[Zero Slash](#)

Set the type for printing zero.

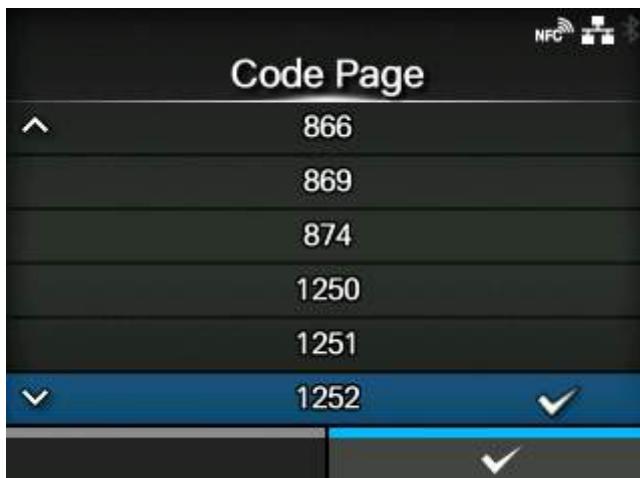[**\[Code Page\]**](#)

Select the code page to be used from the list.

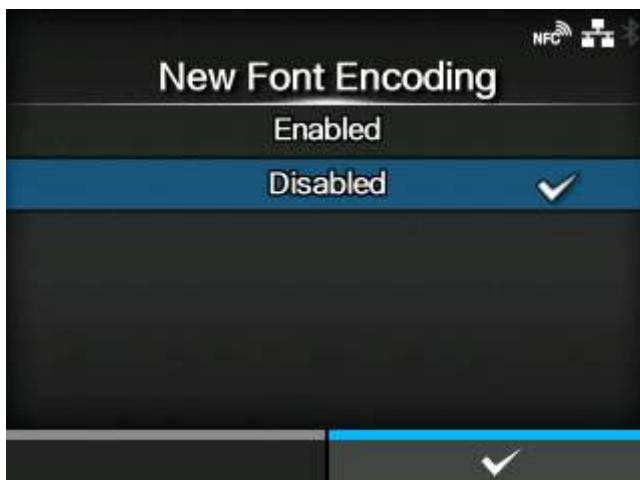[**\[New Font Encoding\]**](#)

Enable or disable new font encoding.

The options are as follows:

[Enabled](#)

Enable new font encoding.


[Disabled](#)

Disable new font encoding.



- Contact your SATO sales representative for more information about the new font.

[c20 Proportional Pitch]

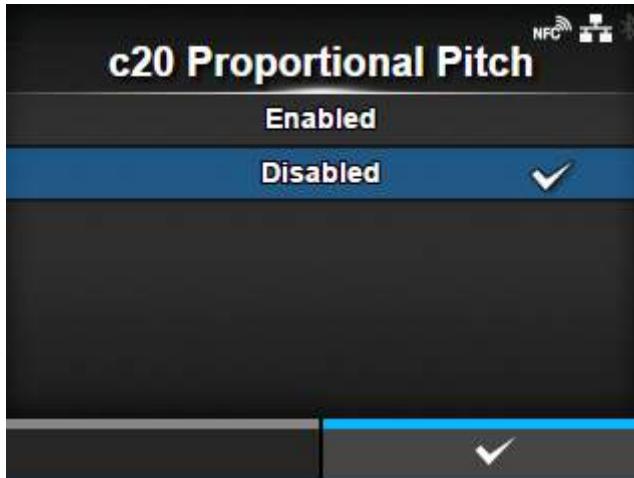

Set whether to print each character using a proportional pitch or fixed pitch.

The options are as follows:


Enabled

Print each character with a proportional pitch.

Disabled

Print all characters with a fixed pitch.

[Zero Slash]

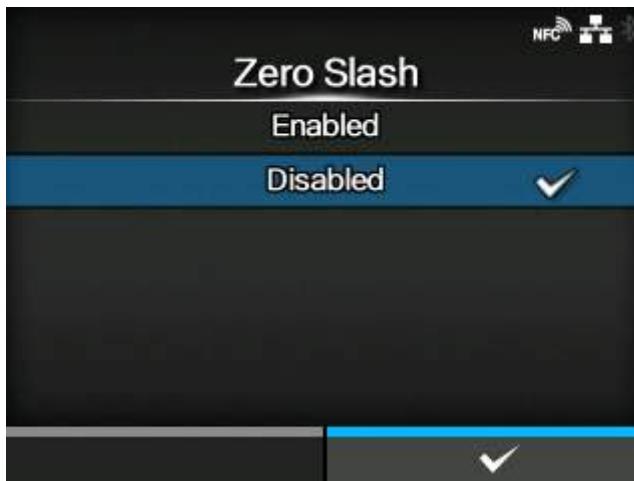

Set whether to print the number zero (0) with or without a slash (/).

The options are as follows:


Enabled

Print zero with a slash.

Disabled

Print zero without a slash.

[Format Save]

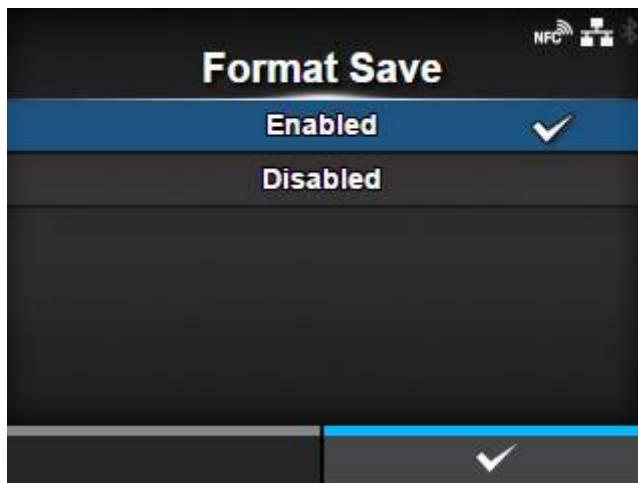

Set whether to save the user format data registered at printing in the product.

The options are as follows:


Enabled

Save the user format data registered at printing in the product.

Disabled

Do not save the user format data registered at printing in the product. The user format data remains in the product memory after printing until the product is powered off. You need to register a user format again after reboot.

[STCL]

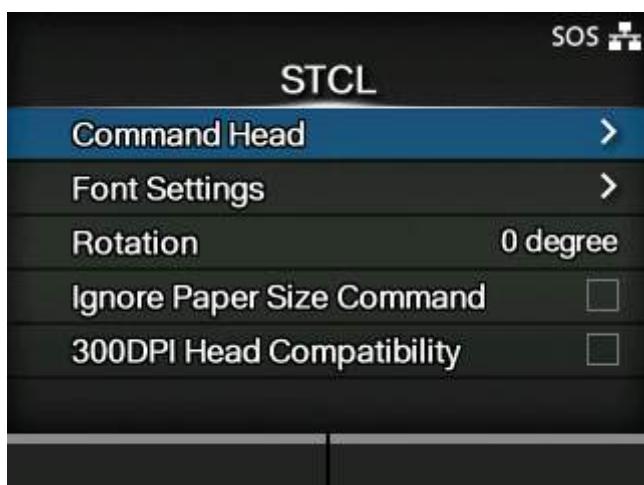

To use STCL as a printer command, set the following items:

Command Head

Set the command head.

Font Settings

Set the font.

Rotation

Set the page orientation for label printing.


Ignore Paper Size Command

Set whether to ignore a paper size command in the print data.

300DPI Head Compatibility

When you are using the product with 305 dpi resolution, enable or disable 300DPI Head Compatibility.

[Command Head]

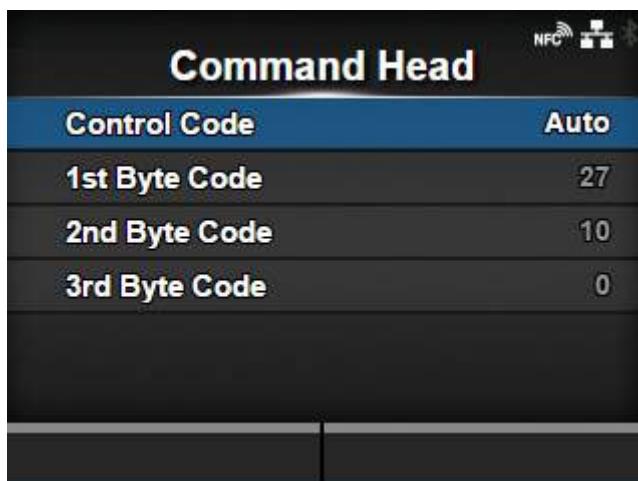

Set the command head.

The setting items are as follows:

Control Code

Set the control code.

1st Byte Code

Set the first byte code.


2nd Byte Code

Set the second byte code.

3rd Byte Code

Set the third byte code.

[Control Code]

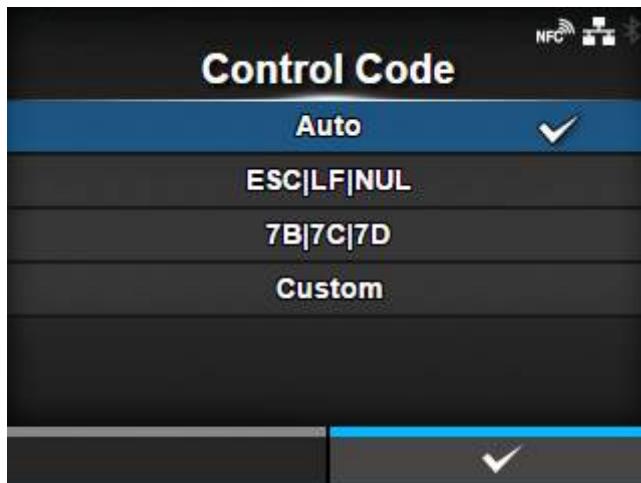

Set the control code.

The options are as follows:

Auto

Perform the protocol detection automatically.

ESC|LF|NUL

Set the control code to ESC|LF|NUL.


7B|7C|7D

Set the control code to 7B|7C|7D.

Custom

Change the first to third byte codes.

[1st Byte Code]

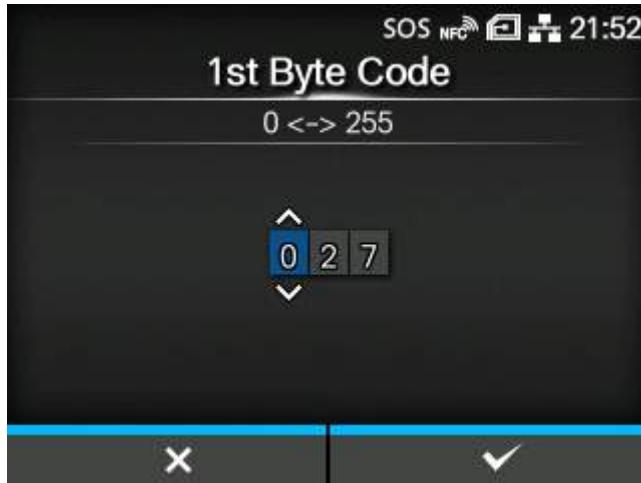


Set the first byte code.

You can change this only if you have selected [Custom] in the [Control Code] menu.

The setting range is from 0 to 255.

[2nd Byte Code]

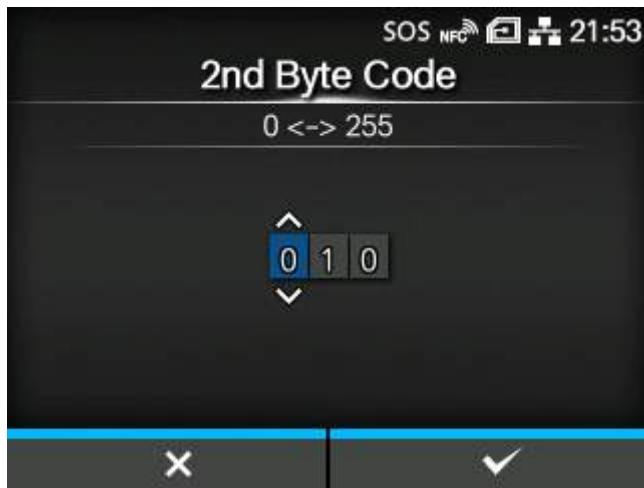


Set the second byte code.

You can change this only if you have selected [Custom] in the [Control Code] menu.

The setting range is from 0 to 255.


[3rd Byte Code]

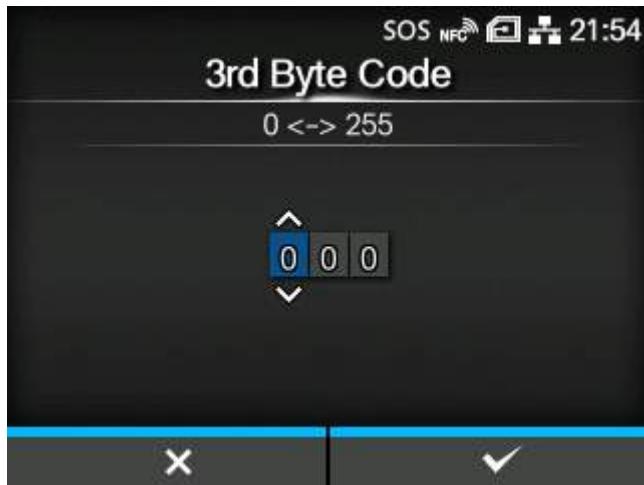

Set the third byte code.

You can change this only if you have selected [Custom] in the [Control Code] menu.

The setting range is from 0 to 255.

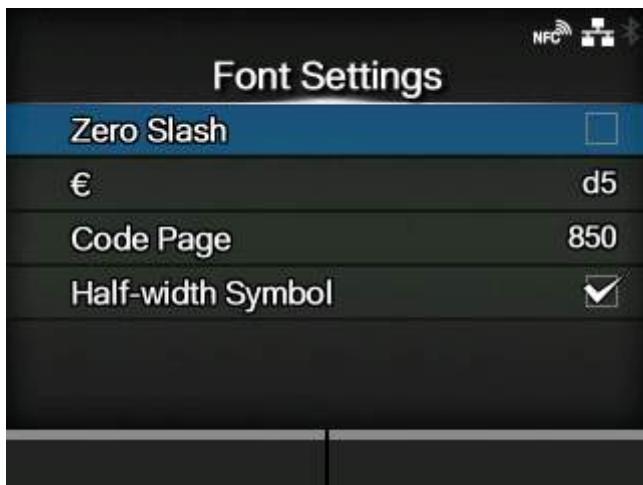[\[Font Settings\]](#)

Set the font.

The setting items are as follows:

[Zero Slash](#)

Set the type for printing zero.

€


Set the European currency symbol to the ASCII code.

[Code Page](#)

Set the code page to be used.

[Half-width Symbol](#)

Set whether to print symbols with half-width characters.

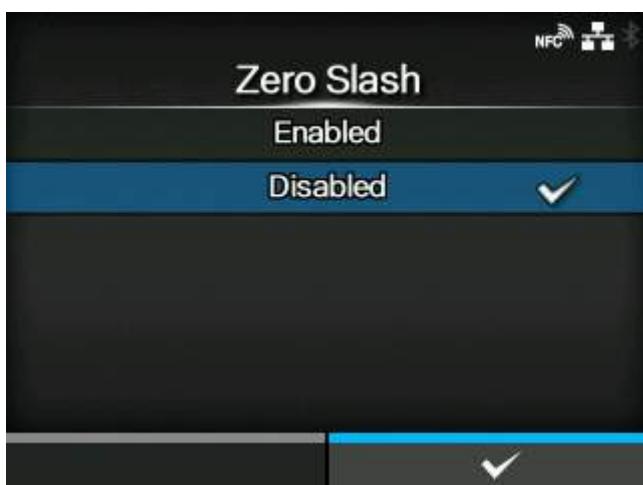[\[Zero Slash\]](#)

Set whether to print the number zero (0) with or without a slash (/).

The options are as follows:


Enabled

Print zero with a slash.

Disabled

Print zero without a slash.


[€]

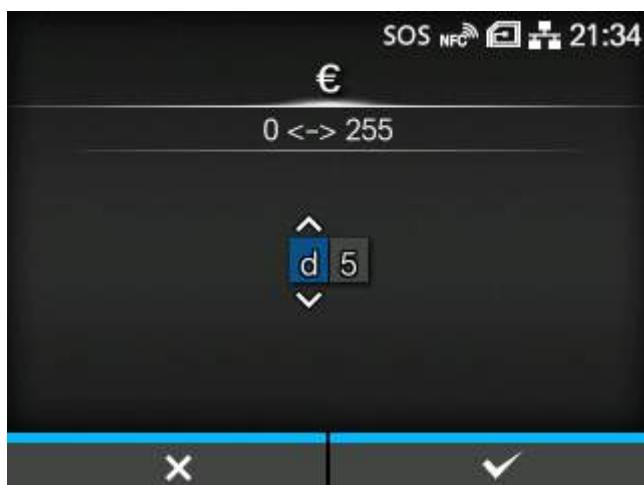


Set the European currency symbol to the ASCII code.

The setting range is from 00 to ff (hexadecimal).

[\[Code Page\]](#)

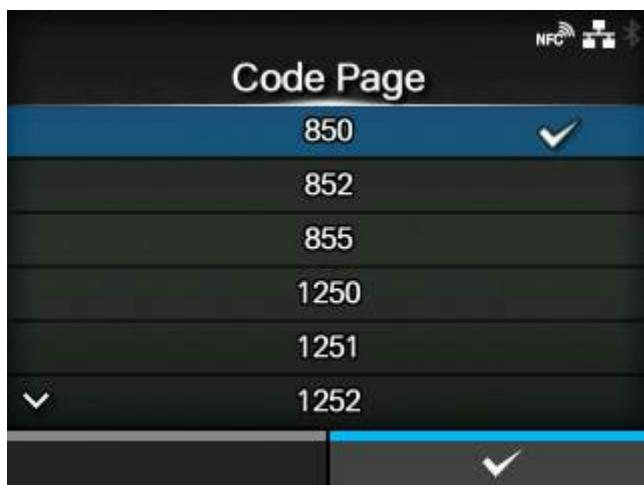

Select the code page to be used from the list.

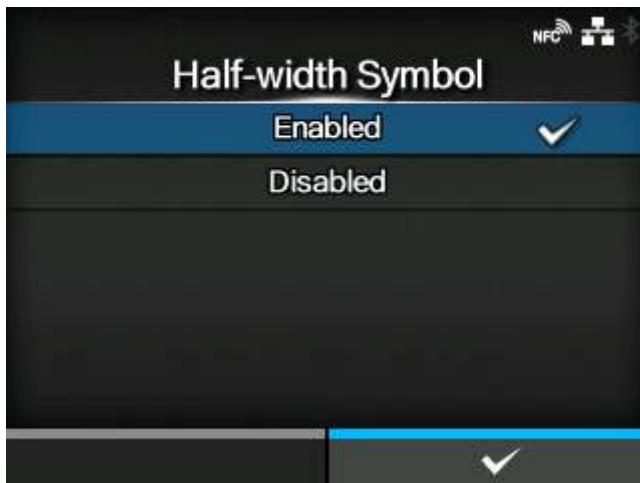[\[Half-width Symbol\]](#)

Set whether to print symbols with half-width characters.


The options are as follows:

Enabled

Print symbols with half-width characters.

Disabled

Do not print symbols with half-width characters.

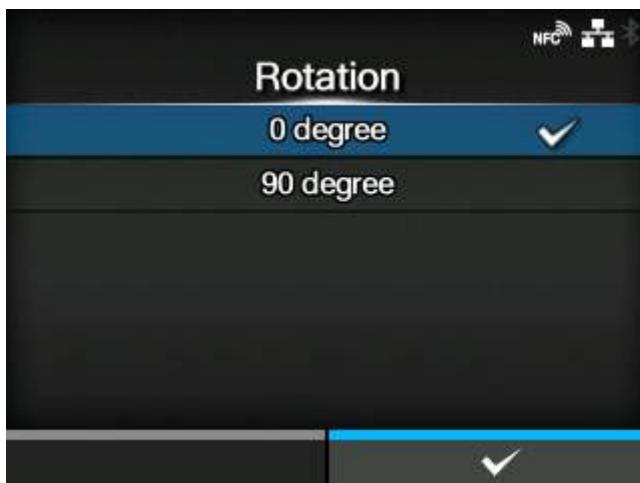[\[Rotation\]](#)

Set the page orientation for label printing.

The options are as follows:


0 degree

Labels are printed in portrait orientation.

90 degree

Labels are printed in landscape orientation.

[Ignore Paper Size Command]

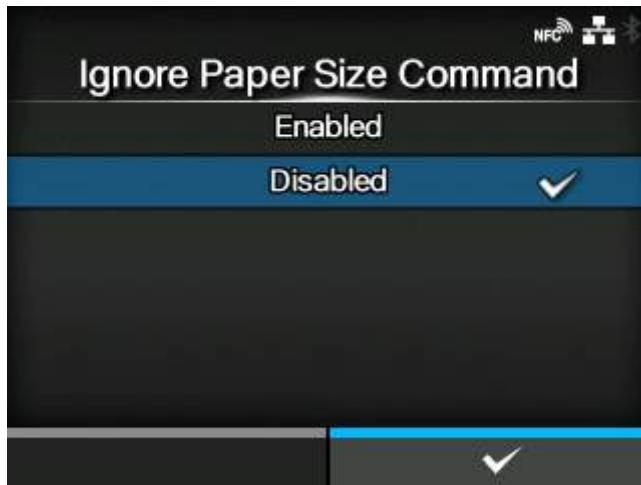

Set whether to ignore a paper size command in the print data.

The options are as follows:

Enabled

Ignore a paper size command in the print data.

Disabled

Do not ignore a paper size command in the print data.

[300DPI Head Compatibility]



When you are using the product with 305 dpi resolution, enable or disable 300DPI Head Compatibility.


The options are as follows:

Enabled

Enable 300DPI Head Compatibility. Print data for a head density of 300 dpi is printed in 305 dpi.

Disabled

Disable 300DPI Head Compatibility.

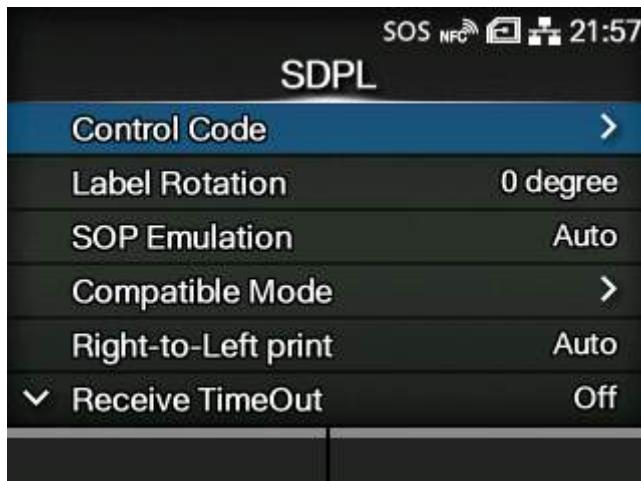[SDPL]

To use SDPL as a printer command, set the following items:

[Control Code](#)

Set the control code.

[Label Rotation](#)

Set the page orientation for label printing.

[SOP Emulation](#)

Set the SOP emulation.

[Compatible Mode](#)

Set the compatible mode for SDPL.

[Right-to-Left print](#)

Set the Right-to-Left printing function.

[Receive TimeOut](#)

Set a period of time the product stays in binary data receiving mode.

[Blank Item Feed](#)

Set whether to feed a label with nothing printed on it when the product receives label formatting commands that do not generate any printable image.

[Prioritize](#)

Select the settings to be prioritized for the SDPL command.

[Format Attribute](#)

Set the format attribute.

[Pause Mode](#)

Enable or disable the pause mode.

[1 Byte Codepage](#)

Select the code page to be used for one-byte characters.

[SDPL Measure Unit](#)

Set the measurement unit.

Scalable Font Style

Set the style of the scalable fonts.

Feedback Character

Enable or disable the <STX>a command.

SOH Commands

Set the SOH commands.



- [Format Attribute], [Pause Mode], [1 Byte Codepage], [SDPL Measure Unit], [Scalable Font Style], [Feedback Character] and [SOH Commands] are available only if [Settings] is selected for the corresponding setting item under the [Prioritize] menu.

[Control Code]

Code Type	Standard
SOH	01
STX	02
CR	0D
CNTBY	5E

Set the control code.

The setting items are as follows:

Code Type

Set the type of the control code.

SOH

Set the SOH code.

STX


Set the STX code.

CR

Set the CR code.

CNTBY

Set the CNTBY code.

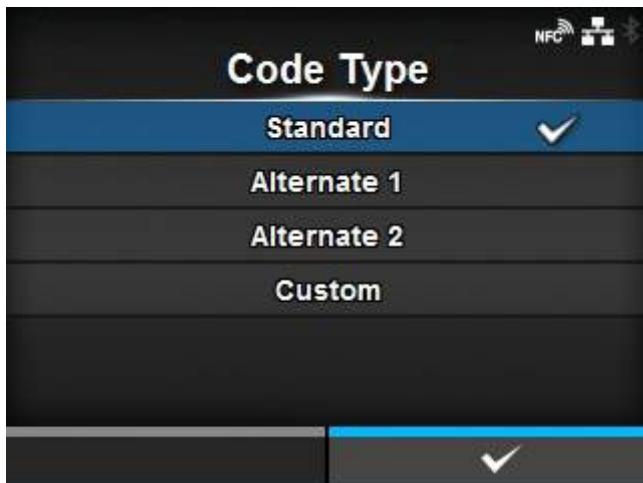[\[Code Type\]](#)

Set the type of the control code.

The options are as follows:

- [Standard]
- [Alternate 1]
- [Alternate 2]
- [Custom]

[\[SOH\]](#)

Set the SOH code.

You can change this if you have selected [Custom] in the [Code Type] menu.

The setting range is from 00 to ff (hexadecimal).

[STX]




Set the STX code.

You can change this if you have selected [Custom] in the [Code Type] menu.

The setting range is from 00 to ff (hexadecimal).

[CR]

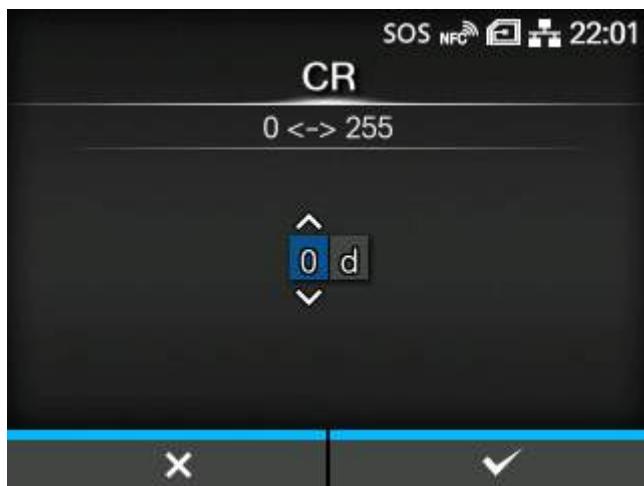

Set the CR code.

You can change this if you have selected [Custom] in the [Code Type] menu.

The setting range is from 00 to ff (hexadecimal).

[CNTBY]




Set the CNTBY code.

You can change this if you have selected [Custom] in the [Code Type] menu.

The setting range is from 00 to ff (hexadecimal).

[Label Rotation]

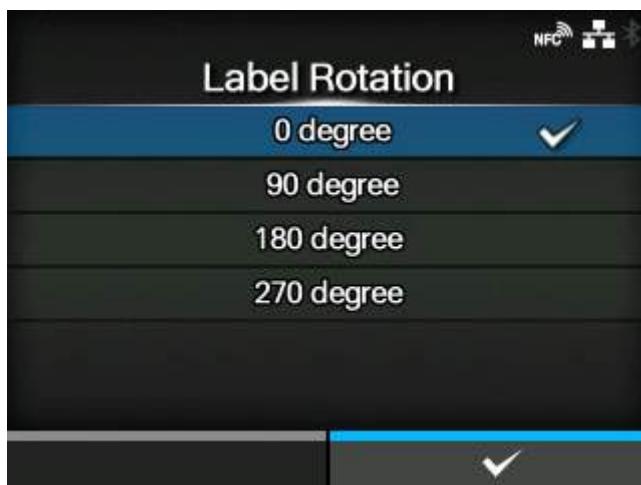

Set the page orientation for label printing.

The label size set in the product is used as a reference for rotation.

The options are as follows:

0 degree

Labels are printed in a portrait orientation.

90 degree

Labels are printed in a landscape orientation.


180 degree

Labels are printed in an inverse-portrait orientation.

270 degree

Labels are printed in an inverse-landscape orientation.

[SOP Emulation]

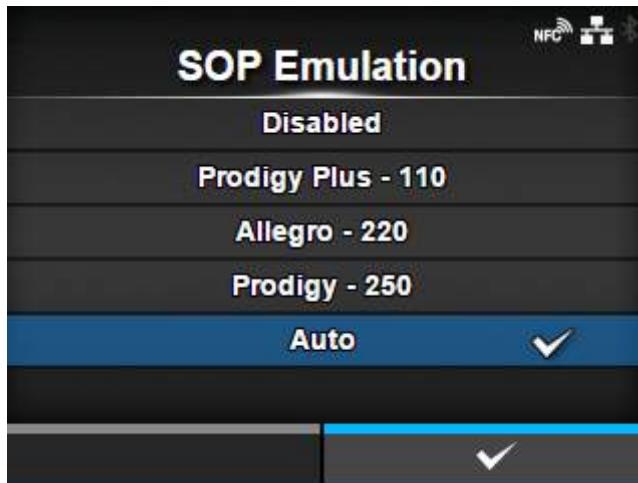


Set the SOP emulation.

The options are as follows:

- [Disabled]
- [Prodigy Plus - 110]
- [Allegro - 220]
- [Prodigy - 250]
- [Auto]

[Compatible Mode]

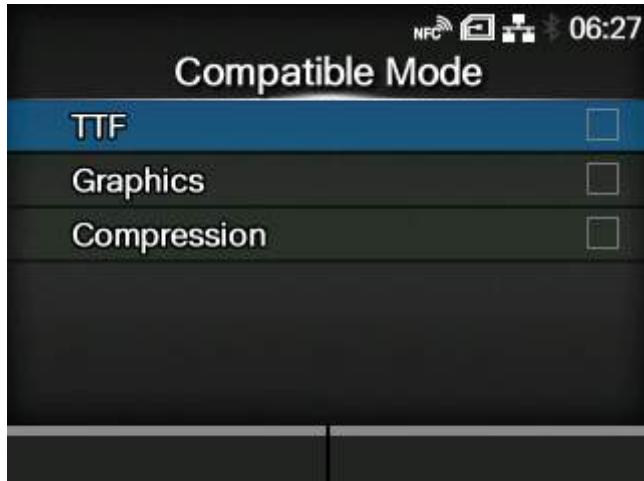

Set the compatible mode for SDPL.

The setting items are as follows:

TTF

Enable or disable TrueType font compatible mode.


Graphics

Set whether to allow the registration of graphic data even if a line feed code is omitted.

[Compression](#)

Set whether to accept graphic data created by a unique compression method.

[TTF]

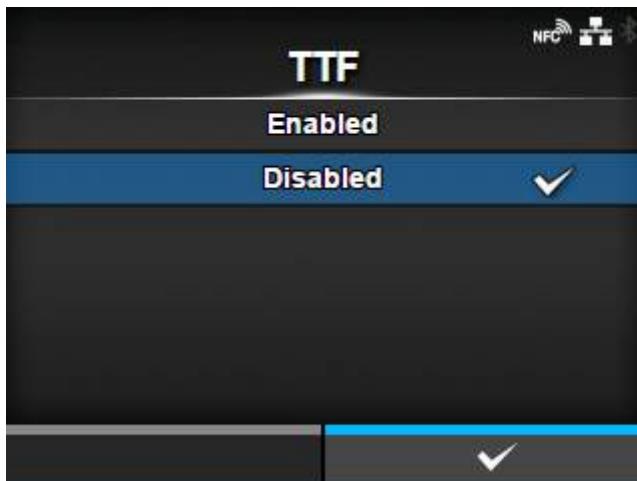

Enable or disable TrueType font compatible mode.

The options are as follows:


Enabled

Enable TrueType font compatible mode. The bold TrueType fonts are printed in smaller pitch.

Disabled

Disable TrueType font compatible mode.

[Graphics]

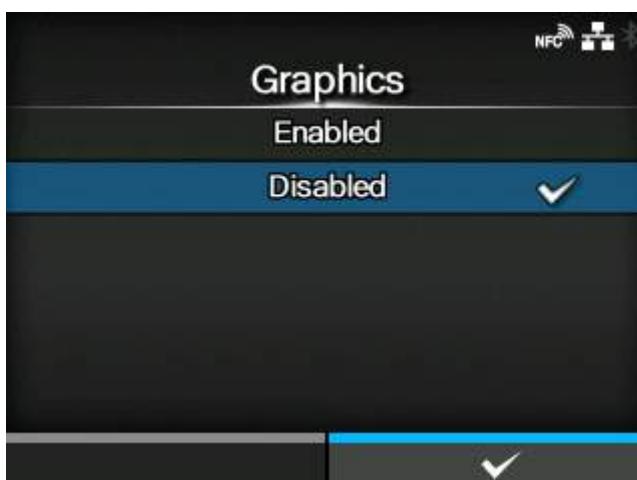

Set whether to allow the registration of graphic data even if a line feed code is omitted.

The options are as follows:


Enabled

Allow the registration of graphic data even when a line feed code is omitted.

Disabled

Do not allow the registration of graphic data when a line feed code is omitted.

[Compression]

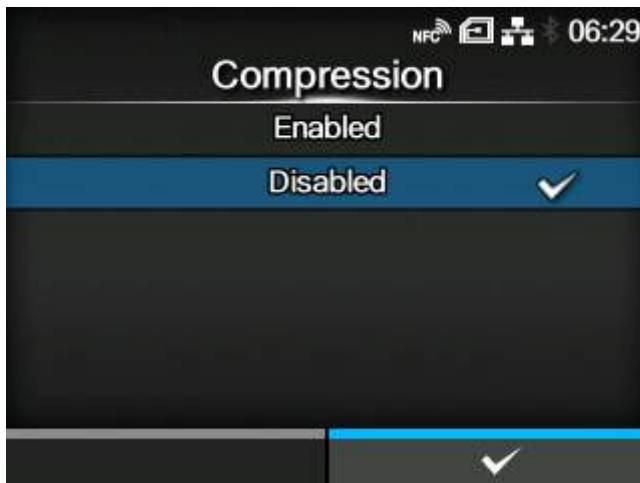

Set whether to accept graphic data created by a unique compression method.

The options are as follows:


Enabled

Accepts graphic data created by a unique compression method.

Disabled

Does not accept graphic data created by a unique compression method.

[Right-to-Left print]

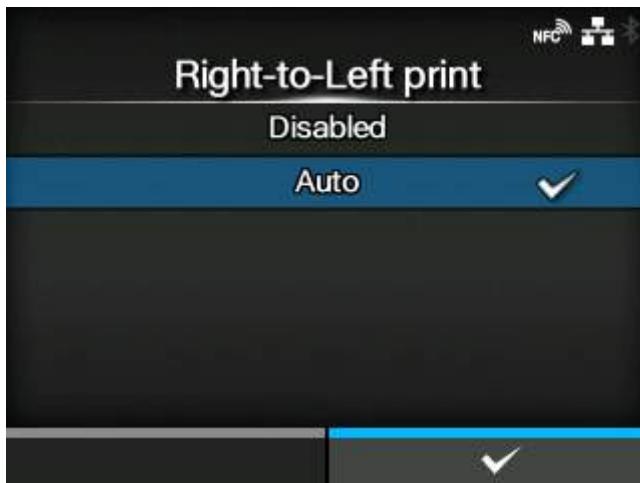

Set the Right-to-Left printing function.

The options are as follows:

Disabled

All texts are printed from left to right.

Auto


When an Arabic font is detected, the Arabic text is printed from right to left.

[\[Receive TimeOut\]](#)

Set a period of time the product stays in binary data receiving mode.

When the specified period of type passes, the product exits from binary receiving mode and scans for SDPL commands.

The setting range is from 0 (off) to 9999 ms.

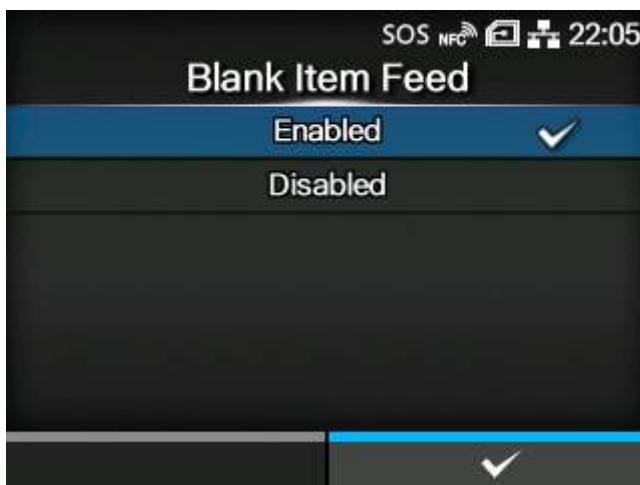[\[Blank Item Feed\]](#)

Set whether to feed a label with nothing printed on it when the product receives label formatting commands that do not generate any printable image.

The options are as follows:


Enabled

Feeds a label with nothing printed on it.

Disabled

Does not feed a label with nothing printed on it.

[Prioritize]

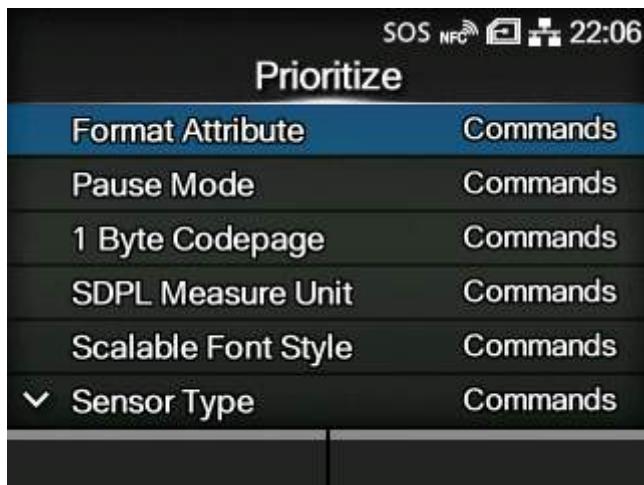

Select the settings to be prioritized for each setting item of the SDPL command. You can set whether to prioritize settings that are done through the product or through commands.

When you select [Settings] for an item, the setting specified in the [SDPL] menu of the product will be used.

The setting items are as follows:

[Format Attribute](#)

Select the setting to be prioritized for the format attribute.

[Pause Mode](#)

Select the setting to be prioritized for pause mode.

[1 Byte Codepage](#)

Select the setting to be prioritized for the 1 byte code page.

[SDPL Measure Unit](#)

Select the setting to be prioritized for the measurement unit.

[Scalable Font Style](#)

Select the setting to be prioritized for the scalable font style.

[Sensor Type](#)

Select the setting to be prioritized for the sensor type.

[Feedback Character](#)

Select the setting to be prioritized for the feedback character.

[SOH Commands](#)

Select the setting to be prioritized for the SOH commands.

[Module Selection](#)

Select the destination to save the product settings via module selection.


[Darkness](#)

[Factory Offset](#)

Speed

The option selected in the [Printing] > [Advanced] > [Prioritize] menu is applied to these three settings and shown on this screen.

[Format Attribute]

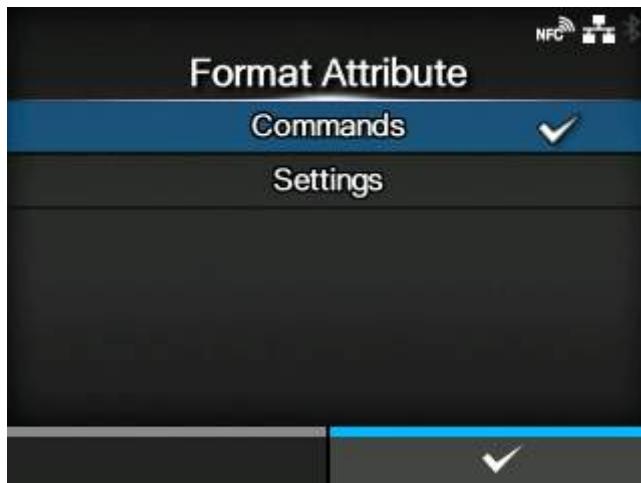

Set whether to prioritize the settings that are done through the product or through commands for the format attribute setting.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[Pause Mode]

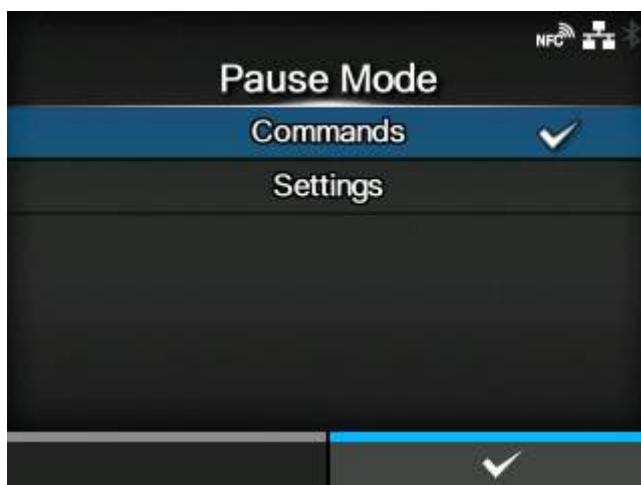

Set whether to prioritize the settings that are done through the product or through commands for the pause mode setting.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[1 Byte Codepage]

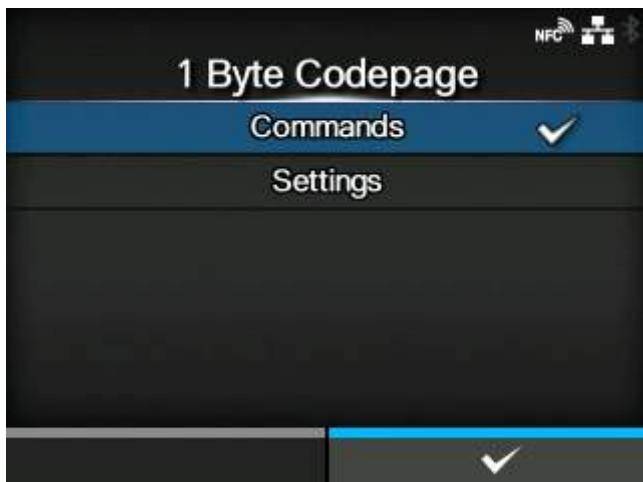

Set whether to prioritize the settings that are done through the product or through commands for the 1 byte code page setting.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[SDPL Measure Unit]

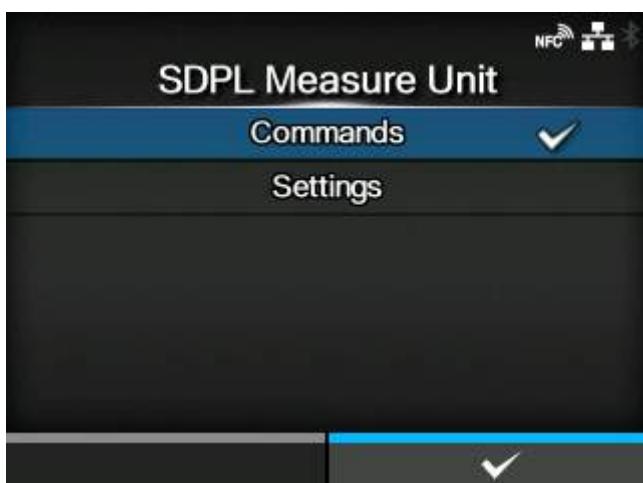

Set whether to prioritize the settings that are done through the product or through commands for the measurement unit setting.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[Scalable Font Style]

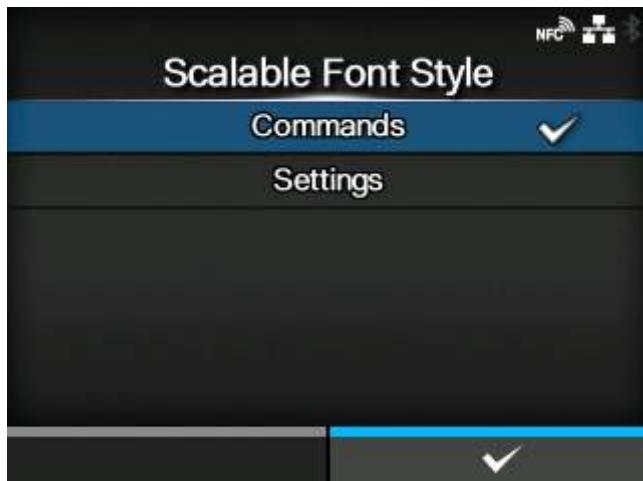

Set whether to prioritize the settings that are done through the product or through commands for the scalable font style settings.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[Sensor Type]

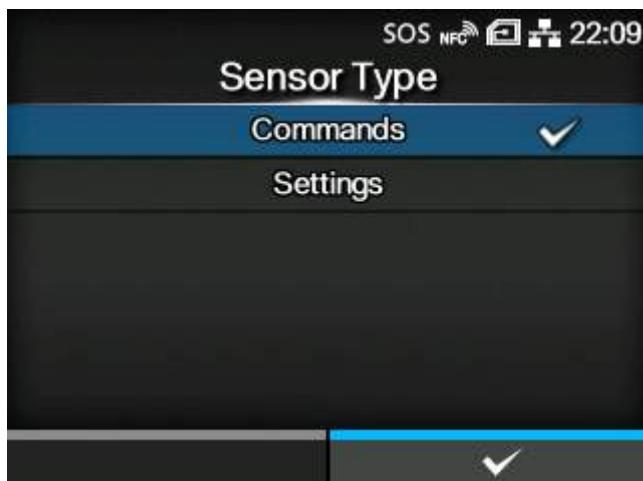

Set whether to prioritize the settings that are done through the product or through commands for the sensor type setting.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[Feedback Character]

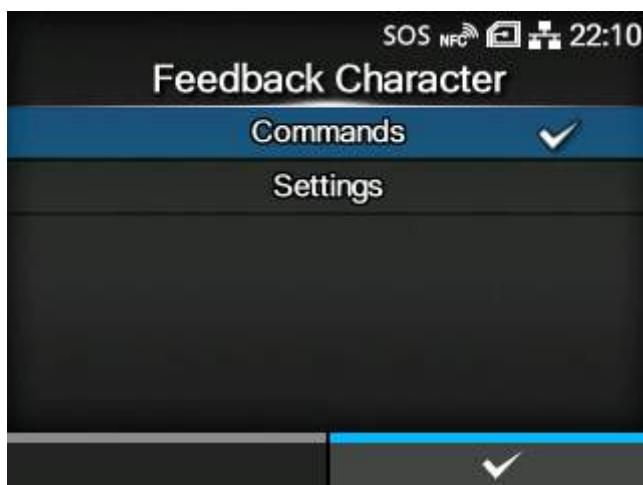

Set whether to prioritize the settings that are done through the product or through commands for the feedback character setting.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[SOH Commands]

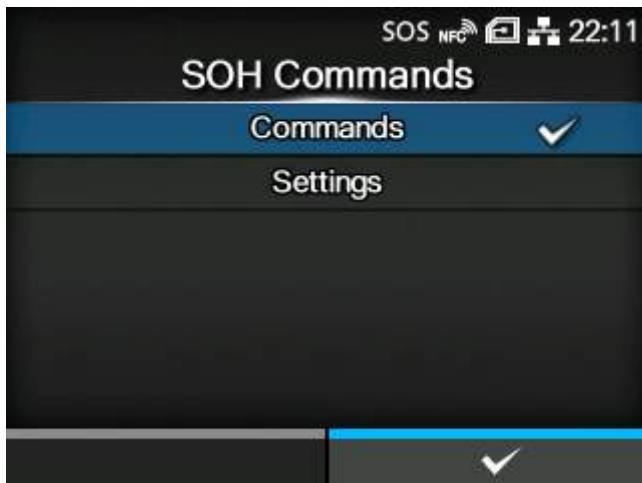

Set whether to prioritize the settings that are done through the product or through commands for the SOH Commands settings.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[Module Selection]

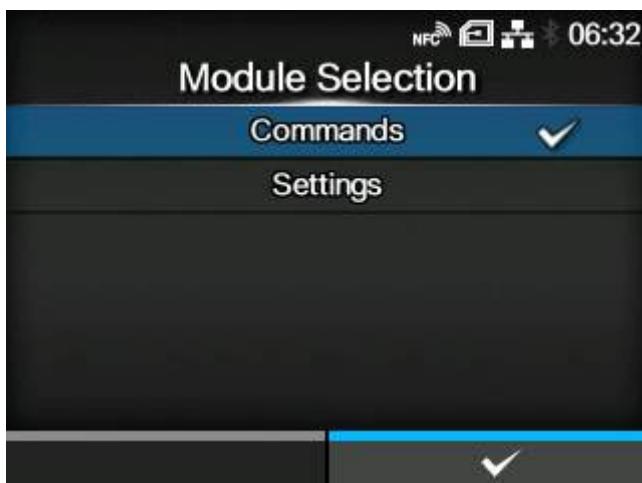

Select the destination to save the product settings via module selection.

The options are as follows:


Commands

Prioritize the settings through commands.

Settings

Prioritize the settings that are done through the product.

[Format Attribute]

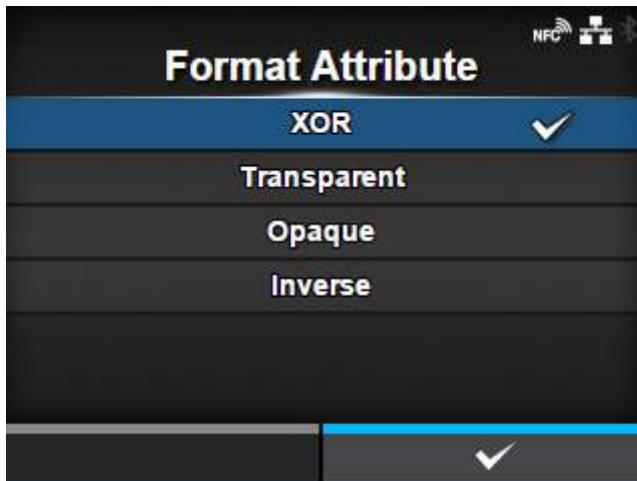


Set the format attribute.

You can change this setting if you have selected [Settings] in the [Prioritize] > [Format Attribute] menu.

The options are as follows:

- [XOR]
- [Transparent]
- [Opaque]
- [Inverse]

[Pause Mode]

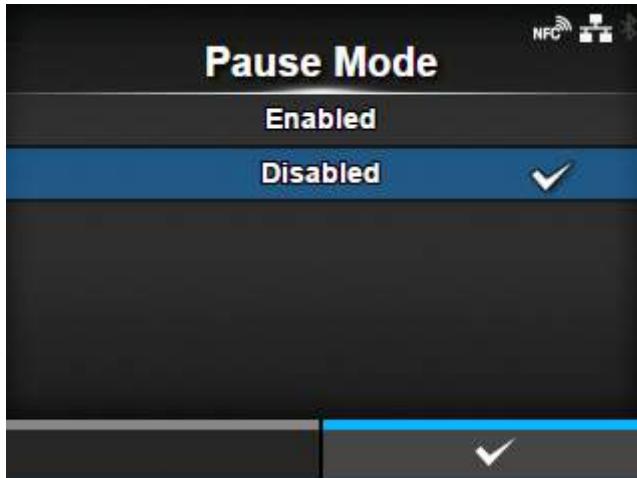

Enable or disable the pause mode.

You can change this setting if you have selected [Settings] in the [Prioritize] > [Pause Mode] menu.


The options are as follows:

Enabled

Enable the pause mode.


Disabled

Disable the pause mode.

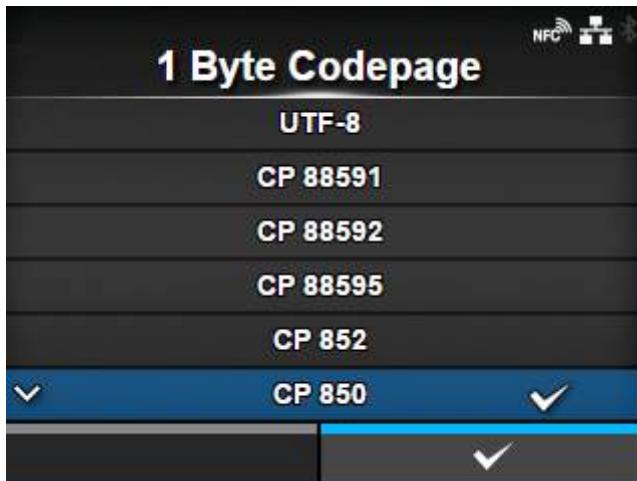[\[1 Byte Codepage\]](#)

Select the code page to be used for one-byte characters from the list.

You can change this setting if you have selected [Settings] in the [Prioritize] > [1 Byte Codepage] menu.

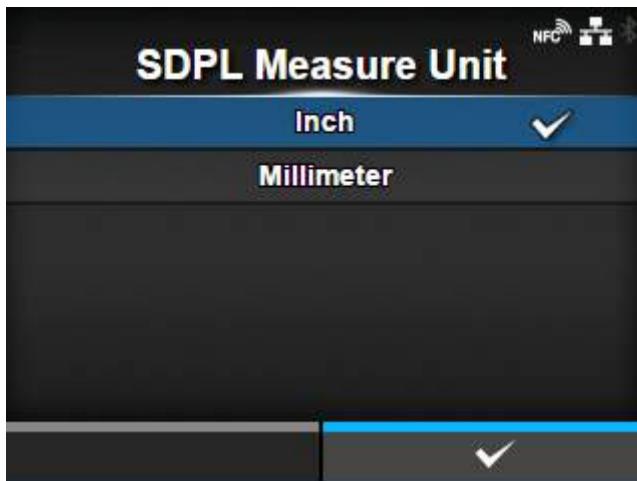[\[SDPL Measure Unit\]](#)

Set the measurement unit.

You can change this setting if you have selected [Settings] in the [Prioritize] > [SDPL Measure Unit] menu.

The options are as follows:

- [Inch]
- [Millimeter]

[Scalable Font Style]



Set the style of the scalable fonts.

You can change this setting if you have selected [Settings] in the [Prioritize] > [Scalable Font Style] menu.

The setting items are as follows:


[Bold](#)

Set whether to use bold.

[Italic](#)

Set whether to use italics.

[Bold]

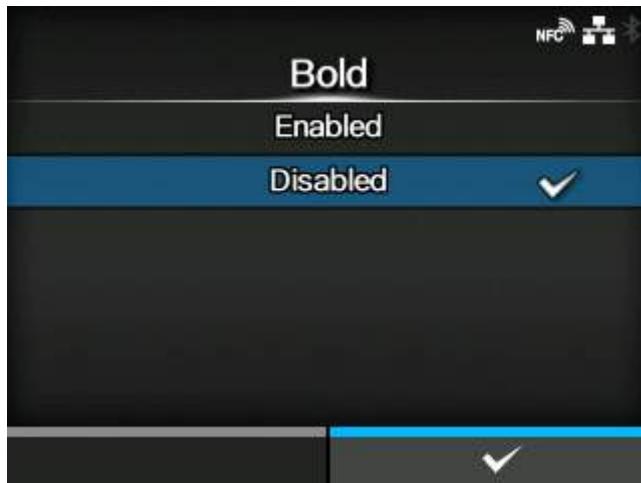

Set whether to use bold for the scalable fonts.

The options are as follows:


[Enabled](#)

Use bold.

Disabled

Do not use bold.

[Italic]

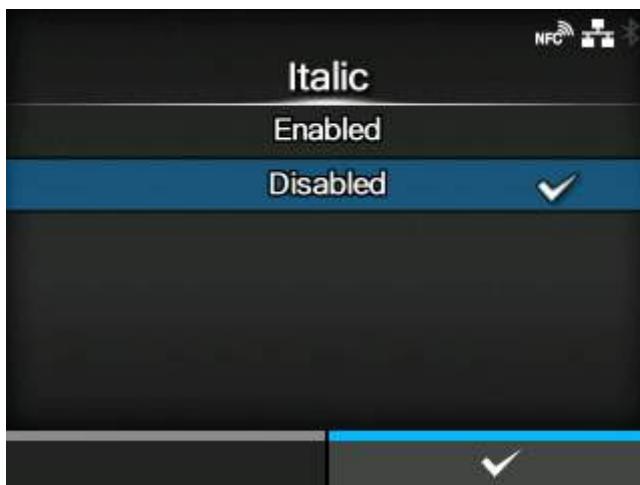

Set whether to use italics for the scalable fonts.

The options are as follows:


Enabled

Use italics.

Disabled

Do not use italics.

[Feedback Character]

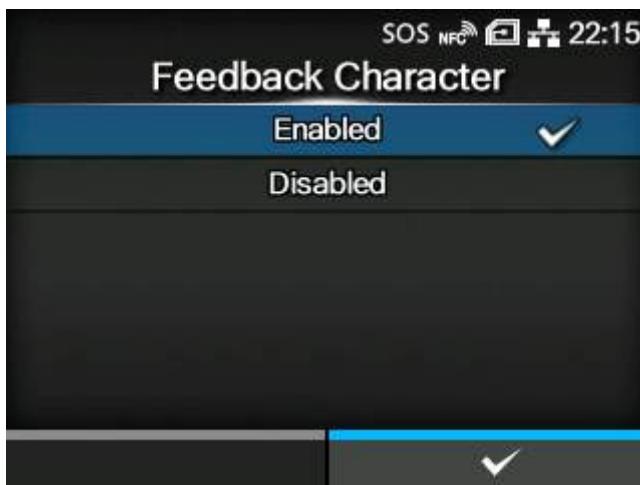

Enable or disable the <STX>a command.

You can change this setting if you have selected [Settings] in the [Prioritize] > [Feedback Character] menu.

The options are as follows:

Enabled

Enable the <STX>a command.

Disabled

Disable the <STX>a command.

[SOH Commands]



Set the SOH commands.

You can change this setting if you have selected [Settings] in the [Prioritize] > [SOH Commands] menu.

The setting items are as follows:

All Commands

Enable or disable all the SOH commands. You can also select to set each command individually.

SOH-B Command

Enable or disable the SOH-B command.

- Available only if you have selected [Custom] in the [All Commands] menu.

SOH-C Command


Enable or disable the SOH-C command.

- Available only if you have selected [Custom] in the [All Commands] menu.

Others

Enable or disable the SOH commands other than the SOH-B and SOH-C commands.

- Available only if you have selected [Custom] in the [All Commands] menu.

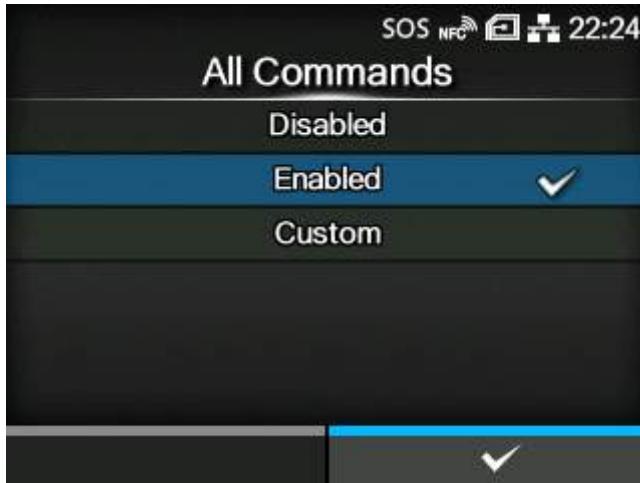[\[All Commands\]](#)

Enable or disable all the SOH commands. You can also select to set each command individually.

The options are as follows:

Disabled


Disable all the SOH commands.

Enabled

Enable all the SOH commands.

Custom

Enable or disable each type of the SOH commands individually.

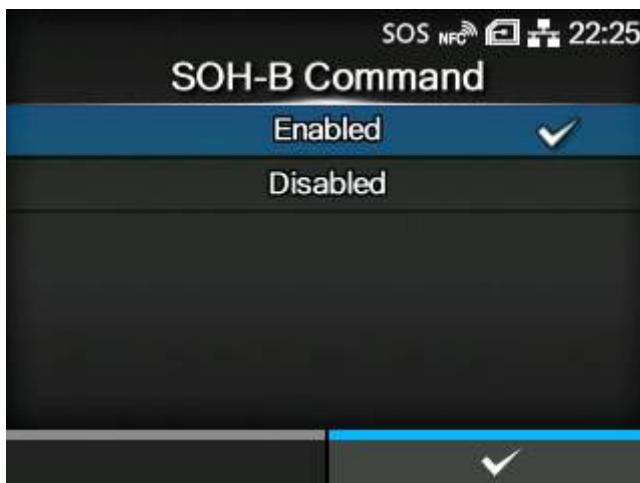[\[SOH-B Command\]](#)

Enable or disable the SOH-B command.

Available if you have selected [Custom] in the [All Commands] menu.

The options are as follows:


Enabled

Enable the SOH-B command.

Disabled

Disable the SOH-B command.

[SOH-C Command]

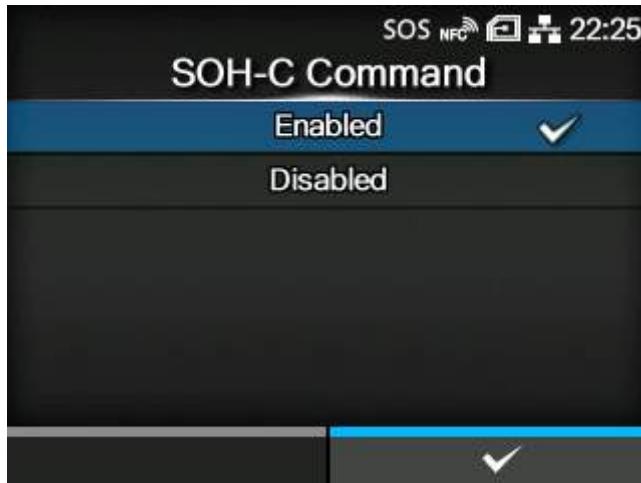

Enable or disable the SOH-C command.

Available if you have selected [Custom] in the [All Commands] menu.

The options are as follows:


Enabled

Enable the SOH-C command.

Disabled

Disable the SOH-C command.

[Others]

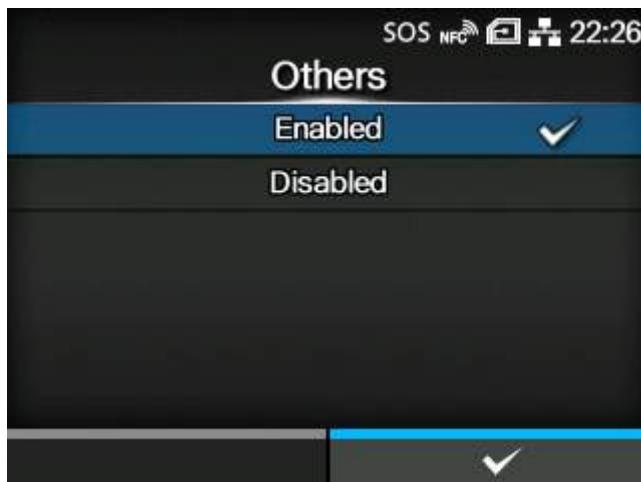

Enable or disable the SOH commands other than the SOH-B and SOH-C commands.

Available if you have selected [Custom] in the [All Commands] menu.


The options are as follows:

Enabled

Enable the SOH commands other than the SOH-B and SOH-C commands.

Disabled

Disable the SOH commands other than the SOH-B and SOH-C commands.

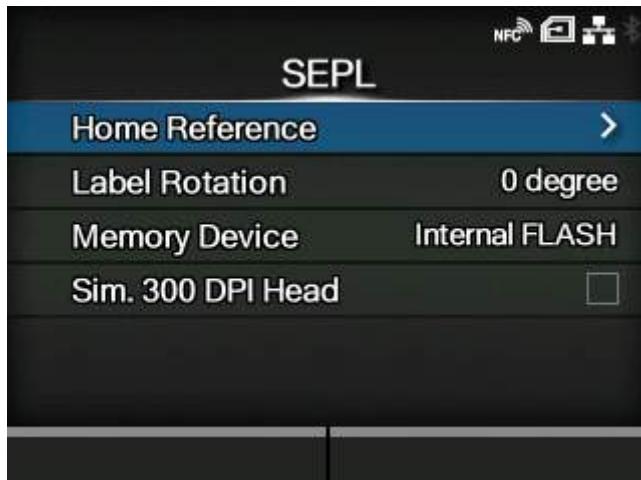[SEPL]

To use SEPL as a printer command, set the following items:

[Home Reference](#)

Adjust the print reference position by specifying the offset position in the horizontal and vertical directions.

[Label Rotation](#)

Set the page orientation for label printing.


[Memory Device](#)

Select the product's memory space in which to store forms, graphics and fonts.

[Sim. 300 DPI Head](#)

When you are using the product with 305 dpi resolution, enable or disable 300 dpi simulation mode.

[Home Reference]

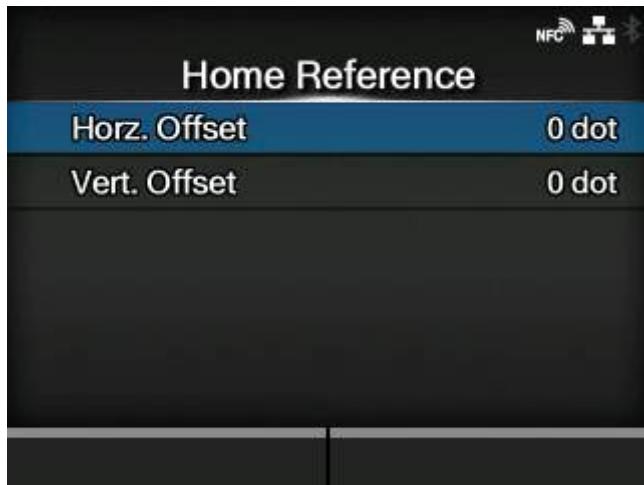

Adjust the print reference position by specifying the offset position in the horizontal and vertical directions.

The setting items are as follows:

Horz. Offset

Specify the offset position in the horizontal direction.

Vert. Offset

Specify the offset position in the vertical direction.

[Horz. Offset]



Specify the offset position in the horizontal direction.

The setting range is from 0 to 400 dots.



- The length of 1 dot varies depending on the print resolution of the product.
 - 203 dpi : 1 dot = 0.125 mm (0.0049")
 - 305 dpi : 1 dot = 0.083 mm (0.0033")
 - 609 dpi : 1 dot = 0.042 mm (0.0017")

[Vert. Offset]




Specify the offset position in the vertical direction.

The setting range is from 0 to 400 dots.



- The length of 1 dot varies depending on the print resolution of the product.
 - 203 dpi : 1 dot = 0.125 mm (0.0049")
 - 305 dpi : 1 dot = 0.083 mm (0.0033")
 - 609 dpi : 1 dot = 0.042 mm (0.0017")

[Label Rotation]

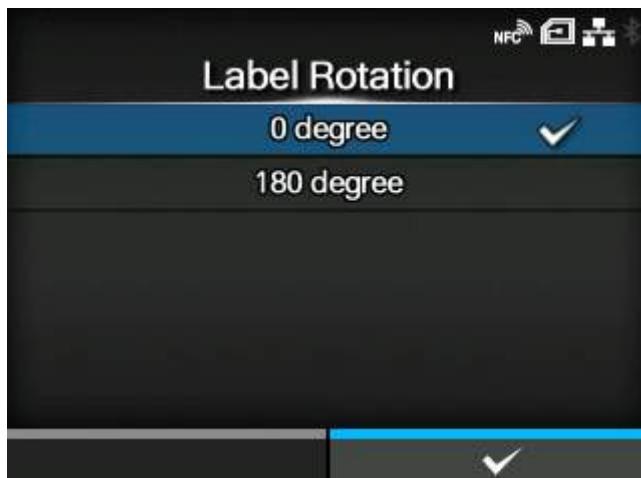

Set the page orientation for label printing.

The label size set in the product is used as a reference for rotation.

The options are as follows:


0 degree

Labels are printed in a portrait orientation.

180 degree

Labels are printed in an inverse-portrait orientation.

[Memory Device]

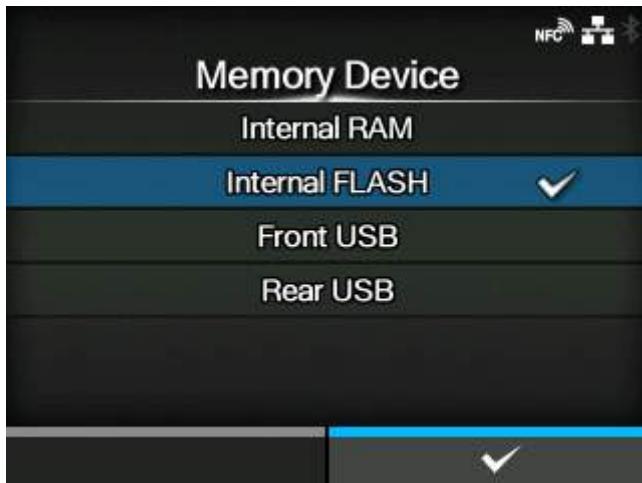

Select the product's memory space in which to store forms, graphics and fonts.

The options are as follows:

Internal RAM

Use the product's internal RAM. The data will be lost if the product is powered off.

Internal FLASH

Use the product's internal ROM.

Front USB

Use the USB memory connected to the USB connector (Type A) on the front side of the product.


Rear USB

Use the USB memory connected to the USB connector (Type A) on the rear side of the product.



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

[Sim. 300 DPI Head]

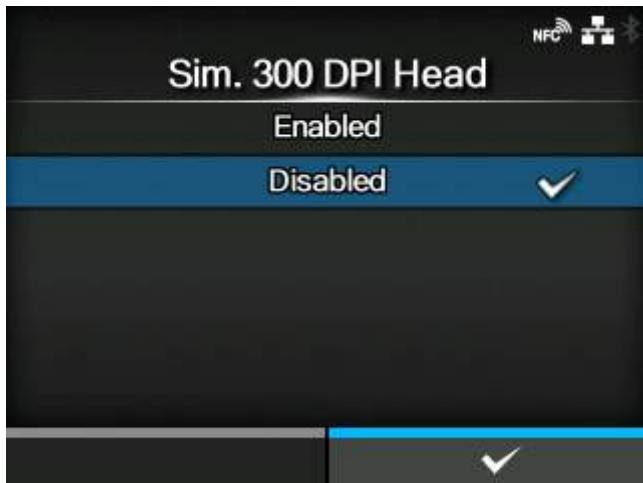

When you are using the product with 305 dpi resolution, enable or disable 300 dpi simulation mode.

The options are as follows:


Enabled

Enable 300 dpi simulation mode. The sizes and positions of objects such as lines, boxes and barcodes in the print data are automatically adjusted to the equivalent 300 dpi sizes and positions for printing.

Disabled

Disable 300 dpi simulation mode.

[AEP]

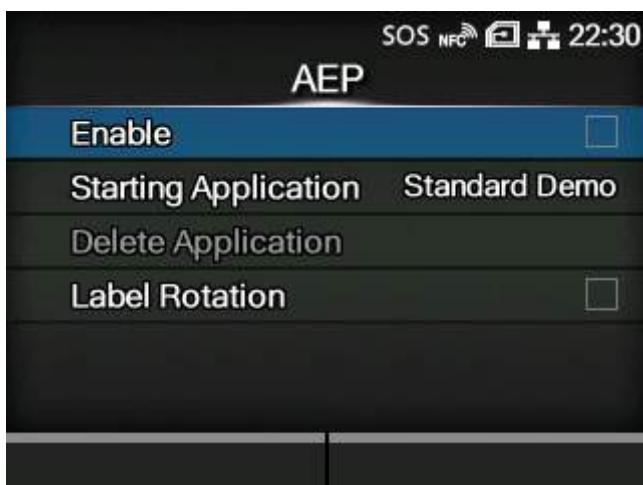

Set the functions for AEP (Application Enabled Printing).

AEP mode allows you to use the product as a stand-alone device by running applications within the product.

Use the standard application, or install custom applications to the product from a USB memory, All-In-One Tool, WebConfig page, etc.

In AEP mode, you can use USB keyboards and barcode scanners to input data.

The setting items are as follows:

Enable

Enable or disable AEP mode.

Starting Application

Select the application to start at product startup in AEP mode.

Delete Application

Delete installed applications.


Label Rotation

Set whether to rotate the page orientation for label printing.



- Contact your SATO sales representative for more information about the use of AEP mode.
-

[Enable]

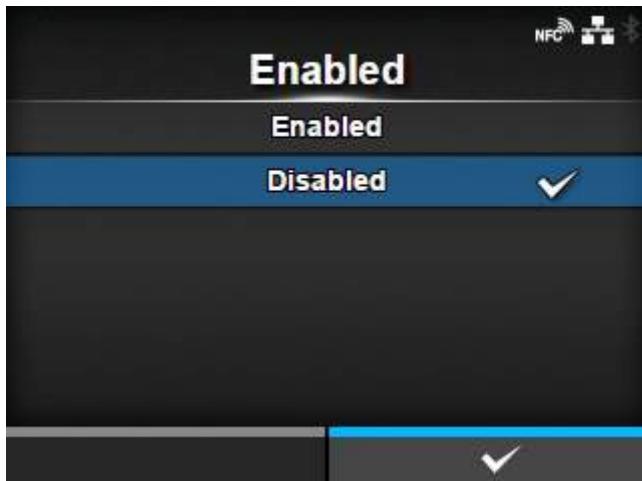

Enable or disable AEP (Application Enabled Printing) mode.

The options are as follows:

Enabled


Enable AEP mode.

Disabled

Disable AEP mode.




- A message prompting you to restart the product will appear on the Online/Offline screen if you have made any changes. In such a case, reboot the product to apply the settings.
-

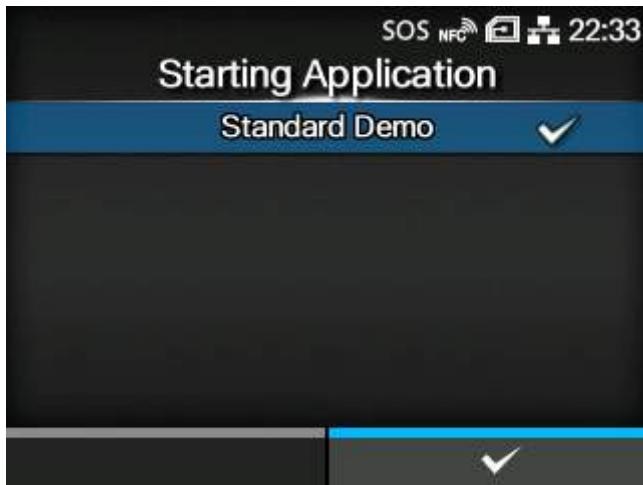[\[Starting Application\]](#)

Select the application to start at product startup in AEP (Application Enabled Printing) mode.

Select the application using the / buttons and press the button to confirm.

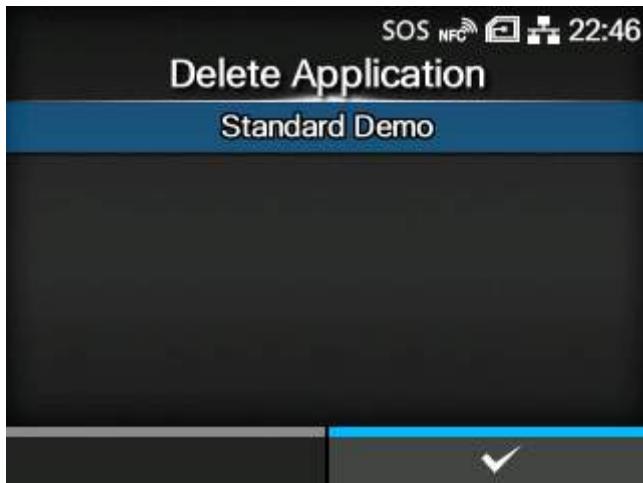[\[Delete Application\]](#)

Delete installed applications from the list.

Select the application to be deleted using the / buttons and press the button to confirm.

[Label Rotation]



Set whether to rotate the page orientation for label printing.

The options are as follows:

Enabled


Rotates the page orientation 180 degrees.

Disabled

Does not rotate the page orientation.



[System] Menu

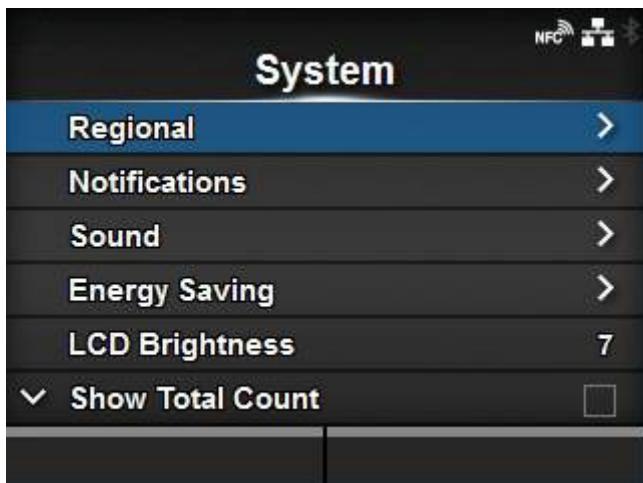

The following settings are available in the [System] menu:

Regional

Set the display language, time zone, calendar (option) and unit.

Notifications

Set the function to notify when to clean and replace parts.

Sound

Set the buzzer sound.

Energy Saving

Set the period before the product enters sleep mode.

LCD Brightness

Set the brightness of the screen.

Show Total Count

Enable or disable the indication of the total print count.

Password

Set the password.

Start on AC

Set whether to power on/off the product by powering on/off the main power source.

[Regional]



Set the display language, time zone, calendar (option) and unit.

The setting items are as follows:

Messages

Set the display language of the LCD.

USB Keyboard

Set the language for the USB keyboard connected to the product.

Locale

Set the locale to be used in AEP (Application Enabled Printing) mode.

Unit

Set the unit of length for indication.

Time

Set the time.



- You can set the time only if you have installed the optional RTC kit.

Date

Set the date.



- You can set the date only if you have installed the optional RTC kit.


Time Zone

Set the time zone.

Display Language Icon

Set whether to display the [Language] icon on the top screen of the [Settings] menu.

[Messages]

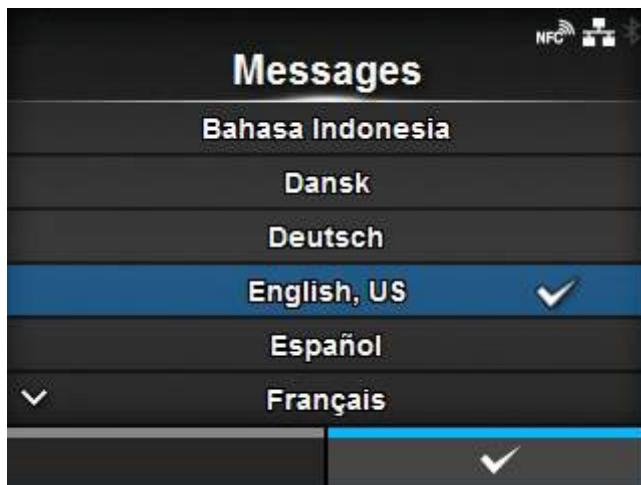

Set the display language of the LCD.

Select the display language from the list.

[USB Keyboard]



Set the language for the USB keyboard connected to the product.

Select the USB keyboard layout from Western and Eastern European languages, Japanese, Chinese and Korean.



- Japanese, Chinese, and Korean only support a change in the layout of the keyboard. The IME (Input Method Editor) is not compatible, so you cannot input hiragana, katakana, or kanji.

[Locale]




Set the locale to be used in AEP (Application Enabled Printing) mode.

This setting determines the format of time, dates, numbers, prices, names of weekdays, months, etc. in AEP applications.

Select the locale from the list.

[Unit]

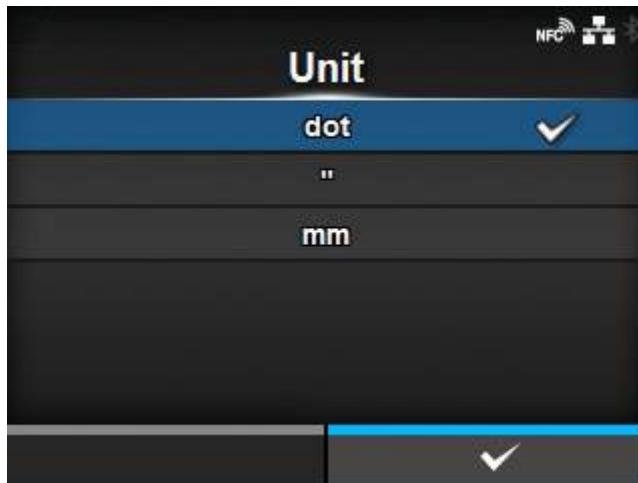


Set the unit of length for indication.

The options are as follows:

- [dot]
- ["] (inches)
- [mm]


[Time]

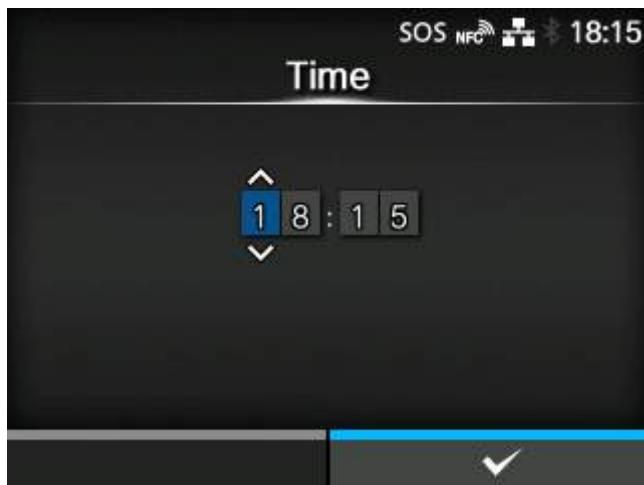

Set the time.


You can set the time only if you have installed the optional RTC kit.

After setting the time and pressing the button, the confirmation screen appears.

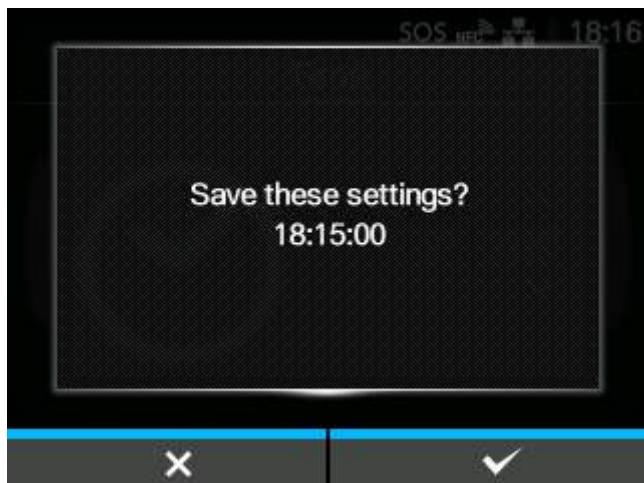

Press the button to cancel, or press the button to confirm the setting.

[Date]

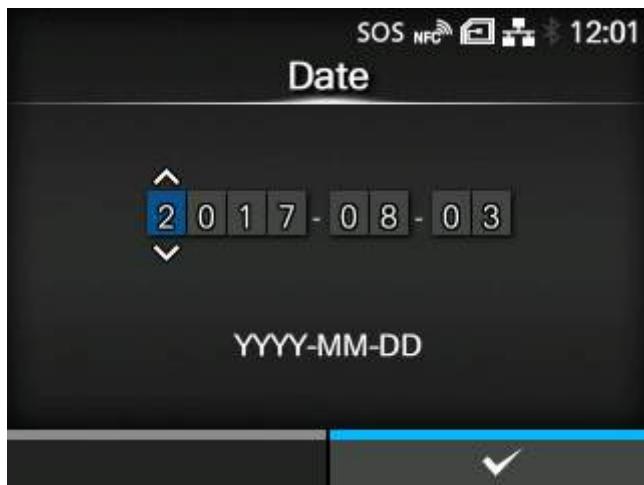

Set the date.

You can set the date only if you have installed the optional RTC kit.


The setting range is as follows:

2000-01-01 to 2035-12-31




- The date format is Year - Month - Date.

After setting the date and pressing the  button, the confirmation screen appears.

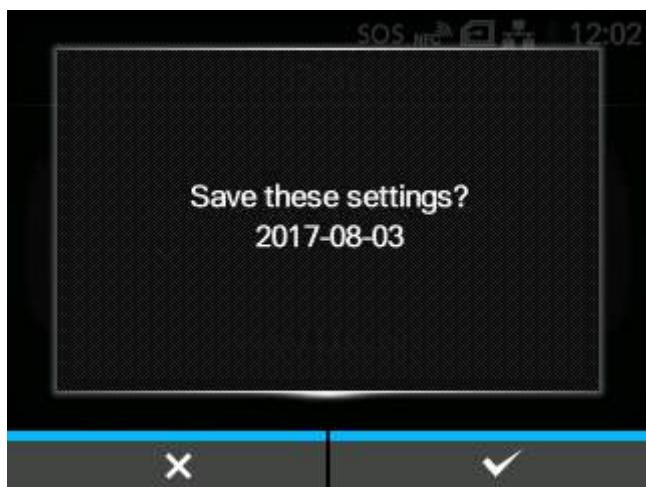

Press the  button to cancel, or press the  button to confirm the setting.

[Time Zone]

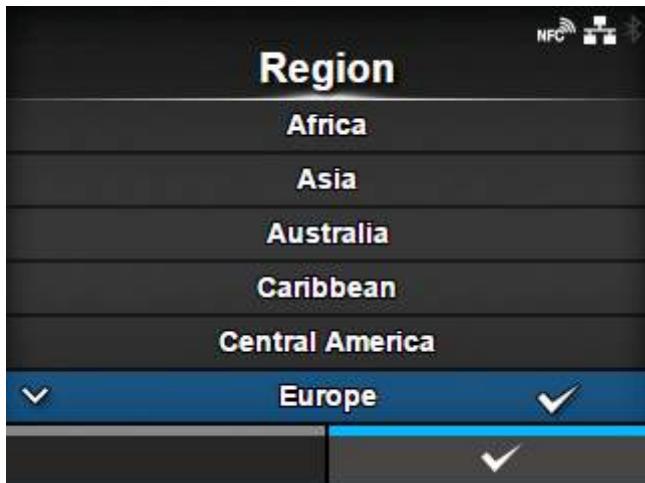


Set the time zone.

First select the region from the [Region] list.

Then select the city from the [City] list.



[Display Language Icon]

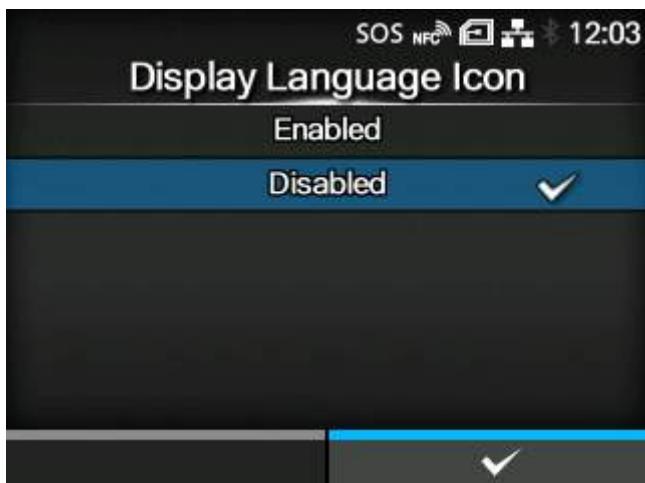

Set whether to display the [Language] icon on the top screen of the [Settings] menu.

The options are as follows:

Enabled

Display the [Language] icon.


Disabled

Do not display the [Language] icon.

By enabling this function, the [Language] icon is added to the [Settings] menu screen as below. You can directly access the display language setting screen.



[Notifications]

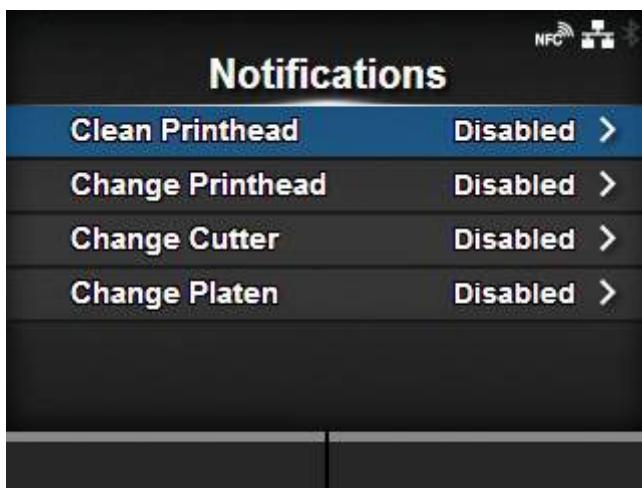

Set the function to notify when to clean and replace parts.

The setting items are as follows:

[Clean Printhead](#)

Notify when the print head needs to be cleaned.

[Change Printhead](#)


Notify when the print head needs to be replaced.

[Change Cutter](#)

Notify when the cutter unit needs to be replaced.

[Change Platen](#)

Notify when the platen roller needs to be replaced.

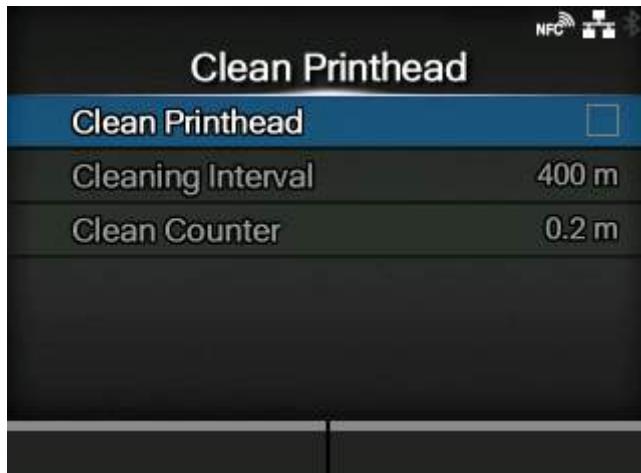[\[Clean Printhead\]](#)

Notify when the print head needs to be cleaned.

The setting items are as follows:

[Clean Printhead](#)


Enable or disable the notification function about when the print head needs to be cleaned.

[Cleaning Interval](#)

Set the notification interval about when the print head needs to be cleaned.

[Clean Counter](#)

Shows the current print distance.

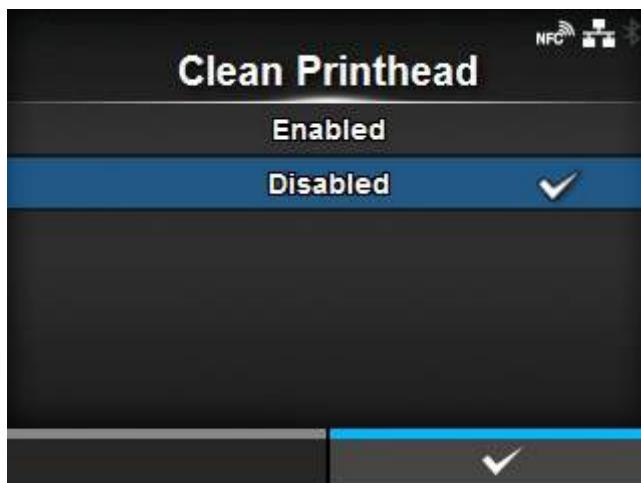[\[Clean Printhead\]](#)

Enable or disable the notification function about when the print head needs to be cleaned.

The options are as follows:


Enabled

Enable the notification function.

Disabled

Disable the notification function.

[Cleaning Interval]

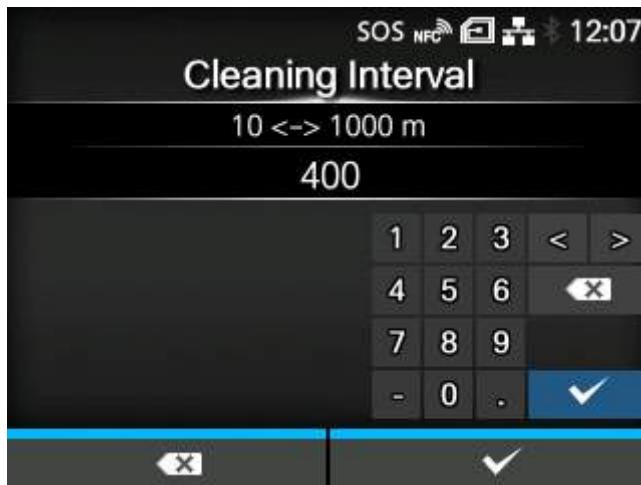


Set the notification interval about when the print head needs to be cleaned.

You can change this setting if you have selected [Enabled] in the [Clean Printhead] menu.

The product shows the print distance as a set value. The setting range is from 10 to 1000 meters.

[Change Printhead]

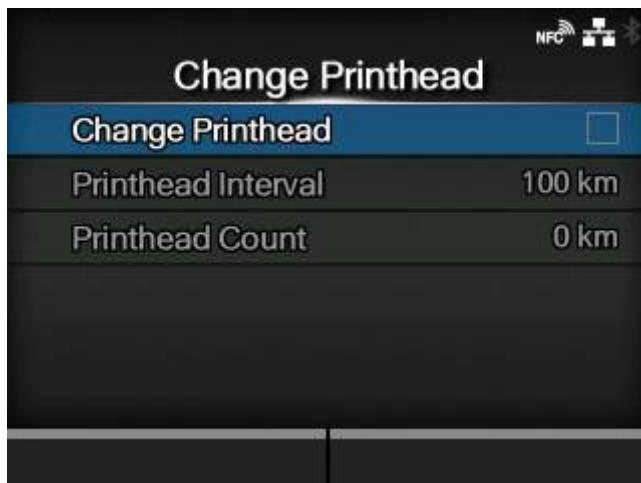

Notify when the print head needs to be replaced.

The setting items are as follows:

Change Printhead


Enable or disable the notification function about when the print head needs to be replaced.

Printhead Interval

Set the notification interval about when the print head needs to be replaced.

Printhead Count

Shows the current print distance.

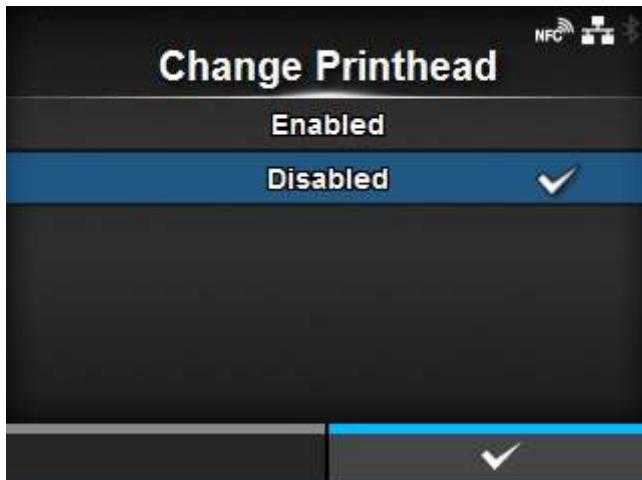[Change Printhead]

Enable or disable the notification function about when the print head needs to be replaced.


The options are as follows:

Enabled

Enable the notification function.

Disabled

Disable the notification function.

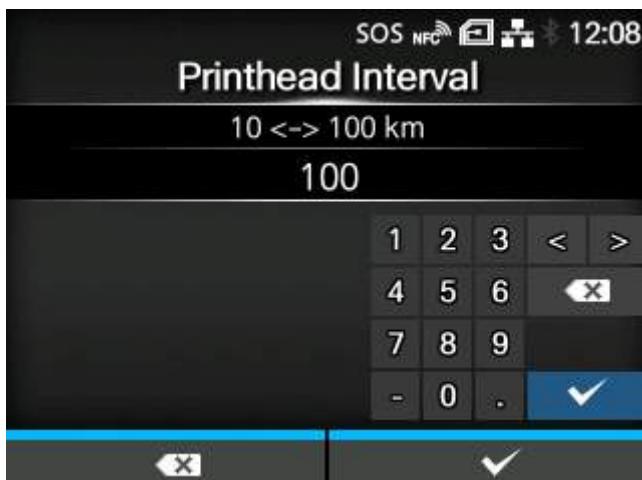[Printhead Interval]

Set the notification interval about when the print head needs to be replaced.

You can change this setting if you have selected [Enabled] in the [Change Printhead] menu.

The product shows the print distance as a set value. The setting range is from 10 to 100 km.

[Change Cutter]



Notify when the cutter unit needs to be replaced.

The setting items are as follows:

[Change Cutter](#)

Enable or disable the notification function about when the cutter unit needs to be replaced.


[Cutter Life](#)

Set the notification interval about when the cutter unit needs to be replaced.

[Cutter Count](#)

Shows the current number of cuts by the cutter.

[Change Cutter]

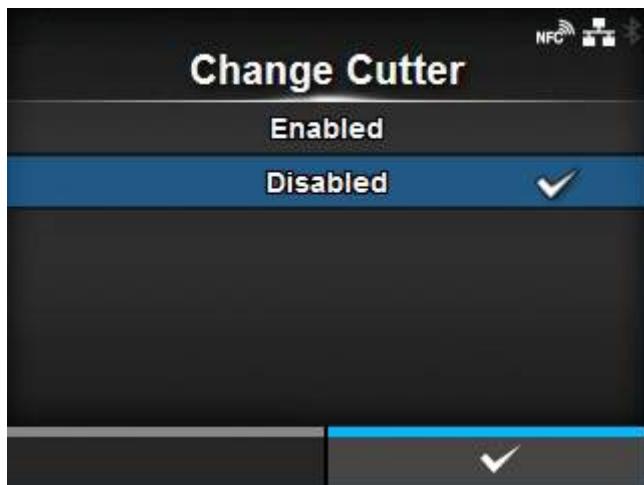

Enable or disable the notification function about when the cutter unit needs to be replaced.


The options are as follows:

[Enabled](#)

Enable the notification function.

Disabled


Disable the notification function.

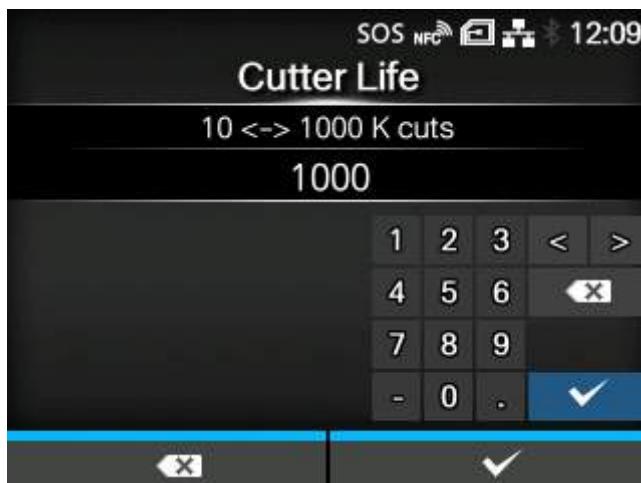[\[Cutter Life\]](#)

Set the notification interval about when the cutter unit needs to be replaced.

You can change this setting if you have selected [Enabled] in the [Change Cutter] menu.

The product shows the cutter count as a set value. The setting range is from 10,000 to 1,000,000 cuts.

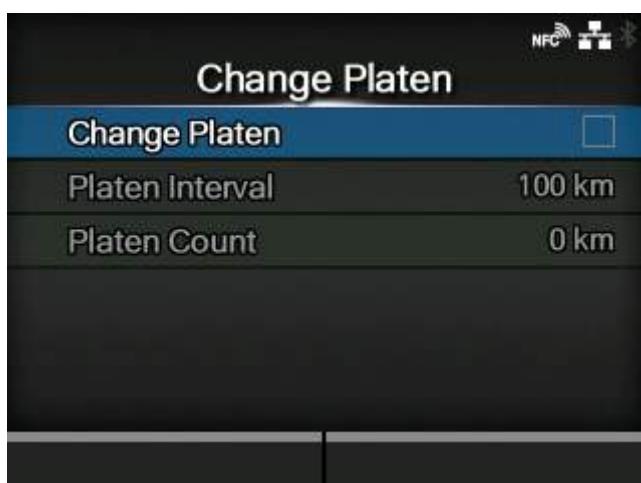[\[Change Platen\]](#)

Notify when the platen roller needs to be replaced.

The setting items are as follows:

[Change Platen](#)

Enable or disable the notification function about when the platen roller needs to be replaced.


[Platen Interval](#)

Set the notification interval about when the platen roller needs to be replaced.

[Platen Count](#)

Shows the current distance the platen roller has fed.

[Change Platen]

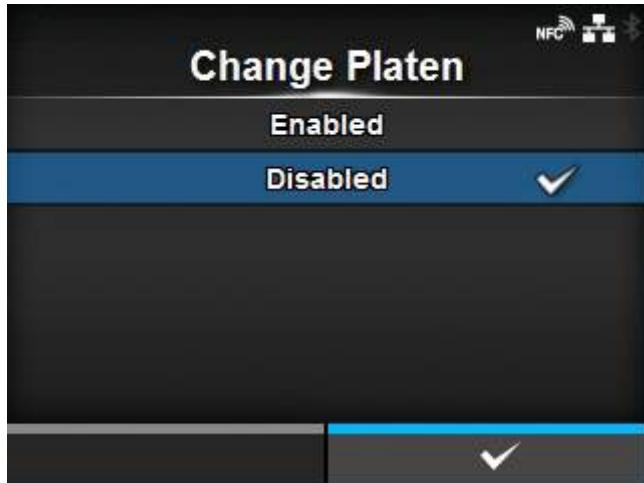

Enable or disable the notification function about when the platen roller needs to be replaced.

The options are as follows:

Enabled

Enable the notification function.

Disabled

Disable the notification function.

[Platen Interval]



Set the notification interval about when the platen roller needs to be replaced.

You can change this setting if you have selected [Enabled] in the [Change Platen] menu.

The product shows the fed distance as a set value. The setting range is from 10 to 100 km.

[Sound]



Set the buzzer sound.

The setting item is as follows:


Error Sound

Set the buzzer volume for the error sound.

Power Off Sound

Set the buzzer volume when powering off the product.

[Error Sound]

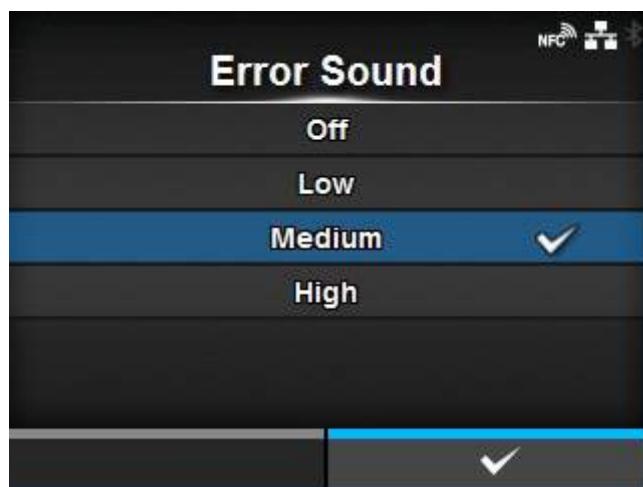

Set the buzzer volume for the error sound.

The options are as follows:

Off

Mute the sound.

Low

Low volume.

Medium

Medium volume.

High

High volume.

[Power Off Sound]



Set the buzzer volume when powering off the product.

The options are as follows:

Off

Mute the sound.

Low

Low volume.


Medium

Medium volume.

High

High volume.

[Energy Saving]

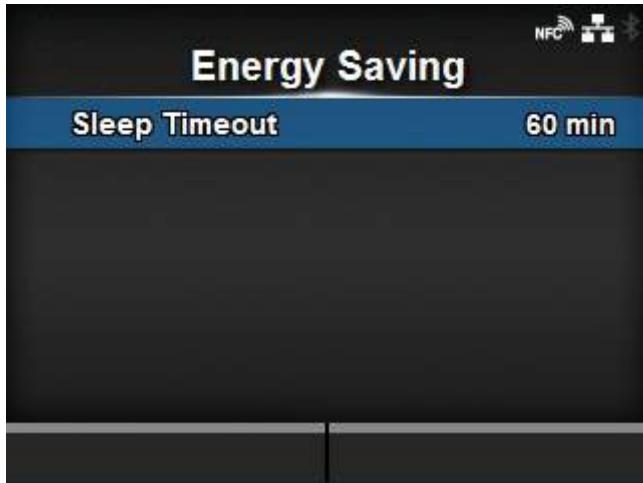


The setting item is as follows:

Sleep Timeout

Set the period before the product enters sleep mode.

[Sleep Timeout]

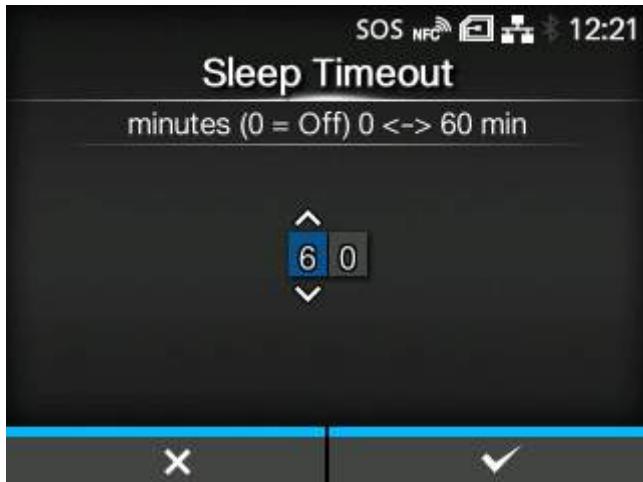


Set the period before the product enters sleep mode.

The setting range is from 0 to 60 minutes.



- The sleep function is disabled if you set to 0.
- This setting is disabled if [Print Start Signal] is set to [Enabled].

[LCD Brightness]

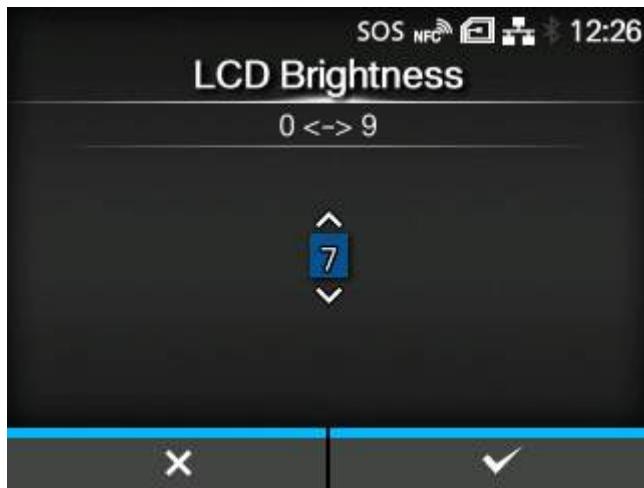

Set the brightness of the screen.

The setting range is from 0 to 9.


0 is the darkest and 9 is the brightest.

Press the button to complete the setting.



- The product has a built-in energy saving function, which will decrease the brightness of the screen when you have not operated the product for a period.

[Show Total Count]

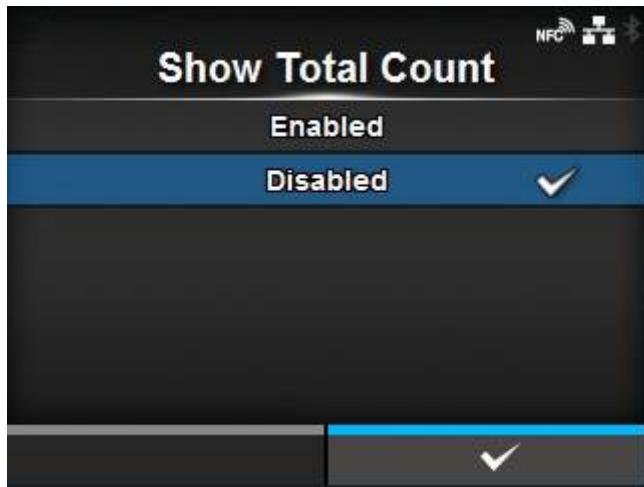

Enable or disable the indication of the total print count.

If set to [Enabled], the total print count appears on both the Online and Offline screens.

The number in the brackets to the right of [QTY] on the Online and Offline screens is the total print count.

The options are as follows:

Enabled


Enable the indication of the total print count.

Disabled

Disable the indication of the total print count.



- Shows the total print count from the time the product is on until it is off.
When you power off the product, the count is reset to [0].

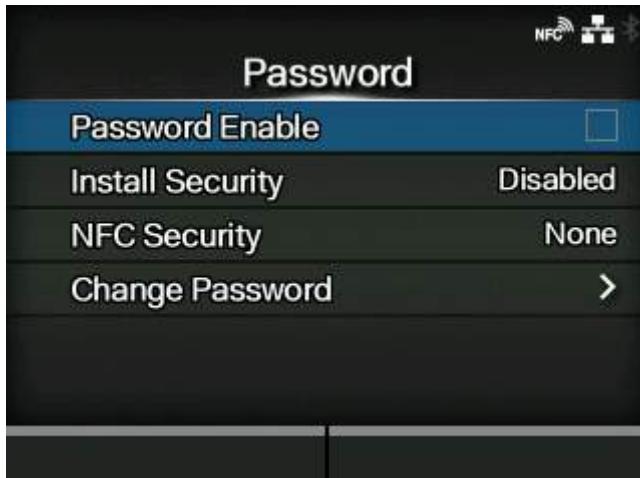[Password]

The setting items are as follows:

[Password Enable](#)

Enable or disable the password setting.

[Install Security](#)

Enable or disable the password input for the package file download.


[NFC Security](#)

Set whether to show the confirmation message or enable the password input before settings are written to the product from an Android device with the NFC interface.

[Change Password](#)

Change the password.

[Password Enable]

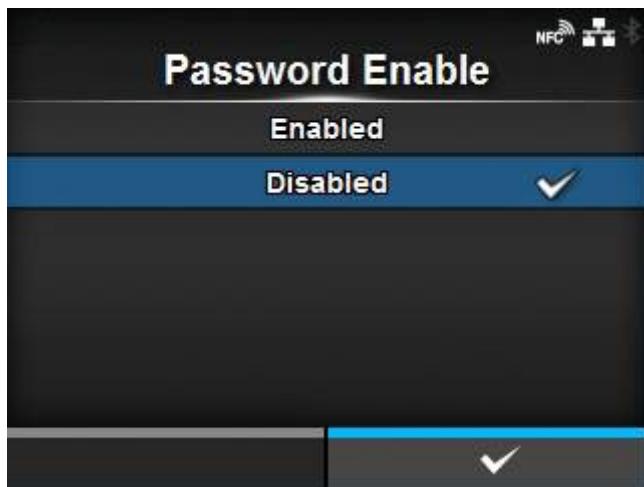

Enable or disable the password setting.

If you have set the password to [Enabled], the product requires you to enter the password set in the [Password] screen before you enter the [Settings] menu.

The options are as follows:

Enabled

Enable the password setting.


Disabled

Disable the password setting.



- The default password is 0310. You can change the password in [Password] > [Change Password] > [level1].

[Install Security]

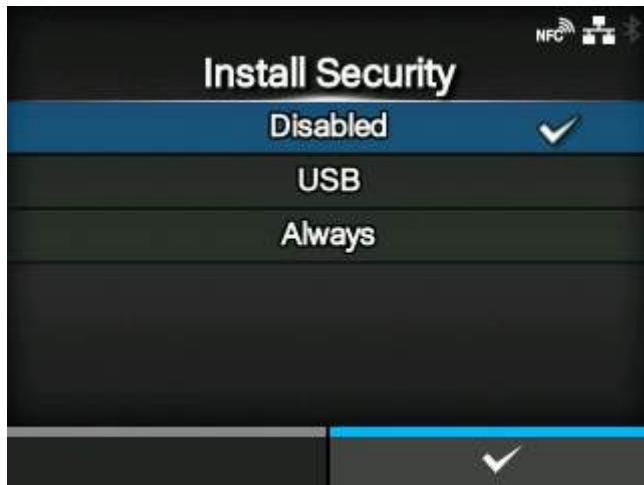

Enable or disable the password input for installing the pkg file to the product.

If you have enabled the password input, the product requires you to enter the password set in the [Password] screen before you can download the package file.

The options are as follows:

Disabled

No password is required to install a pkg file.

USB

Password is required to install a pkg file from the USB memory.


Always

Password is required to install a pkg file from the USB memory or downloaded from computer.



- The password used for installing a pkg file can be any passwords set in the [System] > [Password].
- Contact your SATO reseller or technical support center for more information of the pkg file.

[\[NFC Security\]](#)

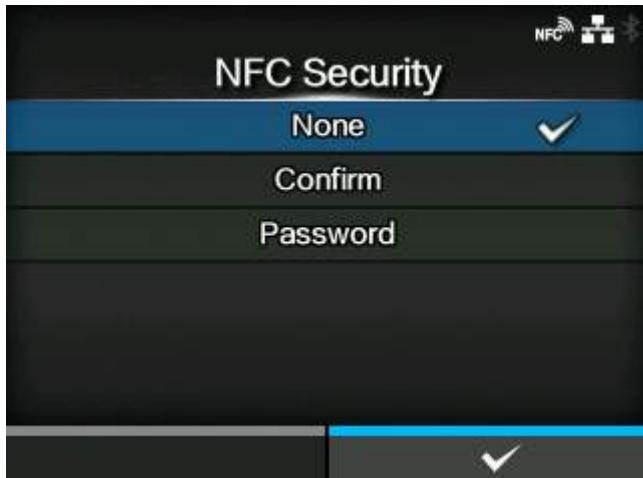

Set whether to show the confirmation message or enable the password input before settings are written to the product from an Android device with the NFC interface.

To use the NFC Security function, the settings must be written from the Android device while the product is powered off. The confirmation message or password input screen is shown when the product is powered on.

The options are as follows:

None

No confirmation message is shown and no password is required before the settings are written to the product.


Confirm

The confirmation message is shown before the settings are written to the product.

Password

You need to enter the password set in the [Password] screen before the settings are written to the product.

[Change Password]

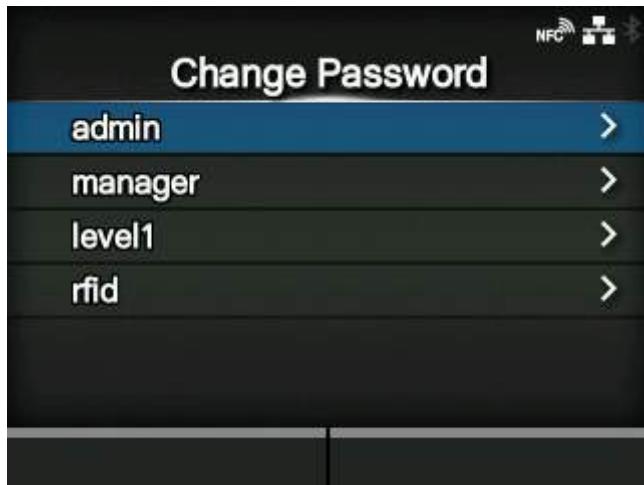

Change the password.

You can enter 4 to 32 characters. Alphabets (capital and small letters), numbers and symbols can be used.

The setting items are as follows:

admin

This is the setting item for factory.

Strictly for SATO authorized personnel use.

manager

The password for accessing the [Service] menu.

Strictly for SATO authorized personnel use.

level1

The password for accessing the [Settings] menu.

rfid


This is the setting item for factory.

Strictly for SATO authorized service personnel use.



- The [admin], [manager] and [rfid] passwords are for factory and maintenance personnel. You cannot change these passwords.
-

[Start on AC]

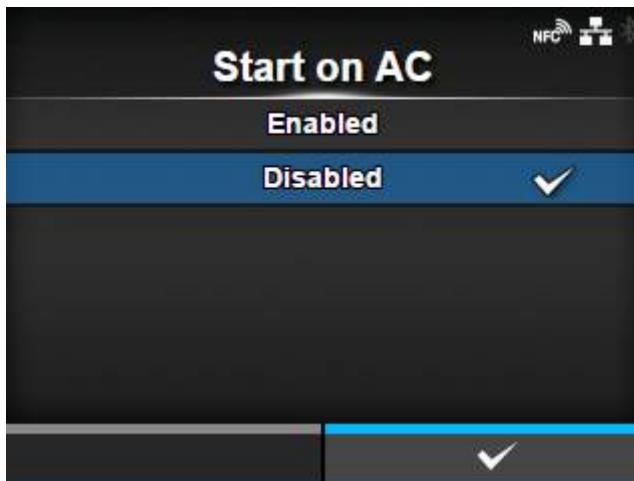

Set whether to power on/off the product by powering on/off the main power source.

The options are as follows:

Enabled

Power on/off the product by powering on/off the main power source.

Disabled


Power on/off the product by pressing the power button of the product.



- Do not repeatedly power on/off the product.
- If you power the main power source off and then on again quickly, the product may not be powered on because it is still in the powering off process. In such a case, press the power button to power on the product.
- Do not power off the product during operation, such as when printing or updating. Doing so could cause a malfunction of the product.
- Do not disconnect the power cord until the powering off process is completed on the product.
- An incorrect power on/off operation may damage the product settings. In such a case, the product settings are reset to their default values. It is always recommended to use the power button to allow proper shutdown of the product and ensure changes made to menu settings are saved appropriately.



[Tools] Menu

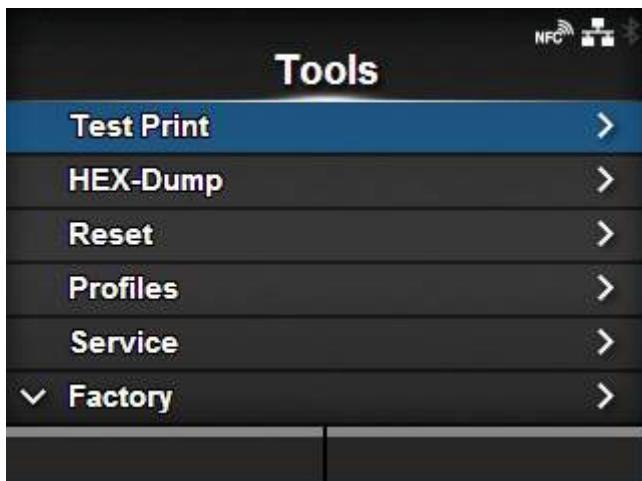

The following settings are available in the [Tools] menu:

Test Print

Perform a test print.

HEX-Dump

Save the hex dump print data or dump data from the receive buffer to the USB memory.

Reset

Initialize the settings and counters on the product.

Profiles

Save the product's settings as a profile to be loaded as needed.

Service

These are the setting items for service.

Strictly for SATO authorized service personnel use.

Factory

These are the setting items for factory.

Strictly for SATO authorized service personnel use.

Certificates

Set the wireless LAN authentication.

- Available only if you have installed the USB memory.

Barcode Checker

Set the barcode check function using a barcode checker.

Clone

Copy the current product settings and data to the USB memory.

- Available only if you have installed the USB memory.

Support Info

Save various information about the product in a text file to the USB memory.

- Available only if you have installed the USB memory.


Logging Function

Save the log data.

Startup Guide

Enable or disable the startup guide.

[Test Print]

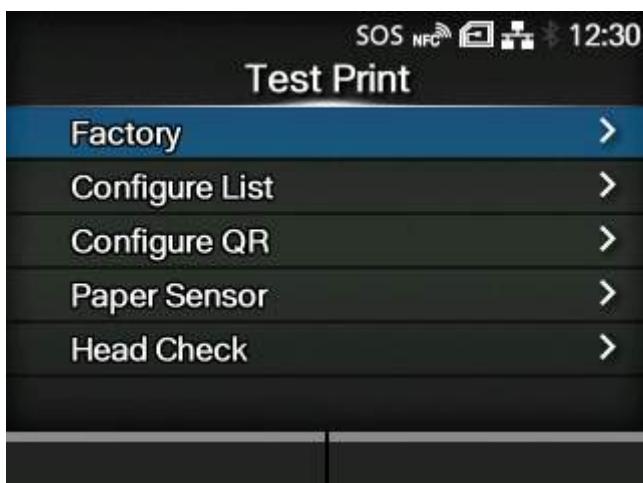

Perform a test print.

The setting items are as follows:

Factory

Perform the factory test print.

Configure List

Print the product's settings information.

Configure QR

Print the product's settings information as a QR code.

Paper Sensor

Print the detection result of the media sensor level.

Head Check

Perform the head check print.

[Factory]



Perform the factory test print.

1. Check and set the items as listed on the [Factory] menu.
2. Press the  button to start the test print. Press the  button again to pause the print.

To stop the test print, first pause the print and then press the  button.

The setting items are as follows:

Label Width

Set the media width used for the test print.

The options are [Large] (101.6 mm (4")) and [Small] (50.8 mm (2")).

Pitch

Set the print position in the vertical direction.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609dpi	-90 to 0 to 90 dots	-

Resolution	CL4NX	CL6NX
(1 dot = 0.042 mm (0.0017"))		

When you decrease the setting value, the print position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the print position moves opposite the feed direction (toward the end part of the media).

Offset

Set the stop position of the media.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609dpi (1 dot = 0.042 mm (0.0017"))	-90 to 0 to 90 dots	-

When you decrease the setting value, the stop position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the stop position moves opposite the feed direction (toward the end part of the media).

Darkness Adjust


Fine tune the print darkness of the test print.

0 is the lightest and 99 is the darkest.



- The value of [Pitch], [Offset] and [Darkness Adjust] set in the [Factory] menu will be reflected to the same item settings in the [Configure List] menu, [Configure QR] menu, [Paper Sensor] menu and [Head Check] menu.

[Configure List]

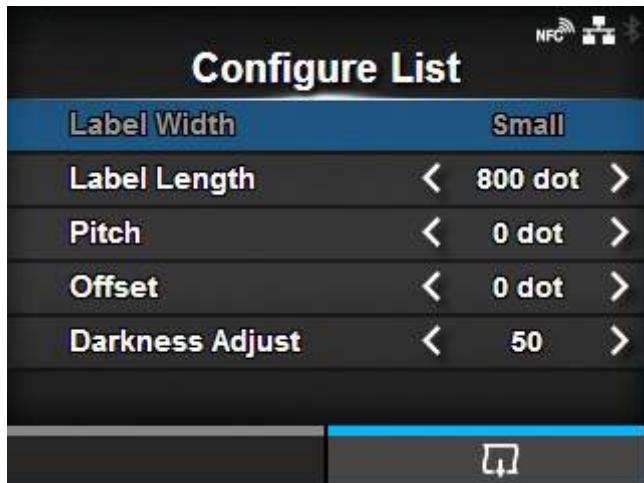

Print the product's settings information.

1. Check and set the items as listed on the [Configure List] menu.
2. Press the button to start the test print. Press the button again to pause the print.

To stop the test print, first pause the print and then press the button.

The setting items are as follows:

Label Width

Shows the necessary media width of the test print.

The necessary media width is 50.8 mm (2") for [Small].

Label Length

Set the length of one piece of the media used for the test print.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	400 to 1600 dots	400 to 1600 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	600 to 2400 dots	600 to 2400 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	1200 to 4800 dots	-

Pitch

Set the print position in the vertical direction.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-90 to 0 to 90 dots	-

When you decrease the setting value, the print position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the print position moves opposite the feed direction (toward the end part of the media).

Offset

Set the stop position of the media.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-90 to 0 to 90 dots	-

When you decrease the setting value, the stop position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the stop position moves opposite the feed direction (toward the end part of the media).

Darkness Adjust


Fine tune the print darkness of the test print.

0 is the lightest and 99 is the darkest.



- The value of [Label Length], [Pitch], [Offset] and [Darkness Adjust] set in the [Configure List] menu will be reflected to the same item settings in the [Factory] menu, [Configure QR] menu, [Paper Sensor] menu and [Head Check] menu.

[Configure QR]

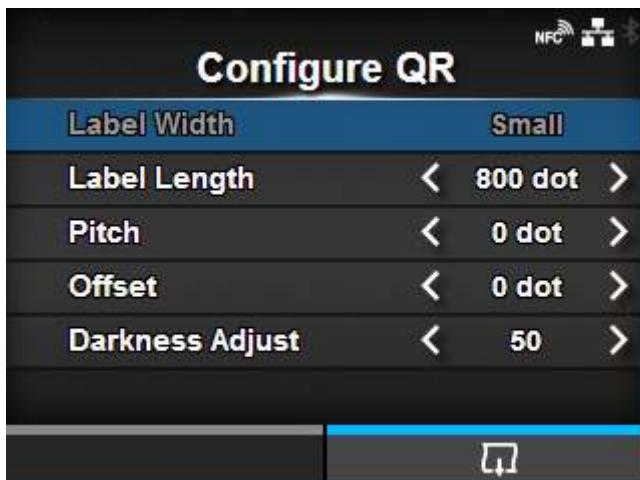

Print the product's settings information as a QR code.

- Check and set the items as listed on the [Configure QR] menu.
- Press the button to start the test print. Press the button again to pause the print.

To stop the test print, first pause the print and then press the button.

The setting items are as follows:

Label Width

Shows the necessary media width of the test print.

The necessary media width is 50.8 mm (2") for [Small].

Label Length

Set the length of one piece of the media used for the test print.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi	400 to 1600 dots	400 to 1600 dots

Resolution	CL4NX	CL6NX
(1 dot = 0.125 mm (0.0049"))		
305 dpi (1 dot = 0.083 mm (0.0033"))	600 to 2400 dots	600 to 2400 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	1200 to 4800 dots	-

Pitch

Set the print position in the vertical direction.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-90 to 0 to 90 dots	-

When you decrease the setting value, the print position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the print position moves opposite the feed direction (toward the end part of the media).

Offset

Set the stop position of the media.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi	-45 to 0 to 45 dots	-45 to 0 to 45 dots

Resolution	CL4NX	CL6NX
(1 dot = 0.083 mm (0.0033"))		
609 dpi (1 dot = 0.042 mm (0.0017")))	-90 to 0 to 90 dots	-

When you decrease the setting value, the stop position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the stop position moves opposite the feed direction (toward the end part of the media).

Darkness Adjust


Fine tune the print darkness of the test print.

0 is the lightest and 99 is the darkest.



- The value of [Label Length], [Pitch], [Offset] and [Darkness Adjust] set in the [Configure QR] menu will be reflected to the same item settings in the [Factory] menu, [Configure List] menu, [Paper Sensor] menu and [Head Check] menu.

[Paper Sensor]

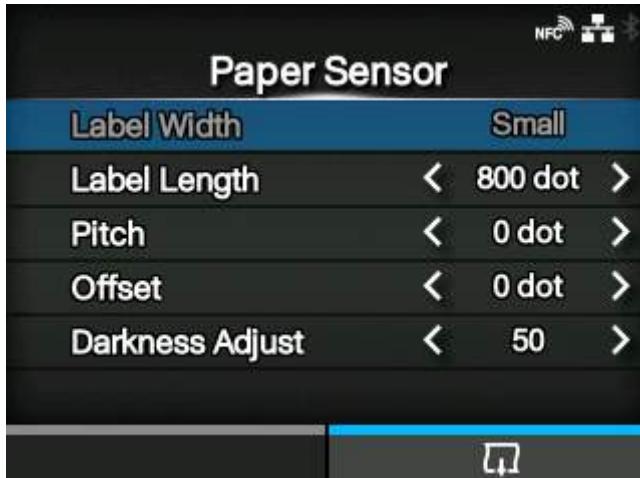

Print the detection result of the media sensor level.

- Check and set the items as listed on the [Paper Sensor] menu.
- Press the button to start the test print. Press the button again to pause the print.

To stop the test print, first pause the print and then press the button.

The setting items are as follows:

Label Width

Shows the necessary media width of the test print.

The necessary media width is 50.8 mm (2") for [Small].

Label Length

Set the length of one piece of the media used for the test print.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	400 to 1600 dots	400 to 1600 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	600 to 2400 dots	600 to 2400 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	1200 to 4800 dots	-

Pitch

Set the print position in the vertical direction.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-90 to 0 to 90 dots	-

When you decrease the setting value, the print position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the print position moves opposite the feed direction (toward the end part of the media).

Offset

Set the stop position of the media.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	-90 to 0 to 90 dots	-

When you decrease the setting value, the stop position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the stop position moves opposite the feed direction (toward the end part of the media).

Darkness Adjust

Fine tune the print darkness of the test print.

0 is the lightest and 99 is the darkest.



- The value of [Label Length], [Pitch], [Offset] and [Darkness Adjust] set in the [Paper Sensor] menu will be reflected to the same item settings in the [Factory] menu, [Configure List] menu, [Configure QR] menu and [Head Check] menu.

[\[Head Check\]](#)



Perform the head check print.

1. Check and set the items as listed on the [Head Check] menu.
2. Press the  button to start the head check print. Press the  button again to pause the print.

To stop the head check print, first pause the print and then press the  button.

The setting items are as follows:

Label Width

Set the media width used for the head check print.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX	CL6NX
		If [Head Base Position] is [Standard]	If [Head Base Position] is [Left-justify]
203 dpi (1 dot = 0.125 mm (0.0049"))	320 to 832 dots	320 to 1216 dots	320 to 1340 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	480 to 1248 dots	480 to 1984 dots	480 to 2010 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	960 to 2496 dots	-	-

Label Length

Set the length of one piece of the media used for the head check print.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	40 to 240 dots	40 to 240 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	60 to 360 dots	60 to 360 dots
609 dpi	120 to 720 dots	-

Resolution	CL4NX	CL6NX
(1 dot = 0.042 mm (0.0017""))		

Pitch

Set the print position in the vertical direction.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049""))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033""))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi (1 dot = 0.042 mm (0.0017""))	-90 to 0 to 90 dots	-

When you decrease the setting value, the print position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the print position moves opposite the feed direction (toward the end part of the media).

Offset

Set the stop position of the media.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049""))	-30 to 0 to 30 dots	-30 to 0 to 30 dots
305 dpi (1 dot = 0.083 mm (0.0033""))	-45 to 0 to 45 dots	-45 to 0 to 45 dots
609 dpi	-90 to 0 to 90 dots	-

Resolution	CL4NX	CL6NX
(1 dot = 0.042 mm (0.0017"))		

When you decrease the setting value, the stop position moves in the feed direction (toward the front part of the media).

When you increase the setting value, the stop position moves opposite the feed direction (toward the end part of the media).

Darkness Adjust


Fine tune the print darkness of the head check print.

0 is the lightest and 99 is the darkest.



- The value of [Label Width], [Pitch], [Offset] and [Darkness Adjust] set in the [Head Check] menu will be reflected to the same item settings in the [Factory] menu, [Configure List] menu, [Configure QR] menu and [Paper Sensor] menu.

[HEX-Dump]

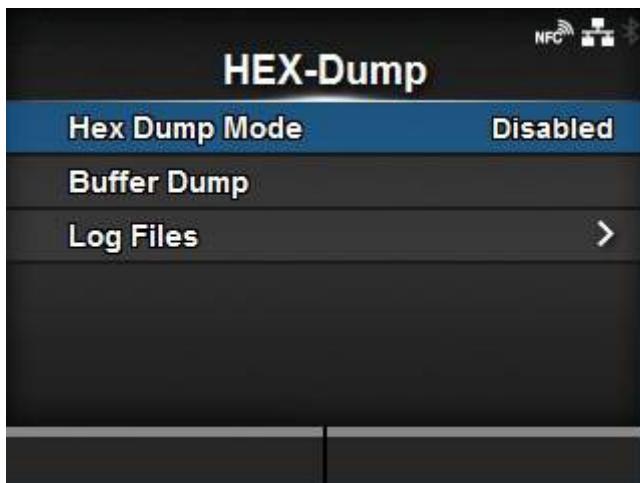

Save the hex dump print data or dump data from the receive buffer to the USB memory.

The setting items are as follows:

Hex Dump Mode

Enable or disable the Hex Dump mode.


Buffer Dump

Save the receive buffer data to the product.

Log Files

Manage the log files of the product.

[Hex Dump Mode]

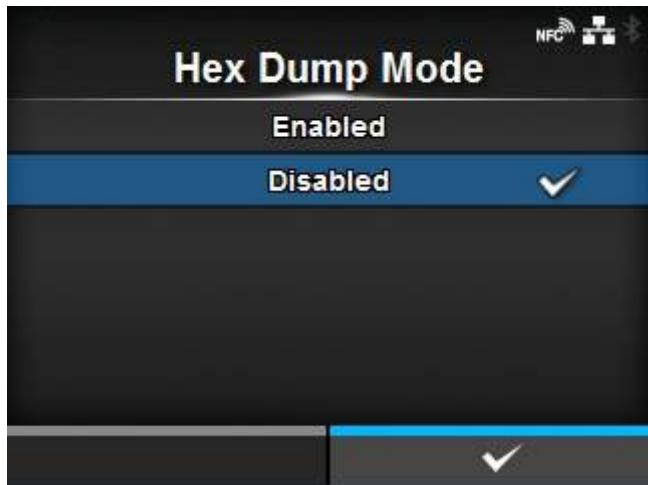


Enable or disable the Hex Dump mode.

If you set [Hex Dump Mode] to [Enabled], the product prints the received data and at the same time creates a file of the received data inside "hexdump/".

When you return the setting to [Disabled], you can check the file on the screen.



- If you set [Hex Dump Mode] to [Enabled], the icon on the Online/Offline screen changes.

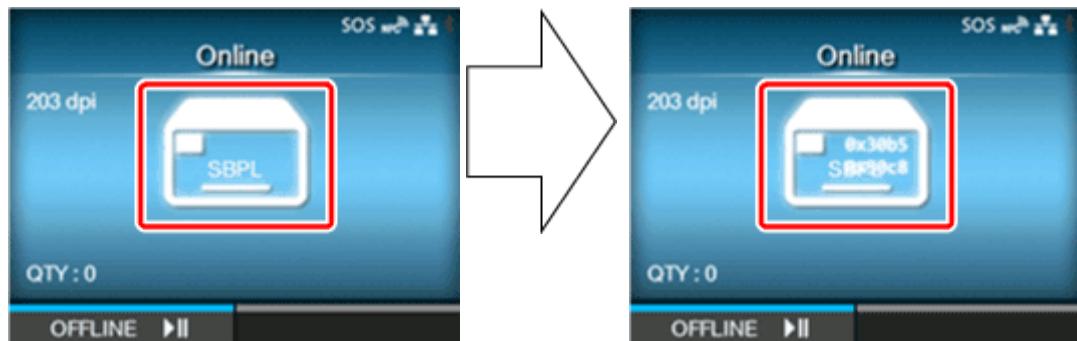

Hex Dump Mode: Disabled

Hex Dump Mode: Enabled

- You can save a maximum of 10 received data files for each type of interface. Depending on the file size, the number of files you can save will be less than 10.
- The details of the files created in "hexdump/" in the product are as follows:

BT00xx.bin

Received data through Bluetooth.

LAN00xx.bin

Received data through LAN.

LPT00xx.bin

Received data through IEEE1284.

NFC00xx.bin

Received data through NFC.

PIPE00xx.bin

Received data through pipe.

SCI00xx.bin

Received data through RS-232C.


USB00xx.bin

Received data through USB.

WIFI00xx.bin

Received data through wireless LAN.

[Buffer Dump]

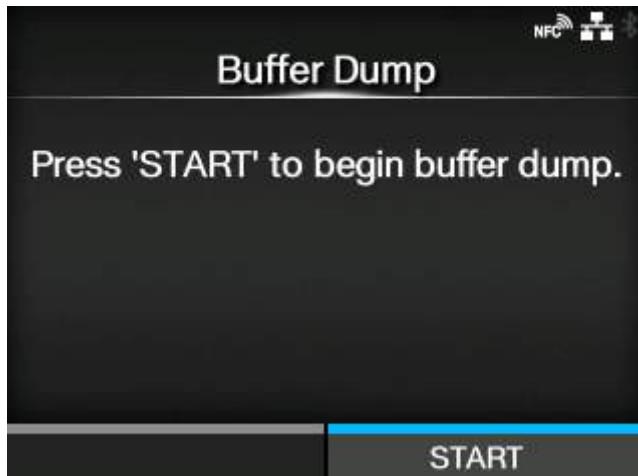

Save the receive buffer data to the product.

Available if you have set to [Disabled] in the [Hex Dump Mode] menu.

Press the [START] button () on the startup screen to save the data to the product.

Save the receive buffer data to "buff/" in the product.



- The data files of the receive buffer are created for each type of interface.
- The details of the files created in "buff/" in the product are as follows:

BT0001.bin

The contents of the receive buffer for Bluetooth.

LAN0001.bin

The contents of the receive buffer for LAN.

LPT0001.bin

The contents of the receive buffer for IEEE1284.

NFC0001.bin

The contents of the receive buffer for NFC.

PIPE0001.bin

The contents of the receive buffer for pipe.

SCI0001.bin

The contents of the receive buffer for RS-232C.


USB0001.bin

The contents of the receive buffer for USB.

WIFI0001.bin

The contents of the receive buffer for wireless LAN.

- If you perform the [Buffer Dump] again, the existing file will be overwritten.

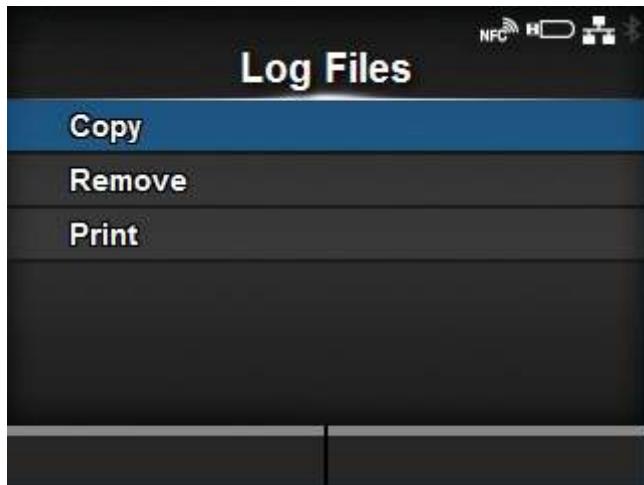[\[Log Files\]](#)

The setting items are as follows:

[Copy](#)

Copy the log files of the product to the USB memory.


- Available only if you have installed the USB memory.

[Remove](#)

Delete the log files of the product.

[Print](#)

Print a hex dump of the log files of the product.

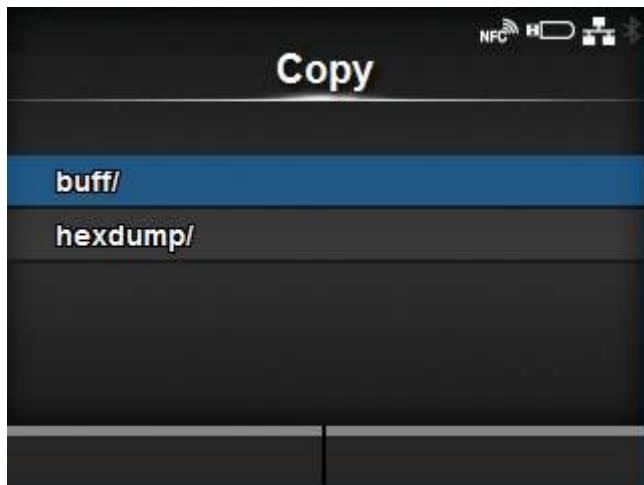[\[Copy\]](#)

Copy the log files of the product to the USB memory.


Available only if you have installed the USB memory.



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

The procedure to copy the log files is as follows:

1. Select the file type to copy and press the button.
 - **buff/**
The buffer data saved when you perform the [Buffer Dump].
 - **hexdump/**
The received data created through [Hex Dump Mode].
2. Select the file to copy and press the button. A check mark appears on the right side of the file name.

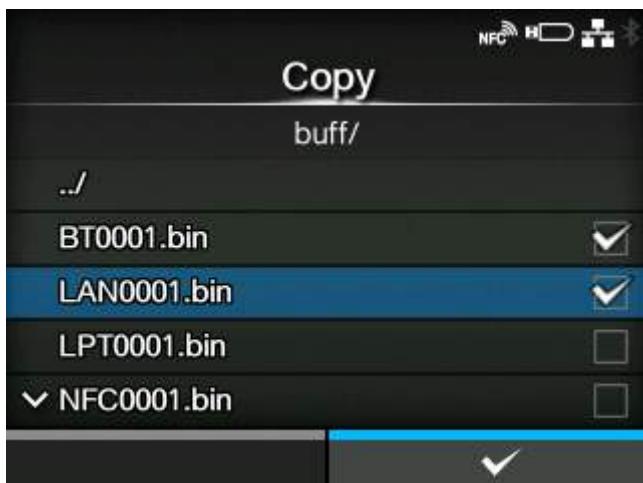

3. After you select the file, press the button to copy the selected file to the USB memory.




- When [Hex Dump Mode] is set to [Enabled], it may take some time before the files appear.

[\[Remove\]](#)

Delete the log files of the product.

The procedure to delete the log files is as follows:

1. Select the file type to delete and press the button.
 - **buff/**
The buffer data saved when you perform the [Buffer Dump].
 - **hexdump/**
The received data created through [Hex Dump Mode].
2. Select the file to delete and press the button. A check mark appears on the right side of the file name.

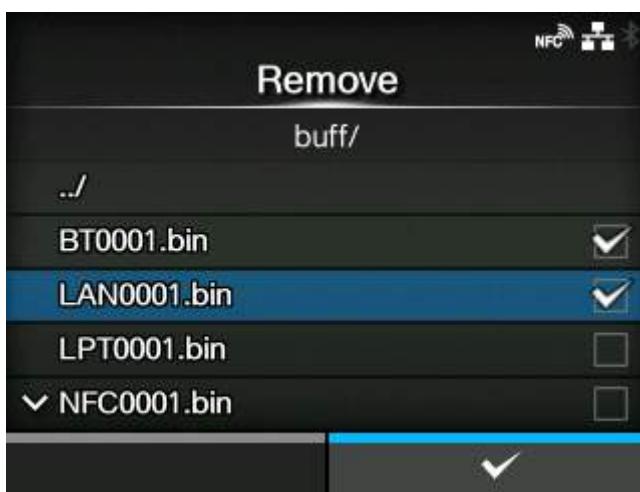


3. After you select the file, press the button to delete the selected file.



- When [Hex Dump Mode] is set to [Enabled], it may take some time before the files appear.

[Print]

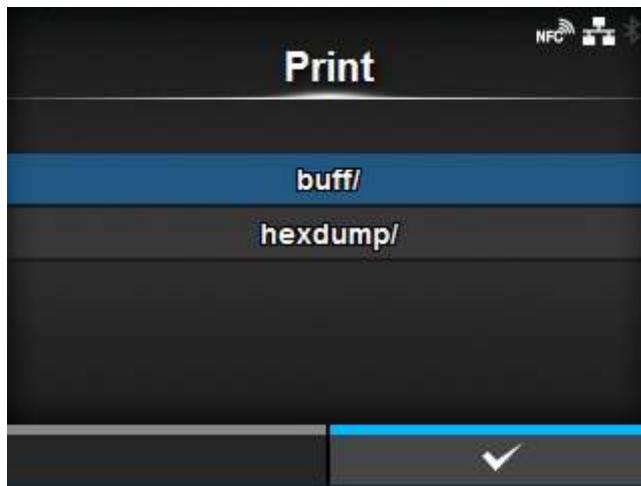

Print a hex dump of the log files of the product.

The procedure to print the log files is as follows:


1. Select the file type to print and press the button.
 - **buff/**
The buffer data saved when you perform the [Buffer Dump].
 - **hexdump/**
The received data created through [Hex Dump Mode].
2. Select the file to print and press the button or button to perform the dump print.



- Printing the contents of the file may use a lot of media.




- When [Hex Dump Mode] is set to [Enabled], it may take some time before the files appear.

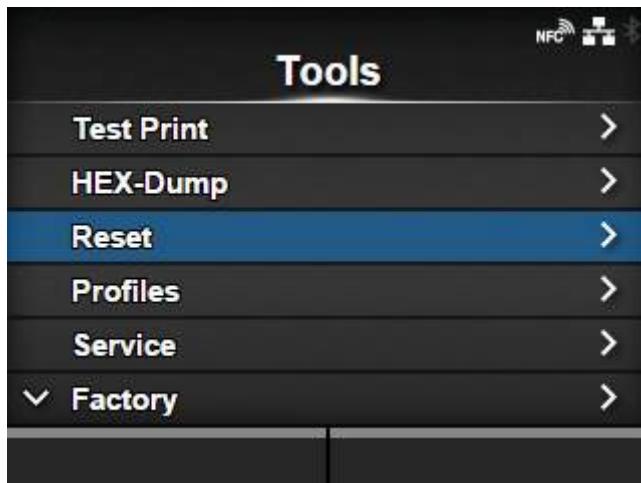[\[Reset\]](#)

Initialize the setting values and data saved on the product.

Press button to show the [Select] menu.

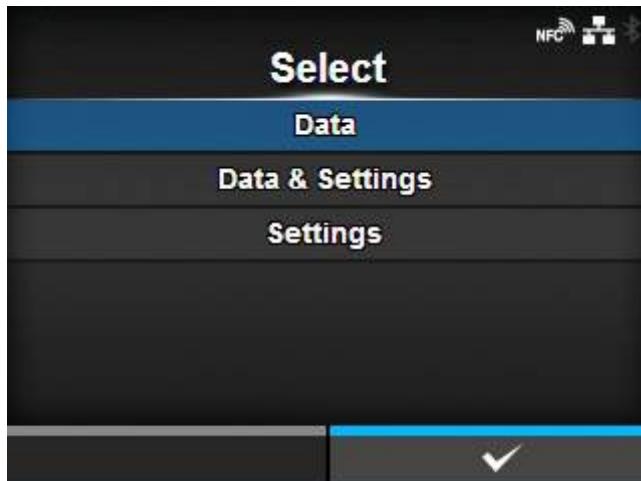[\[Select\]](#)

Select the items to be initialized.

The items are as follows:

[Data](#)

Initialize the data saved on the product.


[Data & Settings](#)

Initialize the data and setting values on the product.

[Settings](#)

Initialize the setting values on the product.

[Data]

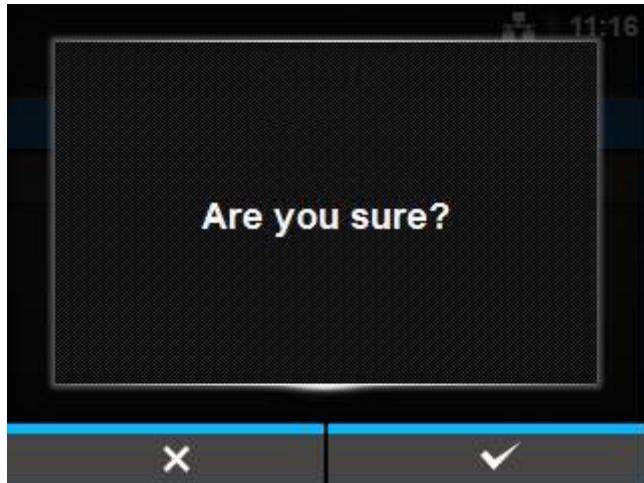

Initialize the data saved on the product.

The data to be initialized are the fonts and graphics registered in the product.

When you select [Data], the confirmation screen appears.


Press the button to cancel or button to perform the initialization.

The product will reboot after the initialization.



- Normally, it is not necessary to perform the initialization. Doing so could change the print conditions.

[Data & Settings]

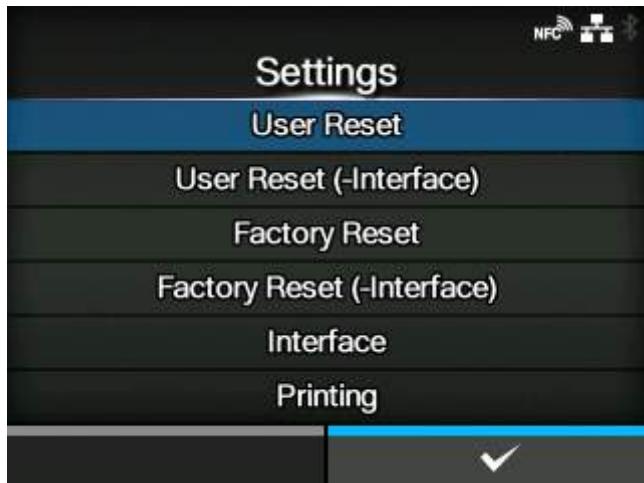

Initialize the data and setting values on the product.

Select the setting items to be initialized.

The options are as follows:

User Reset

Initialize the data and setting values.

User Reset (-Interface)

Initialize the data and setting values that are not included in the [Interface] menu.

Factory Reset

Initialize to the status after factory shipment.

Factory Reset (-Interface)

Initialize the items that are not included in the [Interface] menu to the status after factory shipment.


Interface

Initialize the data and setting values in the [Interface] menu.

Printing

Initialize the data and setting values in the [Printing] menu.

Select the item to be initialized using the  /  buttons and then press the  button to show the confirmation screen.

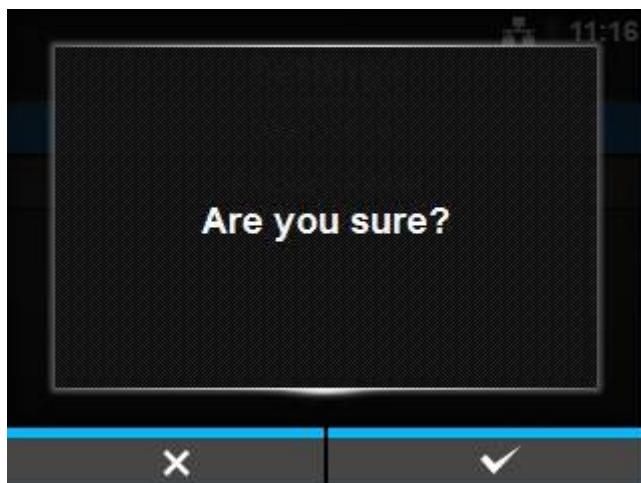


Press the  button to cancel or  button to perform the initialization.

The product will reboot after the initialization.



- The data to be initialized are the fonts and graphics registered in the product.

[Settings]

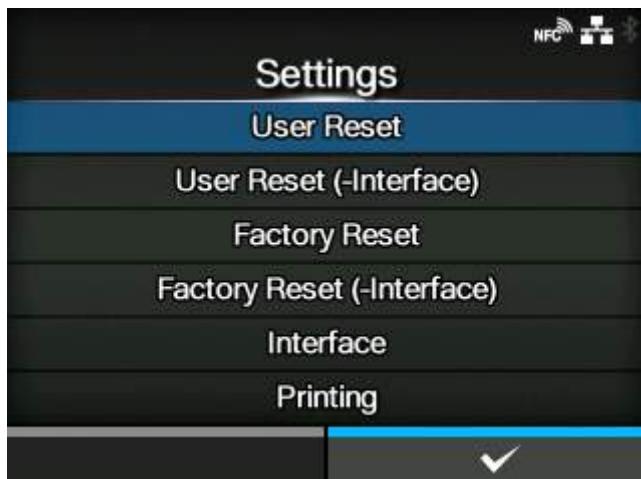

Select the setting items to be initialized.

The options are as follows:

User Reset

Initialize the setting values.

User Reset (-Interface)

Initialize the setting values that are not included in the [Interface] menu.

Factory Reset

Initialize to the status after factory shipment.

Factory Reset (-Interface)

Initialize the items that are not included in the [Interface] menu to the status after factory shipment.


Interface

Initialize the setting values in the [Interface] menu.

Printing

Initialize the setting values in the [Printing] menu.


Select the item to be initialized using the / buttons and then press the button to show the confirmation screen.

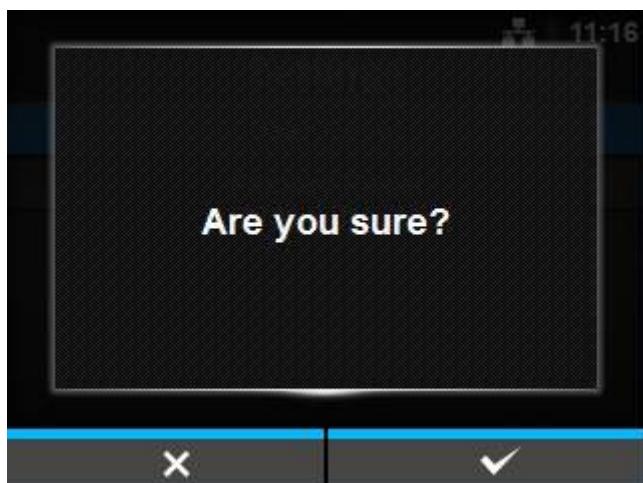

Press the button to cancel or button to perform the initialization.

After initialization, if a message prompting you to restart the product appears on the Online/Offline screen, reboot the product to apply the settings.

[Profiles]

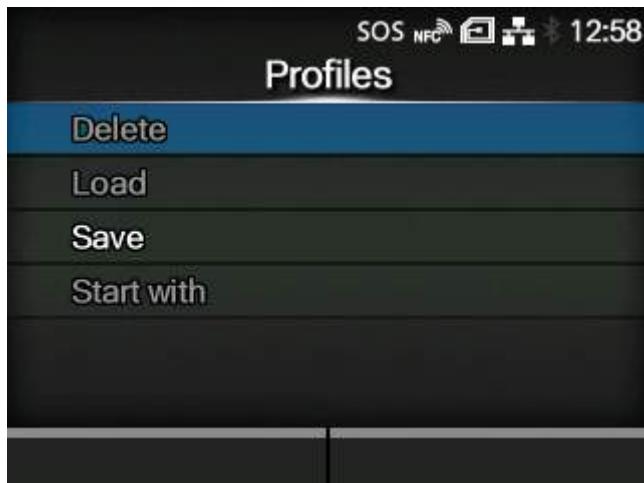

Maintain the customized profile of the product settings.

The name of the last loaded profile appears in the parentheses.

The setting items are as follows:

Delete

Delete the profile of the product.

- Not available if no profile is saved.

Load

Load the profile of the product.

- Not available if no profile is saved.

Save


Save the current product settings as a new profile.

Start with

Select the profile to be loaded at product startup.

- Not available if no profile is saved.

[Delete]

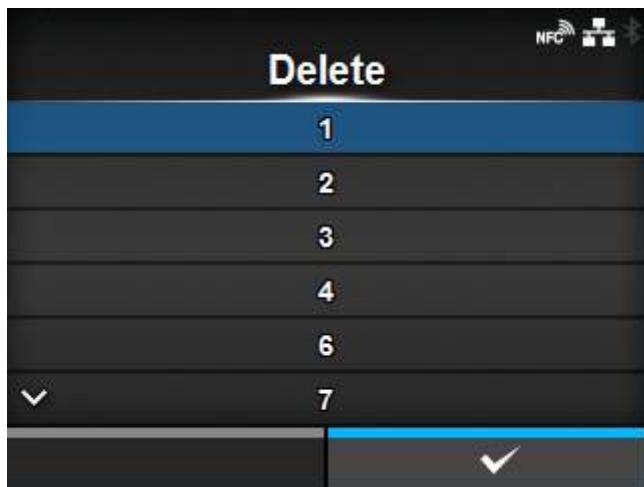


Delete the profile of the product.

The procedure to delete the profile is as follows:

1. Select the profile to be deleted using the / buttons.
2. Press the button or press the button to confirm.

The profile name is deleted from the list.

[Load]

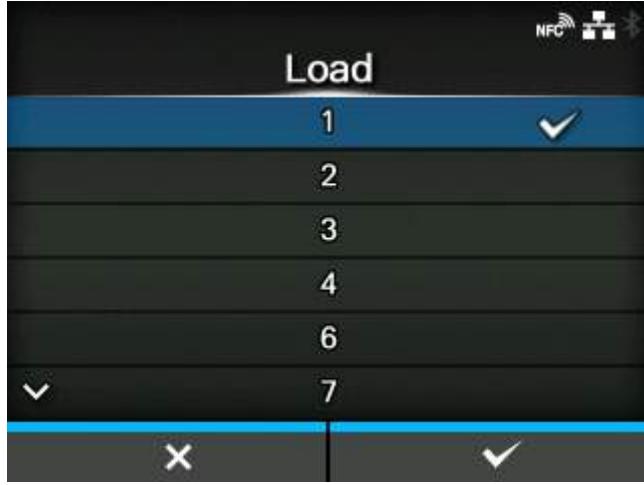


Load the profile of the product.

The procedure to load the profile is as follows:

1. Select the profile to be loaded using the / buttons.
2. Press the button or press the button to confirm.

A check mark appears on the right side of the loaded profile name. And the name of the loaded profile appears on the [Profiles] menu in the parentheses.


[Save]

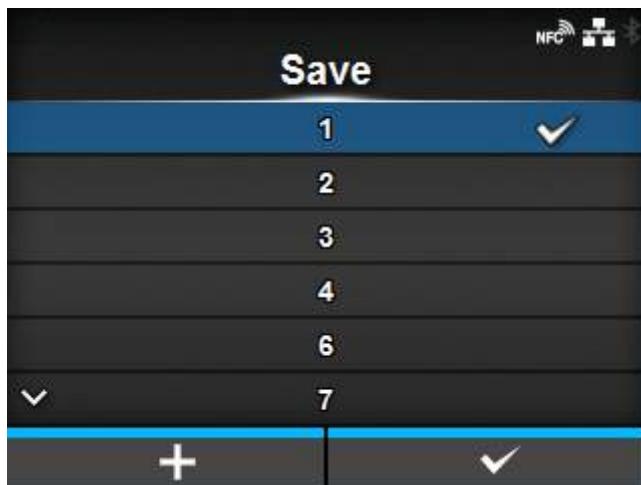

Save the current product settings as a new profile.

The screen shows a list of the profiles saved in the product. If no profile is saved, the screen shows an empty list.

To save the current product settings as a new profile, press the button and enter the name of the profile.

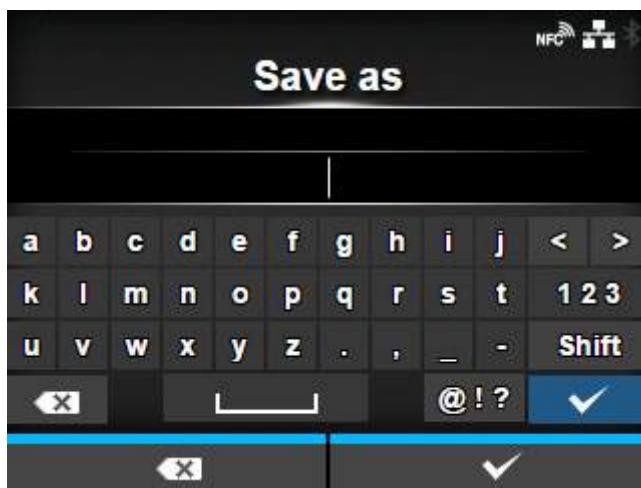


You can enter a maximum of 32 characters. You can use alphabets (capital and small letters), numbers and symbols.

Press the button to confirm.

The new profile name appears on the list and is loaded.

[Start with]

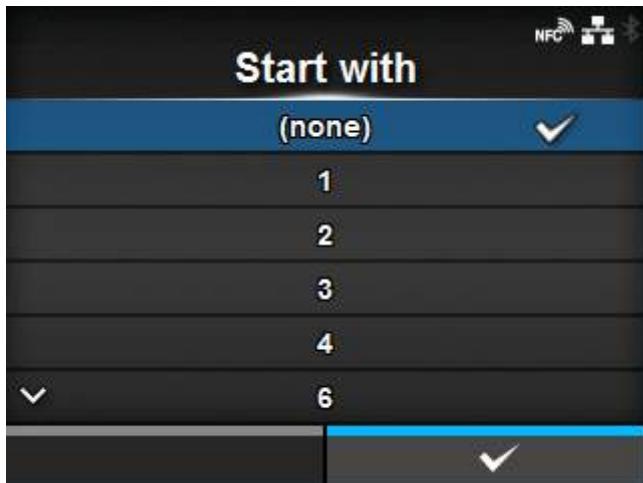


Select the profile to be loaded at product startup.

The procedure to load the profile at product startup is as follows:

1. Select the profile to be loaded at product startup using the / buttons.
2. Press the button or the button to confirm.

[Certificates]

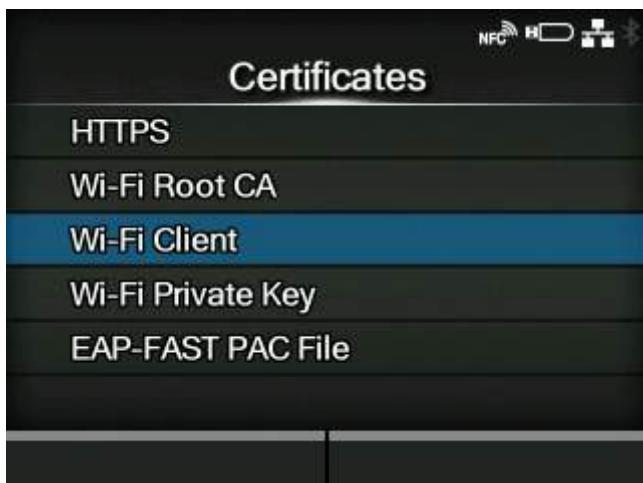

Install certificates used for Wi-Fi authentication and for HTTPS.

Available only if you have installed the USB memory.



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

The setting items are as follows:

HTTPS

Installs the HTTPS certificates from the USB memory.

Wi-Fi Root CA

Installs the Wi-Fi Root CA certificates from the USB memory.

Wi-Fi Client

Installs the Wi-Fi client certificates from the USB memory.

Wi-Fi Private Key


Installs the Wi-Fi private key from the USB memory.

EAP-FAST PAC File


Installs the EAP-FAST PAC file from the USB memory.

The procedure to install the certificates and PAC files is as follows:

1. Save the certificate files to the USB thumb drive memory's root folder.
Acceptable file extensions are as follows:
 - .pem, .crt, .cer, .der for Root CA and client certificate in PEM or DER format
 - .pfx and .p12 for client certificates in PKCS #12 format
 - .prv and .key for private keys in PEM/PKCS#8 format
 - .pac for PAC files
2. Insert the USB memory into the USB connector (Type A).
3. Go to the [Settings] > [Tools] > [Certificates] menu.
4. Select the certificate you want to install. Refer to the item description above.
5. Select the certificate file from the list.

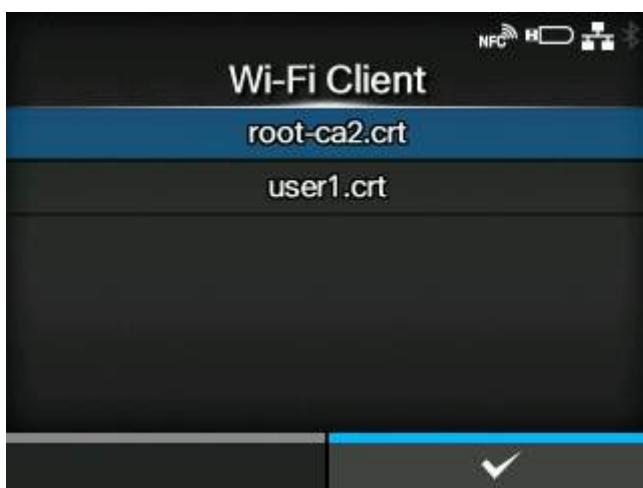

[Barcode Checker]

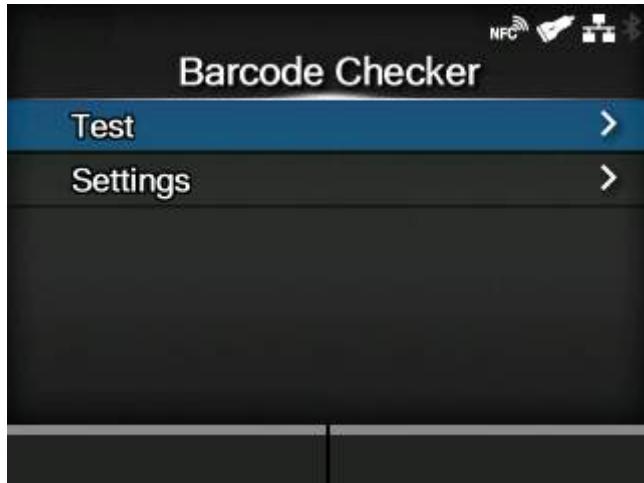

Set the barcode check function.

By connecting a barcode checker to the product, you can check the barcodes after printing.

The setting items are as follows:

Test

Set up the barcode checker.

- Available only if you have connected the barcode checker.


Settings

Set the barcode check function.



- This function cannot be used in the following conditions:
 - When the print mode is tear-off mode
 - When you are using CL4NX RFID models
 - When the product is in AEP mode
- Use the optional barcode checker stand kit to mount the barcode checker to the product. For details, refer to the Barcode Checker Stand Kit Installation Manual that came with the barcode checker stand kit.

[Test]

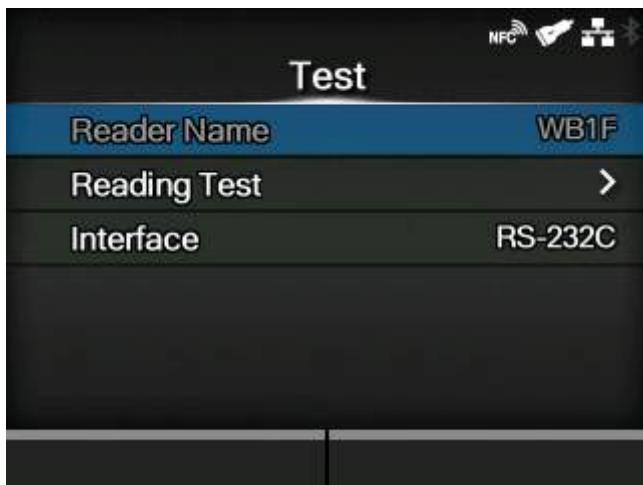

Set up the barcode checker.

Available only if you have connected the barcode checker.

The setting items are as follows:

Reader Name

Shows the barcode checker connected to the product.


Reading Test

Perform a test read with the connected barcode checker.

Interface

Set the RS-232C interface usage.

[Reading Test]

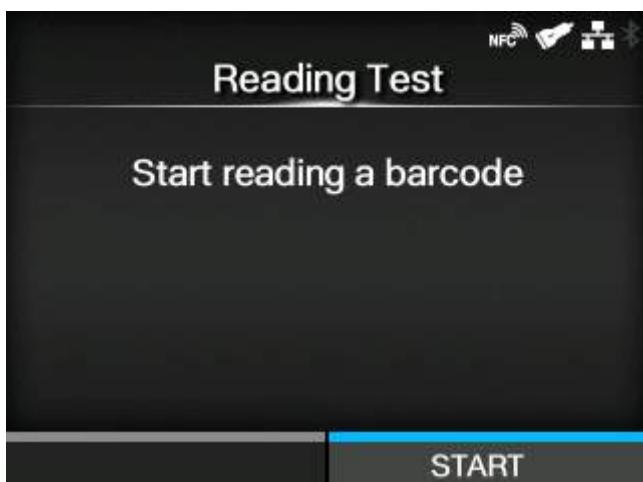


Perform a test read with the connected barcode checker.

Available only if you have connected the barcode checker.


Set a label with barcodes within the scanning range of the barcode checker, and then press the  button to start reading.

If reading is successful, the code type and read data are displayed. The data is displayed only up to 23 bytes from the beginning.

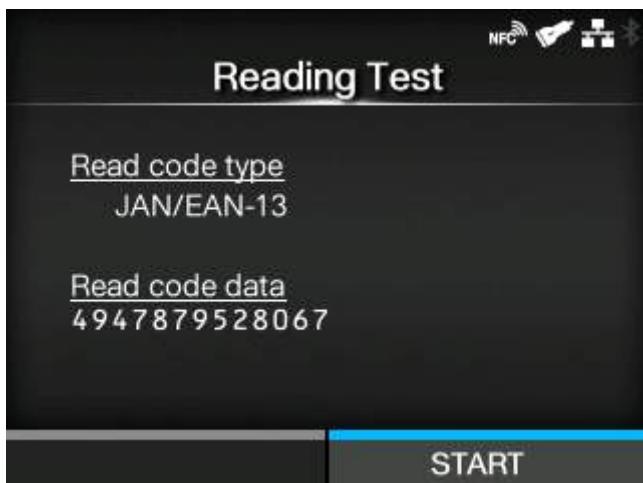

If the reading is unsuccessful, or if the displayed read result is not correct, adjust the position of the barcode checker by operating the barcode checker stand. For details on how to use the barcode checker stand, refer to the Barcode Checker Stand Kit Installation Manual that came with the barcode checker stand kit.

[Interface]

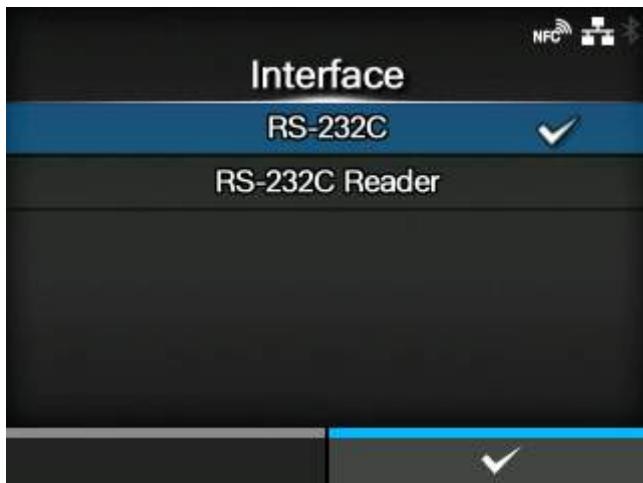

Set the RS-232C interface usage.

The options are as follows:

RS-232C

Use the RS-232C interface for communicating with computers.

RS-232C Reader

Select this when you connect the KEYENCE barcode checkers for the barcode check function.



- A message prompting you to restart the product will appear on the Online/Offline screen if you have made any changes. In such a case, reboot the product to apply the settings.

[Settings]



Set the barcode check function.

The setting items are as follows:

Mode

Select the check mode or disable the barcode check function.

Set No. of Barcodes

Select the method to specify the number of barcodes per label.

- Appears only if you have selected [Readable] in the [Mode] menu.

Barcodes per Label

Specify the number of barcodes per label when you include barcodes which are not created by barcode commands.

- Appears only if you have selected [Readable] in the [Mode] menu. Available only if you have selected [Settings] in the [Set No. of Barcodes] menu.

Start Position

Adjust the position at which the barcode check starts (position of the barcode checker at which reading starts).

VOID Print

Set whether to print error marks on the media when a barcode reading error or barcode comparison error occurs.

Retry Count

Set how many times the product will try to print and check the same barcode after VOID printing when a barcode reading error or barcode comparison error occurs.

- Appears only if you have selected [Enabled] in the [VOID Print] menu.


Host Notification

Set whether to return the barcode check results to the host from which the print data is sent.

Logs

Manage the barcode check log data saved in the product.

[Mode]

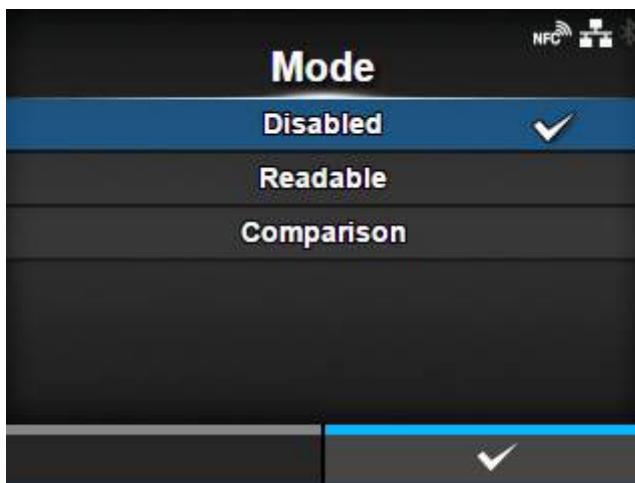

Select the check mode or disable the barcode check function.

The options are as follows:

Disabled

Disable the barcode check function.

Readable

Check if the printed barcodes are readable.

To include barcodes that are not created by barcode commands (such as graphic data or preprinted barcodes) as the target of the barcode readability check, select [Settings] in [Set No. of Barcodes], and specify the number of barcodes per label in [Barcodes per Label].

Comparison

Check if the read results of the printed barcodes match the barcode data in the print data. This mode is for barcodes created by barcode commands.

[Set No. of Barcodes]



Select the method to specify the number of barcodes per label.

Appears only if you have selected [Readable] in the [Mode] menu.

The options are as follows:

Commands

Set barcodes created by barcode commands as the target of the barcode readability check.

Settings

Include barcodes that are not created by barcode commands (such as graphic data or preprinted barcodes) as the target of the barcode readability check.

You need to specify the number of barcodes per label in [Barcodes per Label].

[Barcodes per Label]



Specify the number of barcodes per label when you include barcodes which are not created by barcode commands as the target of the barcode readability check.

Appears only if you have selected [Readable] in the [Mode] menu. Available only if you have selected [Settings] in the [Set No. of Barcodes] menu.

The setting range is from 1 to 10.



- When excluding first barcode(s) from the check target by setting [Start Position], specify the number of barcodes without the excluded barcodes.

[Start Position]



Adjust the position at which the barcode check starts (position of the barcode checker at which reading starts).

The barcode checker starts reading each media after the specified length passes from the printing start position.


This setting can be used to exclude first barcode(s) from the check target when multiple barcodes are printed on each media.

The setting range varies depending on the print resolution of the product.

The setting range is as follows:


Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	10 to 20000 dots	10 to 20000 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	15 to 18000 dots	15 to 18000 dots
609 dpi (1 dot = 0.042 mm (0.0017"))	30 to 9600 dots	-

[VOID Print]

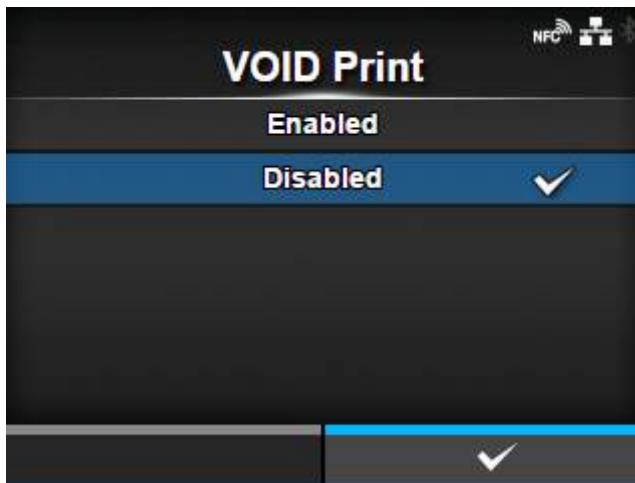

Set whether to print error marks on the media when a barcode reading error or barcode comparison error occurs.

6 x 6 mm (0.24" x 0.24") error marks are printed within the width of the print data image and in a length of up to 30 mm (1.18") from the trailing end of the label. The length varies depending on the image length of the print data and the operation mode.

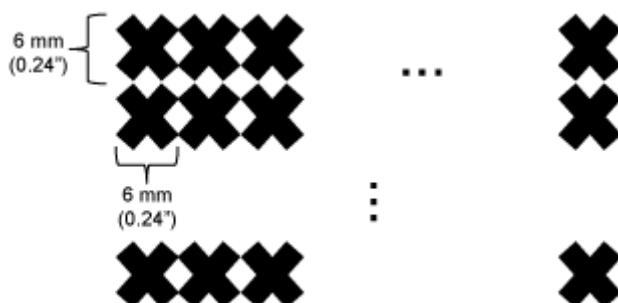

The options are as follows:

Enabled

If a reading error or comparison error occurs, the product prints error marks on the label without pausing.

After VOID printing, the product prints and checks the same label until it reaches the number of retries specified in [Retry Count]. If the error still occurs after the specified number of retries are done, the product pauses after VOID printing, and shows an error message on the display.


Disabled

If a reading error or comparison error occurs, the product pauses and shows an error message on the display.



- The VOID Print function is not supported in dispenser and linerless (CL4NX only) modes.
- The VOID Print function is not available when the length of the print data is less than 8 mm (0.31").
- The VOID printing length becomes 4 mm (0.16") shorter when the media sensor type is set to [Gap].
- The VOID printing length becomes 1 mm (0.04") shorter when the media sensor type is set to [I-Mark].
- The backfeed amount of VOID printing is 30.0 mm (1.18"). However, if the image length printed on the label to be checked is less than 30.0 mm (1.18"), the backfeed amount will be the same as the image length.
- When [VOID Print] is set to [Enabled], VOID printing is forcibly done if a comparison error occurs, even when no cutting is performed in cutter mode.

[Retry Count]

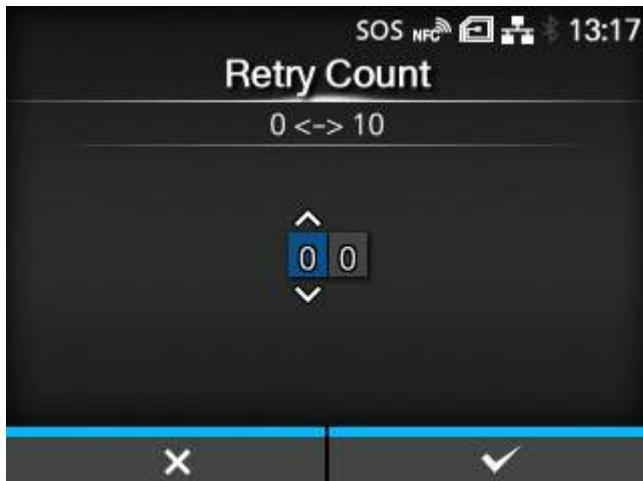

Set how many times the product will try to print and check the same barcode after VOID printing when a barcode reading error or barcode comparison error occurs.


Appears only if you have selected [Enabled] in the [VOID Print] menu.

The setting range is from 0 to 10.

As long as the error continues to occur, the label is reprinted up to the number of times specified in this setting.

For example, if you set it to 0, if the error occurs while checking the first label, the product pauses and shows an error message after VOID printing. If set to 5, if the error continues to occur until the 6th label, the product pauses after VOID printing for the 6th label, and shows an error message.

[Host Notification]

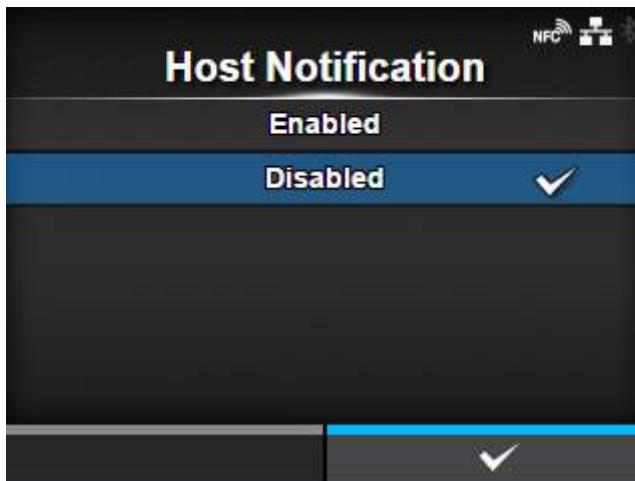

Set whether to return the barcode check results to the host from which the print data is sent.

The options are as follows:

Enabled


Return the barcode check result of each label to the host as follows:

- When the check is successful: <STX>BV, OK<ETX>
- When the check is unsuccessful: <STX>BV, NG<ETX>

Disabled

Do not return the barcode check results to the host.

[Logs]

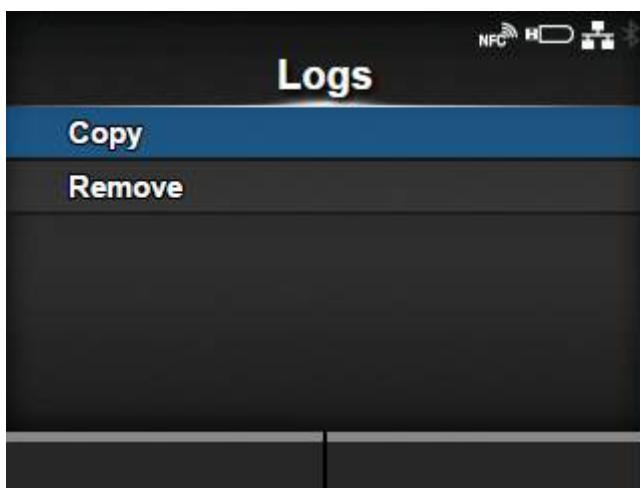

Manage the barcode check log data saved in the product.

Available only if there is barcode check log data in the product.

Note that new log data overwrites on older log data when the log file reaches its maximum size (1 MB).

The setting items are as follows:

Copy

Copy the barcode check log data to the USB memory.

- Available only if you have installed the USB memory.

Remove

Remove the barcode check log data.

Format and Contents of the Barcode Check Log Data

The barcode check log data is created in the following format:


YYYY/MM/DD hh:mm:ss (ZZZ) [TTTTTTT] READING[IR]:SRSR:drdr...<CR><LF>
[RRRRRRR] COMMAND[IC]:SCSC:dcdc...<CR><LF>

Format ID	Description	
YYYY	Year of the date when the barcode check was performed ¹	
MM	Month of the date when the barcode check was performed ¹	
DD	Day of the date when the barcode check was performed ¹	
hh	Hour of the time when the barcode check was performed ¹	
mm	Minute of the time when the barcode check was performed ¹	
ss	Second of the time when the barcode check was performed ¹	
ZZZ	Time zone ¹	
TTTTTTT	The total number of printed labels after the product is powered on. *When the total number of printed labels becomes greater than an 8-digit number, the output digit will increase.	
IR	The number of read data received after reaching the position at which the check starts. *When the check result is "IGNORED", this shows "00".	
SRSR	Size of read data (bytes)	
drdr...	Read data	
RRRRRRR	Check result	
	SUCCESS	<ul style="list-style-type: none">In readable mode, this means everything is correct.In comparison mode, this means that the read data and print data match.

Format ID	Description	
	FAILURE	<ul style="list-style-type: none"> In readable mode, this means that the barcode checker could not read the number of printed barcode data. In comparison mode, this means that the read data and print data do not match.
	IGNORED	This means that the data is read during a period other than from the start to the end of checking, while the product is active.
IC	The amount of print data as a check target *If the check result is "IGNORED", this becomes "--".	
SCSC	Size of print data (bytes) *If the check result is "IGNORED", this becomes "----".	
dcdc...	Print data *If the check result is "IGNORED", nothing is output.	

¹ If the optional RTC kit is not installed, the system time will be output.

[Copy]

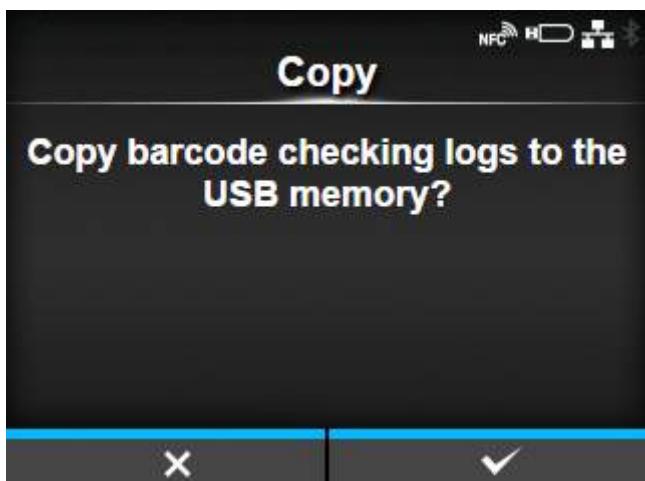

Copy the barcode check log data to the USB memory.


Available only if there is barcode check log data in the product and if you have installed the USB memory.



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

Press the  button to copy the log data to the USB memory.

[Remove]

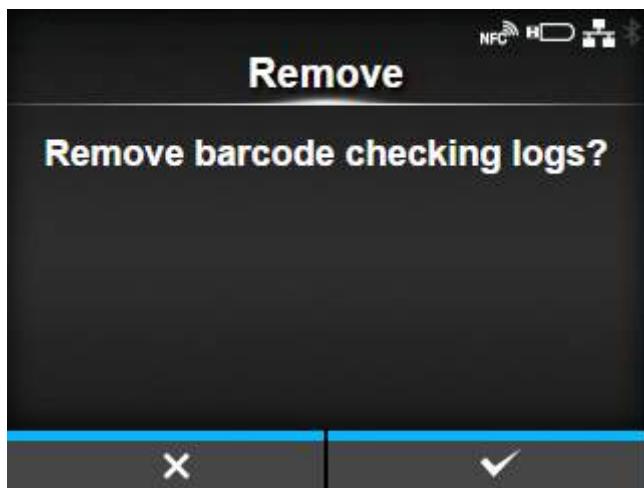


Delete the barcode check log file.

Available only if there is barcode check log data in the product.

Press the  button to delete the log data.

[Clone]

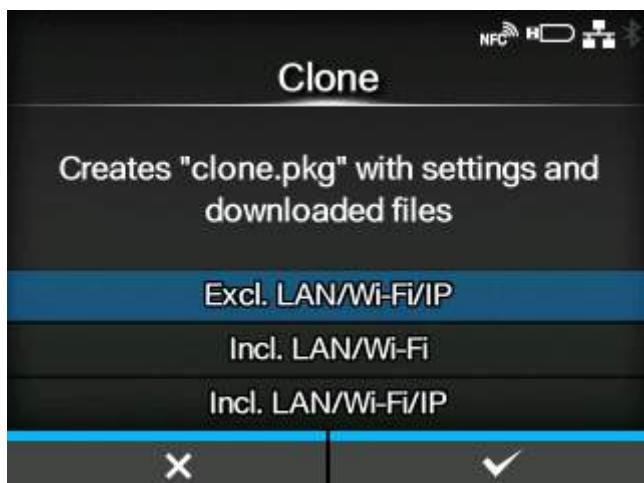

Copy the current product settings and the installed data to the USB memory.

Available only if you have installed the USB memory.



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

This function is useful to transfer the settings of a product you are replacing to continue using them in a new product, or if you are setting up multiple products with the same settings.

The options are as follows:

Excl. LAN/Wi-Fi/IP

Copy the product settings and data, excluding network information, to the USB memory. This is useful when you set up multiple products, that are already connected to a network, with the same settings.

Incl. LAN/Wi-Fi

Copy the product settings and data, including network information (excluding the IP address), to the USB memory. This is useful when you set up multiple products to be connected to the same network with the same settings.

Incl. LAN/Wi-Fi/IP

Copy the product settings and data, including network information (including the IP address), to the USB memory. This is useful when transferring the settings of a product you are replacing to continue using them in a new product.

[Support Info]

Save various information about the product, such as attached options, serial number, application versions and settings configuration, in a text file (.txt) to the USB memory.


Available only if you have installed the USB memory.



- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.


By selecting [Support Info] and pressing the button, the support information is saved to the USB memory.

After saving is complete, the saved location is displayed.

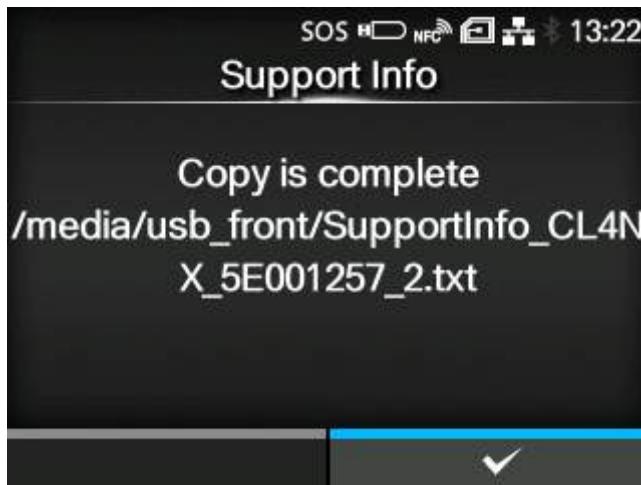

Press the  button to complete.

[Logging Function]

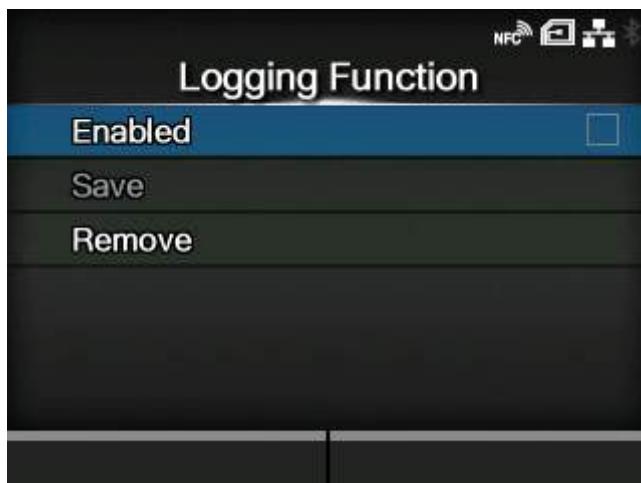

Save the log data.

The setting items are as follows:

Enabled

Enable or disable the logging function.


Save

Save the log data to the USB memory.

Remove

Delete the log data.

[Enabled]

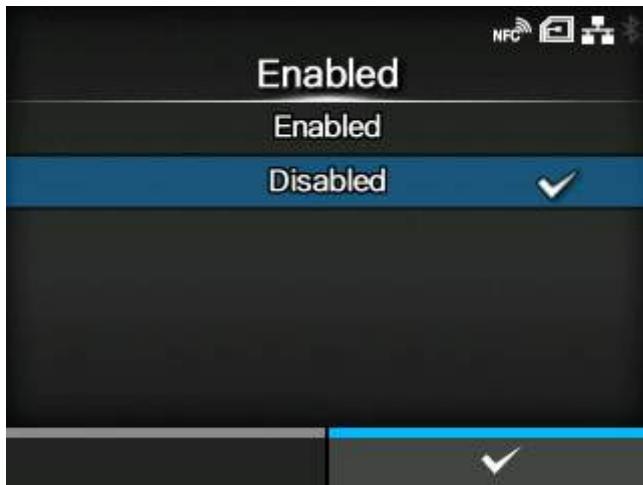

Enable or disable the logging function.

The options are as follows:

Enabled

Enable the logging function. When this function is enabled, the log data is saved when powering off the product.


Disabled

Disable the logging function.



- When this function is enabled, log data is saved when powering off, so it may take some time to power off the product. Wait until the product is powered off.
- While the log data is being saved, a red message that says "Log Saving" appears on the screen.
- The product stores log data for the last five times the product was powered off.
- The types of log data that are saved are as follows:
 - Key events
 - Analysis status
 - System logs and settings
 - Shared memory (including receive buffer)
 - Operational logs for the barcode scanner

[Save]

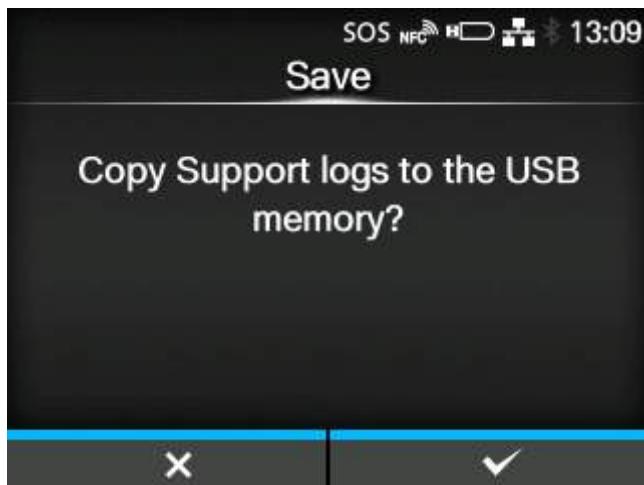

Save the log data to the USB memory.

Available only if there is log data in the product and if you have installed the USB memory.




- Be sure to perform a virus check on the USB memory before connecting it to the product. SATO Corporation cannot be held responsible for any product malfunctions caused by a virus spread via USB memory.

Press the  button to copy the log data to the USB memory.




- The saved log data is strictly for the use of SATO authorized service personnel.

[Remove]

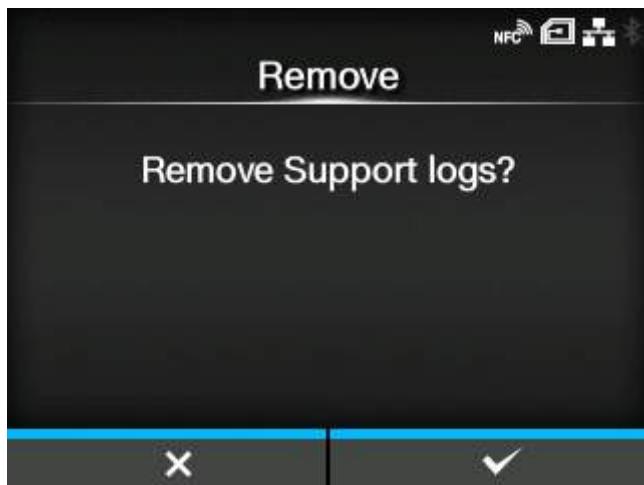

Press the  button to delete the log data.

[Startup Guide]

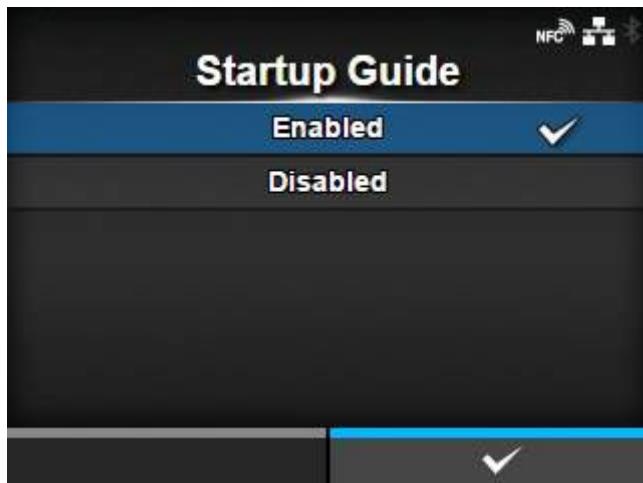

The startup guide is a function to help you through the initial product settings (such as setting date and time, and loading the ribbon and media).

Enable or disable the startup guide.

The options are as follows:

Enabled

Enable the startup guide.


Disabled

Disable the startup guide.

If you have selected [Enabled], the startup guide appears when you power on the product.



[Information] Menu

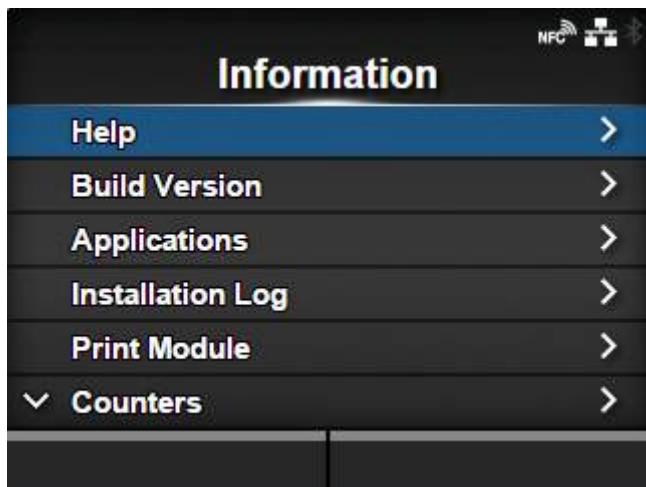

The following settings are available in the [Information] menu:

[Help](#)

Shows the guidance video.

[Build Version](#)

Shows the firmware version.

[Applications](#)

Shows various application versions.

[Installation Log](#)

Shows the installation log data.

- Appears only if there is log data in the product.

[Print Module](#)

Shows the print module information.

[Counters](#)

Shows the counter information.

[IPv4 Address](#)

Shows the IPv4 address.

[IPv6 Address](#)

Shows the IPv6 address.

- Does not appear when Wi-Fi Direct is active.

[LAN MAC](#)

Shows the MAC address of the LAN.

- Appears only if the LAN interface is selected.

Wi-Fi MAC

Shows the MAC address of the wireless LAN.

- Appears only if the optional wireless LAN is installed and the Wi-Fi interface is selected.

Wi-Fi Region

Shows the region information of the wireless LAN.

- Appears only if the optional wireless LAN is installed and the Wi-Fi interface is selected.

Wi-Fi Status

Shows the status of the wireless LAN.

- Appears only if the optional wireless LAN is installed and the Wi-Fi interface is selected.

Wi-Fi Direct

Shows the connection information of Wi-Fi Direct.


- Appears only if connected using Wi-Fi Direct.

Wi-Fi Versions

Shows the version of the wireless LAN.

- Appears only if the optional wireless LAN is installed and the Wi-Fi interface is selected.

[Help]

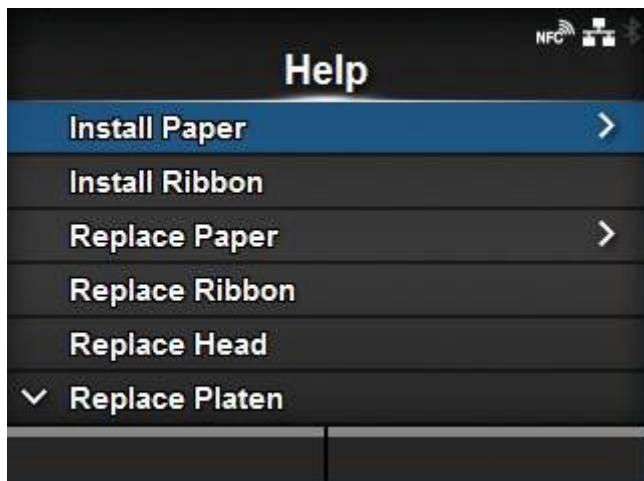

Shows the guidance video.

You can view the video for loading the media and ribbon, the cleaning method and replacement method of consumables.

The list of videos are as follows:

[Install Paper](#)

Shows the video for loading the media.

[Install Ribbon](#)

Shows the video for loading the ribbon.

[Replace Paper](#)

Shows the video for replacing the media.

[Replace Ribbon](#)

Shows the video for replacing the ribbon.

[Replace Head](#)

Shows the video for replacing the print head.

[Replace Platen](#)

Shows the video for replacing the platen roller.

[Cleaning](#)

Shows the video of the cleaning method.

[[\[Install Paper\]](#)]



Shows the video for loading the media.


The items are as follows:

[Roll](#)

Shows the video for loading the media roll.

[Fanfold](#)

Shows the video for loading the fan-fold media.

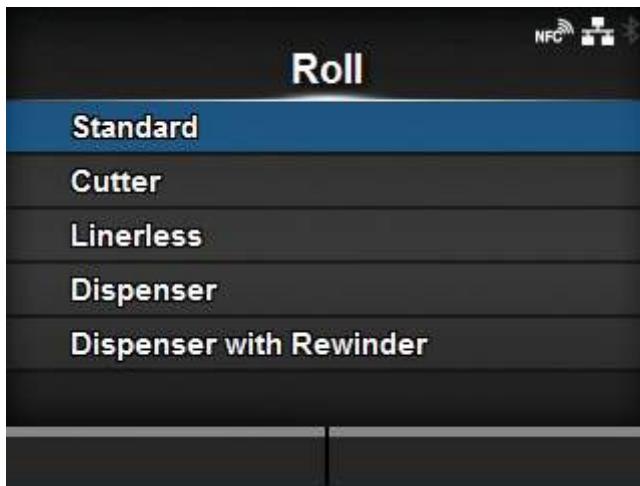[\[Roll\]](#)

Shows the video for loading the media roll.

The items are as follows:

Standard

Shows the video for loading the media roll to a standard product.

Cutter

Shows the video for loading the media roll to a product installed with a cutter.

Linerless

(CL4NX only)


Shows the video for loading the media roll to a product installed with a linerless cutter kit.

Dispenser

Shows the video for loading the media roll to a product installed with a dispenser.

Dispenser with Rewinder

Shows the video for loading the media roll to a product installed with a dispenser and liner rewinder.

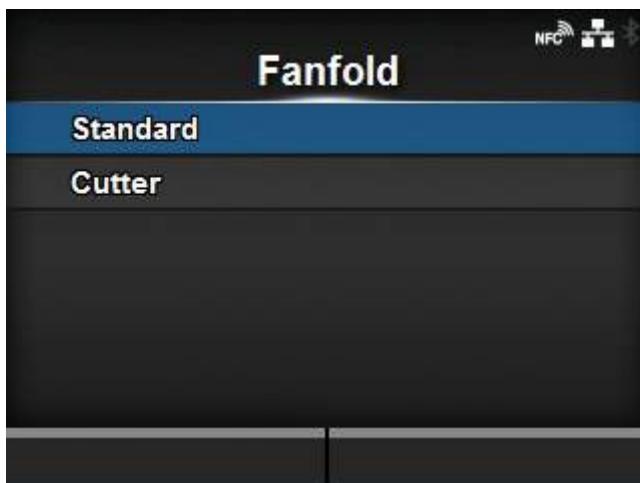[\[Fanfold\]](#)

Shows the video for loading the fan-fold media.

The items are as follows:


Standard

Shows the video for loading the fan-fold media to a standard product.

Cutter

Shows the video for loading the fan-fold media to a product installed with a cutter.

[Replace Paper]

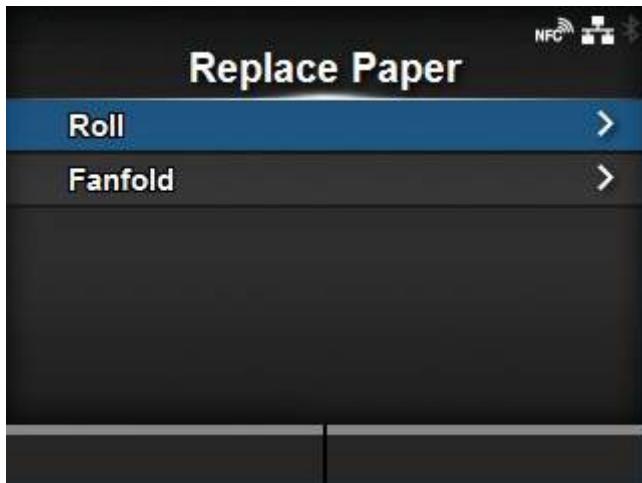

Shows the video for replacing the media.

The items are as follows:


Roll

Shows the video for replacing the media roll.

Fanfold

Shows the video for replacing the fan-fold media.

[Roll]

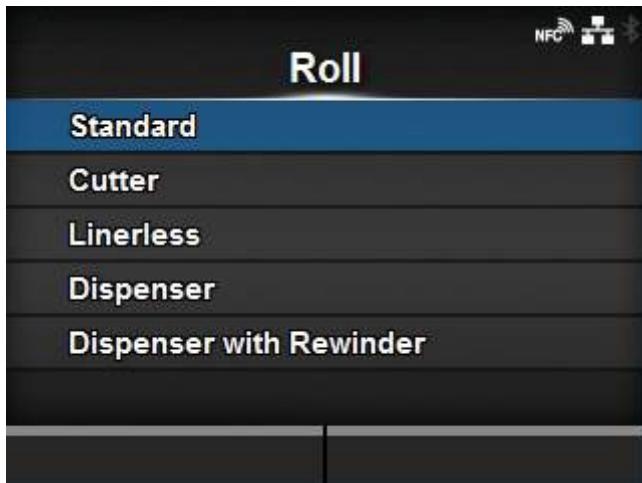

Shows the video for replacing the media roll.

The items are as follows:

Standard

Shows the video for replacing the media roll in a standard product.

Cutter

Shows the video for replacing the media roll in a product installed with a cutter.

Linerless

(CL4NX only)

Shows the video for replacing the media roll in a product installed with a linerless cutter kit.


Dispenser

Shows the video for replacing the media roll in a product installed with a dispenser.

Dispenser with Rewinder

Shows the video for replacing the media roll in a product installed with a dispenser and liner rewinder.

[\[Fanfold\]](#)

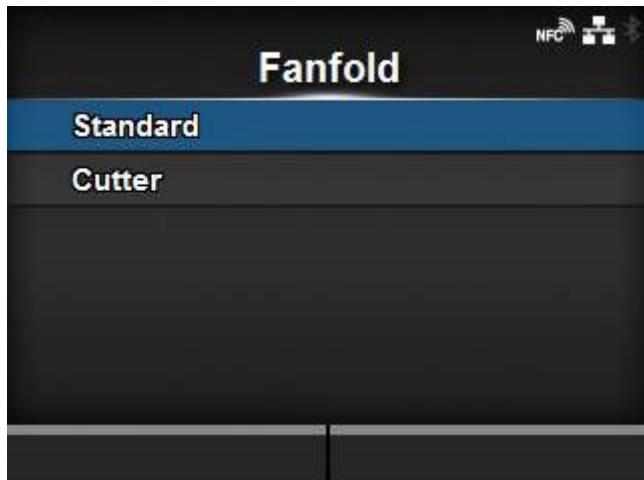

Shows the video for replacing the fan-fold media.

The items are as follows:


Standard

Shows the video for replacing the fan-fold media in a standard product.

Cutter

Shows the video for replacing the fan-fold media in a product installed with a cutter.

[Build Version]

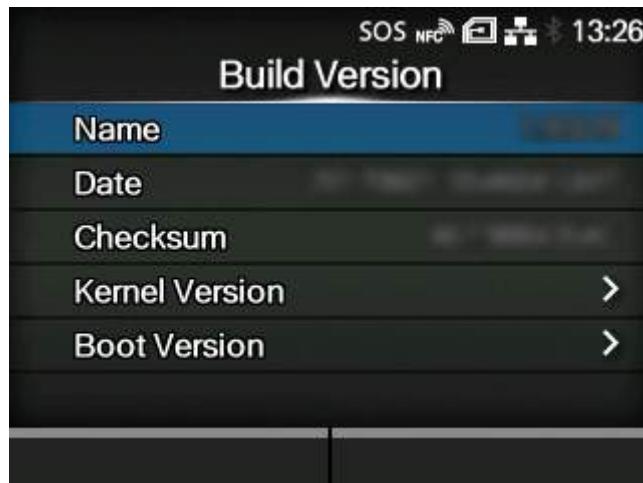

Shows the information and version of the product.

Name

Shows the name of the build version.

Date

Shows the build date.

Checksum

Shows the checksum of the build version.

Kernel Version

Shows the kernel version.

Boot Version


Shows the boot version.

[Kernel Version]



Shows the kernel version of the product.

[Boot Version]

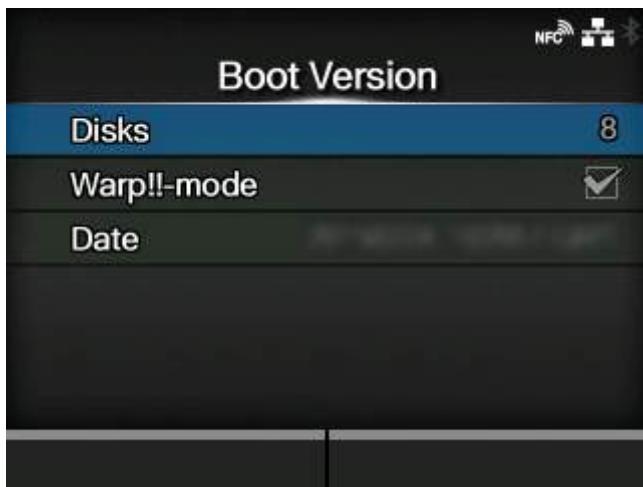

Shows the boot version of the product.

The items are as follows:

Disks

Shows the Disks.

Warp!!-mode

A checked box means enabled. An unchecked box means disabled.

Date


Shows the build date of the boot version.

[Applications]



Shows the versions of the applications installed in the product, such as printer languages.

[Installation Log]

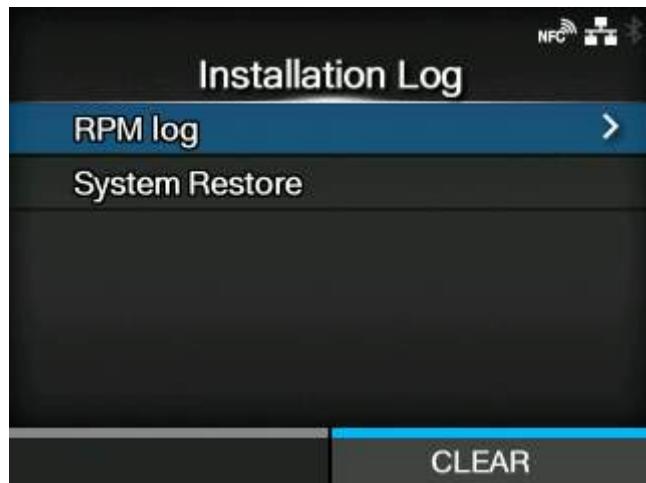

Show or clear the installation log data in the product.

The setting items are as follows:

RPM log

Shows the RPM log data.

System Restore

Shows the system restore log data.

Press the  button (CLEAR) to clear the selected log data.




- This screen does not appear if there is no log data in the product.

[RPM log]




Shows a list of RPM log files containing three sections: installed, updated and obsolete.

The RPM log file is created after installing a pkg-file containing rpm-files.

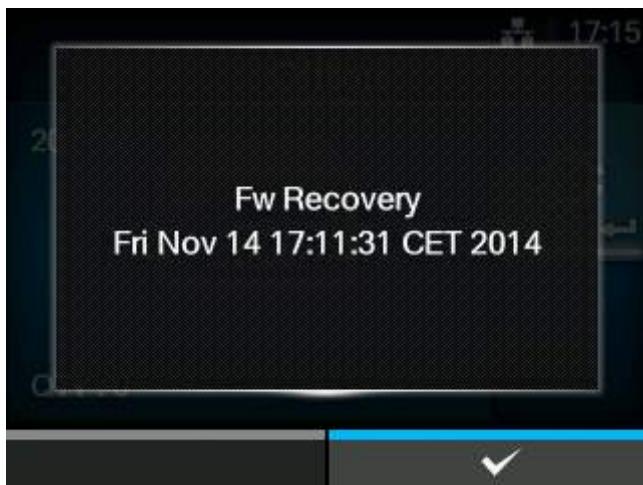[\[System Restore\]](#)

Shows the system restore log.

The system restore log file is created after installing a pkg-file that caused a state in which the product's operator panel cannot be operated.

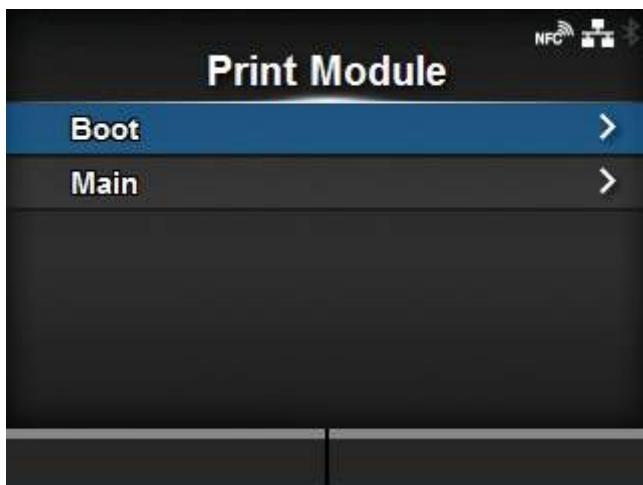[\[Print Module\]](#)

Shows information about the print module on the product.

The items are as follows:


[Boot](#)

Shows the Boot firmware version.

[Main](#)

Shows the Main firmware version.

[Boot]

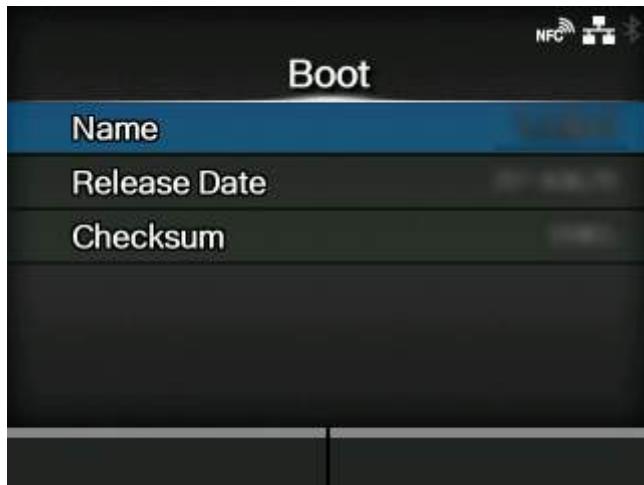

Name

Shows the Boot firmware version.


Release Date

Shows the Boot firmware release date.

Checksum

Shows the Boot firmware checksum.

[Main]

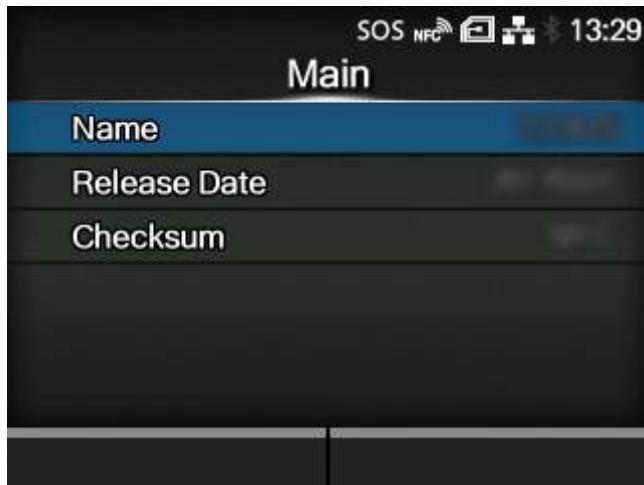

Name

Shows the Main firmware version.


Release Date

Shows the Main firmware release date.

Checksum

Shows the Main firmware checksum.

[Counters]

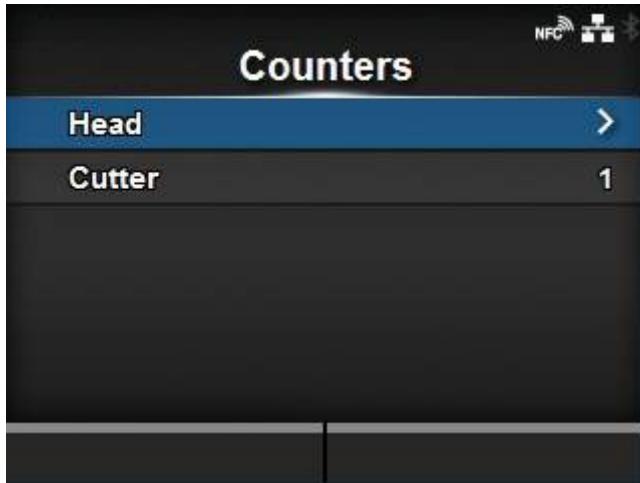

Shows information about the counters on the product.

The setting items are as follows:

Head

Shows information about the head counter on the product.


Cutter

Shows the current number of cuts.



- Only SATO authorized service personnel are permitted to clear the counter.

[Head]

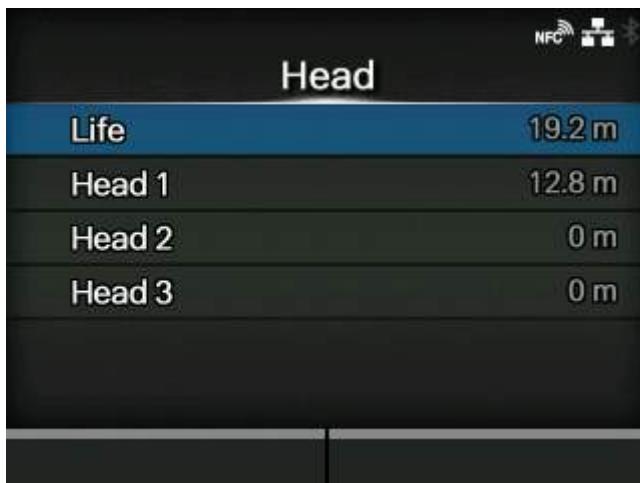

Shows information about the head counter on the product.

Life

Shows the current print distance.


Head 1

Head 2

Head 3


The current print distance is shown in [Head 1]. When you replace the print head and the counter is cleared, the value of [Head 2] appears in [Head 3] and the value of [Head 1] appears in [Head 2]. [Head 1] will start to count from 0 again.

[IPv4 Address]

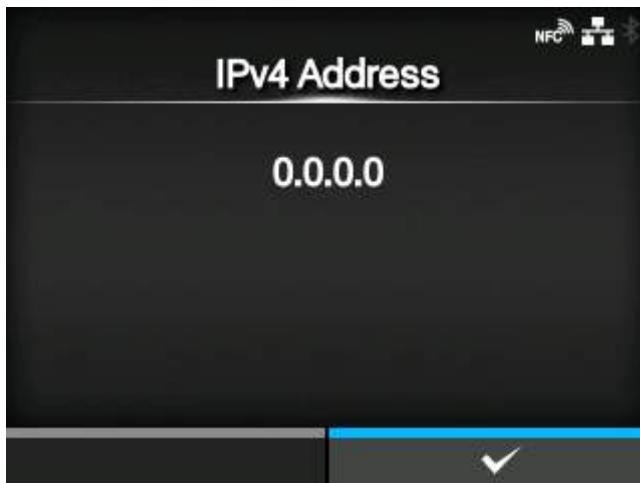

Shows the IPv4 address.


[IPv6 Address]

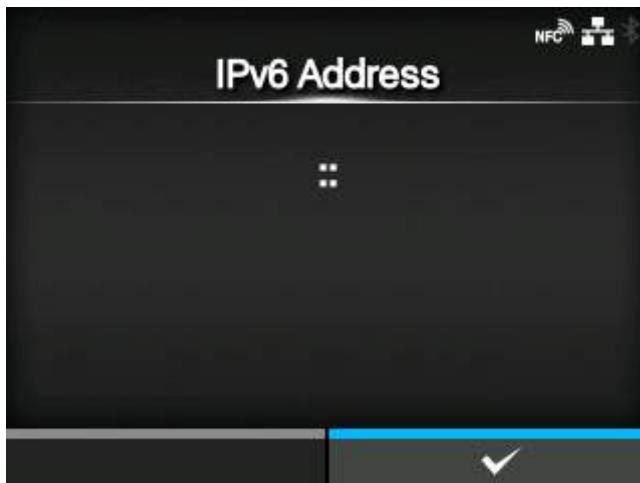

Shows the IPv6 address.




- When Wi-Fi Direct is active, this IPv6 address screen does not appear.

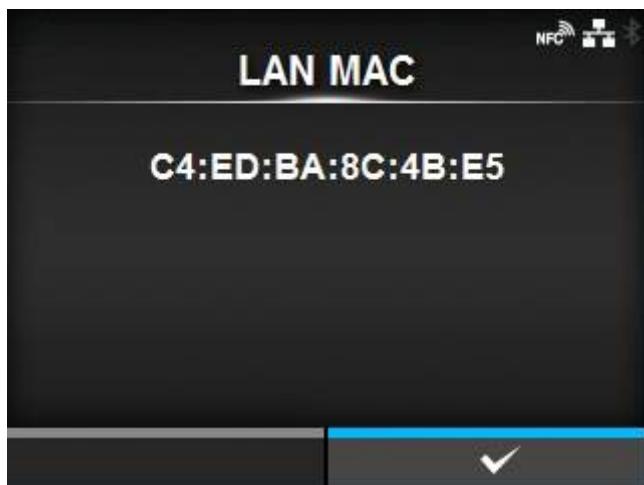[LAN MAC]

Shows the MAC address of the LAN.


Appears only if LAN is the active interface.

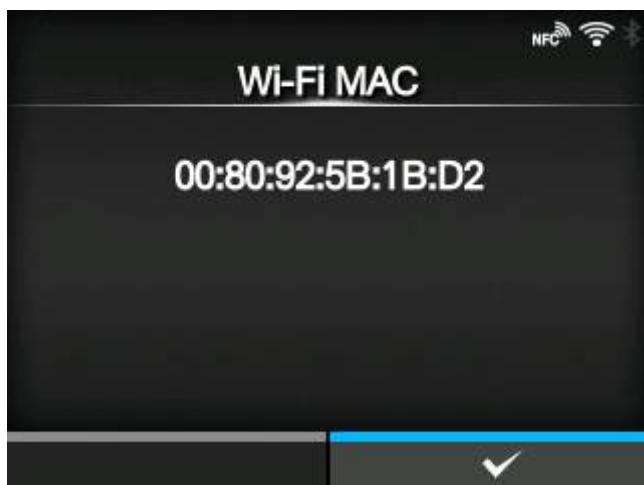[Wi-Fi MAC]

Shows the MAC address of the wireless LAN.

Appears only if you have installed the optional wireless LAN and Wi-Fi is the active interface.


[Wi-Fi Region]

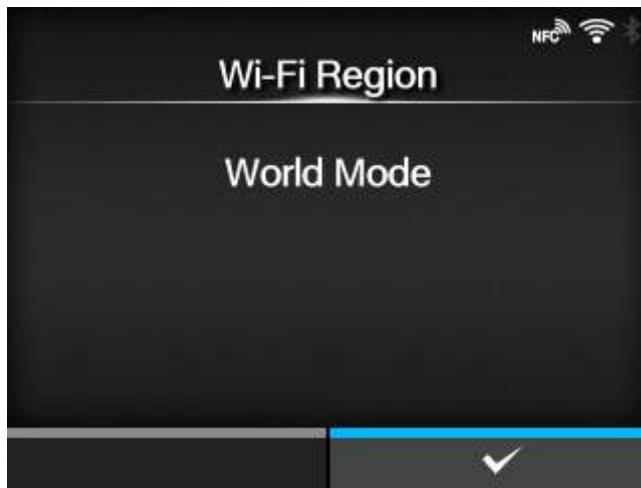

Shows the region information of the wireless LAN.

Appears only if you have installed the optional wireless LAN and Wi-Fi is the active interface.


[Wi-Fi Status]

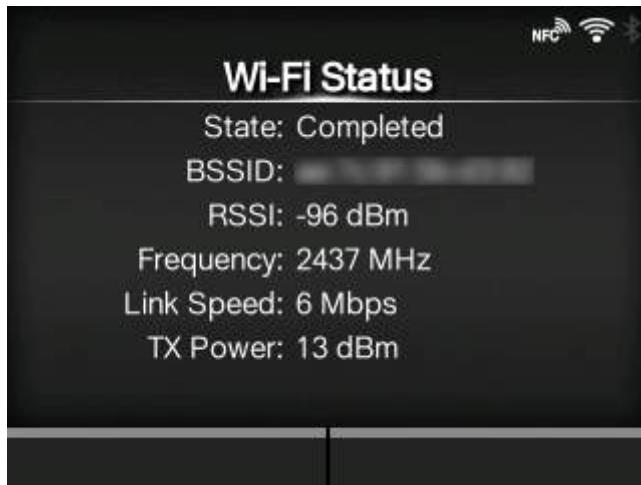

Shows the status of the wireless LAN.

Appears only if you have installed the optional wireless LAN and Wi-Fi is the active interface.

[Wi-Fi Direct]

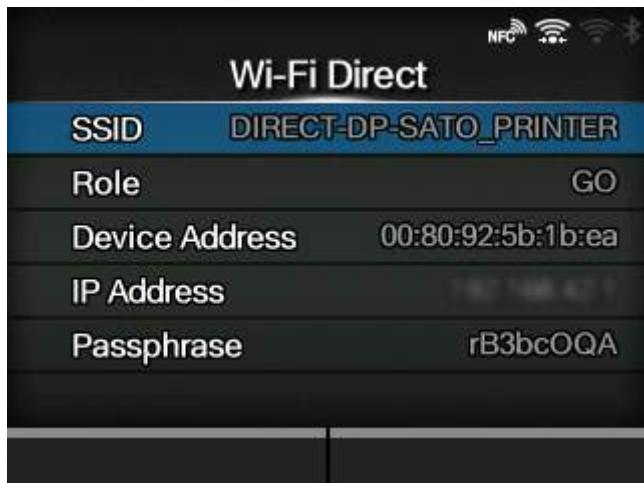

Shows the connection information of Wi-Fi Direct.

Appears only if Wi-Fi Direct is the active interface and you are connected using Wi-Fi Direct.

[Wi-Fi Versions]



Shows the version of the wireless LAN.

Appears only if you have installed the optional wireless LAN and Wi-Fi is the active interface.

Configuring the Product Settings from a Web Browser

Accessing to the Web Configuration Page

The product can be operated through a web configuration page using any browser.

With an Ethernet LAN or WLAN connection, users can remotely get information from the product or configure the product's settings.



- You need the product's IP address to access the web configuration page. The product's IP address can be checked in [Settings] > [Information] > [IPv4 Address].
- If the product's [Settings] > [Interface] > [Network] > [Advanced] > [Firewall] > [Enable] menu is set to [Enabled], [Settings] > [Interface] > [Network] > [Advanced] > [Firewall] > [Allow Services And Ports] > [WebConfig] must be set to [Enabled].

1. Open up the browser and enter the product's URL.

If the product's IP address is 192.168.143.123, enter the following URL: <https://192.168.143.123>

When a security certificate is prompted, you must acknowledge and click Continue.


The web configuration page for the product appears. On the upper right (1) of each page, the model name, current resolution and MAC address are shown.




2. Log in to view the [Settings] and [Tools] pages.

You can view [Dashboard] and [Certificates] pages without logging in.

- a. Click [Login] (2).

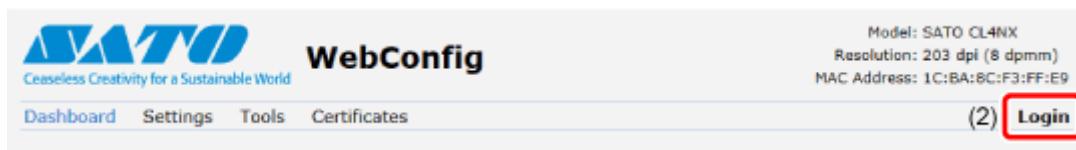


- b. Select [settings] for the user, enter the password, and click [Login].

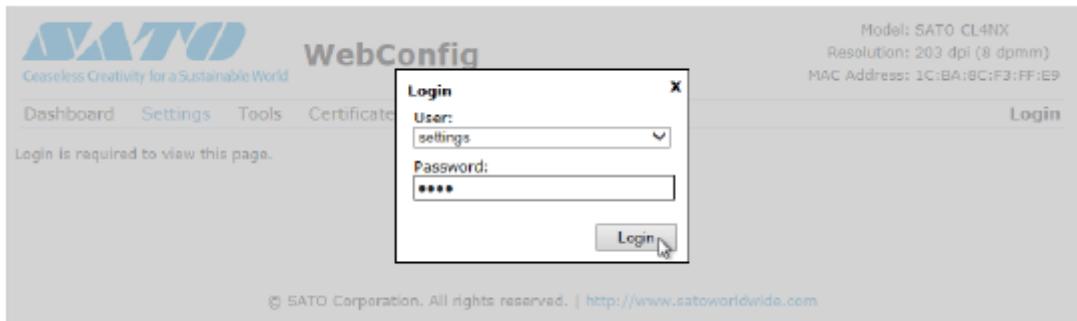

The default user is [settings], and the default password is "0310".

3. Click on the page (3) you want to view.

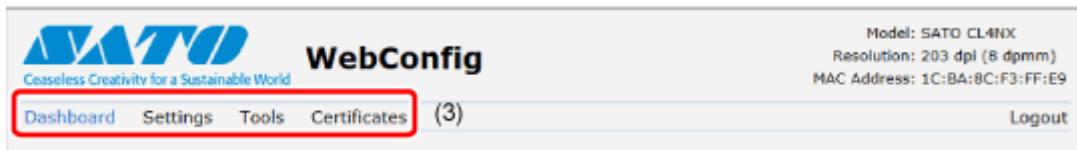

Dashboard

[Dashboard] is the initial page for the web configuration page. Each section shows specific information or the current status of the product.



- You can view the [Dashboard] page without logging in.

The screenshot shows the SATO WebConfig dashboard with the following sections highlighted:

- (1) Printer Status:** Shows the printer is Offline.
- (2) Printing:** Shows Speed: 6 ips, Darkness Range: A, Darkness: 5, Sensor Type: Gap, Print Mode: Tear Off, Backfeed: Before.
- (3) Device:** Shows Model: CL4NX 203dpi, Resolution: 203 dpi (8 dpmm), MAC Address: 00:80:92:50:9E:86.
- (4) Network:** Shows IPv4 Address: [REDACTED], MAC Address: 00:80:92:50:9E:86.
- (5) System:** Shows Firmware version: [REDACTED], Uptime: 18min, Contact: [REDACTED], Name: [REDACTED], Location: [REDACTED].
- (6) Wi-Fi:** Shows Mode: infra, SSID: [REDACTED], BSSID: [REDACTED], Channel: 1 (2412 MHz).
- (7) Wi-Fi Strength:** Shows a gauge indicating -39 dBm.

(1) [Printer Status]

Shows the current state (online, offline, error) and current status icons.

(2) [Printing]

Shows the print speed, darkness, sensor, print mode and backfeed setting.

(3) [Device]

Shows the model, current resolution and options that are installed.

(4) [Network]

Shows the current IP address and MAC address of the active interface.

(5) [System]

Shows the current firmware version, uptime, SNMP contact, name and location.

(6) [Wi-Fi]

Shows the current Wi-Fi setting.



- This information is shown only if Wi-Fi is available and active.

(7) [Wi-Fi Strength]

Shows the current Wi-Fi communication strength.



- If the product is P2P GO, the Wi-Fi Strength will not be shown.

Settings

Settings equivalent to the product's Settings mode can be done on the browser.



- Login is required to view the [Settings] page. Click [Login] to log in before opening the [Settings] page.

The default user is [settings], and the default password is "0310".



(1) [Printing]

You can do the settings equivalent to [Settings] > [Printing] in the Settings mode.

(2) [Interface]

You can do the settings equivalent to [Settings] > [Interface] in the Settings mode.

(3) [Applications]

You can do the settings equivalent to [Settings] > [Applications] in the Settings mode.

(4) [System]

You can do the settings equivalent to [Settings] > [System] in the Settings mode.

(5) [Tools]

You can do the settings equivalent to [Settings] > [Tools] in the Settings mode.

(6) [Information]

You can do the settings equivalent to [Settings] > [Information] in the Settings mode.

The screen below is the example of [Printing] page.

This screenshot shows the 'Printing' configuration page in the SATO WebConfig interface. The top right corner displays printer details: Model: SATO CL4NX, Resolution: 203 dpi (8 dpmm), and MAC Address: 00:19:98:12:5C:25. The main area contains various configuration options:

Setting	Value	Description
Label Length	20000	Range: 1 <-> 20000 dot
Label Width	832	Range: 1 <-> 832 dot
Auto Measure	<input type="checkbox"/>	
Printing Mode	Use Ribbon	
Ribbon Near End	<input checked="" type="checkbox"/>	
Speed	6	
Sensor Type	Gap	
Auto-mode	<input checked="" type="checkbox"/>	
Print Mode	Cutter	
Backfeed	After	
Darkness Range	A	
Darkness	5	

Below the main form, there are two collapsed sections: 'Imaging' and 'Advanced'.



- If a message prompting you to restart the product appears at the top of the page, click [Reboot printer] to reboot the product to apply the settings.

This screenshot shows a message box on the SATO WebConfig page: "Restart to apply changes." with a "Reboot printer" button. This message typically appears after saving changes to the printer's configuration. The rest of the page includes the header, navigation bar, and printer details.

Tools

Various settings and operations can be performed in this page: installing certificates for authentication, checking the log, and test printing.



- Login is required to view the [Tools] page. Click [Login] to log in before opening the [Tools] page.

The default user is [settings], and the default password is "0310".

Model: SATO CL4NX
Resolution: 203 dpi (8 dpmm)
MAC Address: 1C:BA:8C:F3:FF:E9

Logout

Dashboard Settings Tools Certificates

(1) [Upload]

You can do the setting equivalent to [Settings] > [Tools] > [Certificates] in the Settings mode. Install certificates used for Wi-Fi authentication and for HTTPS.

Click [Browse] of the certificate you want to install.

Select the certificate file from the list and click [Upload], and the authentication file will be installed.

(2) [Clone]

You can do the setting equivalent to [Settings] > [Tools] > [Clone] in the Settings mode. Copy the current product settings and the installed data.

(3) [Install Package]

Refer to "Section 2.5 Downloading Firmware" of the CL4NX/CL6NX service manual.

(4) [Logs]

List all log files in the log directory. Users can click to download the file.

(5) [Reset]

You can do the setting equivalent to [Settings] > [Tools] > [Reset] in the Settings mode. Initialize the setting values and data saved on the product.

(6) [Passwords]

You can do the setting equivalent to [Settings] > [System] > [Password] > [Change Password] in the Settings mode. Change the passwords for the product.

(7) [Test Print]

You can do the setting equivalent to [Settings] > [Tools] > [Test Print] in the Settings mode.
Perform a test print.

(8) [Support Info]

You can do the setting equivalent to [Settings] > [Tools] > [Support Info] in the Settings mode. You can also get screenshots of the current product display and an image of the last label printed.

(9) [Reboot]

Reboot the product.

Certificates

Shows the root certificate authority and client certificates installed on the product.

AVANTO Ceaseless Creativity for a Sustainable World **WebConfig**

Model: SATO CL4NX
Resolution: 203 dpi (8 dp/mm)
MAC Address: 1C:BA:8C:F3:FF:B9

Dashboard Settings Tools Certificates **Login**

Installed Certificates

HTTPS (Pre-installed)

Certificate:

Data:
Version: 1 (0x0)
Serial Number:
cc:66:4b:94:a9:35:de:6a
Signature Algorithm: sha1WithRSAEncryption
Issuer: C=SE, ST=Västergötland, L=Göteborg, O=SATO Techno Lab Europe AB
Validity
Not Before: Jun 17 08:49:30 2014 GMT
Not After: Jun 17 08:49:30 2024 GMT
Subject: C=SE, ST=Västergötland, L=Göteborg, O=SATO Techno Lab Europe AB
Subject Public Key Info:
Public Key Algorithm: rsaEncryption
Public-Key: (2048 bit)
Modulus:
00:ab:a9:b6:c4:35:3b:08:90:c0:b1:08:6b:db:5f:
bcaa2:02:09:3e:3d:d4:55:i23:0a:4d:ad:i35:16:75:
d1:02:10:5c:1c:26:0e:5c:bc:1b:69:f9:69:cb:2:00:
77:71:e6:a4:f8:45:11:55:i03:93:i5:46:c9:5d:e9:
6e:2b:id:6:7:ce:4:7f:60:44:0c:39:ad:cc:ef:7:9:0:
d5:ia:1:od:E4:i98:4c:32:2c:99:40:7a:ib:2:97:c8:1:72:
e0:fe:7:c:2:rb:3:cb:a6:da:1b:f2:a8:63:d6:a0:cb:
e6:d1:aa:7b:01:5e:a9:75:98:06:10:c9:a0:13:32:
b2:30:7d:ac:84:00:33:E7:29:4c:48:4b:8c:f1:8d:



- The client certificate that is a PFX (PKCS #12) file will not be shown.

Various Ways to Output

Outputting with General-purpose Software

Labels can be easily output by using software, such as the NiceLabel series.

- NiceLabel series

This software has multiple functions and is easy to operate so you can create and print labels with richly versatile layouts.



- For details of the products, contact your SATO sales representative.

Outputting and Controlling with Dedicated Command

A variety of labels and tags can be printed from simple formats to complex formats by sending the SBPL (SATO Barcode Printer Language) command to the product.

In addition, you can print characters, barcodes, and graphics in various styles by combining multiple SBPL commands. There are many functions for modifying the printed items, such as enlarging fonts, specifying a print direction, ruled line, and black and white reverse printing.

For programming references, contact your SATO sales representative or technical support center.

Controlling the Product with External Signal


By using the external signal (EXT) interface, you can connect the product to an external device and print. With the control signal, you can control print operations; such as monitoring the condition of the product, starting printing, and reprinting.

Adjusting the Product

Printable Area

The printable area of the product is as follows:


CL4NX

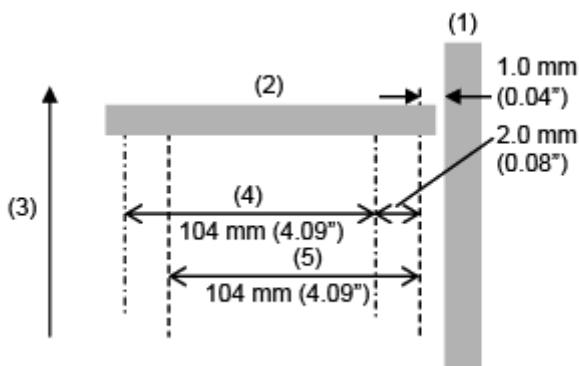

- (1) Frame
- (2) Print head
- (3) Media feed direction
- (4) Printable area (Standard)
- (5) Printable area (Left-justify)


CL6NX

- 203 dpi

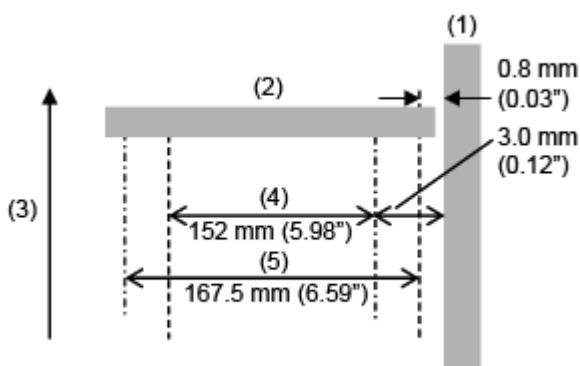

- (1) Frame
- (2) Print head
- (3) Media feed direction
- (4) Printable area (Standard)
- (5) Printable area (Left-justify)


- 305 dpi

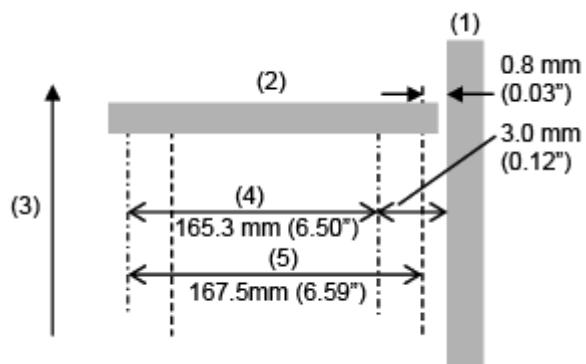

- (1) Frame
- (2) Print head
- (3) Media feed direction
- (4) Printable area (Standard)
- (5) Printable area (Left-justify)

Media Sensor Positions and Media Stop Positions

The media stop positions with the media sensor and various operation modes are as follows:

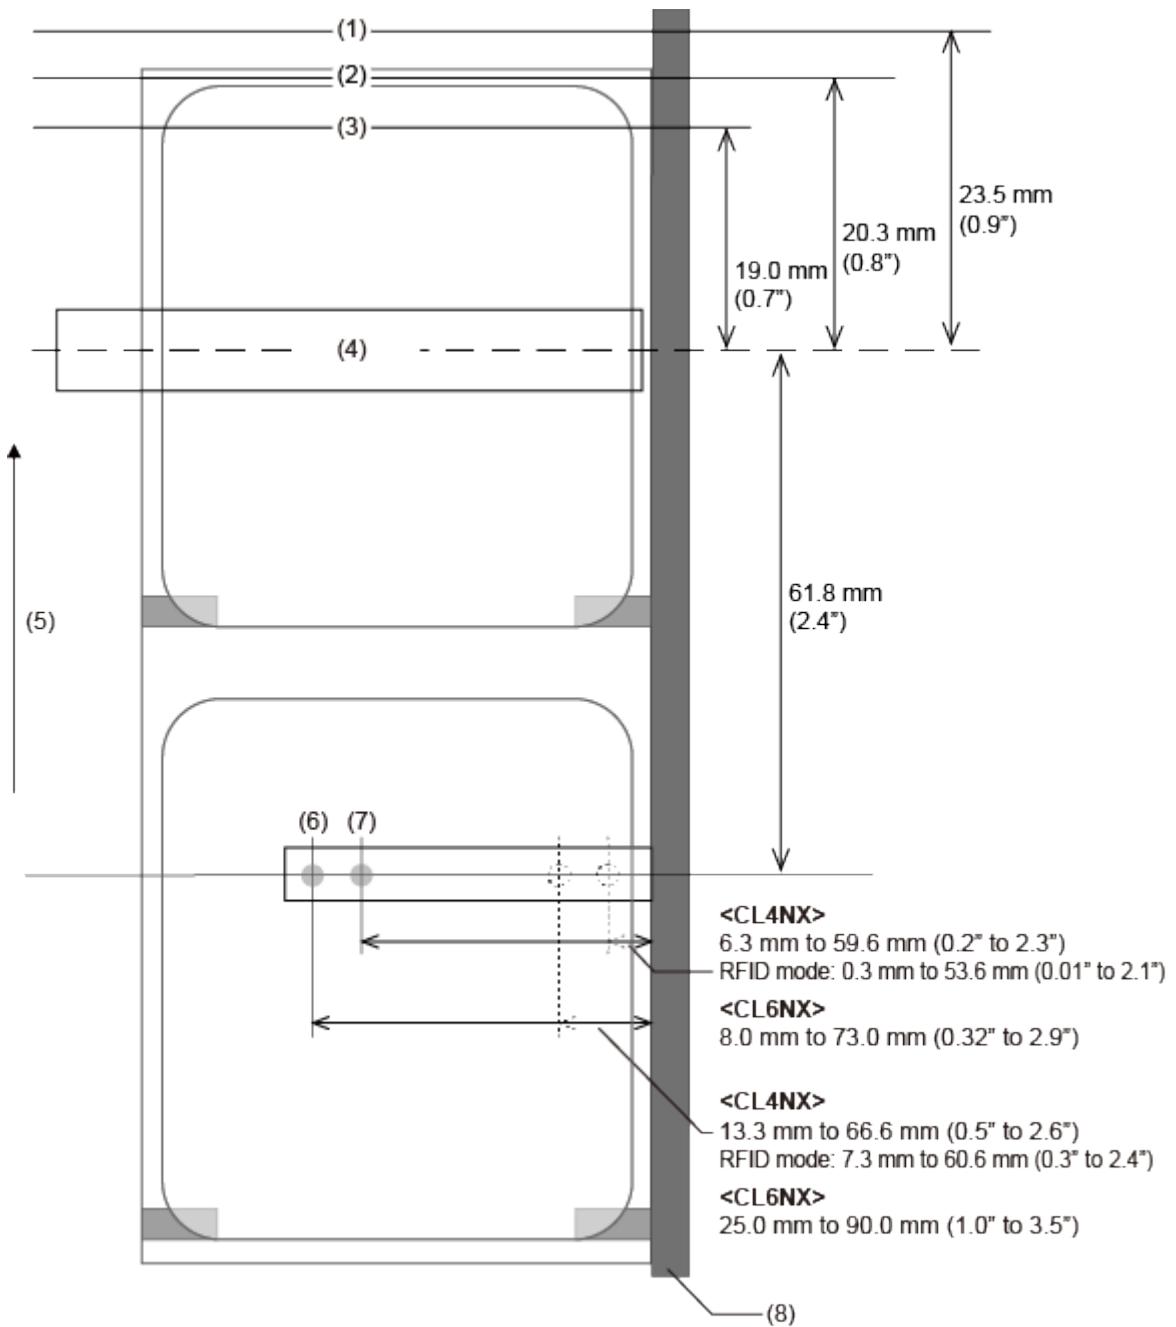

- (1) Media stop position in dispenser mode
- (2) Media stop position in cutter mode
- (3) Media stop position in tear-off mode
- (4) Print head
- (5) Media feed direction
- (6) Gap sensor
- (7) I-mark sensor

(8) Frame



- For the CL4NX RFID model, the position of the I-mark sensor becomes a minimum of 0.3 mm (0.01") when the position of the Gap sensor is adjusted to around 7.3 mm (0.3"). Because of this, the paper end may be frequently detected when the [Advanced] > [Paper End] of the [Printing] menu is set to [Using I-mark] (the default), due to the shifting of the media or other causes. When you have adjusted the position of the Gap sensor to around 7.3 mm (0.3"), change [Paper End] to [Using Gap].

Flow of Printing Operations

Printing Operations


Printing operations vary depending on the combination of the following settings.

- Print Mode
- Enabled/disabled media sensor
- With/without pulse input (from external signal (EXT) interface)
- Enabled/disabled head check

Operations in Continuous Mode


Operation 1: Continuous Mode Without Pulse Input (Head Check Disabled)

Operation

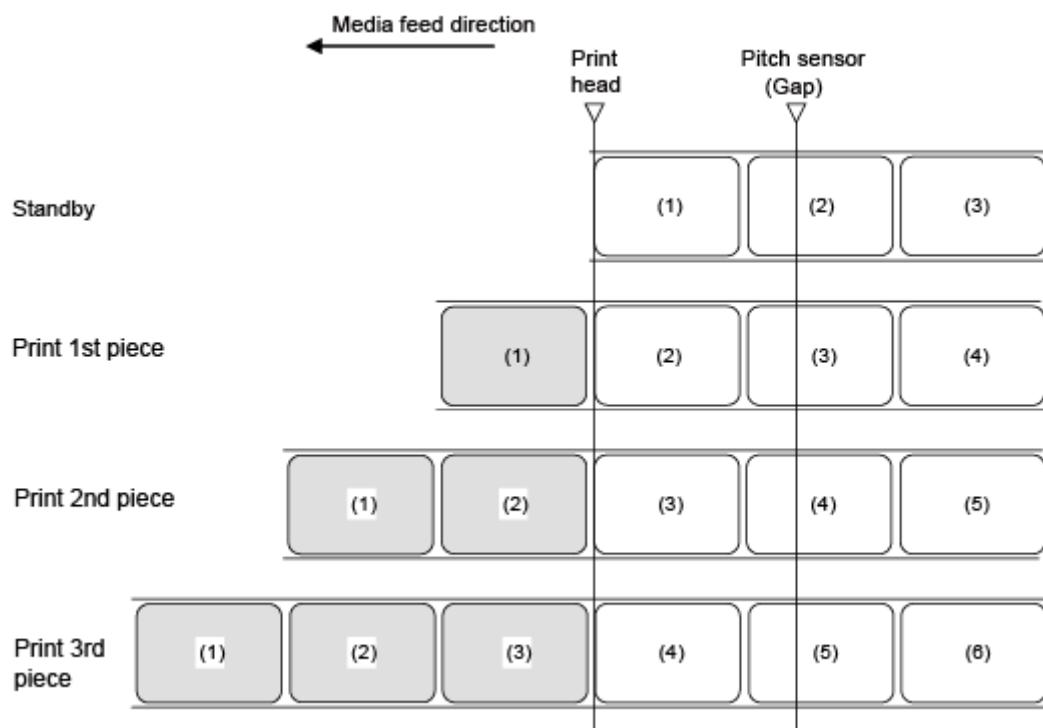


- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

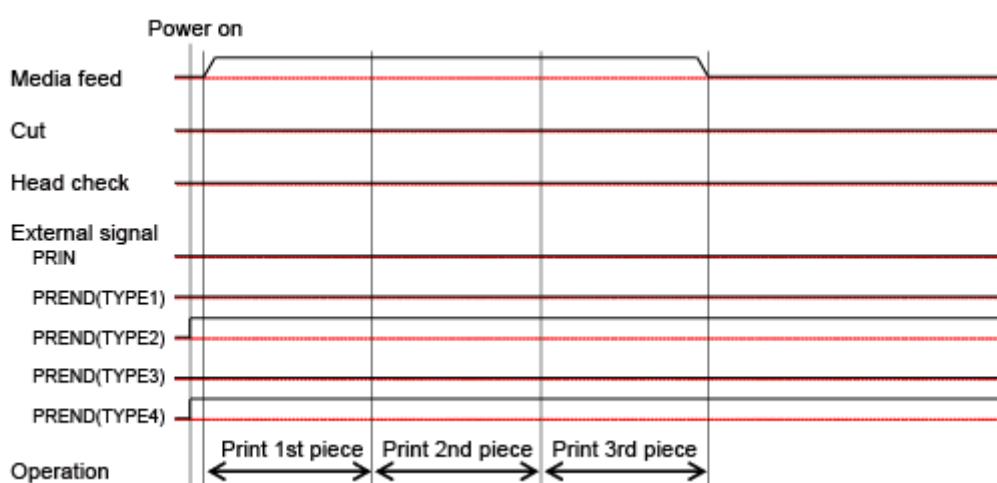


Operation 2: Continuous Mode Without Pulse Input (Head Check Enabled)

Operation

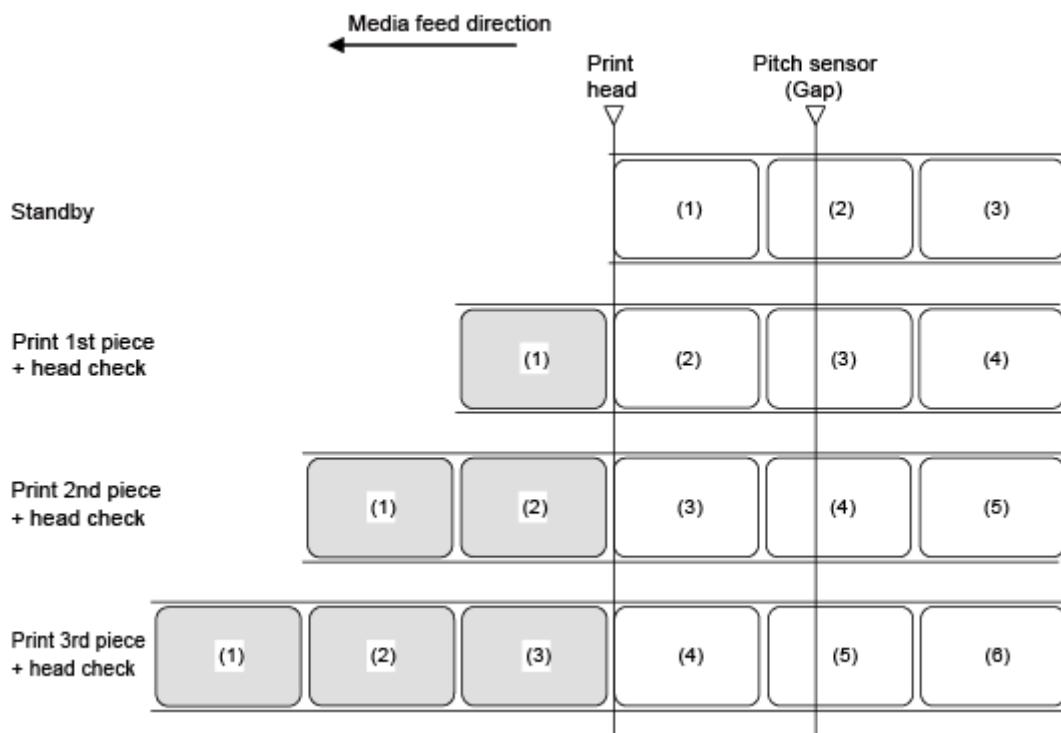


- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

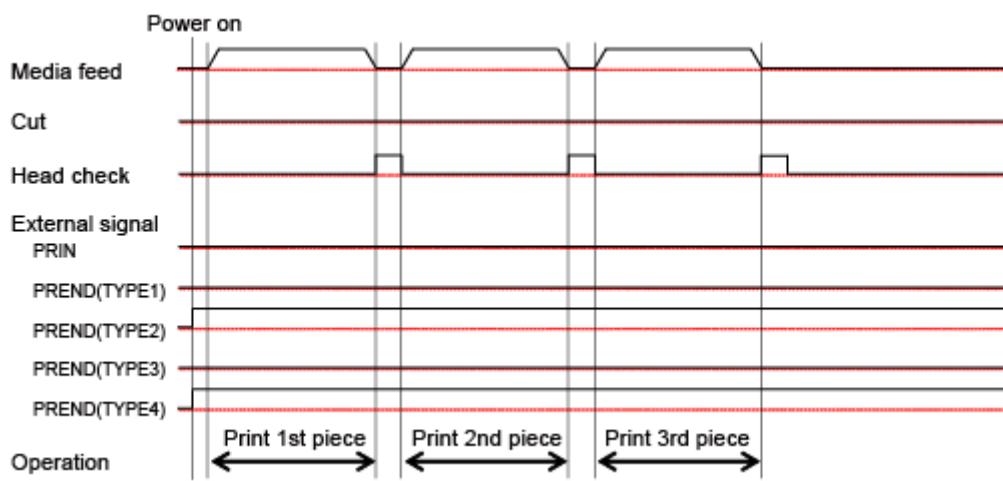


Operation 3: Continuous Mode with Pulse Input (Head Check Disabled)

Operation

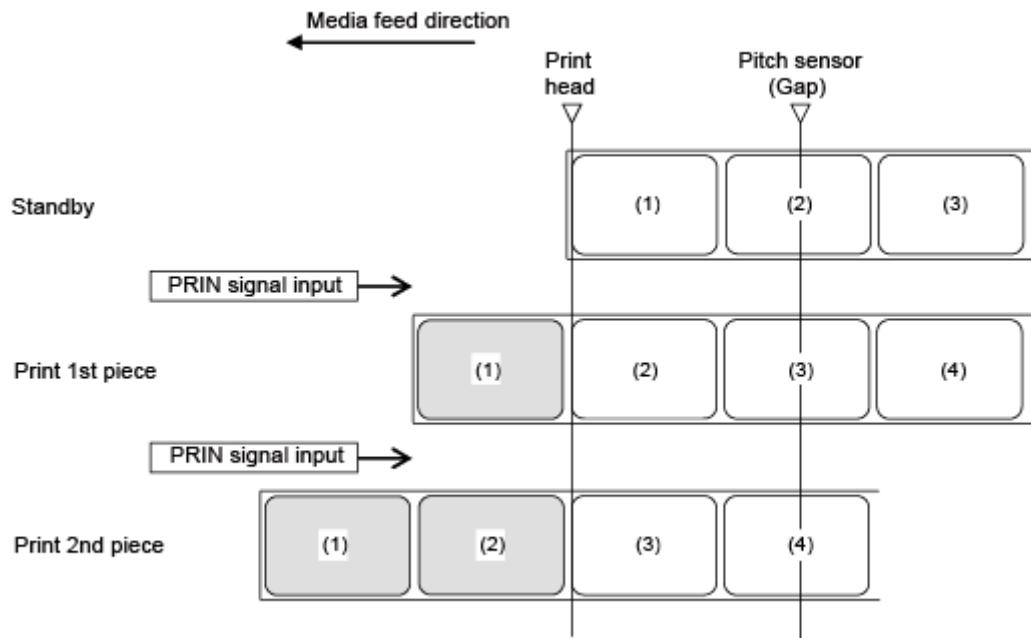

- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

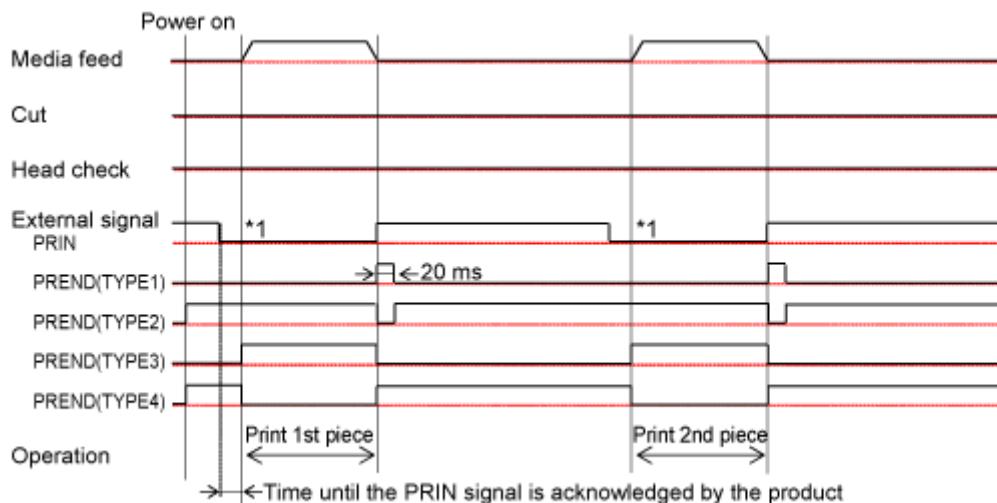

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 4: Continuous Mode with Pulse Input (Head Check Enabled)

Operation

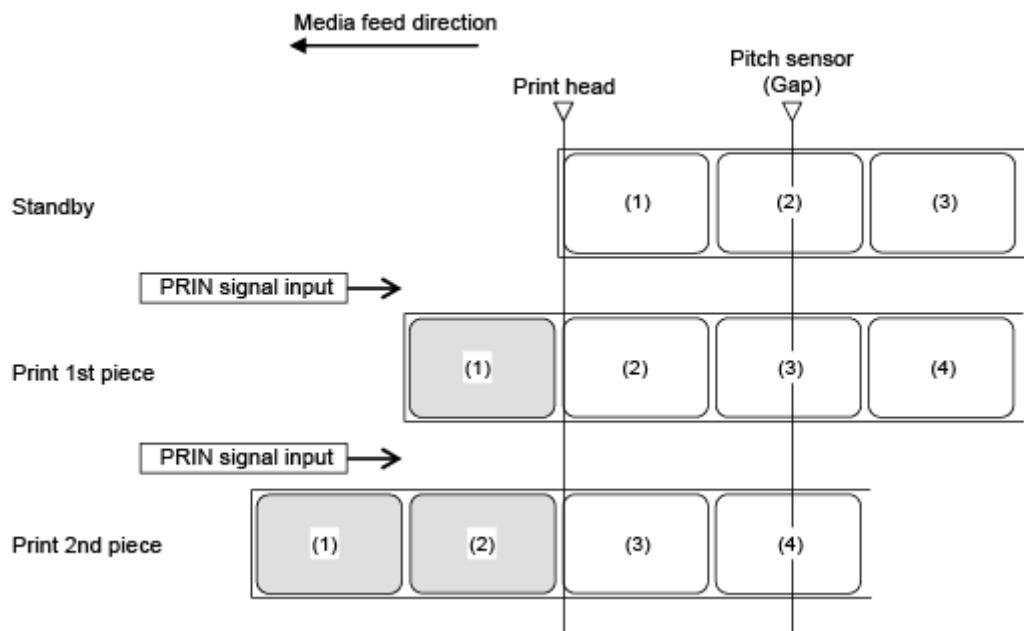

- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

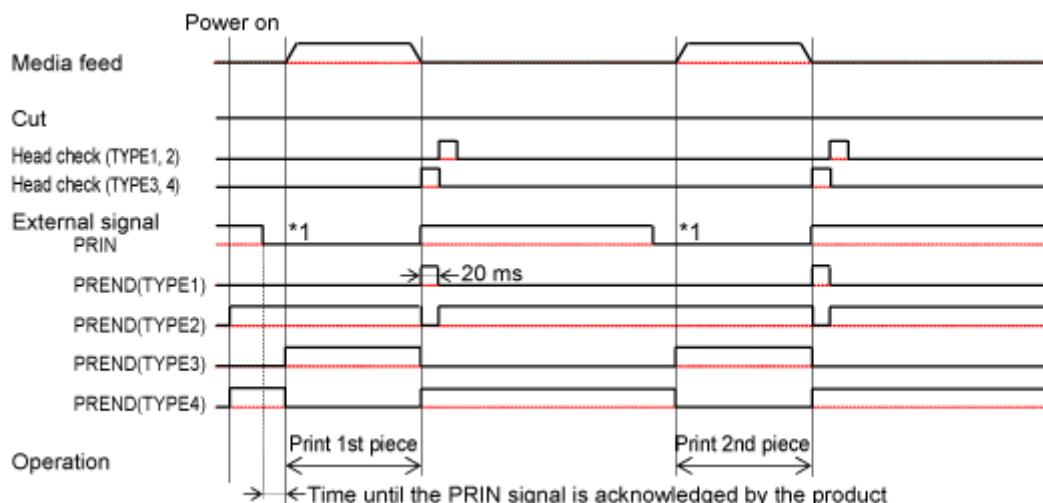


*1 Keep the PRIN signal until the PREND signal is outputted.

Operations in Tear-Off Mode

Operation 5: Tear-Off Mode Without Pulse Input (Head Check Disabled)

Operation

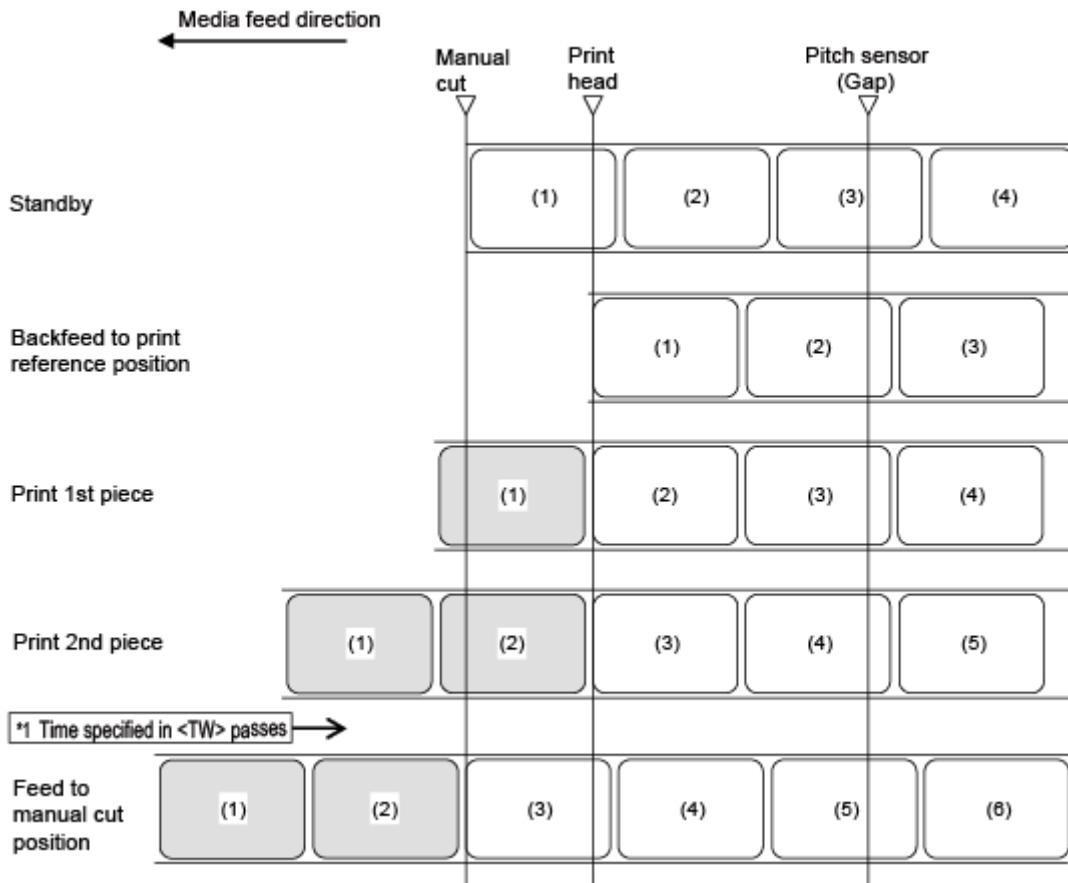


*1 After printing, if the period specified in Option Waiting Time <TW> (initial value: 0 ms) has passed and if there is no print data remaining, the product will feed the media to the position for manual cutting.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart (When <TW> is 0)

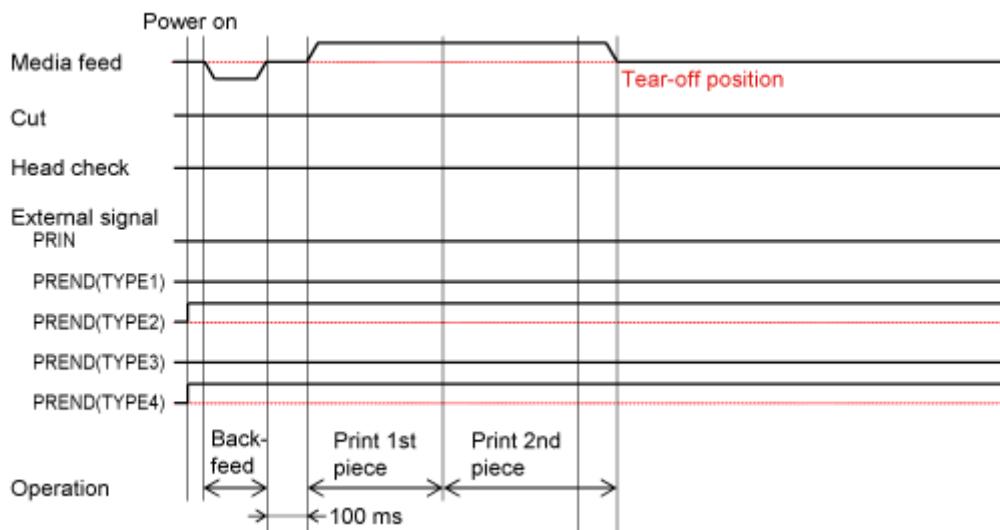


Timing Chart (When <TW> is 500)

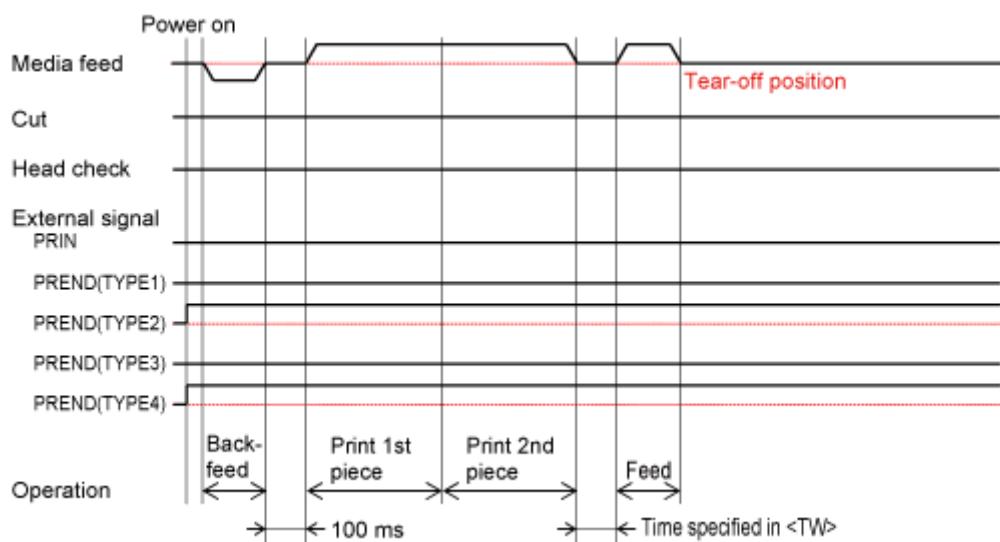

Operation 6: Tear-Off Mode Without Pulse Input (Head Check Enabled)

Operation

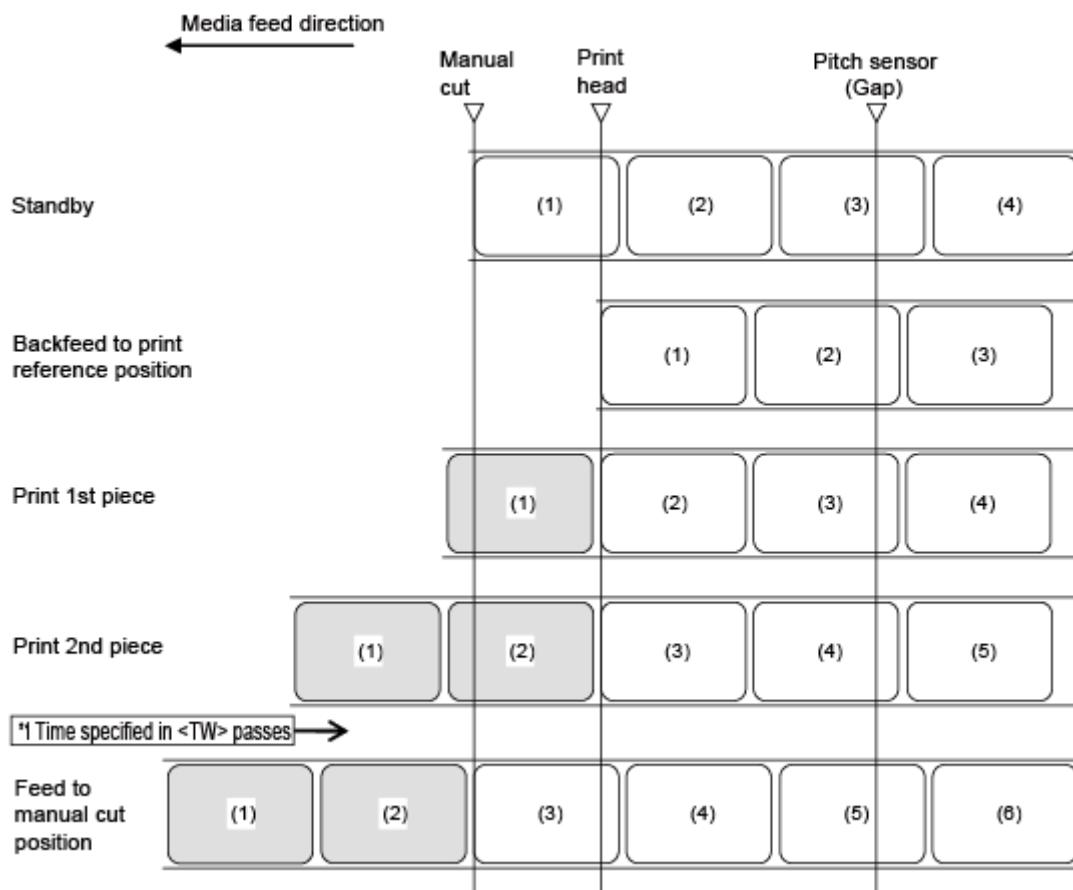


*1 After printing, if the period specified in Option Waiting Time <TW> (initial value: 0 ms) has passed and if there is no print data remaining, the product will feed the media to the position for manual cutting.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart (When <TW> is 0)

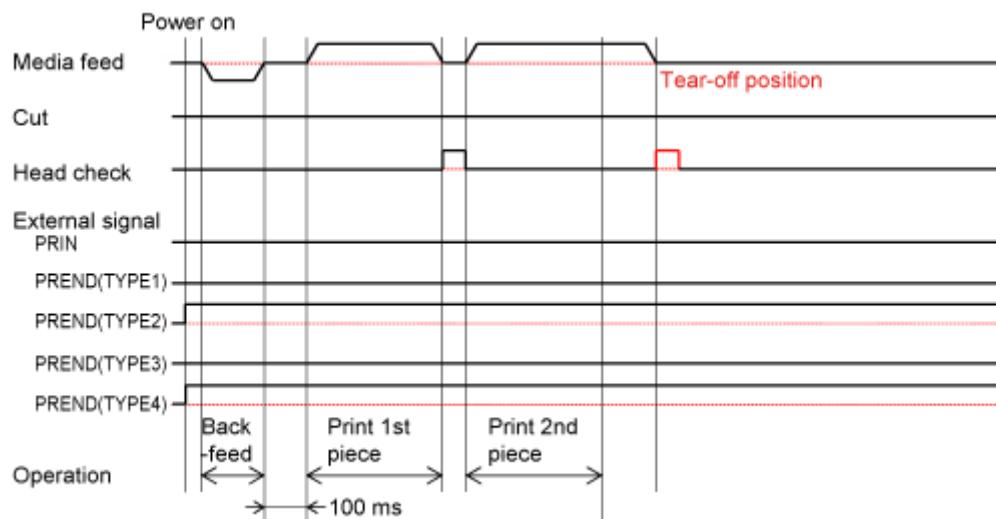


Timing Chart (When <TW> is 500)

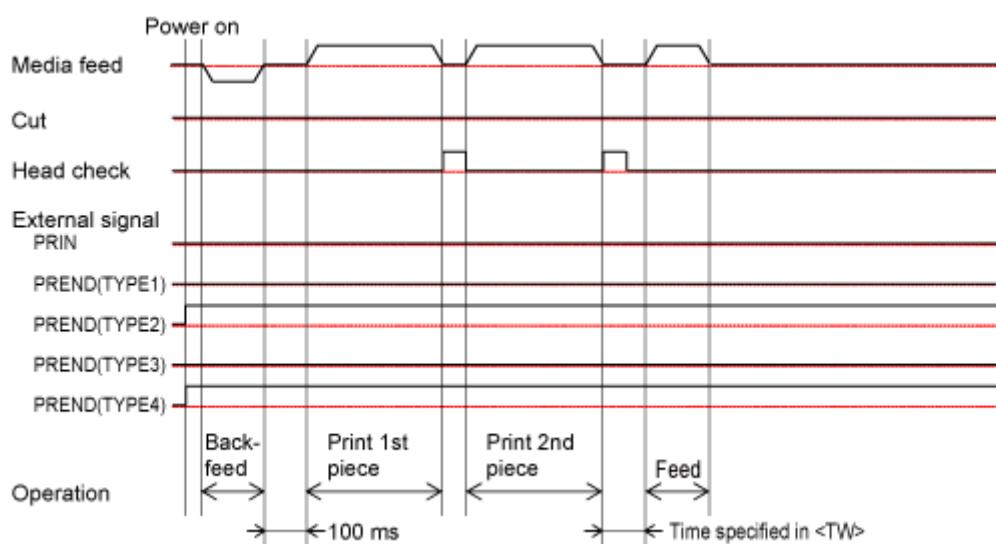


Operation 7: Tear-Off Mode with Pulse Input (Head Check Disabled)

Operation

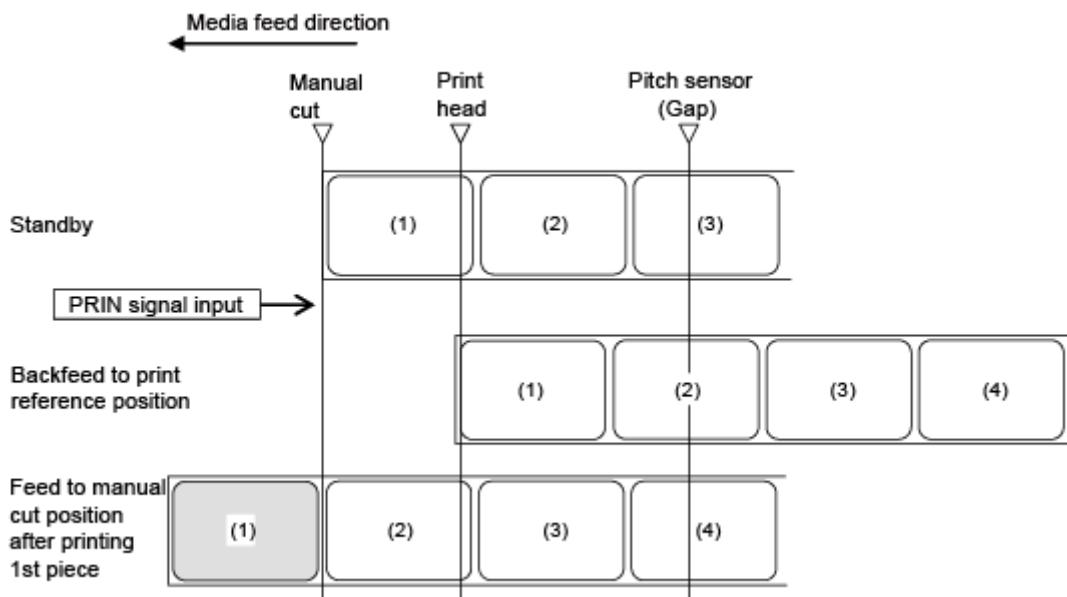

- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

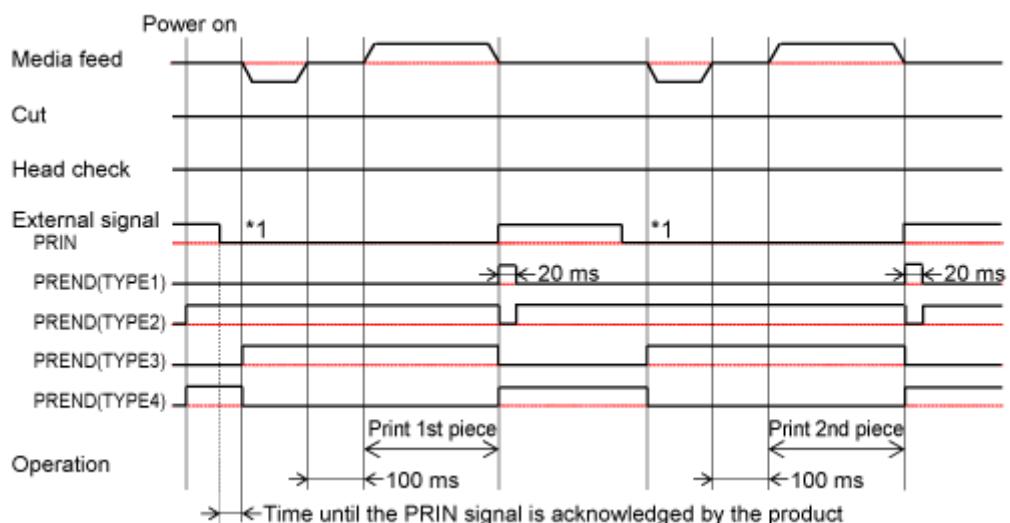

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 8: Tear-Off Mode with Pulse Input (Head Check Enabled)

Operation

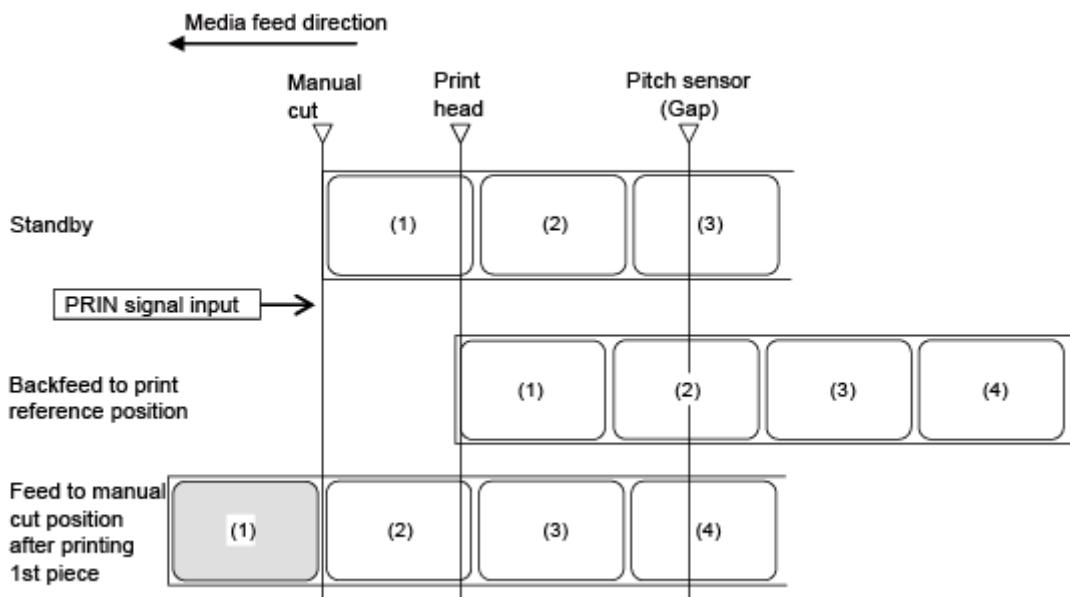

- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

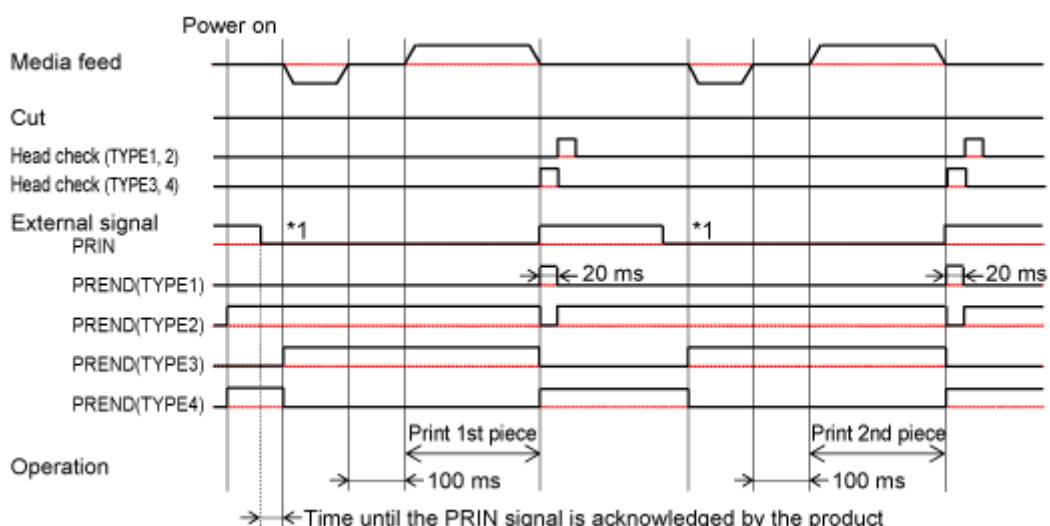


*1 Keep the PRIN signal until the PREND signal is outputted.

Operations in Cutter Mode

Operation 9: Cutter Mode, No Backfeed, and Without Pulse Input (Head Check Disabled)

Operation

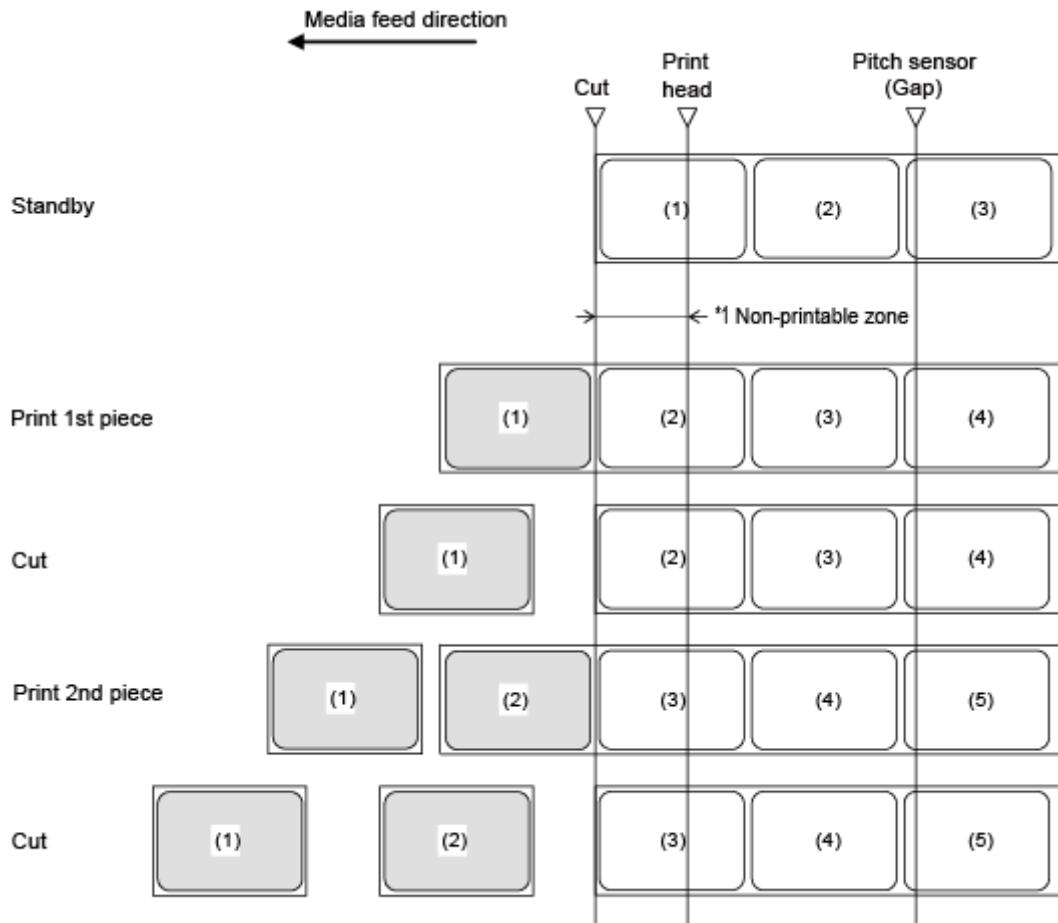


*1 Because backfeeding is not done, the media in the head area becomes non-printable.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

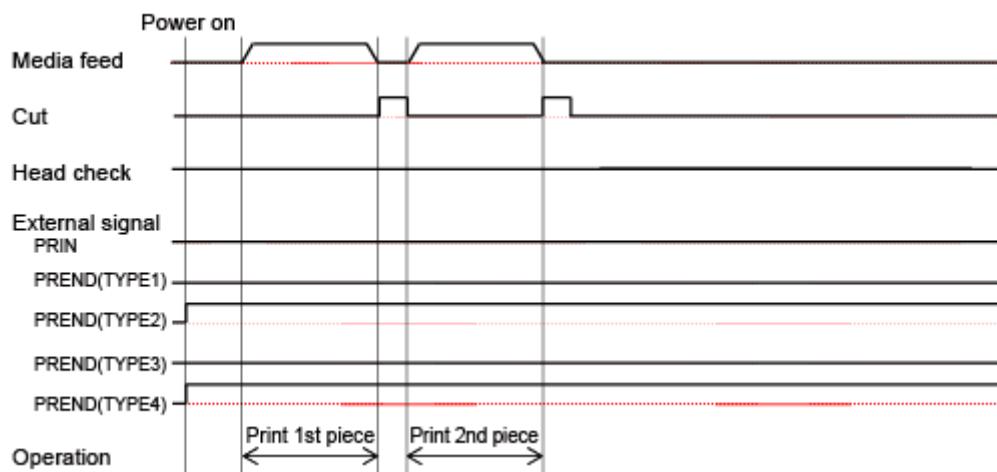

Operation 10: Cutter Mode, No Backfeed, and Without Pulse Input (Head Check Enabled)

Operation

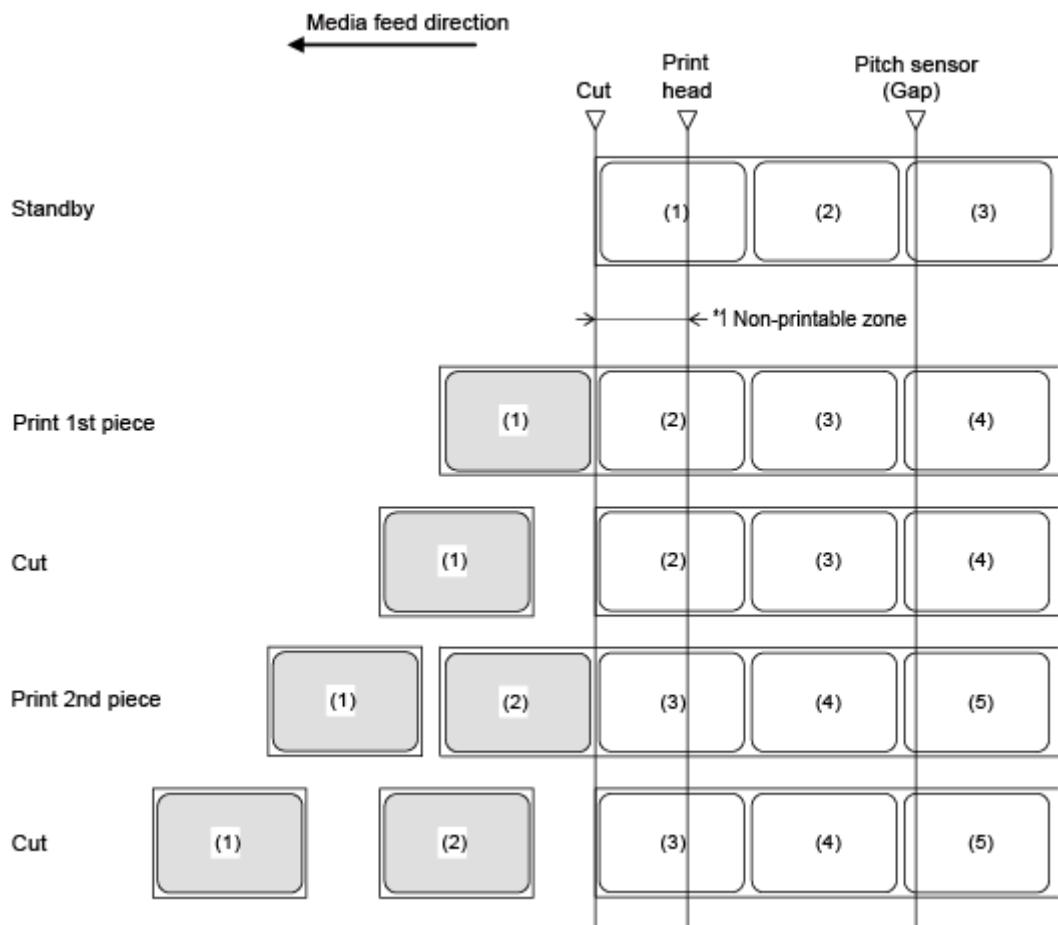


*1 Because backfeeding is not done, the media in the head area becomes non-printable.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

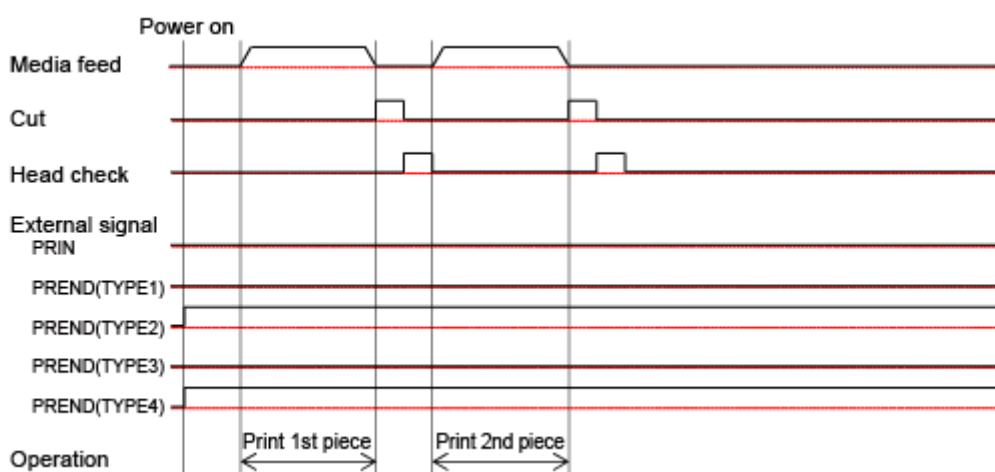


Operation 11: Cutter Mode, Backfeed After Printing, and Without Pulse Input (Head Check Disabled)

Operation

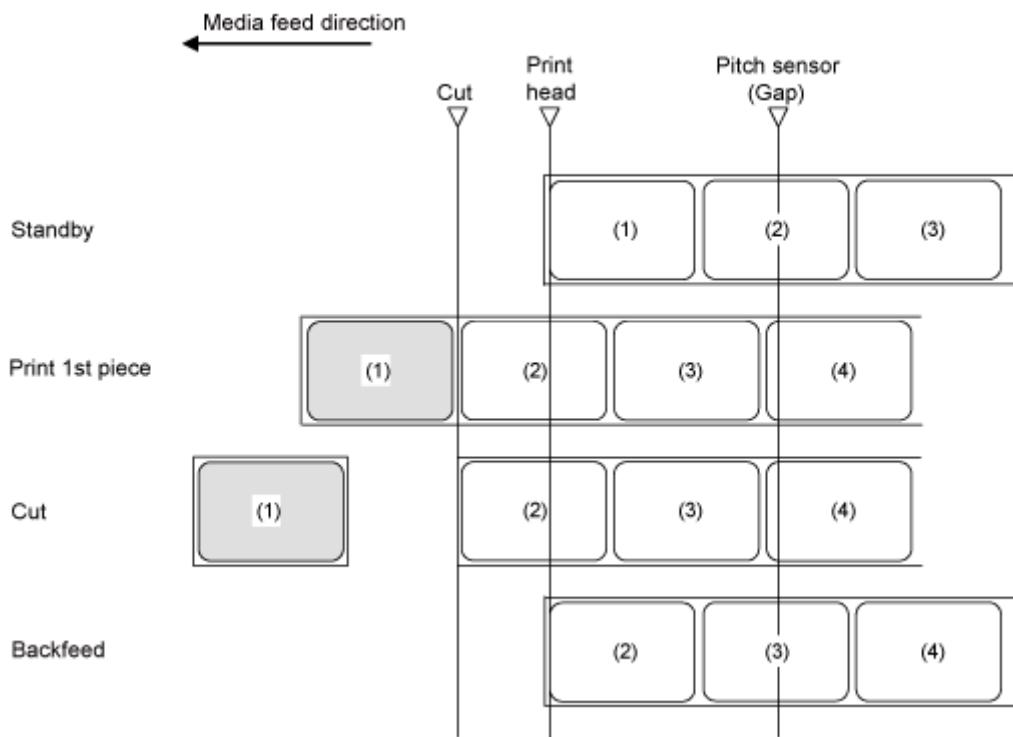


- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

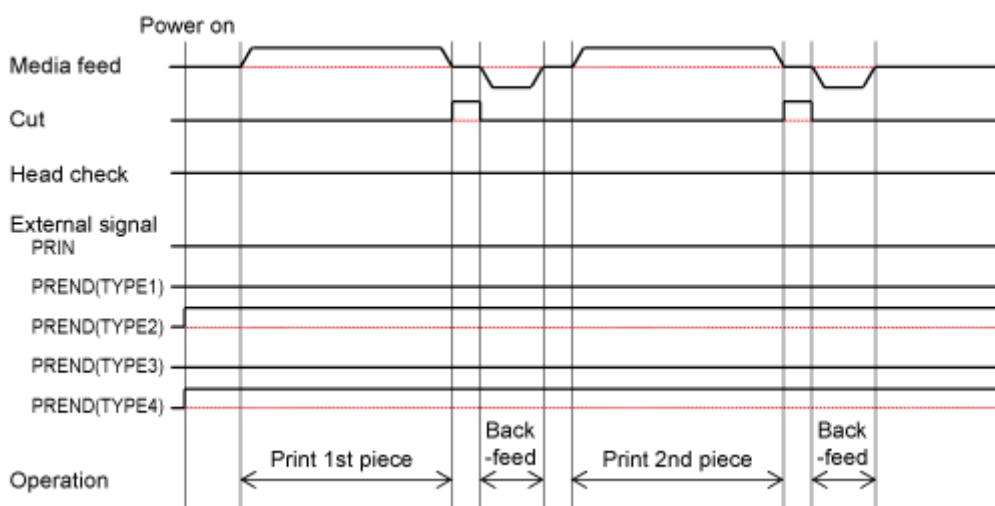


Operation 12: Cutter Mode, Backfeed After Printing, and Without Pulse Input (Head Check Enabled)

Operation

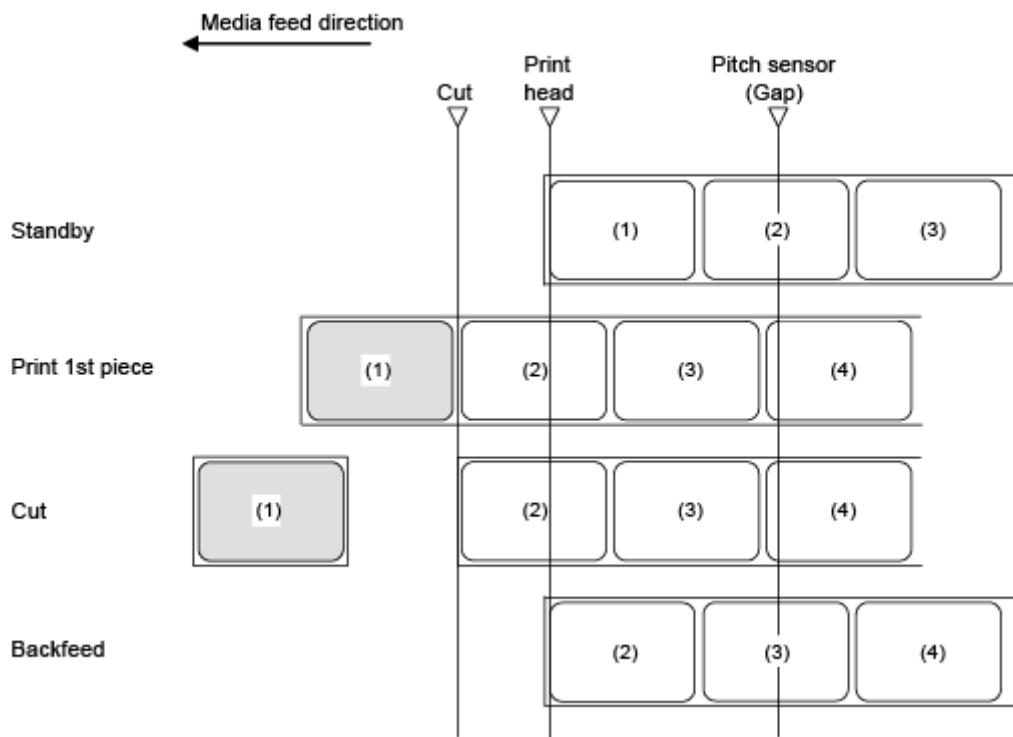


- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

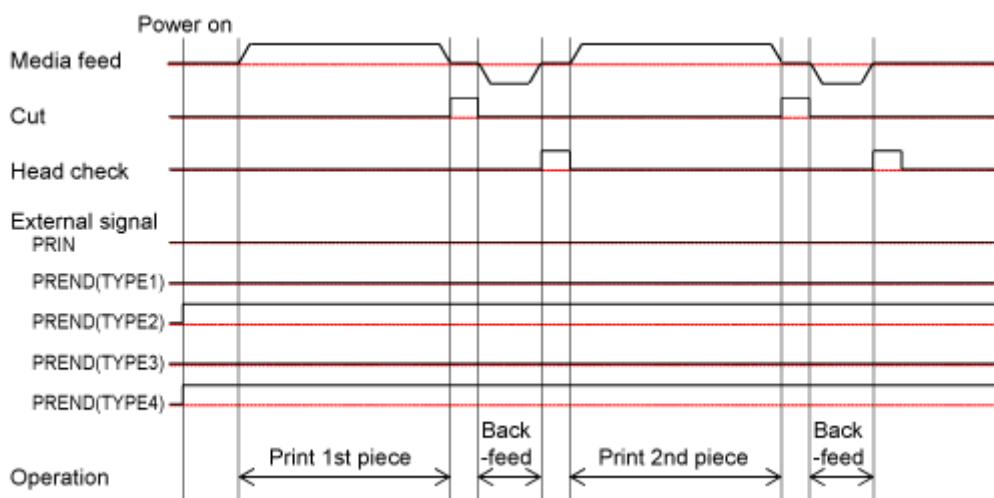


Operation 13: Cutter Mode, Backfeed Before Printing, and Without Pulse Input (Head Check Disabled)

Operation

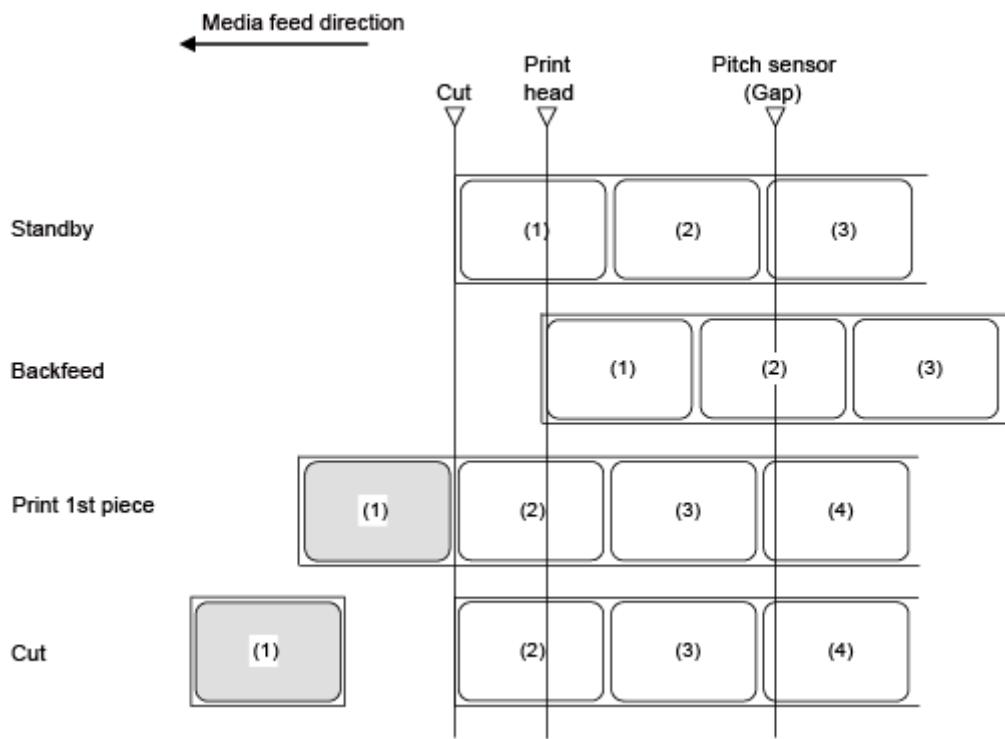


- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

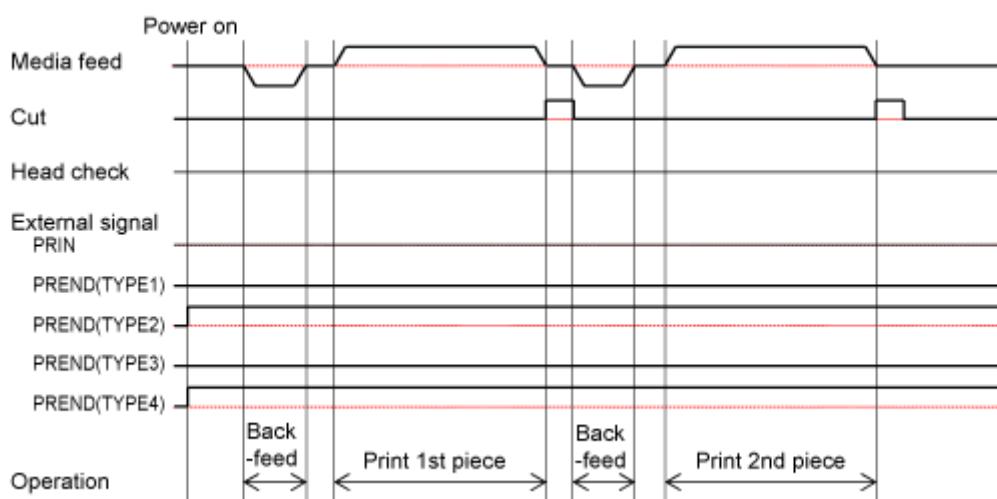


Operation 14: Cutter Mode, Backfeed Before Printing, and Without Pulse Input (Head Check Enabled)

Operation

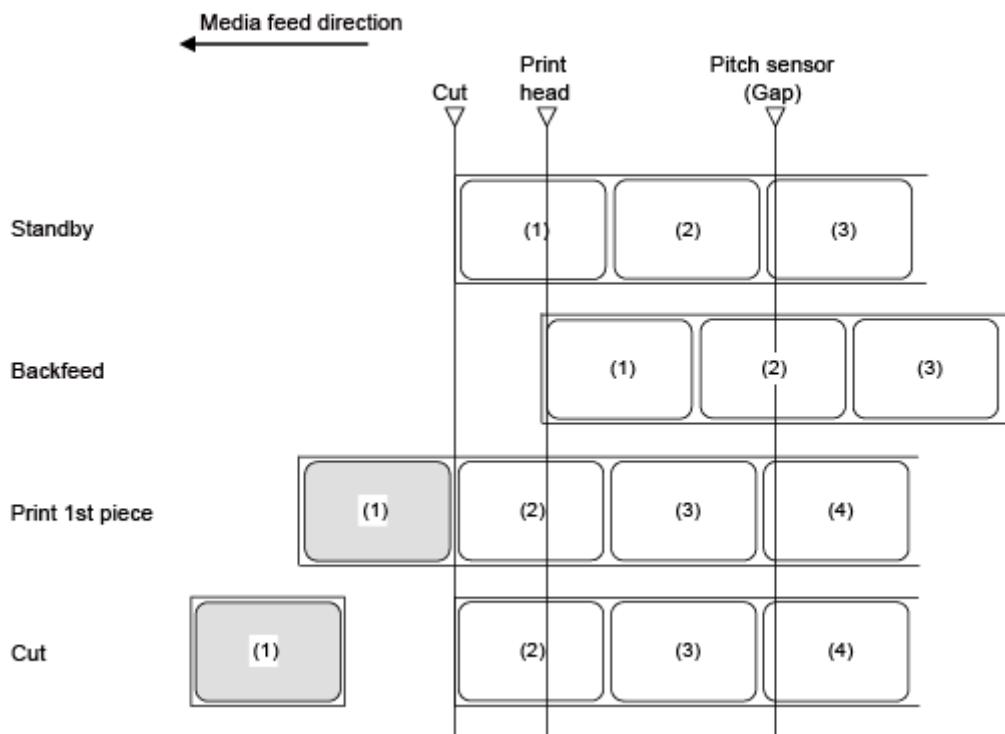


- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

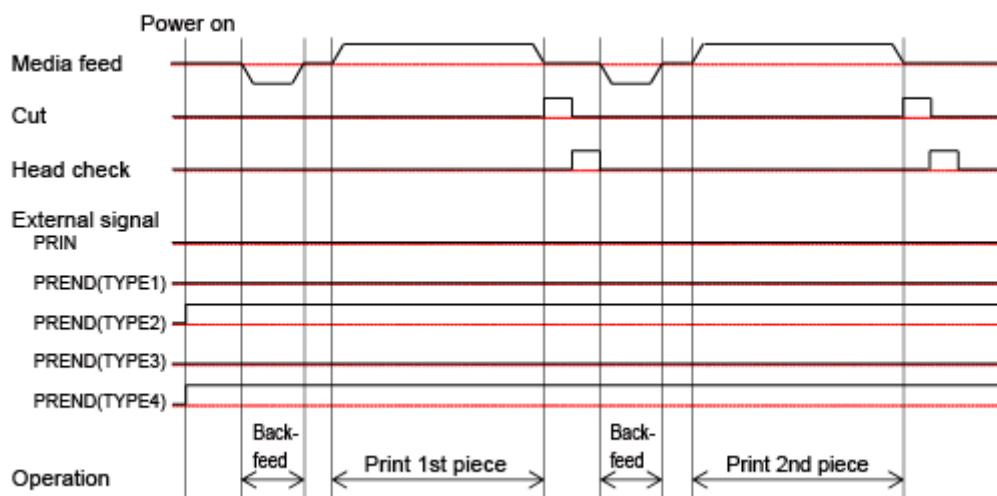

Operation 15: Cut & Print Mode Without Pulse Input (Head Check Disabled)

Operation

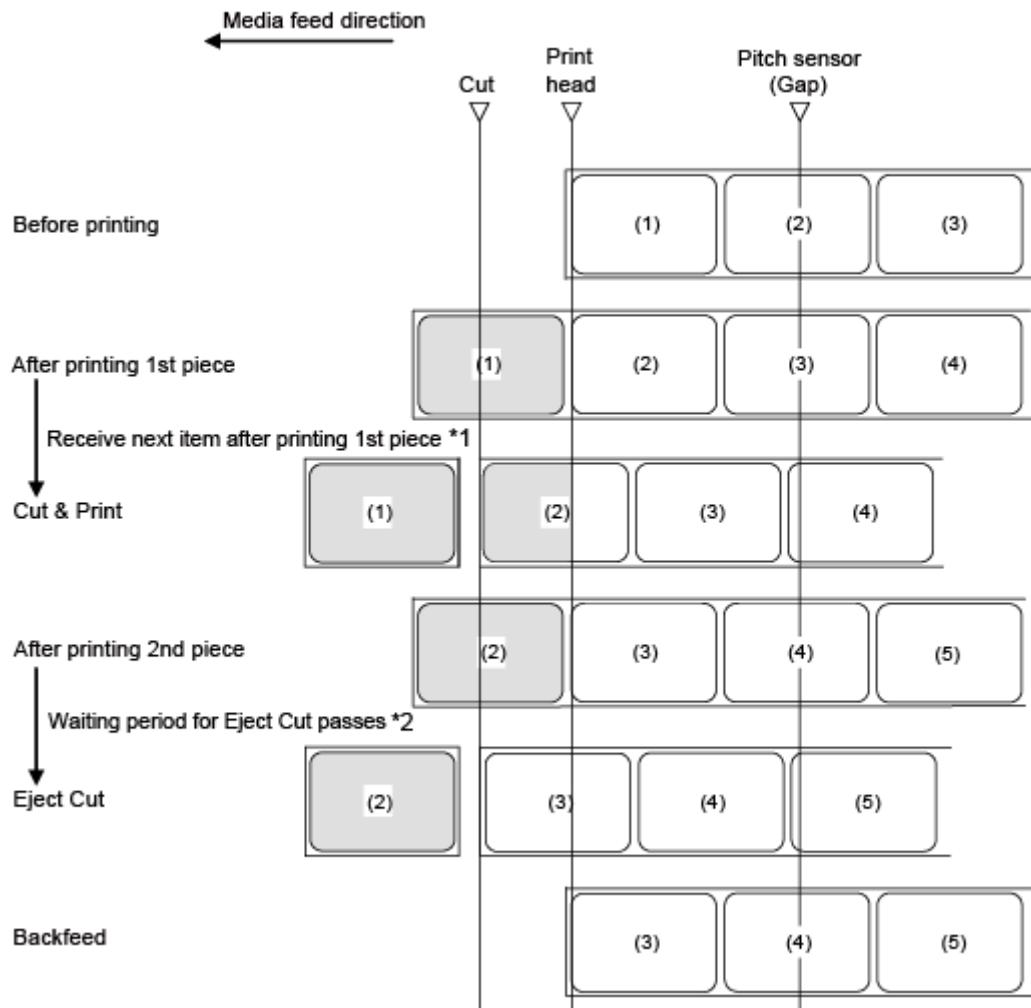


*1 After printing, if the next data is received, printing will be done and the media will be cut on the cut position.

*2 After printing, if the next data is not received and the waiting period for Eject Cut has passed, Eject Cut will be performed.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

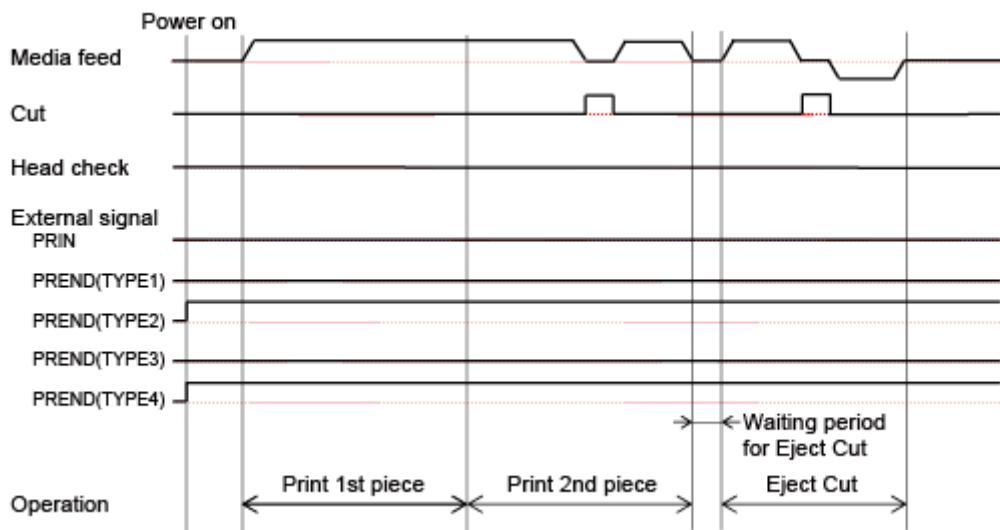

Operation 16: Cut & Print Mode Without Pulse Input (Head Check Enabled)

Operation

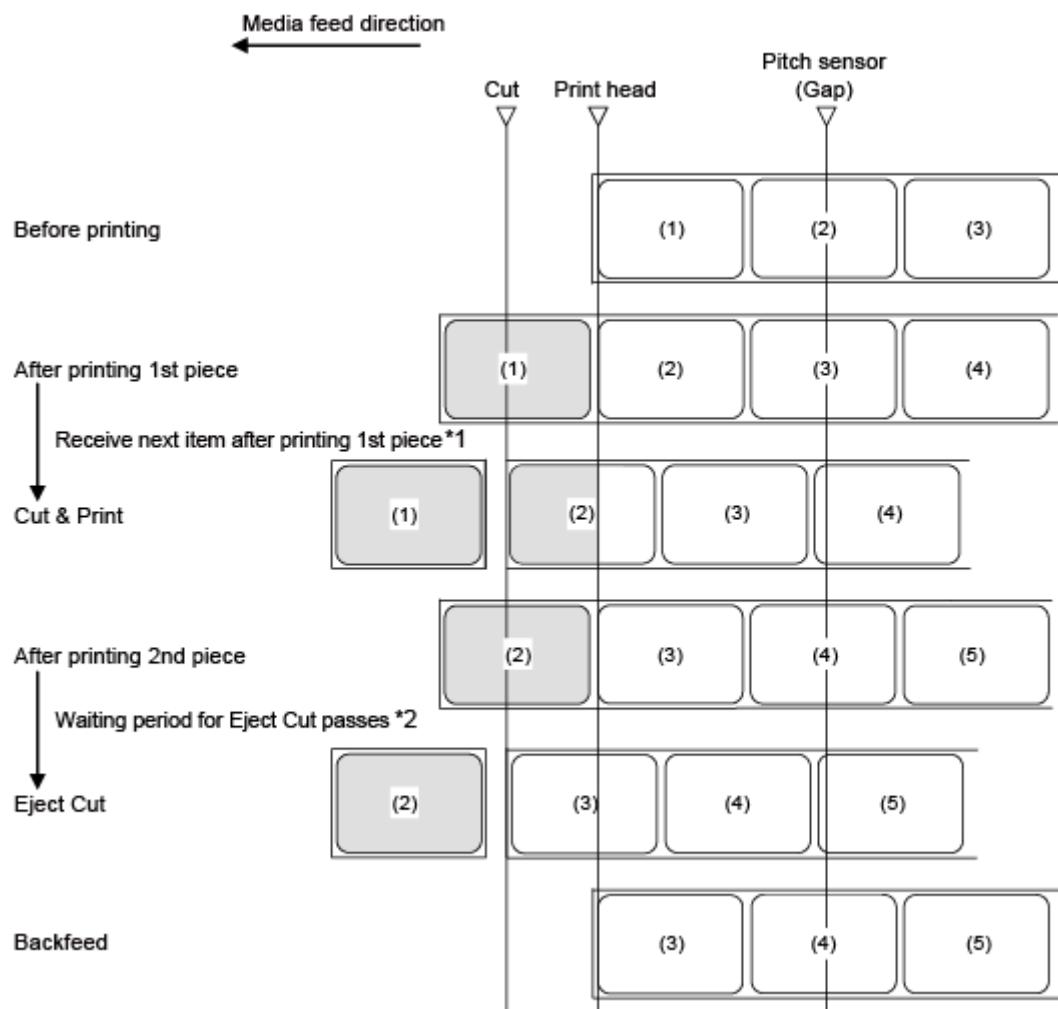


*1 After printing, if the next data is received, printing will be done and the media will be cut on the cut position.

*2 After printing, if the next data is not received and the waiting period for Eject Cut has passed, Eject Cut will be performed.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

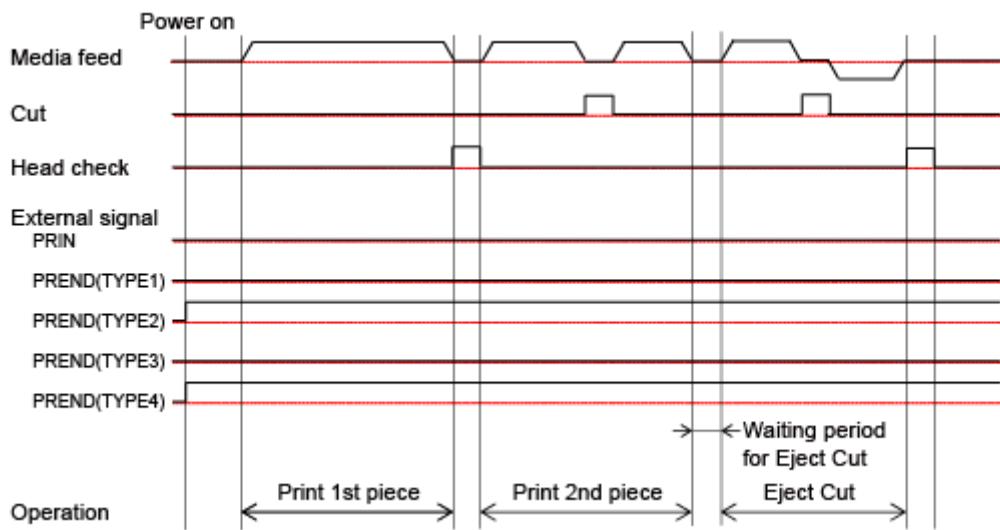

Operation 17: Cutter Mode, No Backfeed, and with Pulse Input (Head Check Disabled)

Operation

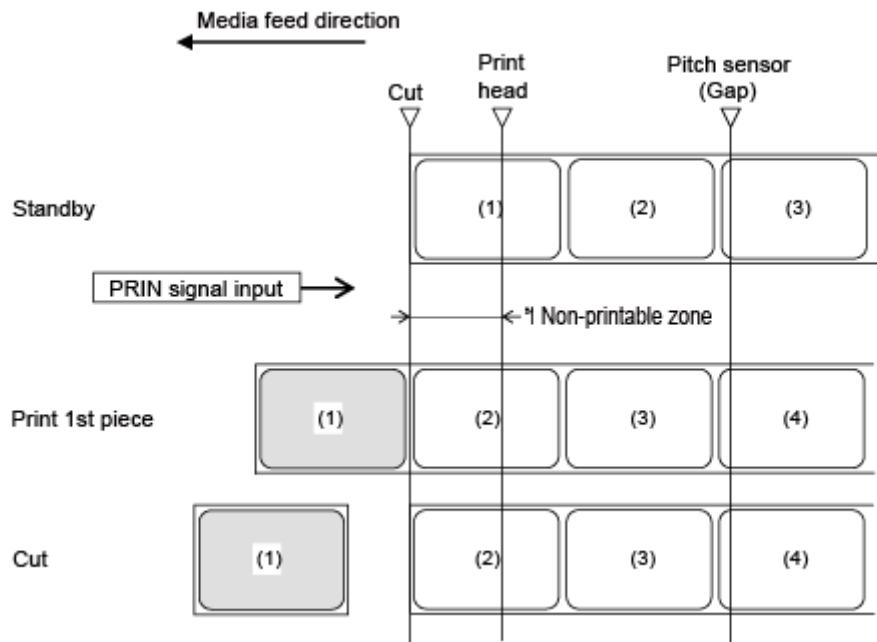


*1 Because backfeeding is not done, the media in this area is not printable.



- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

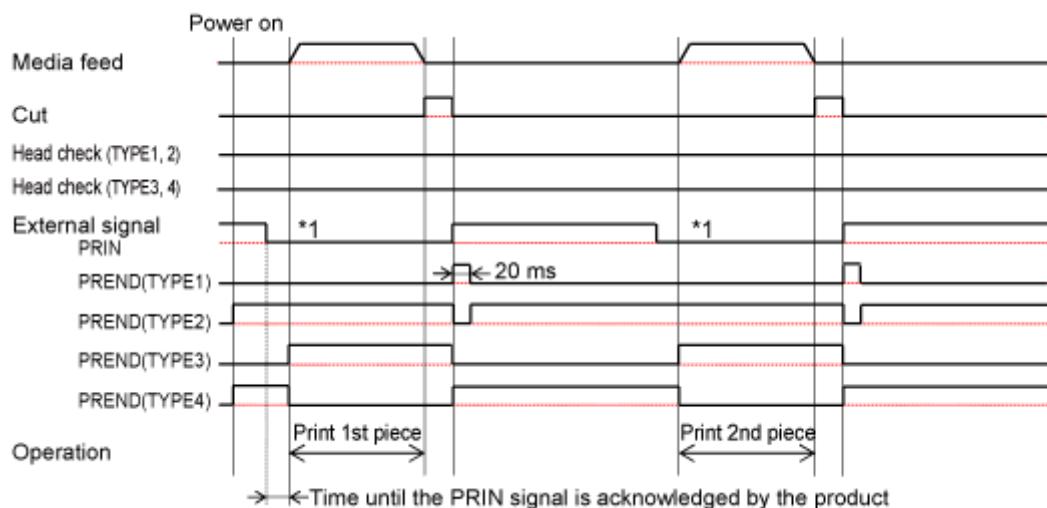

*1 Keep the PRIN signal until the PREND signal is outputted.

Operation 18: Cutter Mode, No Backfeed, and with Pulse Input (Head Check Enabled)

Operation

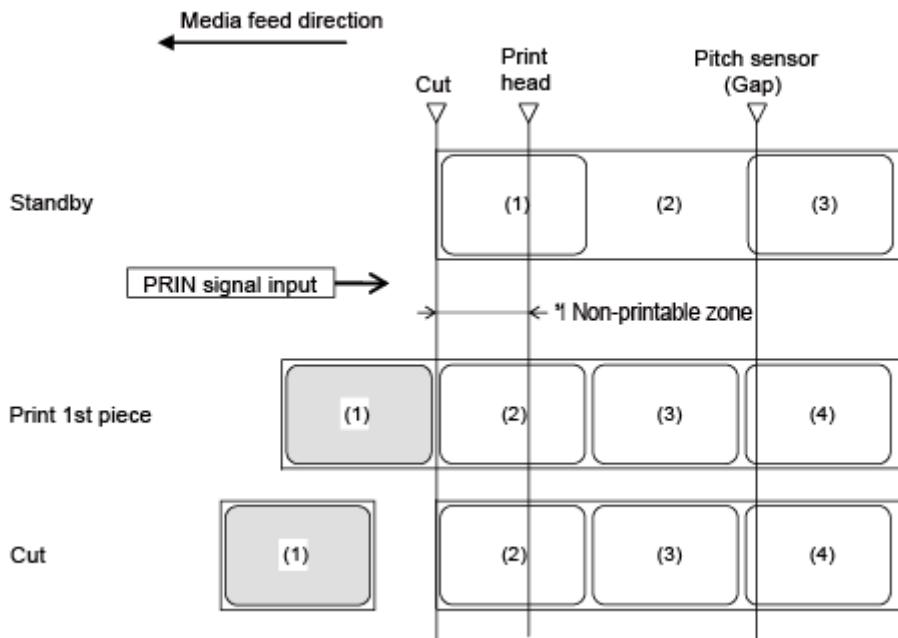


*1 Because backfeeding is not done, the media in this area is not printable.



- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

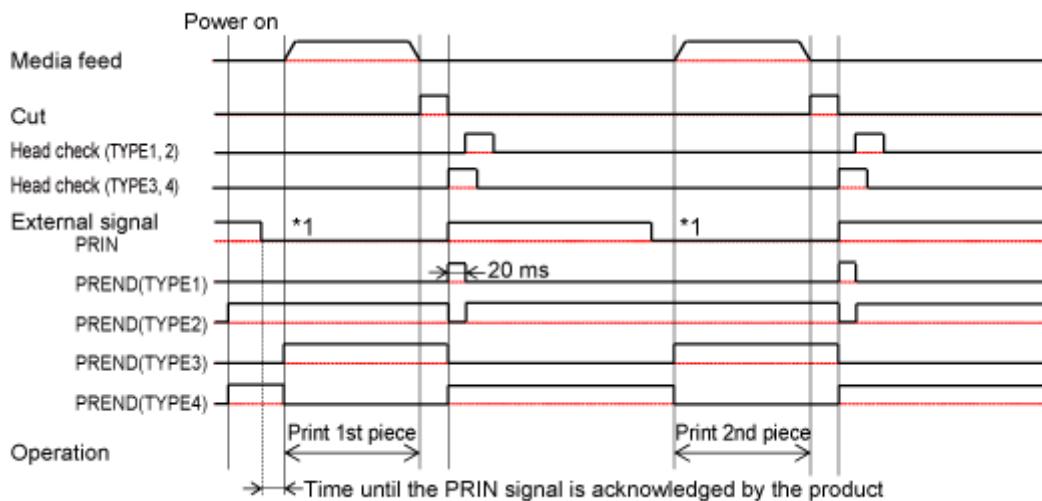

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 19: Cutter Mode, Backfeed After Printing, and with Pulse Input (Head Check Disabled)

Operation

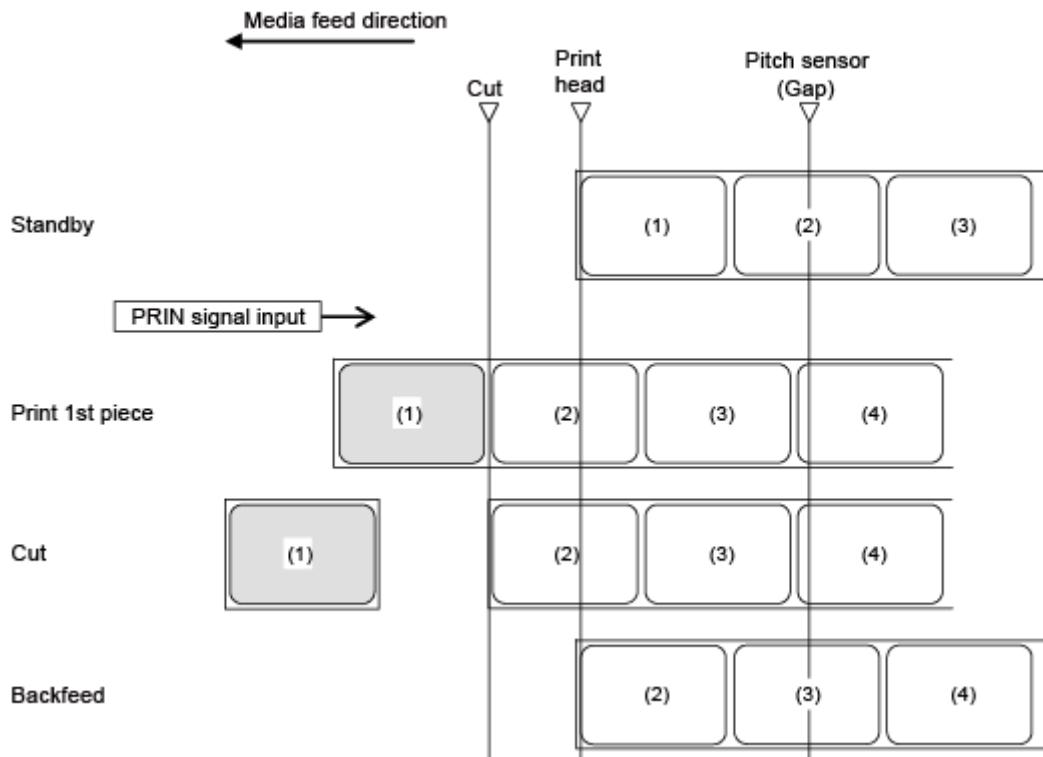

- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

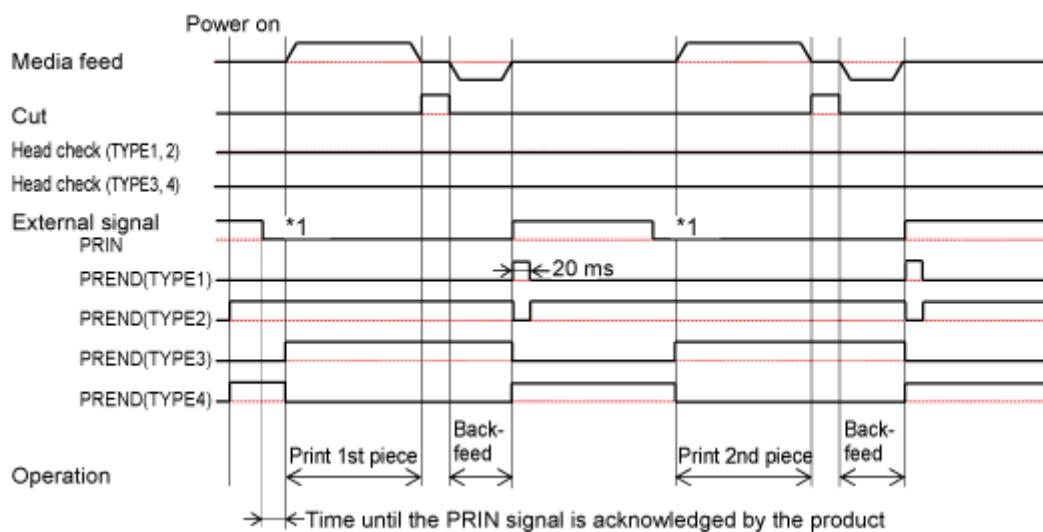

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 20: Cutter Mode, Backfeed After Printing, and with Pulse Input (Head Check Enabled)

Operation

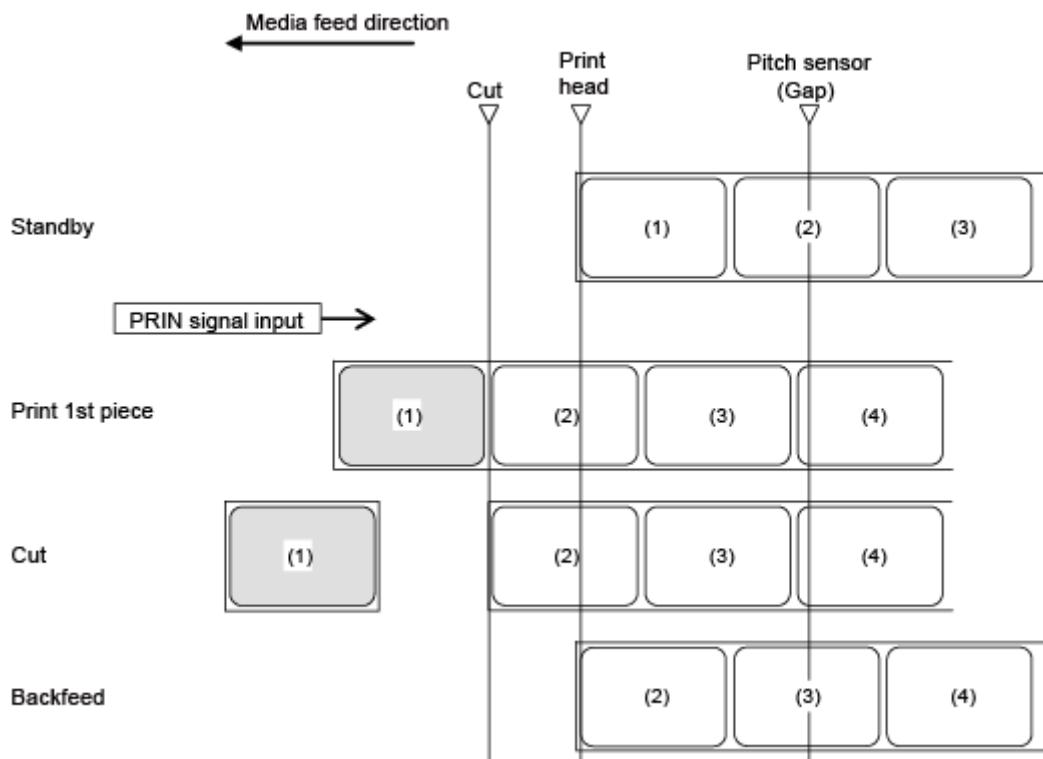

- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

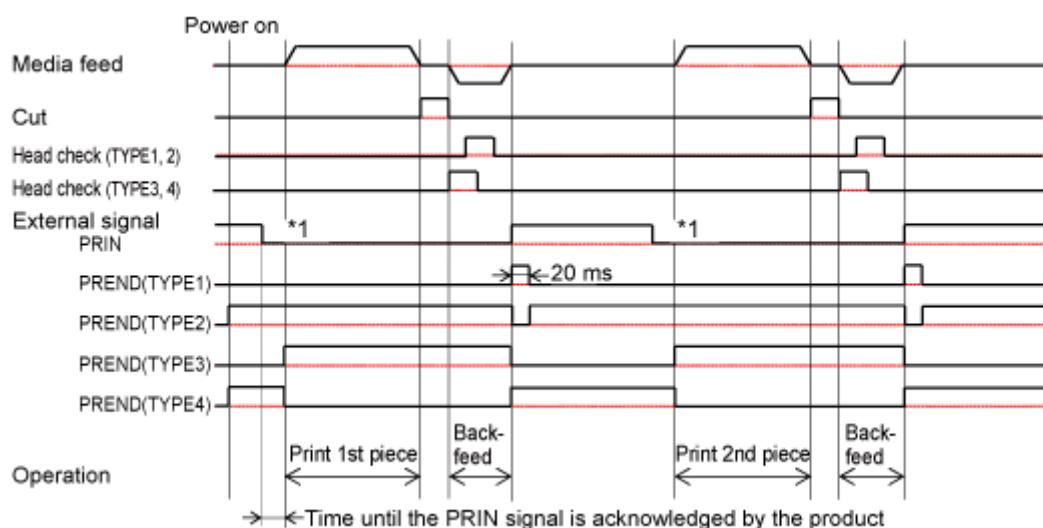

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 21: Cutter Mode, Backfeed Before Printing, and with Pulse Input (Head Check Disabled)

Operation

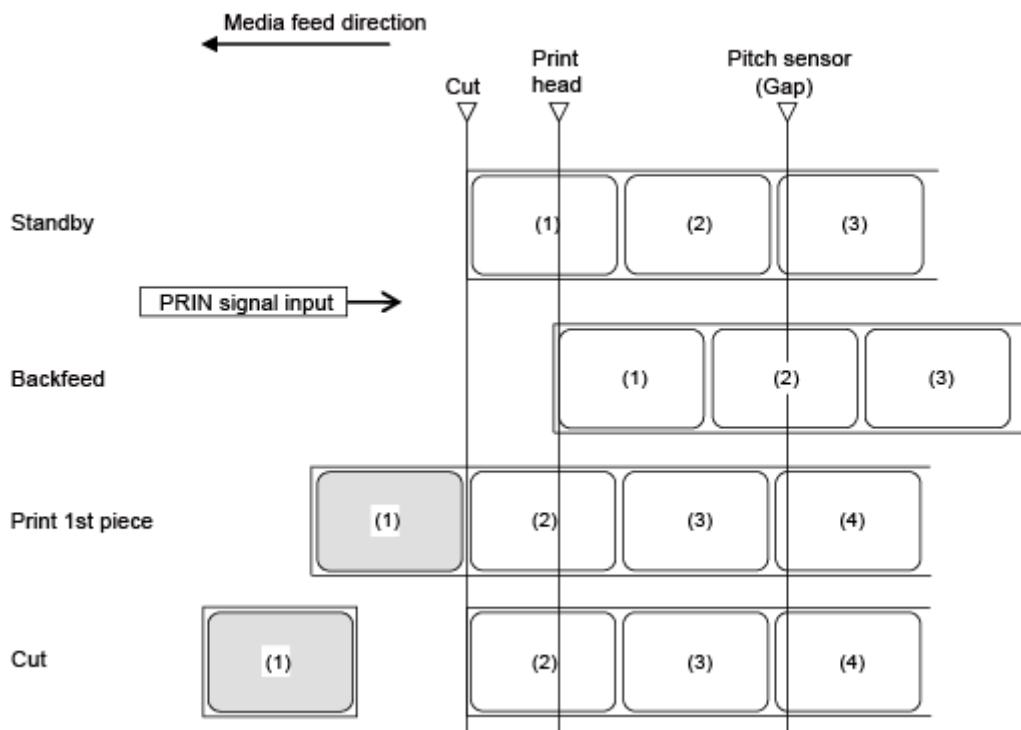

- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

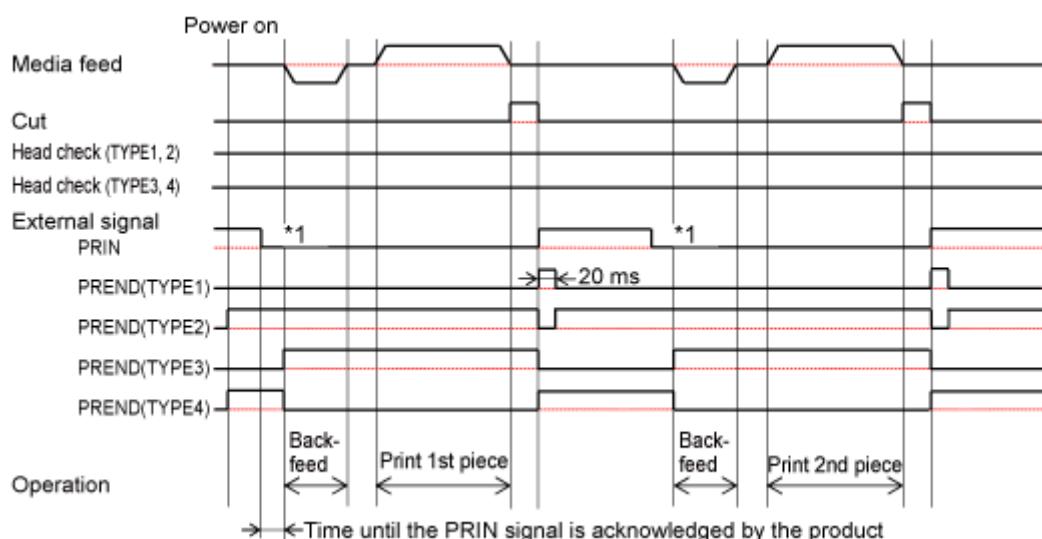

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 22: Cutter Mode, Backfeed Before Printing, and with Pulse Input (Head Check Enabled)

Operation

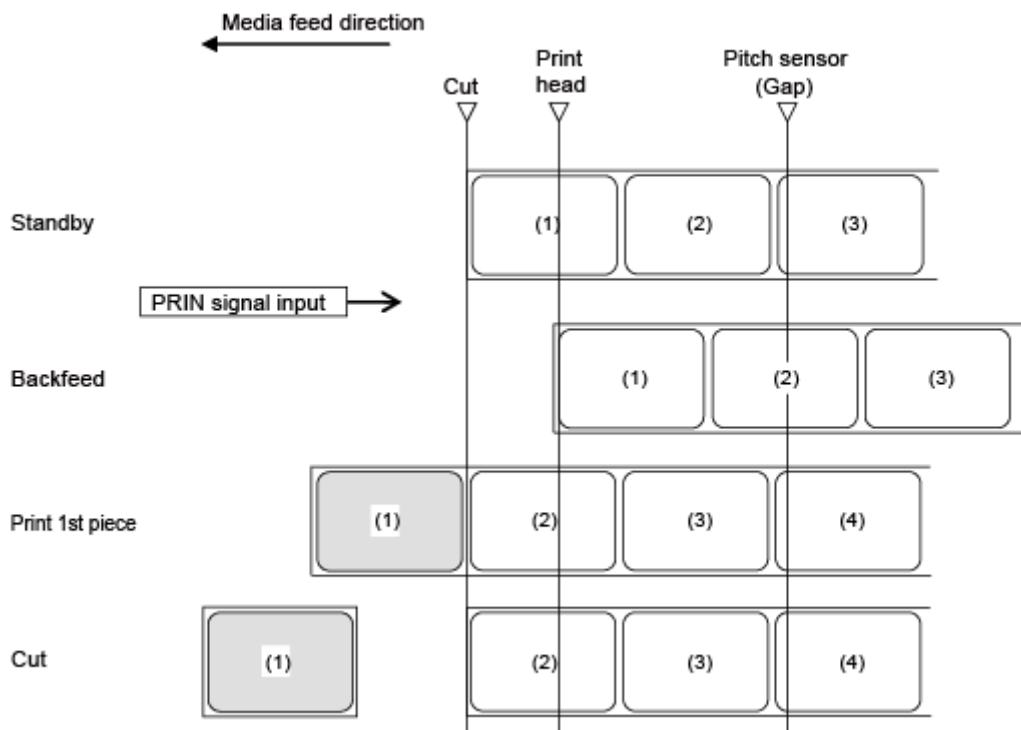

- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

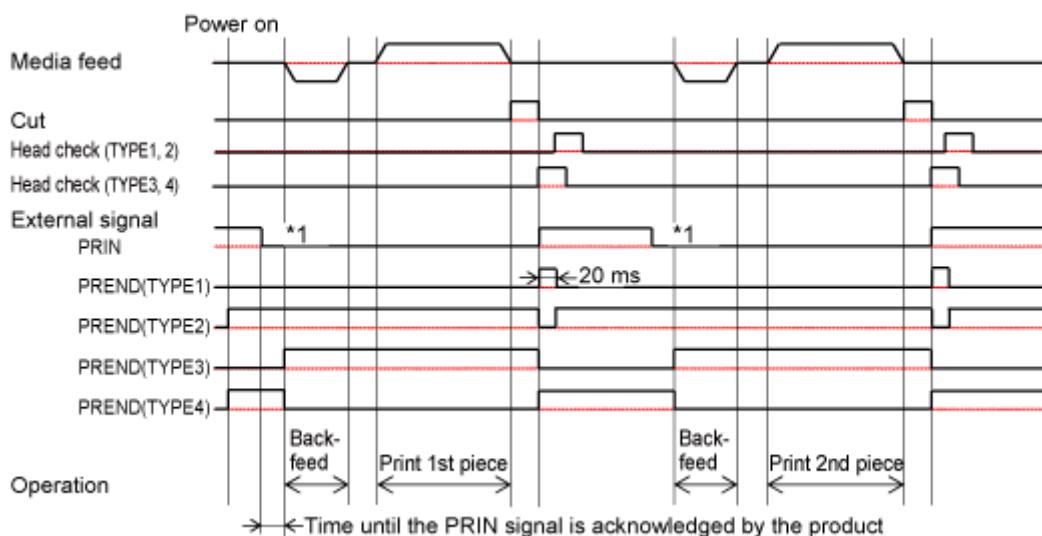


*1 Keep the PRIN signal until the PREND signal is outputted.

Operations in Dispenser Mode

Operation 23: Dispenser Mode, No Backfeed, and with Sensor Input (Head Check Disabled)

Operation

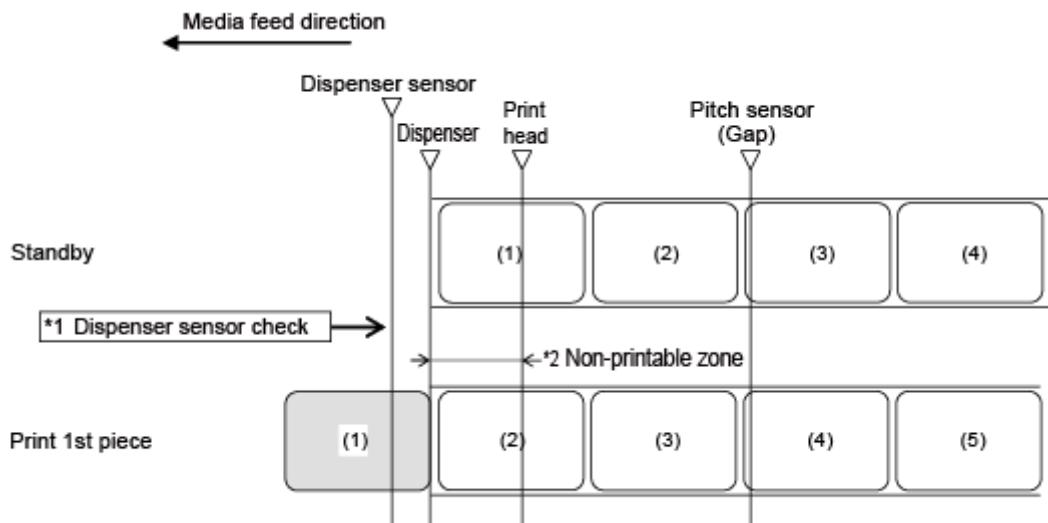


*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.

*2 Because backfeeding is not done, the media in this area is non-printable.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

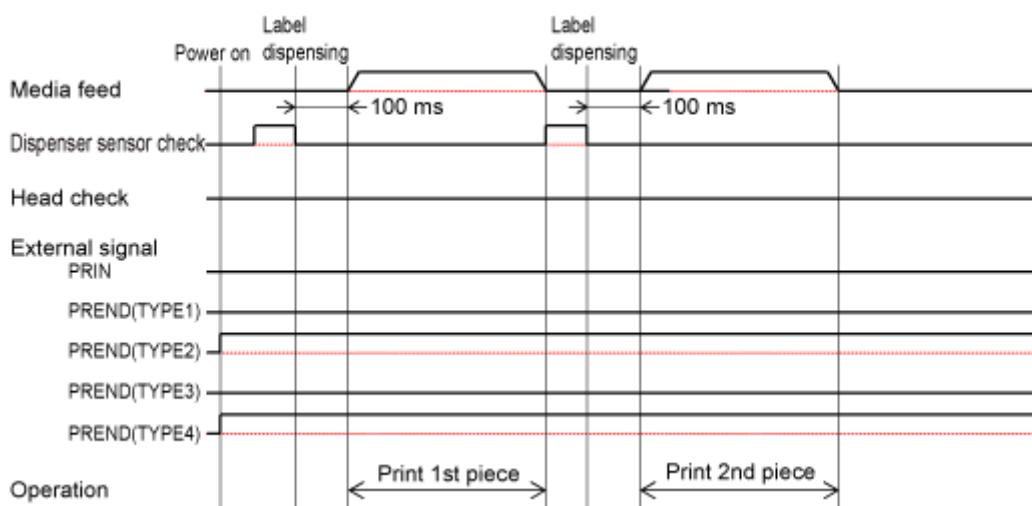

Operation 24: Dispenser Mode, No Backfeed, and with Sensor Input (Head Check Enabled)

Operation

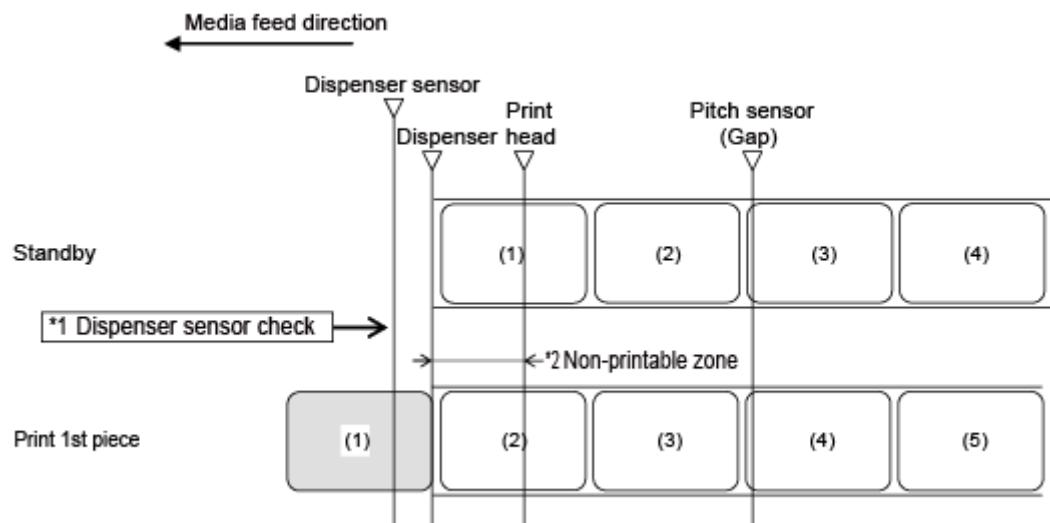


*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.

*2 Because backfeeding is not done, the media in this area is non-printable.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

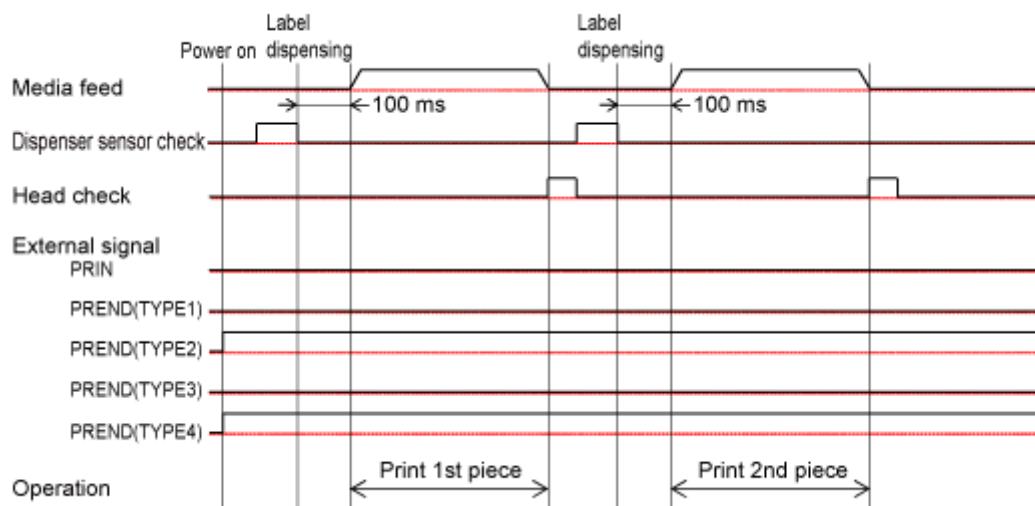

Operation 25: Dispenser Mode, Backfeed After Printing, and Without Pulse Input (Head Check Disabled)

Operation

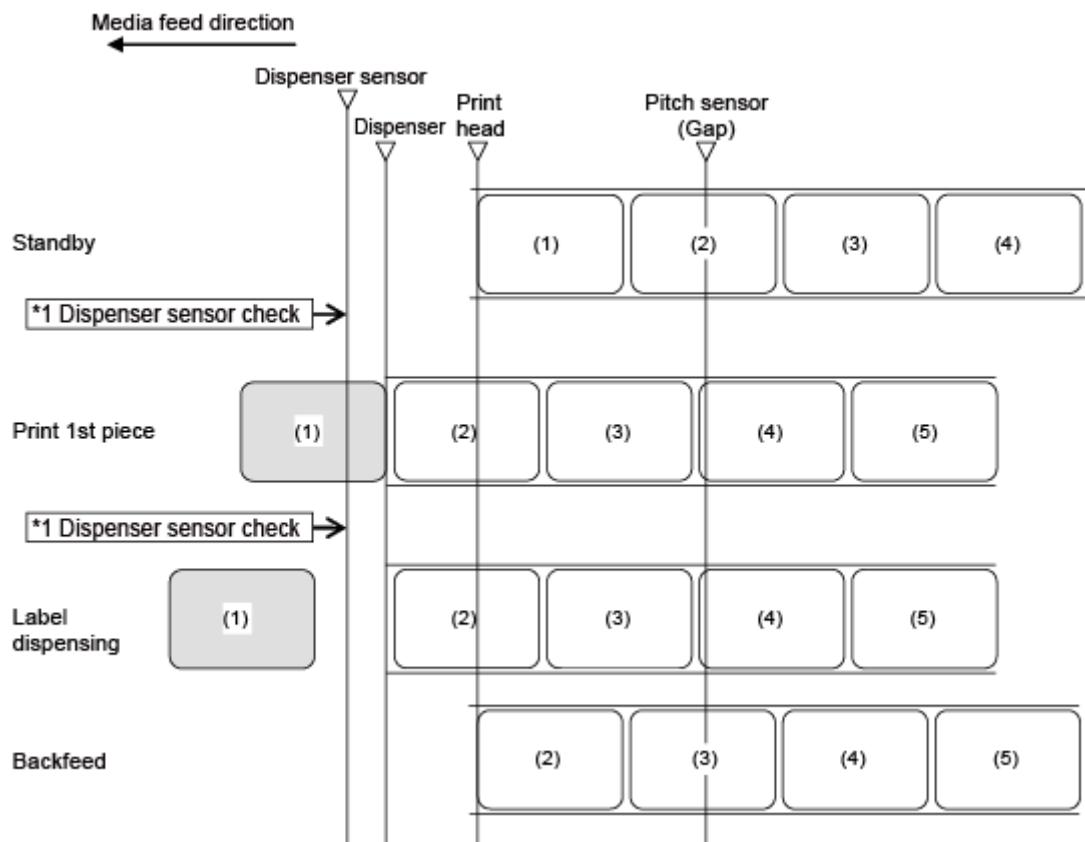


*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

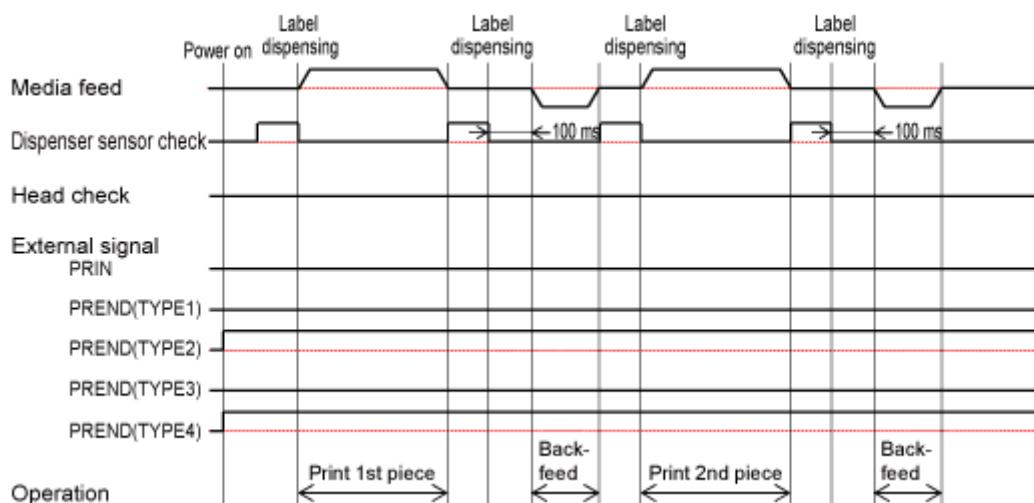

Operation 26: Dispenser Mode, Backfeed After Printing, and Without Pulse Input (Head Check Enabled)

Operation

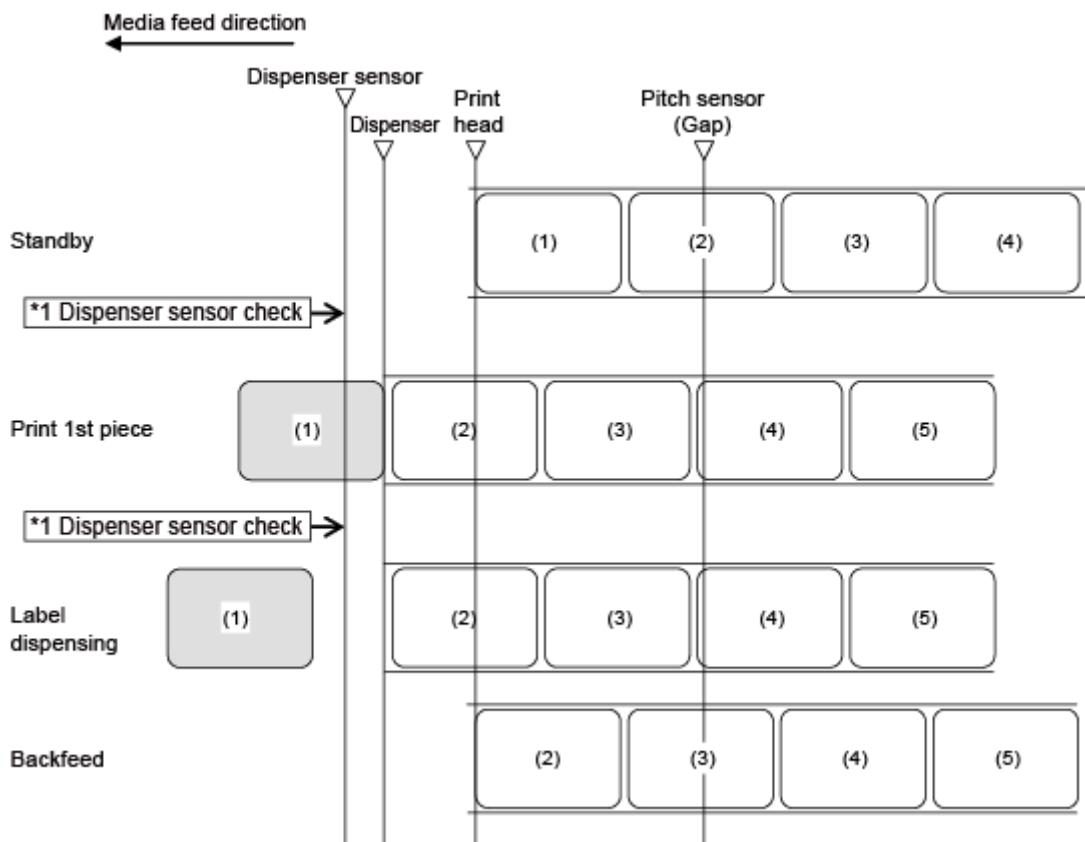


*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

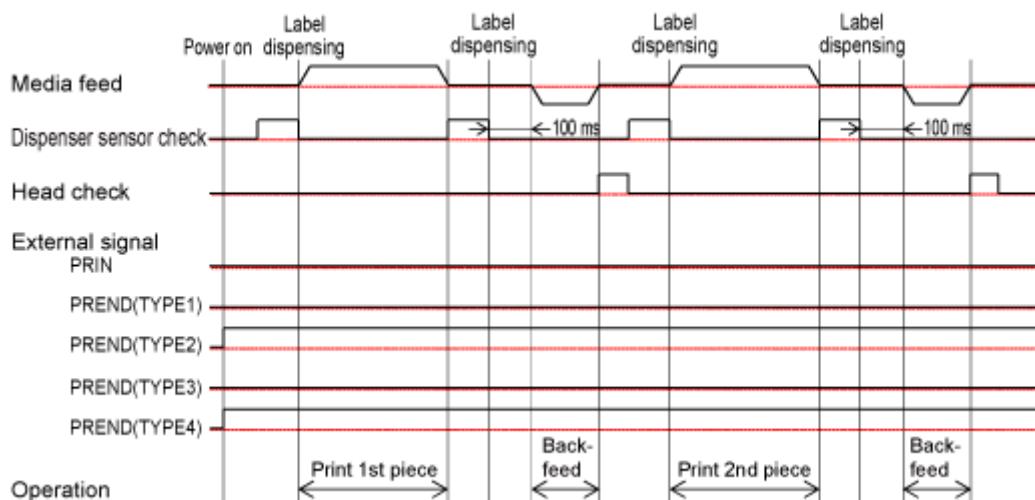

Operation 27: Dispenser Mode, Backfeed Before Printing, and Without Pulse Input (Head Check Disabled)

Operation

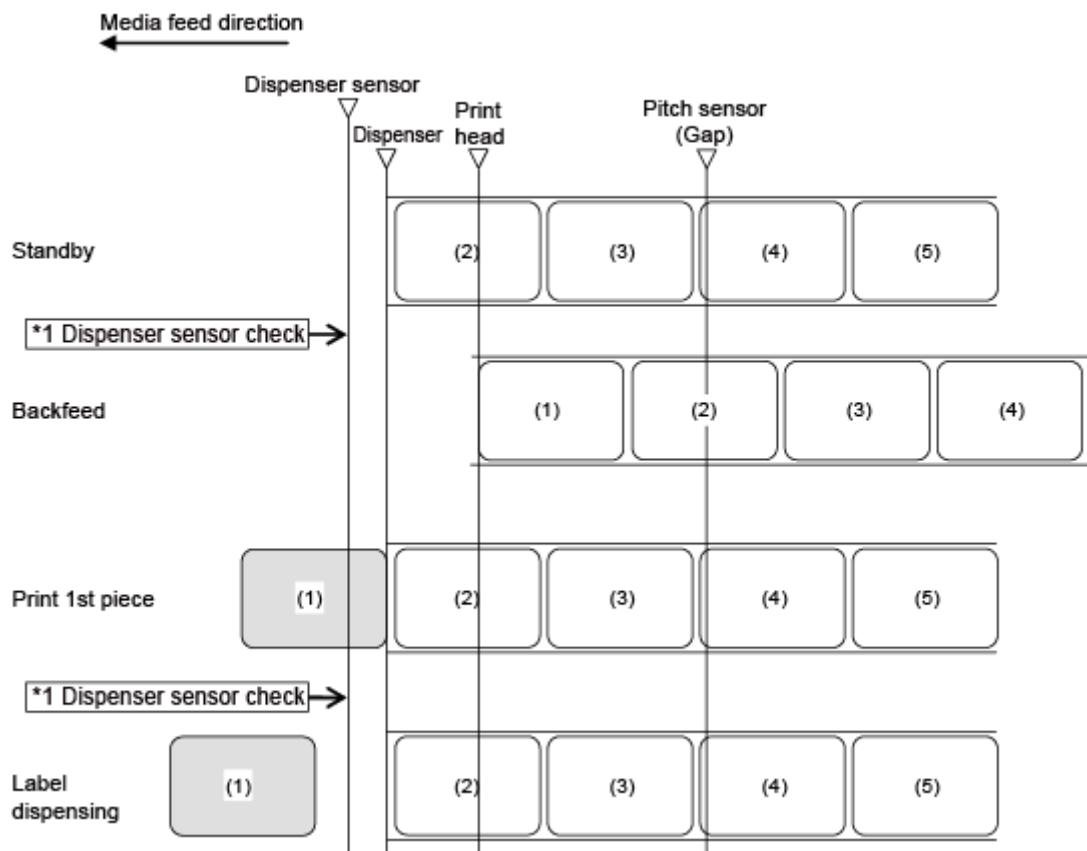


*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

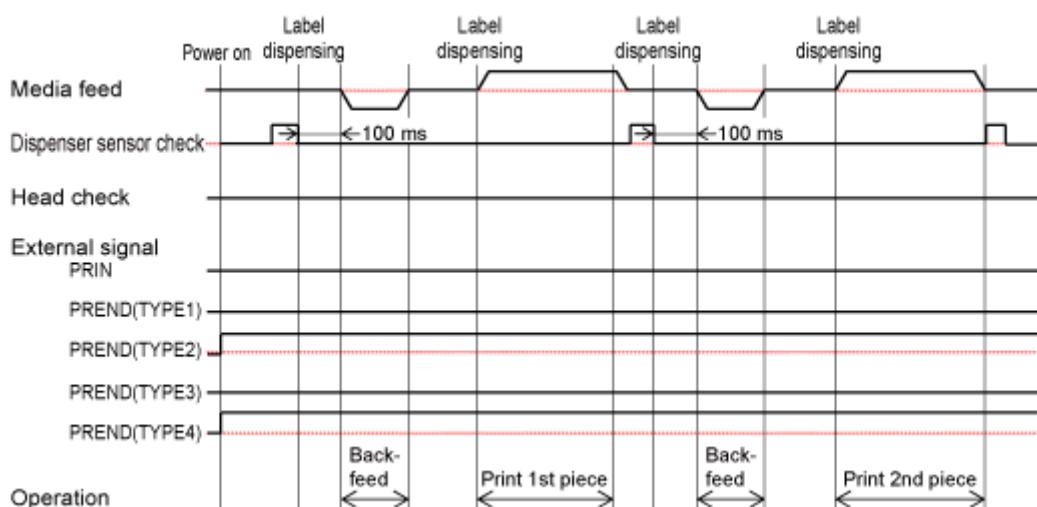

Operation 28: Dispenser Mode, Backfeed Before Printing, and Without Pulse Input (Head Check Enabled)

Operation

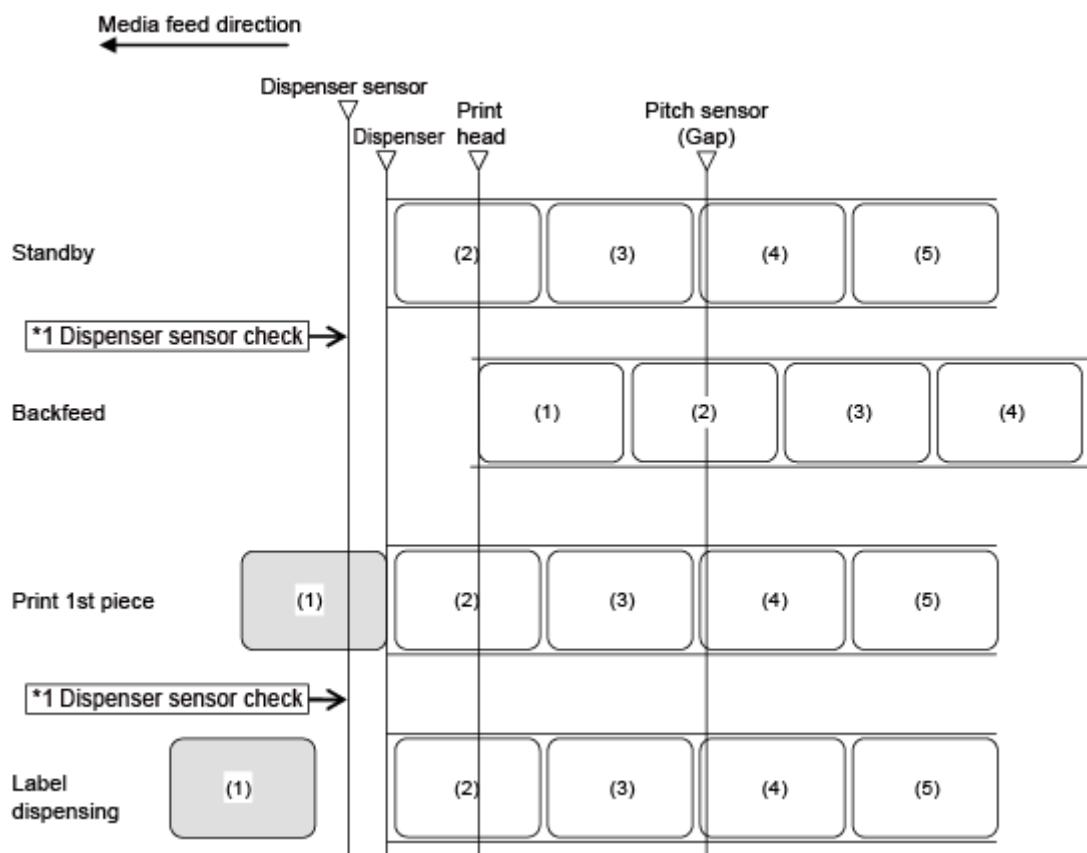


*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.




- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

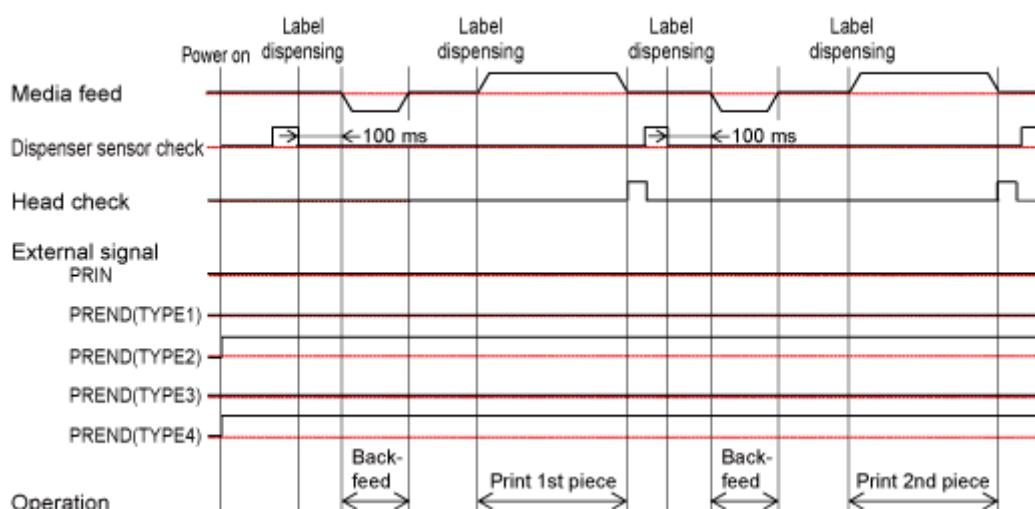

Operation 29: Dispenser Mode, No Backfeed, and with Pulse Input (Head Check Disabled)

Operation

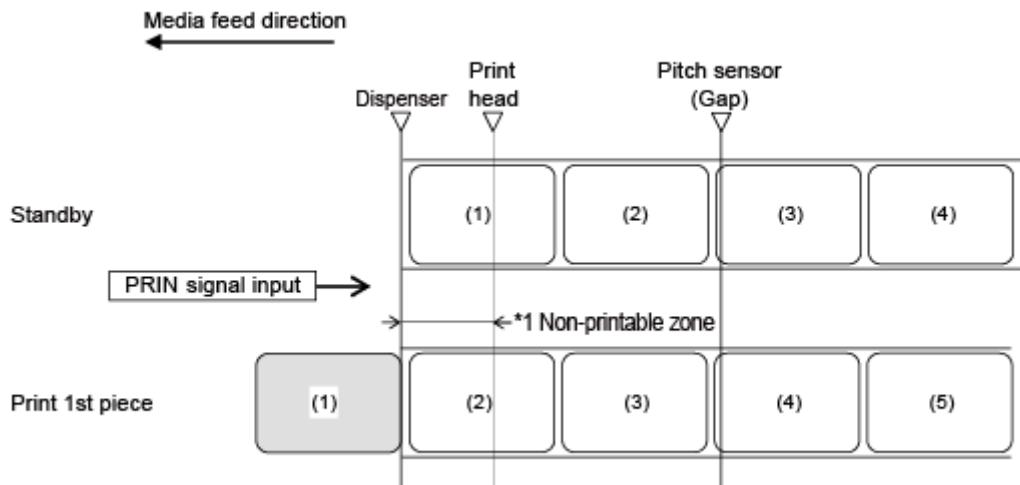


*1 Because backfeeding is not done, the media in this area is non-printable.



- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

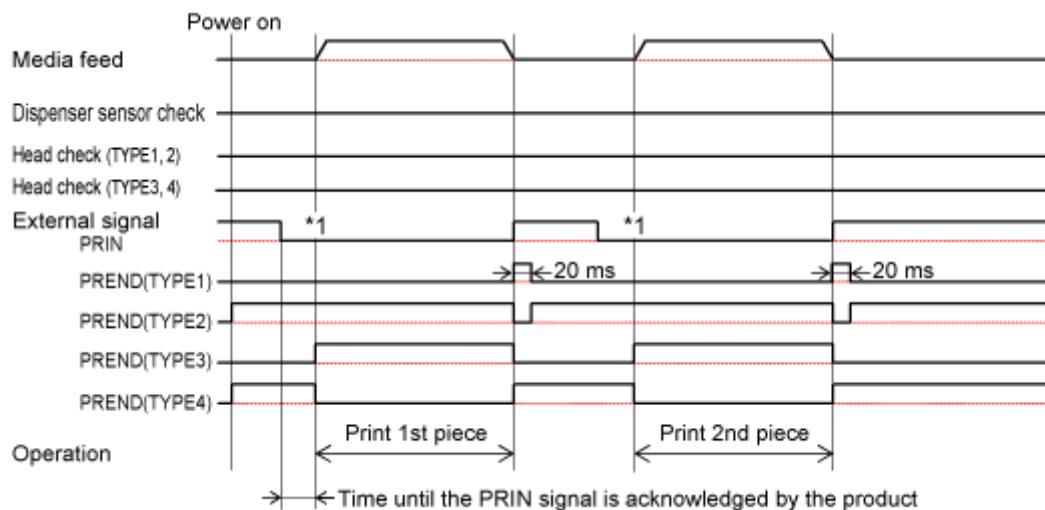

*1 Keep the PRIN signal until the PREND signal is outputted.

Operation 30: Dispenser Mode, No Backfeed, and with Pulse Input (Head Check Enabled)

Operation

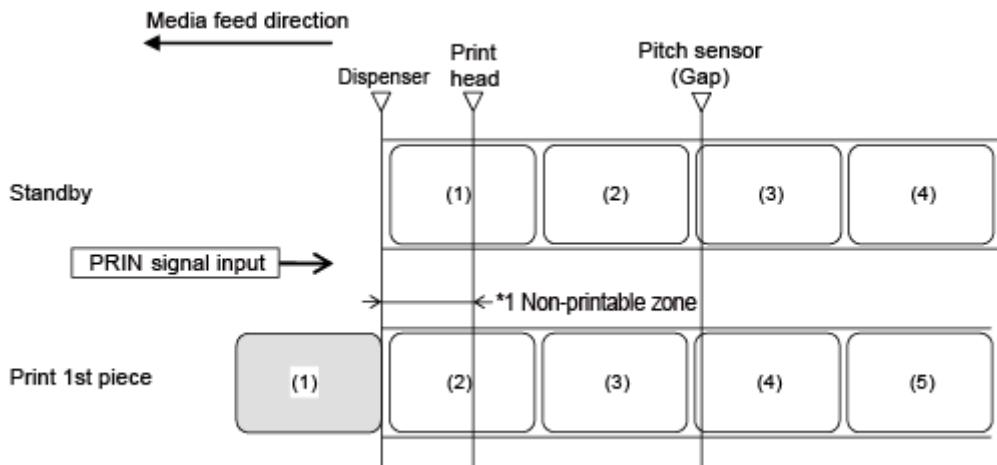


*1 Because backfeeding is not done, the media in this area is non-printable.



- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

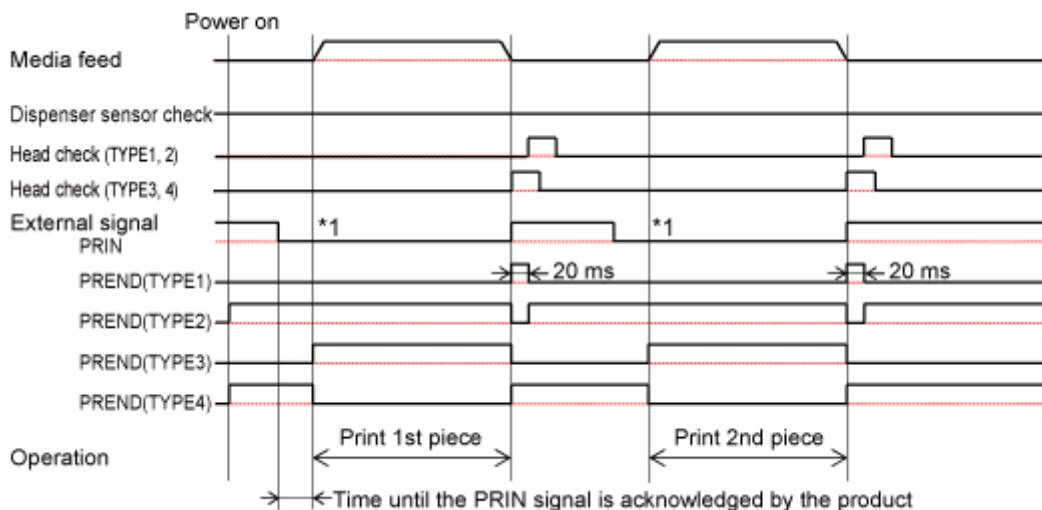

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 31: Dispenser Mode, Backfeed After Printing, and with Pulse Input (Head Check Disabled)

Operation

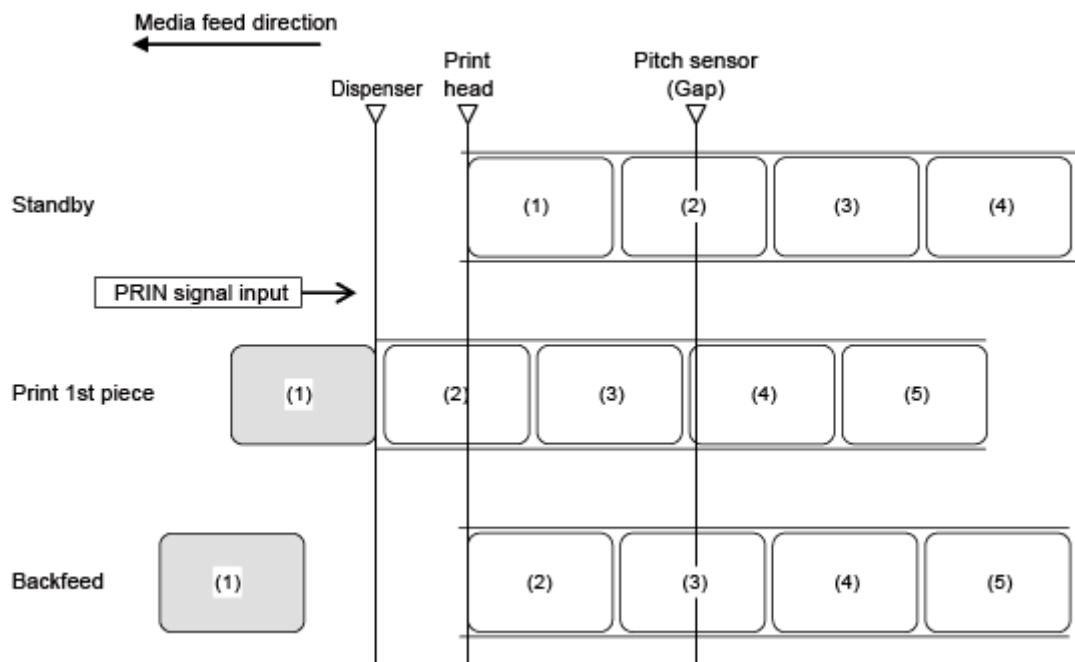


- The figure above shows the reference position when the Gap sensor is used.

Timing Chart

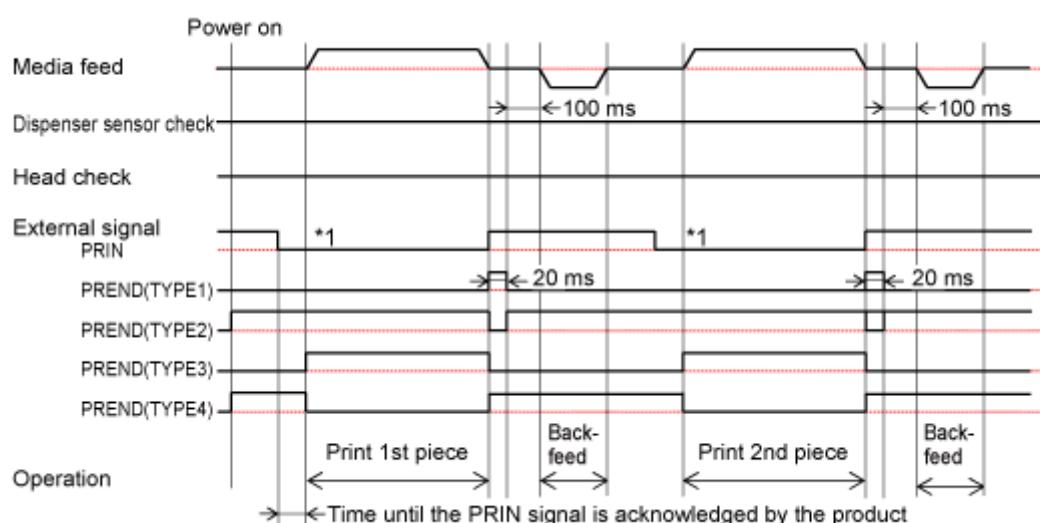


Operation 32: Dispenser Mode, Backfeed After Printing, and with Pulse Input (Head Check Enabled)

Operation

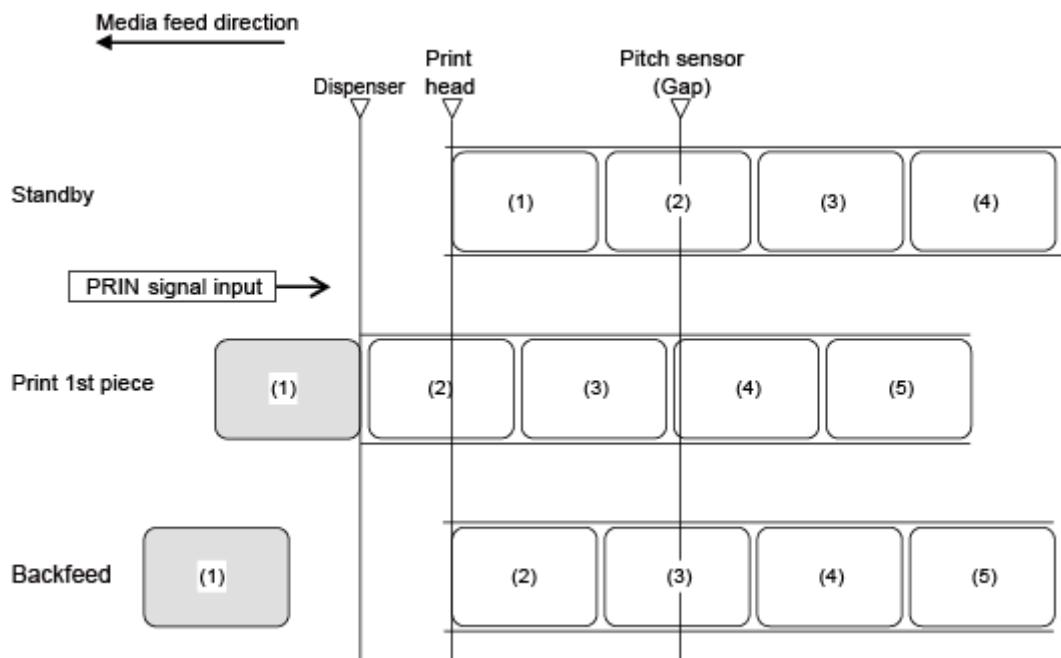

- The figure above shows the reference position when the Gap sensor is used.


Timing Chart

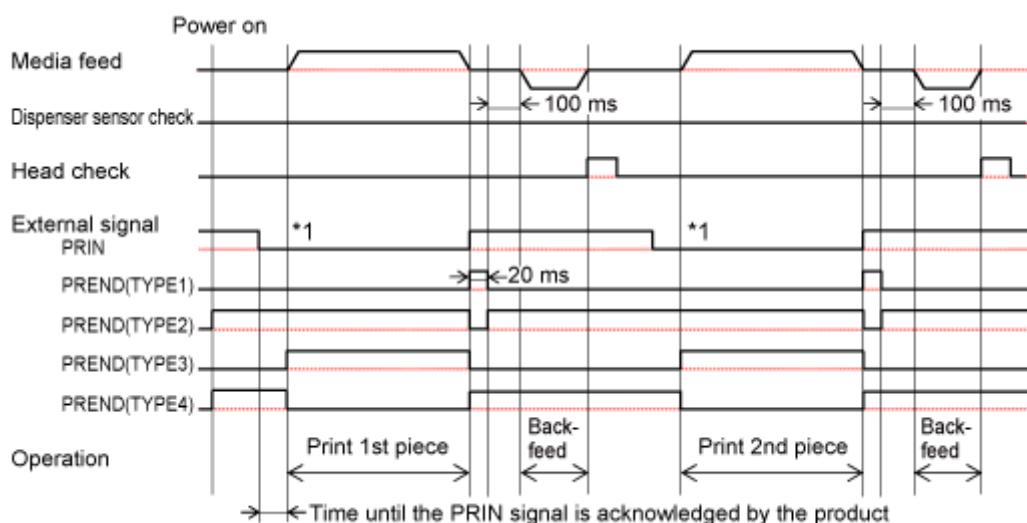


*1 Keep the PRIN signal until the PREND signal is outputted.

Operation 33: Dispenser Mode, Backfeed Before Printing, and with Pulse Input (Head Check Disabled)

Operation

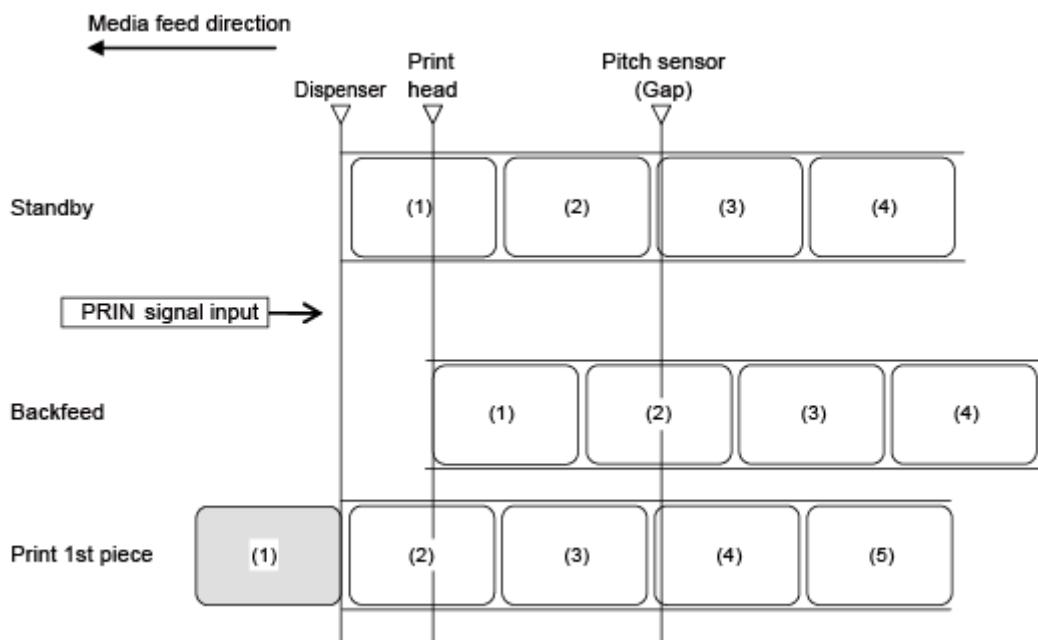


Timing Chart

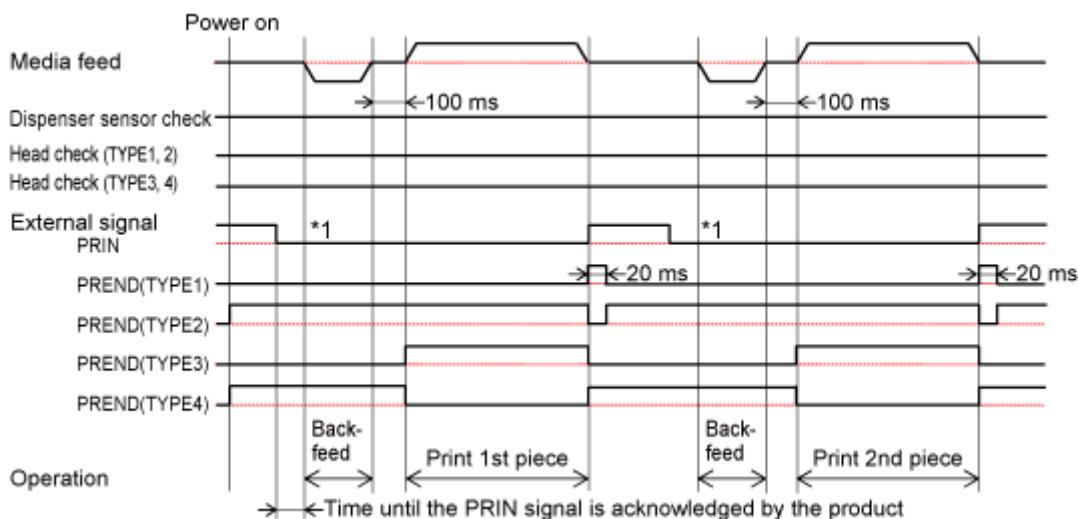


*1 Keep the PRIN signal until the PREND signal is outputted.

Operation 34: Dispenser Mode, Backfeed Before Printing, and with Pulse Input (Head Check Enabled)

Operation

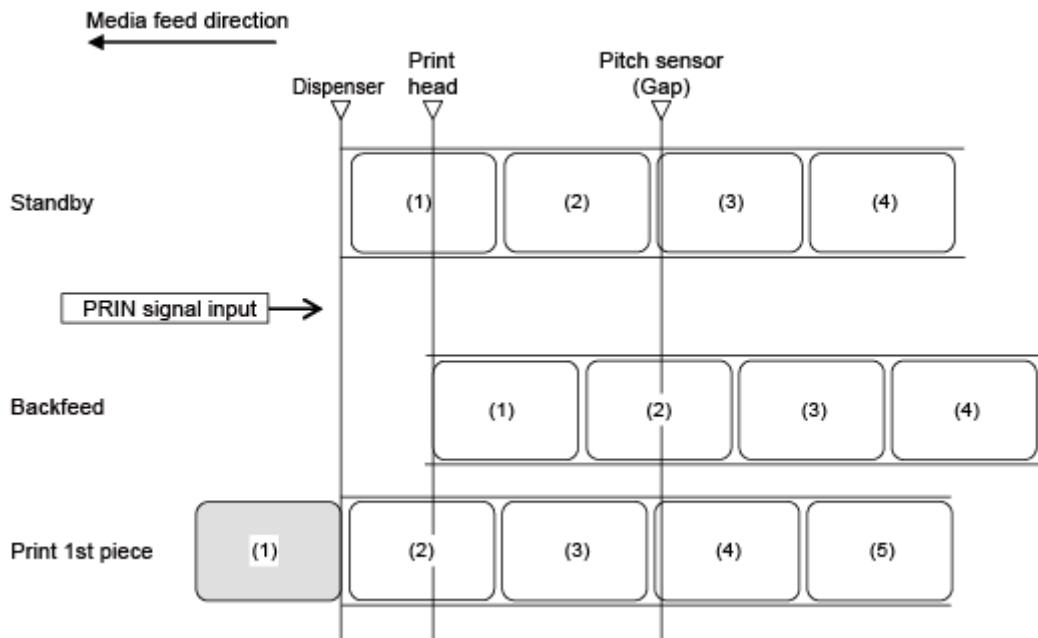


Timing Chart

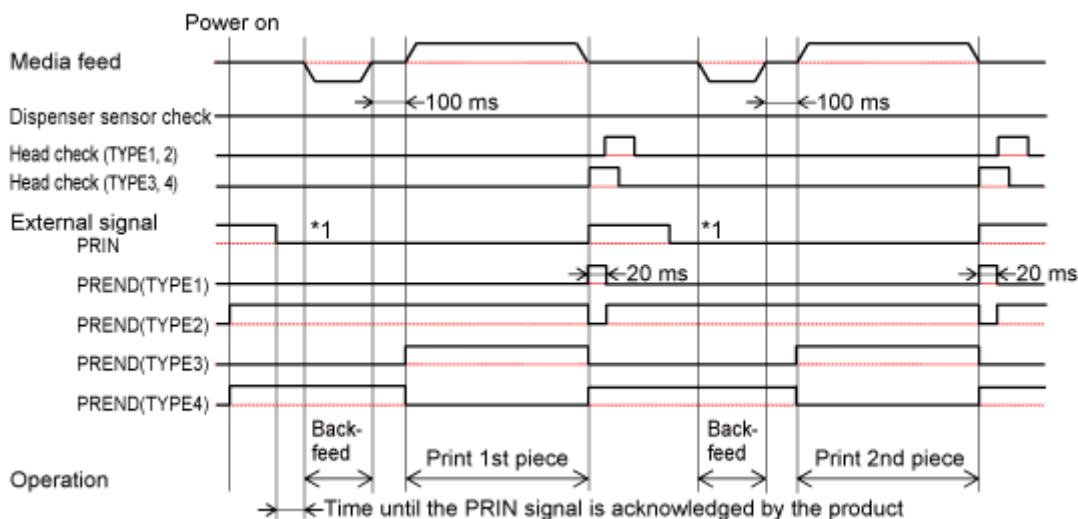

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 35: Dispenser Mode, Backfeed After Printing, with Pulse Input, and with the Dispenser Completion Signal (Head Check Disabled)

Operation

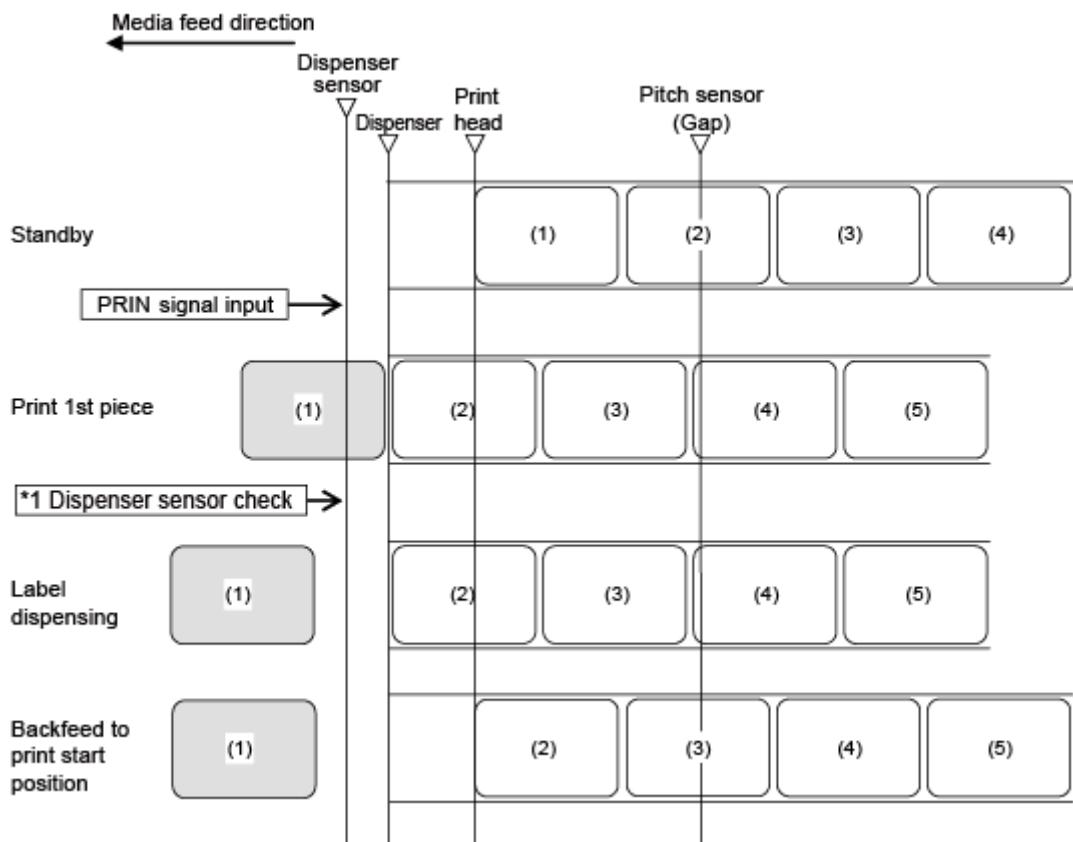

*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.

Timing Chart

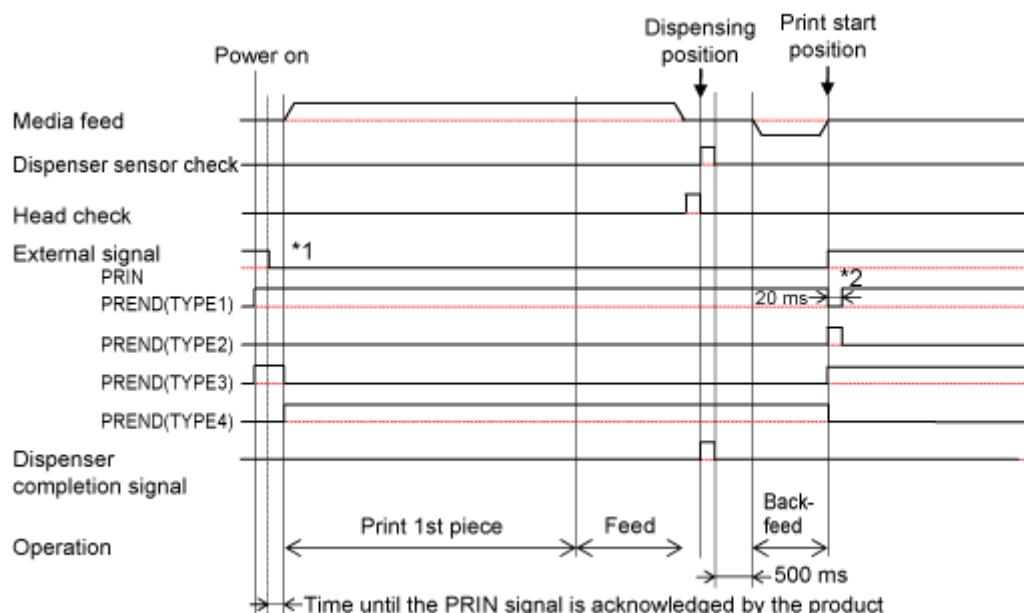


*1 Keep the PRIN signal until the PREND signal is outputted.

*2 After backfeed, the PREND signal is outputted.


Operation 36: Dispenser Mode, Backfeed After Printing, with Pulse Input, and with the Dispenser Completion Signal (Head Check Enabled)

Operation

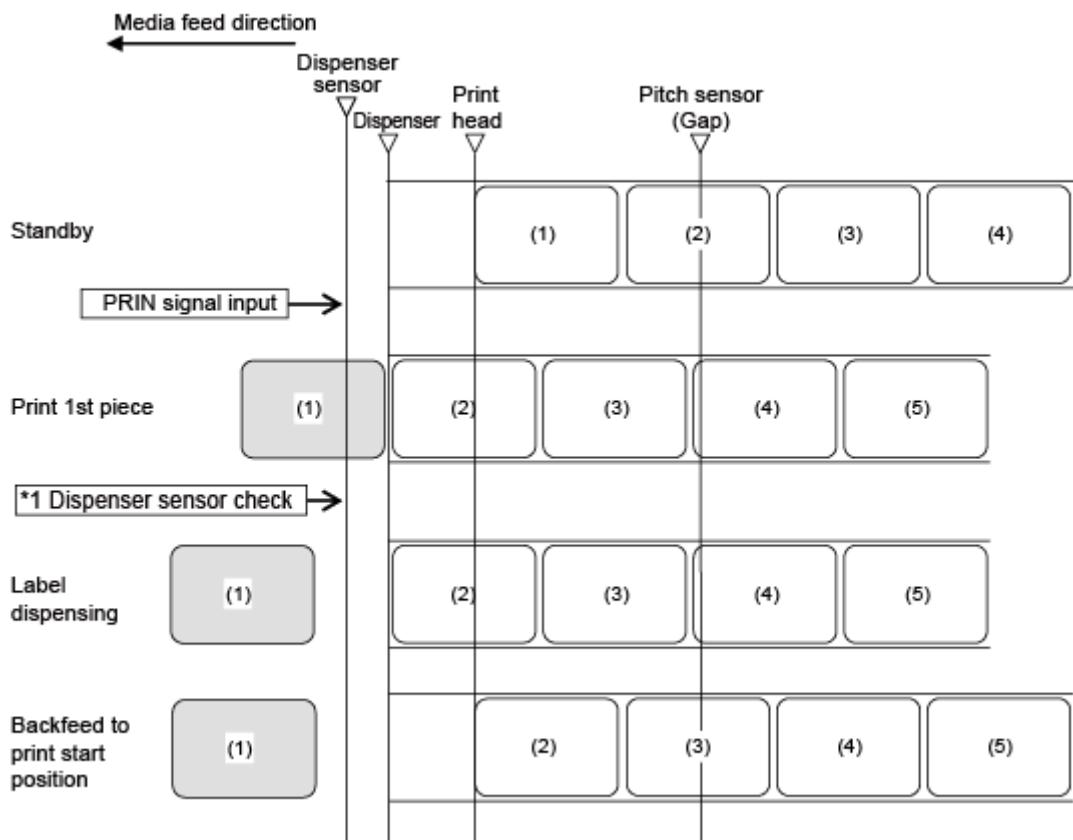

*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.

Timing Chart

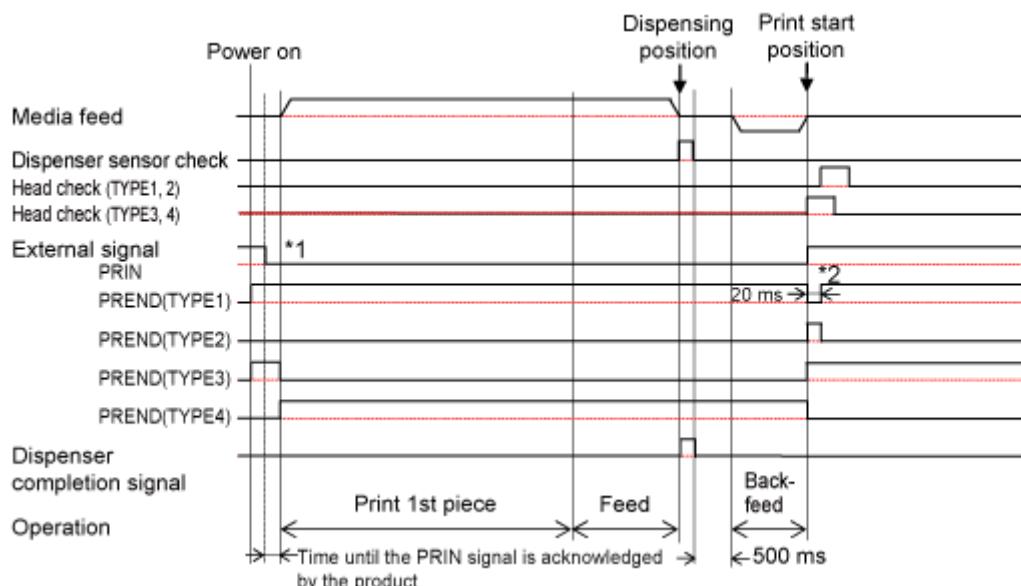


*1 Keep the PRIN signal until the PREND signal is outputted.

*2 After backfeed, the PREND signal is outputted.


Operation 37: Dispenser Mode, Backfeed Before Printing, with Pulse Input, and with the Dispenser Completion Signal (Head Check Disabled)

Operation

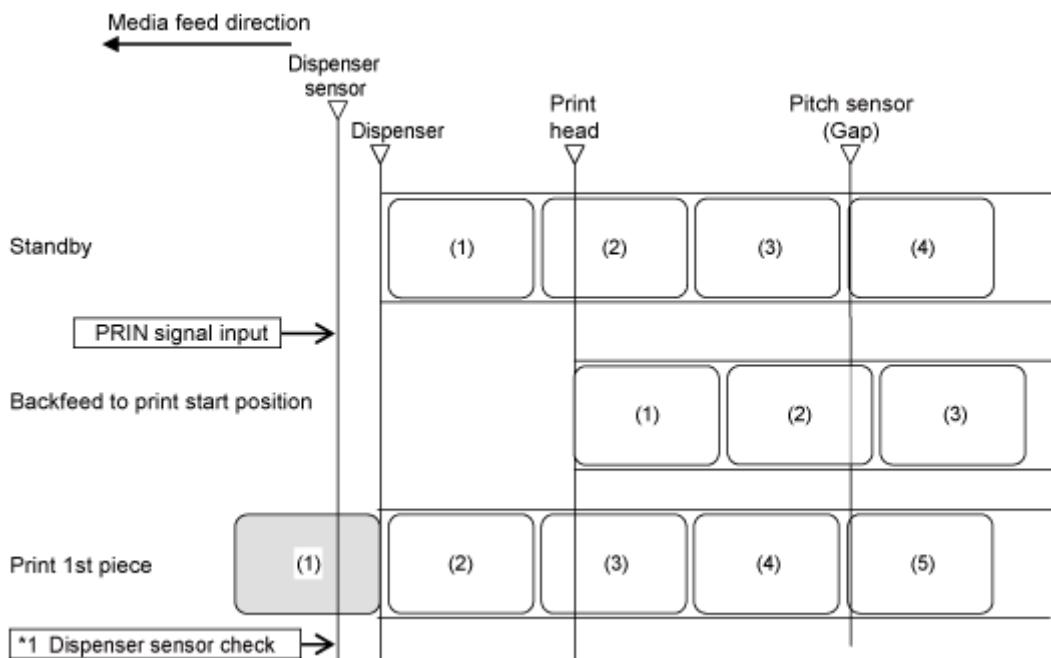

*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.


Timing Chart

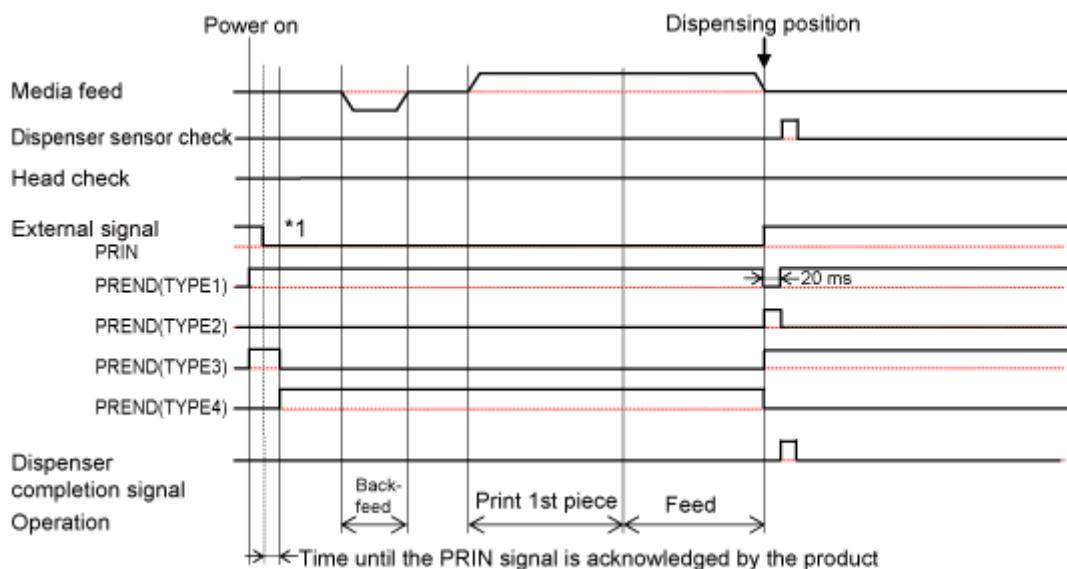

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 38: Dispenser Mode, Backfeed Before Printing, with Pulse Input, and with the Dispenser Completion Signal (Head Check Enabled)

Operation

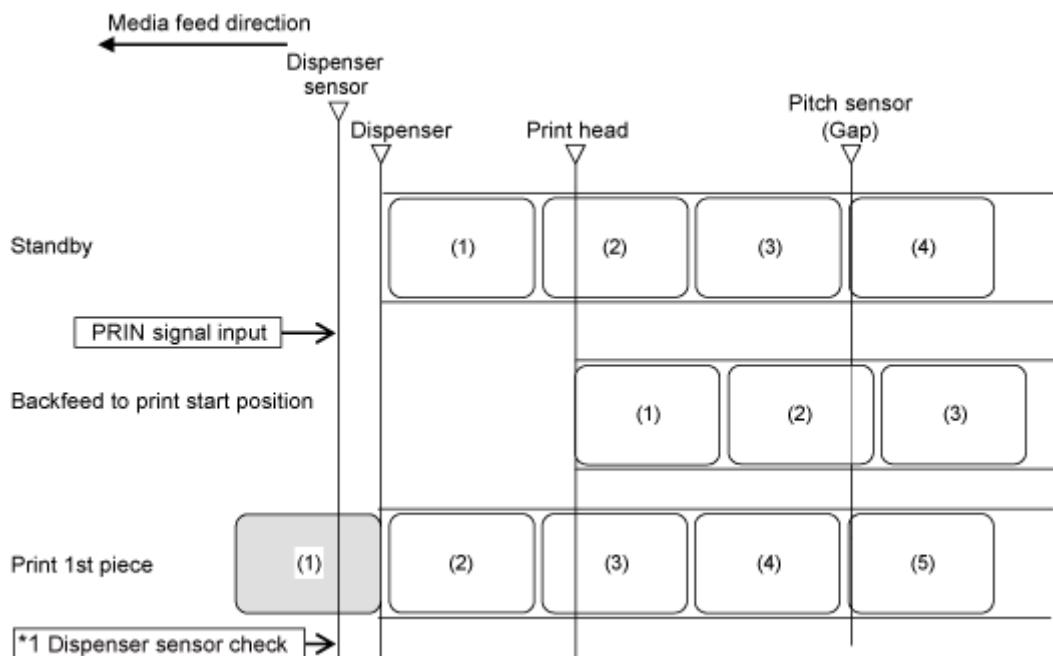

*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.

Timing Chart

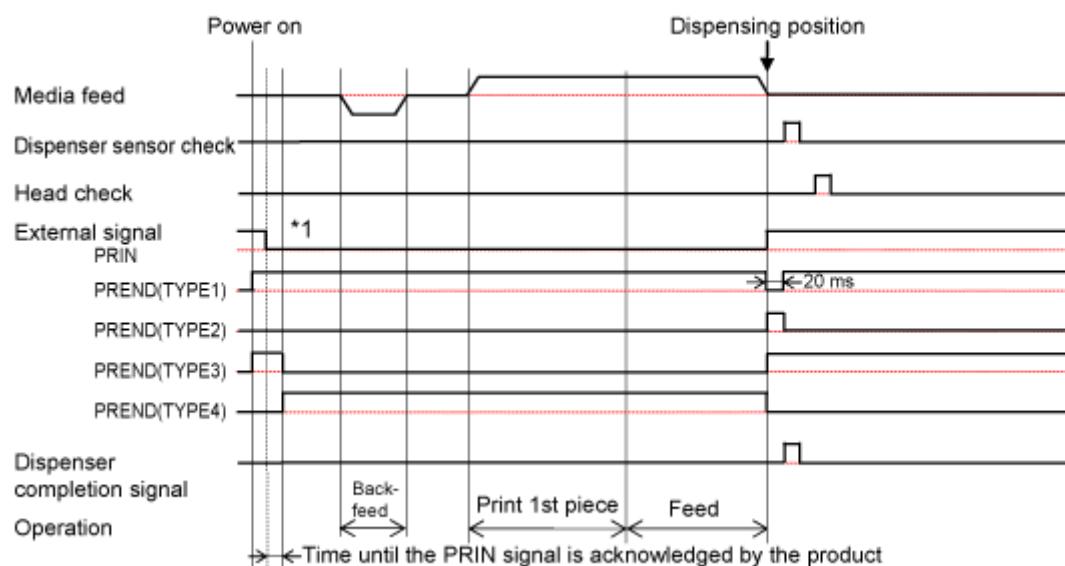


*1 Keep the PRIN signal until the PREND signal is outputted.

Operations in Linerless Mode (CL4NX only)

Operation 39: Linerless Mode, Backfeed Before Printing, and Without Pulse Input (Head Check Disabled) (CL4NX only)

Operation

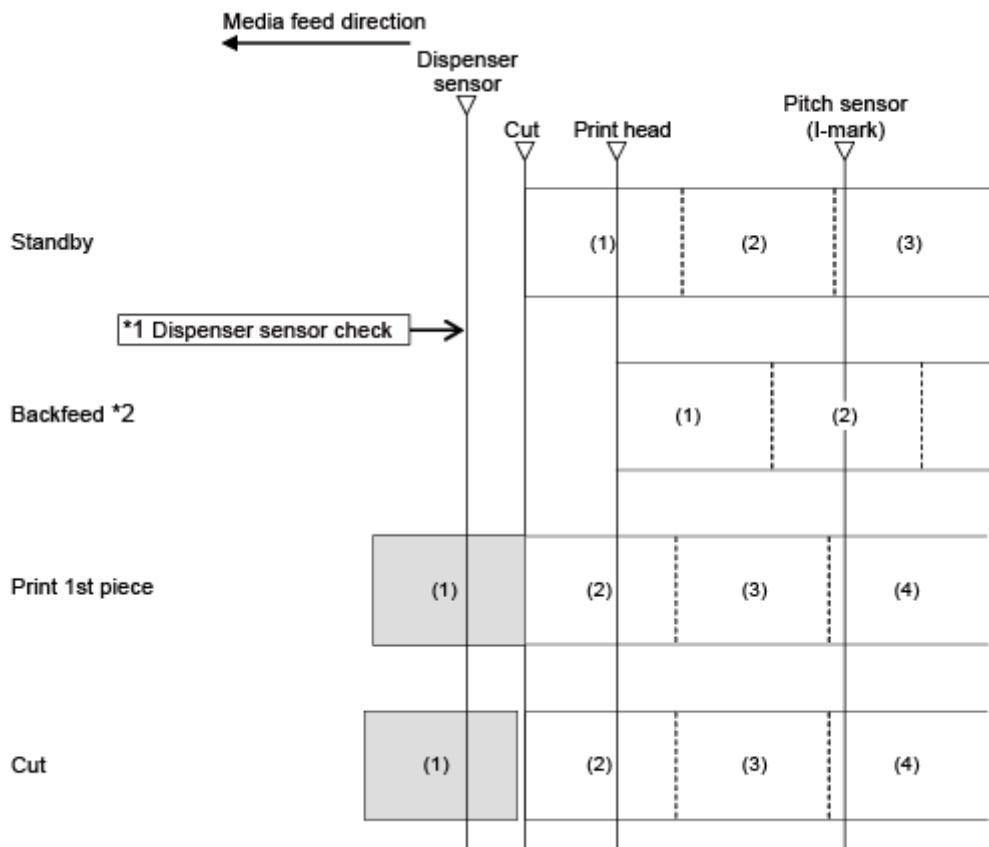


*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.

*2 The backfeed speed becomes 2 inches/sec immediately after powering on the product, immediately after backing from the sleep mode, or after 60 minutes or more from the last printing.




- The figure above shows the reference position when the I-mark sensor is used.

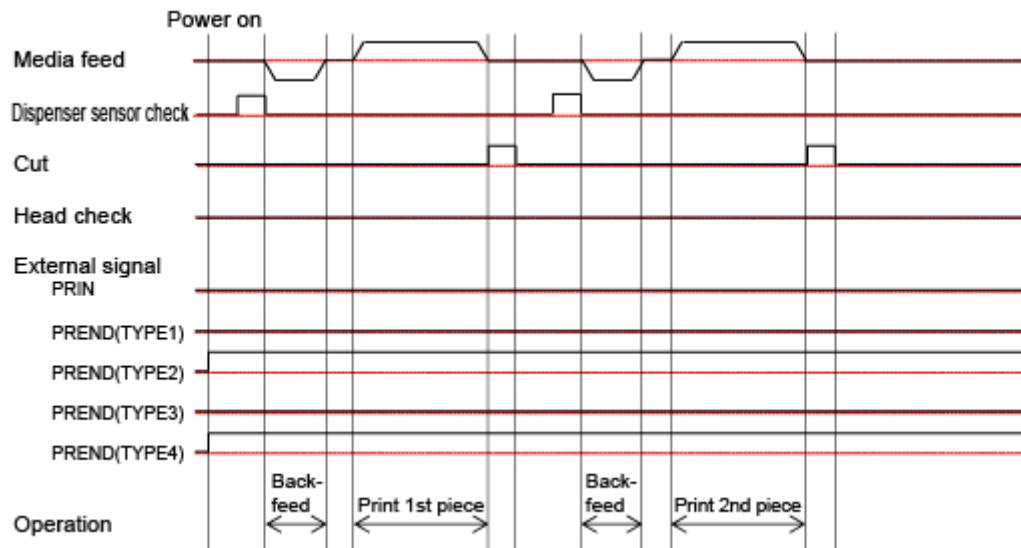Timing Chart

Operation 40: Linerless Mode, Backfeed Before Printing, and Without Pulse Input (Head Check Enabled) (CL4NX only)

Operation

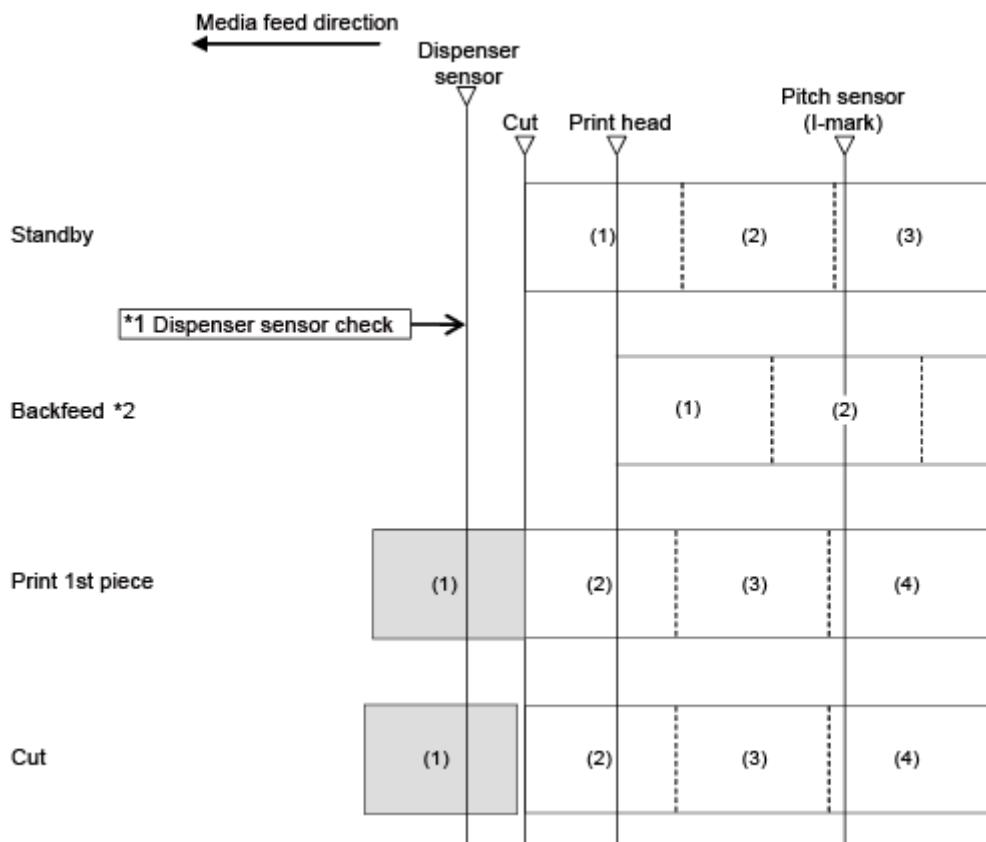


*1 The dispenser sensor confirms the dispensing condition and the product does not perform the next operation until the label is dispensed.

*2 The backfeed speed becomes 2 inches/sec immediately after powering on the product, immediately after backing from the sleep mode, or after 60 minutes or more from the last printing.




- The figure above shows the reference position when the I-mark sensor is used.

Timing Chart

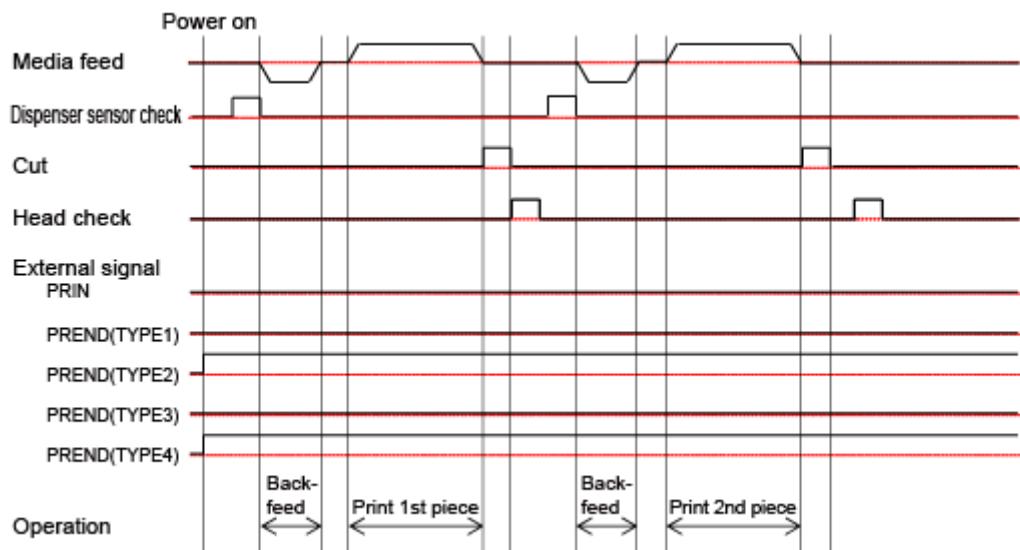


Operation 41: Linerless Mode, Backfeed Before Printing, and with Pulse Input (Head Check Disabled) (CL4NX only)

Operation

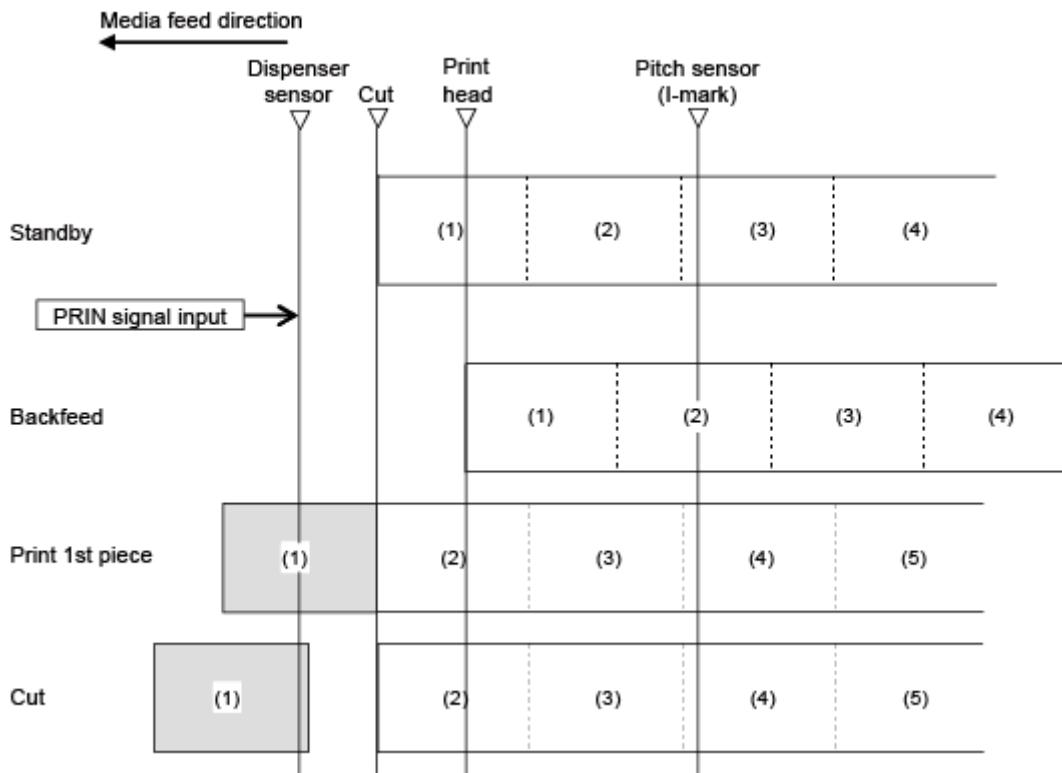

- The figure above shows the reference position when the I-mark sensor is used.


Timing Chart

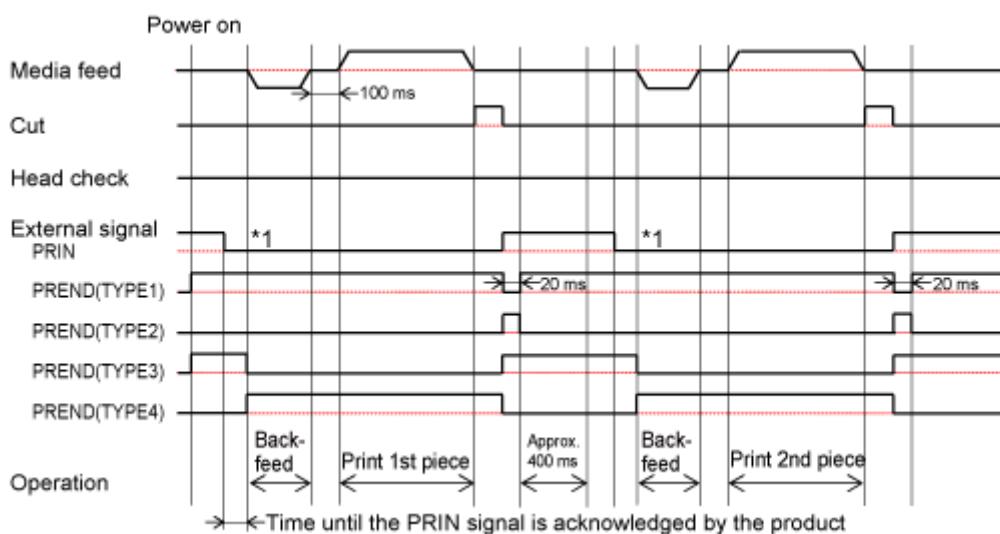

*1 Keep the PRIN signal until the PREND signal is outputted.


Operation 42: Linerless Mode, Backfeed Before Printing, and with Pulse Input (Head Check Enabled) (CL4NX only)

Operation

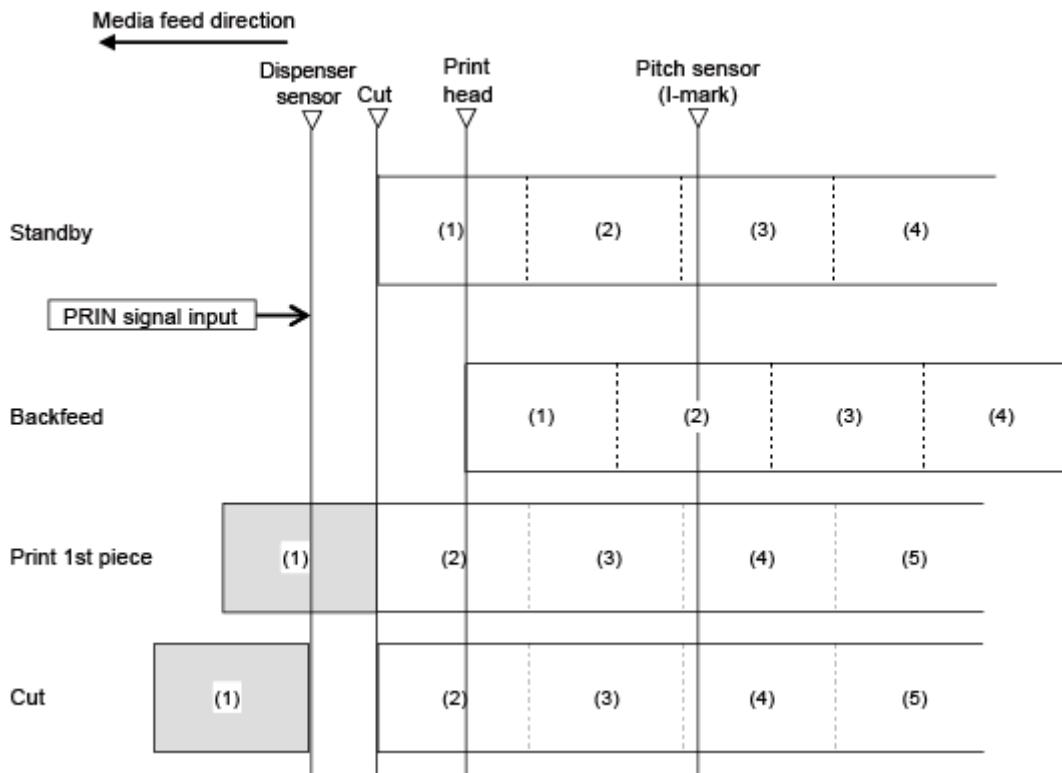

- The figure above shows the reference position when the I-mark sensor is used.


Timing Chart

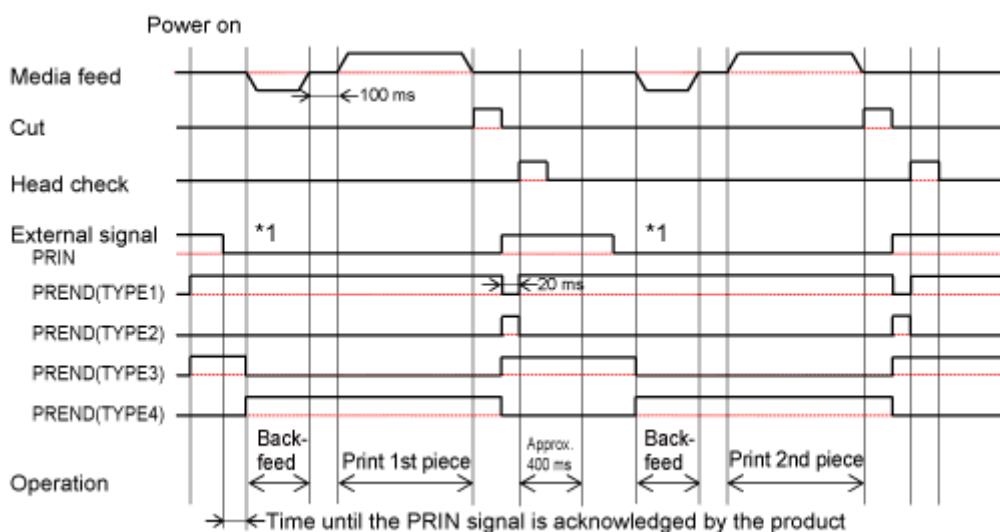

*1 Keep the PRIN signal until the PREND signal is outputted.


Operations for RFID Write (CL4NX only)

Operation 43: RFID Write with Continuous Mode (Tag Offset = 0) (CL4NX only)

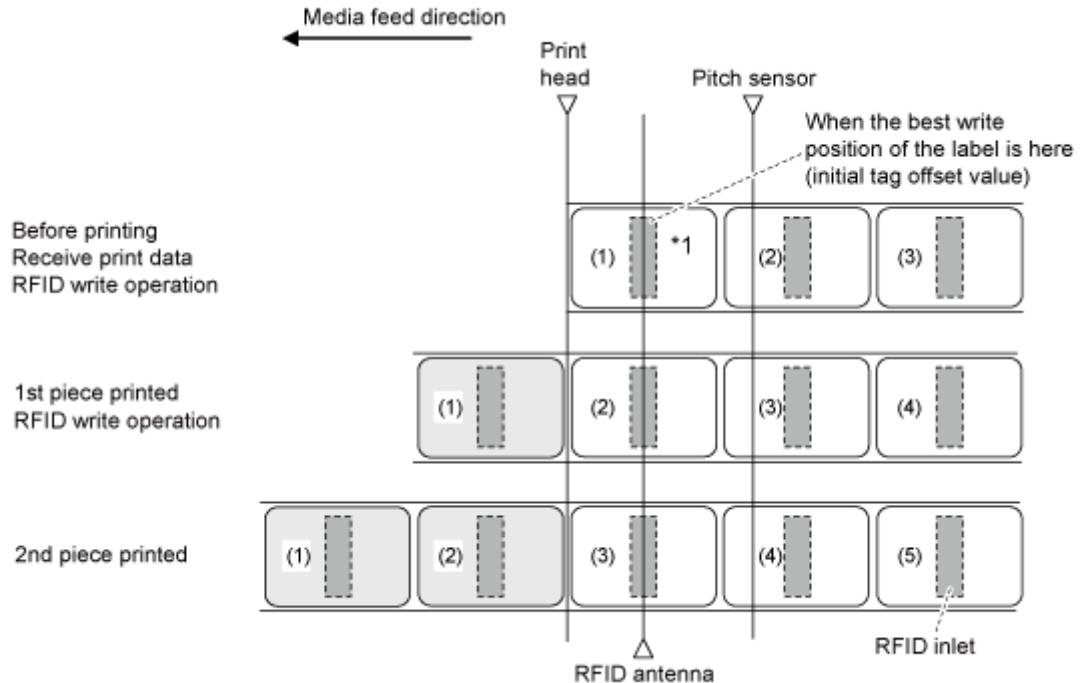

*1 The EPC code write <IP0> and RFID write <RK> commands write the data at this tag position. The EPC code read, RFID read [DC2]PJ, UID/EPC/IDm print <TU>, and UID/EPC/IDm return <RU> commands acquire the information at this tag position.

Operation 44: RFID Write with Continuous Mode (Tag Offset > 0) (CL4NX only)

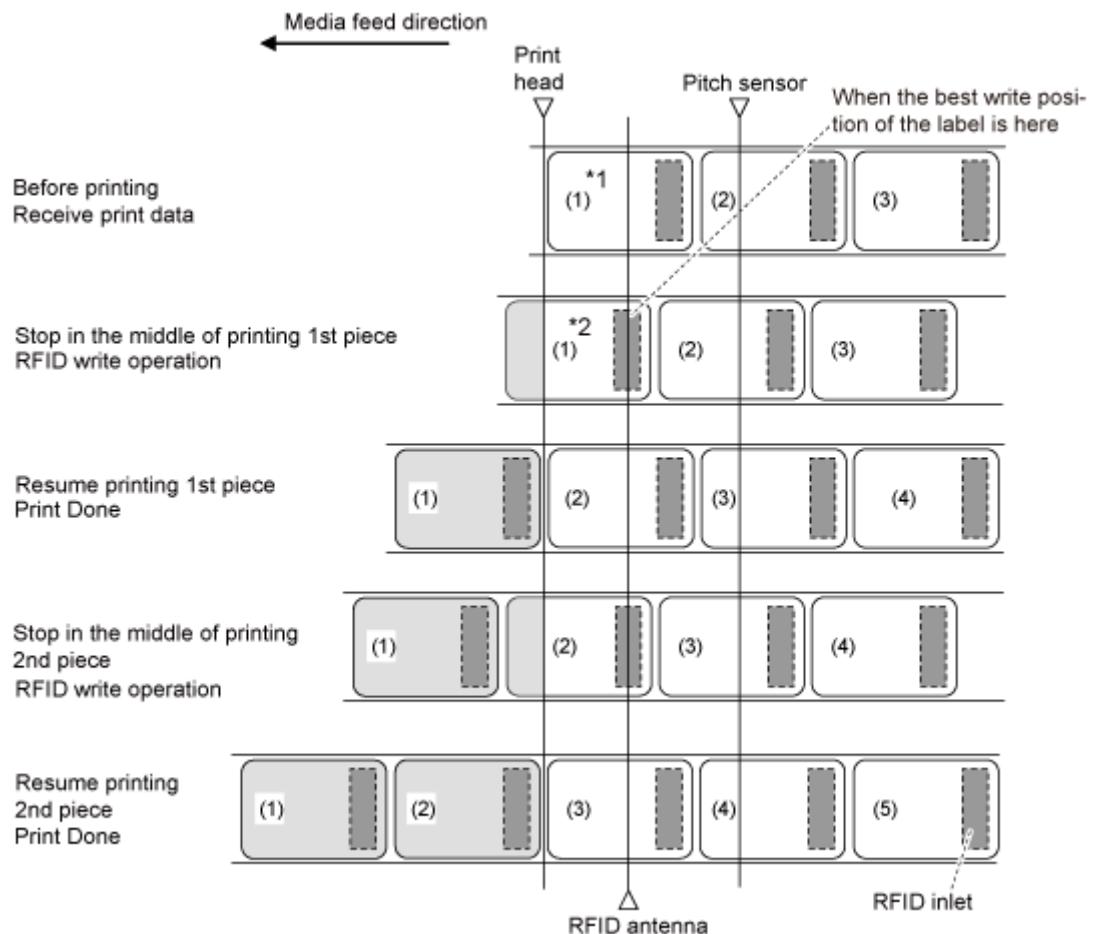


*1 Because the EPC code read, RFID read [DC2]PJ, UID/EPC/IDm printing <TU>, and UID/EPC/IDm return <RU> commands acquire the information at this tag position, do not use them if the Tag Offset is set to other than an initial value.

*2 The EPC code write <IP0> and RFID write <RK> commands write the data at this tag position.

Operation 45: RFID Write with Tear-Off Mode (Tag Offset = 0) (CL4NX only)

When the tear-off mode is selected, the label backfeeds before printing and stops at the manual cut position after printing.

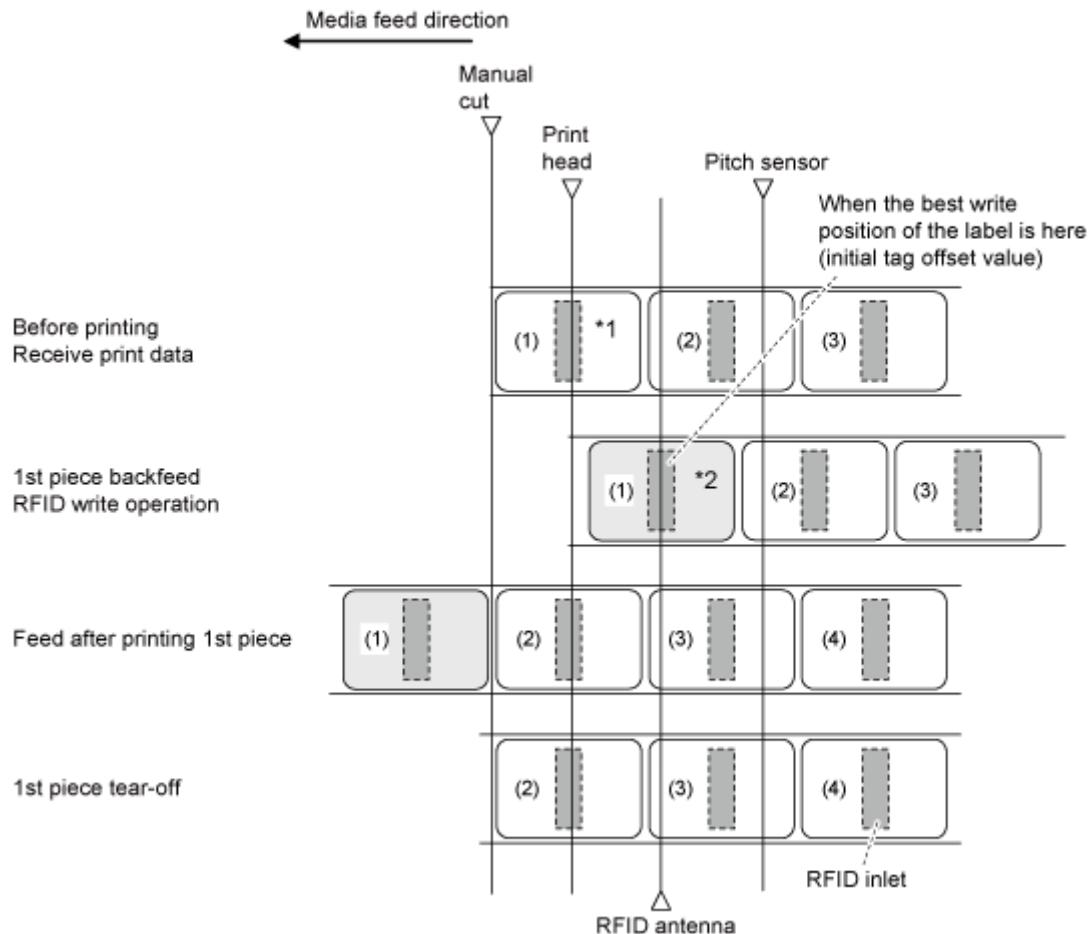


*1 Because the EPC code read, RFID read [DC2]PJ, UID/EPC/IDm printing <TU>, and UID/EPC/IDm return <RU> commands acquire the information at this tag position, do not use them if the Tag Offset is set to other than an initial value.

*2 The EPC code write <IP0> and RFID write <RK> commands write the data at this tag position.

Operation 46: RFID Write with Tear-Off Mode (Tag Offset > 0) (CL4NX only)

When the tear-off mode is selected, the label backfeeds before printing and stops at the manual cut position after printing.

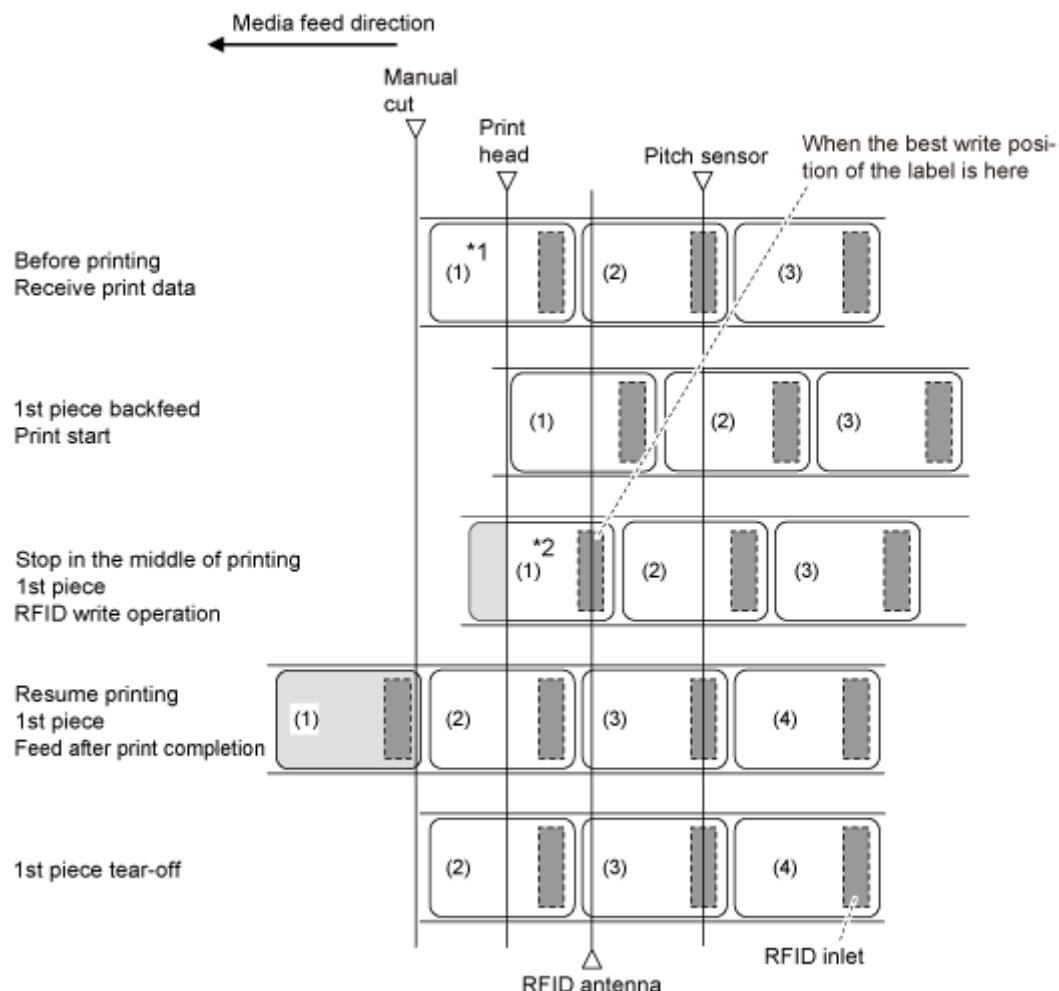


*1 Because the EPC code read, RFID read [DC2]PJ, UID/EPC/IDm printing <TU>, and UID/EPC/IDm return <RU> commands acquire the information at this tag position, do not use them if the Tag Offset is set to other than an initial value.

*2 The EPC code write <IP0> and RFID write <RK> commands write the data at this tag position.

Operation 47: RFID Write with Cutter Mode and Backfeed After Printing (Tag Offset = 0) (CL4NX only)


When the cutter mode with backfeed after printing is selected, the label backfeeds after the cut and stops at the print head position.

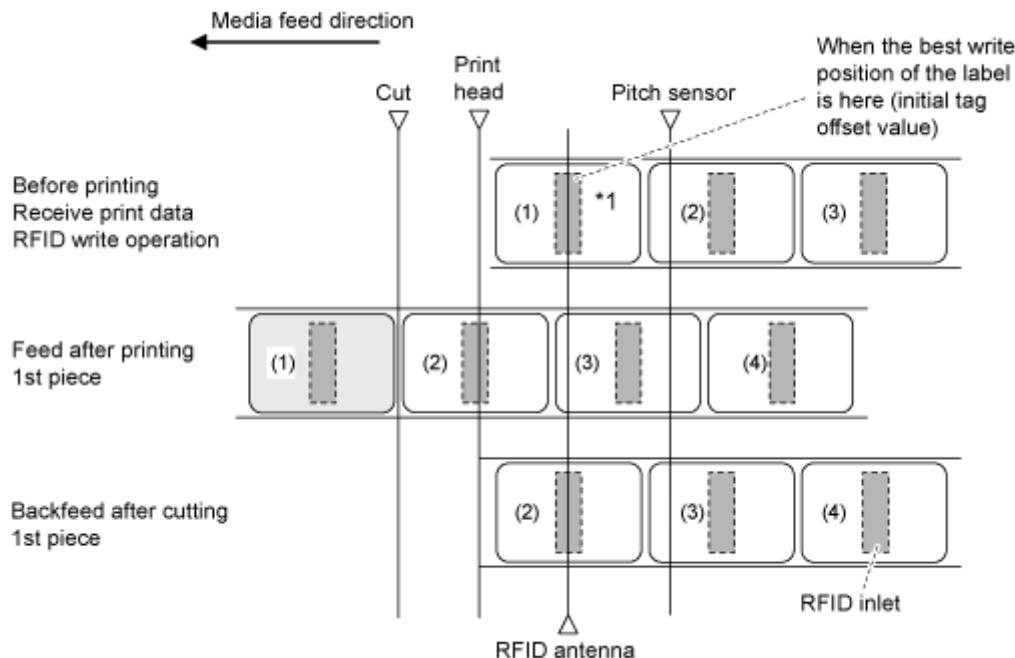

*1 The EPC code write <IP0> and RFID write <RK> commands write the data at this tag position. The EPC code read, RFID read [DC2]PJ, UID/EPC/IDm print <TU>, and UID/EPC/IDm return <RU> commands acquire the information at this tag position.

Operation 48: RFID Write with Cutter Mode and Backfeed After Printing (Tag Offset > 0) (CL4NX only)

When the cutter mode is selected, backfeed after printing is automatically set. The label backfeeds after the cut and stops at the print head position.

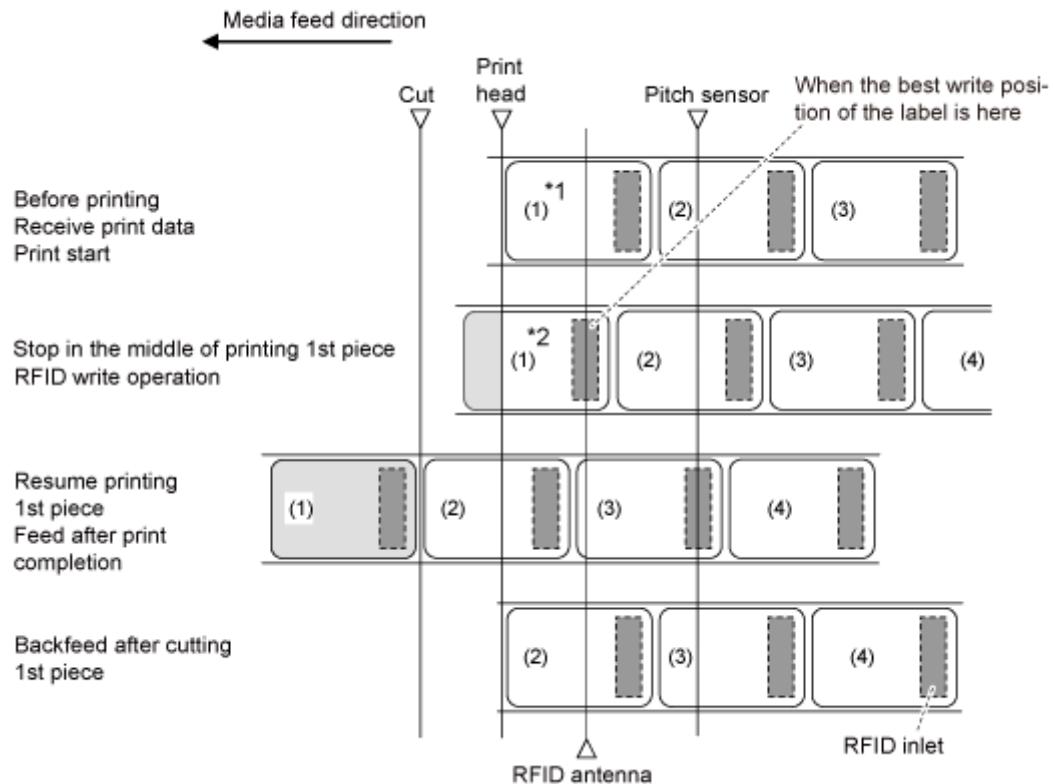

*1 Because the EPC code read, RFID read [DC2]PJ, UID/EPC/IDm printing <TU>, and UID/EPC/IDm return <RU> commands acquire the information at this tag position, do not use them if the Tag Offset is set to other than an initial value.


*2 The EPC code write <IP0> and RFID write <RK> commands write the data at this tag position.

Operation 49: RFID Write with Cut & Print Mode (CL4NX only)

When the cut & print mode is selected, RFID encoding is performed before printing while stopping at the print head position.

RFID tag offset cannot be used in the cut & print mode. The setting value will be ignored even if tag offset is set.

Also, the RFID tag error print in the cut & print mode is the same as the error print in the continuous or cutter mode.

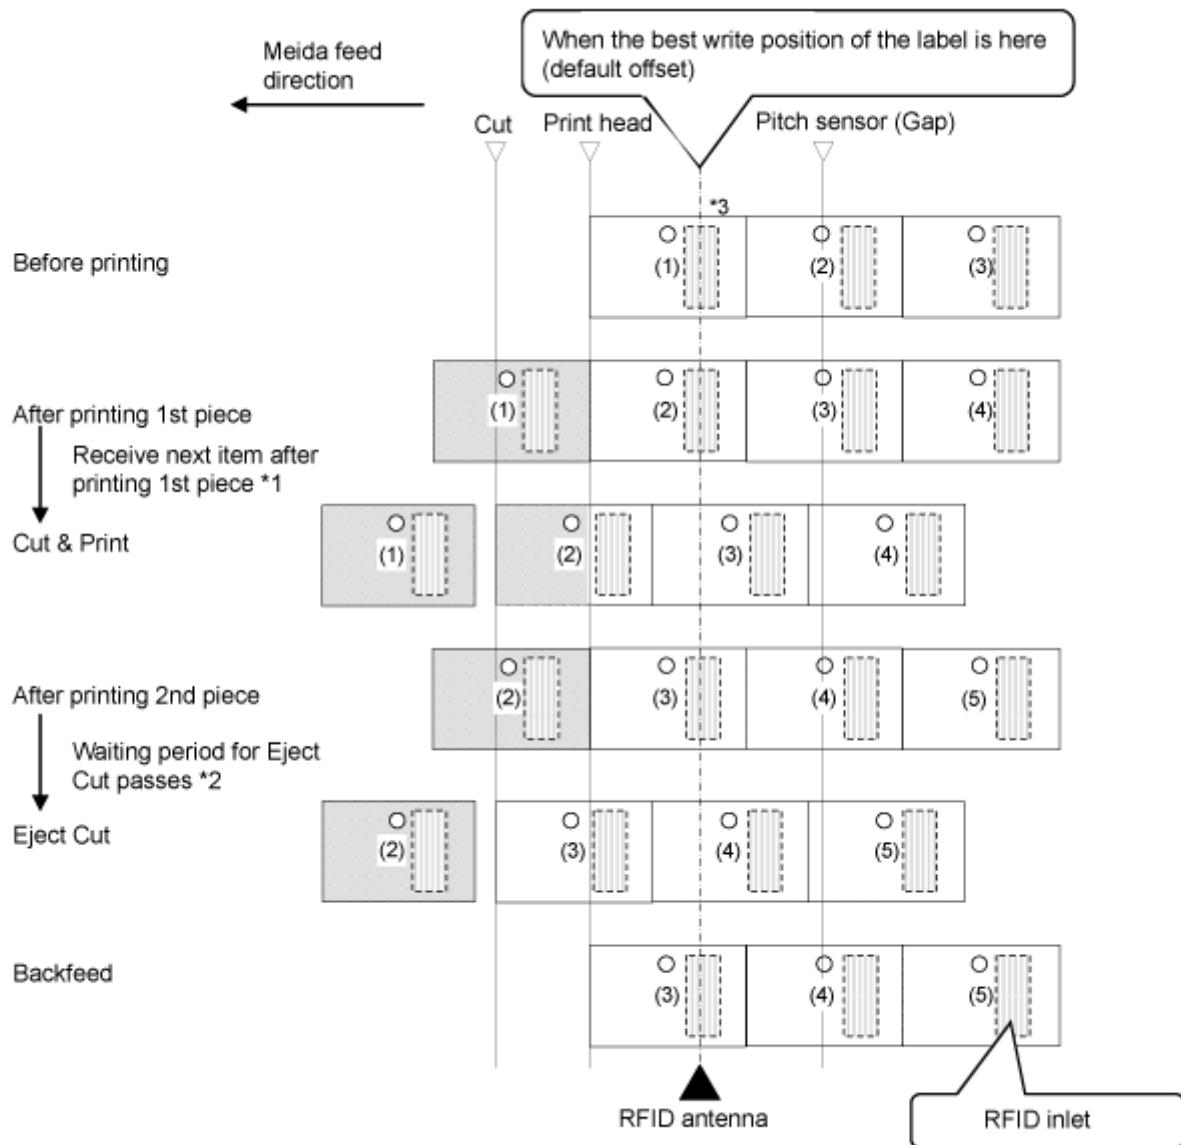

*1 After printing, if the next data is received, printing will be done and the media will be cut on the cut position.

*2 After printing, if the next data is not received and the waiting period for Eject Cut has passed, Eject Cut will be performed.

*3 The EPC code write <IP0> command writes the data at this tag position. The RFID read [DC2]PJ, printing tag data <TU>, and EPC/TID return <RU> commands acquire the information at this tag position.



- The figure above shows the operation when the Gap sensor is used and the reference position is adjusted with <#> on side hole tags.

Error Printing Sample


RFID tag error print in the cut & print mode




Be careful of white streaks.

Operations When the Barcode Check Function Is Enabled


Operation 50: Continuous Mode When the Barcode Check Function Is Enabled

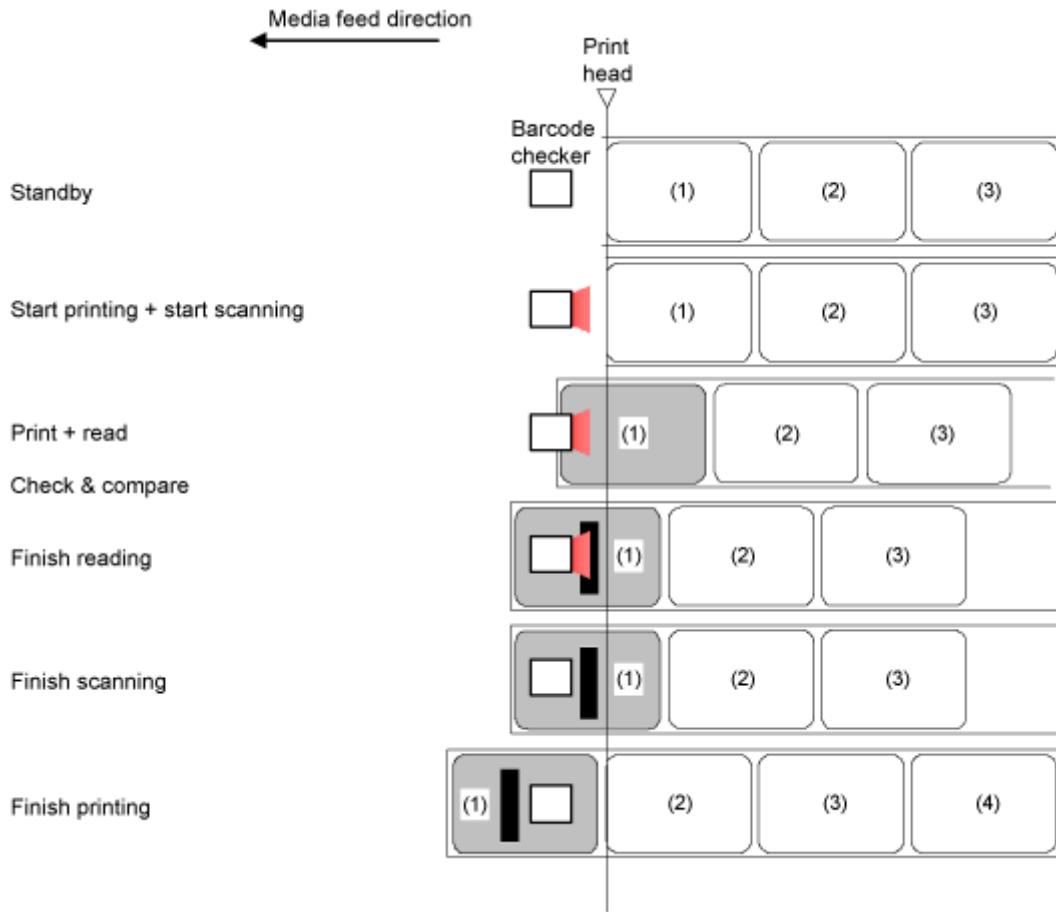


Operation 51: Cutter Mode (Cutting Every Label) When the Barcode Check Function Is Enabled

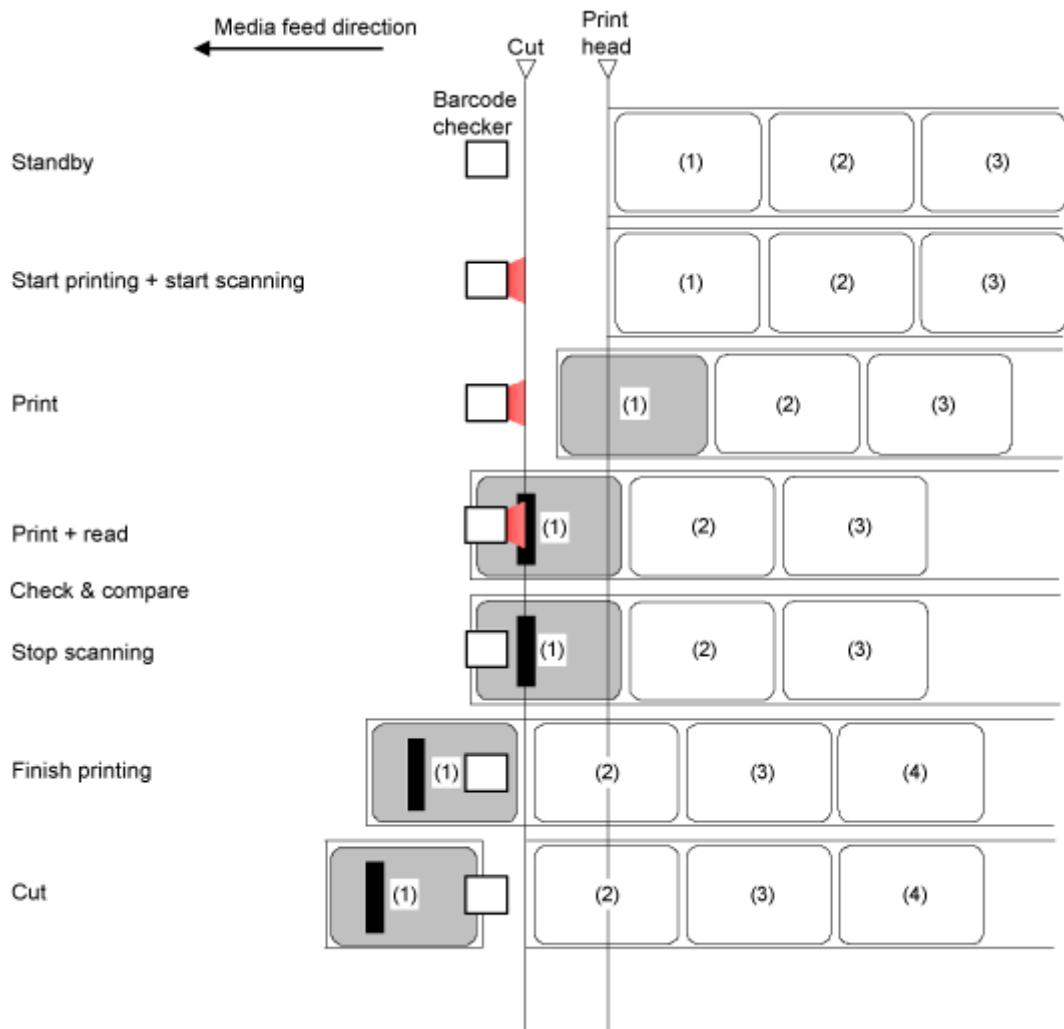

Operation 52: Cutter Mode (Cutting According to the Specified Number of Labels, No Cutting) When the Barcode Check Function Is Enabled

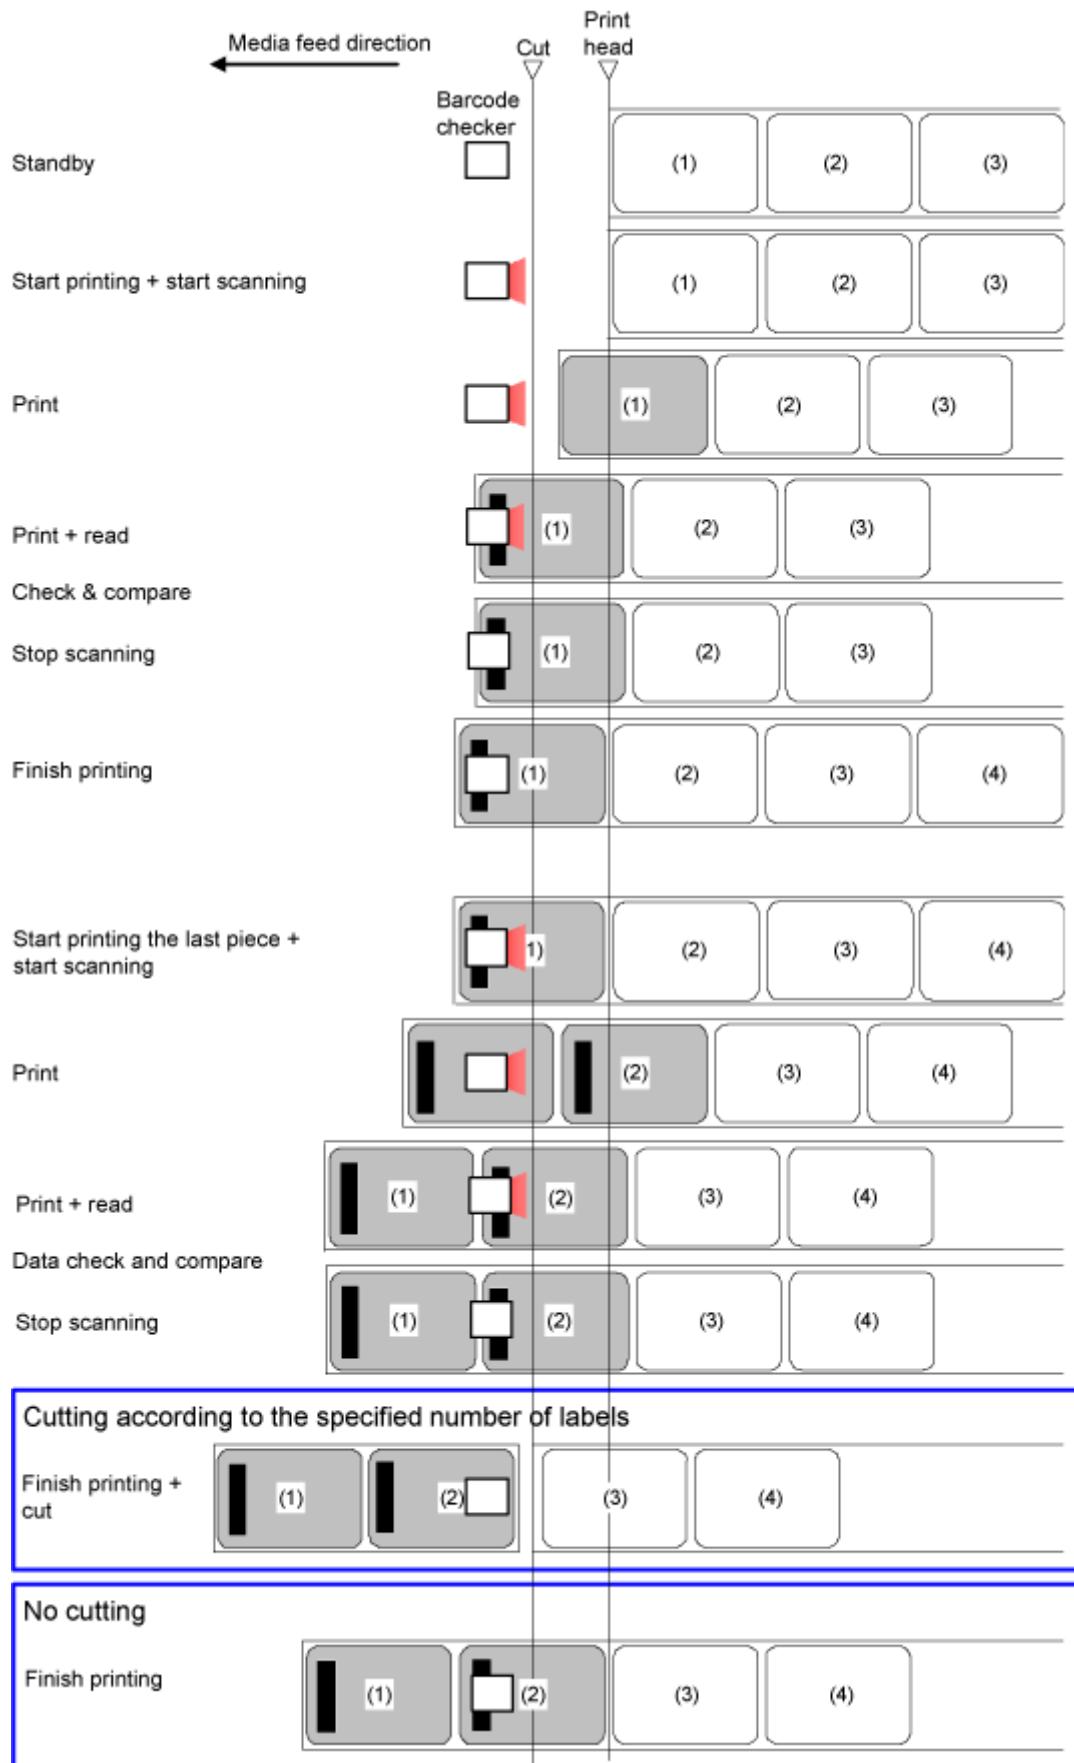


Operation 53: Cut & Print Mode When the Barcode Check Function Is Enabled

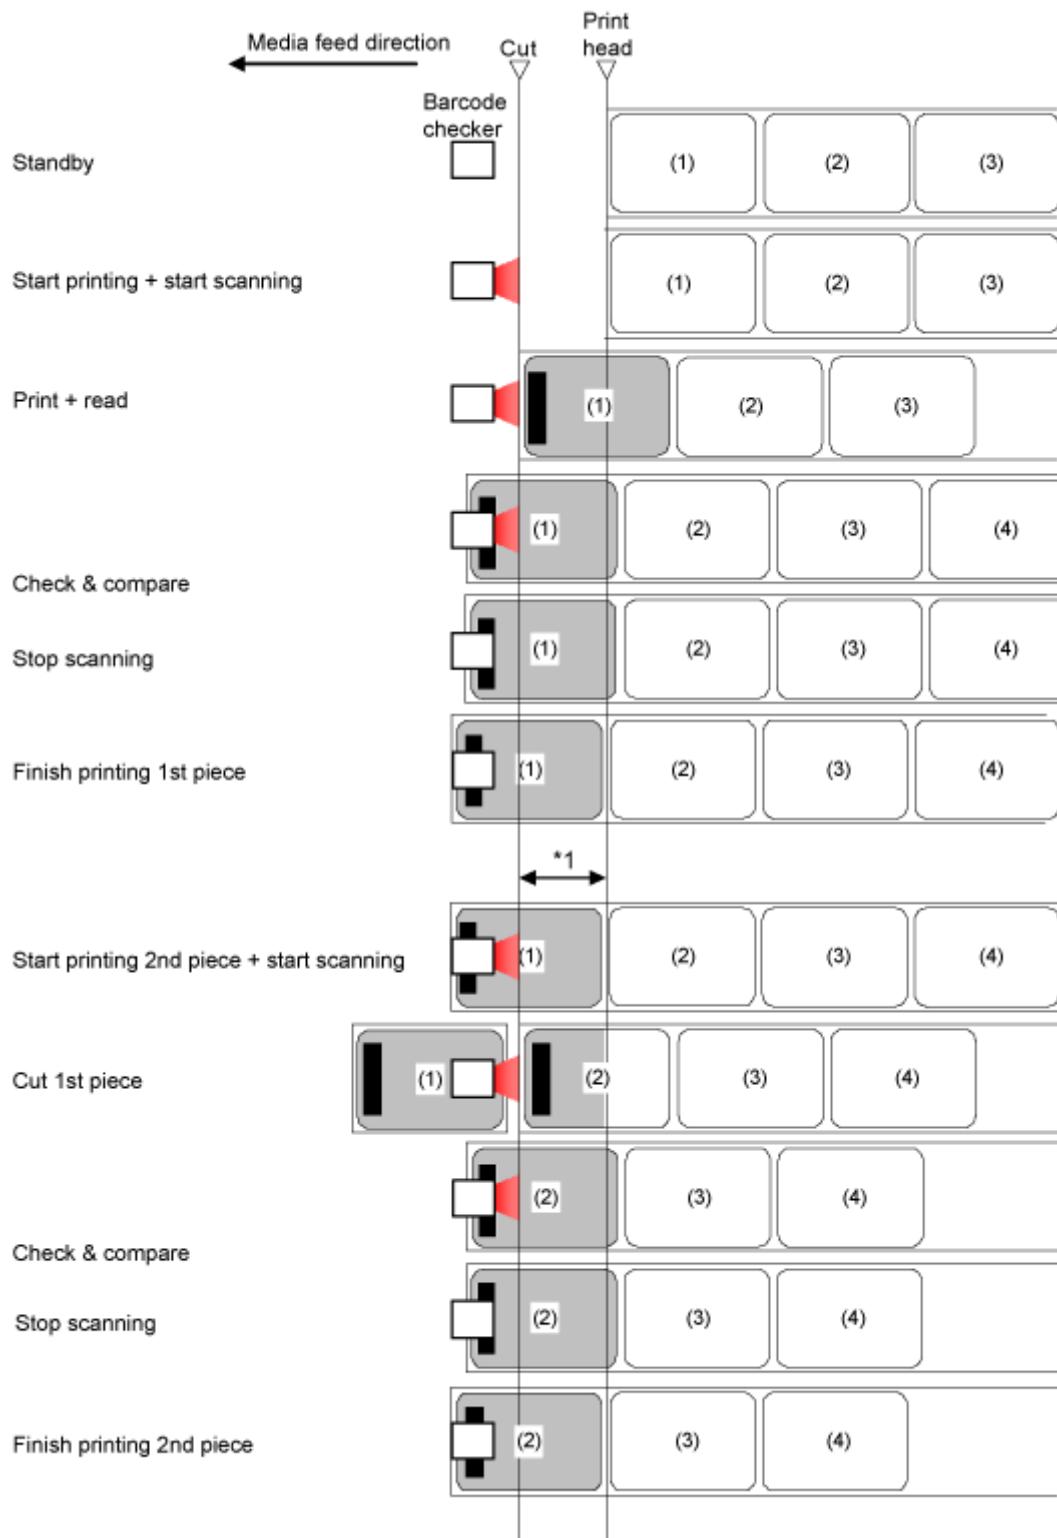

*1 Do not print barcodes/2D codes on the area between the print head and the cut position.


Operation 54: Dispenser Mode When the Barcode Check Function Is Enabled

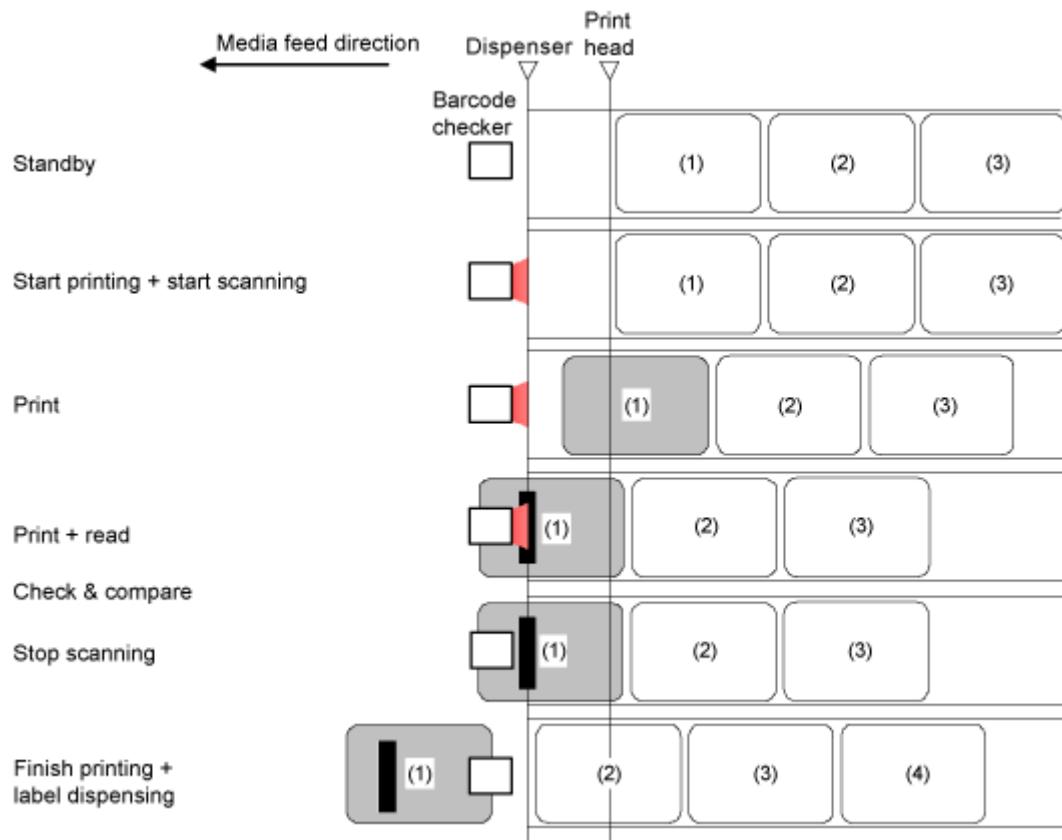

Operations When the Media Sensor Is Disabled

Operation 55: Media Sensor Disabled

When the media sensor is disabled, media stops at the specified print end line.

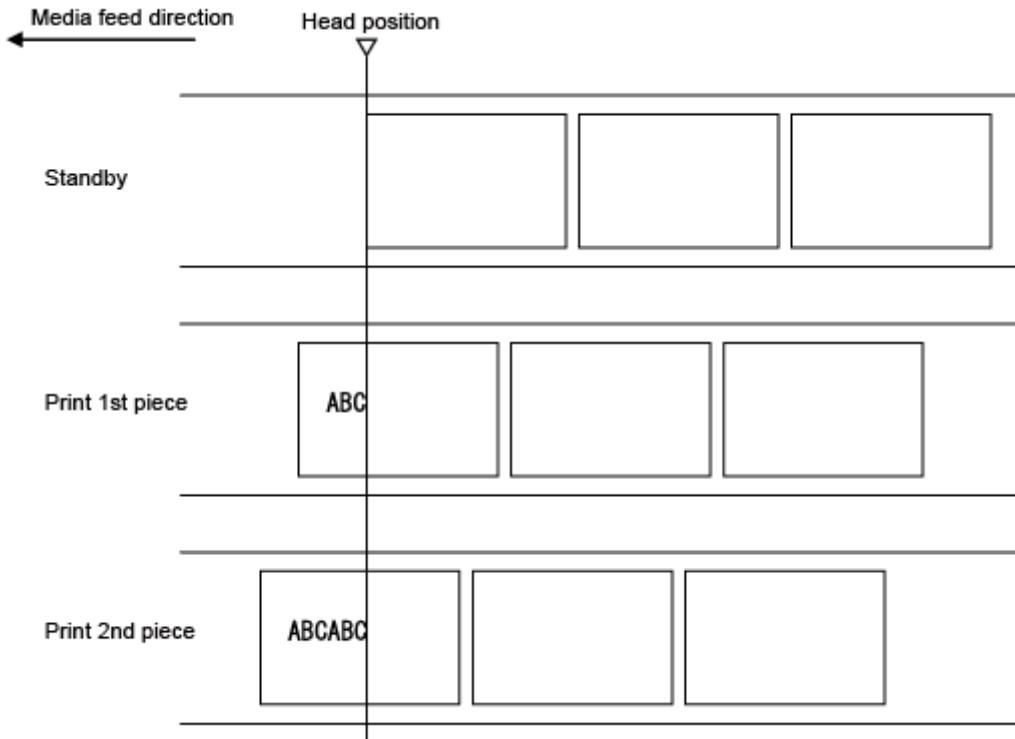

Adjusting the Base Reference Point

About the Base Reference Point

The base reference point is the point at which one determines the print position and stop/cut/dispensing position.

The base reference point differs depending on the operation mode or media sensor you use.



Continuous Mode/Tear-off Mode

I-mark Label	Gap Label
<p>(1) Feed direction (2) Print and stop position</p>	<p>(1) Feed direction (2) Print and stop position</p>


Cutter Mode

I-mark Label	Gap Label
<p>(1) Feed direction (2) Print and cut position</p>	<p>(1) Feed direction (2) Cut position (3) Print position</p>

Dispenser Mode

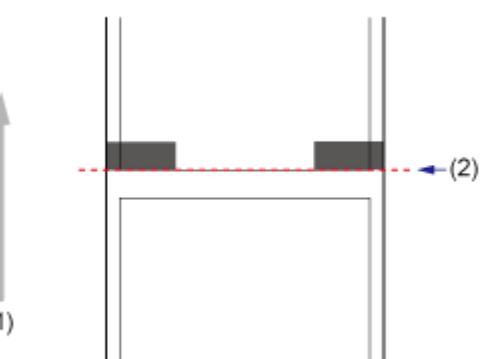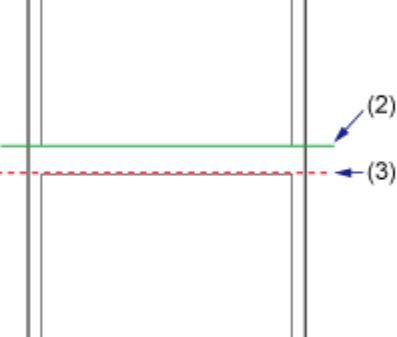
I-mark Label	Gap Label
 <p>(1) Feed direction (2) Print and dispensing position</p>	 <p>(1) Feed direction (2) Dispensing position (3) Print position</p>

Linerless Mode (CL4NX only)

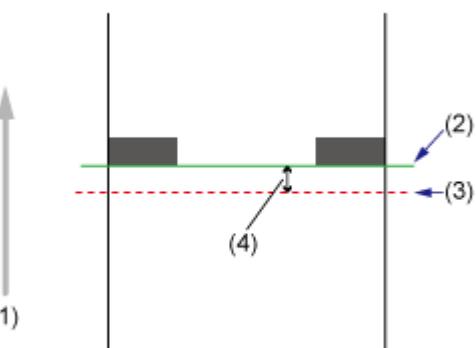I-mark Linerless Label
 <p>(1) Feed direction (2) Cut position (3) Print position (4) Non-printable zone (5 mm / 0.2")</p>

Adjusting the Print Position

Set the [Pitch] in the [Printing] > [Advanced] > [Adjustments] menu to adjust the print position.

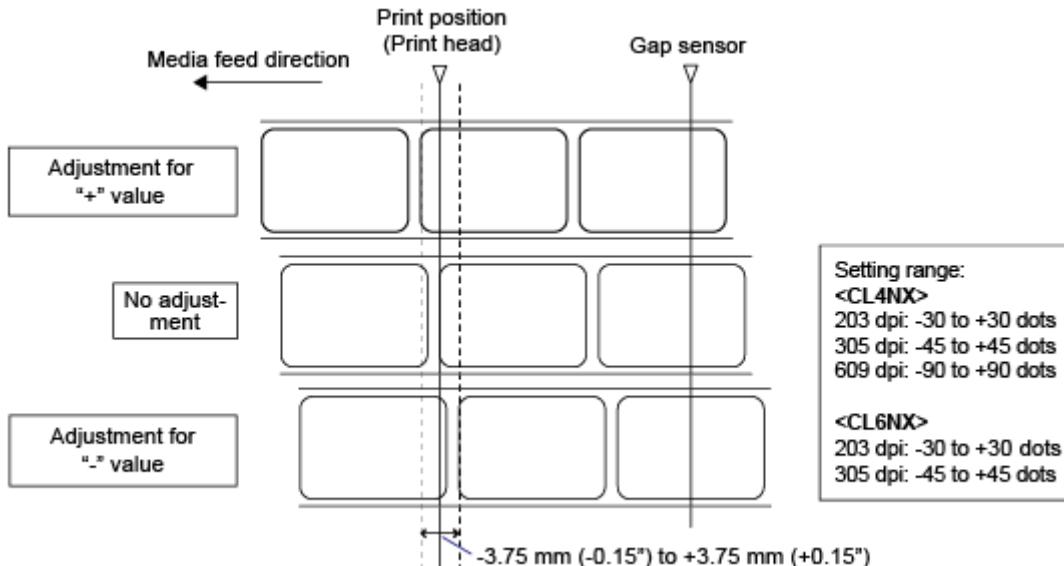


- The above reference position (print position) is the stop position when the media sensor type is set to Gap.

- When the product is in Online mode, press the button on the operator panel to change to Offline mode.




- Press the button to show the [Settings] menu.

3. Select [Printing] using the / buttons, and then press the button.

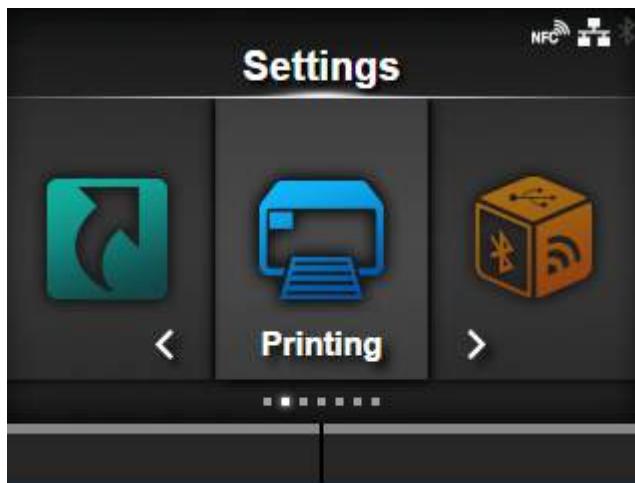

4. Select the [Advanced] > [Adjustments] > [Pitch] menu using the / buttons, and then press the button.

The [Pitch] screen appears.

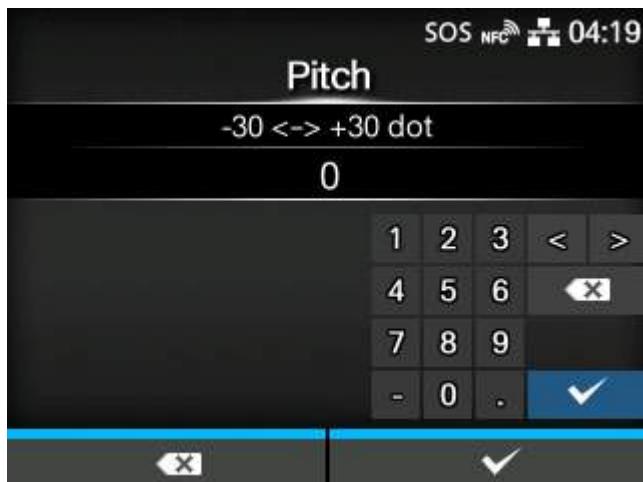

5. Change the setting value. Press the / / / buttons to select a number and then press the button to enter the number to the text box.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to +30 dots	-30 to +30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to +45 dots	-45 to +45 dots
609 dpi	-90 to +90 dots	-


Resolution	CL4NX	CL6NX
(1 dot = 0.042 mm (0.0017"))		

6. Press the  button to save the setting value.
7. Press the  button to change to Offline mode.
8. Press the  button again to change to Online mode.

You can print to check the adjusted print position.

Adjusting the Media Stop Position

Set the [Offset] in the [Printing] > [Advanced] > [Adjustments] menu to adjust the media stop position.

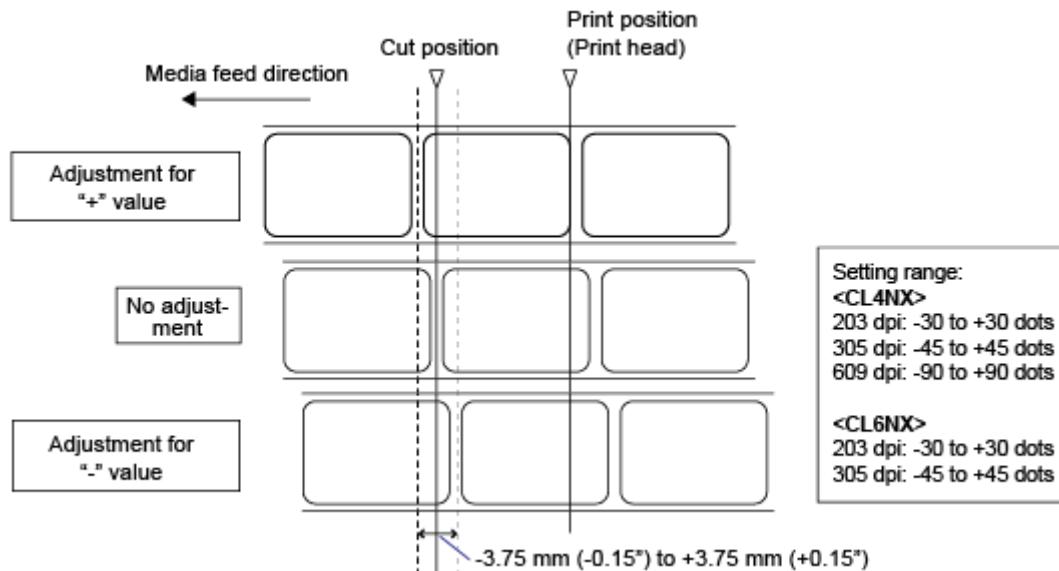


- The above cut reference position for printing indicates the stop position when the media sensor type is set to Gap.
- You can also adjust when the operation mode is specified to Tear-off or Dispenser.

- When the product is in Online mode, press the button on the operator panel to change to Offline mode.



- Press the button to show the [Settings] menu.

3. Select [Printing] using the / buttons, and then press the button.

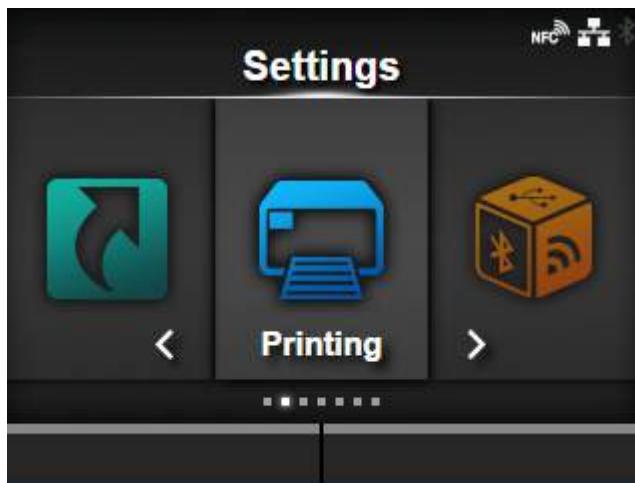

4. Select the [Advanced] > [Adjustments] > [Offset] menu using the / buttons, and then press the button.

The [Offset] screen appears.



5. Change the setting value. Press the / / / buttons to select a number and then press the button to enter the number to the text box.

The setting range is as follows:

Resolution	CL4NX	CL6NX
203 dpi (1 dot = 0.125 mm (0.0049"))	-30 to +30 dots	-30 to +30 dots
305 dpi (1 dot = 0.083 mm (0.0033"))	-45 to +45 dots	-45 to +45 dots
609 dpi	-90 to +90 dots	-

Resolution	CL4NX	CL6NX
(1 dot = 0.042 mm (0.0017"))		


6. Press the  button to save the setting value.
7. Press the  button to change to Offline mode.
8. Press the  button again to change to Online mode.

You can print to check the adjusted stop position.

Notes on the Stop/Cut Position of Different Media

Stop Position of the Label in Dispenser Mode

The regular position is to let the label stay about $2 \pm 1 \text{ mm}$ ($0.08'' \pm 0.04''$) on the liner.

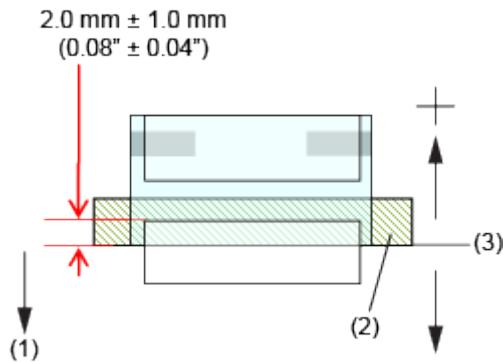

(1) Feed direction


(2) Dispenser bar

(3) Stop position

Cut Position When Using the Label in Cutter Mode

The regular cut position is between labels (only cut on the liner).

When you cut the label, the glue adheres to the blade of the cutter and the blade will decrease the performance of the cutter. Adjust the cut position so as not to cut the label.

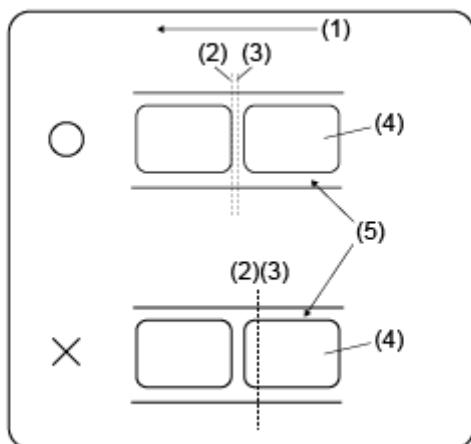

(1) Media feed direction

(2) Cut position (I-mark sensor)

(3) Cut position (Gap sensor)

(4) Label

(5) Liner


Cut Position When Using the Media with Perforated Line in Cutter Mode

Adjust the cut position so as not to cut the media on the perforated line and on the area near side from the perforated line (the area is shown in the figure below).

When the media is cut on the area not to be cut, it could cause a paper jam or damage.

- **Media Roll**

The area not to be cut is on the perforated line and on the area within 1 mm (0.04") near side from the perforated line.

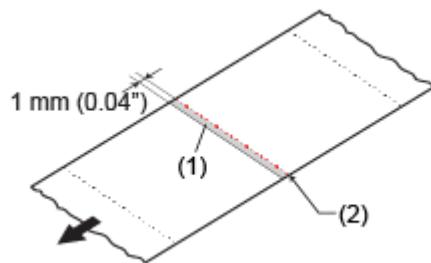


(1) Area not to be cut

(2) Perforated line

- **Fan-fold Media**

The area not to be cut is on the perforated line and on the area within 4 to 25 mm (0.16" to 0.98") near side from the perforated line.

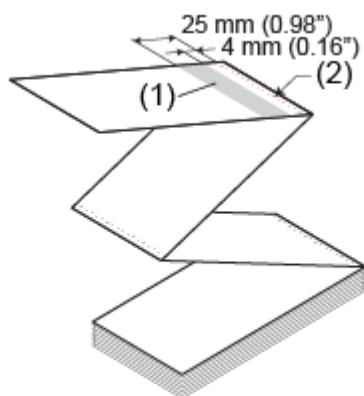

(1) Area not to be cut

(2) Perforated line

Adjusting the Print Quality

Adjusting the Print Darkness

The adjustment procedure for the print darkness is as follows:




- You can fine tune the print darkness by setting the [Darkness Adjust] in the [Printing] > [Advanced] > [Adjustments] menu.
- When the [Printing] > [Advanced] > [Prioritize] menu has been set to [Commands] and the print darkness is specified by command, the data will be printed with the print darkness specified by the command.
- While the print job is paused, the [Adjustments] menu will appear instead of the [Settings] menu and you can adjust the print darkness.

-
1. When the product is in Online mode, press the button to change to Offline mode.



2. Press the button to show the [Settings] menu.

3. Press the / buttons to select [Printing], and then press the button.

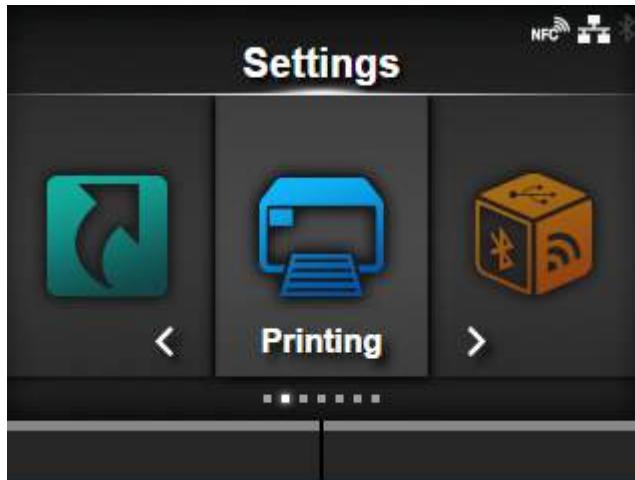


4. Press the / buttons to select [Darkness], and then press the button.




The [Darkness] screen appears.

5. Press the / buttons to select a value.

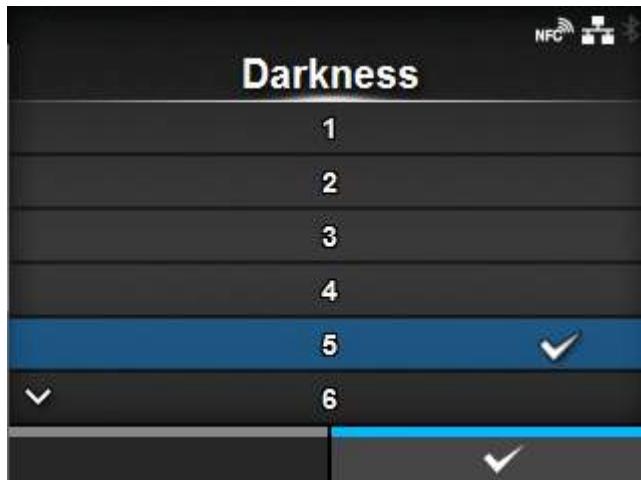

The setting range is from 1 to 10. 1 is the lightest and 10 is the darkest.

6. Press the  button or  button to save the setting value.
7. Press the  button to change to Offline mode.
8. Press the  button again to change to Online mode.

You can print to check the print quality.

Adjusting the Print Speed

The adjustment of the print speed not only changes the speed of printing but also affects the print quality.

The setting range of the print speed varies depending on the following print resolution:

Resolution	CL4NX	CL6NX
203 dpi (8 dots/mm)	2 to 10 (inches/sec) (50.8 to 254 mm/sec)	2 to 10 (inches/sec) (50.8 to 254 mm/sec)
305 dpi (12 dots/mm)	2 to 8 (inches/sec) (50.8 to 203.2 mm/sec)	2 to 8 (inches/sec) (50.8 to 203.2 mm/sec)
609 dpi (24 dots/mm)	2 to 6 (inches/sec) (50.8 to 152 mm/sec)	-




- When the [Printing] > [Advanced] > [Prioritize] menu has been set to [Commands] and the print speed is specified by command, the data will be printed with the print speed specified by the command.
- While the print job is paused, the [Adjustments] menu will appear instead of the [Settings] menu and you can adjust the print speed.
- If the optional linerless cutter kit is installed to CL4NX, the setting range is 2 to 6 (inches/sec) (50.8 to 152 mm/sec) regardless of the printing resolution.

- When the product is in Online mode, press the button to change to Offline mode.



- Press the button to show the [Settings] menu.

3. Press the  buttons to select [Printing], and then press the  button.

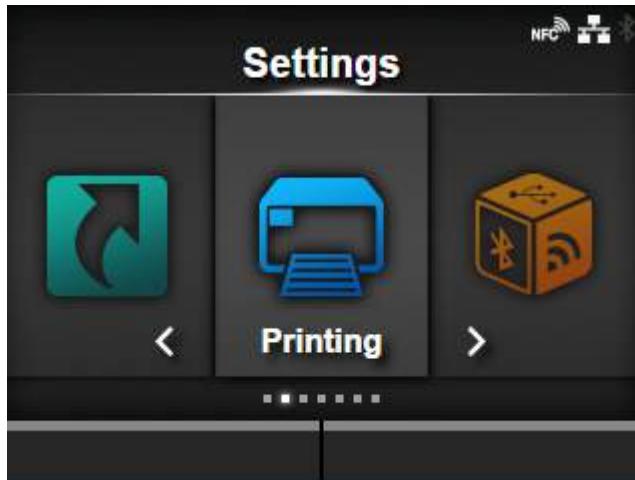


4. Press the  buttons to select [Speed], and then press the  button.



The [Speed] screen appears.

5. Press the  buttons to select a value.

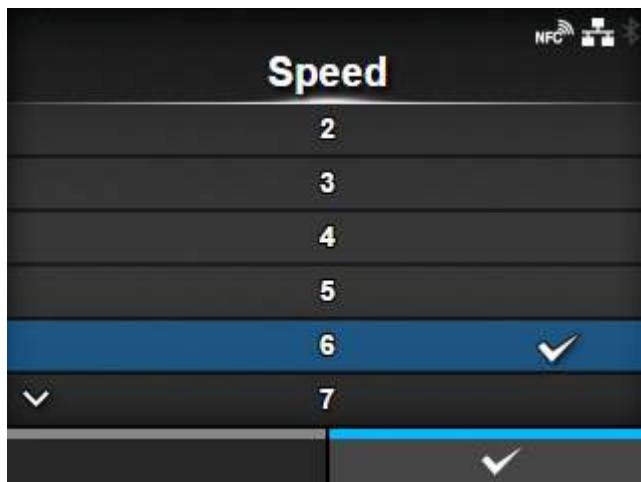

6. Press the  button or  button to save the setting value.

7. Press the  button to change to Offline mode.
8. Press the  button again to change to Online mode.

You can print to check the print quality.

Adjusting the Product's Buzzer Volume

The adjustment procedure for the buzzer volume when an error occurs is as follows:

1. When the product is in Online mode, press the  button to change to Offline mode.



2. Press the  button to show the [Settings] menu.
3. Press the  buttons to select [System], and then press the  button.




4. Press the buttons to select [Sound] > [Error Sound], and then press the button.



The [Error Sound] screen appears.

5. Press the buttons to set the volume.

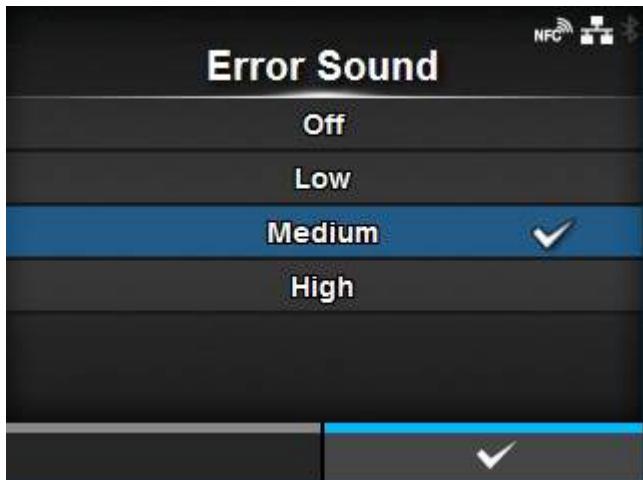

The options are as follows:

[Off]

Mute the sound.

[Low]

Low volume.

[Medium]

Medium volume.

[High]

High volume.

6. Press the button or button to save the setting.

Adjusting the Head Pressure Balance

Print Head Balance

Print head balance refers to the equalization of pressure between the print head and the platen roller. If the print head balance is out of adjustment, the printed image will be darker on one side of the media than the other and the media will be prone to travel in the direction of greater pressure.

Setting the Criteria of the Head Pressure Balance


The criteria of the head pressure balance is set to adapt to the using media.

- Set the head pressure according to the media thickness, including the liner.
- Set the pressure balance according to the media width (if necessary).

Head Pressure Setting

Set the head pressure according to the media thickness, including the liner.

1. Open the top cover of the product.
2. Find the adjustment dials (1) on the top of the print head assembly.

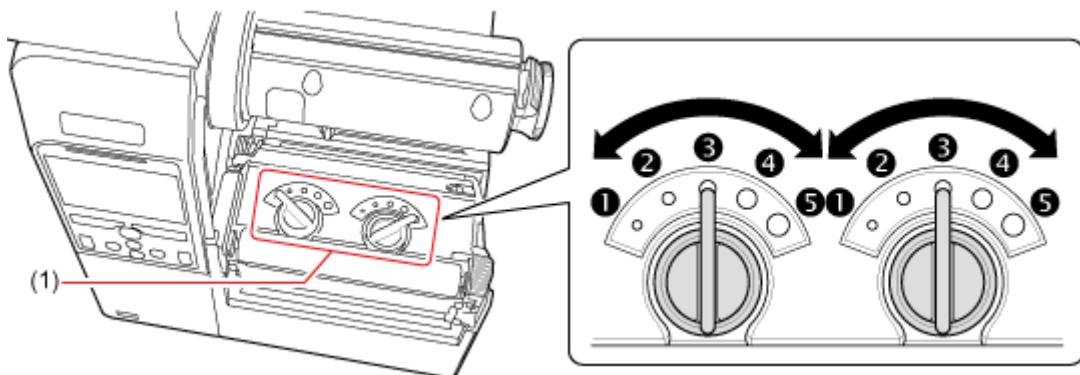

3. Turn the adjustment dials (1) according to the media thickness and set the head pressure.

Media Thickness (mm (inch))	0.060 - 0.200 (0.0024" - 0.0079")	0.200 - 0.268 (0.0079" - 0.011")
Adjustment Dials	③ (Left and Right, CL4NX only) ③ to ④ (Left and Right, CL6NX only)	④ to ⑤ (Left and Right)
Reference	Thin paper/normal label, etc.	Thick paper/tag, etc.



- The factory default settings of both Left and Right dials are **③**.
- For CL6NX dispenser model, the factory default settings of both Left and Right dials are **④**.
- The thickness of the media includes the liner.


After adjusting the head pressure, perform actual printing and if media feeding starts to shift to the right side when facing the product, adjust the pressure balance referring to the Pressure Balance Setting.

Pressure Balance Setting

After adjusting the head pressure, if media feeding starts to shift to the right side when facing the product, adjust the pressure balance referring to this procedure.

Set the pressure balance according to the media width to be used.

1. Open the top cover of the product.
2. Find the adjustment dials (1) on the top of the print head assembly.

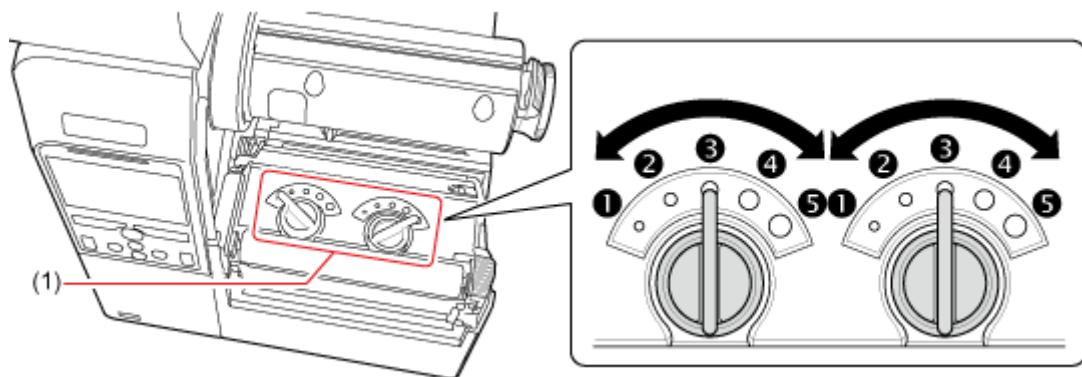

3. Turn the adjustment dials (1) according to the media width and set the pressure balance.

The table below shows an example of when the head pressure is Left ③.

For CL4NX:

Media Width (mm (inch))	25 - 54 (0.98" - 2.13")	54 - 83 (2.13" - 3.27")	83 - 131 (3.27" - 5.16")
Adjustment Dials	Left ③ Right ①	Left ③ Right ②	Left ③ Right ③

For CL6NX:

Media Width (mm (inch))	50 - 120 (1.97" - 4.72")	120 - 140 (4.72" - 5.51")	140 - 160 (5.51" - 6.30")	160 - 180 (6.30" - 7.09")
Adjustment Dials	Left ⑤ Right ①	Left ③ or ④ Right ①	Left ③ or ④ Right ②	Left ③ or ④ Right ③ or ④



- The factory default settings of both Left and Right dials are **3**.
- For CL6NX dispenser model, the factory default settings of both Left and Right dials are **4**.
- The dial setting values in the table are only for reference, and the values may vary depending on the media type. Be sure to check if the print quality is stable by actually printing.

Configuring Optional RFID (CL4NX only)

Types of Usable IC Tags and IC Cards

The types of the usable IC tags and IC cards with the optional UHF RFID kit and HF RFID kit are as follows:

Types of IC Tags and IC Cards	UHF (920 MHz)	HF (13.56 MHz)
ISO/IEC 18000-6 Type C Gen2	Available	-
ISO/IEC 15693 <ul style="list-style-type: none">• ICODE SLI/SLIX/SLIX-S• Tag-it HF-I• my-d	-	Available
ISO/IEC 14443 Type A <ul style="list-style-type: none">• NTAG203• NTAG210• NTAG213/215/216• MIFARE UltraLight• MIFARE UltraLight C• my-d move NFC	-	Available
ISO/IEC18092 <ul style="list-style-type: none">• FeliCa Lite-S	-	Available

Configuring the Product to Encode Inlays

This topic explains the procedures on how to configure the product to encode your inlays.

- 1. Examine the media to determine the product settings.**

Refer to the CL4NX Inlay Configuration Guide for the measurements you should take and what they mean, as well as a list of inlays and their required configurations.

To see the CL4NX Inlay Configuration Guide, access the following URL:

<http://www.satoworldwide.com/rfid/>


- 2. Press the  power button of the operator panel until the LED lights up in blue to power on the product.**
- 3. When the product is in Online mode, press the  button on the operator panel to change to Offline mode.**



- 4. Press the  button to show the [Settings] menu.**
- 5. Press the  /  buttons to select [Interface] and then press the  button.**




6. Press the  /  buttons to select [RFID] and then press the  button.

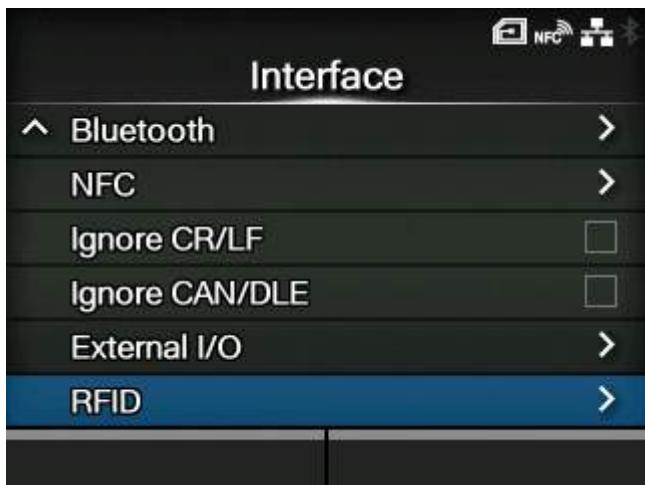

The [RFID] screen appears.

7. Press the  /  buttons to select the item you want to set and then press the  button.

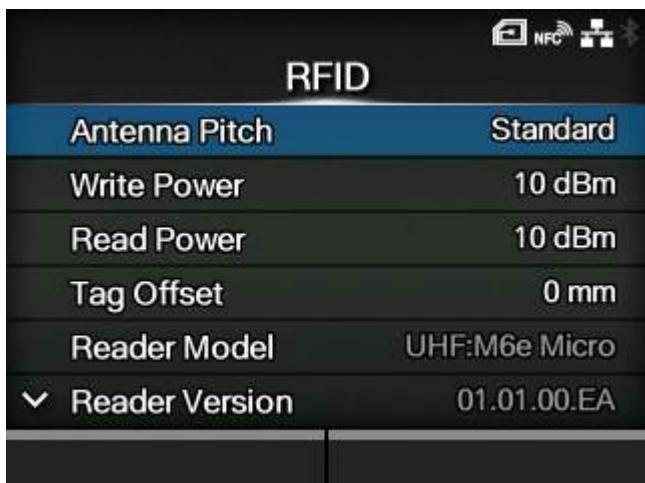


The adjusting screen appears.

8. Open the top cover (1).




- Open the top cover fully to prevent accidental drop of the cover.

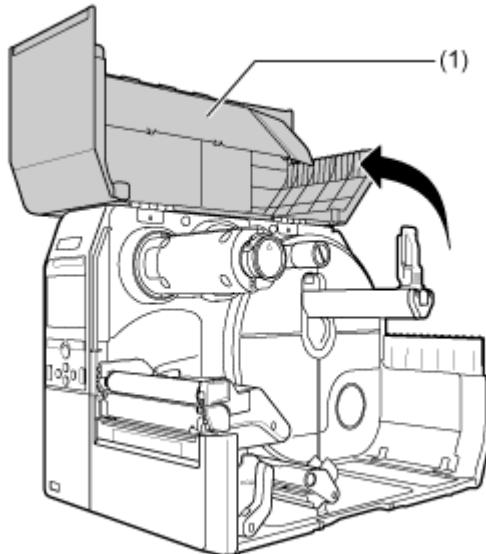

9. Push the head lock lever (2) towards the rear to unlock the print head.



- The print head and its surroundings are hot after printing. Be careful not to touch it, to avoid being burned.
- Touching the edge of the print head with your bare hand could cause injury.

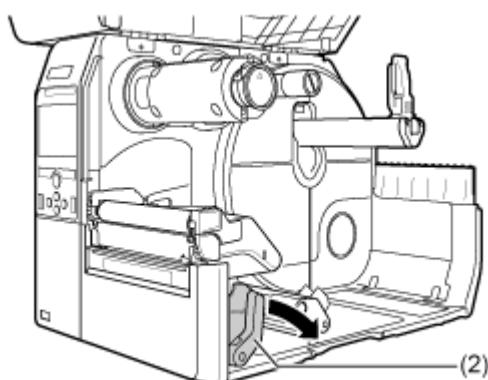


10. Adjust the position of the RFID antenna. Rotate the dial (3) to align the pointer ▼ (4) with the media being used.

When [Antenna Pitch] is set to [Standard] in the [Interface] > [RFID] menu, adjust the physical position of the antenna according to the settings required for the specific media and inlay used.

Refer to the "Antenna Position" of the Inlay Placement & Configuration Table in the CL4NX Inlay Configuration Guide.

To see the CL4NX Inlay Configuration Guide, access the following URL:

<http://www.satoworldwide.com/rfid/>

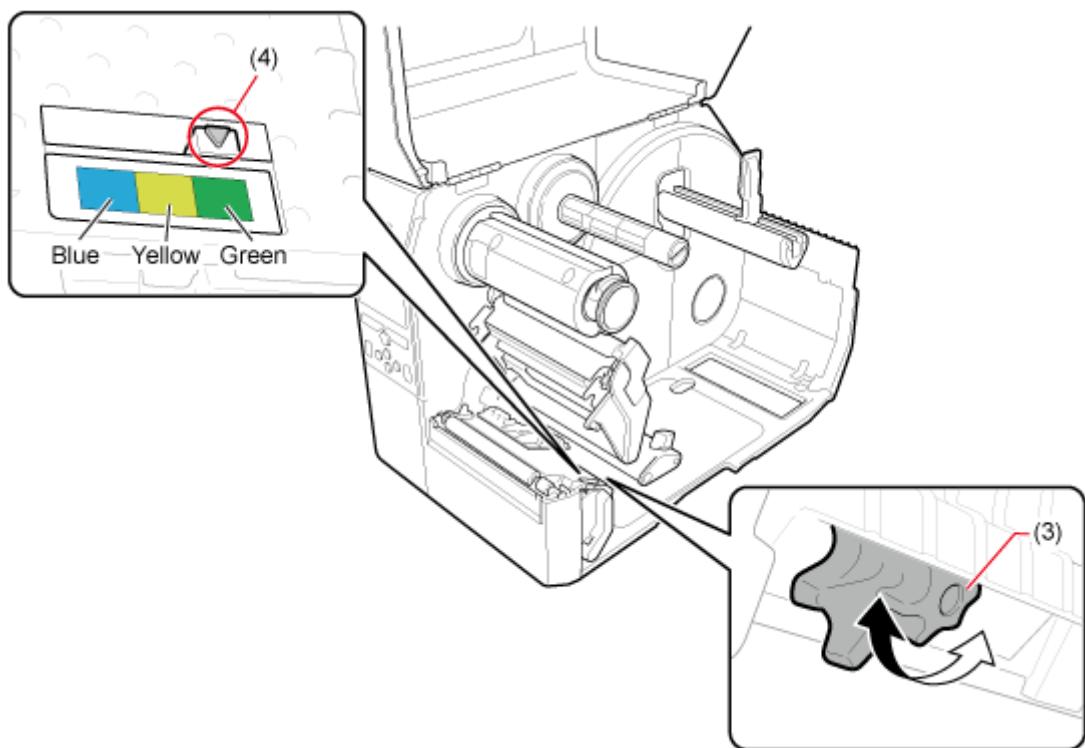

11. Load the media and ribbon.

12. Confirm the operation by printing/encoding a media.

Make sure that you read the data and check that it is correctly encoded.

Printing RFID Tag Errors


If the recorded data on a tag is incomplete due to writing on a defective tag, the product will print an RFID tag error to the defective media. This function is to prevent the distribution of defective media with a tag error.

When an RFID tag error occurs, the product prints a slash and the error message, such as "WRITE TAG ERROR" or "TAG NOT FOUND". The position to print the message and slash is set using the specified media size command <A1>.


For a write error such as "WRITE TAG ERROR", the product continues to print the first 16 or 32 bytes of the write data.

The diagram below shows the message and slash printed on the position based on the media size specified by the normal print.

WRITE TAG ERROR in RFID Write Command

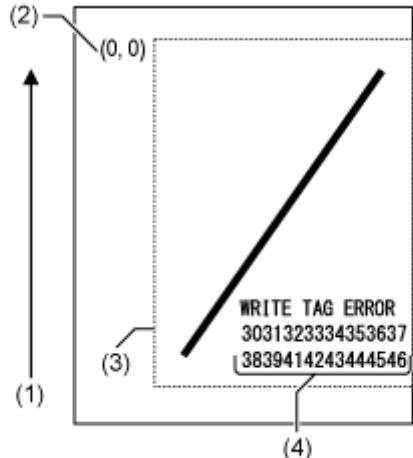


**Read Error in UID/EPC/IDm Print Command
<TU> or TAG NOT FOUND Error**

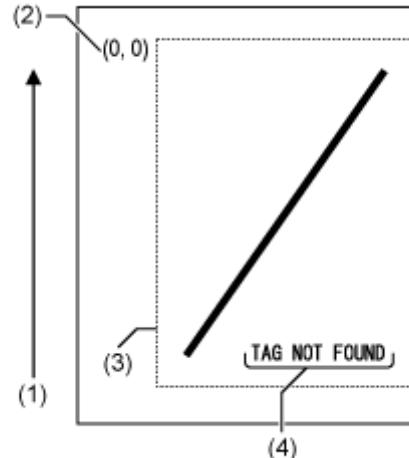

For other errors, the product prints the error message accordingly.

TAG NOT FOUND Error in RFID Write Command

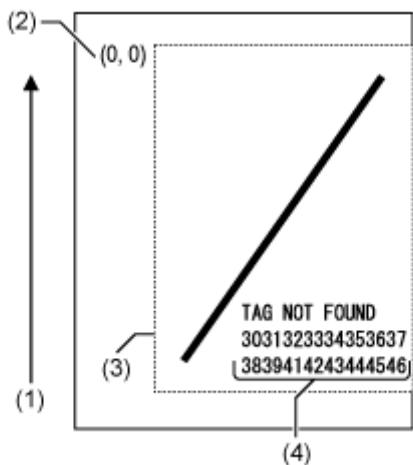

- (1) Feed direction
- (2) The origin of the range specified by the media size command <A1>
- (3) The range specified with the media size command <A1>
- (4) The dump for the first 16 or 32 bytes of the write data




- When a character overlaps with the slash, the character will inverse from black to white.



When using a small-size label (about the size of P30 X W40 mm (P1.18" X W1.57"), for example) or not enough for setting margin, the slash and error message are printed overlap on each other. The overlapped area are inverse from black to white. There is no dump printing.

TAG NOT FOUND Error in RFID Write Command

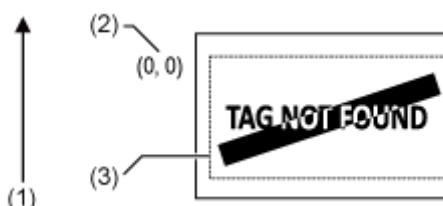


- (1) Feed direction
- (2) The origin of the range specified by the media size command <A1>
- (3) The range specified with the media size command <A1>

If not specified by the media size command <A1>, the product prints the RFID error using a fixed size of P30 X W40 mm (P1.18" X W1.57"). When a character overlaps with the slash, the character will inverse from black to white.


WRITE TAG ERROR in RFID Write Command

**Read Error in UID/EPC/IDm Print Command
<TU> or TAG NOT FOUND Error**

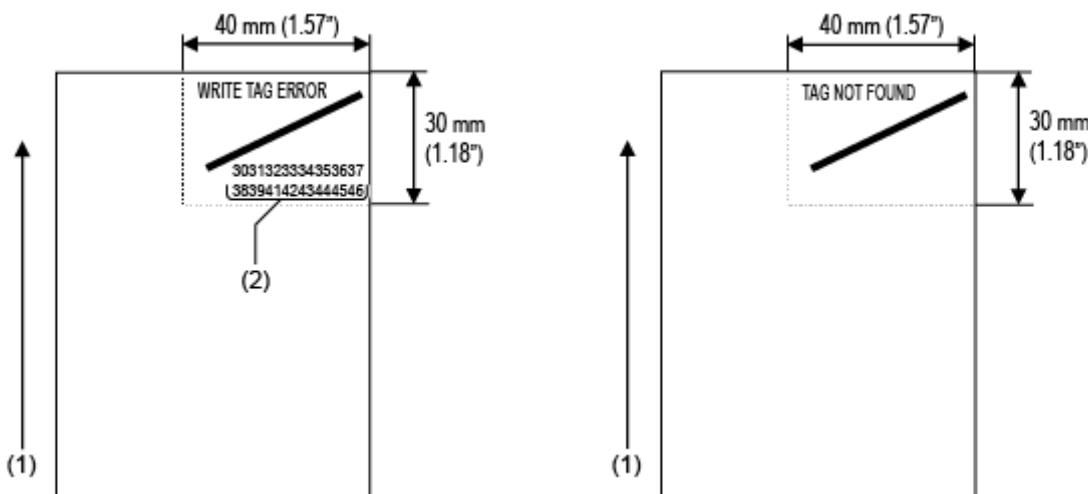

For other errors, the product prints the error message accordingly.

TAG NOT FOUND Error in RFID Write Command

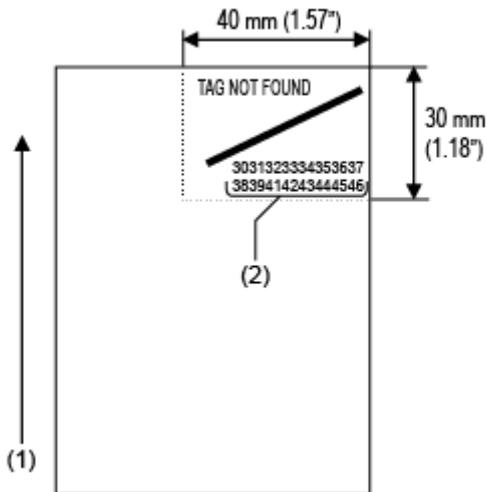

- (1) Feed direction
 (2) The dump for the first 16 or 32 bytes of the write data

The types of errors to print are as follows:


Message	Cause and Countermeasure
TAG NOT FOUND	<p>Cause Did not find the tag to print, or failed to read the tag.</p> <p>Countermeasure Confirm the inlay operation and check the product/antenna settings.</p>
WRITE TAG ERROR	<p>Cause Failed to write the tag.</p> <p>Countermeasure Confirm the inlay operation and check the product/antenna settings.</p>
PROTECT (TAG) ERROR	<p>Cause</p> <ol style="list-style-type: none"> 1. Tried to write to a locked tag. 2. Tried to write to an address that is not permitted. <p>Countermeasure Use media that is not locked.</p>
VERIFY TAG ERR(OR)	<p>Except FeliCa</p> <p>Cause The written data and read data do not match.</p>

Message	Cause and Countermeasure
	<p>Countermeasure Confirm the inlay operation and check the product/antenna settings.</p> <p>Only for FeliCa</p> <p>Cause The written data and read data do not match. A value greater than original data was written to subtraction register.</p> <p>Countermeasure Write an appropriate value to subtraction register.</p>
LOCKING ERROR	<p>Cause Failed to lock the tag.</p> <p>Countermeasure Check the media.</p>
WRONG TID ERROR	<p>Only for ISO/IEC 15693, ISO/IEC 14443 Type A</p> <p>Cause Read the UID of the tag other than the specified tag.</p> <p>Countermeasure Check the tag type setting and the label.</p>
MULTI TAGS ERROR	<p>Except FeliCa</p> <p>Cause Multiple tags detected at a time.</p> <p>Countermeasure Confirm the inlay operation and check the product/antenna settings.</p>
	<p>Only for FeliCa</p> <p>Cause The captured IDm of the card is inconsistent between processes. (Tried to write to a wrong card.)</p> <p>Countermeasure Confirm the inlay operation and check the product/antenna settings.</p>
DIFFER EPC ERROR	<p>Only for UHF</p> <p>Cause Detected inconsistent EPC during a series of processes.</p>


Message	Cause and Countermeasure
	<p>Countermeasure</p> <p>Check the media.</p>
READ ONLY ERROR	<p>Only for UHF</p> <p>Cause</p> <ol style="list-style-type: none"> 1. Tried to write to a write-locked tag. 2. Tried to write to a tag when the write power is low. <p>Countermeasure</p> <ol style="list-style-type: none"> 1. Use media that is not locked. 2. Adjust [Write Power]/[Read Power].
DIFFER TAG KIND	<p>Only for ISO/IEC 15693, ISO/IEC 14443 Type A</p> <p>Cause</p> <p>Incorrect tag type is specified.</p> <p>Countermeasure</p> <p>Check the tag type, and specify the correct tag type.</p>
LOST HANDLE ERR	<p>Only for ISO/IEC 15693, ISO/IEC 14443 Type A, FeliCa</p> <p>Cause</p> <p>Failed to acquire the ID.</p> <p>Countermeasure</p> <p>The radio wave condition needs to be improved.</p>

RFID Error and Reset Timing

Error Signal Output with One-shot Pulse

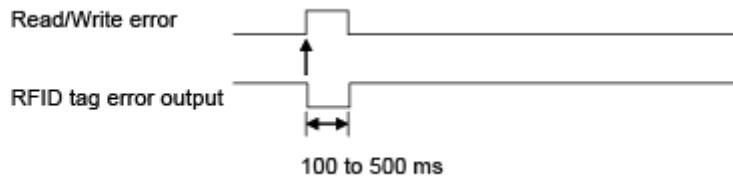

Error Signal Output with Long Pulse

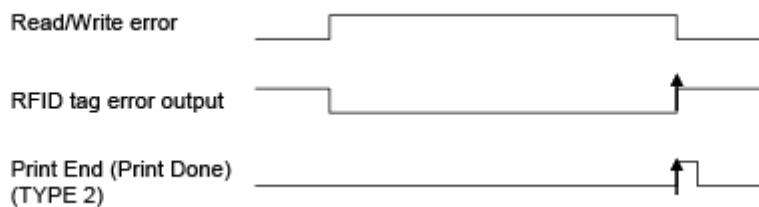

When the reprint count reaches the specified number, the RFID tag error and machine error are outputted at a time. The machine error output is always a long pulse.

Timing Chart of Error Signal Output with One-shot Pulse

Item	RFID Reprint Twice - One-shot Pulse Output Waveform
Error	<p>This timing chart shows the sequence of events for an error condition. It includes four parallel horizontal lines for "Print" (TYPE 1, TYPE 2, TYPE 3, TYPE 4), "Paper End/Ribbon End", "RFID Tag Error", and "Machine Error". A vertical dashed red line marks the "RFID write error" event. Another vertical dashed red line marks the "End of error print". A horizontal double-headed arrow between the "RFID Tag Error" and "Machine Error" lines indicates a duration of "100 to 500 ms". A small horizontal double-headed arrow between the "End of error print" and the end of the "RFID Tag Error" pulse indicates a duration of "20 ms".</p>
Reprint 1st	<p>This timing chart is identical to the one above, showing the sequence of events for the first reprint. It includes four parallel horizontal lines for "Print" (TYPE 1, TYPE 2, TYPE 3, TYPE 4), "Paper End/Ribbon End", "RFID Tag Error", and "Machine Error". A vertical dashed red line marks the "RFID write error" event. Another vertical dashed red line marks the "End of error print". A horizontal double-headed arrow between the "RFID Tag Error" and "Machine Error" lines indicates a duration of "100 to 500 ms". A small horizontal double-headed arrow between the "End of error print" and the end of the "RFID Tag Error" pulse indicates a duration of "20 ms".</p>

Item	RFID Reprint Twice - One-shot Pulse Output Waveform
Reprint 2nd	<p>RFID write error</p> <p>Print</p> <p>Print End (Print Done) TYPE 1</p> <p>TYPE 2</p> <p>TYPE 3</p> <p>TYPE 4</p> <p>Paper End/Ribbon End</p> <p>RFID Tag Error</p> <p>Machine Error</p> <p>End of error print</p> <p>20 ms</p> <p>100 to 500 ms</p>

Timing Chart of Error Signal Output with Long Pulse

Item	RFID Reprint Twice - Level Output Waveform
Error	<p>RFID write error</p> <p>Print</p> <p>Print End (Print Done) TYPE 1</p> <p>TYPE 2</p> <p>TYPE 3</p> <p>TYPE 4</p> <p>Paper End/Ribbon End</p> <p>RFID Tag Error</p> <p>Machine Error</p> <p>End of error print</p> <p>20 ms</p>
Reprint 1st	<p>RFID write error</p> <p>Print</p> <p>Print End (Print Done) TYPE 1</p> <p>TYPE 2</p> <p>TYPE 3</p> <p>TYPE 4</p> <p>Paper End/Ribbon End</p> <p>RFID Tag Error</p> <p>Machine Error</p> <p>End of error print</p> <p>20 ms</p>

Item	RFID Reprint Twice - Level Output Waveform
Reprint 2nd	<p>RFID write error</p> <p>Print</p> <p>Print End (Print Done) TYPE 1</p> <p>TYPE 2</p> <p>TYPE 3</p> <p>TYPE 4</p> <p>Paper End/ Ribbon End</p> <p>RFID Tag Error</p> <p>Machine Error</p> <p>End of error print</p> <p>20 ms</p>

External Signal (EXT) Interfaces When RFID Mode Is Enabled

The following tables are the comparison of EXT signal between RFID mode is disabled or enabled.

RFID Mode Disabled

Standard specification is applied when the RFID mode is disabled.

Pin No.	Signal	I/O
1	Paper End	Output
2	Ground	-
3	Ribbon End	Output
4	Machine Error	Output
5	Print Start (PRIN)	Input
6	Print Done/Print End (PREND)	Output
7	Reprint (PRIN2)	Input
8	External Power Supply	Input
9	Online	Output
10	Ribbon Near End	Output
11	N/A	-
12	+24V	Output
13	+5V	Output
14	Frame Ground	-

RFID Mode Enabled

The function indicated in bold text is applied to 1, 3, and 4 of Pin No. when the RFID mode is enabled.

Pin No.	Signal	I/O
1	Paper End + Ribbon End	Output
2	Ground	-
3	RFID Tag Error	Output
4	Machine Error/RFID Error	Output
5	Print Start (PRIN)	Input


External Signal (EXT) Interfaces When RFID Mode Is Enabled

Pin No.	Signal	I/O
6	Print Done/Print End (PREND)	Output
7	Reprint (PRIN2)	Input
8	External Power Supply	Input
9	Online	Output
10	Ribbon Near End	Output
11	N/A	-
12	+24V	Output
13	+5V	Output
14	Frame Ground	-

RFID Printing Tips

Recommended Non-printable Zone

Avoid printing barcodes or characters directly on top of an RFID chip. The uneven surface will negatively affect the print quality.

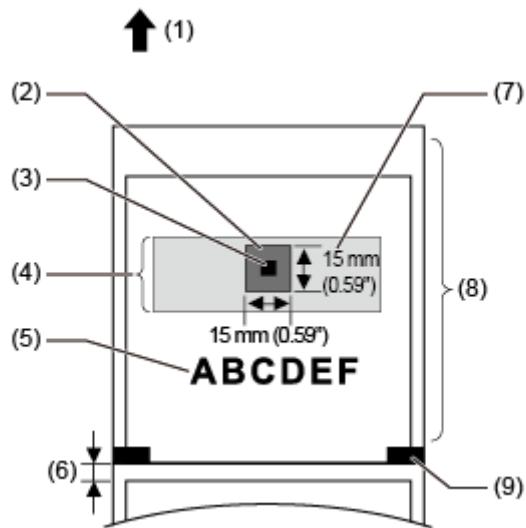

- (1) Feed direction
- (2) Recommended non-printable zone
- (3) IC chip
- (4) Inlay
- (5) Print object
- (6) Gap
- (7) Antenna
- (8) RFID tag/label
- (9) I-mark



Configuring Optional Barcode Check Function



Basic Specifications of the Barcode Check Function



The barcode check function does a reading check of a barcode printed by this product to prevent the distribution of labels with defective barcodes. You can use this function by installing the supported barcode checkers to the product.


The basic specifications of the barcode check function are as follows:


Item	Specification
Supported Barcode Checkers	<ul style="list-style-type: none"> • IDEC/DATALOGIC (USB connection) <ul style="list-style-type: none"> ◦ WB1F-100S1S (for 1D barcodes) ◦ GFS4170 (for 1D barcodes) ◦ GFS4470 (for 1D barcodes/2D codes) • KEYENCE (RE-232C connection) <ul style="list-style-type: none"> ◦ BL-1301 (for 1D barcodes) ◦ SR-710 (for 1D barcodes/2D codes) <p>Refer to the manual of the barcode checker for its settings and supported barcodes.</p>
Supported Commands	<p>SBPL/SZPL/SIPL/STCL/SDPL/SEPL</p> <hr/>  • AEP is not supported. <hr/>
Supported Print Modes	<p>Continuous/Cutter/Cut & Print/Dispenser/Linerless (CL4NX only)</p> <hr/>  • Not available in Tear-Off mode. • Not available for CL4NX RFID models. • The Void Print function is not available in Dispenser/Linerless (CL4NX only) mode. <hr/>
Print Speed/Print Darkness	<p>The optimal print speed and print darkness for secure reading vary depending on various conditions, such as the barcode type and label layout. Be sure to perform a test read carefully and determine the settings.</p>
Printable Area (Barcode Readable Area)	<p>Same as the product specifications. However, there are following restrictions:</p>

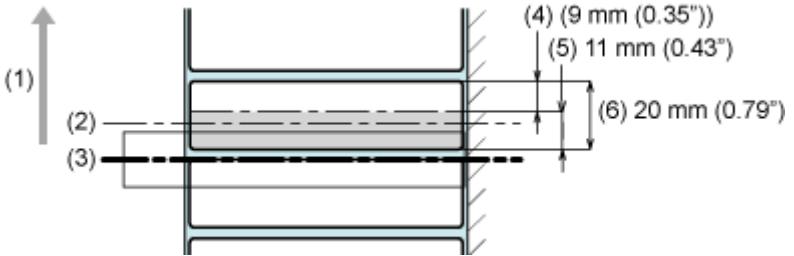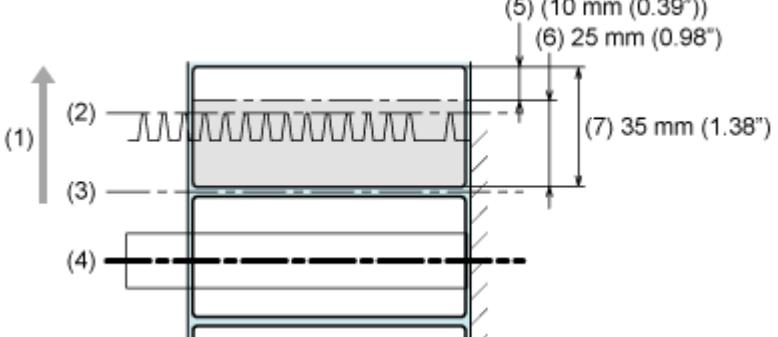Item	Specification
	<p>Continuous mode</p> <p>Barcodes printed within the range of 11 mm (0.43") from the trailing end of the label cannot be read because it is blocked by the print head and ribbon adjustment plate.</p>  <p>(1) Media feed direction (2) Ribbon adjustment plate (3) Print head (4) Readable area (for the minimum media pitch) (5) Unreadable area (6) Minimum media pitch</p> <p>Cutter/Cut & Print mode</p> <p>Barcodes printed within the following area cannot be read because it is blocked by the cutter cover.</p> <ul style="list-style-type: none"> ◦ Cutter (cutting every label): 25 mm (0.98") from the trailing end of the label  <p>(1) Media feed direction (2) Cutter cover (3) Cut position (4) Print head (5) Readable area (for the minimum media pitch) (6) Unreadable area (7) Minimum media pitch</p> <ul style="list-style-type: none"> ◦ Cutter (cutting according to the specified number of labels)/ Cut & Print: 44 mm (1.73") from the trailing end of the label

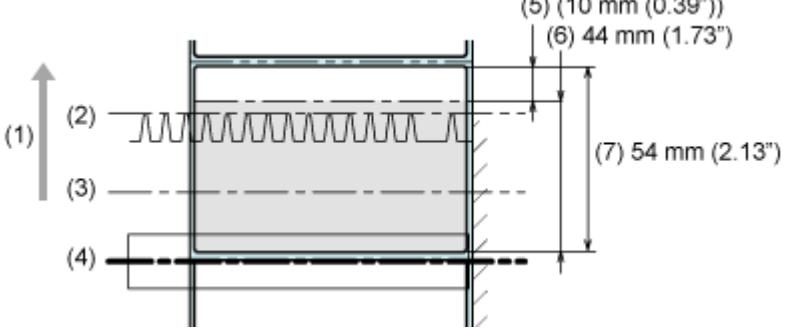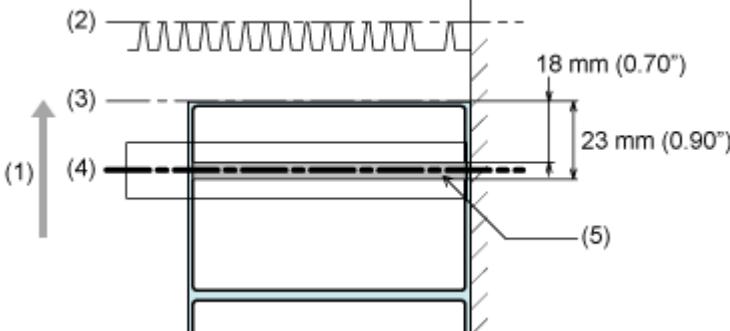Item	Specification
	 <p>(1) Media feed direction (2) Cutter cover (3) Cut position (4) Print head (5) (10 mm (0.39")) (6) 44 mm (1.73") (7) 54 mm (2.13")</p> <p>Cut & Print mode</p> <p>Do not print a 2D code or serial barcode (90° or 270° orientation in relation to the media feed direction) within the following area as it may cause a white void.</p> <ul style="list-style-type: none"> CL4NX: 18 to 23 mm (0.70" to 0.90") from the front end of the label (cut position)  <p>(1) Media feed direction (2) Cutter cover (3) Cut position (4) Print head (5) Range in which white voids occur 18 mm (0.70") 23 mm (0.90")</p> <ul style="list-style-type: none"> CL6NX: 19 to 25 mm (0.75" to 0.98") from the front end of the label (cut position)

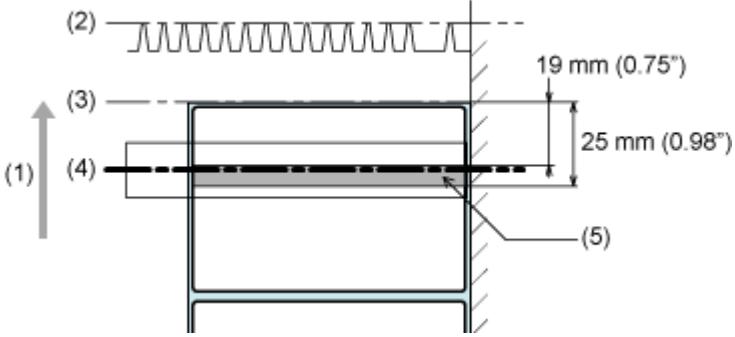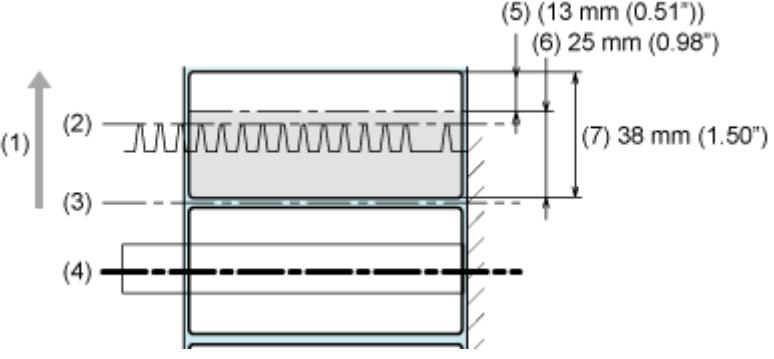Item	Specification
	 <p>(1) Media feed direction (2) Cutter cover (3) Cut position (4) Print head (5) Range in which white voids occur</p> <p>Linerless mode (CL4NX only)</p> <p>Barcodes printed within a range of 25 mm (0.98") from the trailing end of the label cannot be read as it is blocked by the cutter cover.</p>  <p>(1) Media feed direction (2) Cutter cover (3) Cut position (4) Print head (5) Readable area (for the minimum media pitch) (6) Unreadable area (7) Minimum media pitch</p>
Usable Media Sizes	Media width Same as the product specifications.
Media Pitch	<p>The minimum size is different from the product specifications.</p> <p>Continuous mode</p> <ul style="list-style-type: none"> ◦ 203 dpi: 20 to 2497 mm (0.79" to 98.30") (with liner: 23 to 2500 mm (0.90" to 98.42")) ◦ 305 dpi: 20 to 1497 mm (0.79" to 58.94") (with liner: 23 to 1500 mm (0.90" to 59.05"))

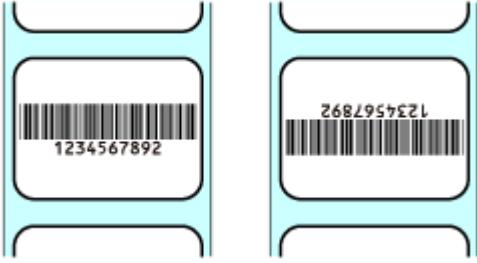Item	Specification
	<ul style="list-style-type: none"> ◦ 609 dpi (CL4NX only): 20 to 397 mm (0.79" to 15.63") (with liner: 23 to 400 mm (0.90" to 15.75")) <p>Cutter mode (cutting every label)</p> <ul style="list-style-type: none"> ◦ 203 dpi: 35 to 2497 mm (1.38" to 98.30") (with liner: 38 to 2500 mm (1.50" to 98.42")) ◦ 305 dpi: 35 to 1497 mm (1.38" to 58.94") (with liner: 38 to 1500 mm (1.50" to 59.05")) ◦ 609 dpi (CL4NX only): 35 to 397 mm (1.38" to 15.63") (with liner: 38 to 400 mm (1.50" to 15.75")) <p>Cutter (cutting according to the specified number of labels)/Cut & Print mode</p> <ul style="list-style-type: none"> ◦ 203 dpi: 54 to 2497 mm (2.13" to 98.30") (with liner: 57 to 2500 mm (2.24" to 98.42")) ◦ 305 dpi: 54 to 1497 mm (2.13" to 58.94") (with liner: 57 to 1500 mm (2.24" to 59.05")) ◦ 609 dpi (CL4NX only): 54 to 397 mm (2.13" to 15.63") (with liner: 57 to 400 mm (2.24" to 15.75")) <p>Dispenser mode</p> <ul style="list-style-type: none"> ◦ 27 to 397 mm (1.06" to 15.63") (with liner: 30 to 400 mm (1.18" to 15.75")) <p>Linerless mode (CL4NX only)</p> <ul style="list-style-type: none"> ◦ 38 to 120 mm (1.50" to 4.72")
Usable Media Types	Same as the product specifications. If the label color is silver or laminated, however, it makes it difficult for the barcode checker to read the barcode, as the light of the barcode checker may cause a reflection on the label surface. Be sure to do a test read carefully in advance.
Readable Barcode Orientations	<p>1D Barcode Checker</p>  <p>(1) Media feed direction</p>

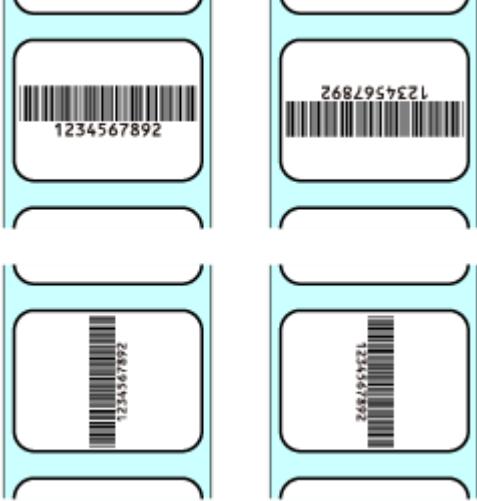Item	Specification
	<p>2D Code Checker</p>  <p>(1) Media feed direction</p> <p>Place the barcode within the size of the visual field. Do a test read carefully in advance.</p>
Recommended Barcode Sizes	<p>1D Barcode</p> <p>Narrow bar: 0.25 mm (0.01") or greater</p> <ul style="list-style-type: none"> • 203 dpi: 2 dots or more • 305 dpi: 3 dots or more • 609 dpi (CL4NX only): 6 dots or more <p>Refer to the specifications of each barcode checker.</p>
	<p>2D Code</p> <p>Cell size: 0.25 mm (0.01") or greater</p> <ul style="list-style-type: none"> • 203 dpi: 2 dots or more • 305 dpi: 3 dots or more • 609 dpi (CL4NX only): 6 dots or more <p>Refer to the specifications of each barcode checker.</p> <p>The size of the visual field conforms to the specifications of the barcode checker.</p>

Available Code Formats

The barcode check function supports the following code formats. Check the specifications of the barcode checker to ensure compatibility with the available code types.

Code Type	Available code formats
1D Barcodes	CODABAR(NW-7) CODE39, CODE93, CODE128 JAN/EAN-13/8 UPC-A/UPC-E

Code Type	Available code formats
	ITF Industrial 2 of 5 Matrix 2 of 5 MSI GS1-128 POSTNET IMB (USPS) GS1 DataBar Omnidirectional GS1 DataBar Truncated GS1 DataBar Limited GS1 DataBar Expanded GS1 DataBar Stacked GS1 DataBar Stacked Omnidirectional GS1 DataBar Expanded Stacked
2D Codes	PDF417 Micro PDF417 Maxi Code QR Code Micro QR Code Data Matrix Aztec Code
Combined Symbols	JAN/EAN-13/8(CC-A/CC-B) UPC-A/UPC-E(CC-A/CC-B) GS1-128(CC-A/CC-B/CC-C) GS1 DataBar(CC-A/CC-B)



- To use the comparison mode, create barcodes by using barcode commands. If a barcode such as graphic data (BMP image, etc.) or a preprinted barcode is placed within the barcode readable area, this mode may not function correctly.



- In readable mode, you can include barcodes that are not created by barcode commands (such as graphic data or preprinted barcodes) as the check target. To do this, select [Settings] in [Set No. of Barcodes], and specify the number of barcodes per label in [Barcodes per Label]. However, there may be a case that those barcodes cannot be read by scanners thus this mode does not function correctly.

Setting Up the Barcode Checker

Operational Settings for the Barcode Checker and Installation

To use the barcode check function, perform necessary operational settings for the supported barcode checker and then install it to the product.

Operational Settings for the Barcode Checker

Set up the barcode checker either by using the application software provided by its manufacturer or by reading the barcodes for setting changes printed on the barcode checker's manual. For details, refer to the manual.

- **Settings common to all supported barcode checkers**

Limit the barcode types you permit the barcode checker to read as much as possible. If a lot of barcode types are permitted, a longer decode time is required. This can cause the barcode checker to fail to read the printed barcode.
- **GFS4170, GFS4470**
 - Select USB-COM. The product cannot detect the barcode checker when connected with other settings.
- **GFS4470**
 - To shorten laser lighting time, it is recommended to set the reading mode to "On Line" or "Serial On Line".
 - If multiple barcodes are captured at once when using the default barcode checker settings, only the first set of decoded barcode data is sent. You can change the settings to decode and send all the captured barcodes. However, if this is done, combined symbols cannot be read.
 - When printing barcodes in a narrow range, allow enough time for decoding (parameter: DETM), otherwise not all of the results of the decoded captured barcodes will be sent.
 - Because postal barcodes consist of bars and spaces with equal intervals, they may be read as a different barcode type. When checking postal barcodes, it is recommended to set other barcode types to be unreadable.
- **KEYENCE barcode checkers (BL-1301, SR-710)**

Set the barcode checker's interface settings to either (1) or (2).
If the barcode checker set to (1) is connected, the product will change the settings to (2).

Settings	(1)	(2)
Baud rate	9600 bps	115200 bps
Data length	7 bits	8 bits
Parity	Even	Even
Stop bit length	1 bit	1 bit

Barcode Checker Installation

Mount the barcode checker to the optional barcode checker stand kit and connect it to the product.

For details on how to install the barcode checker, refer to the Barcode Checker Stand Kit Installation Manual that came with the barcode checker stand kit.



- Because the KEYENCE barcode checkers (BL-1301, SR-710) use an RS-232C connection, an optional scanner connection cable is required.
- When replacing media or ribbon, remove the barcode checker stand kit from the product. When doing this, first turn the switch of the magnetic base stand to OFF and remove the barcode checker stand. For details on how to use the barcode checker stand, refer to the Barcode Checker Stand Kit Installation Manual.

Changing How the RS-232C Interface is Used (When Using the KEYENCE Barcode Checkers)


When using one of the KEYENCE barcode checkers (BL-1301, SR-710), modify the barcode checker's operational settings so that it can communicate with the product, and then connect it to the product. After connecting the barcode checker to the product, change the [Interface] setting of the RS-232C interface to [RS-232C Reader] on the product. With this setting, the product can detect the barcode checker and automatically connect with it according to the barcode checker's interface settings.

- After connecting the barcode checker, press the  power button on the operator panel until the LED lights up in blue to power on the product.
- When the product is in Online mode, press the  button on the operator panel to change to Offline mode.




- Press the  button to show the [Settings] menu.

4. Press the buttons to select [Tools], and then press the button.

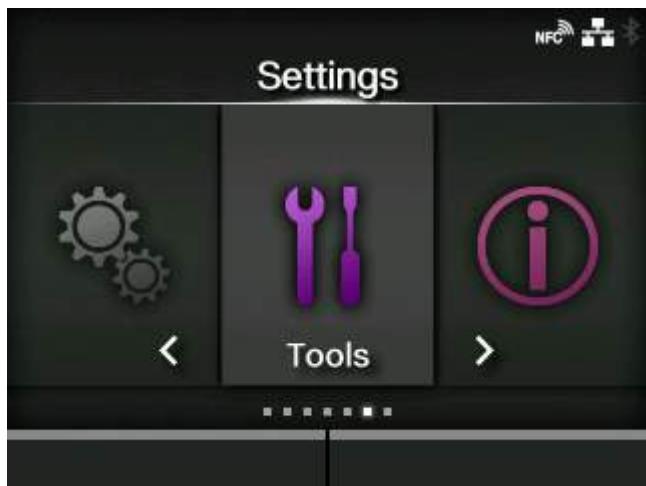

5. Press the buttons to select [Barcode Checker] > [Test] > [Interface], and then press the button.

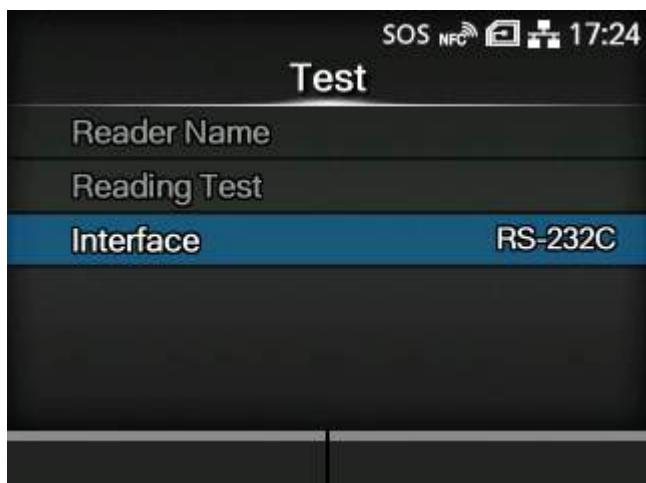

6. Press the buttons to select [RS-232C Reader].



7. Press the button to save the setting value.

8. Press the  button to change to Offline mode.

9. Power the product off, and then on again.

When the product is powered on, the barcode checker is also powered on automatically.



- When the barcode checker is powered on, it emits a laser light. Be sure to keep the laser away from your eyes.
- When using GFS4170, it keeps emitting a laser light while the product is powered on. To turn off the laser light, power off the product.

Once the connection between the product and the barcode checker is complete, the barcode checker icon appears on the status bar of the display.



Do a test read with the barcode checker to confirm that it functions correctly.



- If the product cannot detect the barcode checker, check if the operational settings of the barcode check are appropriate.

Doing a Test Read with the Barcode Checker

Prepare a label on which the barcode data you use is printed by this product.

After performing operational settings of the barcode checker and then connecting it to the product, perform a test read from the product's [Settings] menu to confirm that the barcode checker functions correctly.

1. After connecting the barcode checker, press the  power button on the operator panel until the LED lights up in blue to power on the product.

When the product is powered on, the barcode checker is also powered on automatically.



- When the barcode checker is powered on, it emits a laser light. Be sure to keep the laser away from your eyes.
- When using GFS4170, it keeps emitting a laser light while the product is powered on. To turn off the laser light, power off the product.

Once the connection between the product and the barcode checker is complete, the barcode checker icon appears on the status bar of the display.




2. When the product is in Online mode, press the button on the operator panel to change to Offline mode.




3. Press the button to show the [Settings] menu.


4. Press the / buttons to select [Tools], and then press the button.

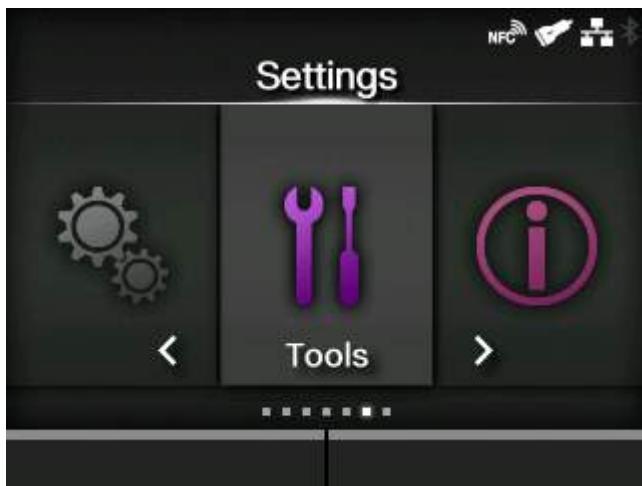


5. Press the / buttons to select [Barcode Checker] > [Test], and then press the button.

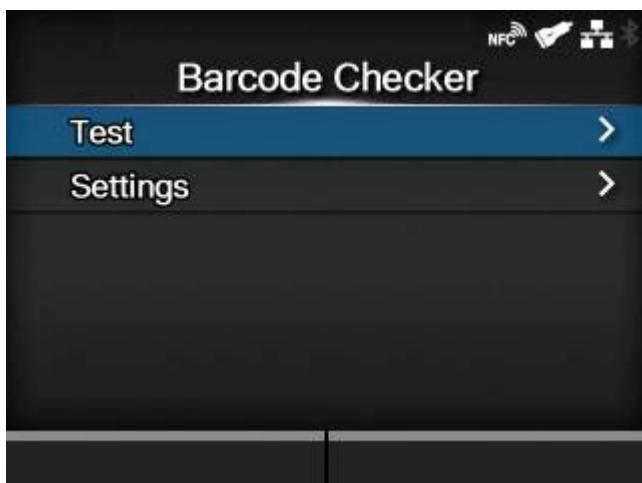


6. Confirm that the type of connected barcode checker is displayed on the right side of [Reader Name].

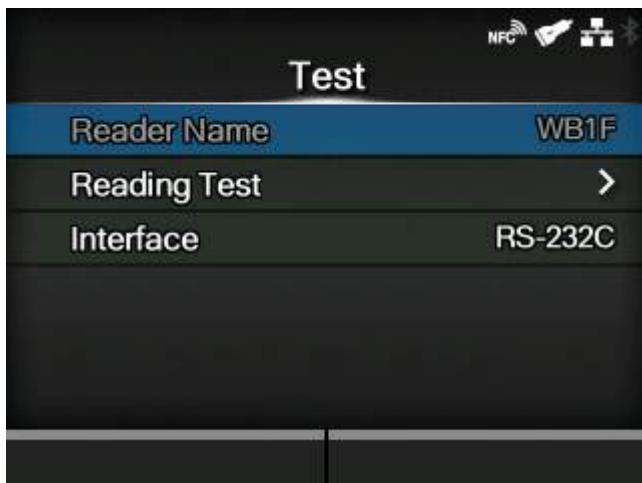

7. Press the buttons to select [Reading Test], and then press the button.
8. Set a label with barcodes within the scanning range of the barcode checker.
9. Press the button to start reading the barcodes.

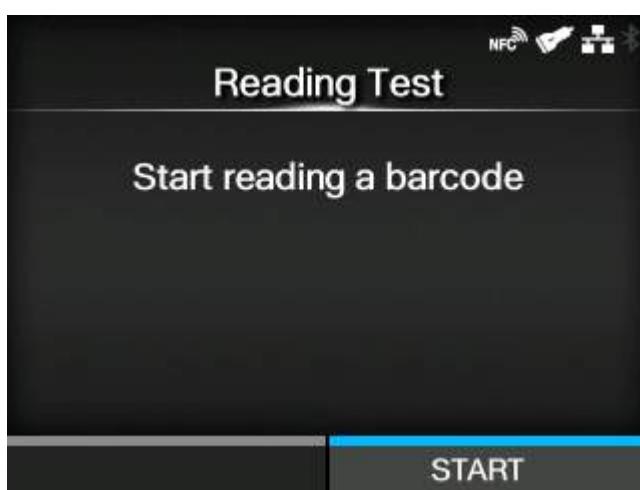

If reading is successful, the barcode type and data read are displayed on the screen. Only the first 23 bytes of data are displayed.

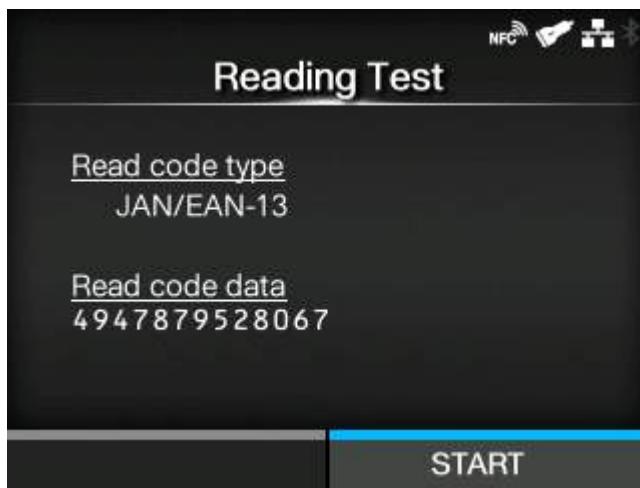

If reading is unsuccessful, or the displayed results of the read are not correct, adjust the position of the barcode checker by using the barcode checker stand. For details on how to use the barcode checker stand, refer to the Barcode Checker Stand Kit Installation Manual that came with the barcode checker stand kit.



- If the product cannot detect the barcode checker, check if the operational settings for the barcode checker are appropriate.

Enabling the Barcode Check


Selecting the Barcode Check Mode

The barcode check function has a readable mode and a comparison mode. You can switch the mode or disable the function from the product's [Settings] menu.


1. When the product is in Online mode, press the  button on the operator panel to change to Offline mode.




2. Press the  button to show the [Settings] menu.
3. Press the  /  buttons to select [Tools], and then press the  button.

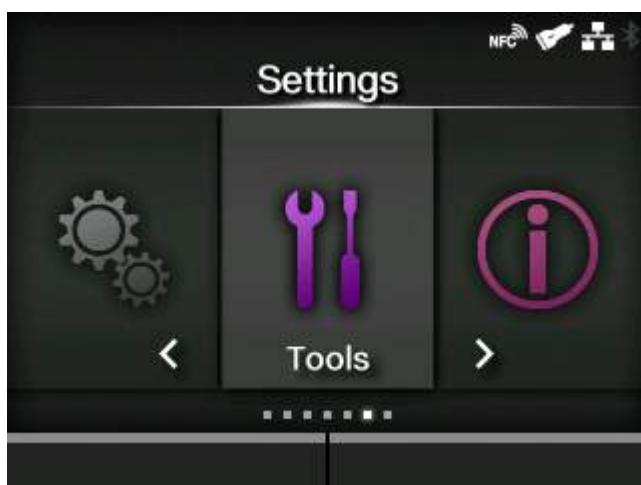

4. Press the / buttons to select [Barcode Checker] > [Settings] > [Mode], and then press the button.

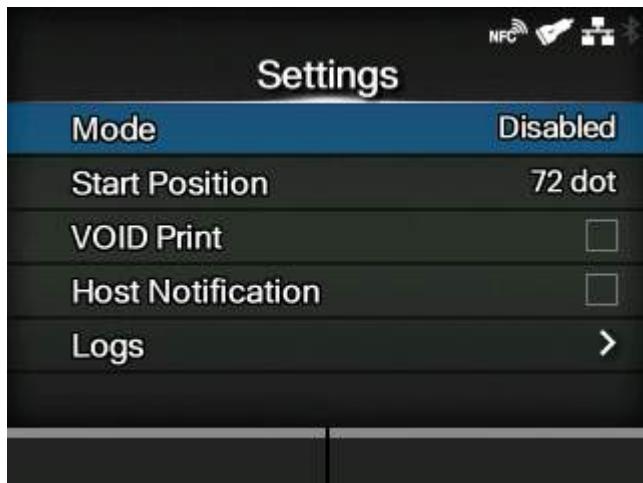

5. Press the / buttons to select the mode for the barcode check function.

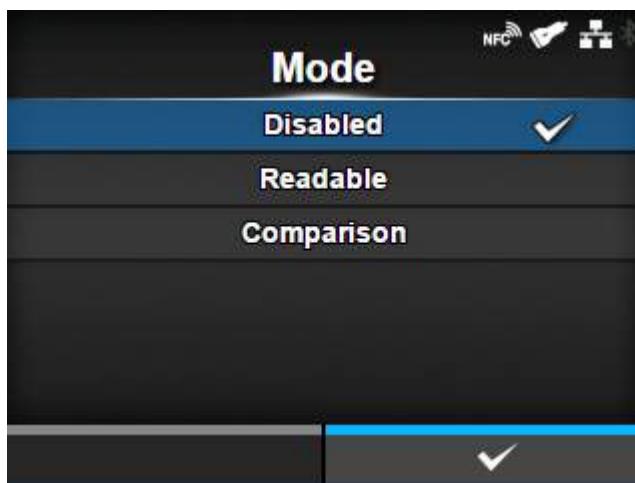

[Disabled]

Disable the barcode check function.

[Readable]

Enable readable mode.

[Comparison]

Enable comparison mode. This mode is for barcodes created by barcode commands.

6. Press the button to save the setting value.



- When the readable mode or comparison mode is set, a barcode reader connection error occurs if the barcode checker is not connected at product startup or at the start of printing.
- Even if the readable mode or comparison mode is set, the barcode check is not done for print data that does not include any barcode data. Normal printing is done for that data.
- In the readable mode, to include barcodes that are not created by barcode commands (such as graphic data or preprinted barcodes) as the check target, select [Settings] in [Set No. of Barcodes], and specify the number of barcodes per label in [Barcodes per Label].
- When [VOID Print] is enabled, you can identify a defective label by printing error marks on it.
- The log data of barcode check results is saved on the product and can be copied to the USB memory from the [Logs] menu. By enabling [Host Notification], you can also return check results to the host from which the print data is sent.

Contents of the Check for Readable Mode and Comparison Mode

The barcode check function has readable mode and comparison mode. The contents of the check for each mode are as follows.




- You can check multiple barcodes on one label. Though the number of barcodes on one label is not limited, a reading error occurs when the total size of the barcode data exceeds 200 Kb.
- In the readable mode, you can include barcodes that are not created by barcode commands (such as graphic data or preprinted barcodes) as the check target, but you need to specify the number of barcodes per label in advance. Select [Settings] in [Set No. of Barcodes], and specify the number of barcodes per label in [Barcodes per Label].
- Reading of barcodes starts after the label length specified in [Start Position] passes. In modes where the product backfeeds before printing, the product backfeeds first, and then feeds the length of the start position.

Readable mode


This mode checks if the printed barcodes are readable. The readability is determined by whether the number of barcodes the barcode checker reads matches the number of barcodes in the print data.

- The reading is considered to be successful if the number of barcodes the barcode checker reads reaches the number of barcodes in the print data. The product prints the next label.

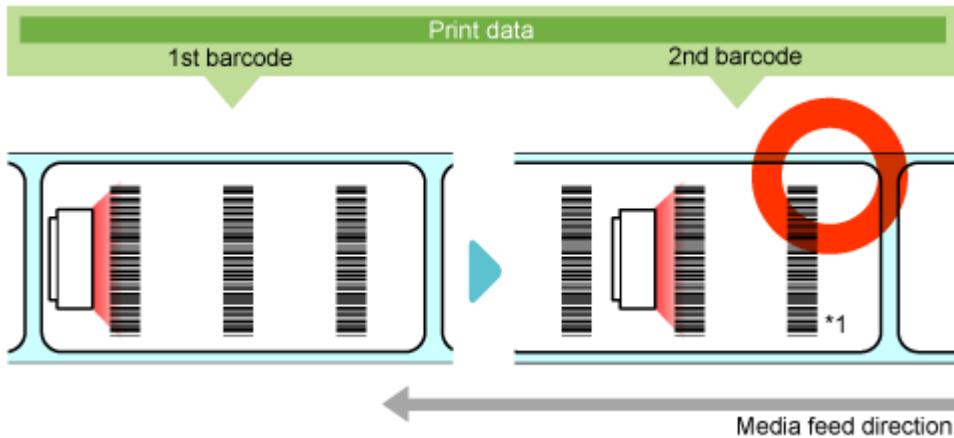

*1 Even if the number of barcodes the barcode checker reads exceeds the number of barcodes in the print data, it is considered to be successful.


- A reading error occurs if the number of barcodes in the print data is not read within the printing period from start to finish and the timeout period (up to 2 seconds).

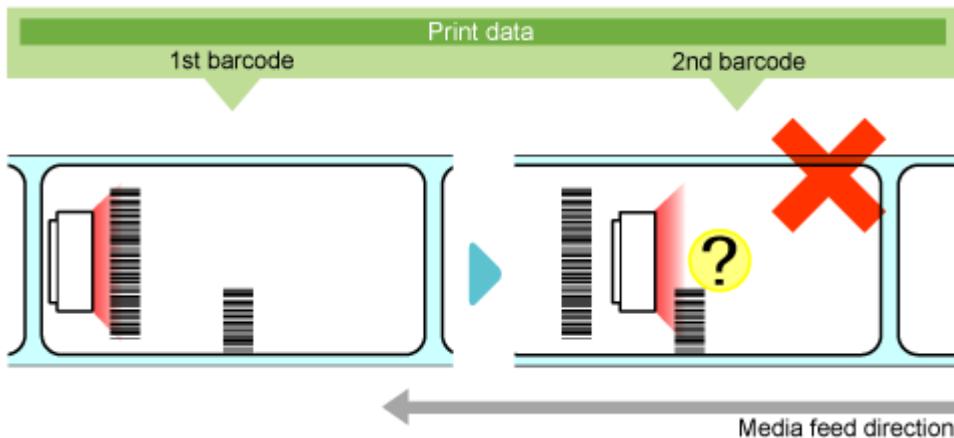


Comparison mode

This mode checks if the read results of the printed barcodes match the barcode data in the print data.

- The reading is considered to be successful if the read results of the printed barcodes match the barcode data in the print data. The product prints the next label.

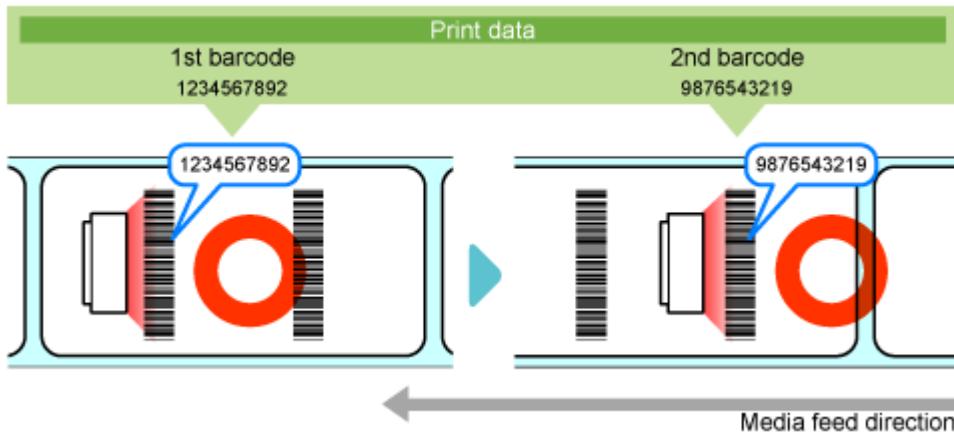

- A comparison error occurs if the read results of the printed barcodes do not match the barcode data in the print data.

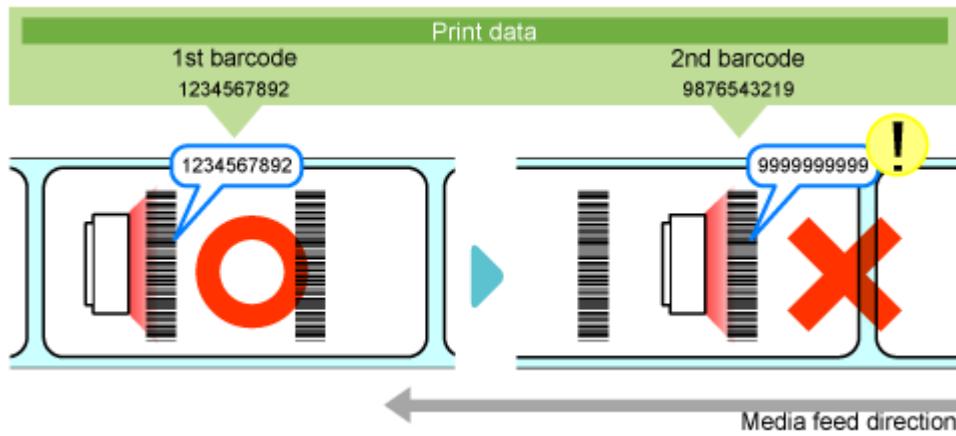


- A reading error occurs if the number of barcodes in the print data is not read within the printing period from start to finish and the timeout period (up to 2 seconds), even if the read results of the printed barcodes do not match the barcode data in the print data.

Restrictions for the Barcode Check Function

Common Restrictions for the Barcode Check Function

- ⚠**
- When the product is powered on while the barcode checker is connected, the barcode checker is also powered on and emits a laser light. Be sure to keep the laser away from your eyes.
 - The reading accuracy of barcodes or 2D codes is affected by label conditions (label curl, print quality, etc.) and the usage environment (ambient light, temperature, humidity, etc.), and readability is not guaranteed. Be sure to do a test read with the barcode checker you will use in advance.
 - The types of paper that can be used are the same as the product specifications. If the label color is silver or laminated, however, it makes it difficult for the barcode checker to read the barcode, as the light of the barcode checker may cause a reflection on the label surface. Be sure to do a test read carefully in advance.
 - Design the label layout so that barcodes or 2D codes do not remain within the scanning range of the barcode checker at the completion of printing. If the barcode of the previous label remains in the scanning range at the start of the next printing, the barcode checker may read the same barcode twice. The image below is when in continuous mode. As the stop position differs depending on the product's print mode and commands, be sure to check your label layout carefully in advance.

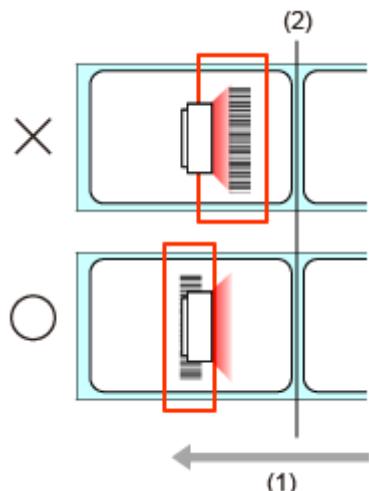

(1) Media feed direction

(2) Print head position

- Barcodes printed within the following range from the print end position cannot be read and a reading error inevitably occurs. As the following table is only for a reference, be sure to do a test read carefully in advance.

Print modes	Ranges to be avoided
Continuous	Approximately 11 mm (0.43") from the print end position
Cutter	Cutting every label Approximately 25 mm (0.98") from the print end position

Print modes	Ranges to be avoided
	Cutting according to the specified number of labels Approximately 44 mm (1.73") from the print end position
Cut & Print	Approximately 44 mm (1.73") from the print end position
Dispenser	No restriction
Linerless (CL4NX only)	Approximately 25 mm (0.98") from the print end position

- The barcode check is not performed if the position at which the check starts is detected after the label feeding begins to stop. Define the label layout and position at which the check starts by keeping in mind that the distance required for stopping is proportional to the print speed.
- Printed barcodes or 2D codes can be read only with a size at which their entire pattern is within the scanning range of the barcode checker. A reading error may occur depending on the print position.
- This function cannot be controlled through the use of external signals (EXT).
- The barcode check function for GS1-128 barcodes is supported by the 1.10.0 version firmware build or later. When using GS1-128, configure the barcode checker to enable the data output format for GS1-128. When CODE128 and GS1-128 are used together with a BL-1301 barcode checker, do the settings in each setting bank. At that time, assign to GS1-128 a number that is smaller than the setting bank of CODE128.
- When powering on the product, do not connect or disconnect the barcode checker. The product may not operate properly.
- Setting the decoding number for BL-1301 and WB1F-100S1S barcode checkers cannot be done from the product by the 1.10.0 version firmware build or later. If a barcode reading error occurs, change the count settings for reading (BL-1301: Decode match count / WB1F-100S1S: Verify count). Also, when using the optional barcode checker stand kit, exclude barcode types other than those to be checked. If any barcode type other than those to be checked is set, a decreased reading speed or misreading other barcode types may occur.
- The barcode data that can be read for 1 item is up to 200 bytes per barcode and up to 200 Kb in total.

Restrictions When Using GF4170

- It keeps emitting a laser light while the product is powered on. To turn off the laser light, power off the product.

Restrictions When Using GFS4470

- By the double-reading prevention function, the barcode checker may not read barcodes that are printed successively if they are within the readable area. Adjust the print position so that same barcodes are not within the readable area.
- When printing composite symbols that use GS1 DataBar, the read data and print data never match if the barcode data is 16 digits or less. A comparison error occurs in comparison mode.
- Though "\\" (0x5C) specified in MAXI code, print data should be read as "\\\" in the specifications. However, it may not be read as such, depending on the following data. For example, "\\A" specified in print data should be read as "\\\\A" in the specifications, but it is actually read as only "A".

Restrictions When Using WB1F-100S1S

- Multiple barcodes cannot be read at the same time.

- When NUL (0x00) is included in CODE128 print data, only the data before NUL is recognized as reading data, and NUL and the data after NUL are ignored. A comparison error occurs in comparison mode. In readable mode, a reading error occurs only if NUL is specified at the beginning of the print data.

Initializing the Product

Procedures for Initializing

Initializing the Data Saved on the Product

Initialize the data saved on the product.

The data to be initialized are the fonts and graphics registered in the product.



- It is generally not necessary to perform the initialization. Doing so could change the print conditions.

- Press the button in Online mode.




The product changes to Offline mode.

2. Press the  button.




The product changes to Settings mode.

3. Select [Tools] using the  /  buttons.

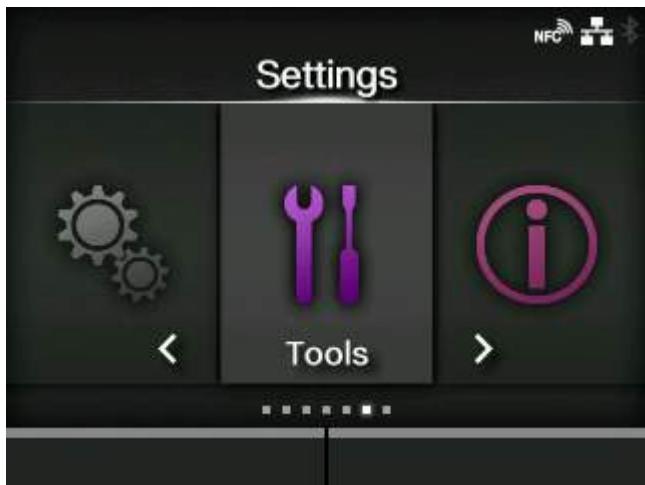


4. Press the  button.

The item list appears.

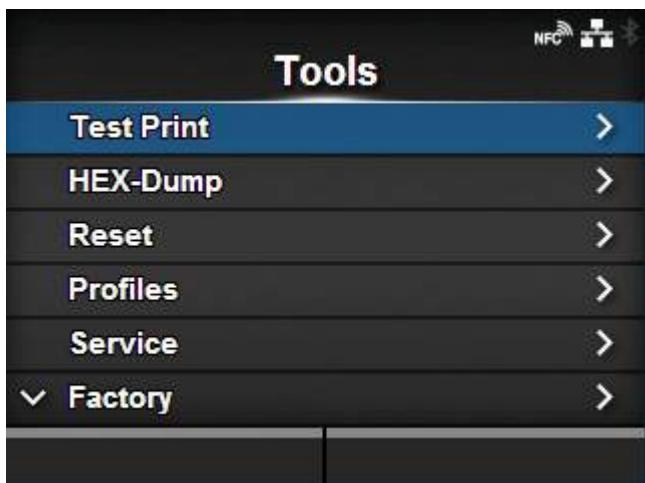


5. Select [Reset] using the / buttons.

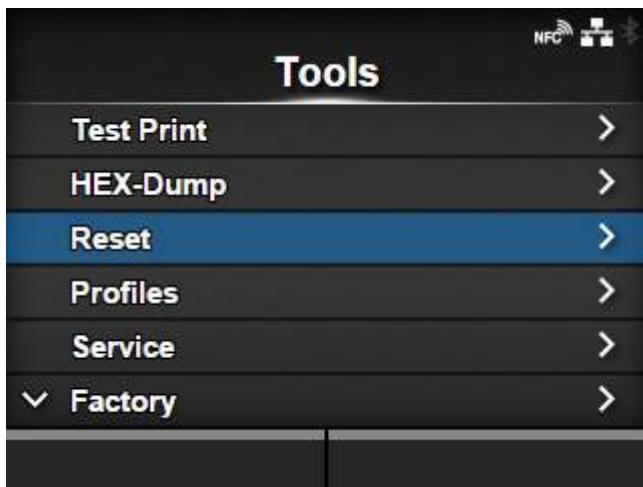

6. Press the button.

The [Select] screen appears.

7. Select [Data] using the / buttons.

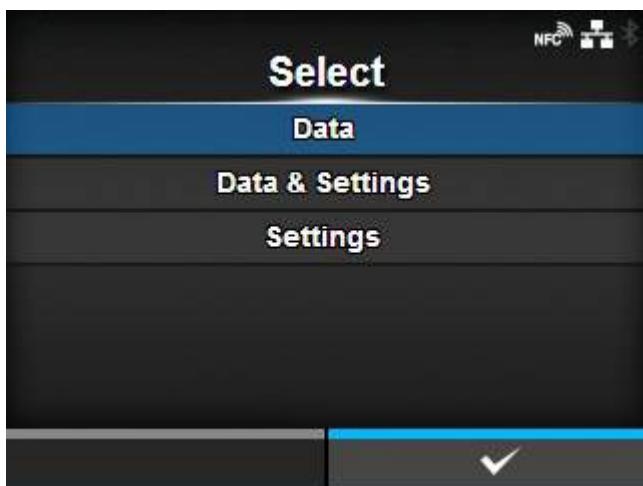


8. Press the button.

The confirmation screen appears.

9. Press the  button to perform the initialization.

Press the  button to cancel the initialization.

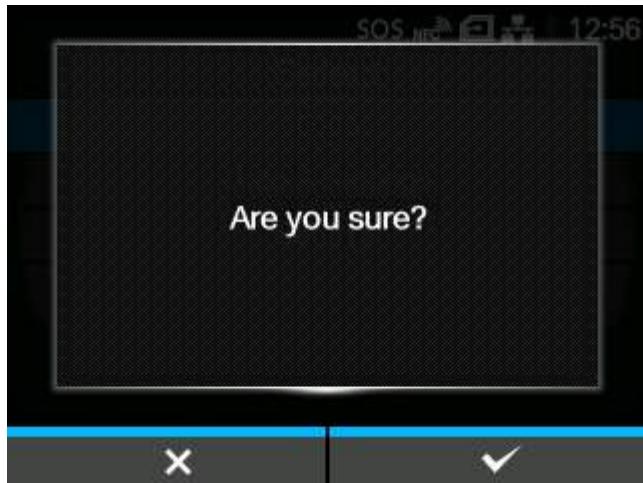

The initialization is performed.

When the initialization is complete, the product reboots.

Initializing the Setting Values and Data on the Product

Initialize the data and setting values on the product.



- It is generally not necessary to perform the initialization. Doing so could change the print conditions.
- The data to be initialized are the fonts and graphics registered in the product.

1. Press the  button in Online mode.




The product changes to Offline mode.

2. Press the  button.




The product changes to Settings mode.

3. Select [Tools] using the  /  buttons.

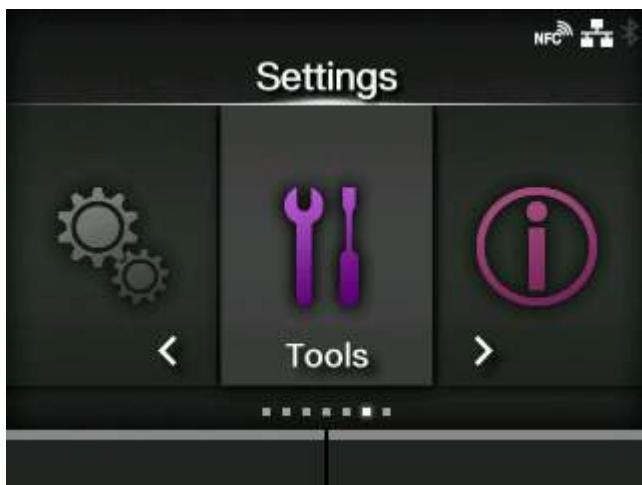


4. Press the  button.

The item list appears.

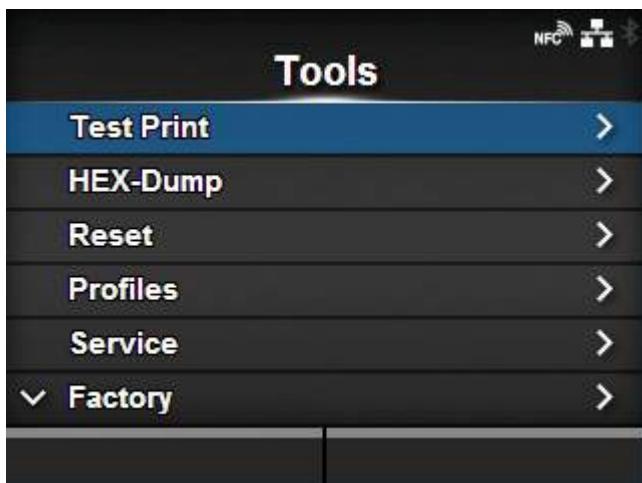


5. Select [Reset] using the  /  buttons.

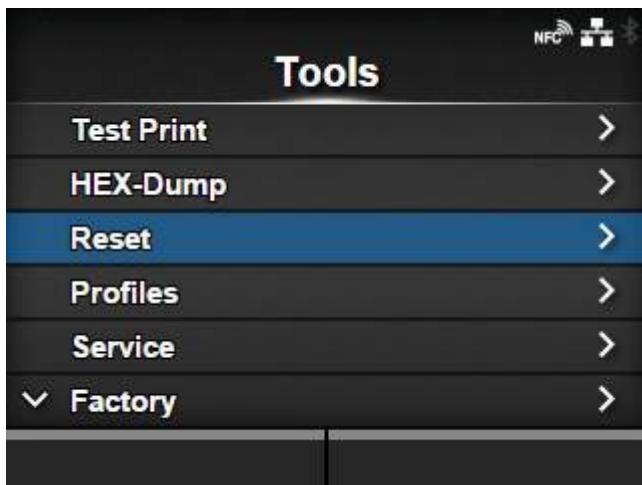

6. Press the  button.

The [Select] screen appears.

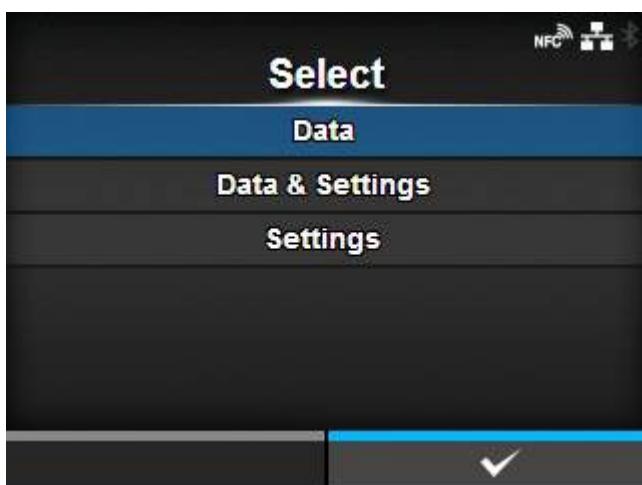


7. Select [Data & Settings] using the  /  buttons.

8. Press the  button.

The item list appears.

9. Select the setting items to be initialized using the  /  buttons.

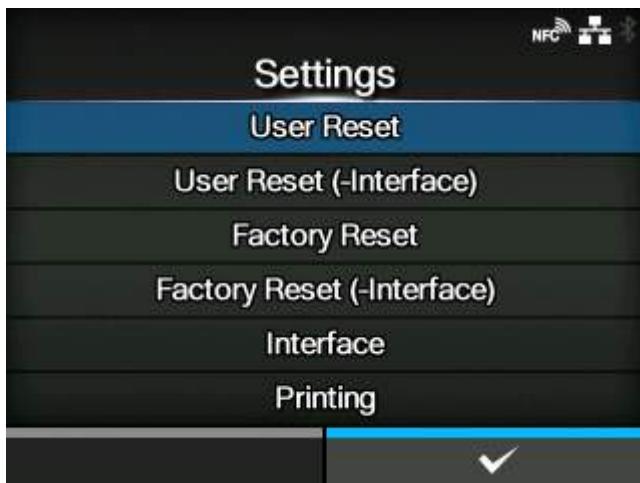

[User Reset]

Initialize the data and setting values.

[User Reset (-Interface)]

Initialize the data and setting values that are not included in the [Interface] menu.

[Factory Reset]

Initialize to the status after factory shipment.

[Factory Reset (-Interface)]

Initialize the items that are not included in the [Interface] menu to the status after factory shipment.

[Interface]

Initialize the data and setting values in the [Interface] menu.

[Printing]


Initialize the data and setting values in the [Printing] menu.

10. Press the  button.

The confirmation screen appears.

11. Press the  button to perform the initialization.

Press the  button to cancel the initialization.

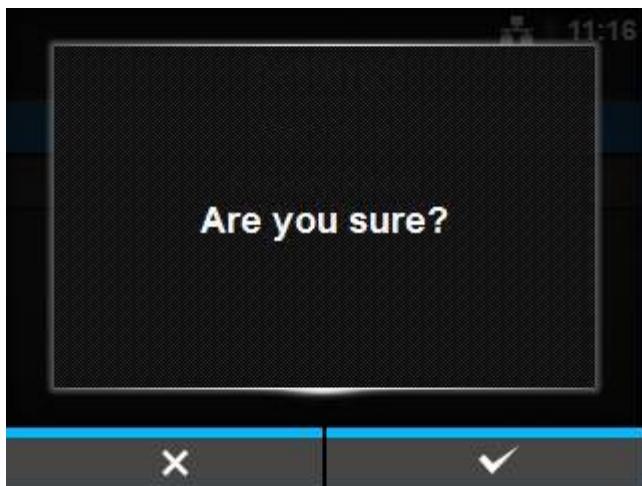

The initialization is performed.

When the initialization is complete, the product reboots.

Initializing the Setting Values on the Product

Initialize the setting values on the product.



- It is generally not necessary to perform the initialization. Doing so could change the print conditions.

1. Press the  button in Online mode.




The product changes to Offline mode.

2. Press the  button.




The product changes to Settings mode.

3. Select [Tools] using the  /  buttons.

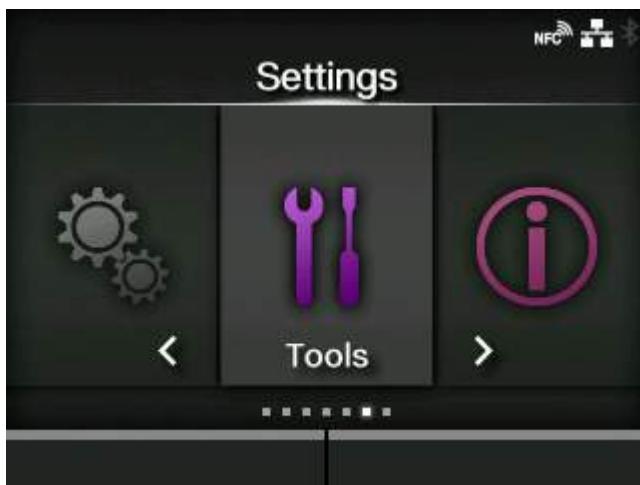


4. Press the  button.

The item list appears.

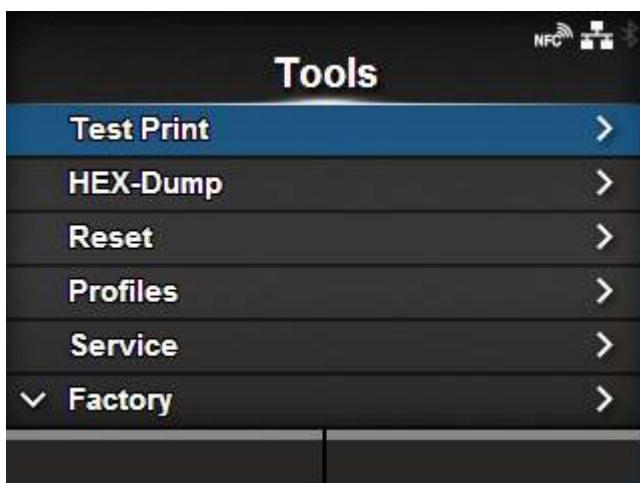


5. Select [Reset] using the / buttons.

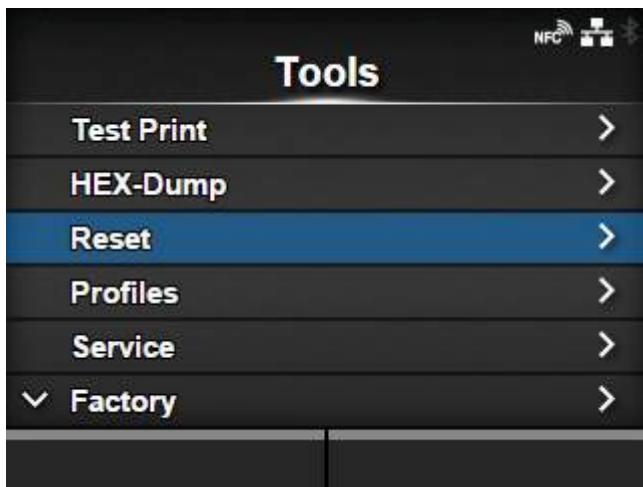

6. Press the button.

The [Select] screen appears.

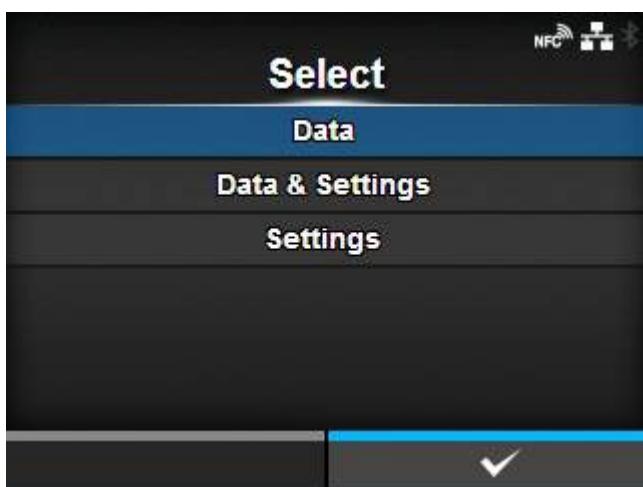


7. Select [Settings] using the / buttons.

8. Press the button.

The item list appears.

9. Select the setting items to be initialized using the / buttons.

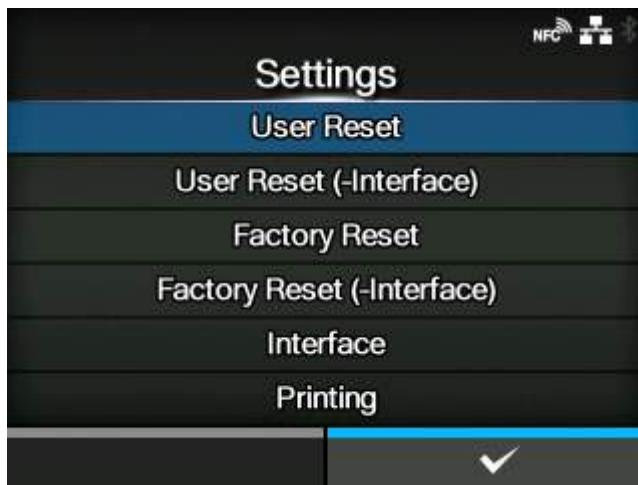

[User Reset]

Initialize the setting values.

[User Reset (-Interface)]

Initialize the setting values that are not included in the [Interface] menu.

[Factory Reset]

Initialize to the status after factory shipment.

[Factory Reset (-Interface)]

Initialize the items that are not included in the [Interface] menu to the status after factory shipment.

[Interface]

Initialize the setting values in the [Interface] menu.

[Printing]


Initialize the setting values in the [Printing] menu.

10. Press the button.

The confirmation screen appears.

11. Press the  button to perform the initialization.

Press the  button to cancel the initialization.

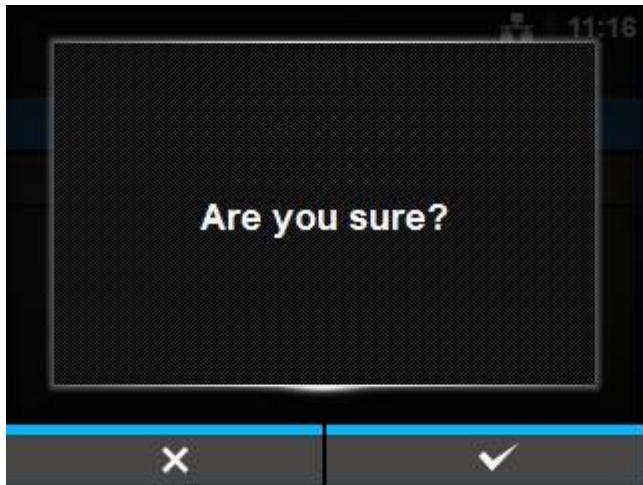

The initialization is performed.

If a message prompting you to restart the product appears on the Online/Offline screen, reboot the product to apply the settings.

List of Initial Values

[Printing] Menu

The initial value refers to the setting value of the product when it was shipped from the factory. If you reset the product, the setting values of the product will change back to the factory default values. The table below shows the initial value of each setting item and type of reset that changes the value back to the initial value.



- Normally, it is not necessary to perform the initialization. Doing an initialization removes all the product's settings that the customer changed.

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Label Length]	203 dpi 20000 dots 305 dpi 18000 dots 609 dpi 9600 dots	203 dpi 20000 dots 305 dpi 18000 dots	Yes	Yes
[Label Width]	203 dpi 832 dots 305 dpi 1248 dots 609 dpi 2496 dots	If [Head Base Position] is [Standard] 203 dpi 1216 dots 305 dpi 1984 dots If [Head Base Position] is [Left-justify] 203 dpi 1340 dots 305 dpi 2010 dots	Yes	Yes
[Auto Measure]	Disabled		Yes	Yes
[Printing Mode]	Use Ribbon		Yes	Yes
[Ribbon Near End]	Enabled		Yes	Yes

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Speed]	203 dpi 6 ips 305 dpi 6 ips 609 dpi 4 ips Linerless mode 4 ips	203 dpi 6 ips 305 dpi 6 ips	Yes	Yes
[Sensor Type]	Gap None (When [Print Mode] is [Linerless])	Gap	Yes	Yes
[Auto-mode]	Enabled		Yes	Yes
[Print Mode]	Tear-Off (If no option is installed) Cutter (If cutter unit is installed) Dispenser (If dispenser unit is installed) Linerless (If linerless cutter kit is installed)	Tear-Off (If no option is installed) Cutter (If cutter unit is installed) Dispenser (If dispenser unit is installed)	Yes	Yes
[Backfeed]	Before (If [Print Mode] is set to [Tear-Off] or [Linerless]) After (If [Print Mode] is set to [Dispenser], [Cutter] or [Cut & Print]) None (If [Print Mode] is set to [Continuous])	Before (If [Print Mode] is set to [Tear-Off]) After (If [Print Mode] is set to [Dispenser], [Cutter] or [Cut & Print]) None (If [Print Mode] is set to [Continuous])	Yes	Yes
[Eject Cut]	Off		Yes	Yes
[Darkness Range]	A		Yes	Yes
[Darkness]	5		Yes	Yes
[Imaging]				
[Vertical]	0 dot		Yes	Yes
[Horizontal]	0 dot		Yes	Yes

Setting Item	Initial Value		User Reset	Factory Reset		
	CL4NX	CL6NX				
[Advanced]						
[Calibrate]						
[Auto-calibration] ¹	Gap + I-Mark	-	-			
[GAP Levels]	Value adjusted by the factory.	No	No			
[GAP Slice Level]	Auto	No	No			
[I-Mark Levels]	Value adjusted by the factory.	No	No			
[I-Mark Slice Level]	Auto	No	No			
[Head Check]	Off	Yes	Yes			
[Head Check Mode]	Always	Yes	Yes			
[Every Page]	1	Yes	Yes			
[Check Media Size]	Disabled	Yes	Yes			
[Adjustments]						
[Offset]	0 dot	No	No			
[Pitch]	0 dot	No	No			
[Pitch Offset]	0 dot	No	No			
[Darkness Adjust]	50	No	No			
[Start Online]	Enabled	Yes	Yes			
[Feed After Error]	Disabled	Yes	Yes			
[Feed At Power On]	Disabled	Yes	Yes			
[Finisher Feed]	0 dot (Standard)	Yes	Yes			
[Paper End]	Using I-mark	Yes	Yes			
[Head Base Position]	Standard	Yes	Yes			
[Prioritize]	Commands	Yes	Yes			
[Reprint]	Disabled	Yes	Yes			
[Print End Position]	0 dot	Yes	Yes			
[Label Near End]	Disabled	Yes	Yes			

¹ Auto-calibration is not available for linerless models.

[Interface] Menu

The initial value refers to the setting value of the product when it was shipped from the factory. If you reset the product, the setting values of the product will change back to the factory default values. The table below shows the initial value of each setting item and type of reset that changes the value back to the initial value.



- Normally, it is not necessary to perform the initialization. Doing an initialization removes all the product's settings that the customer changed.

Setting Item	Initial Value		User Reset	Factory Reset		
	CL4NX	CL6NX				
[Network]						
[Settings]						
[LAN]	[Mode]	DHCP	Yes/ Interface	Yes/ Interface		
	[DHCP]	-	-	-		
	[IP Address]	0.0.0.0	Yes/ Interface	Yes/ Interface		
	[Netmask]	255.255.255.0	Yes/ Interface	Yes/ Interface		
	[Gateway]	0.0.0.0	Yes/ Interface	Yes/ Interface		
	[DNS]	0.0.0.0	Yes/ Interface	Yes/ Interface		
[IPv6]	[Mode]	Disable	Yes/ Interface	Yes/ Interface		
	[DHCP]	-	-	-		
	[IP Address]	::	Yes/ Interface	Yes/ Interface		
	[Prefix Length]	64	Yes/ Interface	Yes/ Interface		

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Gateway]	::		Yes/ Interface	Yes/ Interface
[DNS]	::		Yes/ Interface	Yes/ Interface
[Proxy]				
[Enabled]	Disabled		Yes/ Interface	Yes/ Interface
[Server]	-		Yes/ Interface	Yes/ Interface
[Exclude]	-		Yes/ Interface	Yes/ Interface
[Wi-Fi]				
[IPv4]				
[Mode]	DHCP		Yes/ Interface	Yes/ Interface
[DHCP]	-		-	-
[IP Address]	0.0.0.0		Yes/ Interface	Yes/ Interface
[Netmask]	255.255.255.0		Yes/ Interface	Yes/ Interface
[Gateway]	0.0.0.0		Yes/ Interface	Yes/ Interface
[DNS]	0.0.0.0		Yes/ Interface	Yes/ Interface
[IPv6]				
[Mode]	Disable		Yes/ Interface	Yes/ Interface
[DHCP]	-		-	-
[IP Address]	::		Yes/ Interface	Yes/ Interface
[Prefix Length]	64		Yes/ Interface	Yes/ Interface
[Gateway]	::		Yes/ Interface	Yes/ Interface

Setting Item		Initial Value		User Reset	Factory Reset
		CL4NX	CL6NX		
	[DNS]	::		Yes/ Interface	Yes/ Interface
	[Proxy]				
	[Enabled]	Disabled		Yes/ Interface	Yes/ Interface
	[Server]	-		Yes/ Interface	Yes/ Interface
	[Exclude]	-		Yes/ Interface	Yes/ Interface
	[Wi-Fi Protected Setup]				
	[Button (PBC)]	-		-	-
	[PIN]	-		-	-
	[Wi-Fi Direct]				
	[Device Name]	SATO_PRINTER		Yes/ Interface	Yes/ Interface
	[Connect]	-		-	-
	[Start Group]	-		-	-
	[Remove Group]	-		-	-
	[Disconnect]	-		-	-
	[SSID]	DIRECT-xx-SATO_PRINTER		-	-
	[IP Address]	x.x.x.x		-	-
	[Passphrase]	xxxxxxxx		-	-
	[SSID]	SATO_PRINTER		Yes/ Interface	Yes/ Interface
	[Hidden SSID]	Enabled		Yes/ Interface	Yes/ Interface
	[Mode]	Ad-hoc		Yes/ Interface	Yes/ Interface
	[Channel]	6		Yes/ Interface	Yes/ Interface

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Security]	None		Yes/ Interface	Yes/ Interface
[WEP Conf.]				
[Authentication]	Open System		Yes/ Interface	Yes/ Interface
	1		Yes/ Interface	Yes/ Interface
	-		Yes/ Interface	Yes/ Interface
[WPA Conf.]				
[WPA Authentication]	Personal (PSK)		Yes/ Interface	Yes/ Interface
	-		Yes/ Interface	Yes/ Interface
	-		Yes/ Interface	Yes/ Interface
[EAP Conf.]				
[EAP Mode]	FAST		Yes/ Interface	Yes/ Interface
	MSCHAPv2		Yes/ Interface	Yes/ Interface
	-		Yes/ Interface	Yes/ Interface
	-		Yes/ Interface	Yes/ Interface
	-		Yes/ Interface	Yes/ Interface
	Enabled		Yes/ Interface	Yes/ Interface
	-		Yes/ Interface	Yes/ Interface
	Disabled		Yes/ Interface	Yes/ Interface
	-		Yes/ Interface	Yes/ Interface

Setting Item		Initial Value		User Reset	Factory Reset
		CL4NX	CL6NX		
	[Interface]	Auto		Yes/ Interface	Yes/ Interface
[Services]					
	[Ports]				
	[Port1]	1024		Yes/ Interface	Yes/ Interface
	[Port2]	1025		Yes/ Interface	Yes/ Interface
	[Port3]	9100		Yes/ Interface	Yes/ Interface
	[Flow Control]	Status4 ENQ		Yes/ Interface	Yes/ Interface
	[TCP Connection Queue]	Enabled		Yes/ Interface	Yes/ Interface
	[Legacy Status for Port 9100]	Disabled		Yes/ Interface	Yes/ Interface
	[ENQ Reply Delay]	0 ms		Yes/ Interface	Yes/ Interface
	[Status4 Cyclic Response]	500 ms		Yes/ Interface	Yes/ Interface
	[BCC]	Disabled		Yes/ Interface	Yes/ Interface
	[NTP]				
	[Enable]	Disabled		No	Yes
	[Error]	Disabled		No	Yes
	[Time Server IP]	0.0.0.0		No	Yes
	[LPD]				
	[Enable]	Enabled		Yes/ Interface	Yes/ Interface
	[DNS Lookup]	Disabled		Yes/ Interface	Yes/ Interface
	[FTP]				

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Enable]	Disabled		Yes/ Interface	Yes/ Interface
[FTP Timeout]	300 sec		Yes/ Interface	Yes/ Interface
[SNMP]				
[sysContact]	-		Yes/ Interface	Yes/ Interface
[sysName]	-		Yes/ Interface	Yes/ Interface
[sysLocation]	-		Yes/ Interface	Yes/ Interface
[prtMarkerCounterUnit]	meters		Yes/ Interface	Yes/ Interface
[Agent]				
[Enable]	Enabled		Yes/ Interface	Yes/ Interface
[Read-Only]				
[SNMP Version]	1 2c 3		Yes/ Interface	Yes/ Interface
[Community]	public		Yes/ Interface	Yes/ Interface
[User]	rouser		Yes/ Interface	Yes/ Interface
[User Security]	None		Yes/ Interface	Yes/ Interface
[Authentication Protocol]	MD5		Yes/ Interface	Yes/ Interface
[Authentication Passphrase]	mypassword		Yes/ Interface	Yes/ Interface
[Privacy Protocol]	DES		Yes/ Interface	Yes/ Interface
[Privacy Passphrase]	mypassword		Yes/ Interface	Yes/ Interface
[Read-Write]				

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[SNMP Version]	Disabled		Yes/ Interface	Yes/ Interface
	private		Yes/ Interface	Yes/ Interface
	rwuser		Yes/ Interface	Yes/ Interface
	None		Yes/ Interface	Yes/ Interface
	MD5		Yes/ Interface	Yes/ Interface
	mypassword		Yes/ Interface	Yes/ Interface
	DES		Yes/ Interface	Yes/ Interface
	mypassword		Yes/ Interface	Yes/ Interface
[Traps]				
[Enable]	Disabled		Yes/ Interface	Yes/ Interface
	1		Yes/ Interface	Yes/ Interface
	4		Yes/ Interface	Yes/ Interface
	1		Yes/ Interface	Yes/ Interface
	0.0.0.0		Yes/ Interface	Yes/ Interface
	0.0.0.0		Yes/ Interface	Yes/ Interface
	0.0.0.0		Yes/ Interface	Yes/ Interface
	trapcom		Yes/ Interface	Yes/ Interface
	trapuser		Yes/ Interface	Yes/ Interface

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Engine ID]	Hex string generated from MAC address	Yes/ Interface	Yes/ Interface	Yes/ Interface
	None	Yes/ Interface	Yes/ Interface	Yes/ Interface
	MD5	Yes/ Interface	Yes/ Interface	Yes/ Interface
	mypassword	Yes/ Interface	Yes/ Interface	Yes/ Interface
	DES	Yes/ Interface	Yes/ Interface	Yes/ Interface
	mypassword	Yes/ Interface	Yes/ Interface	Yes/ Interface
[Online Services]				
[SOS Mode]	Disabled	No	No	No
	Always	No	No	No
	MQTT	No	No	No
	-	-	-	-
	-	-	-	-
	[Contact Information]			
[Phone Number]		-	No	No
[Periodic Notification]				
[Type]	Disabled	No	No	No
	Head	No	No	No
	[Head]			
[Meters]	10,000	No	No	No
	0.0 km	No	No	No
	10.0 km	No	No	No
	0.0 km	No	No	No
[Cutter]				
[Cuts]		100,000	No	No

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Last Update]	[Last Update]	0	No	No
	[Next Update]	100,000	No	No
	[Current Value]	0	No	No
	[Notifications]	1	No	No
	[Weekday]	Monday	No	No
	[Day]	1	No	No
	[Time 1]	00:00	No	No
	[Time 2]	00:00	No	No
	[Time 3]	00:00	No	No
	[Time]	00:00	No	No
[Update Screen]	[Update Screen]	Normal	No	No
	[QR code offset]			
[Vertical]	[Vertical]	0	No	No
	[Horizontal]	0	No	No
[SOS Update]	-	-	-	-
[Advanced]				
[ARP Announcement]				
[Additional]	[Additional]	Enabled	Yes/ Interface	Yes/ Interface
	[Periodic]	Off	Yes/ Interface	Yes/ Interface
[Firewall]				
[Enable]	[Enable]	Disabled	Yes/ Interface	Yes/ Interface
	[Allow Services And Ports]			
[Data Ports]	[Data Ports]	Enabled	Yes/ Interface	Yes/ Interface
	[FTP]	Disabled	Yes/ Interface	Yes/ Interface

Setting Item	Initial Value		User Reset	Factory Reset		
	CL4NX	CL6NX				
[LPD]	Enabled		Yes/ Interface	Yes/ Interface		
[MAILC]	Enabled		Yes/ Interface	Yes/ Interface		
[NTP]	Disabled		No	Yes		
[Online Services]	Disabled		No	No		
[PING]	Enabled		Yes/ Interface	Yes/ Interface		
[SATO All-In-One Tool]	Enabled		Yes/ Interface	Yes/ Interface		
[SCP]	Enabled		Yes/ Interface	Yes/ Interface		
[SNMP Agent]	Enabled		Yes/ Interface	Yes/ Interface		
[WEBC]	Enabled		Yes/ Interface	Yes/ Interface		
[WebConfig]	Enabled		Yes/ Interface	Yes/ Interface		
[Custom Settings]						
[TCP Source Port]						
	[Existing Port No.]	-	-	-		
	[Additional Port No.]	-	Yes/ Interface	Yes/ Interface		
[TCP Destination Port]						
	[Existing Port No.]	-	-	-		
	[Additional Port No.]	-	Yes/ Interface	Yes/ Interface		
[UDP Source Port]						
	[Existing Port No.]	-	-	-		
	[Additional Port No.]	-	Yes/ Interface	Yes/ Interface		
[UDP Destination Port]						

Setting Item		Initial Value		User Reset	Factory Reset
		CL4NX	CL6NX		
[Existing Port No.]	[Existing Port No.]	-		-	-
	[Additional Port No.]	-		Yes/ Interface	Yes/ Interface
	[ICMP Type]				
	[Existing ICMP Type]	-		-	-
[IEEE1284]		-		Yes/ Interface	Yes/ Interface
[Flow Control] [BCC]		Status4 Multi	Yes/ Interface	Yes/ Interface	Yes/ Interface
[RS-232C]		Disabled	Yes/ Interface	Yes/ Interface	Yes/ Interface
[Baudrate] [Parameters] [Flow Control] [BCC]		115200 8-N-1 STATUS4 Disabled	Yes/ Interface Yes/ Interface Yes/ Interface Yes/ Interface	Yes/ Interface Yes/ Interface Yes/ Interface Yes/ Interface	Yes/ Interface Yes/ Interface Yes/ Interface Yes/ Interface
[USB]		Status4 Disabled Disabled	Yes/ Interface Yes/ Interface No	Yes/ Interface Yes/ Interface Yes/ Interface	Yes/ Interface Yes/ Interface Yes/ Interface
[Bluetooth]		Enabled SATO PRINTER_xxxxxxxxxxx (BD address)	Yes/ Interface Yes/ Interface	Yes/ Interface Yes/ Interface	Yes/ Interface Yes/ Interface

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[PIN Code]	0000		Yes/ Interface	Yes/ Interface
[BD Address]	xxxxxxxxxxxx		Yes/ Interface	Yes/ Interface
[Firm Version]	spp3_vX.YY		Yes/ Interface	Yes/ Interface
[Host BD Addr]	-		Yes/ Interface	Yes/ Interface
[Authentication]	None		Yes/ Interface	Yes/ Interface
[ISI]	2048		Yes/ Interface	Yes/ Interface
[ISW]	18		Yes/ Interface	Yes/ Interface
[PSI]	2048		Yes/ Interface	Yes/ Interface
[PSW]	18		Yes/ Interface	Yes/ Interface
[CRC Mode]	Disabled		Yes/ Interface	Yes/ Interface
[Flow Control]	Status4 Multi		Yes/ Interface	Yes/ Interface
[NFC]				
[I/F Enable]	Enabled		Yes/ Interface	Yes/ Interface
[Ignore CR/LF]	Disabled		Yes/ Interface	Yes/ Interface
[Ignore CAN/DLE]	Disabled		Yes/ Interface	Yes/ Interface
[External I/O]				
[Print Start Signal]	Disabled		Yes/ Interface	Yes/ Interface
[Signals]				
[EXT 9PIN]	MODE1		Yes/ Interface	Yes/ Interface

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[EXT Mode]	TYPE4		Yes/ Interface	Yes/ Interface
[Inputs]				
[Start Print]	PIN 5		Yes/ Interface	Yes/ Interface
[Reprint]	PIN 7		Yes/ Interface	Yes/ Interface
[Outputs]				
[Paper End]/ [Paper/Ribbon End] (If RFID is installed)	PIN 1		Yes/ Interface	Yes/ Interface
[Ribbon End]/ [RFID Tag Error] (If RFID is installed)	PIN 3		Yes/ Interface	Yes/ Interface
[Machine Error]/ [Machine/RFID Error] (If RFID is installed)	PIN 4		Yes/ Interface	Yes/ Interface
[Print Done]	PIN 6		Yes/ Interface	Yes/ Interface
[Offline]/[Qty]	PIN 9		Yes/ Interface	Yes/ Interface
[Ribbon Near End]	PIN 10		Yes/ Interface	Yes/ Interface
[Dispenser]	OFF		Yes/ Interface	Yes/ Interface
[Label Near End]	OFF		Yes/ Interface	Yes/ Interface
[EXT I/O Re-print]	Disabled		Yes/ Interface	Yes/ Interface
[RFID]	-			
[Antenna Pitch]	Standard	-	Yes/ Interface	Yes/ Interface
[Write Power]	10 dBm	-	Yes/ Interface	Yes/ Interface
[Read Power]	10 dBm	-	Yes/ Interface	Yes/ Interface

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Tag Offset]	0 mm	-	Yes/ Interface	Yes/ Interface
[Reader Model]	XXXXXX	-	-	-
[Reader Version]	XXXXXX	-	-	-
[View]		-		
[Memory Bank]	EPC (UHF)/ USER (HF)	-	Yes/ Interface	Yes/ Interface
[Filter Function]				
[RSSI Filter]	Disabled	-	Yes/ Interface	Yes/ Interface
[Threshold Value]	-50 dBm	-	Yes/ Interface	Yes/ Interface
[Retry Mode]	Retry	-	Yes/ Interface	Yes/ Interface
[Retries]	1	-	Yes/ Interface	Yes/ Interface
[Mark bad tags]	Enabled	-	Yes/ Interface	Yes/ Interface
[Non-RFID Warning]	Disabled	-	Yes/ Interface	Yes/ Interface
[Log RFID Data]	Disabled	-	Yes/ Interface	Yes/ Interface
[Data To Record]	EPC and TID	-	Yes/ Interface	Yes/ Interface
[Output Error Mode]	Level	-	Yes/ Interface	Yes/ Interface
[Pulse Length]	100 ms	-	Yes/ Interface	Yes/ Interface
[Counters]		-		
[Lifetime]		-		
[Count Success]	000000	-	No	Yes
[Count Failure]	000000	-	No	Yes

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Count Total]	000000	-	No	Yes
[User]		-		
[Count Success]	000000	-	Yes	Yes
[Count Failure]	000000	-	Yes	Yes
[Count Total]	000000	-	Yes	Yes
[Paper]				
[Types]	Label	-	Yes/ Interface	Yes/ Interface
[Starting Point]	0 dot	-	Yes/ Interface	Yes/ Interface

[Applications] Menu

The initial value refers to the setting value of the product when it was shipped from the factory. If you reset the product, the setting values of the product will change back to the factory default values. The table below shows the initial value of each setting item and type of reset that changes the value back to the initial value.



- Normally, it is not necessary to perform the initialization. Doing an initialization removes all the product's settings that the customer changed.

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Protocol]	AUTO		Yes	Yes
[SBPL]				
[Show Error]	Disabled		Yes	Yes
[Standard Code]	Enabled		Yes	Yes
[Orientation]	Portrait		Yes	Yes
[Font Settings]				
[Zero Slash]	Enabled		Yes	Yes
[Kanji]				
[Kanji Set]	GB18030		Yes	Yes
[Character Code]	GB18030		Yes	Yes

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Kanji Style]	Gothic		Yes	Yes
[Proportional]	Enabled		Yes	Yes
[Code Page]	858		Yes	Yes
[€]	d5		Yes	Yes
[Compatible]				
[M-8400 Compatibility]	Disabled		Yes	Yes
[CODE128(C) Zero Fill]	Disabled		Yes	Yes
[Kanji Command]	Disabled		Yes	Yes
[Call Font/Logo]	Disabled		Yes	Yes
[A3 Command Save(S-type)]	Disabled		Yes	Yes
[PDF417 ECC Level fixed]	Disabled		Yes	Yes
[SZPL]				
[Label]				
[Shift]	0 dot		Yes	Yes
[Top]	0 dot		Yes	Yes
[Label Rotation]	0 degree		Yes	Yes
[Caret]	94 (^)		Yes	Yes
[Delimiter]	44 (,)		Yes	Yes
[Tilde]	126 (~)		Yes	Yes
[Clock Format]	(none)		Yes	Yes
[Default Font]	(none)		Yes	Yes
[SIPL]				
[Font Settings]				
[Code Page]	1252		Yes	Yes
[New Font Encoding]	Disabled		Yes	Yes
[c20 Proportional Pitch]	Disabled		Yes	Yes
[Zero Slash]	Disabled		Yes	Yes

Setting Item	Initial Value		User Reset	Factory Reset		
	CL4NX	CL6NX				
[Format Save]	Enabled		Yes	Yes		
[STCL]						
[Command Head]						
[Control Code]	Auto		Yes	Yes		
[1st Byte Code]	27		Yes	Yes		
[2nd Byte Code]	10		Yes	Yes		
[3rd Byte Code]	0		Yes	Yes		
[Font Settings]						
[Zero Slash]	Disabled		Yes	Yes		
[€]	d5		Yes	Yes		
[Code Page]	850		Yes	Yes		
[Half-width Symbol]	Enabled		Yes	Yes		
[Rotation]	0 degree		Yes	Yes		
[Ignore Paper Size Command]	Disabled		Yes	Yes		
[300DPI Head Compatibility]	Disabled		Yes	Yes		
[SDPL]						
[Control Code]						
[Code Type]	Standard		Yes	Yes		
[SOH]	01		Yes	Yes		
[STX]	02		Yes	Yes		
[CR]	0D		Yes	Yes		
[CNTBY]	5E		Yes	Yes		
[Label Rotation]	0 degree		Yes	Yes		
[SOP Emulation]	Auto		Yes	Yes		
[Compatible Mode]						
[TTF]	Disabled		Yes	Yes		
[Graphics]	Disabled		Yes	Yes		

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Compression]	Disabled		Yes	Yes
[Right-to-Left print]	Auto		Yes	Yes
[Receive TimeOut]	0 (Off)		Yes	Yes
[Blank Item Feed]	Enabled		Yes	Yes
[Prioritize]				
[Format Attribute]	Commands		Yes	Yes
[Pause Mode]	Commands		Yes	Yes
[1 Byte Codepage]	Commands		Yes	Yes
[SDPL Measure Unit]	Commands		Yes	Yes
[Scalable Font Style]	Commands		Yes	Yes
[Sensor Type]	Commands		Yes	Yes
[Feedback Character]	Commands		Yes	Yes
[SOH Commands]	Commands		Yes	Yes
[Module Selection]	Commands		Yes	Yes
[Darkness]	Commands		Yes	Yes
[Factory Offset]	Commands		Yes	Yes
[Speed]	Commands		Yes	Yes
[Format Attribute]	XOR		Yes	Yes
[Pause Mode]	Disabled		Yes	Yes
[1 Byte Codepage]	CP 850		Yes	Yes
[SDPL Measure Unit]	Inch		Yes	Yes
[Scalable Font Style]				
[Bold]	Disabled		Yes	Yes
[Italic]	Disabled		Yes	Yes
[Feedback Character]	Enabled		Yes	Yes
[SOH Commands]				
[All Commands]	Enabled		Yes	Yes

Setting Item		Initial Value		User Reset	Factory Reset		
		CL4NX	CL6NX				
	[SOH-B Command]	Enabled		Yes	Yes		
	[SOH-C Command]	Enabled		Yes	Yes		
	[Others]	Enabled		Yes	Yes		
[SEPL]							
[Home Reference]							
	[Horz. Offset]	0 dot		Yes	Yes		
	[Vert. Offset]	0 dot		Yes	Yes		
[Label Rotation]		0 degree		Yes	Yes		
[Memory Device]		Internal FLASH		Yes	Yes		
[Sim. 300 DPI Head]		Disabled		Yes	Yes		
[AEP]							
	[Enable]	Disabled		No	Yes		
	[Starting Application]	Standard (/rom/standalone(sa.lua))		No	Yes		
[Delete Application]		-		-	-		
[Label Rotation]		Disabled		Yes	Yes		

[System] Menu

The initial value refers to the setting value of the product when it was shipped from the factory. If you reset the product, the setting values of the product will change back to the factory default values. The table below shows the initial value of each setting item and type of reset that changes the value back to the initial value.



- Normally, it is not necessary to perform the initialization. Doing an initialization removes all the product's settings that the customer changed.

Setting Item		Initial Value		User Reset	Factory Reset
		CL4NX	CL6NX		
[Regional]					
[Messages]		English, US		Yes	Yes
[USB Keyboard]		English, US		Yes	Yes

Setting Item	Initial Value		User Reset	Factory Reset		
	CL4NX	CL6NX				
[Locale]	English, US		Yes	Yes		
[Unit]	dot		Yes	Yes		
[Time]	00:00		No	No		
[Date]	(2000-01-01)		No	No		
[Time Zone]	-		Yes	Yes		
[Region]	Europe		Yes	Yes		
[City]	London		Yes	Yes		
[Display Language Icon]	Disabled		Yes	Yes		
[Notifications]						
[Clean Printhead]						
[Clean Printhead]	Disabled		Yes	Yes		
[Cleaning Interval]	400 m		Yes	Yes		
[Change Printhead]						
[Change Printhead]	Disabled		Yes	Yes		
[Printhead Interval]	100 km		Yes	Yes		
[Change Cutter]						
[Change Cutter]	Disabled		Yes	Yes		
[Cutter Life]	1000 K cuts		Yes	Yes		
[Change Platen]						
[Change Platen]	Disabled		Yes	Yes		
[Platen Interval]	100 km		Yes	Yes		
[Sound]						
[Error Sound]	Medium		Yes	Yes		
[Power Off Sound]	Medium		Yes	Yes		
[Energy Saving]						
[Sleep Timeout]	60 min		Yes	Yes		
[LCD Brightness]	7		No	Yes		

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Show Total Count]	Disabled		Yes	Yes
[Password]				
[Password Enable]	Disabled		No	Yes
[Install Security]	Disabled		No	Yes
[NFC Security]	None		Yes	Yes
[Start on AC]	Disabled		No	Yes

[Tools] Menu

The initial value refers to the setting value of the product when it was shipped from the factory. If you reset the product, the setting values of the product will change back to the factory default values. The table below shows the initial value of each setting item and type of reset that changes the value back to the initial value.



- Normally, it is not necessary to perform the initialization. Doing an initialization removes all the product's settings that the customer changed.

Setting Item	Initial Value		User Reset	Factory Reset		
	CL4NX	CL6NX				
[Test Print]						
[Factory]						
[Label Width]	Large		Yes	Yes		
[Pitch]	0 dot		No	No		
[Offset]	0 dot		No	No		
[Darkness Adjust]	50		No	No		
[Configure List]						
[Label Width]	Small		-	-		
[Label Length]	203 dpi 800 dots 305 dpi 1200 dots	203 dpi 800 dots 305 dpi 1200 dots	Yes	Yes		

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
	609 dpi 2400 dots			
[Pitch]	0 dot		No	No
[Offset]	0 dot		No	No
[Darkness Adjust]	50		No	No
[Configure QR]				
[Label Width]	Small		-	-
[Label Length]	203 dpi 800 dots 305 dpi 1200 dots 609 dpi 2400 dots	203 dpi 800 dots 305 dpi 1200 dots	Yes	Yes
[Pitch]	0 dot		No	No
[Offset]	0 dot		No	No
[Darkness Adjust]	50		No	No
[Paper Sensor]				
[Label Width]	Small		-	-
[Label Length]	203 dpi 800 dots 305 dpi 1200 dots 609 dpi 2400 dots	203 dpi 800 dots 305 dpi 1200 dots	Yes	Yes
[Pitch]	0 dot		No	No
[Offset]	0 dot		No	No
[Darkness Adjust]	50		No	No
[Head Check]				

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Label Width]	203 dpi 832 dots 305 dpi 1248 dots 609 dpi 2496 dots	If [Head Base Position] is [Standard] 203 dpi 1216 dots 305 dpi 1984 dots If [Head Base Position] is [Left-justify] 203 dpi 1340 dots 305 dpi 2010 dots	Yes	Yes
[Label Length]	203 dpi 120 dots 305 dpi 180 dots 609 dpi 360 dots	203 dpi 120 dots 305 dpi 180 dots	Yes	Yes
[Pitch]	0 dot		No	No
[Offset]	0 dot		No	No
[Darkness Adjust]	50		No	No
[HEX-Dump]				
[Hex Dump Mode]	Disabled		Yes	Yes
[Reset]				
[Profiles]				
[Delete]	-		-	-
[Load]	-		-	-
[Save]	-		-	-
[Start with]	-		Yes	Yes

Setting Item	Initial Value		User Reset	Factory Reset		
	CL4NX	CL6NX				
[Certificates]	-		Yes/ Interface	Yes		
[Barcode Checker]						
[Test]						
[Reader Name]	-		-	-		
[Reading Test]	-		-	-		
[Interface]	RS-232C		Yes/ Interface	Yes/ Interface		
[Settings]						
[Mode]	Disabled		Yes	Yes		
[Set No. of Barcodes]	Command		Yes	Yes		
[Barcodes per Label]	1		Yes	Yes		
[Start Position]	203 dpi 72 dots 305 dpi 108 dots 609 dpi 216 dots	203 dpi 72 dots 305 dpi 108 dots	Yes	Yes		
[VOID Print]	Disabled		Yes	Yes		
[Retry Count]	0		Yes	Yes		
[Host Notification]	Disabled		Yes	Yes		
[Logs]						
	[Copy]	-		-		
	[Remove]	-		-		
[Clone]	Excl. LAN/Wi-Fi/IP		-	-		
[Support Info]	-		-	-		
[Logging Function]						
[Enabled]	Disabled		Yes	Yes		
[Save]	-		-	-		

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Remove]	-		-	-
[Startup Guide]	Enabled		No	Yes

[Information] Menu

The initial value refers to the setting value of the product when it was shipped from the factory. If you reset the product, the setting values of the product will change back to the factory default values. The table below shows the initial value of each setting item and type of reset that changes the value back to the initial value.



- Normally, it is not necessary to perform the initialization. Doing an initialization removes all the product's settings that the customer changed.

Setting Item	Initial Value		User Reset	Factory Reset
	CL4NX	CL6NX		
[Help]	-		-	-
[Build Version]	-		-	-
[Applications]	-		-	-
[Installation Log]	-		-	-
[Print Module]	-		-	-
[Counters]	-		-	-
[Head]	-		-	-
[Life]	Measured value		No	No
[Head 1]	Measured value		No	No
[Head 2]	Measured value		No	No
[Head 3]	Measured value		No	No
[Cutter]	0		No	No

Maintenance

Cleaning the Product

Cleaning

A dirty print head or platen roller not only affects the print quality but also causes errors. Use a cleaning kit or cleaning sheet to clean the product regularly.



- Do not power on or off the product, connect or disconnect the power cord while your hands are wet. Doing so could cause an electric shock.
- Disconnect the power cord from the AC outlet before you begin cleaning.
The print head and its surroundings are hot after printing. Wait until the product cools down.
- Touching the edge of the print head with your bare hand could cause injury.
- Be careful not to touch the cutter blade when cleaning the product.
- Use a cotton swab or cotton cloth from a cleaning kit for cleaning. Do not clean with a hard object. Doing so could cause damage.
- Before cleaning, remove the media and ribbon.



CAUTION for CL4NX only (if installed with linerless cutter kit)

- Open the print head if the product is not used for printing for more than one day. Paper jam might occur in the next printing if the print head is closed for a long period with linerless label loaded.
- When loading linerless label, make sure that the front end of the media extends about 3 cm (1.18") out the media discharge outlet.



- The cleaning kit and cleaning sheet are optional. Contact your SATO reseller or technical support center to purchase the options.

Cleaning the Print Head and Platen Roller

Cleaning Intervals

Clean the product at the following regular intervals.



- The below cleaning intervals are only for reference. Clean the product when necessary even if you are not at a regular interval.

- After you print one media roll or print media for 150 meters (492.1 feet).

Use the cleaning kit to clean following parts:

- Print head
- Platen roller
- Media sensors
- Media guide

- After you print six media rolls or print media for 900 meters (2952.8 feet).

Use the cleaning sheet to clean the following parts:

- Print head

Use the cleaning kit to clean following parts:

- Media route
- Ribbon route

Cleaning interval for the optional linerless cutter kit (CL4NX only) is as follows:

- After you print one media roll or whenever there is any glue residue or paper dust on the media route.

Use the cleaning kit to clean following parts:

- Print head
- Media guide
- Media sensors
- Guide rollers



- There is no need of cleaning the linerless platen roller unless it is significantly soiled.

Cleaning Using the Cleaning Kit

The cleaning procedure using the cleaning kit is as follows:



- Never use organic solvents, such as thinner and benzine to clean the product.



- For details on the cleaning kit, refer to the manual attached to the cleaning kit.

1. Make sure that the product is powered off, and disconnect the power cord from the AC outlet.

2. Open the top cover.




- Open the top cover fully to prevent accidental drop of the cover.

3. Push the head lock lever (1) towards the rear to unlock the print head.




- The print head and its surroundings are hot after printing. Be careful not to touch it, to avoid being burned.
- Touching the edge of the print head with your bare hand could cause injury.

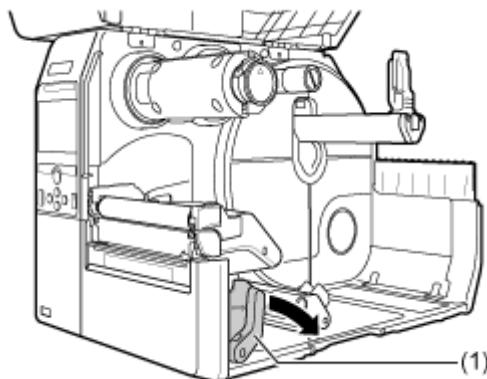


4. Remove the media and ribbon if they are already loaded.


5. Clean the dirt on the print head (2), platen roller (3) and ribbon roller (4) using a cotton swab dabbed with cleaning liquid.

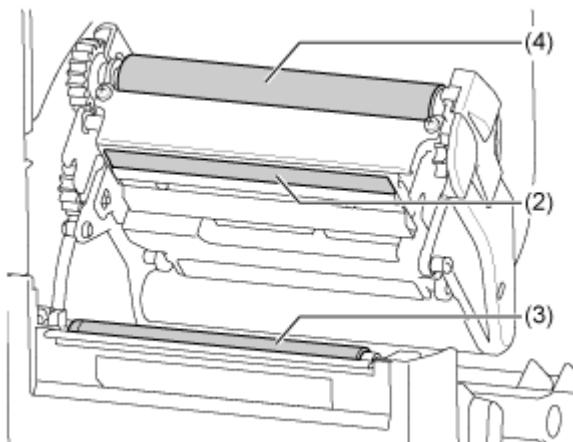


6. Tilt the sensor guide lock (5) down and pull out the media sensor guide (6).

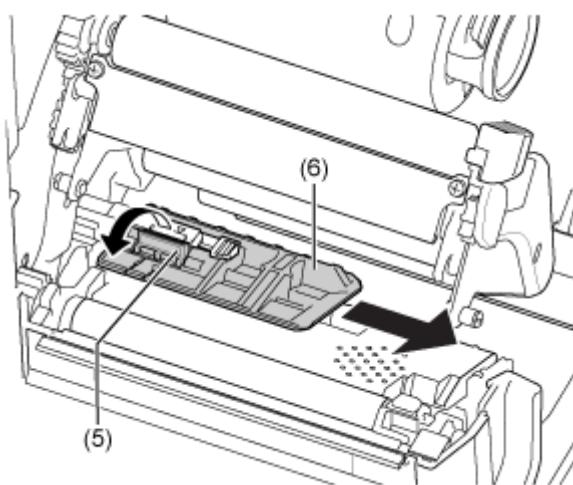

7. Clean the bottom of the media sensor guide using the cotton cloth dabbed with cleaning liquid.

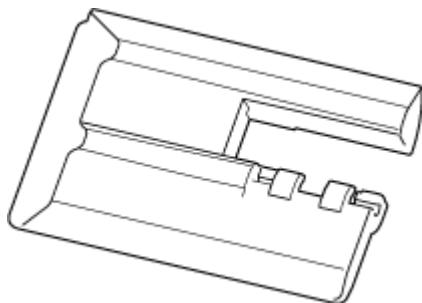

8. Clean the media sensor (7) using the cotton cloth dabbed with cleaning liquid.

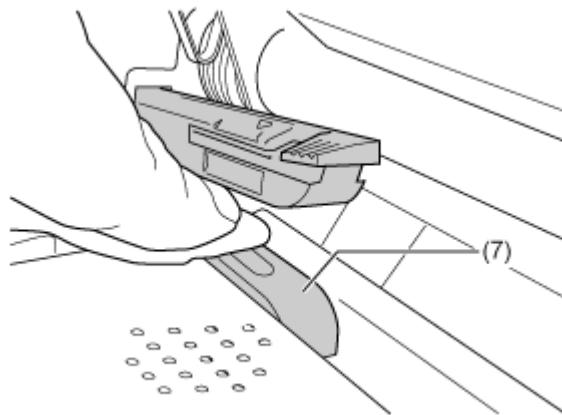


9. Return the media sensor guide to its original position and tilt the sensor guide lock up to the locked position.


Cleaning the Optional Linerless Cutter Kit (CL4NX only)

If the optional linerless cutter kit is installed, follow the procedure below to clean the product:

1. Clean the media guide (1) and inner surface (2) that is in contact to the label edge using the cotton cloth dabbed with cleaning liquid.

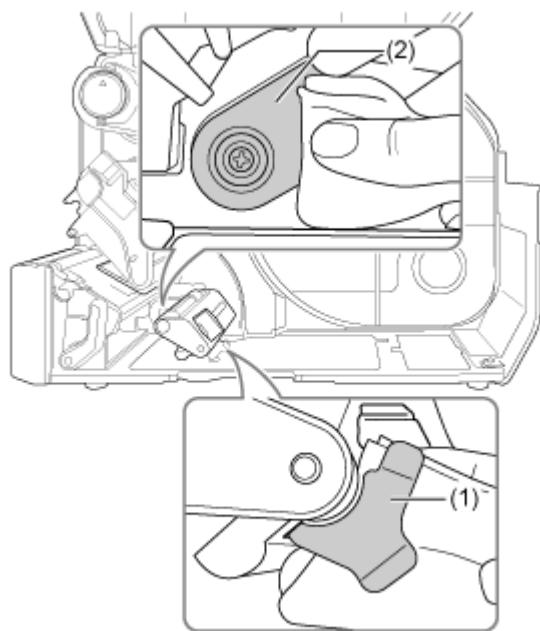

2. Clean the guide rollers (3) using the cotton cloth dabbed with cleaning liquid.

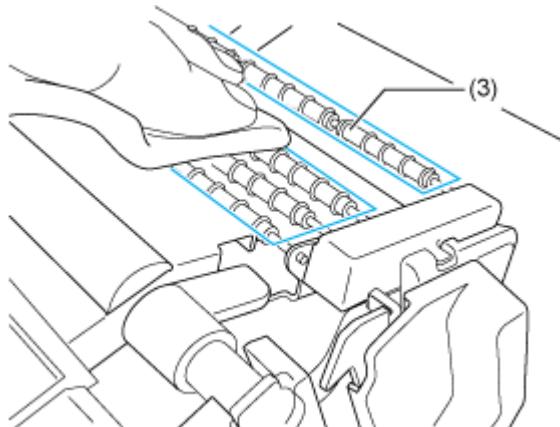

Rotate the guide rollers to clean the whole areas of them.

Cleaning Using the Cleaning Sheet

The cleaning procedure using the cleaning sheet is as follows:

- 1. Make sure that the product is powered off, and disconnect the power cord from the AC outlet.**
- 2. Open the top cover.**




- Open the top cover fully to prevent accidental drop of the cover.

- 3. Push the head lock lever (1) towards the rear to unlock the print head.**




- The print head and its surroundings are hot after printing. Be careful not to touch it, to avoid being burned.
- Touching the edge of the print head with your bare hand could cause injury.

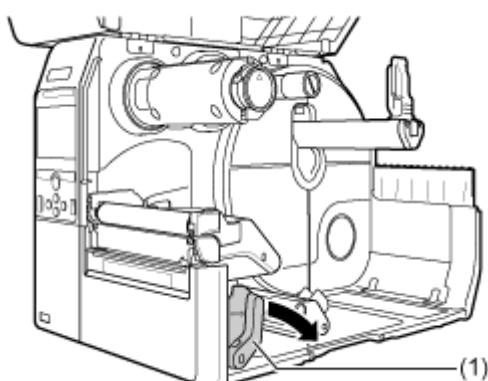


4. Remove the media and ribbon if they are already loaded.
5. Place the cleaning sheet (2) between the print head and the platen roller.




- Align the rough side of the cleaning sheet adjacent to the print head.

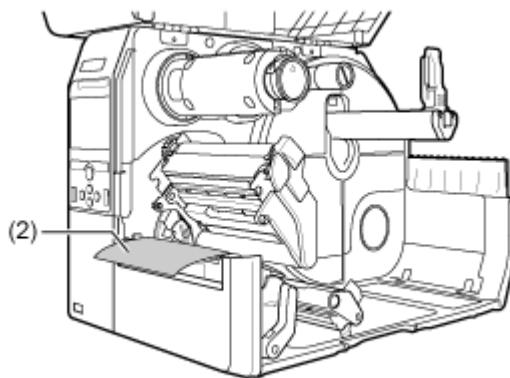

6. Press the print head down until you lock the head lock lever in place.

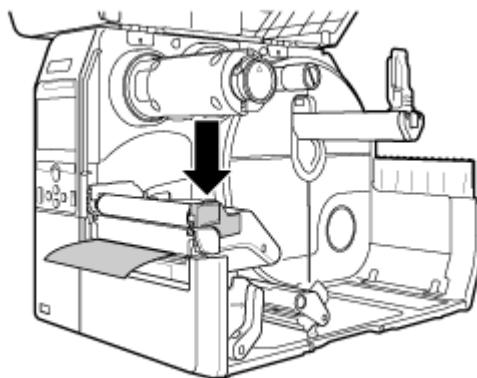


7. Using two hands, pull the cleaning sheet away from the product.

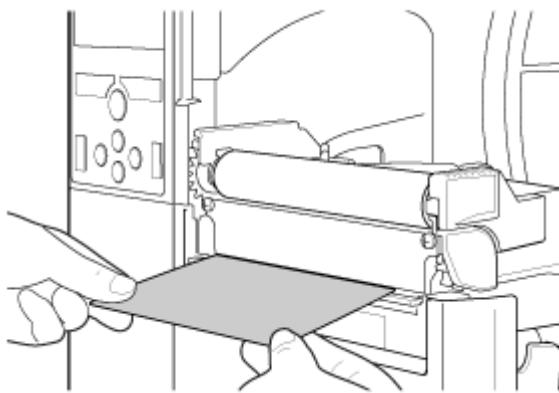


8. After you pull out the cleaning sheet, repeat steps 5 through 7, two or three more times.

When no more dirt appears on the cleaning sheet after you have pulled it out, stop repeating these steps.

9. Push the head lock lever (1) towards the rear to unlock the print head.

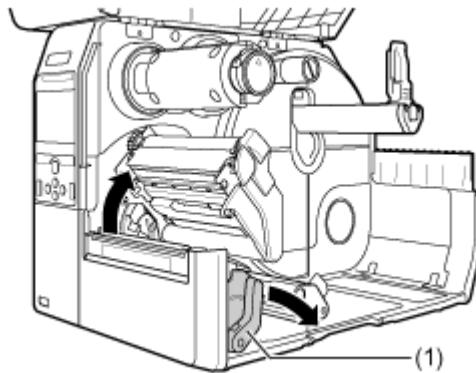

10. Use a cotton swab to clean the dirt on the print head (3).

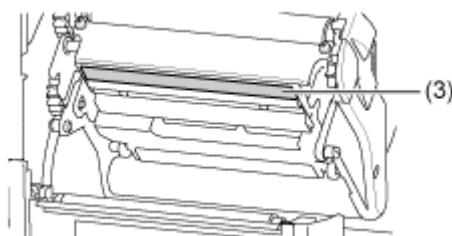

Replacing Consumable Parts

Replacing the Print Head

You can easily remove and replace a damaged or worn print head.



- Do not power on or off the product, connect or disconnect the power cord while your hands are wet. Doing so could cause an electric shock.
- Disconnect the power cord from the AC outlet before you replace the print head.
- Wear gloves before replacing the print head, to prevent damage to the print head.

1. Make sure that the product is powered off, and disconnect the power cord from the AC outlet.

2. Open the top cover.




- Open the top cover fully to prevent accidental drop of the cover.

3. Push the head lock lever (1) towards the rear to unlock the print head.




- The print head and its surroundings are hot after printing. Be careful not to touch it, to avoid being burned.
- Touching the edge of the print head with your bare hand could cause injury.

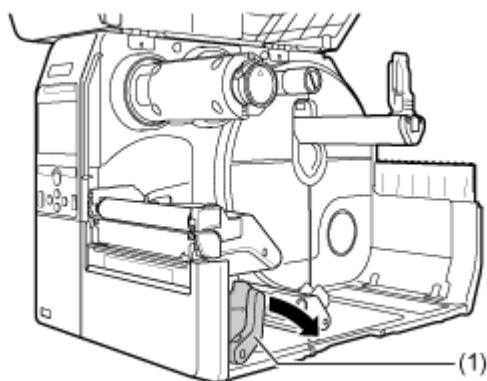


4. Remove the media and ribbon if they are already loaded.

5. Press the lever (2) to remove the print head (3).

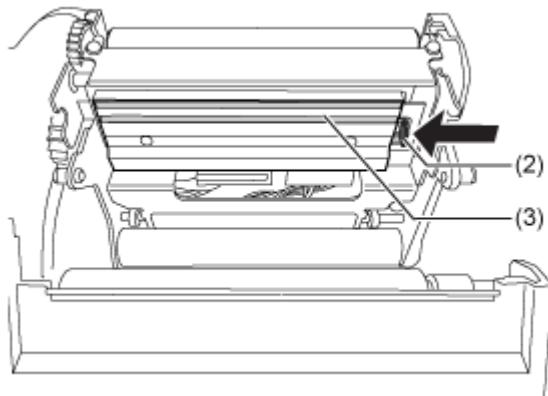

- For CL4NX UHF RFID models, the UHF RFID antenna is installed on the print head. Be careful not to overly pull the antenna cable when replacing the print head. Contact your SATO reseller, dealer, or technical support center for more information.

6. Disconnect all the connectors (4) from the defective print head (3).

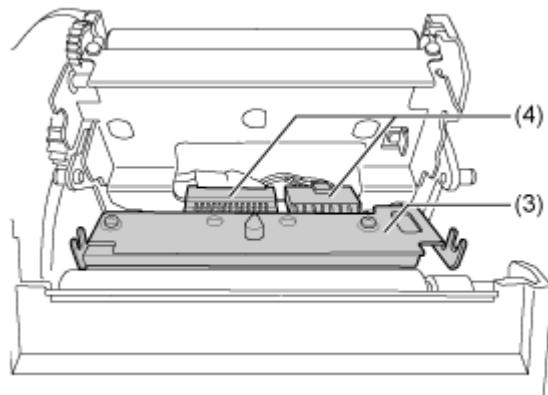

In total, there are two connectors for CL4NX and three connectors for CL6NX.

7. Connect all the connectors (4) to the new print head.



- Handle the print head with care. Do not contaminate or scratch the sensitive print head surface.

8. Install the new print head.

Install the print head so that it is locked with a click sound.

9. Load the media and ribbon back if you remove them in step 4.

Replacing the Platen Roller

You can easily remove and replace a damaged or worn platen roller.



- Do not power on or off the product, connect or disconnect the power cord while your hands are wet. Doing so could cause an electric shock.
- Disconnect the power cord from the AC outlet before you replace the platen roller.

Guideline to Replace the Linerless Platen Roller (CL4NX only)

The linerless platen roller has a blue striped marking on the left side. When the blue striped marking started to fade off, it indicates that you should replace the linerless platen roller.



- This is only a general guideline. The condition in which the platen roller wears out varies depending on the used media. In any cases, replace the worn platen roller when it affected the printing quality of the product.

1. Make sure that the product is powered off, and disconnect the power cord from the AC outlet.

2. Open the top cover.




- Open the top cover fully to prevent accidental drop of the cover.


3. Push the head lock lever (1) towards the rear to unlock the print head.



- The print head and its surroundings are hot after printing. Be careful not to touch it, to avoid being burned.
- Touching the edge of the print head with your bare hand could cause injury.

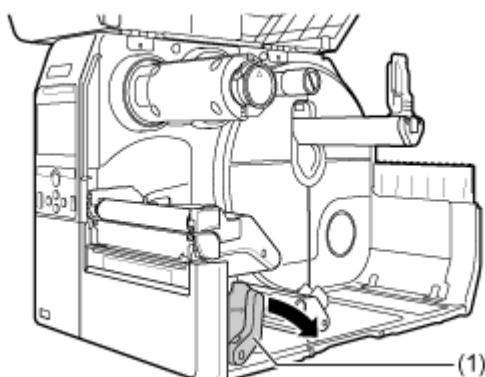


4. Lift the lever (2) in the direction A to unlock the platen roller (3), and then pull out the platen roller (3) in the direction B.

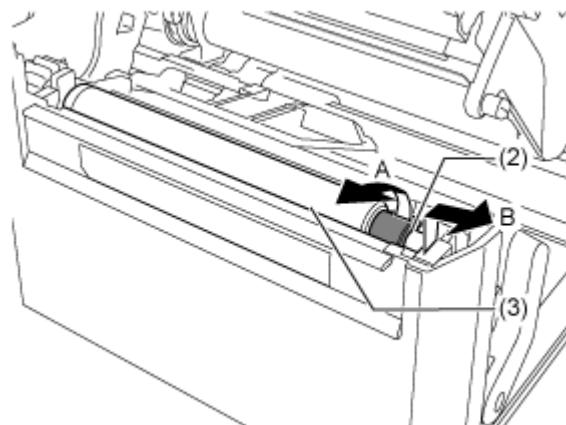


5. Install the new platen roller.

- a. Make sure that the tab (4) on the left driving end of the platen roller is pointing upward. Push the platen roller in the direction C so that the tab (4) is fixed in the groove (5) at the driving side.

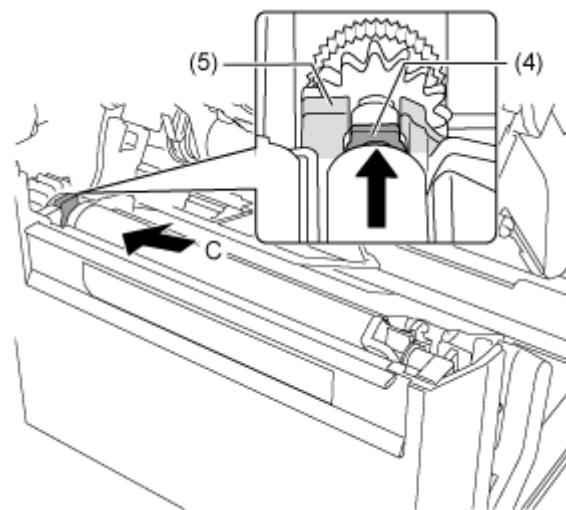

- b. Next, make sure that the tab (6) on the right driven end of the platen roller is pointing upward. Push the platen roller again in the direction C so that the tab (6) is fixed in the groove (7) at the driven side.

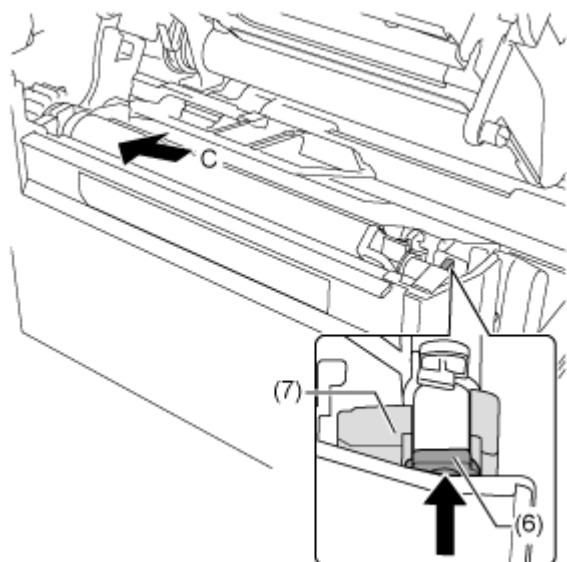

6. Turn the lever (2) back to lock the platen roller.



Operating the Notification Screen of SOS (SATO Online Services) (SOS users only)

Operating the Notification Screen of the SOS (SATO Online Services) On-Demand Mode (SOS users only)


In the SOS (SATO Online Services) function, the product information is sent to the SOS cloud and monitored and managed.

The status icon  and the notification screen appear at the time specified when [SOS Mode] is set to [On-Demand] in the [Interface] > [Network] > [Services] > [Online Services] menu and [Periodic Notification] is enabled on the product. A QR code with the product information is displayed on the notification screen. You can send the product information to the SOS cloud by scanning the QR code with a tablet or a smartphone.

The following shows how to operate the notification screen.

The soft key function changes according to the setting of [Update Screen].

When [Update Screen] Is Set to [Normal]

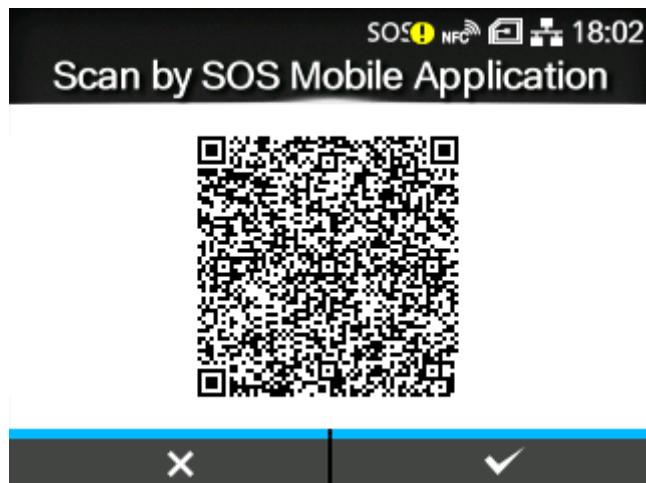

By pressing the  button, the display returns to the Offline screen without resetting the QR code for periodic notification.

The status icon remains .

By pressing the  button, the QR code for periodic notification is reset and the display returns to the Offline screen.

The status icon changes to .

When [Update Screen] Is Set to [Print]



By pressing the button, the QR code for periodic notification is reset and the display returns to the Offline screen.

The status icon changes to .

By pressing the button, the QR code for periodic notification is printed.




- QR codes can also be displayed from [SOS Update].

Operating the Date and Time Settings Notification Screen of SOS (SATO Online Services) (SOS users only)

To use the SOS (SATO Online Services) function, date and time settings of the product and the SOS server must be matched. A notification screen appears when there is a problem with the date and time settings and the product cannot connect to SOS. Follow the steps on the screen and set the date and time correctly.

1. Press the  button on the notification screen.

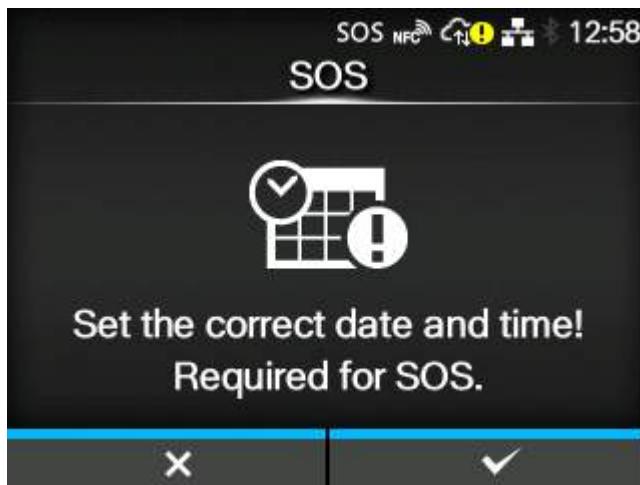


Clear the NTP server connection problem when the NTP function is enabled. The notification screen appears every 15 seconds until the NTP server connection problem is cleared.

The date and time setting screen appears when the NTP function is disabled or the optional RTC kit is installed. Proceed to step 2.


2. Set the correct date and press the  button.

Select the digit for input using the  /  buttons and select the number to input using the  /  buttons.

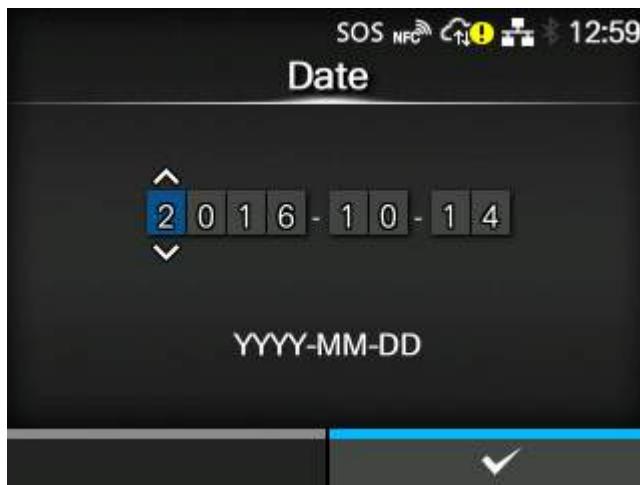

3. Set the correct time and press the  button.

Select the digit for input using the  /  buttons and select the number to input using the  /  buttons.

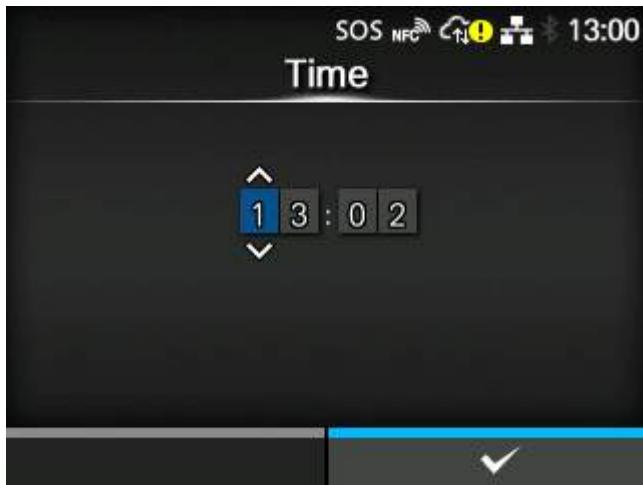

- SOS will not operate if you cancel the date and time settings by pressing the  button on the notification screen. To display the notification screen again, reboot the product or change the setting of [On-Demand]/[Real-Time] in [SOS Mode] a few times to reboot the SOS function.

SOS (SATO Online Services) Application (SOS users only)

How to Install the SOS Mobile Application

When the SOS (SATO Online Services) mode is enabled on the product, a QR code is displayed on the screen at the time of the error outbreak or the timing that is set to perform periodic notification. By scanning the QR code with a tablet or a smartphone, you can check how to clear the error according to the current product information in the QR code. You can also contact your SATO technical support center directly from this specialized application by phone or e-mail.

For instructions on installing the SOS mobile application, refer to the SOS Portal Site.



<http://www.sato-sos.com/en/support/>

How to Use the SOS Mobile Application

For instructions on using the SOS mobile application, refer to the SOS user manual.



http://www.sato-sos.com/en/support/sos_usermanual.pdf

When You Are in Trouble

When an Error Message Appears

Error Message 1001 (Machine Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Power off the product.

Cause and Countermeasure

Cause

A defect has occurred in the product.

Countermeasure

Power the product off and then on again.

 [Powering On/Off the Product](#)

Contact your SATO technical support center if the error cannot be resolved.

 [Contact Information for When You Are in Trouble](#)

Error Message 1003 (Parity Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (OFFLINE) or button, or adjust the settings.

Cause and Countermeasure

Cause (1)

RS-232C settings are incorrect.

Countermeasure (1)

Set the interface settings of the product again.

[RS-232C](#)

Cause (2)

The RS-232C cable is not connected correctly.

Countermeasure (2)

Power off the product, connect the RS-232C cable correctly, and then power on the product again.

[Powering On/Off the Product](#)

[RS-232C Interface Connection \(Standard\)](#)

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1004 (Overrun Error)

When there is an error with the product, the error message appears on the screen. Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (OFFLINE) or button, or adjust the settings.

Cause and Countermeasure

Cause (1)

RS-232C settings are incorrect.

Countermeasure (1)

Set the interface settings of the product again.

[RS-232C](#)

Cause (2)

The RS-232C cable is not connected correctly.

Countermeasure (2)

Power off the product, connect the RS-232C cable correctly, and then power on the product again.

[Powering On/Off the Product](#)

[RS-232C Interface Connection \(Standard\)](#)

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1005 (Framing Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (OFFLINE) or button, or adjust the settings.

Cause and Countermeasure

Cause (1)

RS-232C settings are incorrect.

Countermeasure (1)

Set the interface settings of the product again.

[RS-232C](#)

Cause (2)

The RS-232C cable is not connected correctly.

Countermeasure (2)

Power off the product, connect the RS-232C cable correctly, and then power on the product again.

[Powering On/Off the Product](#)

[RS-232C Interface Connection \(Standard\)](#)

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1006 (Buffer Overflow)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (OFFLINE) or button, or adjust the settings.

Cause and Countermeasure

Cause (1)

The size of the received data from the host exceeds the size of the receive buffer.

Countermeasure (1)

Change the settings on the host so that data that exceeds the size of the receive buffer cannot be sent.

Cause (2)

The interface settings between the product and the host are incorrect.

Countermeasure (2)

Set the interface settings of the product and host again.

[Interface Menu](#)

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1007 (Head Open)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Lock the print head.

Cause and Countermeasure


Cause

- The print head is unlocked.
- The sensor for detecting the open/close status of the print head is defective.


Countermeasure

Unlock the print head once, and then lock it again.


1. Push the head lock lever (1) towards the rear.

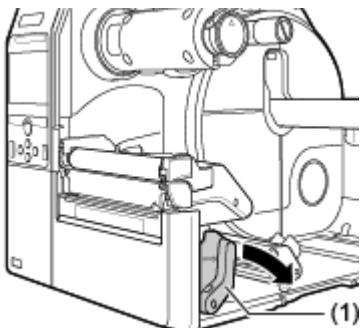

2. Press the print head down until the head lock lever is locked.

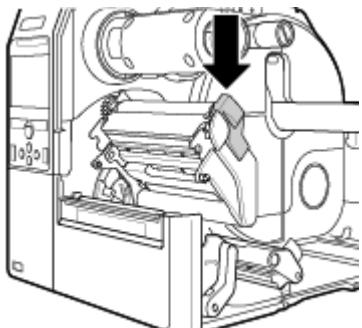

Cause and Countermeasure

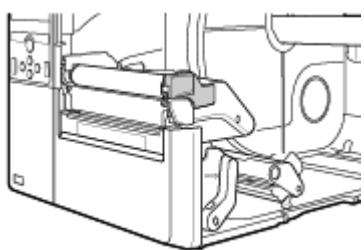

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1008 (Out of Paper)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Load the media and open/close the print head, or press the button (OFFLINE) or the button.

Cause and Countermeasure

Cause (1)

The media is not loaded.

Countermeasure (1)

Load the media.

[Loading the Media](#)

Cause (2)

The media is not loaded correctly.

Countermeasure (2)

Load the media correctly.

[Loading the Media](#)

Cause (3)

The media sensor level is not set correctly.

Countermeasure (3)

Adjust the media sensor level.

[Calibrate](#)

Cause (4)

The media has jammed.

Cause and Countermeasure

Countermeasure (4)

Remove the jammed media.

Refer to the video for loading the media, for the media path, and for the operation of each part inside the product.



[Loading the Media](#)

Cause (5)

The media sensor is not operating correctly.

- The media sensor is dirty, or there is a label attached to it.
- The media sensor has poor sensitivity.

Countermeasure (5)

Clean the media sensor.



[Cleaning Using the Cleaning Kit](#)

Contact your SATO technical support center if the error cannot be resolved.



[Contact Information for When You Are in Trouble](#)

Error Message 1009 (Ribbon End)

When there is an error with the product, the error message appears on the screen. Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Load the ribbon correctly and close the print head, or press the button (OFFLINE) or button.

Cause and Countermeasure

Cause (1)

The ribbon is not loaded.

Countermeasure (1)

Load the ribbon.

[Loading Ribbon](#)

Cause (2)

The ribbon is not loaded correctly.

Countermeasure (2)

Load the ribbon and the media correctly.

[Loading Ribbon](#)

[Loading the Media](#)

Cause (3)

There is no ribbon.

Countermeasure (3)

Load a new ribbon.

[Loading Ribbon](#)

Cause and Countermeasure

Cause (4)

The ribbon sensor is not operating correctly.

- The ribbon sensor is dirty.
- The ribbon sensor has poor sensitivity.

Countermeasure (4)

Power the product off and then on again.



[Powering On/Off the Product](#)

Contact your SATO technical support center if the error cannot be resolved.



[Contact Information for When You Are in Trouble](#)

Error Message 1010 (Media Error)

When there is an error with the product, the error message appears on the screen. Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Open/close the print head, or press the button (OFFLINE) or the button.

Cause and Countermeasure

Cause (1)

The media size of the print data and the actual media size are different.

Countermeasure (1)

Check the media size of the print data and the actual media size again.

If the error is not solved, power the product off and then on again.

Cause (2)

The media size of the print data is longer than the actual media size.

Countermeasure (2)

Check the print data.

If the error is not solved, power the product off and then on again.

Cause (3)

The media is fed a longer distance due to the incorrect sensor level.

Countermeasure (3)

Adjust the media sensor level.

[Calibrate](#)

If the error is not solved, power the product off and then on again.

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1012 (Head Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Power off the product, or change print head check conditions.

To forcibly clear the head error and resume printing, press and hold the  button (DISMISS) until the progress bar on the blue line of the button reaches to the right end.

Cause and Countermeasure

Cause (1)

The print elements are worn out.

Countermeasure (1)

Power off the product, or change the print head check conditions to only check for missing elements in barcodes and try to adjust missing elements to white bars.

 [Powering On/Off the Product](#)

 [Head Check](#)

Cause (2)

The print head is defective.

Countermeasure (2)

Replace the print head.

 [Replacing the Print Head](#)

Contact your SATO technical support center if the error cannot be resolved.

 [Contact Information for When You Are in Trouble](#)

-
-  • Regarding labels output after a head error, use your own barcode scanner to read and check the printed barcodes.
-

Error Message 1013 (USB R/W Error)

When there is an error with the product, the error message appears on the screen. Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Connect the USB memory and then disconnect it, or press the button (OFFLINE) or the button.

Cause and Countermeasure

Cause (1)

The USB memory is disconnected while writing.

Countermeasure (1)

Connect the USB memory.

Cause (2)

The copy area in the USB memory is not sufficient.

Countermeasure (2)

Make sure that the USB memory has sufficient copy area.

Cause (3)

Writing to the USB memory fails.

Countermeasure (3)

Replace the USB memory.

Cause (4)

The USB memory is not formatted.

Countermeasure (4)

Format the USB memory to a FAT32 format.

Contact your SATO technical support center if the error cannot be resolved.



Contact Information for When You Are in Trouble

Error Message 1014 (USB Memory Full)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Connect the USB memory with sufficient space, or press the button (OFFLINE) or button.

Cause and Countermeasure

Cause

The space in the USB memory is not sufficient.

Countermeasure

Delete unwanted data from the USB memory.

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1015 (Cutter Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the  button (FEED).

Cause and Countermeasure

Cause (1)

A media jam has occurred in the cutter unit.

Countermeasure (1)

Remove the jammed media from the cutter unit.

Refer to the video for loading the media, for the media path, and for the operation of each part inside the product.



- Be careful not to cause injury with the cutter blade when removing the media.



[Loading the Media with the Optional Cutter Unit](#)

If the error is not solved, power the product off and then on again.

Cause (2)

The cutter blade does not return to the specified position.

Countermeasure (2)

Press the  button (FEED) to move the cutter blade back to the specified position.

If the error is not solved, power the product off and then on again.

Contact your SATO technical support center if the error cannot be resolved.



[Contact Information for When You Are in Trouble](#)

Error Message 1016 (Cutter Cover Open)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Close the cutter.

Cause and Countermeasure

Cause (1)

The cutter-open lever is open.

Countermeasure (1)

Close and lock the cutter-open lever.

 [Loading the Media with the Optional Cutter Unit](#)

Cause (2)

The cutter unit is defective.

Countermeasure (2)

Power the product off and then on again.

 [Powering On/Off the Product](#)

Contact your SATO technical support center if the error cannot be resolved.

 [Contact Information for When You Are in Trouble](#)

Error Message 1017 (SBPL Command Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (CANCEL) or button.

Cause and Countermeasure

Cause

Incorrect command or parameter in the print data.

For details of the error, check the "Caaa: <bb>: cc" part at the bottom of the screen.

- Caaa: position of error occurrence
- <bb>: error command name
- cc: error content

[How to See the Command Error Information](#)

Countermeasure

Check the print data.

If the error is not solved, power the product off and then on again.



- The command error appears when [Show Error] in [SBPL] under the [Applications] menu is set to [Enabled].



[Show Error](#)

Contact your SATO technical support center if the error cannot be resolved.



[Contact Information for When You Are in Trouble](#)

How to See the Command Error Information

- **Location of error occurrence**

"Caaa" in the command error message shows the location of command error.

The number of ESC commands from ESC+A is shown in "aaa".

Note that the ESC+A command is not included in the number of ESC commands, which can be shown up to 999.

When a command error is detected by the Horizontal Print Position <H> command.

-----: [ESC]A
C001: [ESC]V100
C002: [ESC]H99999
C003: [ESC]L0202
C004: [ESC]M,ABCDEF
C005: [ESC]Q1
C006: [ESC]Z

In this case, C002 is the location of the error.

- **Error command name**

The command name is shown in "<bb>". Error is detected in the command name.

- A one-byte command name is left aligned

- **Error description**

The cause of command error appears in "cc" in the error message ("Caaa:<bb>:cc").

Description ("cc")	Cause
Invalid command	Analyzed improper command.
Invalid parameter	Received improper parameter.
Command table read error	Failed to read the command table.
Invalid graphic data/ custom designed data	Analyzed improper graphic and custom designed data.
Invalid registration area	<ul style="list-style-type: none">• Specified memory area (card slot) is inappropriate.• Tried to write to a write-protected media.
This number is already registered.	Number specified by registration command has already been taken.
Over registration area limit	Exceeded the registration area. (Memory full)
Data is not registered	Data, such as form overlay, is not registered.


Description ("cc")	Cause
Printing position is out of printable area	The specified print start position is outside the printable area.
Barcode image is out of printable area	The printing image is outside the printable area. (Barcode only)

Error Message 1018 (RFID Tag Error) (CL4NX only)


When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.

Before the number of encoding attempts specified in [Retries]

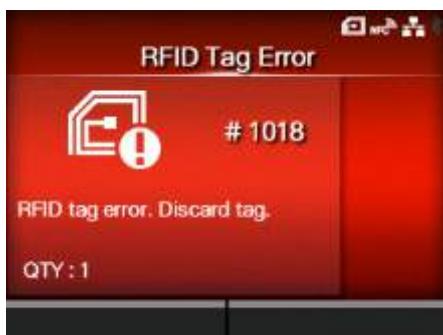

After the number of encoding attempts specified in [Retries]

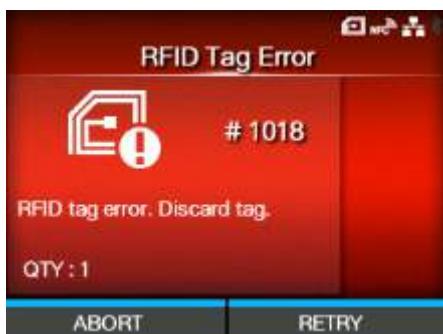

To clear the error:

Press the button (ABORT) or button (RETRY) when they are available. The error message appears each time the error occurs, but the buttons are not shown until the number of the product's encoding attempts reaches the value specified in [RFID] > [Retries] in the [Interface] menu.

[Retries](#)

Cause and Countermeasure

Cause

Could not read/write to the RFID inlay.

Countermeasure

Discard this tag.

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1019 (RFID System Error) (CL4NX only)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Power off the product.

Cause and Countermeasure

Cause

RFID module is not operating correctly.

Countermeasure


Repair or replacement of the RFID module is required. Contact your SATO technical support center.

 [Contact Information for When You Are in Trouble](#)

Error Message 1020 (Calendar Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.

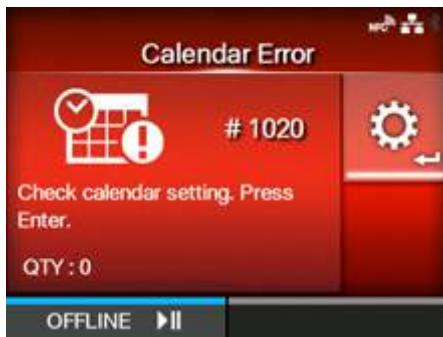

To clear the error:

Change the calendar (option) settings, press the button (OFFLINE) or button, or power off the product.

Cause and Countermeasure

Cause

The date and time of the calendar (option) are incorrect.

Countermeasure

Power the product off and then on again, and check the print data.

[Powering On/Off the Product](#)

If that does not resolve the problem, check whether the RTC kit is attached properly, or if the RTC PCB needs to be replaced. Contact your SATO technical support center.

[Contact Information for When You Are in Trouble](#)

Error Message 1021 (BCC Check Error)

When there is an error with the product, the error message appears on the screen. Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (CANCEL) or button.

Cause and Countermeasure

Cause

The BCC code of the data to be sent (one item) is incorrect.

Countermeasure

Check the data to be sent and interface settings.

- button: Continue printing from the print data where the BCC error occurred.
- Cancel button: Cancel the print data where the BCC error occurred, and continue printing from the next item.
- Send the SUB command: Clear the BCC error and continue printing from where it stopped.
- Send the CAN command: Cancel the print data where the BCC error occurred and continue printing from the next item.

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1022 (Print Head Overheated)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Stop the operation of the product and wait for the temperature to fall.

Cause and Countermeasure

Cause

The temperature of the product has exceeded its allowed value.

Countermeasure

Stop the operation of the product and wait for the temperature to fall.


Contact your SATO technical support center if the error cannot be resolved.

 [Contact Information for When You Are in Trouble](#)

Error Message 1023 (NTP Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.

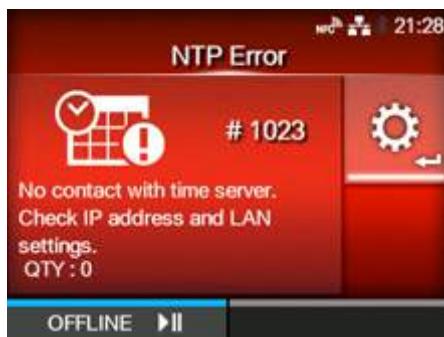

To clear the error:

Press the button (OFFLINE) or change the calendar setting.

Cause and Countermeasure

Cause

Could not connect to the time server and set the date and time.

Countermeasure

- Confirm that the address of the time server is correct.
 [Time Server IP](#)
- Confirm that there is a connection to the time server.
- If RTC kit is attached, the date and time can be set manually and operation resumed without NTP functionality.
 [Regional](#)

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1024 (Head Density Changed)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Check the message that appeared on the screen.

Cause and Countermeasure

Cause (1)

The print head is not installed.

Countermeasure (1)

Install the print head.

 [Replacing the Print Head](#)

Cause (2)

A new print head with a different resolution has been installed.

Countermeasure (2)

Install a print head with the same resolution as the old print head.

 [Replacing the Print Head](#)

Contact your SATO technical support center if the error cannot be resolved.

 [Contact Information for When You Are in Trouble](#)

Error Message 1028 (Gap Not Found)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (OFFLINE) or open/close the print head.

Cause and Countermeasure

Cause (1)

Meandering media.

Countermeasure (1)

Load the media correctly.

[Loading the Media](#)

Cause (2)

A label is attached to the media sensor.

Countermeasure (2)

Clean the media sensor.

[Cleaning Using the Cleaning Kit](#)

Cause (3)

The media sensor type is incorrect.

Countermeasure (3)

Set the media sensor type which is compatible with the media you use.

[Media Sensor Type](#)

Cause (4)

The media sensor level is incorrect.

Countermeasure (4)

Adjust the media sensor level.

Cause and Countermeasure



[Calibrate](#)

Contact your SATO technical support center if the error cannot be resolved.



[Contact Information for When You Are in Trouble](#)

Error Message 1035 (I-mark Not Found)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (OFFLINE) or open/close the print head.

Cause and Countermeasure

Cause (1)

Meandering media.

Countermeasure (1)

Load the media correctly.

[Loading the Media](#)

Cause (2)

A label is attached to the media sensor.

Countermeasure (2)

Clean the media sensor.

[Cleaning Using the Cleaning Kit](#)

Cause (3)

The media sensor type is incorrect.

Countermeasure (3)

Set the media sensor type which is compatible with the media you use.

[Media Sensor Type](#)

Cause (4)

The media sensor level is incorrect.

Countermeasure (4)

Adjust the media sensor level.

Cause and Countermeasure



[Calibrate](#)

Contact your SATO technical support center if the error cannot be resolved.



[Contact Information for When You Are in Trouble](#)

Error Message 1046 (EAP Authentication Error (EAP Failure))

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Change the Wi-Fi settings or press the button (OFFLINE).

Cause and Countermeasure

Cause

EAP Authentication failure.

Countermeasure

Use the correct Wi-Fi settings.

[EAP Conf.](#)


Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1047 (EAP Authentication Error (EAP Timeout))

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.

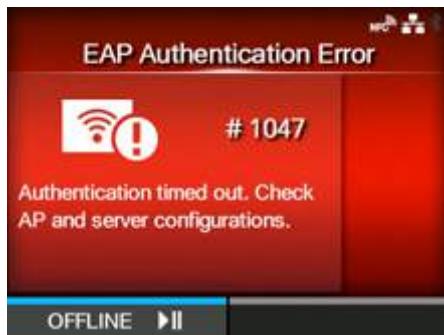

To clear the error:

Press the button (OFFLINE).

Cause and Countermeasure

Cause

EAP Authentication failure.

Countermeasure

Use the correct Access Point (AP) and authentication server settings.

[EAP Conf.](#)

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1050 (Bluetooth Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Check the message that appeared on the screen.

Cause and Countermeasure

Cause

Bluetooth module is defective.

Countermeasure

Repair of the Bluetooth module is required. Contact your SATO technical support center.

 [Contact Information for When You Are in Trouble](#)

Error Message 1058 (CRC Check Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (CANCEL) or button (PRINT).

Cause and Countermeasure

Cause

- CRC has not been added to the data.
- CRC does not match.

Countermeasure

Check transmitted data and interface settings.

- button (PRINT): Continue printing from the print data where the CRC error occurred.
- button (CANCEL): Cancel the print data where the CRC error occurred and continue printing from the next item.

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1066 (Paper Jam) (CL4NX only)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Unlock the print head and load the media again.

Cause and Countermeasure

Cause (1)

The media has jammed.

Countermeasure (1)

Remove the jammed media.

Refer to the video for loading the media, for the media path, and for the operation of each part inside the product.

[Loading the Media](#)

Cause (2)

The media is not loaded correctly.

Countermeasure (2)

Load the media correctly.

[Loading the Media](#)

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1073 (Non-RFID Warning) (CL4NX only)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (CANCEL).

Cause and Countermeasure

Cause

With Non-RFID warning enabled and RFID tag loaded, the items received do not contain an RFID issue command.

Countermeasure

- Add an RFID issue command to the print job.
- Disable Non-RFID warning.

[Non-RFID Warning](#)


- Replace with non-RFID label.

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error message 1075 (NFC Error)

When there is an error with the product, the error message appears on the screen. Check the cause and countermeasure, and then take appropriate action.

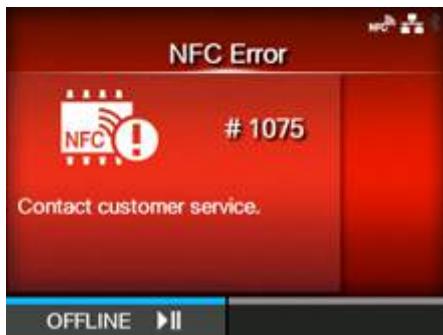

To clear the error:

Press the button (OFFLINE).

Cause and Countermeasure

Cause

The NFC module is not operating correctly.

Countermeasure

A replacement of the NFC module is required. Contact your SATO technical support center.



[Contact Information for When You Are in Trouble](#)

Error message 1076 (Invalid Command in NFC)

When there is an error with the product, the error message appears on the screen. Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Press the button (OFFLINE).

Cause and Countermeasure

Cause

A command error occurs and the settings are not saved correctly.

Countermeasure

Check the command.

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1077 (Barcode Reader Connection Error)

When there is an error with the product, the error message appears on the screen. Check the cause and countermeasure, and then take appropriate action.



To clear the error:

Connect the barcode checker, or press the button (OFFLINE).

Cause and Countermeasure

Cause

- Could not check the connection of the barcode checker.
- Communication between the barcode checker and the product fails.

Countermeasure

Check the barcode checker, and connect it correctly.

If you do not use the barcode check function, disable the barcode check mode.

[Mode](#)


Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1078 (Barcode Reading Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.

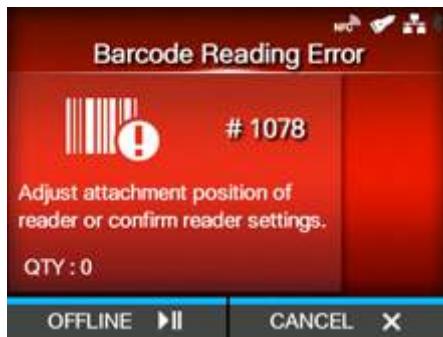

To clear the error:

Press the button (OFFLINE) or button (CANCEL).

- Press the button (OFFLINE) to change to Offline mode while keeping the print job.
- Press the button (CANCEL) to cancel the print job and change to Offline mode.

Cause and Countermeasure

Cause

Could not read the barcode correctly.

Countermeasure

- Check the layout for printing.
- Check the barcode checker position and its settings.

[Configuring Optional Barcode Check Function](#)


Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1079 (Barcode Reading Error (Checking Start Position Abnormality))

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.

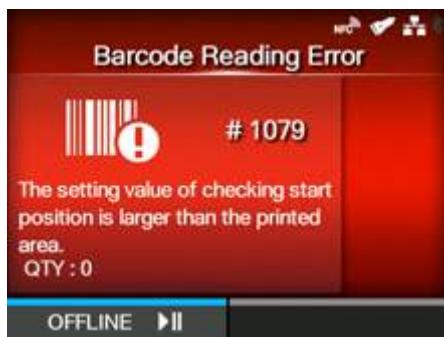

To clear the error:

Press the button (OFFLINE). The product changes to Offline mode while keeping the print job.

Cause and Countermeasure

Cause

A value larger than the loaded media length is specified for checking start position.

Countermeasure

- Check the layout for printing.
- Set a value smaller than the loaded media length for checking start position.

[Start Position](#)


Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message 1080 (Barcode Comparison Error)

When there is an error with the product, the error message appears on the screen.

Check the cause and countermeasure, and then take appropriate action.

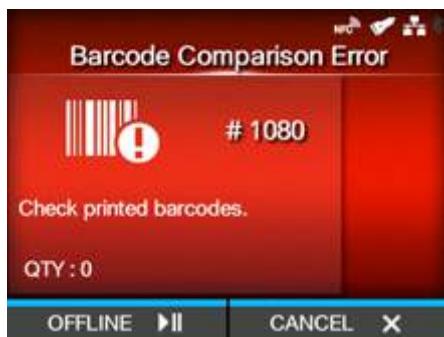

To clear the error:

Press the button (OFFLINE) or button (CANCEL).

- Press the button (OFFLINE) to change to Offline mode while keeping the print job.
- Press the button (CANCEL) to cancel the print job and change to Offline mode.

Cause and Countermeasure

Cause

The read result of the barcode does not match the print data.

Countermeasure

- Check the layout for printing.
- Check the barcode checker position and its settings.

[Configuring Optional Barcode Check Function](#)

Contact your SATO technical support center if the error cannot be resolved.

[Contact Information for When You Are in Trouble](#)

Error Message Indication and Operating Procedure When the SOS (SATO Online Services) Is Enabled (SOS users only)

The SOS (SATO Online Services) icon appears in the error message when SOS is enabled.

If you select the SOS icon, a QR code containing the error information and the contact telephone number appears.


- Press the  button.



- If the icon of the guidance videos also appears, select the SOS icon using the  /  button, and then press the  button.



A screen with QR code, phone number, serial number, and error number appears after selecting the SOS icon and pressing the  button.

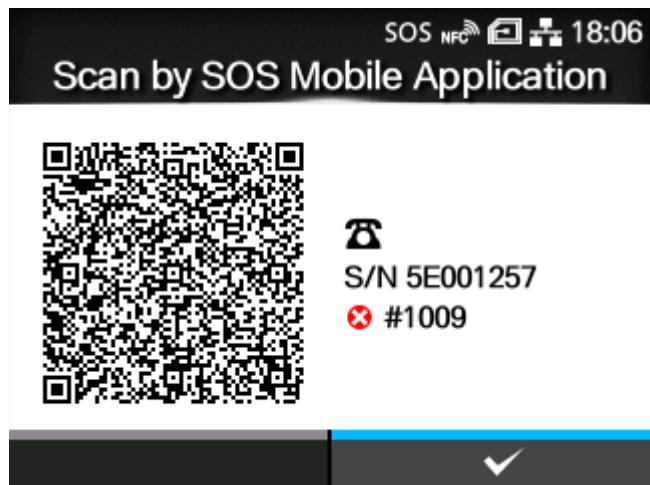

The menu for the specialized application for SOS appears after scanning the QR code with a tablet device or smartphone. A specialized SOS application is required to scan the QR code.

Press the  button to return to the error message screen.

Contact Information for When You Are in Trouble

Service and Support Page of Your Nearest SATO Office

Access the following site and select your country from the list. Check the information on the displayed page.

 <http://www.satoworldwide.com/service-and-support.aspx>

Contact Us

Access the following site to send us your questions or comments.

 <https://www.satoworldwide.com/contact-us.aspx>

Product Specifications

Specifications

Hardware

Dimensions and Weight

Item	CL4NX	CL6NX
Width	271 mm (10.67") (Excludes projection)	338 mm (13.31") (Excludes projection)
Height	321 mm (12.64") (Excludes projection)	321 mm (12.64") (Excludes projection)
Depth	457 mm (18.00") (Excludes projection)	457 mm (18.00") (Excludes projection)
Weight	Approximately 15.1 kg (33.28 lbs.) (Excludes media, ribbon and options)	Approximately 20.3 kg (44.75 lbs.) (Excludes media, ribbon and options)

Power Supply

Item	CL4NX	CL6NX
Input Voltage	AC 100 - 240 V ±10% (Full-range)	
Frequency	50 / 60 Hz	
Power Consumption	At peak 180 W / 190 VA (Print ratio 30%) Standby 20 W / 40 VA	At peak 240 W / 308 VA (Print ratio 30%) Standby 23 W / 63 VA

Processing

Item	CL4NX	CL6NX
Flash ROM	CPU1 2 GB CPU2 4 MB	

Item	CL4NX	CL6NX
SDRAM	CPU1 256 MB CPU2 64 MB	
User Registration Area	Maximum 679 MB	
Receive Buffer	Buffer full 2.95 MB Buffer near full Occurrence: 2MB, Release: 1 MB	

Operation

Item	CL4NX	CL6NX
LCD	TFT color 3.5-inch (88.9 mm)	
LED	STATUS Blue/Red	
Display Language	English / German / French / Spanish / Italian / Portuguese / Brazilian Portuguese / Czech / Danish / Dutch / Finnish / Greek / Hungarian / Norwegian / Polish / Romanian / Russian / Slovak / Swedish / Turkish / Chinese (Simplified) / Chinese (Traditional) / Korean / Japanese / Arabic / Thai / Vietnamese / Persian / Indonesian / Hindi / Bulgarian	

Environmental Conditions (Without Media and Ribbon)

Item	CL4NX	CL6NX
Operating Temperature	Continuous/Cutter/Tear-off mode 0 to 40 °C (32 to 104 °F) Dispenser/Linerless mode 5 to 35 °C (41 to 95 °F)	Continuous/Cutter/Tear-off mode 0 to 40 °C (32 to 104 °F) Dispenser mode 5 to 35 °C (41 to 95 °F)
Storage Temperature	-20 to 60 °C (-4 to 140 °F)	
Operating Humidity	Continuous/Dispenser/Cutter/Tear-off mode 30 to 80% RH (Non-condensing)	30 to 80% RH (Non-condensing)

Item	CL4NX	CL6NX
	Linerless mode 30 to 75% RH (Non-condensing)	
Storage Humidity	30 to 90% RH (Non-condensing)	

Print

Item	CL4NX	CL6NX
Print Method	Direct thermal and thermal transfer	
Print Speed	203 dpi 2 to 10 inches/sec (50.8 to 254 mm/sec) 305 dpi 2 to 8 inches/sec (50.8 to 203.2 mm/sec) 609 dpi 2 to 6 inches/sec (50.8 to 152 mm/sec) Linerless mode 2 to 6 inches/sec (50.8 to 152 mm/sec)	203 dpi 2 to 10 inches/sec (50.8 to 254 mm/sec) 305 dpi 2 to 8 inches/sec (50.8 to 203.2 mm/sec)
Resolution (Head Density)	<ul style="list-style-type: none"> • 203 dpi (8 dots/mm) • 305 dpi (12 dots/mm) • 609 dpi (24 dots/mm) 	<ul style="list-style-type: none"> • 203 dpi (8 dots/mm) • 305 dpi (12 dots/mm)
Non-printable Area	Pitch direction (Excludes liner) Top 1.5 mm (0.06") Bottom 1.5 mm (0.06") Width direction (Excludes liner) Left 1.5 mm (0.06") Right 1.5 mm (0.06")	

Item	CL4NX	CL6NX
Printable Area	<p>203 dpi Length 2500 mm (98.42") x Width 104 mm (4.09")</p> <p>305 dpi Length 1500 mm (59.05") x Width 104 mm (4.09")</p> <p>609 dpi Length 400 mm (15.75") x Width 104 mm (4.09")</p>	<p>203 dpi Length 2500 mm (98.42") x Width 152 mm (5.98")</p> <p>305 dpi Length 1500 mm (59.05") x Width 165.3 mm (6.50")</p> <p>When Head Base Position is set to Left-justify maximum print width 167.5 mm (6.59")</p>
Print End Position	<p>203 dpi (1 dot = 0.125 mm (0.0049")) 1 to 20000 dots</p> <p>305 dpi (1 dot = 0.083 mm (0.0033")) 1 to 18000 dots</p> <p>609 dpi (1 dot = 0.042 mm (0.0017")) 1 to 9600 dots</p>	<p>203 dpi (1 dot = 0.125 mm (0.0049")) 1 to 20000 dots</p> <p>305 dpi (1 dot = 0.083 mm (0.0033")) 1 to 18000 dots</p>
Print Darkness	<p>Darkness level 1 to 10</p> <p>Darkness range A</p>	

Sensors

Item	CL4NX	CL6NX
I-mark (Reflective Type)	Position and sensitivity Adjustable	
Gap (Transmissive Type)	Position and sensitivity Adjustable	
Head Open	Fixed	
Paper End Sensor	Detect with I-mark sensor or Gap sensor	

Item	CL4NX	CL6NX
Label Near End	Fixed *This feature is supported on products from serial number 6B~ and above.	
Ribbon End/Ribbon Near End	Fixed	
Dispenser	Fixed • If linerless cutter kit or dispenser unit is installed.	Fixed • If dispenser unit is installed.
Cutter	Fixed • If cutter unit or linerless cutter kit is installed.	Fixed • If cutter unit is installed.



- Specifications are subject to change without notice.

Interface

Supported Interfaces

For data communication with the host, the product supports the following interfaces.

Standard

- USB Interface (Type B)
- LAN Interface (Ethernet)
- Bluetooth Interface
- NFC Interface
 - *This feature is supported on products from serial number 6B~ and above.
- USB Interface (Type A) x 2
- RS-232C Interface (DB 9 pins, female)
- IEEE1284 Interface (Amphenol 36 pins)
- External Signal (EXT) Interface (Amphenol 14 pins)

Option

- Wireless LAN Interface

RFID (CL4NX only)

UHF (920 MHz)

ISO/IEC 18000-6 Type C Gen2

UHF (13.56 MHz)

ISO/IEC 15693 (ICODE SLI/SLIX/SLIX-S, Tag-it HF-I, my-d)

ISO/IEC 14443 Type A (NTAG203, NTAG210, NTAG213/215/216, MIFARE UltraLight, MIFARE UltraLight C, my-d move NFC)

ISO/IEC 18092 (FeliCa Lite-S)



- Do not connect or disconnect the interface cables (or use a switch box) with power supplied to either the product or host. This may cause damage to the interface circuitry in the product or host and is not covered by warranty.




- Wireless LAN is an optional interface.
- You cannot use the wireless LAN interface and LAN interface at a time.
- You can set the interface settings of the product through [Interface] in the [Settings] menu.

USB Interface

This interface complies with the USB2.0 standard.

Install the USB driver to the computer before use.

Basic Specifications	
Connector	USB Type B connector
Protocol	Status4, Status5
Power Supply	BUS Power through cable

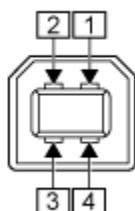

Pin Assignments	
Pin No.	Description
1	VBus
2	-Data
3	+Data
4	GND

Cable Specifications	
Cable Connector	USB Type B connector
Cable Length	5 m (16.4 feet) or less



- Specifications are subject to change without notice.

LAN Interface

Basic Specifications	
Connector	RJ-45 Receptacle
Protocol	• Status3

Basic Specifications	
	<ul style="list-style-type: none"> • Status4 • Status5
IP Address	<ul style="list-style-type: none"> • IPv4 • IPv6
Subnet Mask / Prefix Length	<ul style="list-style-type: none"> • IPv4 • IPv6
Gateway Address	<ul style="list-style-type: none"> • IPv4 • IPv6

Cable Specifications	
Cable	10BASE-T/100BASE-TX Category 5
Cable Length	100 m (328 feet) or less

Software Specifications	
Supported Protocol	TCP/IP
Network Layer	IP, ICMP
Session Layer	TCP
Application Layer	LPD, FTP, DHCP, HTTP/HTTPS, SNMP, NTP



- Specifications are subject to change without notice.

Bluetooth Interface

This interface complies with the Bluetooth3.0+EDR standard.

Basic Specifications	
Signal Level	Class 2
Communication Distance	10 m (32.8 feet)
Profile	Serial Port Profile
Security Level	None, level 2, 2-1, 2-2, level 3, level 4
PIN Code	1 to 16 characters consisting of ASCII code (20H, 21H, 23H to 7EH)

Basic Specifications

Disconnect Timeout (LMP Layer)	60 seconds
--------------------------------	------------



- Specifications are subject to change without notice.

NFC Interface

This interface complies with the NFC Forum Type 2 Tag.



- This feature is supported on products from serial number 6B~ and above.
- Specifications are subject to change without notice.

RS-232C Interface


This interface complies with the RS-232C standard.

Basic Specifications

Asynchronous ASCII	Half-duplex communication Bi-directional communication
Data Transmission Rate	2400, 4800, 9600, 19200, 38400, 57600, 115200 bps
Transmission Form	Start, b1, b2, b3, b4, b5, b6, b7, b8, Stop  • "b8" will be omitted if using 7 bit oriented.
Data Length	7 or 8 bits (Selected)
Stop Bit	1 or 2 bits (Selected)
Parity Bit	ODD, EVEN, NONE (Selected)
Codes Used	ASCII Character Codes 7 bits Graphics 8 bits
Control Codes	STX (02H), ETX (03H), ACK (06H), NAK (15H)
Connector	DB-9 Female or equivalent
Signal Level	High = +5 to +12 V, Low = -5 to -12 V

Basic Specifications

Protocol	READY/BUSY, XON/XOFF, STATUS3, STATUS4, STATUS5
----------	---

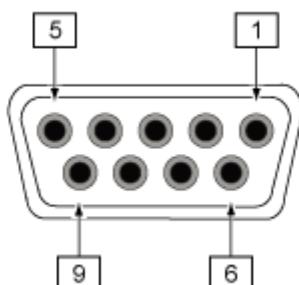

Connector Pin Specifications

Pin No.	I/O	Description
1	-	Data Carrier Detect
2	Input	Receive Data
3	Output	Transmit Data
4	Output	Data Terminal Ready
5	Reference	Signal Ground
6	Input	Data Set Ready
7	Output	Request To Send
8	Input	Clear To Send
9	-	Not connected

Cable Specifications

Cable Connector	DB-9 Male or equivalent
Cable Length	5 m (16.4 feet) or less




- When using the READY/BUSY control, make sure that the product is in power on mode before you send the data from the host.
- With communication protocols, such as XON/XOFF, STATUS3, STATUS4 or STATUS5, a receive buffer full error will occur when the received data is more than the receive buffer size (2.95 MB). Send data that is less than 2.95 MB while monitoring the status of the product.
- A parity error will be detected if this error occurs after the reception of ESC+A.
- Specifications are subject to change without notice.

IEEE1284 Interface

This interface complies with the IEEE1284 standard.

Basic Specifications	
Connector	Amphenol 36 pins, female
Signal Level	High-level +2.4 to +5.0 V Low-level +0.0 to +0.4 V
Receive Mode	Single-item buffer, Multi-item buffer

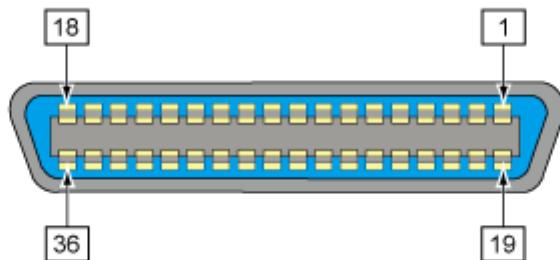

Connector Pin Specifications		
Pin No.	I/O	Description
1	Input	STROBE
2 - 9	Input	DATA 1 - DATA 8 DATA1 LSB DATA8 MSB
10	Output	ACK
11	Output	BUSY
12	Output	PAPER EMPTY/PAPER ERROR
13	Output	SELECT
14	Input	AUTO FEED
15	-	Not in use

Connector Pin Specifications		
Pin No.	I/O	Description
16	-	LOGIC Ground
17	-	Frame Ground
18	-	+5 V
19	-	STROBE RETURN
20-27	-	DATA 1 - DATA 8 RETURN
28	-	ACK RETURN
29	-	BUSY RETURN
30	-	PAPER EMPTY RETURN
31	Input	INITIALIZE
32	Output	FAULT
33-35	-	Not in use
36	Input	SELECT INPUT

Cable Specifications	
Cable Connector	Amphenol 36 pins, male
Cable Length	1.5 m (5 feet) or less



- Specifications are subject to change without notice.

External Signal (EXT) Interface


Basic Specifications of External Signal (EXT) Interface

This interface is designed to connect the product with other peripherals.


Basic Specifications	
Connector	Centronics IDC Type 14 pins (Female)
Signal Levels	High-level +4.2 to +5.0 V

Basic Specifications

	Low-level +0.0 to +0.7 V
--	------------------------------------

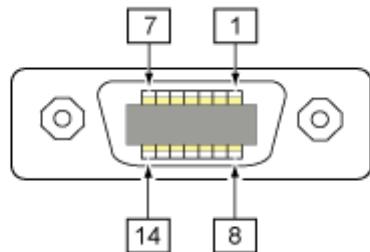

Connector Pin Specifications of External Signal (EXT) Interface

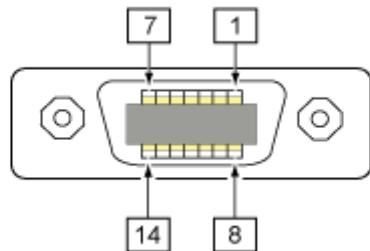

Pin No.	I/O	Description	Electric Conditions (Voltage, Current (Max))
1	Output	Paper End Outputs a low signal when the paper end is detected.	Withstand voltage 50 V Sink current 50 mA
2	-	GND Reference Signal Ground	-
3	Output	Ribbon End Outputs a low signal when the ribbon end is detected.	Withstand voltage 50 V Sink current 50 mA
4	Output	Machine Error Outputs a low signal when an error such as the head open error is detected.	Withstand voltage 50 V Sink current 50 mA
5	Input	Print Start signal (PRIN) Prints one media when a low signal is detected.	High: high impedance Low: more than -15 mA, 0 V

Pin No.	I/O	Description	Electric Conditions (Voltage, Current (Max))
6	Output	Print Done/Print End signal (PREND) Outputs a signal when the media print is completed.	Withstand voltage 50 V Sink current 50 mA
7	Input	Reprint signal (PRIN2) Prints the previously printed content again when a low signal is detected.	High: high impedance Low: more than -15 mA, 0 V
8	Input	External power supply	5 V
9	Output	Offline Outputs a low signal when the product is in Offline mode.	Withstand voltage 50 V Sink current 50 mA
10	Output	Ribbon Near End Outputs a high signal when the ribbon near end is detected.	Withstand voltage 50 V Sink current 50 mA
11	-	-	-
12	-	+24 V ± 10%	2 A
13	-	Vcc +5 V	500 mA
14	-	-	-
*	Output	Wait signal for dispense completion Outputs a low signal when the dispense is completed. You can set the pin number for output through the [Settings] > [Interface] > [External I/O] > [Signals] > [Outputs] menu.	Withstand voltage 50 V Sink current 50 mA
*	Output	Label Near End signal Outputs a high signal when the label near end is detected. You can set the pin number for output through the [Settings] > [Interface] > [External I/O] > [Signals] > [Outputs] menu. *This feature is supported on products from serial number 6B~ and above.	Withstand voltage 50 V Sink current 50 mA



- You can set the external signal (EXT) type (TYPE1 to TYPE4) for Print Done output signal of pin No. 6. Refer to the [EXT Mode] screen of the [Settings] > [Interface] > [External I/O] > [Signals] menu for details.
- You can set the pin number for input and output through the [Settings] > [Interface] > [External I/O] > [Signals] > [Inputs] and [Outputs] menu.
- The Print Done signal of pin No. 6 is not outputted when 0 is specified in the number of cuts in the command specifying the number of cuts during the cutter operation.

Timing Chart of the EXT Input Signal

Item	Input Waveform
Print Start	<p>The chart shows the timing for a single print job. A vertical dashed red line marks the start of printing. The 'Print Start (PRIN)' signal goes high at the start. The 'Reprint (PRIN2)' signal is low. The 'Print' signal goes high. The 'Print End (Print Done)' signal goes high after a 20 ms delay. Four horizontal lines represent different types: TYPE 1, TYPE 2, TYPE 3, and TYPE 4. All four lines remain high until the end of the print cycle.</p>
Reprint (No Print Start Signal)	<p>The chart shows the timing for a reprint job without a separate print start signal. It starts at the same time as the previous print. The 'Reprint (PRIN2)' signal goes high at the start. The 'Print' signal goes high. The 'Print End (Print Done)' signal goes high after a 20 ms delay. The four type signals remain high until the end.</p>
Reprint (With Print Start Signal)	<p>The chart shows the timing for a reprint job with a separate print start signal. It starts at the same time as the previous print. The 'Print Start (PRIN)' signal goes high at the start. The 'Reprint (PRIN2)' signal goes high after a 'More than 10 ms' delay. The 'Print' signal goes high. The 'Print End (Print Done)' signal goes high after a 20 ms delay. The four type signals remain high until the end.</p>



- Keep the print start signal (PRIN) to "Low" until the print end signal (Print done) is outputted. For maintaining the print start signal (PRIN), refer to the [Maintaining the Print Start Signal \(PRIN\)](#).
- Keep the output reprint signal (PRIN2) for more than 10 ms. When signal is outputted for shorter than 10 ms, and reprint signal is not acknowledged, the product does not perform reprinting.

Maintaining the Print Start Signal (PRIN)

Item	Input Waveform
Print Start	<p>TYPE 1, 2</p> <p>Printed 1 piece</p> <p>Print Start (PRIN) Reprint (PRIN2) Print Print End (Print Done) TYPE 1 TYPE 2</p>
	<p>TYPE 3, 4</p> <p>Printed 1 piece</p> <p>Print Start (PRIN) Reprint (PRIN2) Print Print End (Print Done) TYPE 3 TYPE 4</p> <p>There is no problem to make the PRIN signal to High during the dotted line with TYPE 3 and 4.</p>
Print End (PREND) Signal	<p>Printed 1 piece</p> <p>Print Print End (Print Done) TYPE 1 TYPE 2 TYPE 3 TYPE 4</p> <p>T1 < 150 ns</p>

- Rise or fall time (T1) of Print Done signal is less than 150 ns. You have to consider the time when outputting the signal from the connected devices.
- When the print start signal and reprint signal are outputted simultaneously, the print start signal is enabled and the product does not perform reprinting.

- The reprint signal is valid only from the time of the print operation end (QTY=0) until the next print data reception. Other than that, the product does not perform reprinting.




Timing Chart of the EXT Output Signal

Standard Specification

Item	Output Waveform
Basic Operation	<p>Print Print End (Print Done) TYPE 1 TYPE 2 TYPE 3 TYPE 4 Paper End Ribbon End Machine Error</p> <p>Printed 1 piece</p> <p>20 ms</p>
Paper End	<p>Print Print End (Print Done) TYPE 1 TYPE 2 TYPE 3 TYPE 4 Paper End Ribbon End Machine Error</p> <p>Paper End Head Open Head Close</p> <p>Replace Media</p>
Ribbon End	<p>Print Print End (Print Done) TYPE 1 TYPE 2 TYPE 3 TYPE 4 Paper End Ribbon End Machine Error</p> <p>Ribbon End Head Open Head Close</p> <p>Replace Ribbon</p>

Item	Output Waveform
Machine Error	<p>The diagram shows the following signals over time:</p> <ul style="list-style-type: none"> Print: A pulse starting at the beginning. Print End (Print Done): Four horizontal lines labeled TYPE 1, TYPE 2, TYPE 3, and TYPE 4. Paper End: A horizontal line. Ribbon End: A horizontal line. Machine Error: A pulse starting after the paper end. Head Open: An arrow pointing down to a vertical dashed line at the start of the print end pulses. Head Close: An arrow pointing down to a vertical dashed line at the end of the print end pulses.
Ribbon Near End/Label Near End *Label Near End is supported on products from serial number 6B~ and above.	<p>The diagram shows the following signals over time:</p> <ul style="list-style-type: none"> Print: A pulse starting at the beginning. Print End (Print Done): Four horizontal lines labeled TYPE 1, TYPE 2, TYPE 3, and TYPE 4. Paper End: A horizontal line. Ribbon Near End Label Near End: A horizontal line. Head Open: An arrow pointing down to a vertical dashed line at the end of the print end pulses. Head Close: An arrow pointing down to a vertical dashed line at the end of the ribbon near end label near end pulse. Ribbon Near End Label Near End: An arrow pointing down to a vertical dashed line at the start of the ribbon near end label near end pulse.
Offline	<p>The diagram shows the following signals over time:</p> <ul style="list-style-type: none"> Print: A pulse starting at the beginning. Print End (Print Done): Four horizontal lines labeled TYPE 1, TYPE 2, TYPE 3, and TYPE 4. Paper End: A horizontal line. Offline: A horizontal line. Head Open: An arrow pointing down to a vertical dashed line at the start of the print end pulses. Head Close: An arrow pointing down to a vertical dashed line at the end of the print end pulses. Press the online button: An arrow pointing down to a vertical dashed line at the end of the offline pulse.

If RFID Mode Is Enabled (CL4NX only)

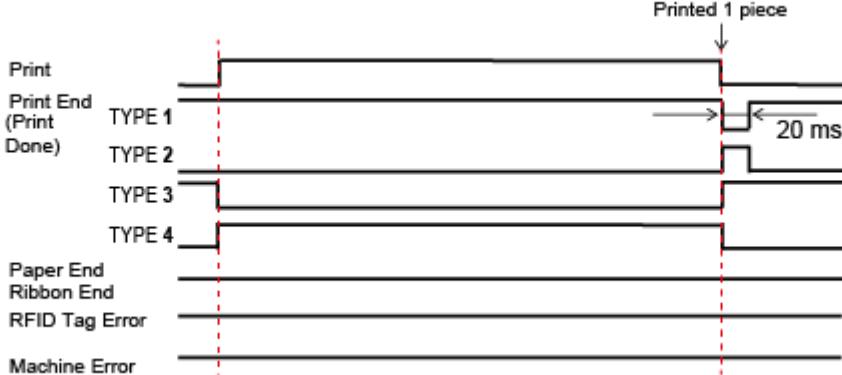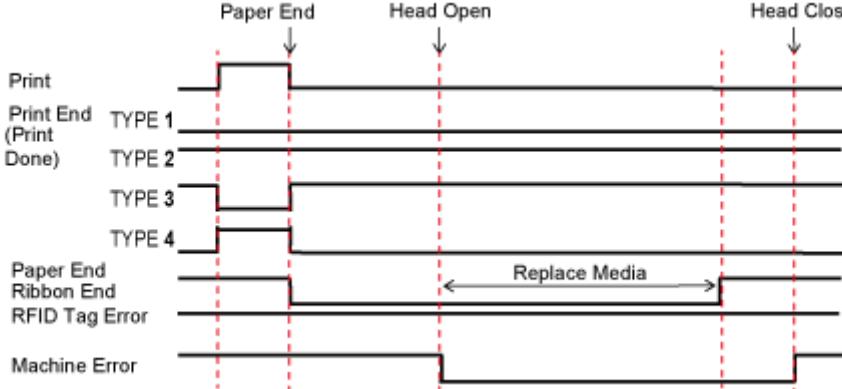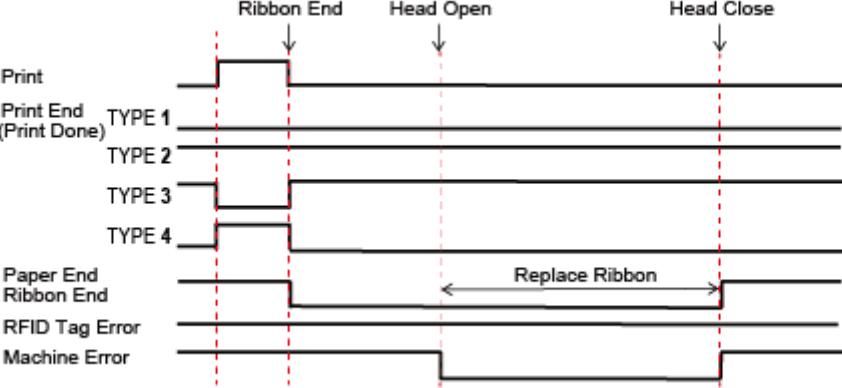Item	Output Waveform
Basic Operation	 <p>Print Print End (Print Done) TYPE 1 TYPE 2 TYPE 3 TYPE 4 Paper End Ribbon End RFID Tag Error Machine Error</p> <p>Printed 1 piece</p> <p>20 ms</p>
Paper End	 <p>Paper End Head Open Head Close</p> <p>Print Print End (Print Done) TYPE 1 TYPE 2 TYPE 3 TYPE 4 Paper End Ribbon End RFID Tag Error Machine Error</p> <p>Replace Media</p>
Ribbon End	 <p>Ribbon End Head Open Head Close</p> <p>Print Print End (Print Done) TYPE 1 TYPE 2 TYPE 3 TYPE 4 Paper End Ribbon End RFID Tag Error Machine Error</p> <p>Replace Ribbon</p>

Timing Chart of the Wait Signal for Dispense Completion

Item	Output Waveform
Backfeed After Print	<p>The timing chart illustrates the sequence of events for Backfeed After Print. It shows four output waveforms labeled TYPE 1, TYPE 2, TYPE 3, and TYPE 4. The 'Print' signal starts at time 0. The 'Print End (Print Done)' signal occurs at time 10 ms. The 'Wait for dispense completion' signal begins at time 10 ms and ends at time 50 ms. The 'Dispense completion' signal occurs at time 50 ms. A vertical dashed red line marks the end of printing at 10 ms. Another vertical dashed red line marks the end of the wait signal at 50 ms. A horizontal double-headed arrow between these lines indicates a total duration of 40 ms. A label 'Sum of 500 ms and backfeed time' is shown near the end of the wait signal.</p>
Backfeed Before Print	<p>The timing chart illustrates the sequence of events for Backfeed Before Print. It shows four output waveforms labeled TYPE 1, TYPE 2, TYPE 3, and TYPE 4. The 'Print' signal starts at time 0. The 'Print End (Print Done)' signal occurs at time 10 ms. The 'Wait for dispense completion' signal begins at time 10 ms and ends at time 50 ms. The 'Dispense completion' signal occurs at time 50 ms. A vertical dashed red line marks the end of printing at 10 ms. Another vertical dashed red line marks the end of the wait signal at 50 ms. A horizontal double-headed arrow between these lines indicates a total duration of 40 ms.</p>

- When the wait signal for dispense completion is enabled, note that the output timing of the print end signal (print done) differs between Backfeed After Print and Backfeed Before Print.
 - In Backfeed After Print, the print end signal (print done) is output after the label waiting for dispense is removed and the product backfeeds to the print start position.
 - In Backfeed Before Print, the print end signal (print done) is output after the product feeds the label to the dispense position.
- "Printed 1 piece" includes the operation of the product feeding the label to the dispense position after printing.

Wireless LAN Interface

This interface complies with the IEEE802.11a/b/g/n standard.



- Before using wireless LAN near medical devices and facilities, consult your system administrator.

Basic Specifications	
Protocol	Status3, Status4, Status5
IP Address	<ul style="list-style-type: none"> • IPv4 • IPv6
Subnet Mask / Prefix Length	<ul style="list-style-type: none"> • IPv4 • IPv6
Gateway Address	<ul style="list-style-type: none"> • IPv4 • IPv6
Data Transfer Method	<p>802.11a Max 54 Mbps</p> <p>802.11n Max 135 Mbps</p> <p>802.11b Max 11 Mbps</p> <p>802.11g Max 54 Mbps</p> <hr/>  • These are the logical values based on the wireless LAN specifications and are not the actual data transfer speeds.
Frequency Band	<ul style="list-style-type: none"> • 2.4 GHz (2.412 to 2.485 GHz) • 5 GHz
Communication Channel	The number of channels you can set varies depending on the region where you use the product.
SSID	Any alphanumeric character (Maximum 32)
Authentication	<ul style="list-style-type: none"> • Open System • Shared Key • WPA/WPA2 • Perform the RADIUS server authentication using 802.1x (EAP-TLS, LEAP, EAP-TTLS, EAP-PEAP, EAP-FAST protocol)
Encryption	<ul style="list-style-type: none"> • None • WEP (64 bits/128 bits) • TKIP (WPA-PSK, WPA-802.1x) • AES (WPA2-PSK, WPA2-802.1x)
Communication Mode	<ul style="list-style-type: none"> • Infrastructure

Basic Specifications

- | | |
|--|--|
| | <ul style="list-style-type: none">• Ad Hoc |
|--|--|

Software Specifications

Supported Protocol	TCP/IP
Network Layer	IP, ICMP
Session Layer	TCP
Application Layer	LPD, FTP, DHCP, HTTP/HTTPS, SNMP, NTP



- Specifications are subject to change without notice.
-

Built-in Functions

Item	CL4NX	CL6NX
Built-in Functions	<ul style="list-style-type: none"> • Status return • Graphic • Sequential number • Form overlay • Character modification • Black/white inversion • Ruled line • Dump list • Format registration • Outline font • Outline modification • Zero slash switching • Guidance video • LCD display in 31 languages • Cleaning notification • Calendar (Optional) • RFID (Optional) • Barcode check (Optional) • Password lock • Logo, font download • LCD turns off • Standby • Total print count indication • Reprint • Power on in Online mode • Feed after error • Feed at power on • Command error indication • Non-standard mode • Priority settings 	<ul style="list-style-type: none"> • Status return • Graphic • Sequential number • Form overlay • Character modification • Black/white inversion • Ruled line • Dump list • Format registration • Outline font • Outline modification • Zero slash switching • Guidance video • LCD display in 31 languages • Cleaning notification • Calendar (Optional) • Barcode check (Optional) • Password lock • Logo, font download • LCD turns off • Standby • Total print count indication • Reprint • Power on in Online mode • Feed after error • Feed at power on • Command error indication • Non-standard mode • Priority settings
Self-diagnosis Functions	<ul style="list-style-type: none"> • Broken head element check • Head open detection • Media size check • Paper end detection 	

Item	CL4NX	CL6NX
	<ul style="list-style-type: none">• Label near end detection *This feature is supported on products from serial number 6B~ and above.• Ribbon end detection• Ribbon near end detection• Test print• Cutter open check (If cutter unit is installed)• Label detection at dispensing (If dispenser unit is installed)	
Adjustment Functions	<ul style="list-style-type: none">• Print darkness• Print position• Media stop position• Buzzer• LCD brightness	



- Specifications are subject to change without notice.

Printer Languages

- SBPL (Includes XML support)
- SZPL
- SDPL
- SIPL
- STCL
- SEPL

Standards

Item	CL4NX	CL6NX
Noise (EMC) Standards	FCC PART15B ICES-003 EN55024, EN55032 CCC KC BIS RCM EAC	
Safety Standards	UL 60950-1 CSA C22.2 EN 60950-1 CCC KC BIS RCM EAC IRAM	
Wireless Regulations	FCC PART15C/E IC RE SRRC KC WPC RCM Minsvyaz IMDA SIRIM PTQC SDPPI NTC ANATEL CNC	
Environmental Standard	Compatible with the RoHS directive	

Item	CL4NX	CL6NX
Energy Saving	International ENERGY STAR® program	



- Specifications are subject to change without notice.
-

Usable Media and Ribbon

Media



- Use genuine media made by SATO.

Type

- Media roll (Face-in wound/face-out wound)
- Fan-fold media

Size

- Continuous

Item	CL4NX	CL6NX
Media Length	203 dpi 6 to 2497 mm (0.24" to 98.30") 305 dpi 6 to 1497 mm (0.24" to 58.94") 609 dpi 6 to 397 mm (0.24" to 15.63")	203 dpi 16 to 2497 mm (0.63" to 98.30") 305 dpi 16 to 1497 mm (0.63" to 58.94")
Media Length (With Liner)	203 dpi 9 to 2500 mm (0.35" to 98.42") 305 dpi 9 to 1500 mm (0.35" to 59.05") 609 dpi 9 to 400 mm (0.35" to 15.75")	203 dpi 19 to 2500 mm (0.75" to 98.42") 305 dpi 19 to 1500 mm (0.75" to 59.05")
Media Width	<ul style="list-style-type: none"> • 22 to 128 mm (0.87" to 5.04") 	<ul style="list-style-type: none"> • 47 to 177 mm (1.85" to 6.97")
Media Width (With Liner)	<ul style="list-style-type: none"> • 25 to 131 mm (0.98" to 5.16") 	<ul style="list-style-type: none"> • 50 to 180 mm (1.97" to 7.08")

*Above pitch and width are valid for die-cut labels. For media without liner like tags, refer to the value 'with liner'.

- Tear-Off/Cutter

Item	CL4NX	CL6NX
Media Length	203 dpi 17 to 2497 mm (0.67" to 98.30") 305 dpi 17 to 1497 mm (0.67" to 58.94") 609 dpi 17 to 397 mm (0.67" to 15.63")	203 dpi 17 to 2497 mm (0.67" to 98.30") 305 dpi 17 to 1497 mm (0.67" to 58.94")
Media Length (With Liner)	203 dpi 20 to 2500 mm (0.79" to 98.42") 305 dpi 20 to 1500 mm (0.79" to 59.05") 609 dpi 20 to 400 mm (0.79" to 15.75") When Print Mode is set to Cut & Print, the minimum media length for each print speed is the following value. 2 ips: 40 mm (1.57") 3 ips: 58 mm (2.28") 4 ips: 75 mm (2.95") 5 ips: 93 mm (3.66") 6 ips: 110 mm (4.33") 7 ips: 125 mm (4.92") 8 ips: 140 mm (5.51") 9 ips: 156 mm (6.14") 10 ips: 171 mm (6.73")	203 dpi 20 to 2500 mm (0.79" to 98.42") 305 dpi 20 to 1500 mm (0.79" to 59.05") When Print Mode is set to Cut & Print, the minimum media length for each print speed is the following value. 2 ips: 40 mm (1.57") 3 ips: 58 mm (2.28") 4 ips: 75 mm (2.95") 5 ips: 93 mm (3.66") 6 ips: 110 mm (4.33") 7 ips: 125 mm (4.92") 8 ips: 140 mm (5.51") 9 ips: 156 mm (6.14") 10 ips: 171 mm (6.73")
Media Width	<ul style="list-style-type: none"> 22 to 128 mm (0.87" to 5.04") 	<ul style="list-style-type: none"> 47 to 177 mm (1.85" to 6.97")
Media Width (With Liner)	<ul style="list-style-type: none"> 25 to 131 mm (0.98" to 5.16") 	<ul style="list-style-type: none"> 50 to 180 mm (1.97" to 7.08")

*Above pitch and width are valid for die-cut labels. For media without liner like tags, refer to the value 'with liner'.

- Dispenser

Item	CL4NX	CL6NX
Media Length	<ul style="list-style-type: none"> 27 to 397 mm (1.06" to 15.63") 	

Item	CL4NX	CL6NX
Media Length (With Liner)	<ul style="list-style-type: none"> 30 to 400 mm (1.18" to 15.75") 	
Media Width	<ul style="list-style-type: none"> 22 to 128 mm (0.87" to 5.04") 	<ul style="list-style-type: none"> 47 to 177 mm (1.85" to 6.97")
Media Width (With Liner)	<ul style="list-style-type: none"> 25 to 131 mm (0.98" to 5.16") 	<ul style="list-style-type: none"> 50 to 180 mm (1.97" to 7.08")
Diameter of Liner Winding	Maximum φ120 mm (4.72")	

*Above pitch and width are valid for die-cut labels. For media without liner like tags, refer to the value 'with liner'.

- Linerless

Item	CL4NX	CL6NX
Media Length	30 to 120 mm (1.18" to 4.72")	-
Media Width	60 to 118 mm (2.36" to 4.65")	-



- The usable media sizes, the output speed and print quality vary depending on the media specification, media and ribbon combination, product settings and outputting environment. It is recommended to perform a test print with the media and ribbon to be used in advance.

Roll Diameter (Media Roll)

- Maximum φ220 mm (φ8.66")
- When using a dispenser unit with liner rewinder
Maximum φ220 mm (φ8.66")

Core Diameter (Media Roll)

- φ76 mm (φ3"), φ101 mm (φ4")
- When using a dispenser unit with liner rewinder
φ76 mm (φ3")



- Recommend to use 4" core for thick paper (more than 150 µm (0.0059")), non-adhesive media and RFID tags/labels (CL4NX only).

Height (Fan-fold Media)

- Maximum 200 mm (7.87")



- When the product and media are configured to the same height.

Thickness

- 60 to 268 μm (0.060 to 0.268 mm (0.0024" to 0.011"))

Ribbon



- Use genuine ribbon made by SATO.

Item	CL4NX	CL6NX
Size	<p>Length Maximum 600 m (1968.5 feet)</p> <p>Width 39.5 to 128 mm (1.55" to 5.04")</p> <p> • When the width of the ribbon is 39.5 mm (1.55"), the maximum length is 450 m (1476.4 feet). • The maximum length of the ribbon varies depending on the ribbon type. • Use the ribbon that is wider than the media.</p>	<p>Length Maximum 600 m (1968.5 feet)</p> <p>Width 59 to 177 mm (2.32" to 6.97")</p> <p> • The maximum length of the ribbon varies depending on the ribbon type. • Use the ribbon that is wider than the media.</p>
Wind Direction	Both face-out/face-in	
Winding Method	Coreless	

Usable Fonts and Barcodes

Fonts

Bitmap Fonts

Item	CL4NX	CL6NX
<u>U</u>	9 dots H x 5 dots W	
<u>S</u>	15 dots H x 8 dots W	
<u>M</u>	20 dots H x 13 dots W	
<u>WB</u>	30 dots H x 18 dots W	
<u>WL</u>	52 dots H x 28 dots W	
<u>XU</u>	9 dots H x 5 dots W	
<u>XS</u>	17 dots H x 17 dots W	
<u>XM</u>	24 dots H x 24 dots W	
<u>XB</u>	48 dots H x 48 dots W	
<u>XL</u>	48 dots H x 48 dots W	
<u>X20</u>	9 dots H x 5 dots W	
<u>X21</u>	17 dots H x 17 dots W	
<u>X22</u>	24 dots H x 24 dots W	
<u>X23</u>	48 dots H x 48 dots W	
<u>X24</u>	48 dots H x 48 dots W	
<u>OCR-A</u>	203 dpi 22 dots H x 15 dots W 305 dpi 33 dots H x 22 dots W 609 dpi 66 dots H x 44 dots W	203 dpi 22 dots H x 15 dots W 305 dpi 33 dots H x 22 dots W
<u>OCR-B</u>	203 dpi 24 dots H x 20 dots W 305 dpi 36 dots H x 30 dots W	203 dpi 24 dots H x 20 dots W 305 dpi 36 dots H x 30 dots W

Item	CL4NX	CL6NX
	609 dpi 72 dots H x 60 dots W	
JIS208 Kanji Fonts (Mincho/Gothic)	<ul style="list-style-type: none"> • 16 dots H x 16 dots W • 24 dots H x 24 dots W • 22 dots H x 22 dots W • 32 dots H x 32 dots W • 40 dots H x 40 dots W 	
JIS0213 Kanji Fonts (Gothic)	<ul style="list-style-type: none"> • 16 dots H x 16 dots W • 24 dots H x 24 dots W • 22 dots H x 22 dots W • 32 dots H x 32 dots W • 40 dots H x 40 dots W 	
Compatible Kanji Fonts (Mincho)	<ul style="list-style-type: none"> • 16 dots H x 16 dots W • 24 dots H x 24 dots W 	
Simplified Chinese Characters	<ul style="list-style-type: none"> • 16 dots H x 16 dots W • 24 dots H x 24 dots W 	
Traditional Chinese Characters	<ul style="list-style-type: none"> • 24 dots H x 24 dots W 	
Korean Fonts	<ul style="list-style-type: none"> • 16 dots H x 16 dots W • 24 dots H x 24 dots W 	

Scalable Fonts

Item	CL4NX	CL6NX
<u>Rasterized Font</u>	<ul style="list-style-type: none"> • SATO CG Sleek • SATO CG Stream • SATO 0 • SATO Alpha Bold Condensed • SATO Beta Bold Italic • SATO Folio Bold • SATO Futura Medium Condensed • SATO Gamma • SATO OCR-A • SATO OCR-B 	

Item	CL4NX	CL6NX
	<ul style="list-style-type: none"> • SATO Sans • SATO Serif • SATO Symbol Set • SATO WingBats 	
<u>Rasterized Font (Multilingual)</u>	<ul style="list-style-type: none"> • SATO Vica • SATO Hebe Sans • SATO Hebe Sans Arabic • SATO Hebe Sans Thai • SATO Hebe Sans Hebrew • SATO Hebe Sans Hindi • SATO Gothic Traditional Chinese • SATO Gothic Japanese • SATO Gothic Simplified Chinese • SATO Gothic Korean • SATO Silver Serif • SATO Mincho Traditional Chinese • SATO Mincho Japanese • SATO Mincho Simplified Chinese • SATO Mincho Korean • SATO Roman Arabic 	
<u>Outline Fonts</u>	<ul style="list-style-type: none"> • Helvetica Outline Font • JIS208 Kanji Outline Fonts 	



-
- Specifications are subject to change without notice.
-

X20 Font

The X20 font is a bitmap font with a basic size of 9 dots H x 5 dots W.

This supports the fixed pitch only.

A font sample is shown in the figure below.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	0	P	p				-	タ	ミ				
1	!	1	А	Q	а	q			ア	チ	ム			
2	"	2	В	R	б	r			イ	ツ	メ			
3	#	3	С	S	с	s			ウ	テ	モ			
4	\$	4	Д	T	д	t			エ	ト	セ			
5	%	5	Е	U	е	u		・	オ	ナ	ミ			
6	&	6	Ф	V	ф	v		ヨ	カ	ニ	ヨ			
7	'	7	Г	W	г	w			キ	ヌ	ラ			
8	(8	Х	X	х	x			ク	ネ	リ			
9)	9	І	Y	і	y			ケ	ノ	ル			
A	*	:	Ј	Z	ј	z			コ	ハ	レ			
B	+	;	К	¢	к	-			サ	ヒ	ロ			
C	,	<	Л	¥	л	=			シ	フ	ワ			
D	-	=	М		м				ス	ヘ	ン			
E	.	>	Н		н				セ	ホ	ン			
F	/	?	О		о				ソ	マ	*			

X21 Font

The X21 font is a bitmap font with a basic size of 17 dots H x 17 dots W.

You can select fixed pitch or proportional pitch.

A font sample is shown in the figure below.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	@	P	'	p				一	タ	ミ			
1	!	1	A	Q	a	q		.	ア	チ	ム			
2	"	2	B	R	b	r		「	イ	ツ	メ			
3	#	3	C	S	c	s		」	ウ	テ	モ			
4	\$	4	D	T	d	t		、	エ	ト	ヤ			
5	%	5	E	U	e	u		-	オ	ナ	ユ			
6	&	6	F	V	f	v		ヲ	カ	ニ	ヨ			
7	'	7	G	W	g	w		ア	キ	ヌ	ラ			
8	(8	H	X	h	x		イ	ク	ネ	リ			
9)	9	I	Y	i	y		ウ	ケ	ノ	ル			
A	*	:	J	Z	j	z		エ	コ	ハ	レ			
B	+	;	K	[k	{		オ	サ	ヒ	ロ			
C	,	<	L	¥	l	:		ヤ	シ	フ	ワ			
D	-	=	M]	m	}		ユ	ス	ヘ	ン			
E	.	>	N	^	n	~		ヨ	セ	ホ	。			
F	/	?	O	_	o			ツ	ソ	マ	。			



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.

X22 Font

The X22 font is a bitmap font with a basic size of 24 dots H x 24 dots W.

You can select fixed pitch or proportional pitch.

A font sample is shown in the figure below.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F	
0	0	@	P	`	p				一タミ						
1	!	1	A	Q	a	q	.		アチム						
2	"	2	B	R	b	r	「		イツメ						
3	#	3	C	S	c	s	」		ウテモ						
4	\$	4	D	T	d	t	、		エトヤ						
5	%	5	E	U	e	u	-		オナユ						
6	&	6	F	V	f	v	ヲ		カニヨ						
7	'	7	G	W	g	w	ア		キヌラ						
8	(8	H	X	h	x	イ		クネリ						
9)	9	I	Y	i	y	ウ		ケノル						
A	*	:	J	Z	j	z	エ		コハレ						
B	+	;	K	[k	{	オ		サヒロ						
C	,	<	L	¥	l	:	ヤ		シフワ						
D	-	=	M]	m	}	ユ		スヘン						
E	.	>	N	^	n	~	ヨ		セホ						
F	/	?	O	_	o		ツ		ソマ	。					



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.

X23 Font

The X23 font is a bitmap font with a basic size of 48 dots H x 48 dots W.

You can select fixed pitch or proportional pitch.

A font sample is shown in the figure below.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	@	P	'	p				一タミ					
1	!	1	A	Q	a	q		。	アチム					
2	"	2	B	R	b	r		「	イツメ					
3	#	3	C	S	c	s		」	ウテモ					
4	\$	4	D	T	d	t		、	エトヤ					
5	%	5	E	U	e	u		・	オナユ					
6	&	6	F	V	f	v		ヲ	カニヨ					
7	'	7	G	Wg	w			アキヌラ						
8	(8	H	X	h	x		イクネリ						
9)	9	I	Y	i	y		ウケノル						
A	*	:	J	Z	j	z		エコハレ						
B	+	;	K	[k	{		オサヒロ						
C	,	<	L	¥	l	!		ヤシフワ						
D	-	=	M]	m	}		ユスヘン						
E	.	>	N	^	n	~		ヨセホ	・					
F	/	?	O	_	o			ツソマ	。					



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.

X24 Font

The X24 font is a bitmap font with a basic size of 48 dots H x 48 dots W.

You can select fixed pitch or proportional pitch.

A font sample is shown in the figure below.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	Ø	@	P‘	p					一タミ					
1!	1	A	Q	a	q			。	アチム					
2"	2	B	R	b	r			「	イツメ					
3#	3	C	S	c	s			」	ウテモ					
4\$	4	D	T	d	t			、	エトヤ					
5%	5	E	U	e	u			・	オナユ					
6&	6	F	V	f	v			ヲ	カニヨ					
7'	7	G	Wg	w				ア	キヌラ					
8(8	H	X	h	x			イ	クネリ					
9)	9	I	Y	i	y			ウ	ケノル					
A*	:	J	Z	j	z			エ	コハレ					
B+	;	K	[k	{			オ	サヒロ					
C,	<	L	¥		!			ヤ	シフフ					
D-	=	M]	m	}				ユ	スヘン					
E.	>	N	^	n	~			ヨ	セホ	”				
F/	?	O	_	o				ツ	ソマ	°				



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.

U Font

The U font is a bitmap font with a basic size of 9 dots H x 5 dots W.

This supports the fixed pitch only.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	ø	P	`	p	ç	é	á	ó		ö	ó	-	
1	!	1	À	Q	a	q	ü	æ	í		ß	þ	±	
2	"	2	B	R	b	r	é	ë	ó		è	ò	=	
3	#	3	C	S	c	s	â	ô	ú		ë	ò	¤	
4	\$	4	D	T	d	t	ä	ö	ñ		è	ò	¶	
5	%	5	E	U	e	u	à	ò	ñ	á		€	ø	
6	&	6	F	V	f	v	à	û	æ	å	å	í	÷	
7	'	7	G	W	g	w	ç	ù	ø	à	ã	í	þ	
8	(8	H	X	h	x	ë	ÿ	ô	ø		í)	
9)	9	I	Y	i	y	ë	ö	®			ó	"	
A	*	:	J	Z	j	z	è	ö	™			ó	+	
B	+	;	K	L	k	{	í	ø	‰			ù	!	
C	,	<	L	\	l		î	£	‰			ý	³	
D	-	=	M	I	m	}	í	ƒ	;	¢		í	ž	
E	.	>	N	^	n	-	À	×	«	¥		í	-	
F	/	?	O	_	o	⌘	À	f	»		⌘		'	



- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

S Font

The S font is a bitmap font with a basic size of 15 dots H x 8 dots W.

This supports the fixed pitch only.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	@	P	'	p	Ç	É	á	Ø		ð	ó	-	
1	!	1	A	Q	a	q	ü	æ	í		Đ	þ	±	
2	"	2	B	R	b	r	é	Œ	ó		Ê	ô	=	
3	#	3	C	S	c	s	â	ô	ú		Ë	ò	¾	
4	\$	4	D	T	d	t	ä	ö	ñ		È	ø	¶	
5	%	5	E	U	e	u	à	ò	Ñ	Á		€	ö	§
6	&	6	F	V	f	v	à	û	á	Â	ã	í	µ	÷
7	'	7	G	W	g	w	ç	ù	º	À	Ã	î	þ	,
8	(8	H	X	h	x	ê	ÿ	¿	©		Ї	þ	°
9)	9	I	Y	i	y	ë	ö	®			ú	"	
A	*	:	J	Z	j	z	è	ü	¬			û	•	
B	+	;	K	L	k	l	ï	ø	½			ù	!	
C	,	<	L	\	l	l	î	ƒ	¼			ý	³	
D	-	=	M	J	m	}	ì	ø	i	¢	i	ý	²	
E	.	>	N	^	n	~	ä	x	«	¥	i	-		
F	/	?	O	_	o	■	À	f	»		ø		'	



- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

M Font

The M font is a bitmap font with a basic size of 20 dots H x 13 dots W.

This supports the fixed pitch only.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	Ø	@	P	'	p	Ç	É	á	Ø	ð	ó	-		
1	!	1	A	Q	a	q	ü	æ	í		Đ	Þ	±	
2	"	2	B	R	b	r	é	Æ	ó		Ê	Ô	=	
3	#	3	C	S	c	s	â	ô	ú		Ë	Ò	%	
4	\$	4	D	T	d	t	ä	ö	ñ		È	Õ	¶	
5	%	5	E	U	e	u	à	ò	Ñ	Á	€	Ը	¤	
6	&	6	F	V	f	v	å	û	¤	Â	Ã	Í	÷	
7	'	7	G	W	g	w	ç	ù	¤	À	Ã	Î	þ	,
8	(8	H	X	h	x	ê	ÿ	©		Ї	Þ	°	
9)	9	I	Y	i	y	ë	ö	®			Ú	..	
A	*	:	J	Z	j	z	è	ü	¬			Û	•	
B	+	;	K	[k	{	ï	ø	½			Ù	¡	
C	,	<	L	\	l	!	î	£	¼			Ý	³	
D	-	=	M]	m	}	ì	Ø	i	¢		Ý	²	
E	.	>	N	^	n	~	Ä	×	«	¥	ì	-		
F	/	?	O	_	o	■	Å	f	»	¤			'	



- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

WB Font

The WB font is a bitmap font with a basic size of 30 dots H x 18 dots W.

This supports the fixed pitch only.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	@	P	'	p	Ç	É	á	Ø		ð	ó	-	
1	!	1	A	Q	a	q	ü	æ	í		ð	þ	±	
2	"	2	B	R	b	r	é	Æ	ó		ê	ô	=	
3	#	3	C	S	c	s	â	ô	ú		ë	ò	%	
4	\$	4	D	T	d	t	ä	ö	ñ		è	ø	¶	
5	%	5	E	U	e	u	à	ò	Ñ	Á		€	ð	
6	&	6	F	V	f	v	â	û	å	Â	ã	í	÷	
7	'	7	G	W	g	w	ç	ù	º	À	Ã	î	,	
8	(8	H	X	h	x	ê	ÿ	¿	®		ï	º	
9)	9	I	Y	i	y	ë	ö	®			ú	"	
A	*	:	J	Z	j	z	è	Ü	¬			ö	•	
B	+	;	K	[k	{	í	ø	%			ù	'	
C	,	<	L	\	l	!	î	£	%			ý	³	
D	-	=	M]	m	}	ì	Ø	i	¢		í	²	
E	.	>	N	^	n	~	Ä	x	«	¥		ì	-	
F	/	?	O	_	o	¤	Å	f	»		¤		'	



- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

WL Font

The WL font is a bitmap font with a basic size of 52 dots H x 28 dots W.

This supports the fixed pitch only.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	Ø	@	P'	p	Ç	É	á	Ø	ð	ó	-			
1	!	1	A	Q	a	q	ü	æ	í		Đ	Þ	±	
2	"	2	B	R	b	r	é	Æ	ó		Ê	Ô	=	
3	#	3	C	S	c	s	â	ô	ú		Ë	Ò	%	
4	\$	4	D	T	d	t	ä	ö	ñ		È	Õ	¶	
5	%	5	E	U	e	u	à	ò	Ñ	Á	€	Õ	§	
6	&	6	F	V	f	v	å	û	ª	Â	Ã	Í	µ	÷
7	'	7	G	W	g	w	ç	ù	º	À	Ã	Î	þ	,
8	(8	H	X	h	x	ê	ÿ	¿	©	Ï	þ	°	
9)	9	I	Y	i	y	ë	ö	®			Ú	..	
A*	:	J	Z	j	z	è	Ü	¬				Û	•	
B+	;	K	[k	{	ï	ø	½				Ù	¹	
C,	<	L	\	l	!	î	£	½				Ý	³	
D-	=	M]	m	}	ì	ø	¡	¢	;		Ý	²	
E.	>	N	^	n	~	Ä	x	«	¥	ì			-	
F/	?	O	_	o	■	Å	f	»		¤			/	



- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

XU Font

The XU font is a bitmap font with a basic size of 9 dots H x 5 dots W.

You can select fixed pitch or proportional pitch.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	Ø	ø	¶	P	`	p	Ç	É	á	ó		ö	ó	-
1	!	1	A	Q	a	q	ü	æ	í			ð	þ	±
2	"	2	B	R	b	r	é	Œ	ó			€	ò	=
3	#	3	C	S	c	s	â	ô	ú			€	ò	¤
4	\$	4	D	T	d	t	ä	ö	ñ			€	ð	¶
5	%	5	E	U	e	u	à	ò	ñ	á		€	ò	§
6	&	6	F	V	f	v	á	û	ã	â	ã	í	þ	÷
7	'	7	G	W	g	w	ç	ù	ö	À	Ã	î	þ	,
8	<	8	H	X	h	x	ê	ÿ	ô	ë		í	þ	*
9	>	9	I	Y	i	y	ë	ö	®			ó	"	
A	*	:	J	Z	j	z	è	ü	™			ó	•	
B	+	;	K	L	k	l	í	ø	‰			ó	‘	
C	,	<	L	\	l	l	î	£	¤			ý	³	
D	-	=	M]	m	}	ì	ß	í	¢		í	ÿ	²
E	.	>	N	^	n	-	â	×	«	¥		í	-	
F	/	?	O	_	o	⌘	À	f	»		⌘		'	



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.
- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

XS Font

The XS font is a bitmap font with a basic size of 17 dots H x 17 dots W.

You can select fixed pitch or proportional pitch.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	ø	@	P'	p	ç	é	á	ø		ð	ó	-		
1	!	1	A	Q	a	q	ü	æ	í			đ	þ	±
2	"	2	B	R	b	r	é	æ	ó			è	ò	=
3	#	3	C	S	c	s	â	ô	ú			€	ò	¾
4	\$	4	D	T	d	t	ä	ö	ñ			€	õ	¶
5	%	5	E	U	e	u	à	ò	ñ	À		€	ò	§
6	&	6	F	V	f	v	å	û	¤	Ã	ã	í	µ	÷
7	'	7	G	W	g	w	ç	ù	¤	Ã	Ã	í	þ	,
8	(8	H	X	h	x	ê	ÿ	¢	©		ý	þ)
9)	9	I	Y	i	y	ë	ö	®			ú	"	
A	*	:	J	Z	j	z	è	ø	¬			ò	•	
B	+	;	K	[k	{	í	ø	½			ú	¹	
C	,	<	L	\	l	:	î	ƒ	¼			ý	³	
D	-	=	M]	m	}	ì	ø	i	€		í	Ý	²
E	.	>	N	^	n	~	Ã	x	«	¥		í	-	
F	/	?	O	_	o	▀	Ã	f	»		¤		'	



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.
- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

XM Font

The XM font is a bitmap font with a basic size of 24 dots H x 24 dots W.

You can select fixed pitch or proportional pitch.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	Ø	@	P	`	p	Ç	É	á	Ø	đ	Ó	-		
1	!	1	A	Q	a	q	ü	æí		Đ	Þ	±		
2	"	2	B	R	b	r	é	Æó		Ê	Ô	=		
3	#	3	C	S	c	s	â	ôú		Ë	Ò	¾		
4	\$	4	D	T	d	t	ä	öñ		È	õ	¶		
5	%	5	E	U	e	u	à	ò	Ñ	Á	€	Ñ	S	
6	&	6	F	V	f	v	â	û	á	Ã	ã	í	µ	÷
7	'	7	G	W	g	w	ç	ù	o	À	Ã	î	,	
8	(8	H	X	h	x	ê	ÿ	ç	©	Ï	þ	o	
9)	9	I	Y	i	y	ë	Ö	®		Ú	..		
A	*	:	J	Z	j	z	è	Ü	-		Ù	•		
B	+	;	K	[k	{	ï	š	½		Ù	¶		
C	,	<	L	\	I	:	î	£	¼		ý	³		
D	-	=	M]	m	}	ì	Ø	í	¢	:	Ý	²	
E	.	>	N	^	n	~	Ä	x	«	¥	í	-		
F	/	?	O	_	o		À	f	»	»	œ	'		



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.
- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

XB Font

The XB font is a bitmap font with a basic size of 48 dots H x 48 dots W.

You can select fixed pitch or proportional pitch.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	@	P	`	p	Ç	É	á	Ø		ð	Ó	-	
1!	1	A	Q	a	q	ü	æ	í			Đ	Þ	±	
2"	2	B	R	b	r	é	Æ	ó			Ê	Ô	=	
3#	3	C	S	c	s	â	ô	ú			Ë	Ô	¾	
4\$	4	D	T	d	t	ä	ö	ñ			È	Õ	¶	
5%	5	E	U	e	u	à	ò	Ñ	Á		€	Õ	§	
6&	6	F	V	f	v	å	û	á	Ã	ã	Í	µ	÷	
7'	7	G	W	g	w	ç	ù	º	À	Ã	Í	þ	,	
8(8	H	X	h	x	ê	ÿ	ç	©		Ї	þ	°	
9)	9	I	Y	i	y	ë	ö	®			Ú	..		
A*	:	J	Z	j	z	è	Ü	¬			Ù	•		
B+	;	K	[k	{	ï	ø	½			Ù	¹		
C,	<	L	\	l	!	î	£	¼			Ý	³		
D-	=	M]	m	}	ì	ø	í	¢		¡	Ý	²	
E.	>	N	^	n	~	Ä	×	«	¥		í	-		
F/	?	O	_	o	■	Å	f	»		¤		~		



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.
- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

XL Font

The XL font is a bitmap font with a basic size of 48 dots H x 48 dots W.

You can select fixed pitch or proportional pitch.

The figure below is a font sample when the code page 858 is used.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	Ø	ø	@	P‘	p‘	Ç	É	á	Ø		ð	Ó	-	
1	!	1	A	Q	a	q	ü	æí			Ð	Þ	±	
2	"	2	B	R	b	r‘	é	Æó			Ê	Ô	=	
3	#	3	C	S	c	s‘	â	ôú			Ë	Ò	¾	
4	\$	4	D	T	d	t‘	äöñ				È	õ	¶	
5	%	5	E	U	e	u‘	àò	ÑÁ			€	Õ	§	
6	&	6	F	V	f	v‘	å	û ^ä	Âáí		í	µ	÷	
7	'	7	G	W	g	w‘ç	ù ^o	ÀÃÍ			þ	,		
8	(8	H	X	h	x‘ê	ÿ	©			ï	þ	º	
9)	9	I	Y	i	y‘ë	Ö®					Ú	..	
A	*	:	J	Z	j	z‘è	Ü¬				==	Ù	·	
B	+	;	K	[k	{‘i	ø½				■	Ù	¹	
C	,	<	L	\	l	!‘î	£¼				xxx	ý	³	
D	-	=	M]	m	}‘ì	Øi	¢				Ý	²	
E	.	>	N	^	n	~‘Ä	x‘«	¥			ì	-		
F	/	?	O	_	o	Åf	»				¤	==	'	



- To select proportional pitch, enable [SBPL] > [Font Settings] > [Proportional] in the [Applications] menu, or specify with the command.
- The character set is changed according to the [SBPL] > [Font Settings] > [Code Page] settings in the [Applications] menu or the code page specified using commands.

OCR-A Font

The OCR-A font is a bitmap font. The basic size varies depending on the print resolutions as follows:

Print Resolution	Basic Font Size	
	CL4NX	CL6NX
203 dpi (8 dots/mm)	22 dots H x 15 dots W	22 dots H x 15 dots W
305 dpi (12 dots/mm)	33 dots H x 22 dots W	33 dots H x 22 dots W
609 dpi (24 dots/mm)	66 dots H x 44 dots W	-

This supports the fixed pitch only.

The figure below is a font sample when the print resolution is 203 dpi (8 dots/mm).

	2	3	4	5	6	7	8	9	A	B	C	D	E	F	
0	0	1	P												
1	1	2	A	Q											
2	2	3	B	R											
3	3	4	C	S											
4	4	5	D	T											
5	5	6	E	U											
6	6	7	F	V											
7	7	8	G	W											
8	8	9	H	X											
9	9	A	I	Y											
A		J	Z												
B		K													
C		L													
D		M													
E	.	>	N												
F	/	0													

OCR-B Font

The OCR-B font is a bitmap font. The basic size varies depending on the print resolutions as follows:

Print Resolution	Basic Font Size	
	CL4NX	CL6NX
203 dpi (8 dots/mm)	24 dots H x 20 dots W	24 dots H x 20 dots W
305 dpi (12 dots/mm)	36 dots H x 30 dots W	36 dots H x 30 dots W
609 dpi (24 dots/mm)	72 dots H x 60 dots W	-

This supports the fixed pitch only.

The figure below is a font sample when the print resolution is 203 dpi (8 dots/mm).

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	o	a	P										
1	!	1	A	Q										
2	"	2	B	R										
3	#	3	C	S										
4	\$	4	D	T										
5	%	5	E	U										
6	&	6	F	V										
7	'	7	G	W										
8	(8	H	X										
9)	9	I	Y										
A	*	:	J	Z										
B	+	;	K	¥										
C	,	<	L	¥										
D	-	=	M											
E	.	>	N											
F	/	?	O											

Outline Fonts

The font type, font size and font shape can be specified for the outline fonts.

For the font type, you can select fixed pitch or proportional pitch. You can also specify kanji, but kanji supports fixed pitch only.

The figure below is a sample of some font shapes. Shapes such as normal font, white characters on black background, grey font, font with shadow, mirrored font and italic font can be specified.

This is a sample of Outline font.

```
Outline font0 ABCabc123
Outline font1 ABCabc123
Outline font2 ABCabc123
Outline font3 ABCabc123
Outline font4 ABCabc123
Outline font5 ABCabc123
Outline font6 ABCabc123
Outline font7 ABCabc123
Outline font8 ABCabc123
Outline font9 ABCabc123
```

The figure below is a font sample with the standard font.

	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	@	P	'	p				一	タ	ミ			
1	!	1	A	Q	a	q		.	ア	チ	ム			
2	"	2	B	R	b	r		「	イ	ツ	メ			
3	#	3	C	S	c	s		」	ウ	テ	モ			
4	\$	4	D	T	d	t		,	エ	ト	ヤ			
5	%	5	E	U	e	u		・	オ	ナ	ユ			
6	&	6	F	V	f	v		ヲ	カ	ニ	ヨ			
7	'	7	G	W	g	w		ア	キ	ヌ	ラ			
8	(8	H	X	h	x		イ	ク	ネ	リ			
9)	9	I	Y	i	y		ウ	ケ	ノ	ル			
A	*	:	J	Z	j	z		エ	コ	ハ	レ			
B	+	;	K	[k	{		オ	サ	ヒ	ロ			
C	,	<	L	¥	l	l		ヤ	シ	フ	ワ			
D	-	=	M]	m	}		ュ	ス	ヘ	ン			
E	.	>	N	^	n	~		ヨ	セ	ホ	・			
F	/	?	O	_	o			ツ	ソ	マ	・			



- The font size can be specified from 1 to 999 dots, but if the font size is too small for the font shape, it cannot be recognized as a font. Please be careful. Also, if the specified font size is too small, it may collapse, depending on the font.

Multilingual Font

The product contains various multilingual fonts.

The figure below is a sample of some of the multilingual fonts.

b	Fontname	Sample
8	SATO Hebe Sans	This is a fontsample.
8	SATO Silver Serif	This is a fontsample.
1	SATO Hebe Sans Arabic	هذا هو عينة من الخط.
13	SATO Roman Arabic	هذا هو عينة من الخط.
2	SATO Hebe Sans Thai	ນີ້ຕີດຫົວຂອງພາກທ້າລັກຈະດ
3	SATO Hebe Sans Hindi	इस फॉन्ट का एक नमूला है।
14	SATO Hebe Sans Hebrew	עטימה לש אונגו דהית
4	SATO Gothic Traditional Chinese	這是字體的樣本。
9	SATO Mincho Traditional Chinese	這是字體的樣本。
6	SATO Gothic Simplified Chinese	这是字体的样本。
11	SATO Mincho Simplified Chinese	这是字体的样本。
5	SATO Gothic Japanese	これはフォントのサンプルです。
10	SATO Mincho Japanese	これはフォントのサンプルです。
7	SATO Gothic Korean	이것은 글꼴의 샘플입니다.
12	SATO Mincho Korean	이것은 글꼴의 샘플입니다.

Scalable Fonts

The product contains various scalable fonts.

The figure below is a sample of some scalable fonts.

Barcodes

Code Type	CL4NX	CL6NX
Barcodes	<ul style="list-style-type: none"> • UPC-A/UPC-E • JAN/EAN-13/8 • CODE39, CODE93, CODE128 • GS1-128(UCC/EAN128) • CODABAR(NW-7) • ITF • Industrial 2 of 5 • Matrix 2 of 5 • MSI • POSTNET • UPC add-on code • BOOKLAND • USPS code • GS1 DataBar Omnidirectional • GS1 DataBar Truncated • GS1 DataBar Stacked • GS1 DataBar Stacked Omnidirectional • GS1 DataBar Limited • GS1 DataBar Expanded • GS1 DataBar Expanded Stacked 	
2D Codes	<ul style="list-style-type: none"> • QR Code • Micro QR Code • PDF417 • Micro PDF • Maxi Code • GS1 Data Matrix • Data Matrix (ECC200) • Aztec Code • GS1QR Code 	
Composite Symbols	<ul style="list-style-type: none"> • EAN-13 Composite (CC-A/CC-B) • EAN-8 Composite (CC-A/CC-B) • UPC-A Composite (CC-A/CC-B) • UPC-E Composite (CC-A/CC-B) • GS1 DataBar Composite (CC-A/CC-B) 	

Code Type	CL4NX	CL6NX
	<ul style="list-style-type: none">• GS1 DataBar Truncated Composite (CC-A/CC-B)• GS1 DataBar Stacked Composite (CC-A/CC-B)• GS1 DataBar Expanded Stacked Composite (CC-A/CC-B)• GS1 DataBar Expanded Composite (CC-A/CC-B)• GS1 DataBar Stacked Omnidirectional Composite (CC-A/CC-B)• GS1 DataBar Limited Composite (CC-A/CC-B)• GS1-128 Composite (CC-A/CC-B/CC-C)	



- Specifications are subject to change without notice.

Support and Warranty

SOS (SATO Online Services) (SOS users only)

The SOS (SATO Online Services) is a remote maintenance service that monitors your product status for 24 hours and supports its stable operation. To use this service, create an SOS account and add your product.



For details on the SOS, refer to the SOS Portal Site.

<http://www.sato-sos.com/en>

Maintenance Support

SATO provides maintenance support to ensure reliable operation of your product.

Access the following site and select your country from the list. Check the information on the displayed page.



<http://www.satoworldwide.com/service-and-support.aspx>

Warranty Period for Consumables

For information on the warranty period for print heads, platen rollers and cutters, refer to the SATO Global Warranty Program.



<http://www.satoworldwide.com/global-warranty-program.aspx>

AVATO

December 2018
Version 4