2.3.3.4 Air-core Transformer

This type of transformer coils are wound on plastic sheets placed on thick paper as shown in Figure 2.19. This is used in Antenna coil and R.F. Transformer.

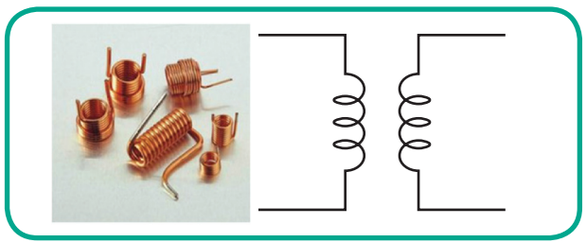


Figure 2.19 Air Core Transformer

2.3.3.5 Iron-core Transformer

In this type of transformer, two coils are wound on thin laminated iron plates as shown in Figure 2.20. Thin plates are used in order to avoid eddy current loss. They are used as eliminator transformer and output transformer.

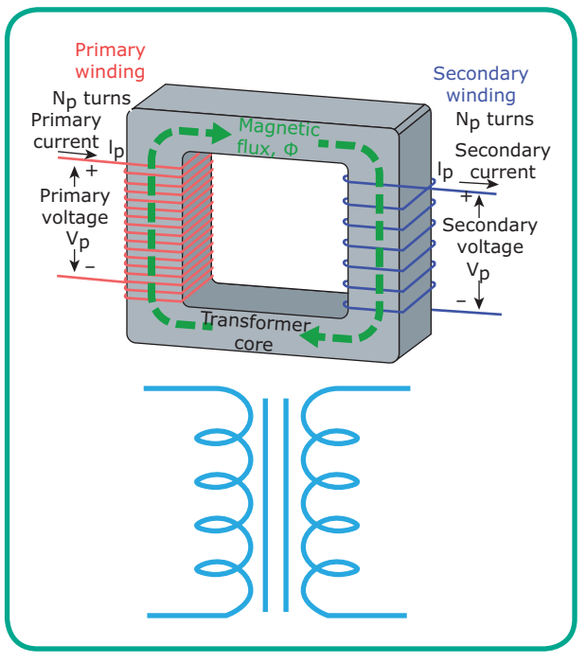


Figure 2.20 Iron Core Transformer

2.3.3.6. Ferrite-core Transformer

In this type of transformer, coils are wound on ferrite rod. Figure 2.21 shows the ferrite-core SMPS transformer.

Example: EHT transformer, SMPS transformer and Antenna coil.

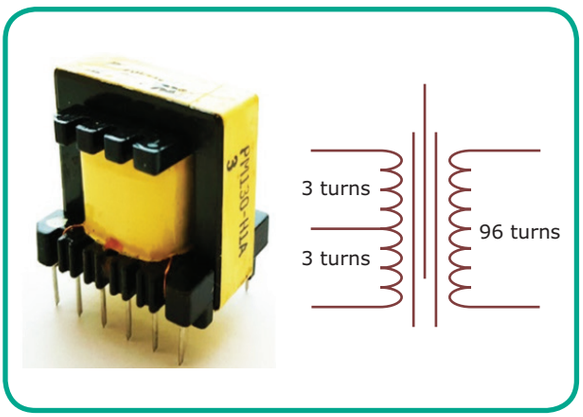


Figure 2.21 Ferrite Core SMPS Transformer

2.3.3.7. IF Transformer

In radio receivers, IF Transformers are connected in the input and output of the IF amplifier. It is shown in Figure 2.22.

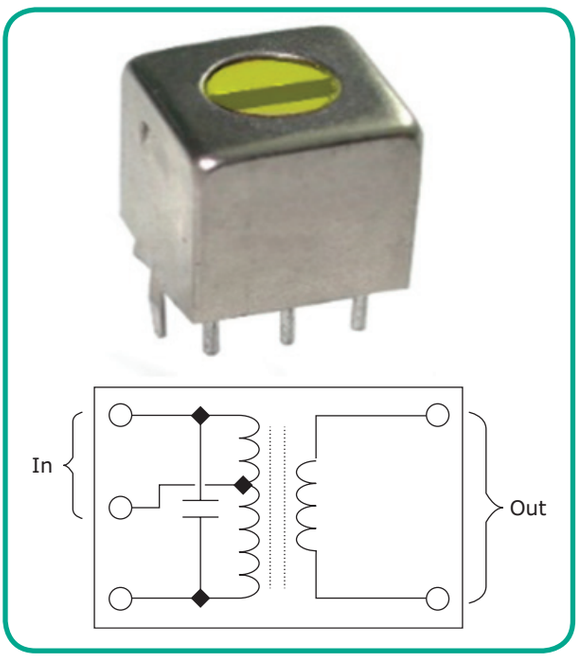


Figure 2.22 I.F. Transformer

2.3.3.8 Power Transformer

Generally, in Radio receivers, power transformer is used to match the input impedance of the receiver and the output impedance of speaker. The Power transformer is as shown in Figure 2.23. The power transformer is a step-down transformer.

ELEC_EQUIP_Chapter02.indd 47 11/10/2020 12:23:50 PM