NEGATIVE ERROR

When the micrometer is closed if the zero of the thimble is crossed over the zero of sleeve, the error is said to be negative. The number of thimble divisions between the zero of thimble divisions between the zero of thimble and zero of sleeve is the amount of negative error. The amount of negative error should be added to the original reading of micrometer.

Problem


When we measure an object the micrometer shows 9.14 mm. The negative error of the micrometer is 0.04 mm. what is the correct dimension of the object.

Micrometer Reading	=	9.14 mm
Negative error Reading	= (+)	0.04 mm
Correct dimension of object	=	9.18 mm

Correcting the Error in Micrometer


Small C- Shape spanner is given with every micrometer. If there is error (Positive or negative) in micrometer, C-spanner is inserted in a small hole found in sleeve then tight or lose it to correct reading.

Method of Measuring in Micrometer

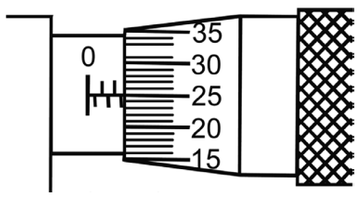

Main Scale	=	2.50mm
Thimble Scale	=	0.25mm
Total	=	2.75mm

Activity: Find the measurement of Micrometer as shown in figures

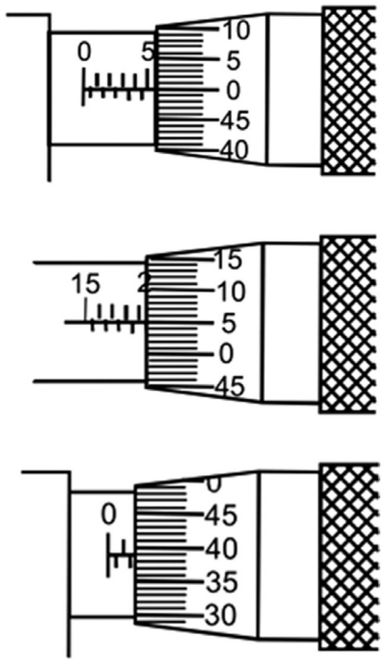

INSIDE MICROMETER

The inside micrometer is used to measure the internal dimensions of holes with diameters range from 50mm to 63mm.





Inside Micrometer

Anvil is attached to one end of the graduated sleeve and spindle is attached to

GM_Chp03.indd 41 14-02-2019 11:33:18