
Description

Bolt and Nut principle is used in micrometer. Both the major scale reading and minor scale reading are on the barrel. One division in major scale equals to 1mm and 0.5 mm in minor scale. Major scale is marked above the datum line and minor scale is marked below the datum line. Thimble is divided into 50 equal parts and graduated on circumference. One division of thimble is 0.01 mm.


One division on major scale = 1 mm
One division on minor scale = 0.5 mm
One division on Thimble $= \frac{0.5}{50} = 0.01$ mm

Anvil and Spindle ends are fitted with Carbidge tips.


If anvil and spindle are closed together, then thimble and the indexed line should coincide with '0'. When there is no error, this is called as zero error. Before taking the measurements, ensure that there is any error in the micrometer. Positive and Negative errors are adjusted by adding and subtracting with the measurements taken.

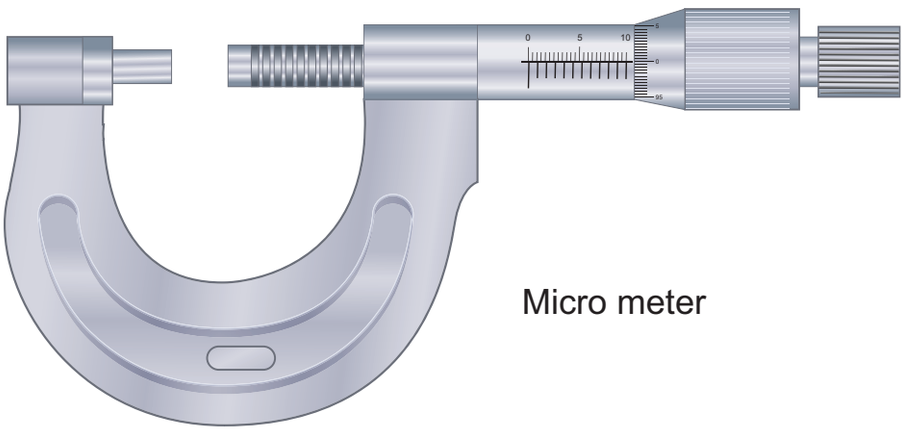

Micro meter

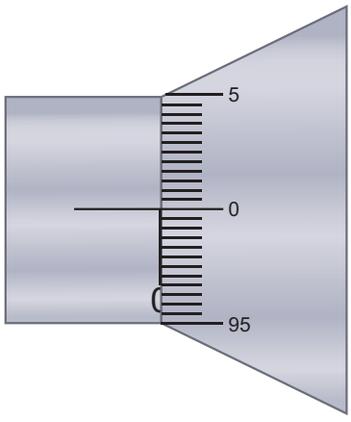

(a) No error

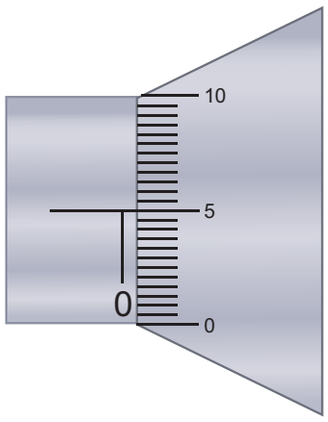

(b) +ve error

AM_English_Practicals.indd 242 12/20/2019 5:50:00 PM