
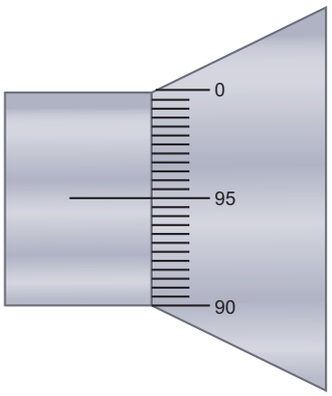


(c) - ve error

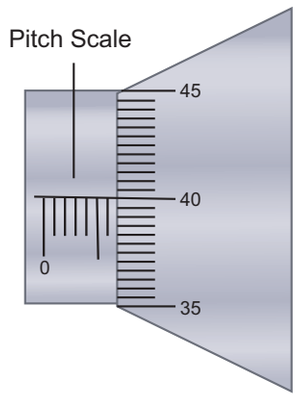

(d) Micro meter reading ★

★A model reading
PSR = 6 mm ; HSC=40 divsions;
Reading = [6mm+(40x0.01mm)]=6.40mm

Large Micrometer

- We can measure up to 25mm using 0-25 mm micrometer. Suitable size of extended anvil can be attached for measuring larger size.

Measuring Methods

1. Select correct size micrometer
2. Place the measuring object in between anvil and spindle.
3. Tight the thimble using ratchet stop.
4. Note down the main scale division reading.
5. Note down the sub scale division reading.
6. Note down the thimble reading. It is multiplied by least count.
7. Finally add all the measurement.

S.No	Explanation	Reading
1.	Major scale division	----- mm
2.	Minor scale division	----- mm
3.	Thimble reading	----- mm
4.	Error	----- mm
	Measurement	----- mm

Conclusion

Outside diameter is measured accurately using micrometer and the measurements are tabulated.

AM_English_Practicals.indd 243 12/20/2019 5:50:01 PM