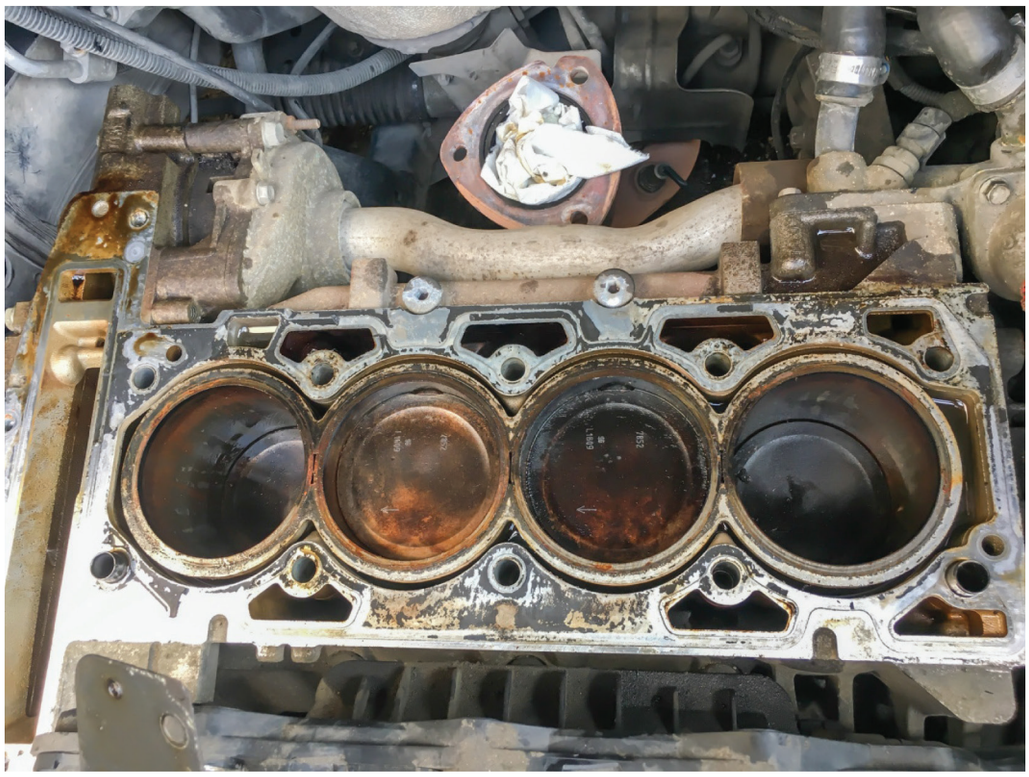


Fig 2. Cylinder block - Before Decorbonising

Procedure for Dismantling

1. The following parts to be removed in order:
   - ❑ Fan belt
   - ❑ Dynamo
   - ❑ Fan
   - ❑ Water pump
   - ❑ Exhaust manifold
   - ❑ Air cleaner
   - ❑ Carburettor
   - ❑ Inlet manifold
2. Lubrication oil needs to be drained completely, the oil pump and oil gallery tube to be removed.
3. Ignition coil, distributor, petrol pump and oil pump to be removed.
4. After removing the valve door, Tappet Push rod, Rocker arm, Valve spring, Spark plug or diesel injector will also be removed.
5. After all the parts are separated, cylinder head to be removed by wooden mallet and to be kept in a clean place.
6. The Crank Shaft need to be moved to TDC and the carbon particles on the piston head and to be removed by scrapper using clean cloth.

AM_English_Practicals.indd 246 12/20/2019 5:50:01 PM