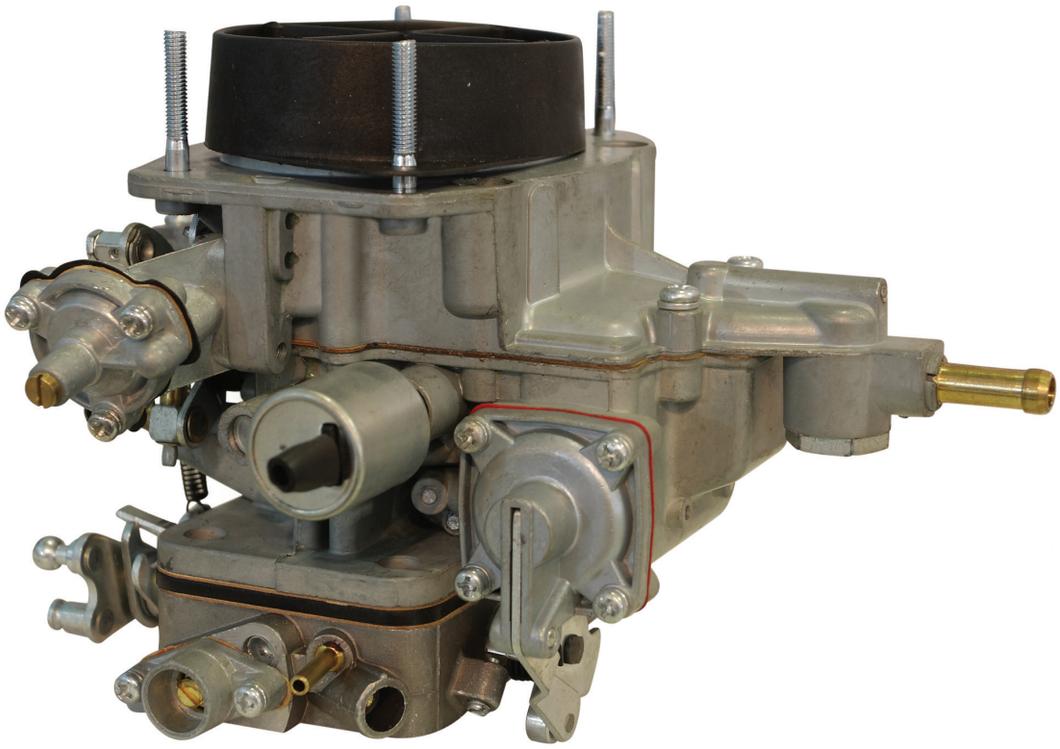


Fig 3. Carburettor

Reasons For Dismantling

1. Air fuel mixture does not come to the engine from the carburettor.
2. Efficiency of the engine is less.
3. KMPL of the engine decreases.
4. Starting trouble due to repair in the Accelerator Pump Circuit.
5. Starting trouble of the engine
6. Sudden halt of the engine while running
7. Time lapse as recommended periodical inspection by the company.

Removal

1. After completing all precautionary steps the carburetor to be removed from the engine.
2. First drain plug need to be removed from the carburetor and the fuel need to becollected in a vessel and to be kept in a safe place
3. Inlet connection need to be removed. Inlet joints to be kept closed using a clip if it is flexible.
4. Air cleaner connection need to be disconnected.
5. Carburettor need to be removed from the Engine Inlet Manifold and to be kept in a highly ventilated room.

AM_English_Practicals.indd 250 12/20/2019 5:50:02 PM