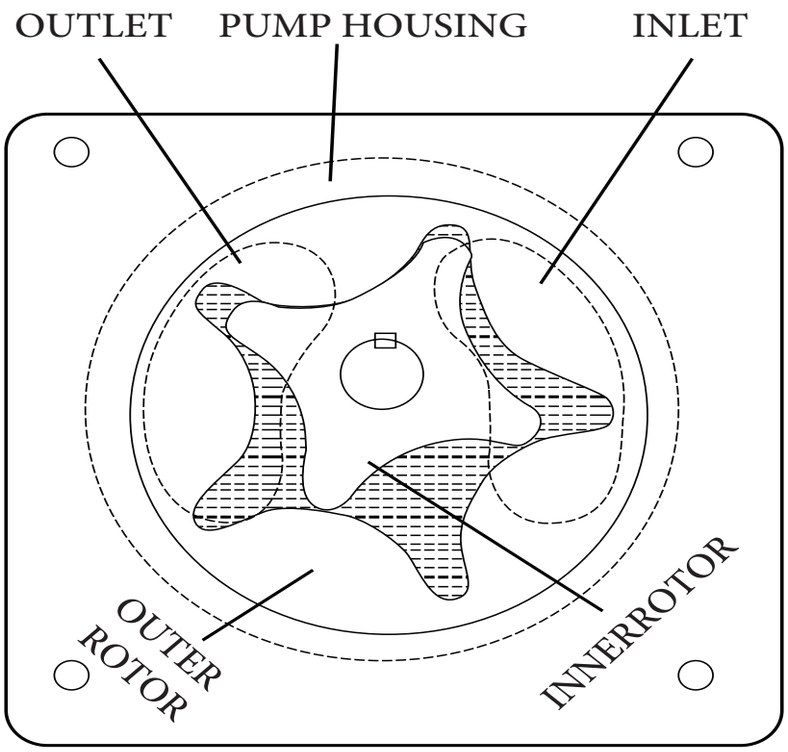


Fig 2. ROTOR type Oil Pump

b) Rotor Type Oil Pump

1. Check the gap between outer rotor body clearances.
2. Check the gap between pump shaft and rotor clearance.

Reassembling

- Reassemble the oil pump in the crankcase at the same time slowly rotate the camshaft and tight the fixing bolt.
- If pressure relief value is located in the oil pump then clean and refit the cover, spring and adjusting screw.
- After filling the oil sump with sufficient oil and start the engine. Check the oil pressure by increasing the speed of engine slowly and compare the pressure with the recommendation of the manufacturer.
- While fixing the oil pump in the crank case the camshaft is slowly rotated and fixing bolt is screwed.

AM_English_Practicals.indd 254 12/20/2019 5:50:03 PM