Materials Required

1. Fine brush
2. Petrol
3. Cloth
4. Compressed air

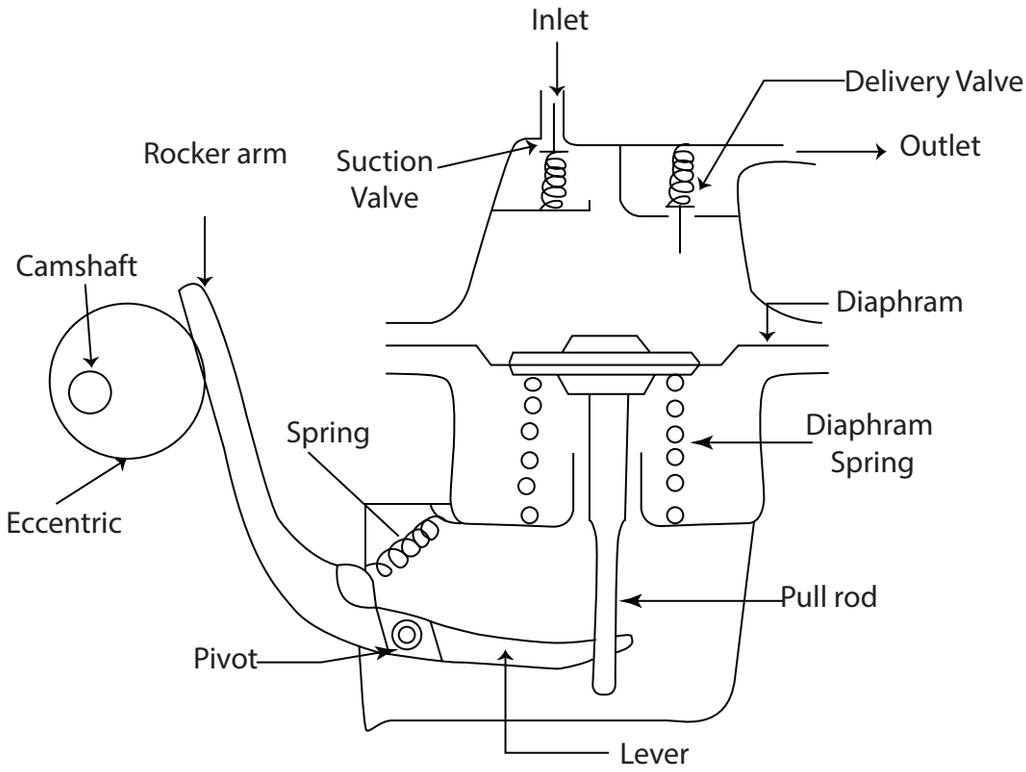


Fig 2. Mechanical Petrol Pump - Line Diagram

Reasons for Dismantling

1. No fuel supply during starting
2. Petrol leakage in the lower chamber
3. Petrol leakage in the passage hole
4. Starting trouble in the engine
5. Company recommended period of inspection and servicing lapses

Dismantling

1. All the precautions must be followed before dismantling the pump filter, valveretainer, rubber gasket, filter element which are located on the top of the pump will bekept in a tray.
2. Mark the top chamber and bottom chamber to avoid wrong fitment before dismantling the screws.

AM_English_Practicals.indd 257 12/20/2019 5:50:03 PM