Materials Required

1. Kerosene
2. Cloth

Reasons for Dismantling

1. Noise in the bearing
2. Over heat in the engine
3. Leakage of water in between Engine and water pump
4. Too loose or too tight fan belt affects water rotation
5. Time lapse as recommended by the company

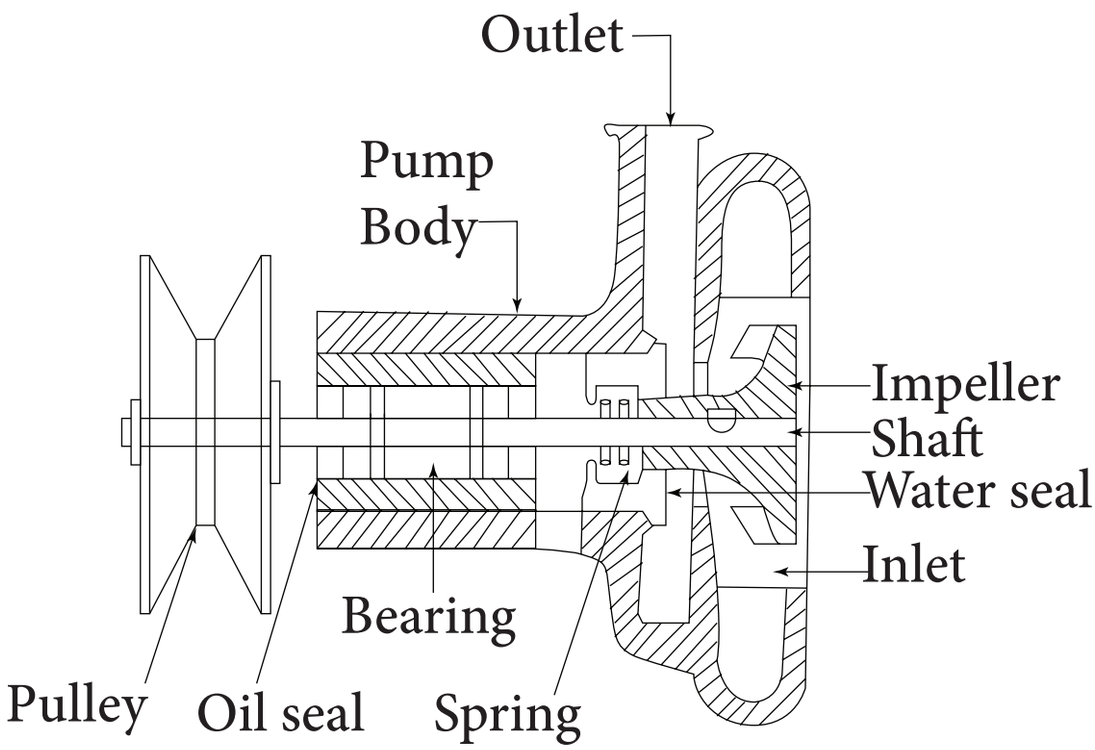


Fig 2. Water Pump - Line Diagram

Dismantling

1. Remove the rubber hose from radiator lower tank before removing the water pump
2. Remove the fan belt.
3. Remove the water in the upper part of water jacket after removing the fan.
4. Remove the dynamo.
5. Remove the water cooling pump assembly from the engine.
6. Remove the Fan belt pulley using correct tools from the water pump
7. Remove the thermostat valve.

AM_English_Practicals.indd 267 12/20/2019 5:50:04 PM