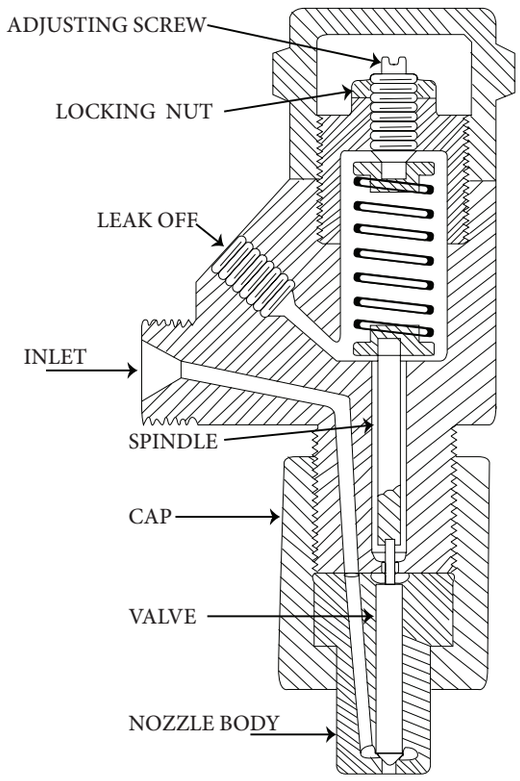


Fig 2. Diesel Injector - Line Diagram

Reasons for Dismantling

1. Low engine speed.
2. Low pulling power of engine .
3. Diesel was not injected from injector
4. Uneven speed of the engine
5. Company recommended period of inspection and servicing lapses

Removal

1. Remove the diesel tube from injection pump
2. Remove leak off pipe from the injector
3. Remove injector from cylinder head using proper spanner.
4. Put the injector on the tray and keep it in a clean and air ventilated room.

AM_English_Practicals.indd 270 12/20/2019 5:50:05 PM