compressed fuel. This is done with the help of spark plug. The equipment which is used to check the spark level is in required manner is known as SPARK PLUG TESTER. Shown in Fig 2.3.4(d).

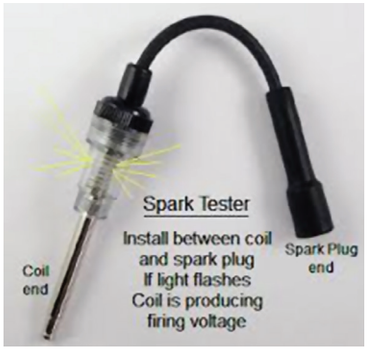






Figure 2.3.4(d) Spark Plug Tester

2.3.4(e) Caster Camber Gauge

It is used to check the wheel alignment in four wheeled vehicles.

2.3.4(f) Brake Shoe Rivetter

In the top portion of the brake shoe, the new lining is designed to fit the rivets in the hole to tighten the brake shoe parts.

2.3.4(g) Air Compressor

The machine which is used to compress and store the atmospheric air to the required pressure level is named as air compressor. Shown in Fig 2.3.4(g).



Figure 2.3.4(g) Air Compressor

Usages

1. It is used to refill the air in the tire tube.
2. It is used to clean the spark plug, carburetor and nozzle.

2.3.4(h) Tyre Inflator Gauge

It is used to measure the air pressure which is present inside the tire tube at the time of air filling by without having air leakage. Tyre Inflator Gauge is shown in the Fig 2.3.4(h).



Figure 2.3.4(h) Tyre Inflator Gauge

AM_Unit_02.indd 42 12/20/2019 4:25:28 PM