of this agent, grease which is deposited in the metal parts can be wiped off.

2.3.6(e) Wheel Balancing Machine

Wheel balancing machine is used to balance the unbalanced weighted wheels which are located in the front and rear axle.

2.3.6(f) Spring Tester

Sometimes tensile strength of the spring is reduced at that time by using this spring tester, spring tensile strength is improved. Fig 2.3.6(f) shows Spring Tester.



Figure 2.3.6(f) Spring Tester

2.3.6(g) Nozzle Tester

It is used to measure the diesel particle size, diesel quantity and leakages of the diesel which is coming out from the nozzle while blowing the diesel in high pressure at the end of the compression stroke inside the engine. Fig 2.3.6(g) shows Nozzle Tester.



Figure 2.3.6(g) Nozzle Tester

2.3.7 Screw Jack and Horses

Jack is used to lifting the heavyweight components which are not possible to lift with the use of hands. Fig 2.3.7(a) shows the diagram of Screw Jack.

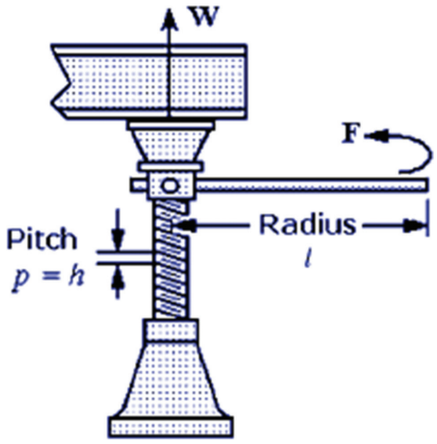




Figure 2.3.7(a) Screw Jack

AM_Unit_02.indd 46 12/20/2019 4:25:30 PM