plugs, and fuel injectors. In case of overhead valve engine, then oil passage for pushrod and rocker arm are also available. Cylinder heads are classified as

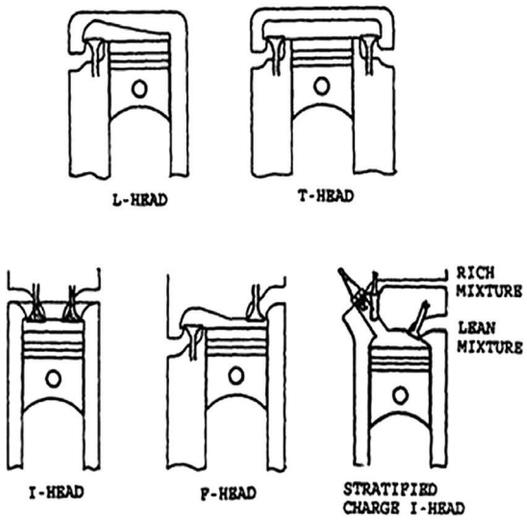


Figure 5.3.3 Types of Cylinder Head

L – Head Engine

I – Head engine

F – Head engine

T – Head engine and are shown in Fig 5.3.3.

5.3.4 Crank case

The crank shaft and cam shaft are placed on the crank case. It is formed as the portion of the cylinder block below the cylinder bore and the oil sump at the bottom. Crank case and the cylinder block are made as a single unit. The oil sump is connected with the crank case by the studs. The Crank case with Crank shaft is shown in Fig 5.3.4

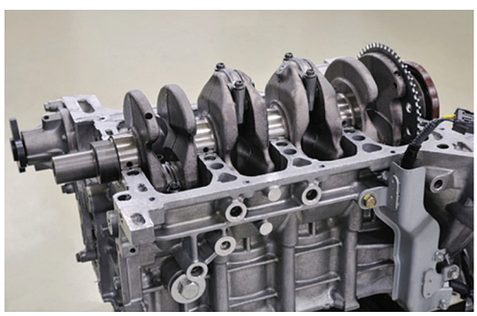


Figure 5.3.4 Crank Case with Crank Shaft

5.3.5 Oil sump

The oil sump is attached below the crank case. It is used to store the lubricating oil which is used for lubricating purpose. To drain or replace the used lubricating oil a drain arrangement is fitted.



Figure 5.3.5 Oil Sump

5.3.6 Gasket

When connecting two metal parts directly, there musty be air tight connection between the parts or otherwise if there is a gap, it allows the gas or the liquid to leak. To arrest the leakage of gas or oil, the gasket is being used. It makes the two metal components air tight and close. Gaskets are placed in the cylinder block, cylinder head crankcase and oil pump and in oil sump. For placing the inlet and outlet manifolds on the cylinder head gaskets are being used.



Figure 5.3.6 Gasket

5.3.7 Piston

The piston is the most important component of the engine. It is kept inside the

AM_Unit_05.indd 83 12/20/2019 5:26:31 PM