

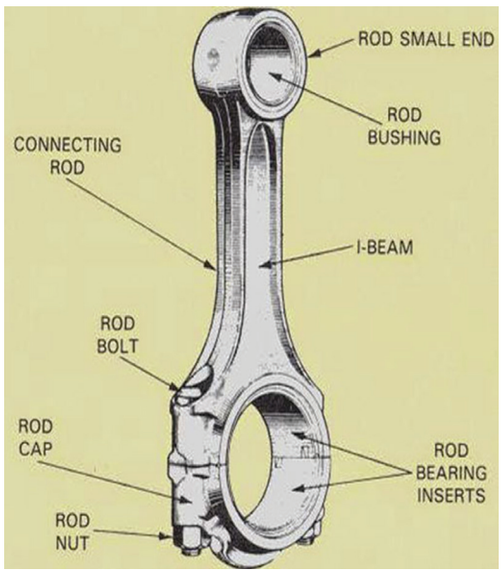


Figure 5.3.8 Connecting Rod

5.3.8.1 Piston, connecting rod and their connection procedures

The engine piston and connecting rod assembly is the most essential arrangement for operating any engine. For connecting the piston and connecting rod piston pin is used. Piston pin is connected with piston and connecting rod based on the three types as indicated below.

a. Fixed Type

B. Semi Floating Type

C. Full Floating Type

The above connecting procedures vary depends upon the torque and power produced from the engine. Piston pin connecting procedures shown in Figure 5.3.8.1.

5.3.8.1(a) *Fixed type:*

In this type the piston and connecting rod are connected with the piston pin by the fixed set of screw inside the piston pin boss for avoiding release of piston pin from its connection. For this purpose, the small end of connecting rod is positioned on centre of the piston pin for attaining the reciprocating motion.

5.3.8.1(b) Semi floating type:

In semi floating type of connection there is a split shaped arrangement in the small end of the connecting rod and it looks like a clamp. This clamp shaped portion is kept with the help of a bolt and nut to avoid removal of piston pin from it. There is a groove at the centre of the piston pin which prevents the pin to not to come out from the clamp. The two ends of the pin are connected

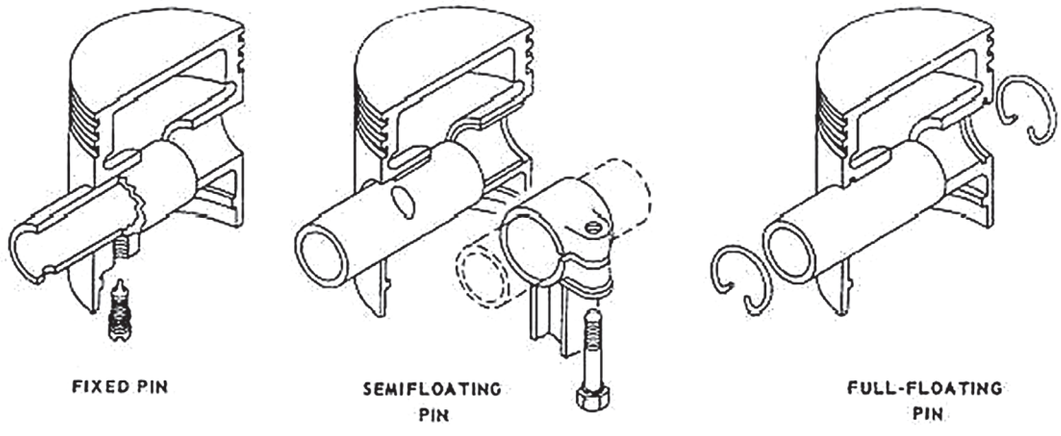


Fig 5.3.8.1 Piston Pin Fixing Method

AM_Unit_05.indd 90 12/20/2019 5:26:34 PM