8.2.5 Differences between three point starter and four point starter

Sl. No.	Three point starter	Four point starter
1	It has three terminals. (L, F and A)	It has four terminals. (L+, L-,A and F)
2	NVR is connected in series with the field coil.	NVR is connected in parallel with the field coil.
3	Used for DC shunt motors	Used for DC shunt and compound motors.

8.3 Alternating current motor starters

8.3.1 Types of induction motor starters

i. Full voltage direct on line starter.
ii. Star- delta starter.
iii. Auto transformer starter.
iv. Rotor resistance starter.

i. Full voltage direct-on-line starter

It is recommended that large three phase squirrel cage induction motors be started with reduced voltage applied across the stator terminals by starting. But small motors up to 5 HP ratings may however be started Direct-On-Line (DOL).

Direct-On-Line method of starting of induction motor is applicable upto a rating of 5 HP is as shown in figure 8.3. In the circuit, in addition to fuses, thermal overload relay has been used to protect the motor windings against over load.

When the 'Start' push button is pressed, the contactor coil 'A' becomes energized and its open contacts are closed.

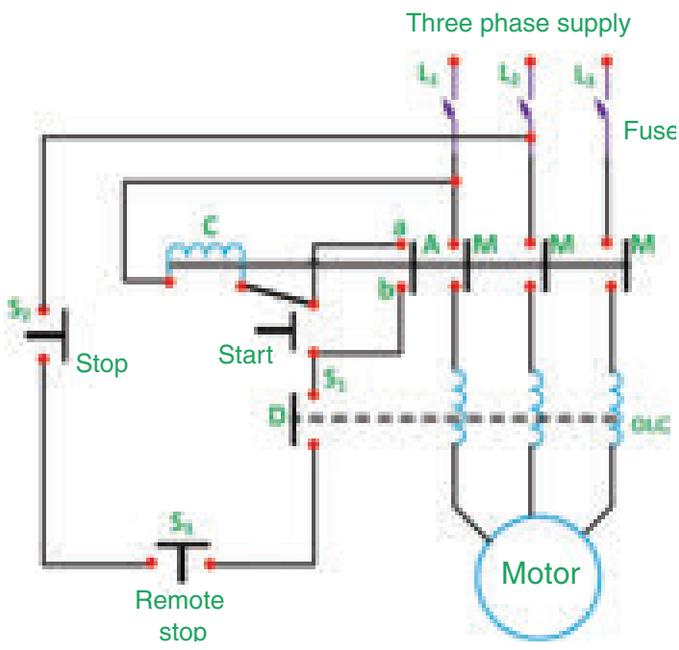


Fig. 8.3 DOL starter

BEE_ENG_Chapter_08.indd 122 12/27/2019 10:59:53 AM