


Testing procedure

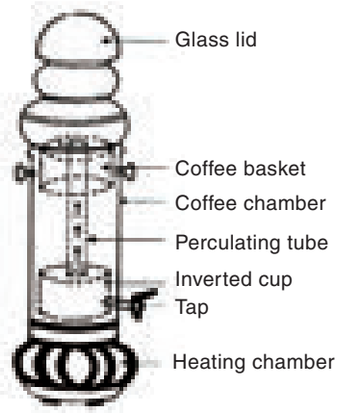

Connect the heating element terminals in test lamp. If the lamp won't glow, it indicates open circuit. If the lamp glows in maximum brightness, it indicates short circuit. If the lamp glows in dim, it indicates that the heating element is in good condition.

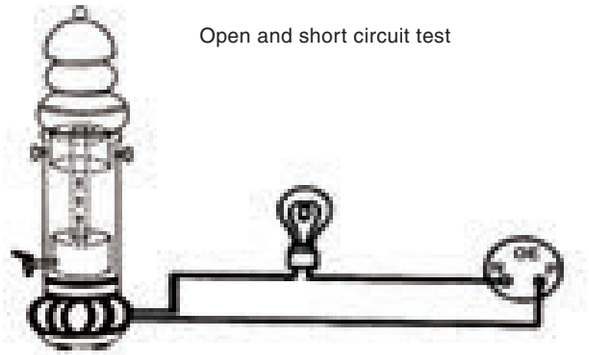

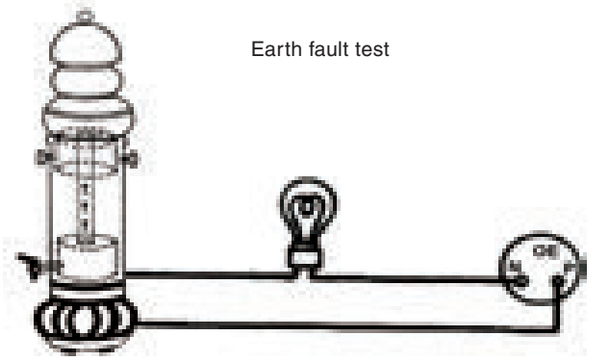

Re-assembling

i. In bottom chamber, the heating element, mica sheet and asbestos sheet are tightened with metal plate, and electrical connection be given.
ii. The connection should be in proper to avoid short circuit. Then close the bottom cover of the coffee percolator.
iii. Before starting the appliance, ensure that the appliance is in good condition by making all the tests like open, short and earth fault.

	Open circuit	Short circuit	Earthing
Test lamp	Won't glow / Glow	Bright / Dim	Glow / Won't glow
Fault	Occurred / Not occurred	Occurred / Not occurred	Occurred / Not occurred

Precautionary tips

1. Ensure that the coffee percolator is disconnected from the main supply before handling it.

Result

In this experiment, I have come to know the parts of electric coffee percolator, the dismantling and reassembling and identifying and rectifying the faults in the coffee percolator. Now the appliance is in good condition.

BEE_ENG_Pratical.indd 181 12/27/2019 10:54:34 AM