
i. Open the clips of the cage.
ii. Cage should be kept separately.
iii. Unscrew the blade mounting screws and remove the blades from shaft.
iv. Unscrew the back cover and remove it.
v. Take out the gear box by removing the mounted screws.
vi. Remove the rotor and keep separately.

DO's after dismantling

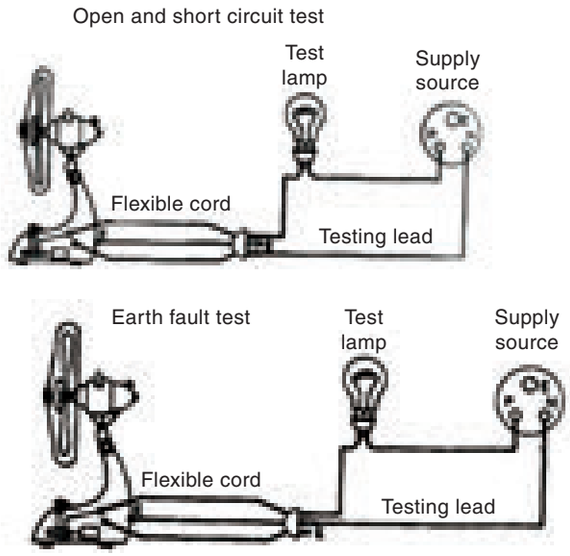

Rotor shaft and bearing are cleaned with kerosene and waste clothes. Clean the rotor carefully without damaging the coils. The stator winding is tested with the use of test lamp. Test the capacitor and check whether it is in good condition.

Assembling

i. Fix the back side end cover of the rotor and gear box properly.
ii. Fit the blades and cage in front side properly.
iii. Open circuit test, short circuit test and earth test is to be done by test lamp.

Testing procedure

i. Connect the test lamp to the two terminals of the table fan. If the lamp glows dim, it means the table fan is in good condition. If it glows brightly, it means short circuit fault occurs and the lamp does not glow, it means open circuit fault occurs in the table fan.
ii. Connect the one lead of the test lamp to the one terminal of the table fan and connect the other lead of the test lamp to the body of the table fan. If the test lamp glows, it means earth fault occurs in the table fan.

	Open circuit	Short circuit	Earthing
Test lamp	Won't glow / Glow	Bright / Dim	Glow / Won't glow
Fault	Occurred / Not occurred	Occurred / Not occurred	Occurred / Not occurred

Precaution

i. Do not use hammer when dismantling and assembling the parts.
ii. Handle the bearings carefully.
iii. Conduct the test carefully.

Result

The method of dismantling the given table fan and identify the parts, testing the table fan, identifying and rectifying its faults, and assembling the table fan is carried with proper tools. Now the table fan run with normal speed and it is in good condition.

BEE_ENG_Pratical.indd 187 12/27/2019 10:54:34 AM