iv. Remove the blades from the fan.
v. Remove the cover, separate the stator and rotor.

DO's after dismantling

Rotor shaft and bearing are cleaned with kerosene and waste clothes. Clean the rotor carefully without damaging the windings. The stator winding is tested with the use of test lamp. Test the capacitor and check whether it is in good condition.


Assembling

i. Fix the end covers with stator.
ii. Connection is given to the windings and capacitor.
iii. Open circuit test, short circuit test and earth test is to be done by test lamp.


Testing procedure

i. Connect the test lamp to the two terminals of the ceiling fan. If the lamp glows dim, it means the table fan is in good condition. If it glows brightly, it means short circuit fault occurs in the ceiling fan and if the lamp does not glow, it means open circuit fault occurs in the ceiling fan.
ii. Connect the one lead of the test lamp to the one terminal of the ceiling fan and connect the other lead of the test lamp to the body of the ceiling fan. If the test lamp glows, it means earth fault occurs in the ceiling fan. Otherwise earth fault does not occur in it.

Open and short circuit test

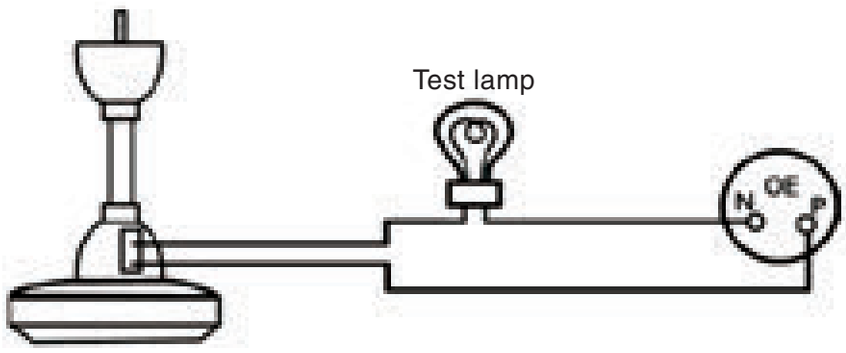

Earth fault test

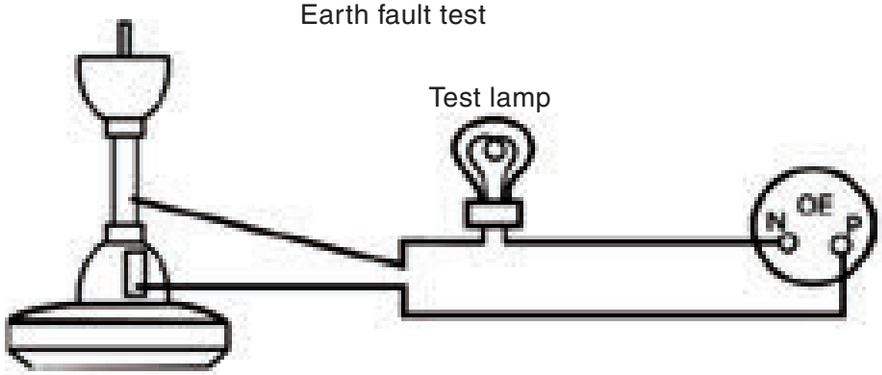

BEE_ENG_Pratical.indd 189 12/27/2019 10:54:34 AM