Practical

6

# Water pump

## AIM

1. To dismantle the given faulty domestic water pump.
2. To Test, identify the fault and rectify it.

## Related information

In domestic pump set, capacitor start induction run motor is used. Two windings are wounded in the stator.


i. Main winding
ii. Starting winding

Starting capacitor and centrifugal switch are connected in series with the starting winding.

## Practical procedure

### Dismantling

i. Separate the axis of motor and pump.
ii. Dismantle the rotor from the stator.
iii. Disconnect the connection from the starting winding.
iv. Test the winding.
iv. Test the capacitor.
v. Dismantle the pump.
vi. Dismantle the impeller.

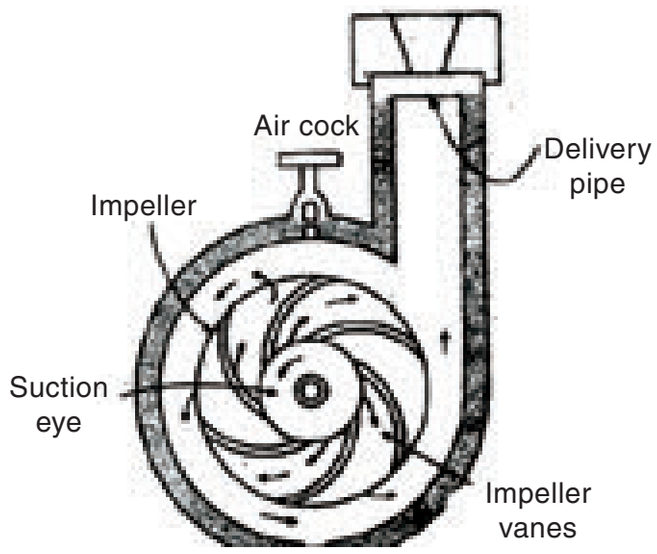




BEE_ENG_Pratical.indd 191 12/27/2019 10:54:35 AM