

Testing


Open and short circuit test in starting winding

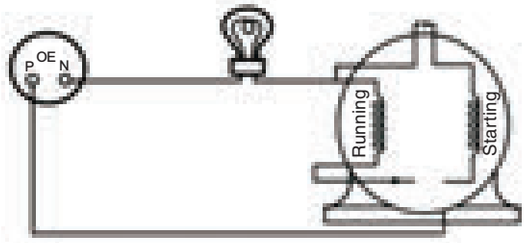

Earth Test

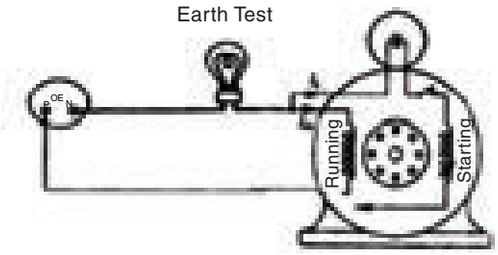

Open and short circuit test in running winding

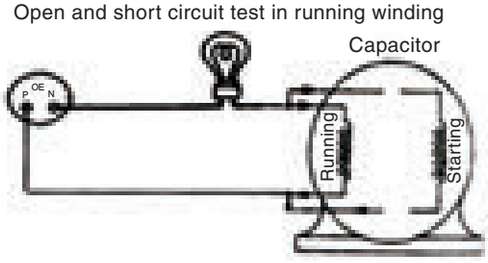

Testing procedure

i. Connect the series test lamp with the main and starting winding. Then conduct open circuit and short circuit test.
ii. Do the earth fault test on the main winding and starting winding by connecting one end of the test lamp to the winding terminal and the other end to the body.
iii. Dismantle the centrifugal switch and check the spring condition.
iv. Conduct the test on the capacitor

Result

The method of dismantling the given water pump, identifying the parts, testing the water pump, causes, reasons and remedies of its faults, and assembling the water pump is carried with proper tools. Now the water pump run with normal speed and it is in good condition.

BEE_ENG_Pratical.indd 192 12/27/2019 10:54:35 AM