

Remove the pulley by using a suitable pulley puller as shown below.

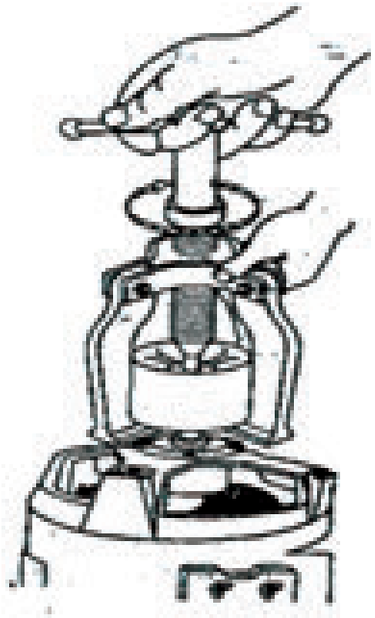


Make a center punch mark on both the end covers and stator as shown below. To avoid confusion, make a single punch mark on one side and a dual punch mark on the other side of the motor

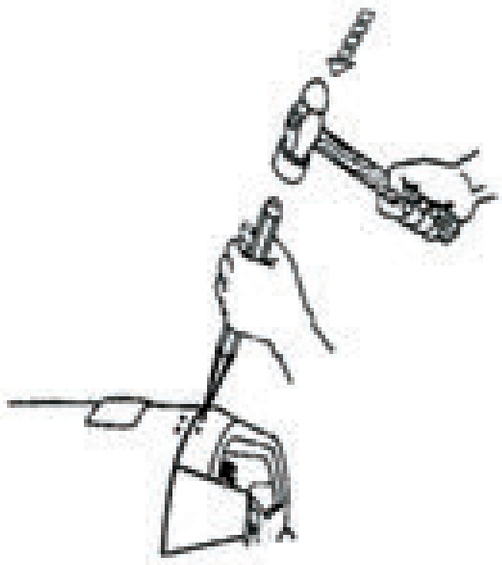


Remove the grease cup cover and loosen the end cover bolts as shown in the figure given below.

End covers should be removed by using chisel and nylon hammer gently as shown below

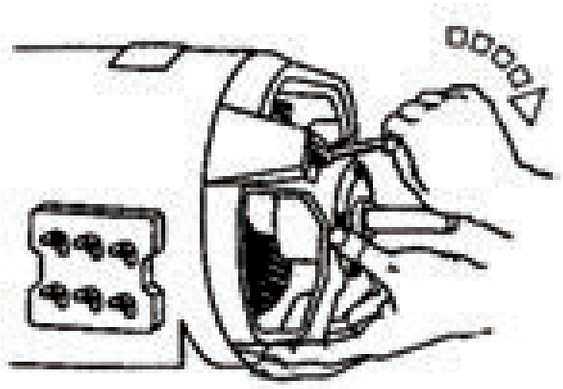

Without any damage to the rotor and the stator windings, remove the other end shield cover together with rotor as shown in the figure given below.

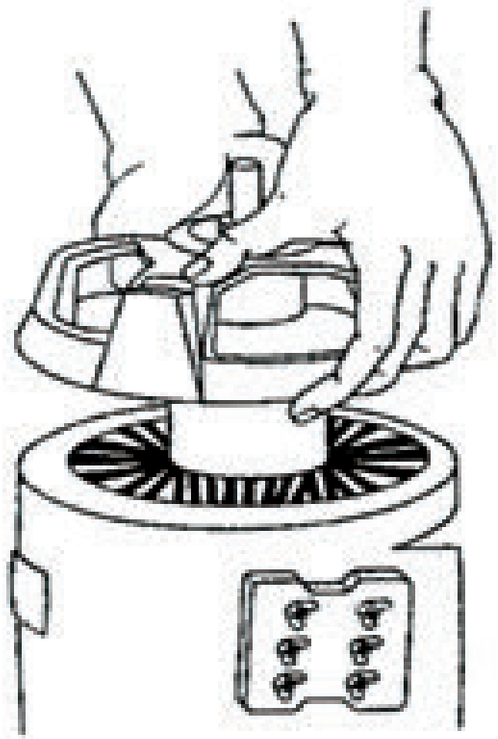

Hold the shaft in one hand, rotate the end cover and tap it lightly with a nylon mallet, to remove it from the rotor as shown below.

BEE_ENG_Pratical.indd 202 12/27/2019 10:54:36 AM