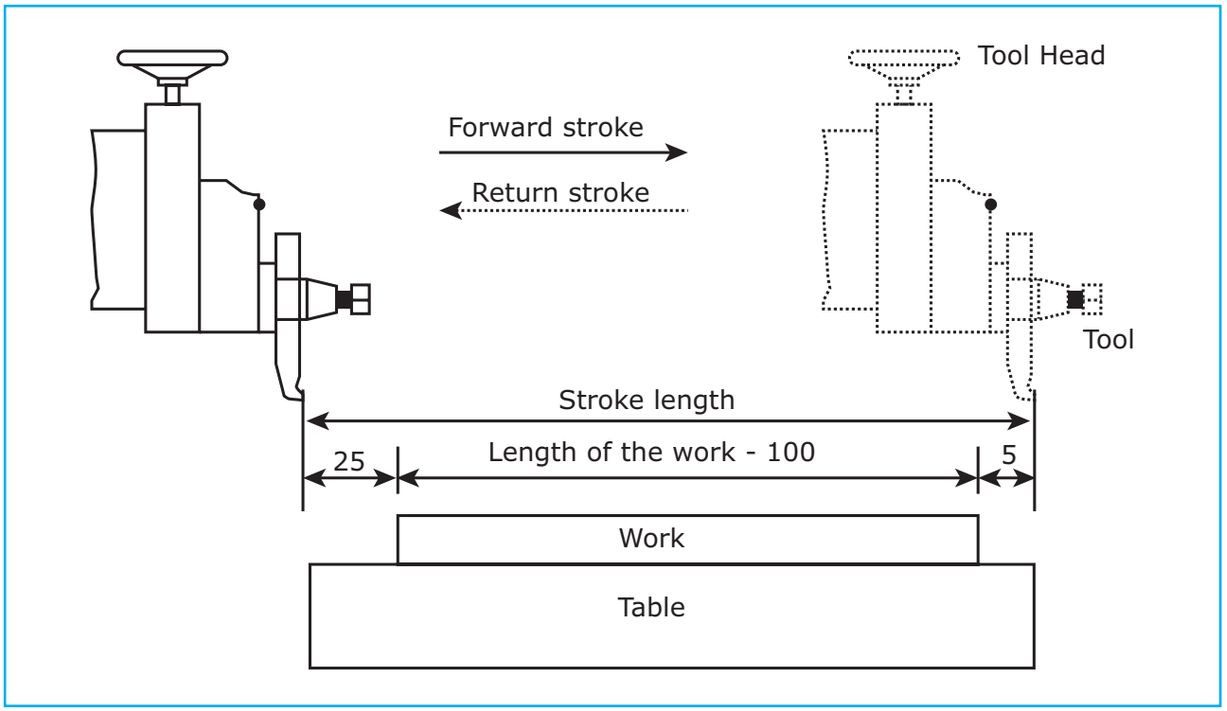


Ram Position

strokelength of the ram is calculated to be 130 mm. (25+100+5). Fig illustrates the calculation of strokelength.

The crank pin fastened to the sliding block can be adjusted by a lever placed outside the column. Through the bevel gears placed at the centre of the bull gear, the radial slide lead screw can be rotated. This rotation of leadscrew changes the position of the sliding block to move towards or away from the bull gear centre. The strokelength of the ram is adjusted by placing the sliding block at a required position from the centre of the bull gear.

Note: The strokelength of the ram and its position should not be adjusted when the machine is in operation. The machine should be stopped before these adjustments are made.

3.8 Method of table movement

1. The table moves in a cross direction when the crossfeed screw is rotated.
2. A crank handle is provided to rotate the crossfeed screw manually.
3. When the crossfeed screw is rotated in clockwise direction, the table will move towards left.
4. When the elevating screw is rotated, the table slides up and down on the face of the column.
5. As the handles meant for crossfeed screw rotation and elevating screw rotation are placed side by side, it is not possible to operate both of them at the same time.
6. The work mounted on the table is provided with required feed only during the end of the return stroke.

XII BME_English version CHAPTER 03.indd 64 1/8/2020 1:43:57 PM