MODEL

The MODEL button is chosen by default because you are working in the model space to create drawings.

GRIDMODE (F7)

If the GRIDMODE button is chosen, the Display drawing grid will turn ON and the grid lines are displayed on the screen. The **F7** function key can be used to turn the grid display on or off.

SNAPMODE (F9)

If the SNAPMODE button is chosen, the snap mode will turn ON. When snap is on, the cursor under mouse control can only be moved in jumps from one snap point to another. The **F9** key acts as a toggle key to turn the snap off or on.

Dynamic Input (F12)

The Dynamic Input button in the status bar is used to turn the Dynamic Input on or off. If the Dynamic Input mode is turned on, the **x,y** coordinates and prompts show when the cursor hairs are moved. Using the **F12** key, you can turn the Dynamic Input on or off.

Ortho Mode (F8)

You can turn ON or OFF the Ortho Mode just by clicking on it. If the ORTHOMODE button is chosen, you can draw lines at right angles only i.e., lines can only be drawn vertically or horizontally. You can also use the **F8** function key to turn ortho on or off.

Polar Tracking (F10)

You can turn ON or OFF the Polar Tracking just by clicking on it. When you turn ON the Polar Tracking, a small tip appears showing the direction and length of lines etc. in degrees and units. You can draw lines easily at regular angular increments, such as 5, 10, 15, 23, 30, 45, or 90 degrees. You can also use the **F10** function key to turn on this option.

Workspace

A workspace is a complete user interface, which includes the location and appearance of the drawing area and all menus, buttons, and groupings of buttons. Think of a workspace as a unique, specific arrangement of AutoCAD's features and capabilities that can be retrieved at any time. It is easy to switch between workspaces, modify workspaces, and create custom workspaces to match the specific requirements of a user or a particular task.

Workspace Switching

In AutoCAD 2016, you can switch between different workspaces by using the **Workspace Switching button** that is available at the right of the Status Bar. On clicking the Workspace Switching button, a flyout will be displayed with the list of all available workspace. You can select the required workspace to invoke.

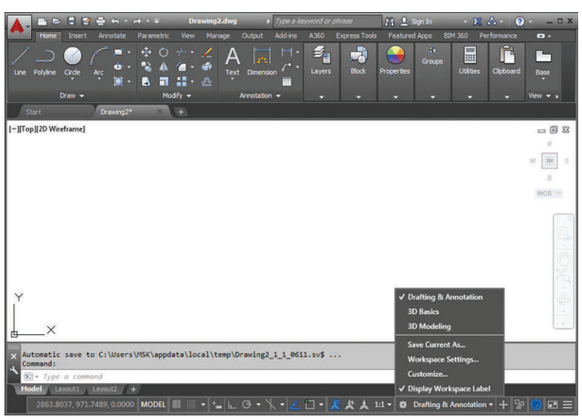


Fig. 6.38. Workspace Switching button

XII CompTech_English version CHAPTER 06.indd 183 10-04-2019 11:04:30