
DO YOU KNOW?

1. Brake System:

Modern braking components need exceptional wear resistance, heat resistance and of course exceptional stopping capabilities because, under extreme conditions, their operating temperatures can average over 350 Celsius and peak at up to 700° Celsius.In race use, 400 to 600° C is common on smaller cars. In touring cars and larger race cars temperatures shoot up to 800 - 900° C where the discs will glow red or orange.

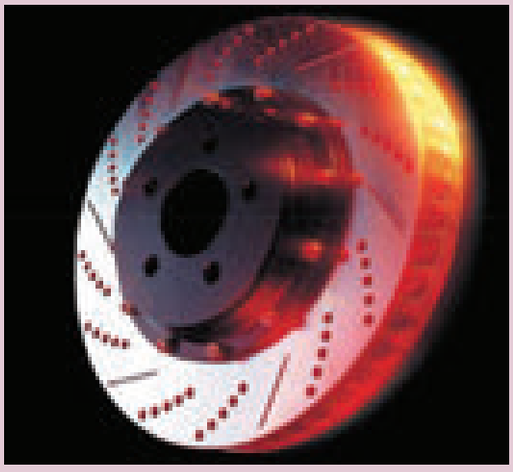



expanded and the wheels are stopped from rotation. Brake chambers are located nearer to each wheel of the vehicle.

Each chamber is connected to the reservoir tank through pipelines. When the brake pedal is pressed the brake valve is started to operate. Through the brake valve the pressurized air from the reservoir tank is sent to the brake chamber. In the brake chamber a slack adjuster is operated with help of diaphragm lever which is connected to it. By pressing the top end of the slack adjuster the bottom end turns the "S" cam and rotates the lever. Hence the brake shoes which are connected with the S cam get expanded and the brake drum is stopped from rotation.

While releasing brake pedal

While releasing the brake pedal, exhaust valve in the brake valve is opened. Hence the pressurized air in the brake chamber is forced through exhaust valve from the same way as the air enters to the chamber. At that time, the diaphragm inside the brake chamber is pushed in backward direction with the help of the spring force. At the same time slack adjuster and "S" cam are moved back to their original position. Thus brake shoes are pulled inward and released from the brake drum.

Parts of air brake

1. Air cleaner
2. Air compressor

BAE_ENG_Chapter_06.indd 104 12/20/2019 1:04:21 PM