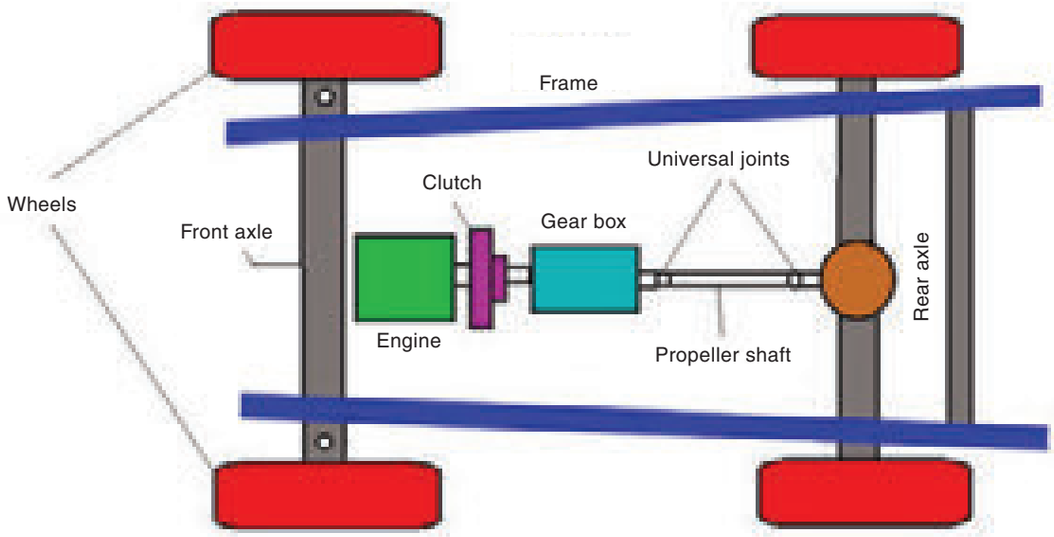



**Figure 1.8.1** Important components of the Chassis

the vehicle. Petrol and Diesel are used as fuels to run the engine. It is located at the front of the vehicle. It converts the heat energy by burning the fuel into mechanical energy. Hence it is called as the heart of the vehicle.



**Figure 1.8.3** Engine

## 1.8.4 Clutch

Clutch is a mechanical device which is used to transfer and cut the engine's power transmitted to the driveline. It is located in between engine and gear box.

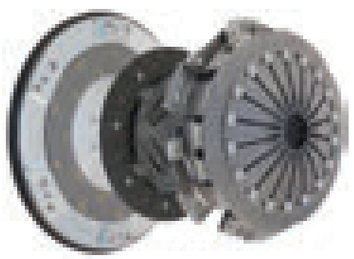


**Figure 1.8.4** Clutch

## 1.8.5 Gear box

The box with set of gears inside the casing is called as gear box. It is used to change (increase and reduce) the speed and torque of vehicle according to different road and load conditions of the vehicle. It is shown Figure 1.8.5.

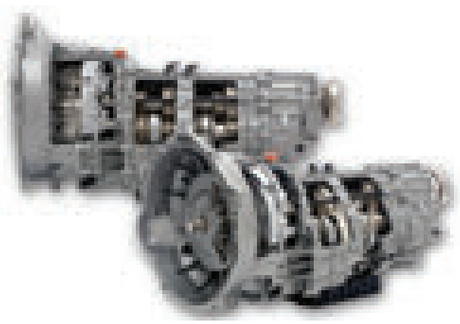


**Figure 1.8.5** Gear box



BAE_ENG_Chapter_01.indd 9 12/10/2019 10:47:16 AM