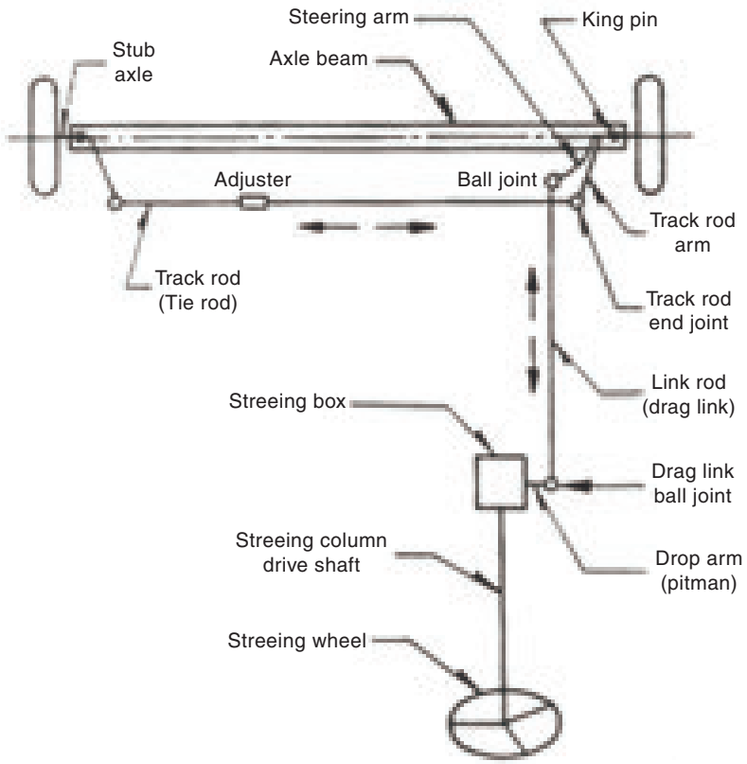


Figure 8.2.1 (a) Steering system

- This motion is converted into angular motion of the drop arm which is connected to the link rod.
- The other end of link rod is connected to the steering arm by means of ball joint. The steering arm is connected to the lower end of the stub axle. Both the steering arms are connected by a tie rod.
- When the steering wheel is to be turned to the right side or left side, the stub axle turns to the wheels either left or right side. The steering linkage as shown in figure 8.21 (a).

8.3 Steering gear box

- The case which holds the steering gear is called as steering gearbox.
- The Rotary movement of the steering wheel is converted into reciprocating motion of the steering linkage.
- The driver easily turns the stub axle either left or right side with the help of steering gear box.

8.3.1 Types of steering gear box

Based on the construction and working principle the steering gear box are classified into the following types

1. Worm and sector type
2. Worm and Roller type
3. Worm and Nut type
4. Worm and wheel type
5. Recirculating Ball type steering gearbox
6. Cam and Peg Steering Gear Box
7. Cam and Roller type
8. Rack and Pinion Steering Gear Box

BAE_ENG_Chapter_08.indd 147 12/10/2019 12:11:16 PM