10.2 Ignition system

1. To supply a spark inside the cylinder, at the end of compression stroke, to ignite the compressed charge of the air-fuel mixture.
2. Convert low tension current into high tension current. (6v to 12v in to 20,000 to 30,000v)
3. To produce spark in the multi cylinder engine at the right time as per the firing order.

10.2.1 Types of ignition system

1. Battery coil Ignition system
2. Magneto Ignition system
3. Electronic Ignition system

10.2.1.1 Battery coil ignition system

The main parts of a battery coil ignition system is

1. Battery
2. Ignition Coil
3. Contact breaker points
4. Condenser
5. Distributor
6. Spark plug
7. Ignition Switch

Battery

A battery is used to provide energy for ignition. The battery is charged by the dynamo or alternator and provide electrical energy to the electrical parts in the vehicle as and when it is required.

Ignition coil

An ignition coil is made up of an iron core surrounded by two insulated coils, namely primary winding and secondary winding. Acting as a step-up transformer. It converts low tension current (12v) into high tension current of 20000 to 30000

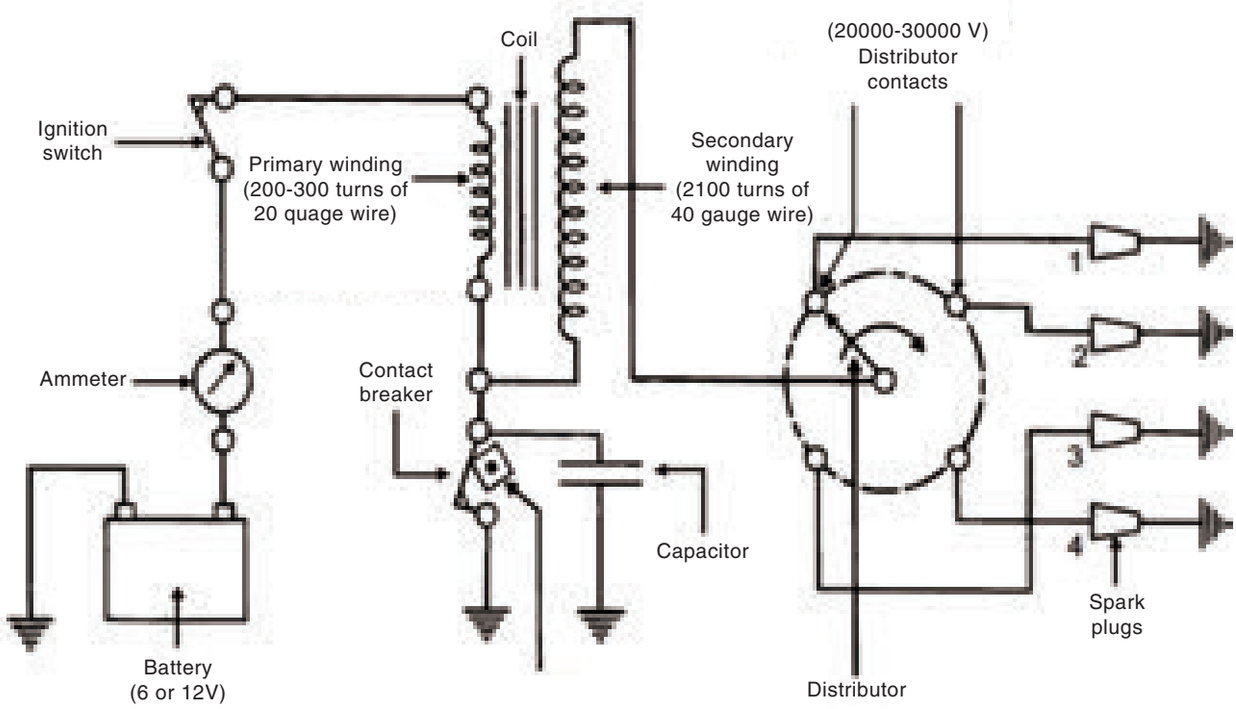


Figure 10.2.1.1 (a) Battery coil ignition system

BAE_ENG_Chapter_10.indd 188 12/20/2019 1:10:21 PM