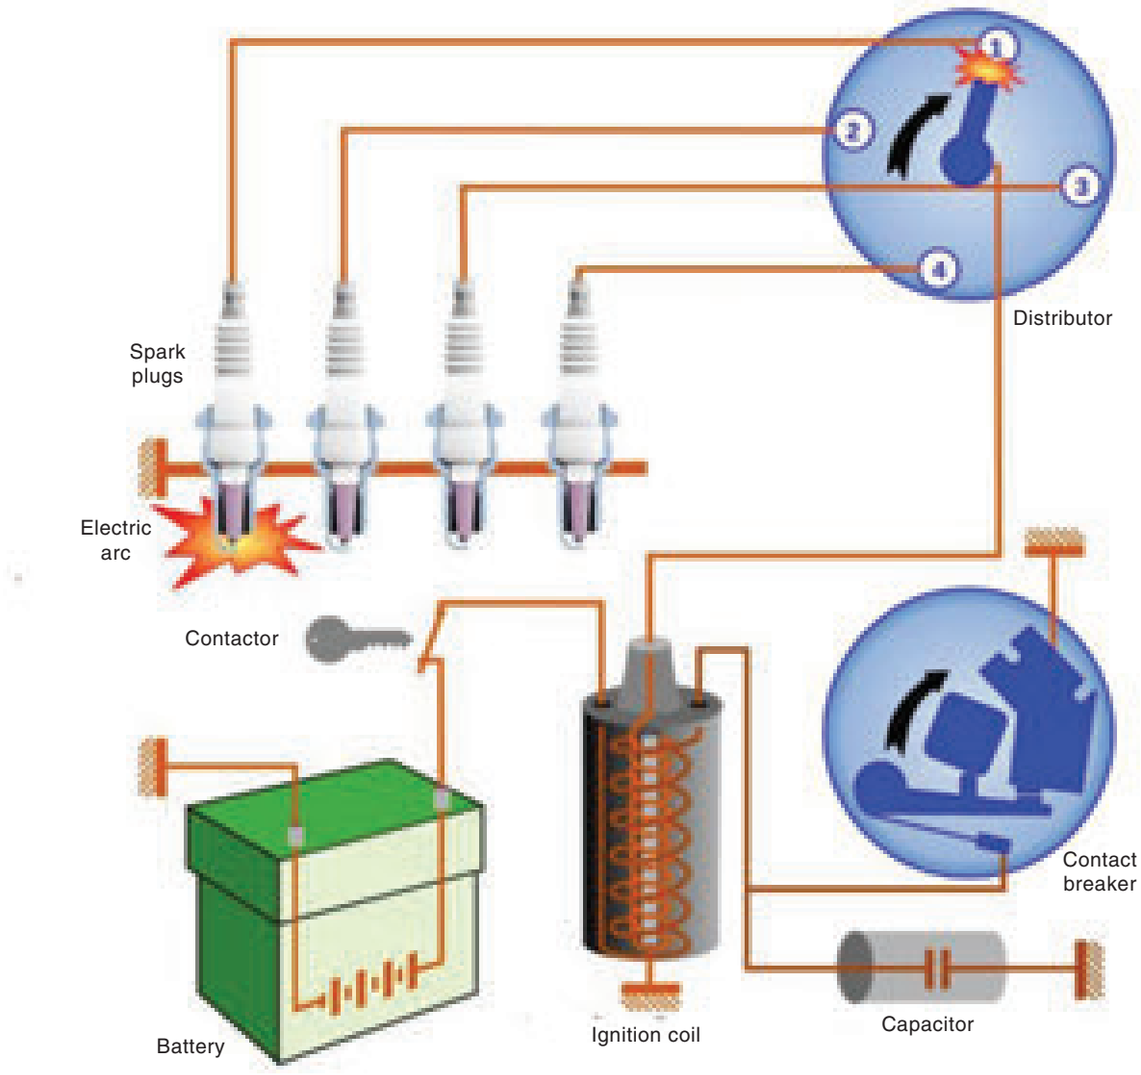


Figure 10.2.1.1 (b) Battery coil ignition system

volts. This high tension current enables to generate a spark across the electrodes of a spark plug.

Contact breaker points

The opening and closing of the primary circuit are made by contact breaker points. When the points are closed current flow in ignition coil and charge the primary circuit and when it open, discharge of primary current take place and by mutual induction, in secondary coil high tension current is induced.

Condenser

A condenser is connected in parallel to the contact breaker points to prevent arching at the contact breaker points. Also, used to increase the intensity of the spark.

Distributor

The distributor is used in multi-cylinder engine to distribute the high tension current from the ignition coil to the individual spark plug as per the firing order.

BAE_ENG_Chapter_10.indd 189 12/20/2019 1:10:22 PM