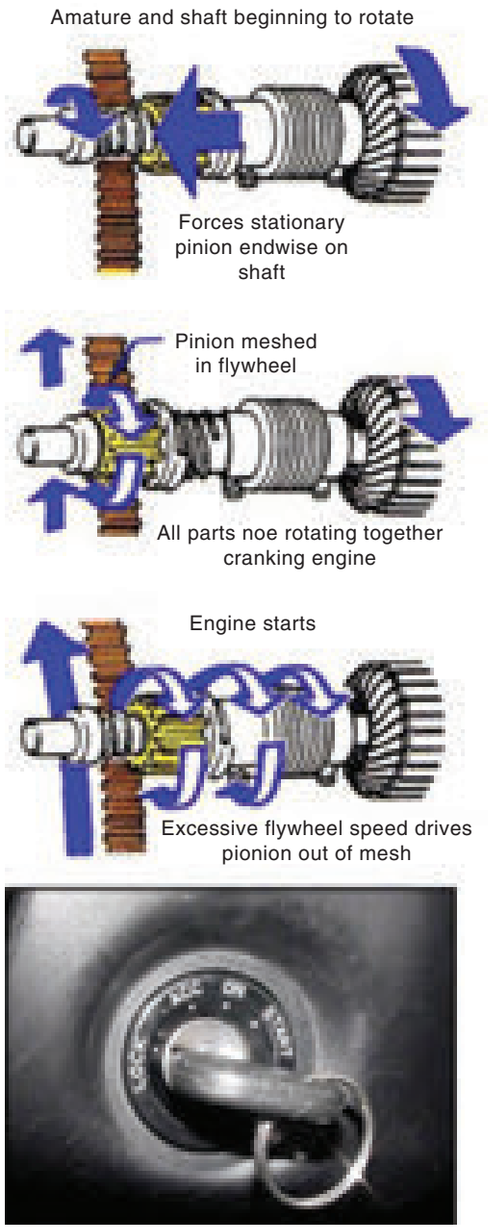


10.8.3 Maintenance of starter motor

1. Starting motor should not be operated continuously for more than 30 seconds.
2. Once the engine is turned on, the startingswitch should be released.
3. Periodic greasing should be made.
4. Ensure the proper tightness of cable
5. Replace the faulty bearing immediately
6. Don't crank the engine frequently, if the engine fails to start

10.9 Charging system

The mechanical energy of the engine is converted into electrical energy by means of a Generator. This electrical energy is stored in the battery. The generator is driven by the engine crankshaft. To control the current flow, regulators are used. An ammeter is used to measure the current. The generator is also called a dynamo.

10.9.1 Construction and working of generator (or) Dynamo

Based on the Faraday's laws of electromagnetic induction, the device

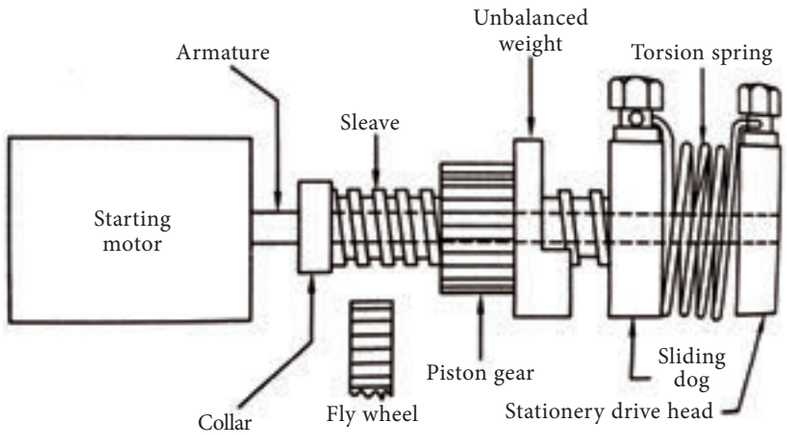


Figure 10.8.1.1 (b) Bendix drive starting system

BAE_ENG_Chapter_10.indd 202 12/20/2019 1:10:26 PM