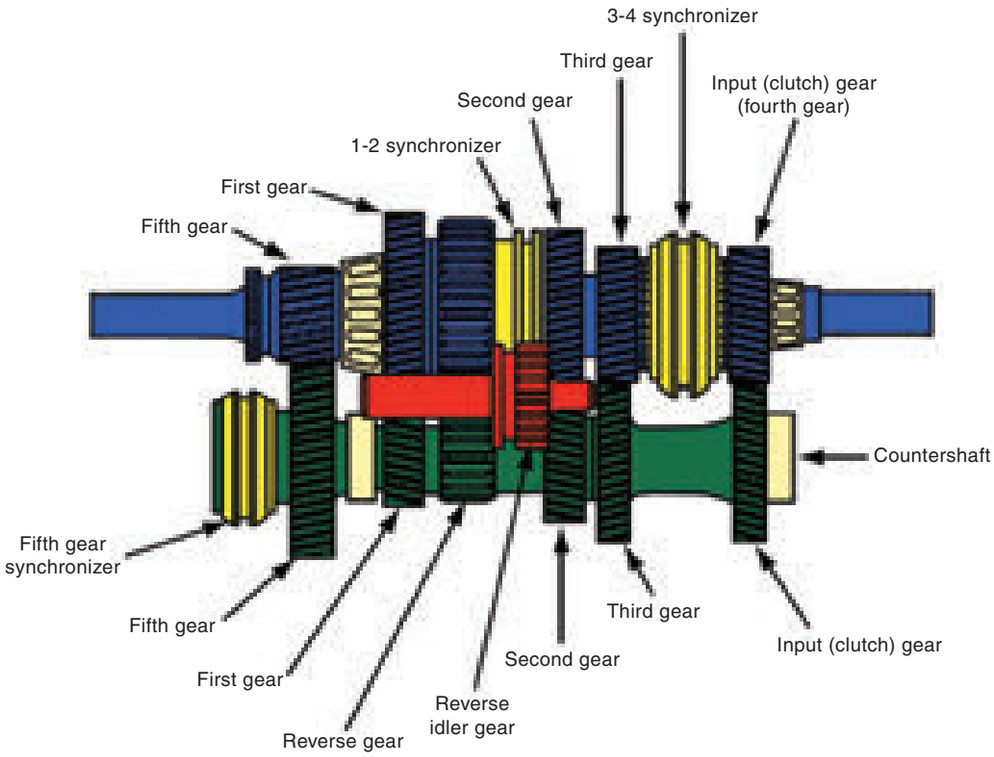


Speed	Gear Ratio
First gear	7:1
Second gear	3:3:1
Third gear	1:7:1
Top gear	1:1

Dismantling procedure:

- Remove the gear box from the vehicle and place it on the work bench.
- Drain the gear box oil.
- Remove the gear shifting lever, selector rod mechanism, end cover, bearings, main shaft gears, main shaft, clutch shaft with gear, counter shaft and etc…

Inspection:

- Clean all the pants.
- Clean the gear box casing and inspect for any damage.
- Check the main shaft, gears, counter shaft gears and clutch gear for any damage and replace the new one if any damage.
- Check the clutch shaft, main shaft and counter for any damage.

Assembling:

- Assembling is the reverse process of dismantling.

Result:

Thus the given gear box was dismantled, inspected and reassembled.

BAE_Practical.indd 230 12/20/2019 2:35:26 PM