
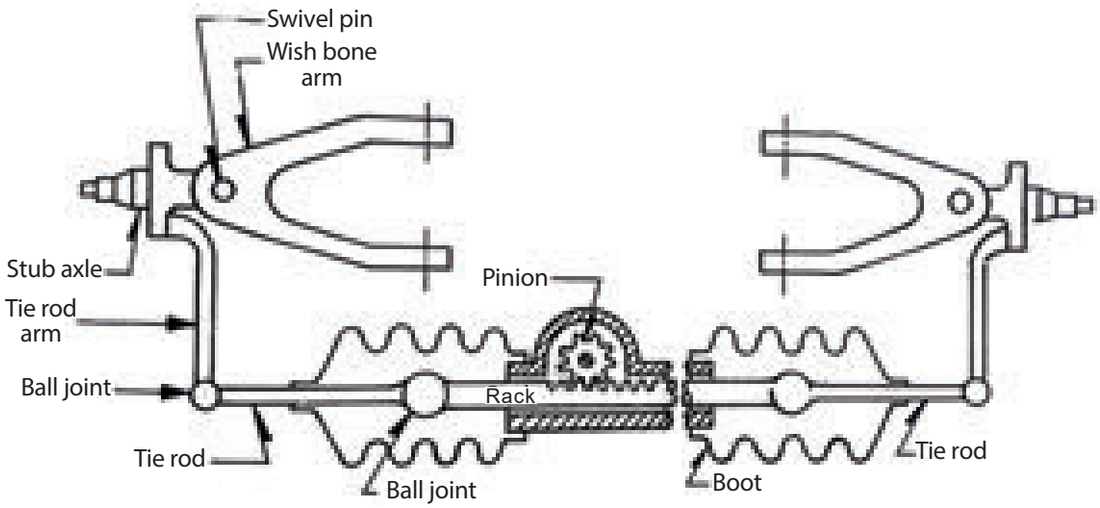


Fig (a) Rack and pinion type steering gear box

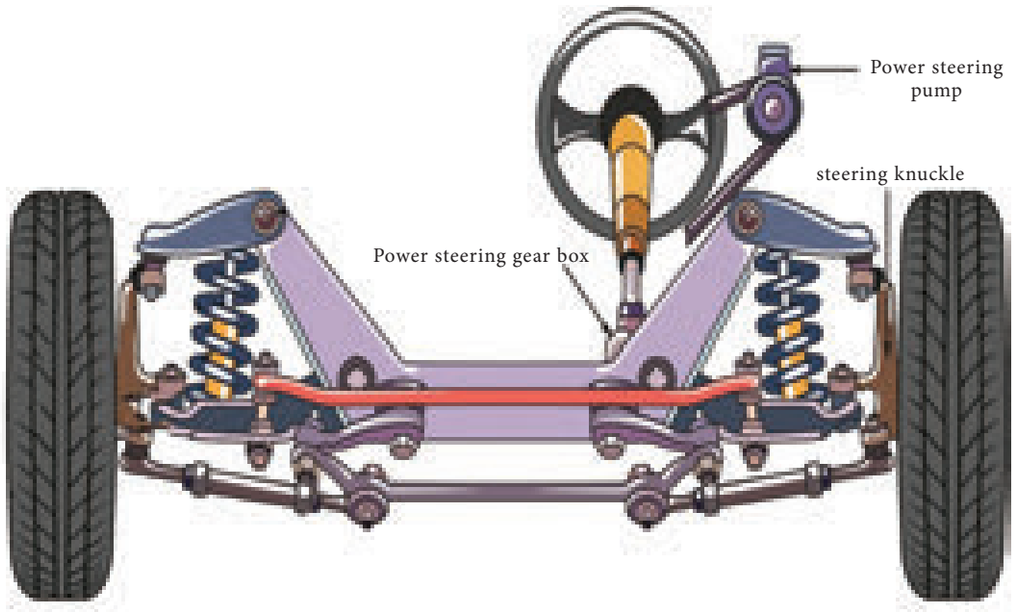

Dismantling

- Remove the horn switch.
- Remove the steering wheel by loosening the wheel lock nut.
- Remove the end play column, thrust bearing and shaft.
- Remove the steering column, thrust bearing, and shrin
- Remove the drop arm drag link
- Remove the steering gear.

BAE_Practical.indd 236 12/20/2019 2:35:28 PM