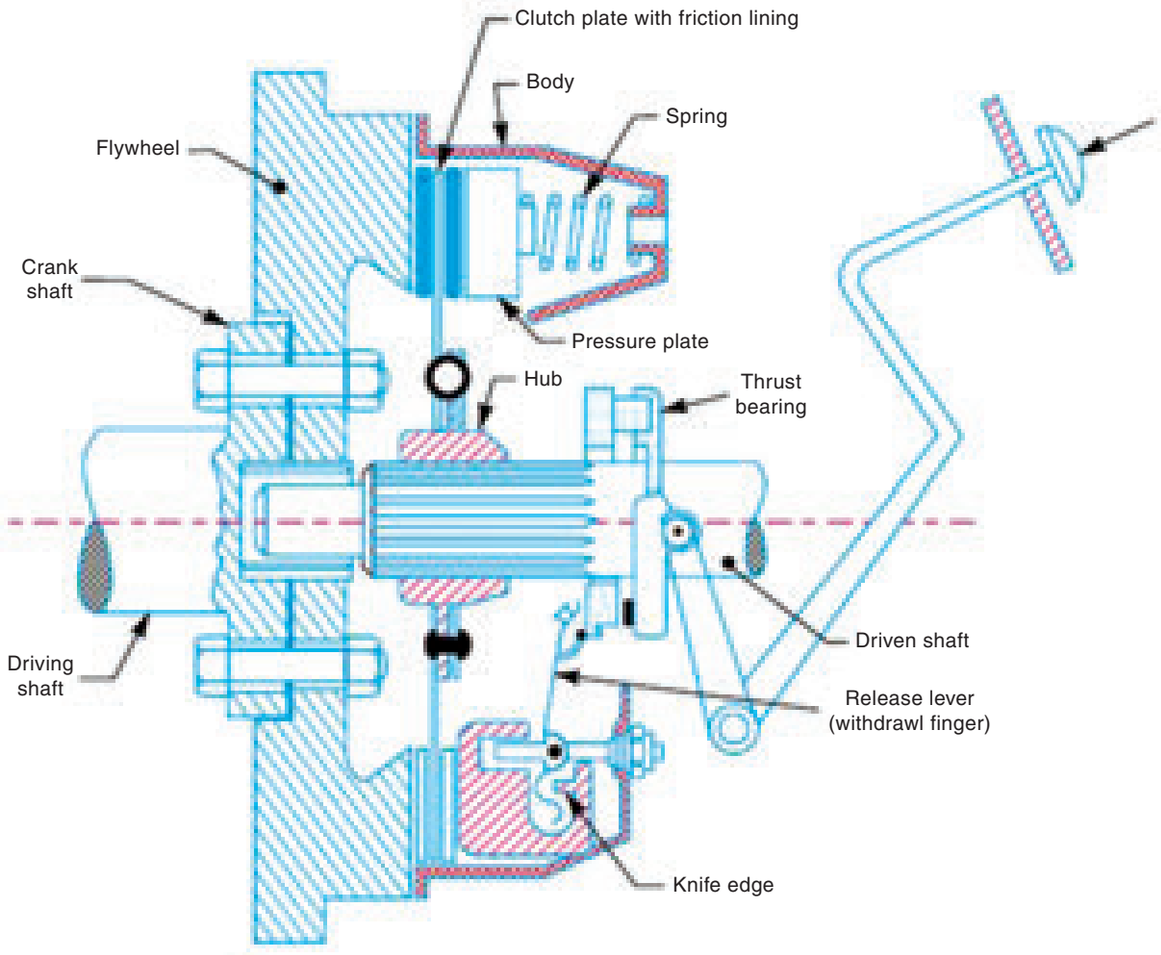


Figure 2.5.1 (b) Single plate clutch

- Single plate clutch is used in heavy vehicles.

Working principle

When clutch pedal is pressed

- When clutch pedal is pressed, release bearing will push the release lever.
- So pressure plate will move backward in opposite to spring force.
- In this stage, a gap will form in between clutch plate and pressure plate.
- Therefore, power from the engine is not transmitted to gear box.
- This is called as clutch disengaged.

When clutch pedal is released

- Pressure plate is pressed by coil spring force.
- So pressure plate connects the clutch plate with the fly wheel.
- Now, power from the engine is transmitted to gear box with the help of clutch shaft.
- Therefore, this is called as clutch engaged.

2.5.2 Multi plate clutch

Construction

- It consists of two or more clutch plates and pressure plates. So, it can able to transmit more power when there is a low space.
- It is used in motor cycles and race cars.

BAE_ENG_Chapter_02.indd 19 12/20/2019 1:00:34 PM