
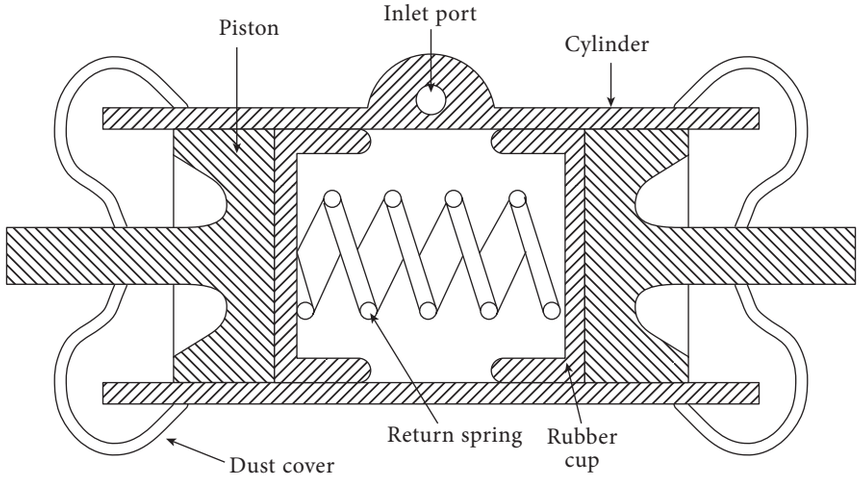


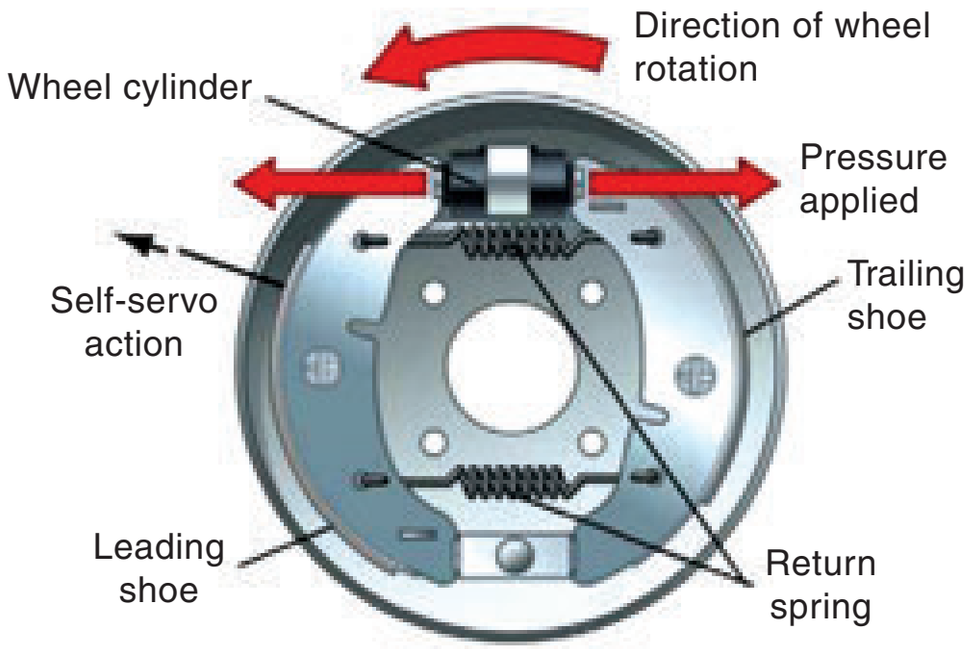

Dismantling

- Disconnect the brake fluid pipe line connection
- Remove the wheel
- Remove the brake drum
- Remove the brake shoe return spring & brake shoe
- Remove the brake shoe tappet
- Remove the mounting bolts of the wheel cylinder
- Remove the wheel cylinder from the brake plate
- Place the wheel cylinder on the work bench
- Remove the dust cover
- Dismantled the wheel cylinder
- Remove the piston, rubber cup and spring

BAE_Practical.indd 244 12/20/2019 2:35:30 PM