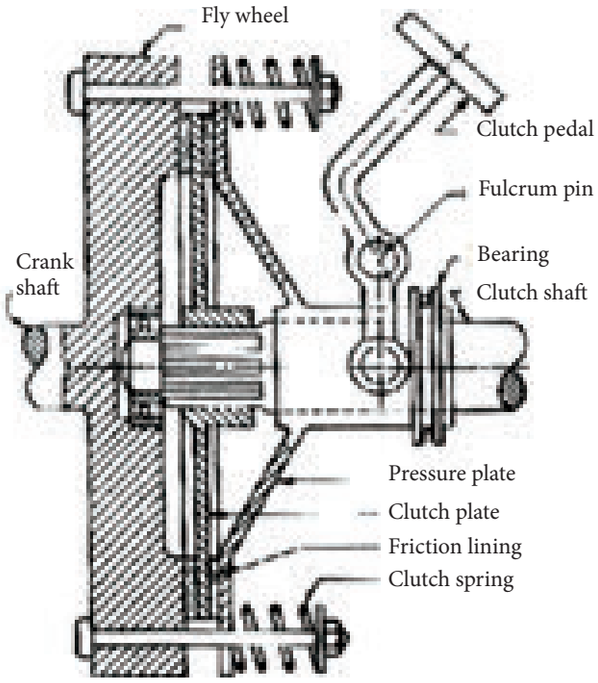


Figure 2.5.1 (c) Single plate clutch

- The centre of clutch plate is attached with clutch shaft.
- Coil spring is placed in between pressure plate and clutch cover.

Working principle

When clutch pedal is pressed

- Release lever is pressed by release bearing.

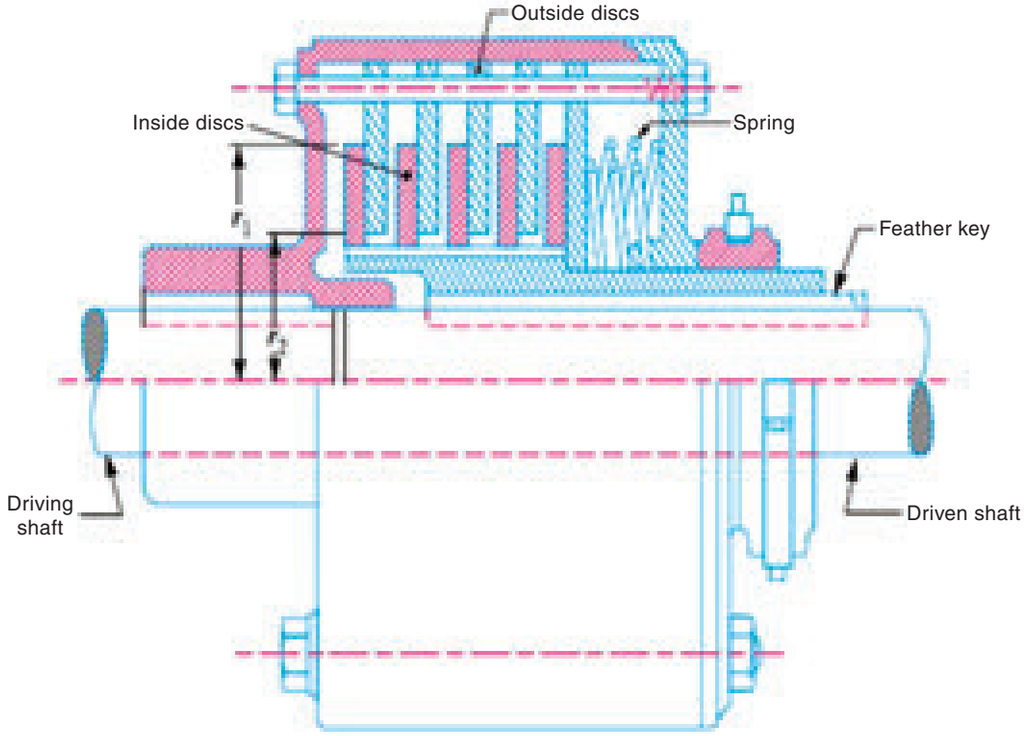


Figure 2.5.2 (a) Multiplate clutch

BAE_ENG_Chapter_02.indd 20 12/20/2019 1:00:34 PM