2.5.3 Diaphragm clutch

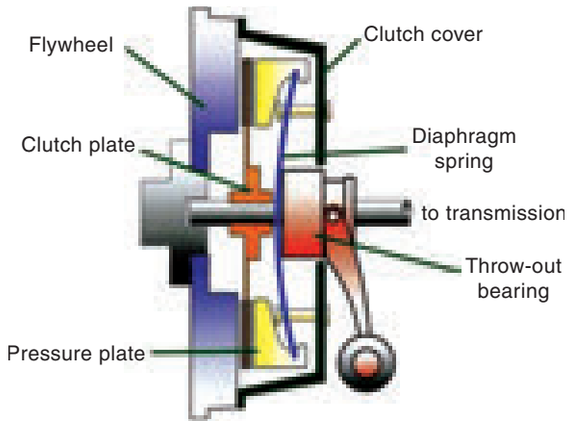


Figure 2.5.3 Diaphragm clutch

Components

1. Flywheel
2. Clutch plate
3. Pressure plate
4. Diaphragm spring
5. Clutch lining
6. Clutch shaft
7. Pivot ring

Construction

- Here instead of coil spring, diaphragm spring is used.
- Clutch plate is placed in between fly wheel and pressure plate.
- The centre of clutch plate is attached with clutch shaft.
- Outside end of the diaphragm spring is attached with with pressure plate by clamp, screw, and clutch cover with two pivot rings.

Working principle

When clutch pedal is pressed

- Thrust bearing is moving forward and presses the centre of diaphragm spring.

DO YOU KNOW?



BAE_ENG_Chapter_02.indd 22 12/20/2019 1:00:34 PM