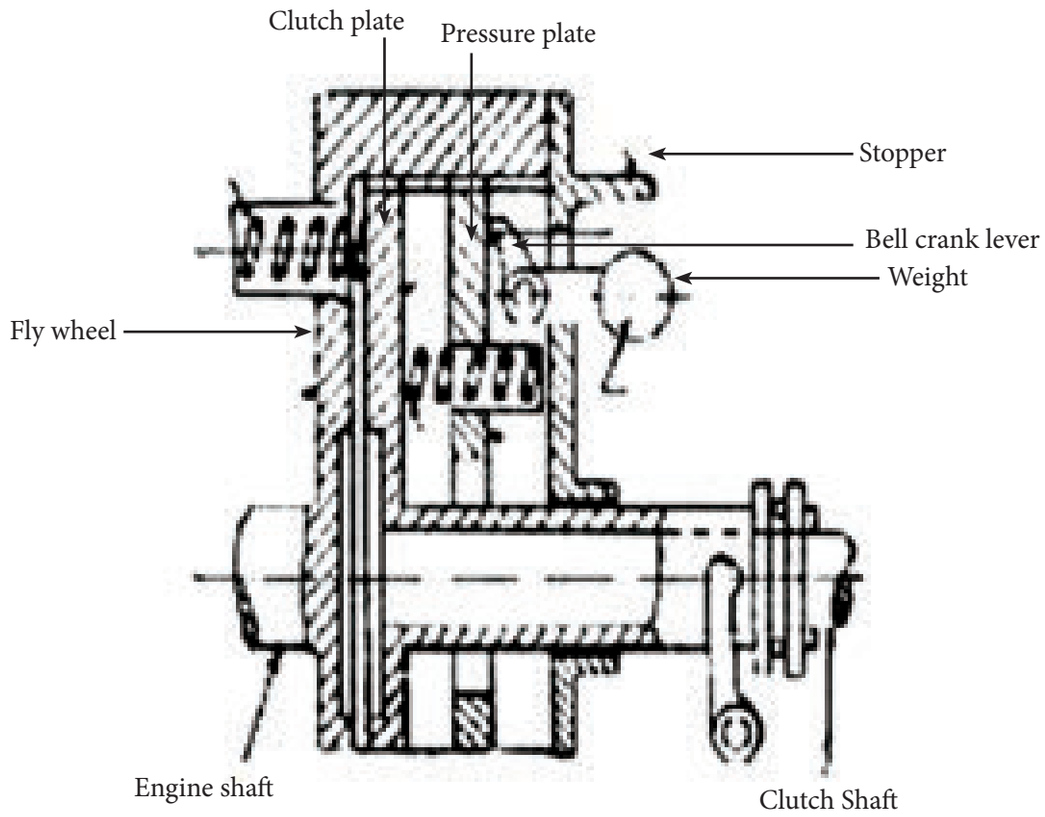


Figure 2.5.5 (b) Centrifugal clutch

- So, bell crank lever with weights will not push pressure plate. Therefore, a gap will form in between pressure plate and clutch plate.
- Now, engine power is not transmitted to gear box.

At high speed

- Due to centrifugal force, ball weight moves and pushes pressure plate with the help of bell crank lever in opposite to pressure spring force.
- Now pressure plate pushes clutch plate with fly wheel. So engine power is transmitted to gear box. This is called as clutch engaged.

Note: when engine speed is more than 1000rpm, clutch will not be disengaged.

2.6 Maintenance methods of clutch

1. Clutch pedal free-play should be checked and changed periodically.
2. Should check and adjust the gap in between clutch plate and pressure plate. (Note: gap should be 0.3 mm to 0.5 mm)
3. Clutch lining should be checked in periodically. If any problem finds, it should be cured.
4. Should not operate the clutch by keeping legs continuously.
5. Clutch surfaces should be free from oil and grease.
6. Clutch adjustment should be done periodically.
7. Clutch linkages should be checked periodically.

BAE_ENG_Chapter_02.indd 25 12/20/2019 1:00:35 PM